




C Ω D E

USER MANUAL

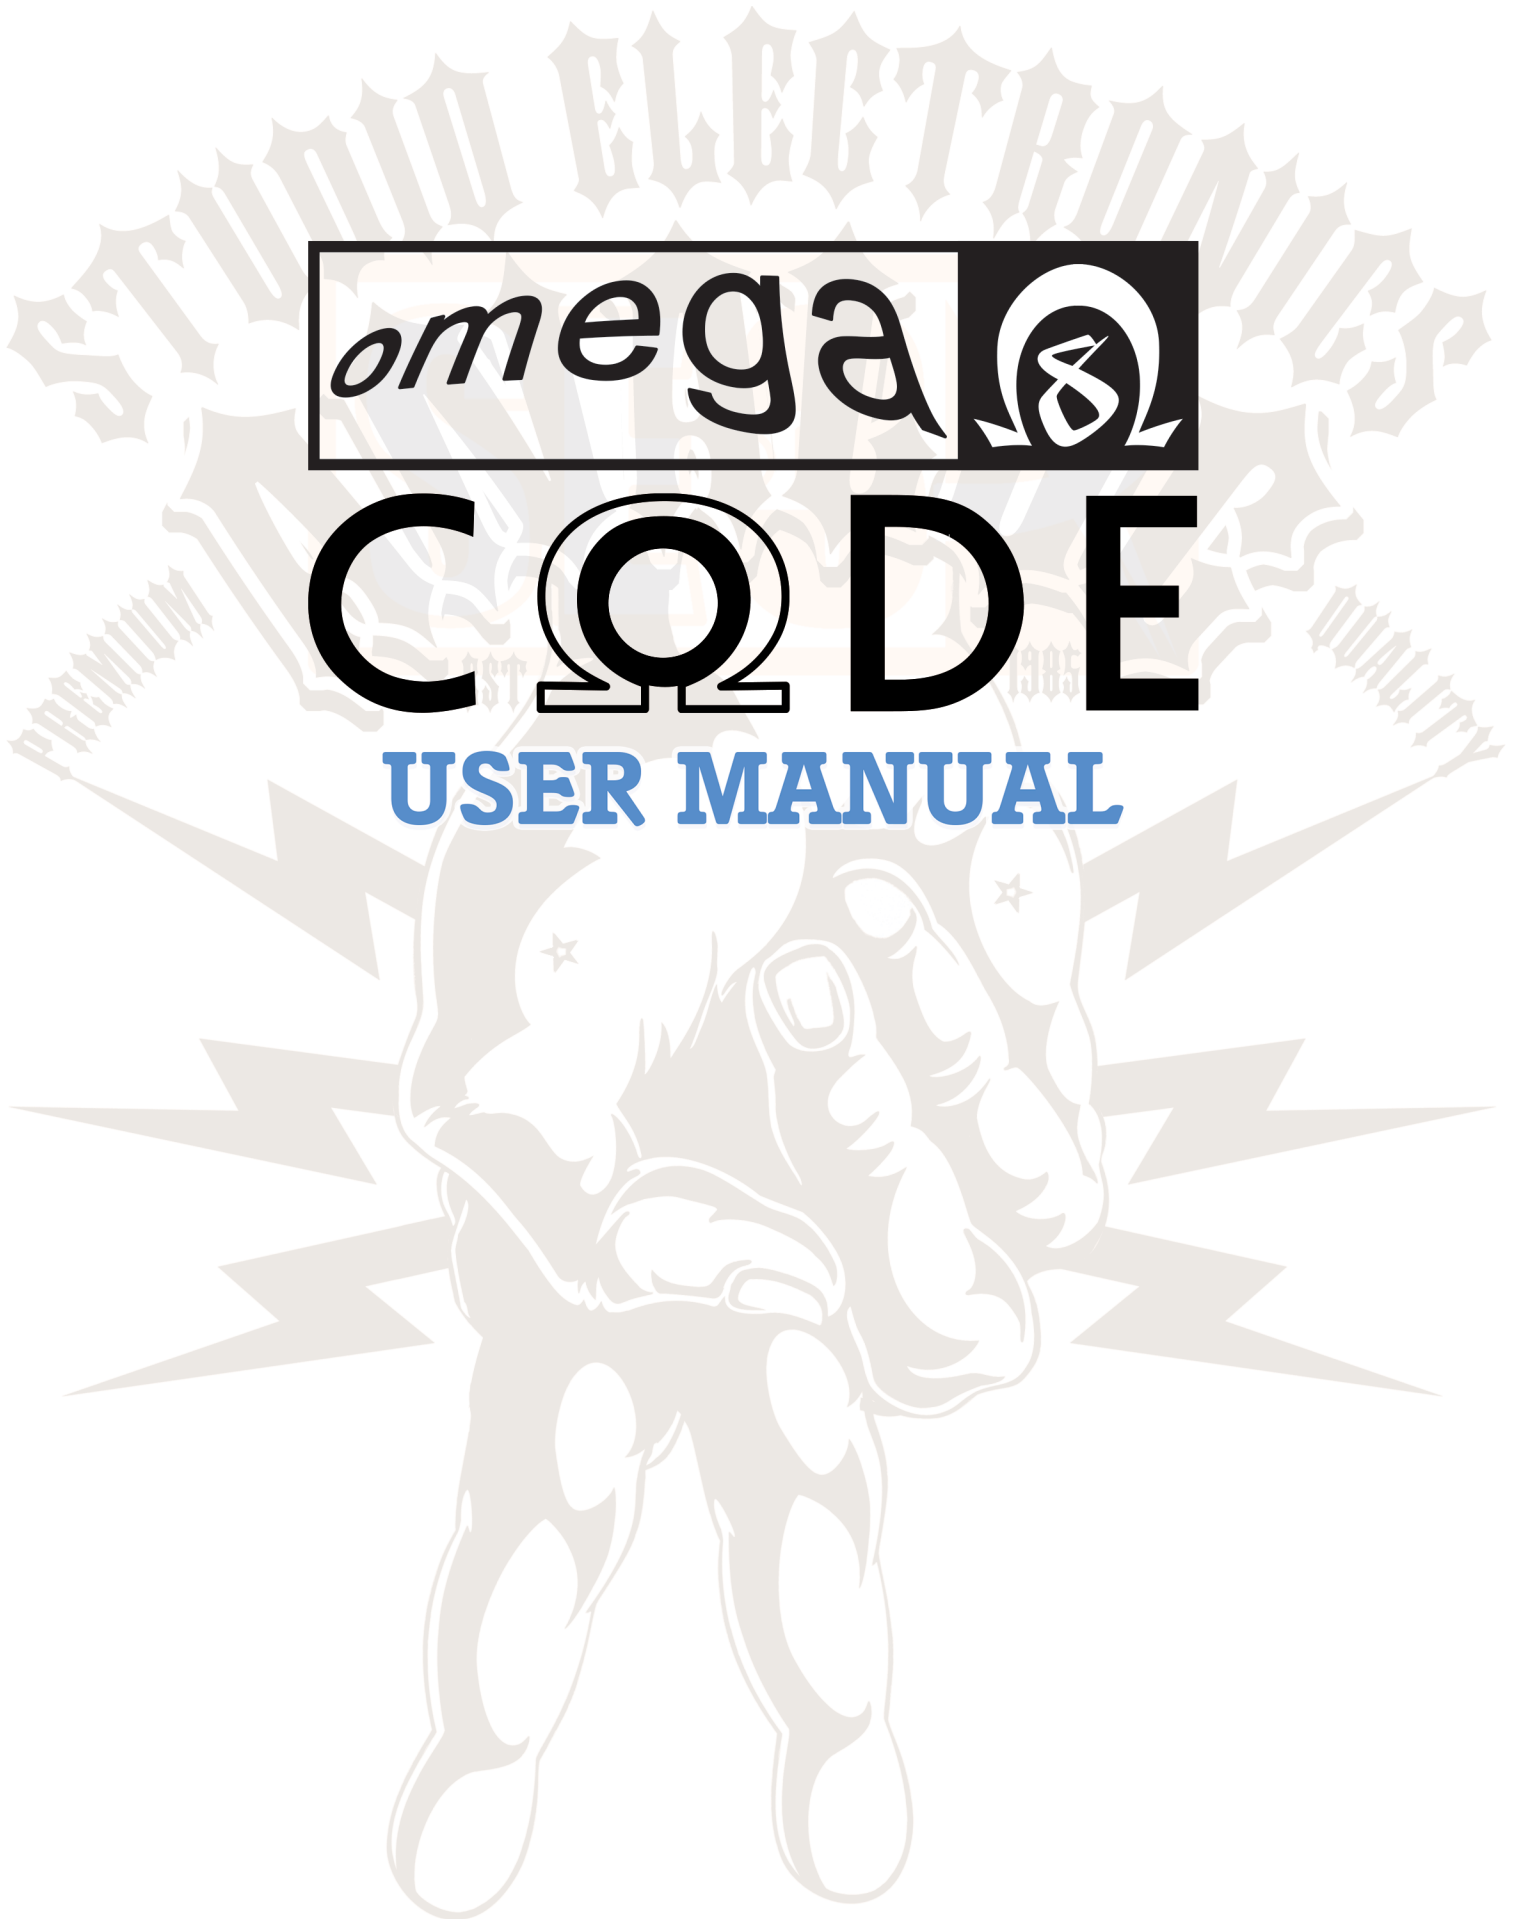

CIRCUIT AND SOFTWARE DESIGN

Tim **Caswell**

USER INTERFACE, CIRCUIT BENDER & FEATURE SPECIALIST

Greg **St. Regis**

GRAPHIC DESIGN

Nova Musik John **Greczula/Xenolab Design** Marc **St. Regis**

SOUND PROGRAMMING

Marc **St. Regis** Greg **St. Regis** Featured **Designers**

USER MANUAL

Greg **St. Regis** Marc **St. Regis** Tim **Caswell**

NEAR TOTALITARIAN EDITORS

Daniel **Wendell** Carlo **St. Regis**

LEAD VENDOR LIAISON & RANKING GRAMMAR GENIUS

Daniel **Wendell**

VERY SPECIAL THANKS

Mary Capretta Theriot **St. Regis** Val (VE) **St. Regis** Rachael **Herbison** Lucy **Bauer**

Rev. 9.27.2024

Information contained in this CODE/Omega8 Manual, including but not limited to specifications and appearances, are subject to change without notice and do not represent a commitment on behalf of ANALOGIA INC. No portion of this manual may be produced or transmitted in any form, or by any means—whether electronic or mechanical, or for any purpose other than purchaser's personal use—without the explicit written permission of ANALOGIA INC. All other products, logos or company names mentioned herein are trademarks or registered trademarks of their respective owners. All STUDIO ELECTRONICS' logos are trademarks of Analogia Inc./Studio Electronics.

COPYRIGHT © 2024 ANALOGIA INC. / STUDIO ELECTRONICS. All Rights Reserved.

ANALOGIA INC.

530 West Palm Ave., El Segundo California 90245

Tel: (310) 640-3546 Web: studioelectronics.com Email: support@studioelectronics.com

facebook.com/StudioElectronics • youtube.com/user/StudioElectronics

soundcloud.com/studio-electronics

TABLE OF CONTENTS

4	THANK YOU
5	LIMITED WARRANTY
6-7	SAFETY ESSENTIALS - SEC. 1
8	UNPACKING & INSPECTION - SEC. 2
8	SETUP, CONNECTIONS & CARE - SEC. 3
9	REGISTRATION - SEC. 4
10	BASIC VOICE ARCHITECTURE - SEC. 5
10	FEATURE HIGHLIGHTS - SEC. 6
11	TUNING - SEC. 7
11	COMMON FUNCTIONS - SEC. 8
12-25	FRONT PANEL - SEC. 9
14-16	MULTI/MIDI - SEC. 9a
17-18	MODULATION - SEC. 9b
19	PROGRAMMER - SEC. 9c
20	OSCILLATORS - SEC. 9d
21-22	FILTER - SEC. 9e
23 - 24	ENVELOPES - SEC. 9f
25	EXTERNAL INPUT REVISIT - SEC. 10
26-30	FACTORY PATCH BANKS - SEC. 11
31	BACK PANEL - SEC. 12
32	GLOSSARY - SEC. 13
33-34	MIDI DOCUMENTATION - SEC. 14
35	TROUBLESHOOTING - SEC. 15
36-39	SPECIFICATIONS & ARCHITECTURE - SEC. 16
40	LEGAL - SEC. 17
41	NOTES

1 A LITTLE THANK YOU

For saving our company ;)

And we really do appreciate your purchase of a CODE/Omega8. In a time of abundant and head-spinning software offerings, you have chosen to put your bets on our discrete sound engine Polyphonic Analog Synthesizer: The world's first completely programmable Discrete Analog Synth BTW. Bravo and happy root-level programming and sound designing; or perhaps peaceful patch surfing and tasteful tweaking of the rich SE program library. Consider Emmanuel Santoul's standalone and VST [omega/CODE editor](#) to organize your patches or to create a new CODE/O8 space, for your analog thoughts and final decisions.

When we first conceived, designed and manufactured the Omega8, we no had no idea that decades later orders would still be constant; but it appears that "Phat, Commanding, Dimension Building, TRUE ANALOG SOUND" still has a place in the hearts of actual analog synth folks world-wide—especially when produced in *spine tingling stereo*! Could it be the [custom front panel designs](#) and [finishes](#) that have won hearts & minds?

Still there is more: For venerable yet still very viable analog processing, use each voice's auto-triggering external input: all voices are capable of selecting up to four analog filters (not to mention their modes). That's a lot of processing juice, as this bouncy Omega 8 demo of 16 years previous still proves: <https://soundcloud.com/studio-electronics/attheomegainn?in=studio-electronics/sets/code-omega>

So get started already with massive and yet mindful modulation, a user-aware operating system, arpeggiation (Omega 8, if you must), newish Filter Control Section (CODE) and multimode Multitimbrality.

Enjoy,

Greg St. Regis
Marc St. Regis
Tim Caswell



LIMITED WARRANTY TERMS AND CONDITIONS

This Limited Warranty applies only to ANALOGIA INC./STUDIO ELECTRONICS products purchased in the United States of America. Outside the USA, warranty policy and service is determined by the laws of the country of purchase and followed by our local authorized distributor. A listing of our authorized distributors is available at <http://www.studioelectronics.com/shop/distributors/>

ANALOGIA INC./STUDIO ELECTRONICS warrants to the 1st owner of a covered product purchased directly from ANALOGIA INC./STUDIO ELECTRONICS, or an authorized ANALOGIA INC./STUDIO ELECTRONICS dealer in the US, that this product will be free from defects in materials and or workmanship for a period of one year from the date of purchase. Please register this product online via <https://studioelectronics.com/register/> to establish the date of purchase (NOT A REQUIREMENT FOR WARRANTY SERVICE BUT A GOOD IDEA).

To exercise your rights under this Warranty as the 1st owner/purchaser, **YOU MUST SHIP THIS PRODUCT IN ITS ORIGINAL PACKAGING** (which we can replace and send to you for \$10) at your expense, with proof of purchase documentation and the ANALOGIA INC./STUDIO ELECTRONICS supplied power adapter, to ANALOGIA INC. An RMA (Return Material Authorization) number from ANALOGIA INC./STUDIO ELECTRONICS must be obtained 1st before returning any product. Email RMA requests to rma@studioelectronics.com, or call us at (310) 640-3546 to secure an RMA #. Products shipped to ANALOGIA INC. without an RMA will be refused and returned. Shipping insurance is optional, but highly recommended.

ANALOGIA INC./STUDIO ELECTRONICS will repair or replace this product at its sole option and at no charge to you for parts and labor—when deemed necessary and within the warranty period—provided that ANALOGIA INC./STUDIO ELECTRONICS reserves the right to determine whether the product is “defective” for purposes of this Limited Warranty. This Warranty does not apply if damage to this product occurs as a result of abuse or misuse, abnormal use or handling, improper packaging, another product’s interaction, exposure to temperature extremes, or if the product has been altered or modified/customized in any way, or the damage was caused by unauthorized repair or service. The original product must return to ANALOGIA INC. unaltered.

IN NO EVENT SHALL ANALOGIA INC./STUDIO ELECTRONICS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, COLLATERAL, EXEMPLARY, PUNITIVE, CONSEQUENTIAL OR SPECIAL DAMAGES OR LOSSES ARISING OUT OF YOUR PURCHASE OF PRODUCTS AND/OR OUT OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF USE, PROFITS, GOODWILL OR SAVINGS OR LOSS OF DATA, MUSIC, ELECTRONIC FILES, OR PREFERENCES THAT MAY HAVE BEEN STORED BY A USER OF THE PRODUCT, EVEN IF ANALOGIA INC./STUDIO ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR CLAIMS, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This Limited Warranty and the right of replacement is in lieu of any and all other warranties—which you hereby waive—and it gives US purchasers specific legal rights. You may also have other rights which vary from State to State.

ANALOGIA INC., 530 West Palm Ave. El Segundo, CA 90245

1 SAFETY ESSENTIALS

Warnings, Precautions, and Advice

WARNING! - When using electric products basic precautions should always be followed to avoid the possibility of serious injury or even death to you or others, as well as damage to the device or other property from electrical shock, or other risks. These precautions include, but are not limited to, the following “to do” list

- Read (and save) all of the instructions before using product.
- Do not use product near any water source—such as a bathtub, wash basin, kitchen sink, or swimming pool.
- Clean with a soft, dry cloth with unit unplugged from AC outlet.
- This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an Audiologist.
- Do not place anything heavy on the instrument.
- The product should be situated so that its location or position does not interfere with its proper ventilation.
- The product should be located away from heat sources such as radiators, heat registers, or other items that produce heat.
- Avoid using the product where it may be affected by dust or hot sunlight.
- Make sure the line voltage in your location matches the input voltage specifications on the DC power adapter.
- Mute channel volume before making audio connections to prevent malfunction and speaker damage.
- Protect the unit from strong jolts and vibration and never apply strong pressure to the front, back or side panels, or strike them in any manner.

The product should be serviced by qualified service personnel when:

- a) The power supply cord or the plug has been damaged.
 - b) Solid objects or liquid either have fallen or spilled into the product.
 - c) The product has been exposed to rain.
 - d) The product does not appear to operate normally or exhibits a marked change in performance.
 - e) The product has been dropped, or the enclosure is damaged.
- Do not attempt to service the product beyond that described in the user maintenance instructions. All other servicing should be referred to qualified technicians.

DANGER! INSTRUCTIONS RELEVANT TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

Do not open the chassis. There are no user serviceable parts inside. Refer all servicing to qualified personnel only.

- Unplug power supply cord from outlet when not in use for an extended period.
- Do not trample on the power-supply cord, trip over it, nor pull at it, but grasp the plug portion when unplugging.
- Care should be taken so that objects do not fall and liquid is not spilled into the enclosure through openings.
- Protect the unit from strong jolts and vibration and never apply strong pressure to the front, back or side panels, or strike them in any manner.

GROUNDING INSTRUCTIONS: This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord with equipment grounding conductor and a grounding plug, which must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER! Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

SAVE THESE INSTRUCTIONS!



The lightening flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltages" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing (maintenance) instructions found in the literature accompanying the product.



2 UNPACKING & INSPECTION

Check the contents of the shipping carton. Be careful when unpacking your MidiMini to insure nothing is missing or damaged. Save the carton and packing materials for possible factory calibration or repair issues in the future.

CODE/Omega8 ships with the following items:

1. IEC power cord
2. User Manual
3. SE Sticker

3 SETUP, CONNECTIONS & CARE

WHAT YOU WILL NEED

1. A clean and sturdy surface where you can set your CODE/Omega8.
2. A properly grounded AC outlet supplying 115 Volts to 240 Volts AC; 50/60 Hz.
3. One 1/4 Inch (TS) Male Instrument Cable, and means of amplification or monitoring: there is no headphone connection.

POWER

Plug the included IEC cable's female end into the IEC power jack on the back of your CODE/Omega8, and then plug the male end of the cable into an AC outlet. The CODE/Omega8's auto-switching regulated supply will operate properly on either 115 volt or 240 volt AC line voltage.

NOTE: Allow CODE/Omega8 5-10 minutes to warm up before use, as it is an Analog Instrument. If the unit has been subjected to temperatures under 60 degrees for an extended period, optimal Oscillator tuning and stability may require 15-20 minutes of warm-up time, during which time you could dig deeper into this manual. Avoid operation in direct sunlight.

AUDIO OUTPUT

With the **CONTROL VOLUME** knob turned to 0, plug one end of a 1/4" instrument cable into the Audio output and the other end of the cable into your mixer, amplifier, or audio interface. Adjust VOLUME to desired level.

NOTE: The **AUDIO** out jack is TS and TRS 1/4" cable compatible.

CARING AND CLEANING

Clean the CODE/Omega with a soft, nearly dry cloth only; do not use solvents or abrasive detergents. The semi-matte finish is unique and requires thoughtful handling and maintenance—like anything of beauty; it's a luxury finish to be sure.

4 REGISTRATION

Registering your CODE/Omega8 synth creates a handshake between owner and manufacturer, insures access to Analogia Inc. tech. support, warranty service, product updates, and if desired, promotional offers. As always, our Facebook, SoundCloud, and Instagram outlets are current and generally helpful, so swing by.



5 BASIC VOICE ARCHITECTURE

Two Voltage-Controlled Oscillators

Two Voltage-Controlled Filters—standard units include Minimoog & 4-mode Oberheim S.E.M.

One dynamic gain stereo Voltage-Controlled Amplifier

3 Multi stage variable curve Envelopes

External Input processing

3 Low Frequency Oscillators

1 Arpeggiator (Omega)

Filter Control Section (CODE)

6 FEATURE HIGHLIGHTS

- 8 independent stereo/panning analog synthesizers with auto-triggering External Inputs
- Stackable Sine, Triangle, Sawtooth and variable Pulse Width Oscillators
- Six classic Hardware Filter choices when fully loaded: Mini, S.E.M, 303, 2600, CS-80, Juno/Jupiter
- Multi-timbral for layering, splitting and 8 part channelizing with Prepared mode
- Audio frequency modulation, oscillator sync, multiple triggering, envelope inverting
- Up to 30+ simultaneous modulations, numerous continuous controller assignments
- Exponential polyphonic glide, dynamic sensitive auto glide
- MIDI transmission of front panel knobs and switches
- 256 patches in ROM, 256 patches in RAM, 128 Multi patches
- Extensive supplemental patch library

OPERATING SYSTEM

The OS of the CODE/Omega8 is easy to use and simple to program. It gives the user complete control of the numerous functions and features quickly and efficiently. The front panel knobs give you instant access to all major parameters and the edit switches in each section allow access to over 30 on screen Edit Pages. However, with the CODE/Omega8 you are never more than four button presses away from any Edit Page, quite unlike other synthesizers with Multiple Edit Pages. This allows for in-depth patch programming without punishing menu diving.

7 TUNING

For the Omega series, we developed a very accurate, but not perfect, software routine of computer-corrected Oscillator tuning. It looks at each note and corrects it to a pre-defined value. The goal was to keep all 16 Oscillators in near perfect tune over the wide range of the keyboard, but not so perfect as to eliminate the element of randomness, which is the nature, and beauty of analog synthesis. There is some tempering at the very low and high pitch ranges. Adjust as needed.

The tuning of the filters is done in hardware and is not part of the Tune routine. You may hear with each voice a very slight difference in timbre or tone; this is not a fault of our design. Rather, we have chosen to be faithful and follow the chosen path, blazed by our history shaping predecessors, manufacturers of the classic mono/polyphonic analog synthesizers of the past. It is precisely this slight variance from voice to voice that gives discrete and Curtis chip based analog synthesizers their vibrancy and soul-pleasing warmth and character.

Occasionally, after the Tune procedure, some of the voices may return in pitch a half step off. The tuning procedure works best when performed in a ROM sound. We have created a special patch for this procedure: B128. Set to patch B128, press a low note on your MIDI keyboard and run the tuning procedure again.

8 COMMON FUNCTIONS

Change Midi Channel: Multi/Midi **UTILITY** switch - see also [Edit Page 2](#)

Adjust Master Tune: Oscillator **EDIT** switch - Edit Page 1

Change Patch Banks: When on main program page press **UP/DOWN** cursor switches.

Go To Multi Bank: Press & hold Programmer **BANK/PART** switch, then press left arrow switch.

Save Patch: **SAVE** switch: Select patch and bank location in RAM, press SAVE again.



X10 Value Jumps (pan pages only): Press and hold Programmer **X10** switch, then rotate encoder.

Upload Ram Into Rom: Programmer **GLOBAL** switch - Edit Page 3


Set Number OF Voices: Programmer **GLOBAL** switch - Edit Page 1

Back Up Data / System Exclusive Dump: Multi/Midi **UTILITY** switch - see also [Edit Page 4](#)

9 FRONT PANEL (pg. 1)

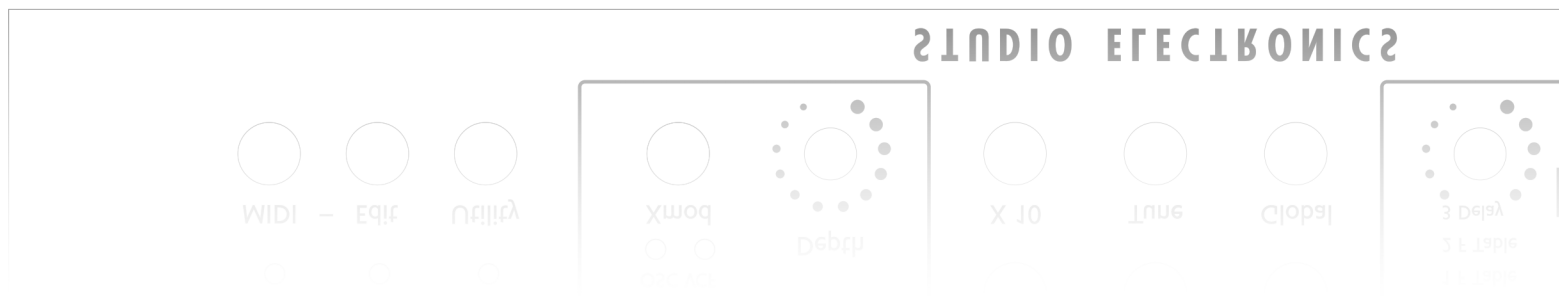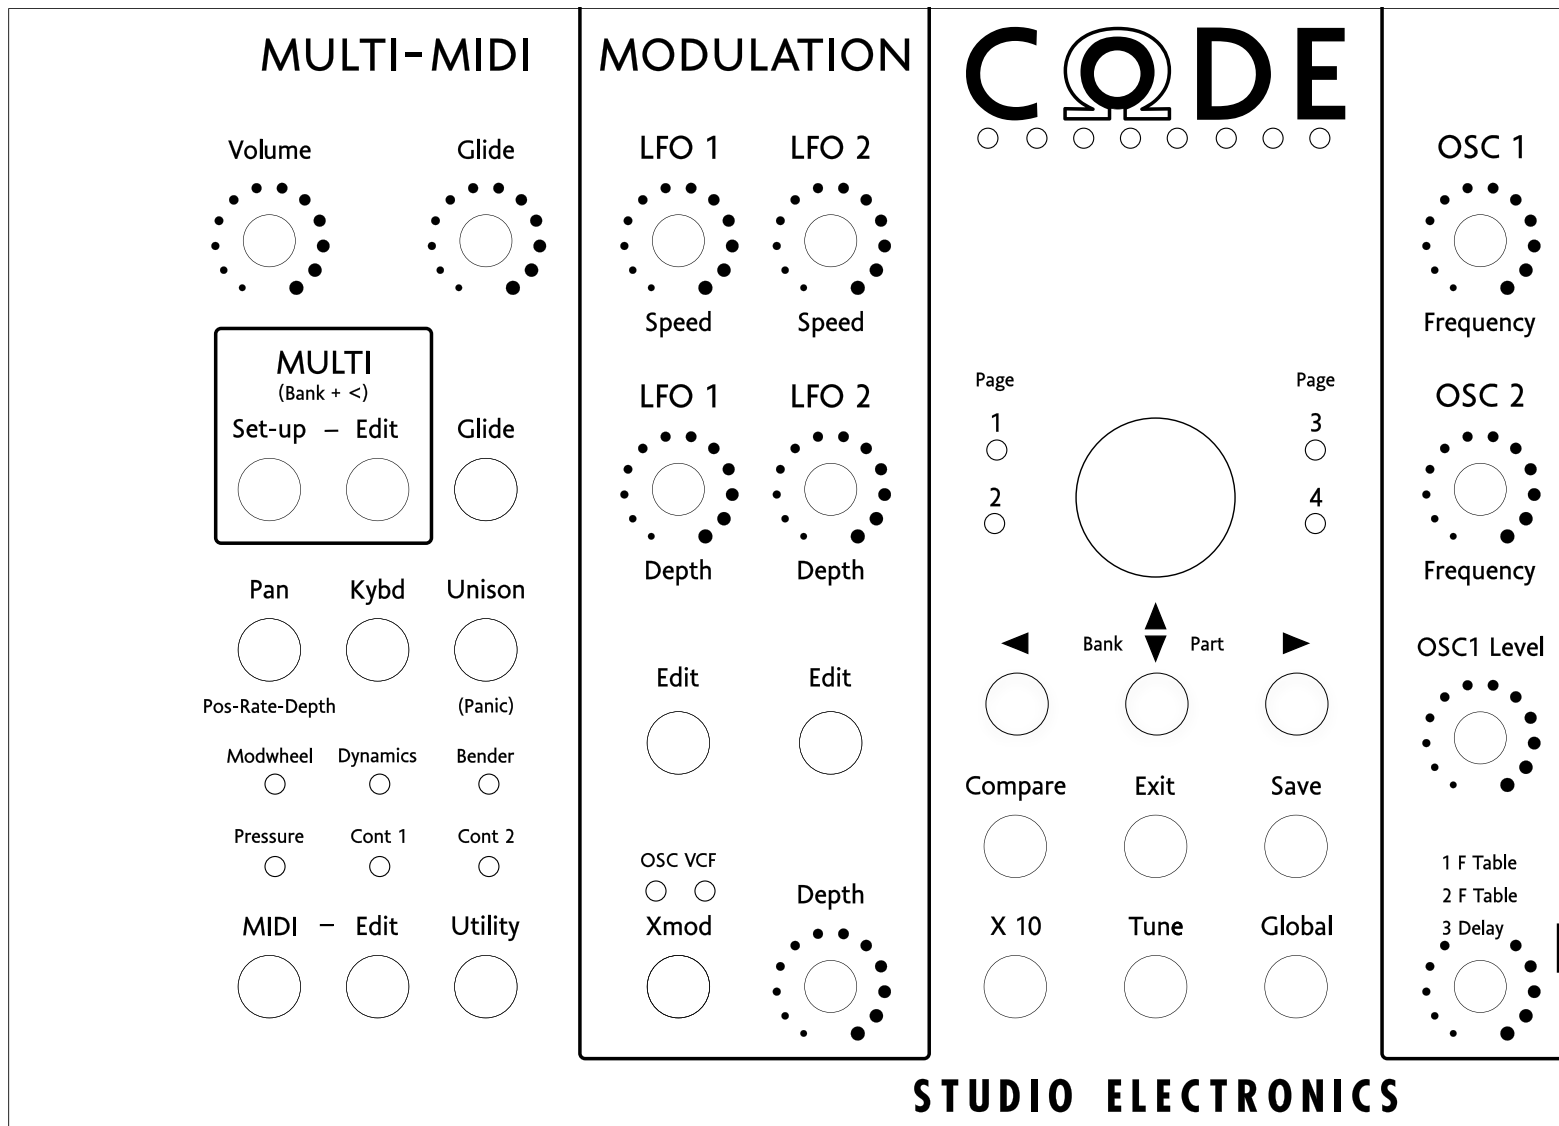


FRONT PANEL (pg. 2)

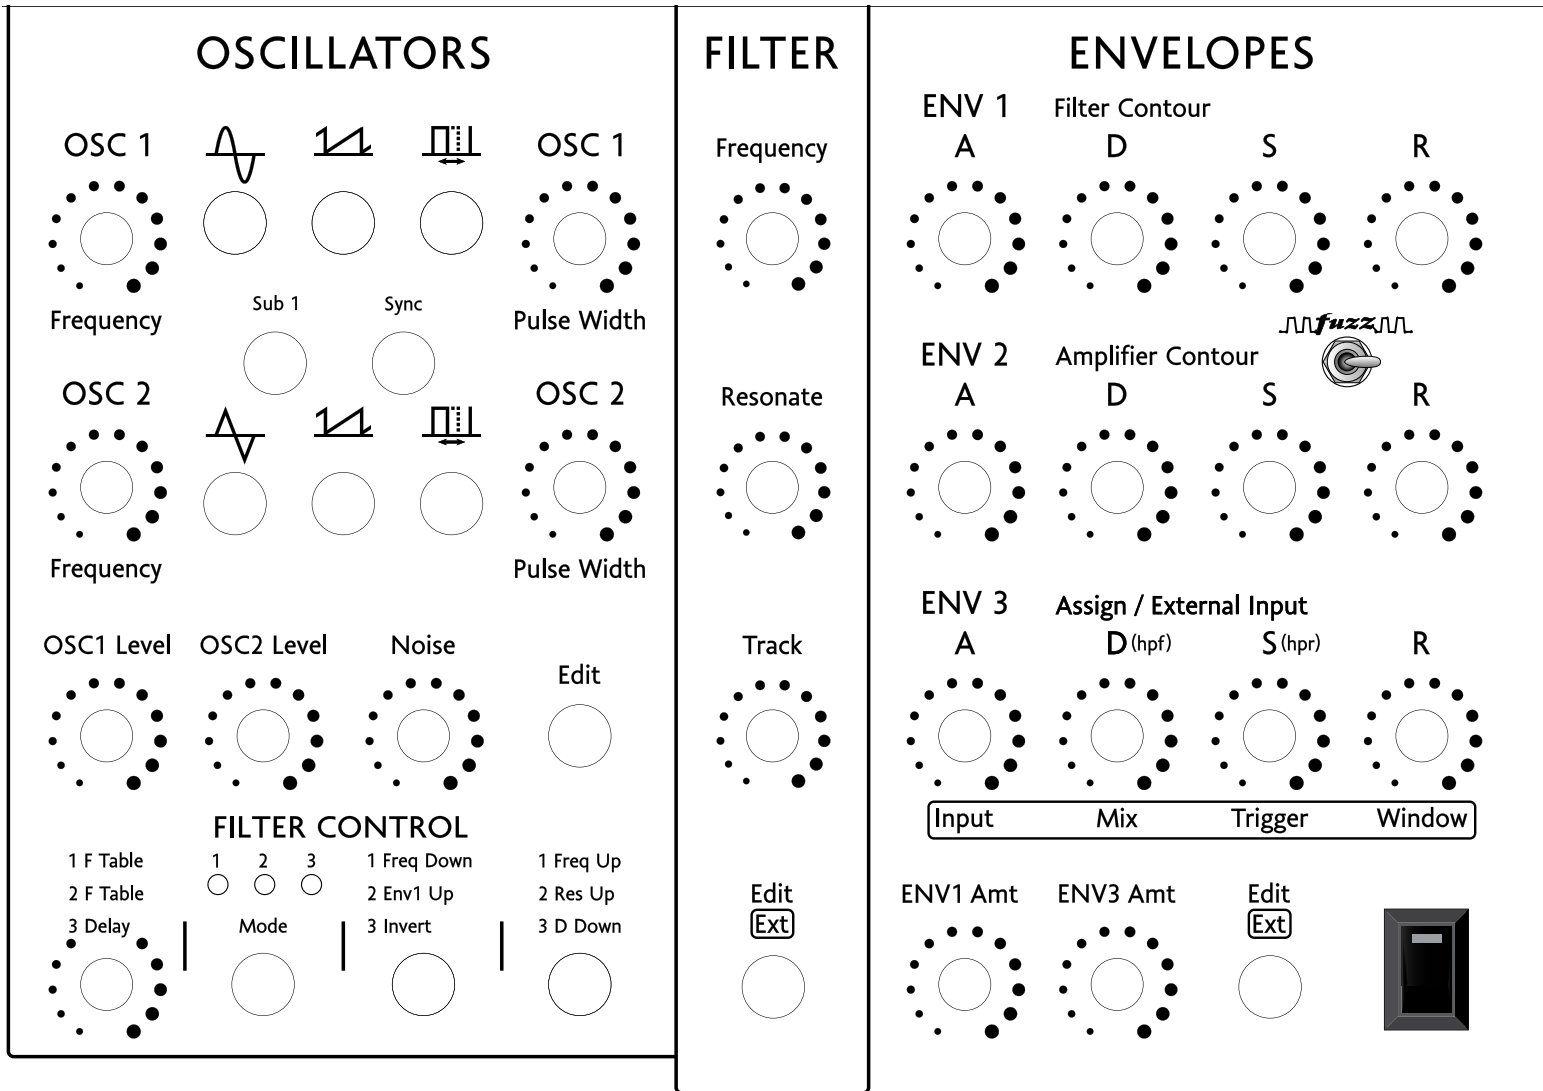

9a MULTI/MIDI

MULTI-MIDI

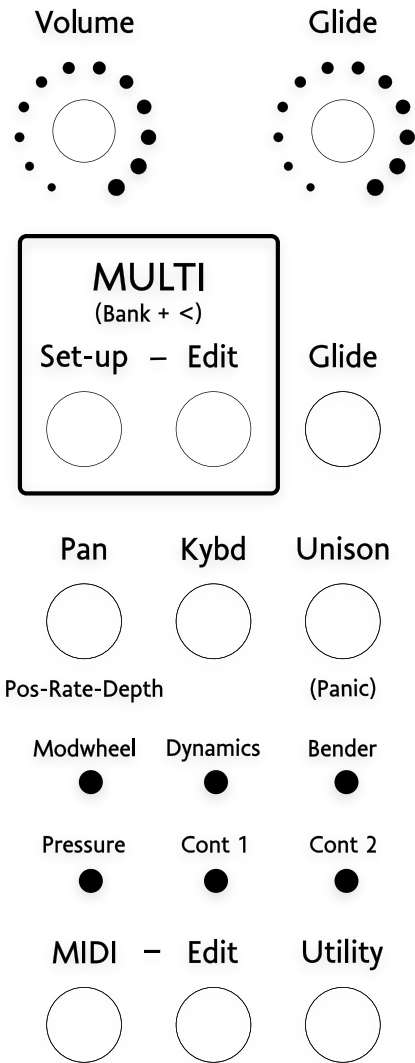

Letter A Functionality & Prepared Multimbral Fantasy

Begin the Beguine with baby steps, setting Volume & MIDI channel, and peak with mastering Cont1 and Cont2 modulation depth overrides in Dynamics, Modwheel and Aftertouch—It can be done. 1st off: In Edit Pages, words or abbreviations in brackets [] indicate top line of display. Cursor moves along the bottom line to edit selected parameter, except on certain Pan, LFO, and Envelope pages: the cursor will also move along the top row to edit parameters. Two ** indicate a future voice board function.

KNOBS

VOLUME: Master volume control.

GLIDE: Glide amount and auto glide rate.

SWITCHES

MULTI

To get to Multi bank, press and hold the Bank switch, then press the left arrow switch.

SETUP

Page 1: Select type – Prepared, Split, Layer, or Multi. Prepared allows for programming different patches on each voice with MIDI reception on a single channel. Note: If the first patch in a Prepared Multi is a unison patch, the Prepared Multi will be in unison. The number of voices played by the Multi will also be determined by the [UNI] (quantity) parameter of that same first patch. You will still be able to assign each voice a different patch. Use this “unison” Multi for creating thick and intricate layered sounds.

Page 2: Set split point: determines where keyboard split or division occurs in a

Layer patch.

EDIT

Page 1: Part editing, use the bank/part switch to cycle through the Multi parts, [BANK] - bank select, [PTCH] - patch number, [VCS] - number of voices [TYPE] - mono or poly, [VOL] - part volume.

Page 2: Remove voices (per each part) from master outputs.

PAN POSITIONS IN A MULTI

The Multi preset stores its own Pan Position, Pan Rate, and Pan Depth for each voice. Waveform, key trigger, and MIDI sync information is carried into the Multi preset from the patches used in the Multi preset.

Note: Edits made to patches while in the Multi bank are savable. The Multi part you are in determines which patch you are editing and saving. Edits made to the patch must be saved before you go to another Multi part otherwise the edits are lost. Press save and select RAM location you want to save the patch to.

DETERMINING MIDI CHANNELS IN A CHANNELIZED MULTI PATCH

The first Multi part is received on the current MIDI channel that the Omega is set to, additional parts receive on successive MIDI channels. Example: if the unit is set to MIDI channel 3, Multi part 2 receives on channel 4, Multi part 3 receives on channel 5, etc.

GLIDE

Page 1: [ON] glide on / off, **[TYP] linear or exponential glide response, [MDE] in regular mode glide is active with every key trigger, in legato mode, glide is active only between legato notes, [DST] destinations for glide.

Page 2: [GLS] glissando or quantized glide on / off, [AUT] auto glide on / off, [INT] auto glide interval, [DYN] dynamic sensitivity to auto glide interval.

Pan (the x10 value moves for these pages are helpful; hold solo then rotate encoder)

Page 1: The position of each voice in the stereo field: minus - left, plus - right.

Page 2: The rate of each voice's Pan LFO.

Page 3: The depth of each voice's Pan LFO.

Page 4: [WAVE] - waveform of all Pan LFOs, [KEY] - key trigger modes for Pan LFOs, [CLK] - MIDI clock synchronization times for Pan LFOs.

KEYBOARD

Page 1: [UNI] - quantity of voices triggered when unison mode is on, [VMODE] - first available voice or voice cycle mode, [PRIOR] - note priority modes.

Page 2: [OCT] - overall pitch transpose, [MTRIG] - Multiple trigger response for the envelopes.

UNISON

Unison mode On/Off. Number of voices triggered selected on keyboard Edit Page 1. The unison button also sends an all notes off message when pressed.

MIDI

Press to cycle through the MIDI controllers. Dynamics, modwheel, and pressure have two destinations and depths. Bender modulates Oscillator Frequency and filter cutoff Frequency. Cont1 allows an additional two destinations for modwheel pressure, or breath Controller. Cont2 allows an additional two destinations for dynamics and key tracking.

Note: Cont2 allows for positive and negative modulation.

(MIDI) - EDIT

Page 1: [CON1] - modulator assignment for cont1, [CON2] - modulator assignment for cont2.

UTILITY

Page 1: Patch name page.

Page 2: [CHAN] MIDI - channel assignment, [TUNE] - Tune percentage (100% is full strength; lesser settings randomize tuning or intentional imperfection), [INIT] - sets current patch to basic default settings; will not erase over current patch unless save procedure is carried out.

Page 3: [MPRO] - memory protect, ON1 knobs will not respond, ON2 no editing can be done, **[KNOB] - knob response modes, [LCD] - sets display contrast, "0" being most sharp.

Page 4: initiates system exclusive dump procedure; select individual patch or entire bank to back up your data.

NOTE: Regarding dynamics modulation of a given parameter. When using dynamics to modulate any destination the last dynamic value played will stay with that destination unless a zero dynamic value is sent or the selected destination is edited from the front panel or at its on screen cursor location. Changing the destination or setting the amount to 0 does not send a zero dynamics value to the parameter. This only applies if after selecting a dynamics destination a dynamic value is sent via your keyboard or sequencer. If you are playing while you are scrolling through the destinations dynamic values will be sent to those parameters affecting their values in the edit buffer. Scrolling through the destination list while no dynamics value is being sent does not affect the parameters. This will also occur with the mod wheel if you do not move the wheel to the zero position before you change destinations.

IMPORTANT: Cont1 and Cont2 modulation depths override duplicate assignments in the dedicated dynamics, modwheel, and aftertouch Edit Pages. Confusing? Yes, because you can assign the same destination to any modulator. Keep track of your modulators when programming whenever possible for sanity's sake.



9b MODULATION

“Be it fast or slow, it doesn’t let go...”

Modulation is the use of a control signal to create an often repetitive pattern of pitch, level, or harmonic and rhythmic content changes, pressing and pushing into the sound with desired movement, color, or intriguing unpredictability, where randomness is allowed. If a quaint vibrato is all that is needed—so be it. Keep it plain preacher.

KNOBS

RATE x2: Speed of LFO.

DEPTH x2: Depth of LFO. Front panel knob controls amount of destination 1 only. You can also use the Q dial to edit this parameter as well. Value is displayed on LFO Edit Page 1. Depths for destinations 2 and 3 are accessed via the Q dial.

DEPTH (Xmod): Depth of Oscillator 2 Frequency modulating Oscillator 1 or Filter Frequency; each LFO can modulate up to three different destinations. If a same destination is selected in more than one location, the location furthest left will override and determine the ultimate depth.

NOTE: Destinations 1&2 are assignable to MIDI controllers; destination 3 is modulated by Envelope 3.

SWITCHES


LFO EDIT (Both LFO 1 and LFO 2 Edit Pages are the same)

Page 1: Destination assignments and amounts.

Page 2: [WAVE] waveform, [MODE] mono or polyphonic, [SYNC] MIDI clock sync times.

Page 3: [KEY] key trigger modes, [QUAN] quantized LFO modulation.

Xmod: Selects the destination for Oscillator 2 audio Frequency modulation; the front panel LEDS will indicate the routing.

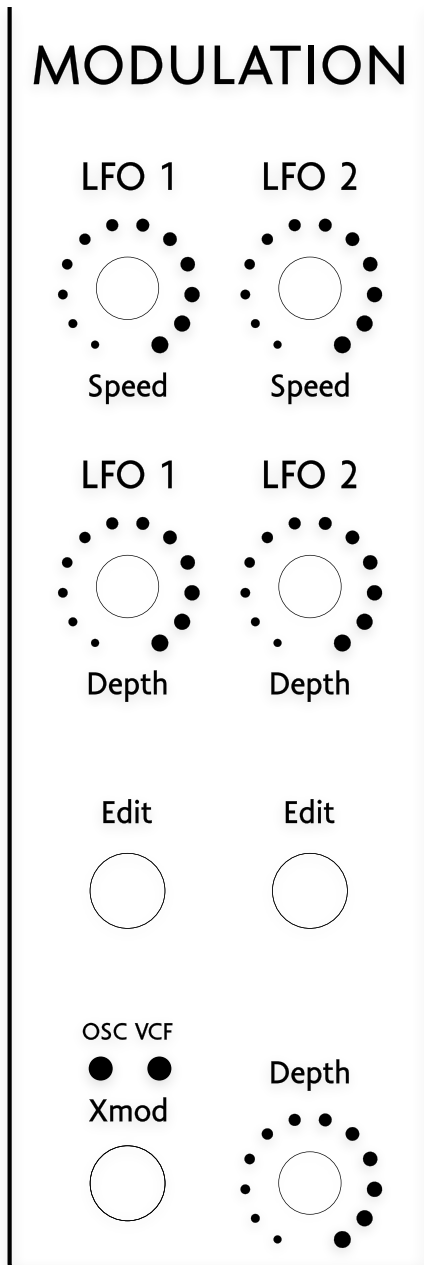

MODULATION DESTINATIONS FOR LFO 1 AND 2:

FRE1 - OSC 1 Frequency, **FRE2** - OSC 2 Frequency, **1&2F** - OSC 1&2 Frequency

LEV1 - OSC 1 level, **LEV2** - OSC 2 level, **PW1** - OSC 1 Pulse Width

PW2 - OSC 2 Pulse Width, **1&2P** - OSC 1&2 Pulse Width, **FILT** - Filter Frequency

RESO - Filter Resonance, **LEVN** - Noise Level, **Xmod** - Xmod Depth

EXT - External Input Mix Level, **VOL** - Volume

MODULATION DESTINATIONS FOR MODWHEEL, DYNAMICS, AND PRESSURE:

FRE1 - OSC 1 Frequency, **FRE2** - OSC 2 Frequency, **1&2F** - OSC 1&2 Frequency

LEV1 - OSC 1 level, **LEV2** - OSC 2 level, **PW1** - OSC 1 Pulse Width

PW2 - OSC 2 Pulse Width, **1&2P** - OSC 1&2 Pulse Width, **FILT** - Filter Frequency

RESO - Filter Resonance, **LEVN** - Noise Level, **Xmod** - Xmod Depth

EA1 - Envelope 1 Amount, **EA3** - Envelope 3 Amount, **EXT** - External Input Mix Level

LF1R - LFO 1 rate, **LF2R** - LFO2 rate, **LF1D** - LFO 1 depth

LF2D - LFO 2 depth, **1&2D** - LFO 1&2 Depth, **1&2R** - LFO 1&2 Rate

PAND - Pan Depth, **PANR** - Pan Rate, **PAN**- Pan Position



9c PROGRAMMER



Flatten Out or Globalize Your Value

Q Dial for light or heavy lifting and saving your patches digital soul, OK?

KNOBS

Q dial: Use for changing patches or banks and editing on-screen parameters.

SWITCHES

LEFT ARROW: Moves the cursor left.

RIGHT ARROW: Moves the cursor right.

UP DOWN ARROWS, BANK / PART: Moves the cursor up and down, changes patch bank when the display is on the main page.

COMPARE: Compares edited patch to programmed patch. Press to compare; press again to return to you edits.

EXIT: Returns display to main patch page. Won't erase edits: rotate encoder or press the bank button to enter an unedited patch.

SAVE: Saves current patch to same or chosen location. Edited ROM patches can only be saved to RAM banks (C & D). Press **SAVE** and select bank and patch number. Press **SAVE** again.

X10: For edits in the Pan page; numbers adjust in multiples of 10 Press and hold X10 and rotate encoder.

TUNE: Tunes the Oscillators. Select Patch B128 "Tune Don't Erase"; play the lowest note on your MIDI keyboard and press **TUNE**; follow on-screen instructions. Procedure takes about 22 seconds.


STUDIO ELECTRONICS

GLOBAL

Page 1: Set to the corresponding number of voices in your Omega.

Page 2: Upload RAM banks to ROM banks; rotate encoder after "Are you sure?" to initiate. **Download** the factory patches to reset the ROM bank memory, using the same procedure, saving off your RAM sounds 1st.

Page 3: Set number of filters active in unit. Standard units set to 2, for hardwired SEM and Slot 1 Mini.

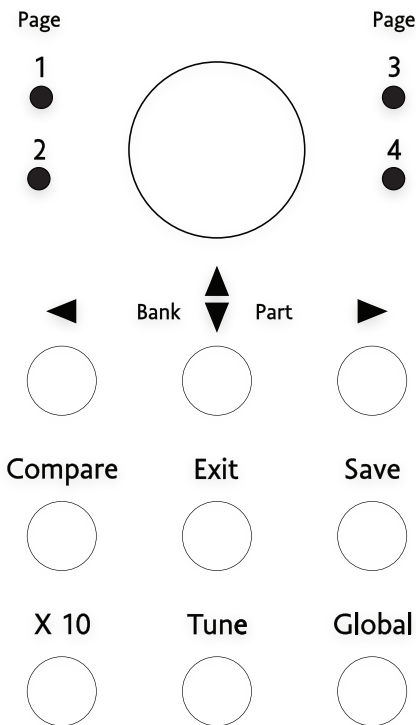

9d OSCILLATORS

Trust and Bless the Source

Oscillators are the biogenesis of Analog Synthesis, producing periodic or regularly repeating waveforms—familiar pitched sounds when in the right ranges. Tuning controls alter pitch of the Oscillators; waveform selectors, Pulse Width, and Sync controls craft the harmonic spectrum of the signal—its basic timbre, or tone coloration. Vibration therapy at best.

KNOBS

FREQUENCY: Adjusts Oscillator pitch or tuning.

PULSE WIDTH: Adjusts width of Square wave—near perfect, rubbery square at 12:00, and an ideal sweet spot for deep, soul-sweeping modulation by an LFO.

OSCILLATOR LEVEL: Adjusts Oscillators mix.


NOISE: Adjusts White Noise (flat noise) mix level.

SWITCHES

SINE (CODE), TRIANGLE, SAWTOOTH, SQUARE: Combinable Oscillator waveforms can transform the single harmonic SINE with fully-loaded sawtooth (has all harmonics of the fundamental pitch), and odd harmonic square (at 50% of its duty cycle), into gold.

SUB: Oscillator 1 subharmonic waveform: A divided frequency below the fundamental in a ratio of 1/x.

SYNC: Hard syncs frequency of Oscillator 2 to

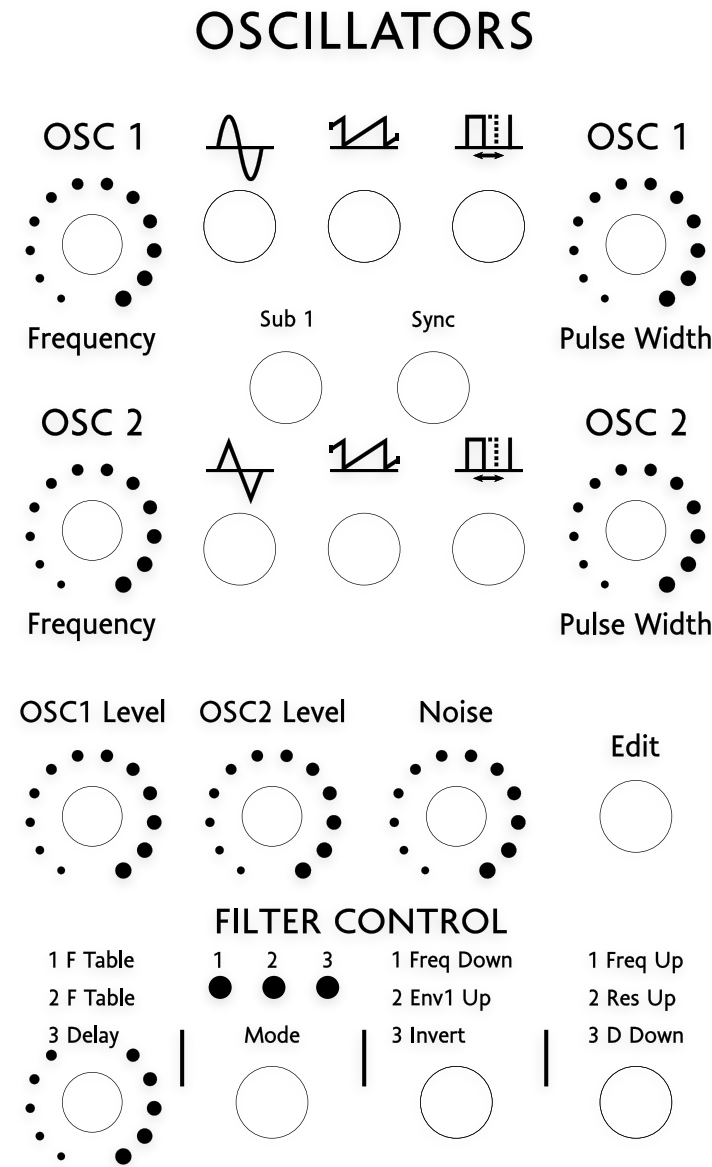


Oscillator 1 frequency, so OSC 1 synchronizes the phase or cycle of OSC 2, resulting in the same base frequency. Amplitude modulation results when the two oscillators are near the same frequency, and when near identical, a, phase-shifted vibe. Higher OSC 2 freqs. will dramatically color OSC 1's pitch & timbre.

EDIT

Page 1: Master Tune, Oscillator 1 and 2 Frequency. When in this page the Q dial may also be used to edit Oscillator frequencies.

Page 2: [FINE] - Oscillator 2 fine tuning, [MODE] - Oscillator 2 pitch modes, [ENV1] - Amount of Oscillator 2 Frequency modulated by envelope 1.

9e FILTERS

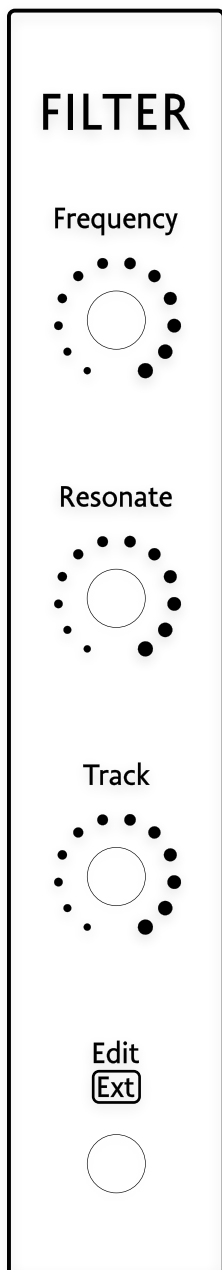

You Know What You Want to Hype—or Silence

The Filter Frequency attenuates the higher frequency components—those which lie above the adjustable cutoff frequency—and passes the lower frequency components of the audio signal. The “Resonate” boosts the cutoff frequency region, making the presence of harmonics more dominant. Self-oscillation, as the knob passes 3 o’clock, results in a pure sine wave satisfaction which should be used as a separate tone source, as often as band members will permit. Resonance is in fact positive feedback—perhaps *the* signature sound of subtractive synthesis. Your CODE/Omega is a filter wonderland... especially fully loaded: Mini, SEM, 303, 2600, Juno/Jupiter, CS-80. You can’t fit them all, but deciding on favorites is a worthy and honorable pursuit.

KNOBS

FREQUENCY: Cutoff Frequency. Lower Frequency values reduce waveform harmonic content, and curtail white noise’s infinite partials, uniform distribution dance in the frequency domain. If you contained every frequency, amplitude, and phase relation of a sine wave throughout the audible spectrum (if diced into harmonic components), you would be dancing too.

RESONATE: Filter Resonance level or Q. Except for the SEM filter, self-oscillation happily chirps in near or beyond a 3:00 setting, and will track reasonably well over several octaves with **TRACK** at 10. Expect an amplitude (perceived volume) drop with higher Mini filter resonance values; a kind of automatic gain compensation (AGC) kicks in (attempting to maintain peace), keeping the overall signal level uniform, as high resonance values could overload the synth, distorting the vibe.

TRACK: Filter tracking amount. Applies keyboard CV (control voltage) to the filter. The more tracking used, the brighter the sound will get as you ascend the keyboard. Maximum tracking is 1 v/octave. Values around 2:00 to 3:00 keep the bass register groove smooth, yet clarify and brighten more lead/melodic ambitions and #lookatme explorations.

SWITCHES

EDIT

Page 1: [TYPE] - Filter type selection: Oberheim 12 db low pass, Oberheim 12 db band pass, Oberheim db high pass, Oberheim db band reject, Moog 24db minimoog, AUX1, AUX2; [INVT] - Inverting of envelopes 1 and 3. The CS80 filter is always in the AUX2 position, the high pass

frequency and resonance are controlled by two of the External Input parameters, [MIX] level for the frequency and [TRG] level for the resonance.

EXT (EXTERNAL INPUT)

Page 2: External input parameters: [IN] - Input level; [MIX] - Mix level: set balance between internal and external sound sources; [TRG] - Envelope trigger level: set level at which external sound opens up gate; [WIN] - Envelope trigger window: determines high and low level response. You can also control the External Input parameters from the front panel. Press and hold the filter **EDIT** button, then press the envelope **EDIT** button; this switches the envelope 3 knobs to the External input parameters. The envelope **EDIT** button will blink to indicate this function is enabled. Repeat the **EDIT** button press routine to release the controls back to envelope 3.

OSCILLATORS



FILTER CONTROL (CODE)

1 F Table: Sweeps through filter types.

2 F Table: Same as above (redundant setting).

3 Delay: Envelope 1 Delay, [DLAY1]

MODE: Selects the numbered knob assignments: 1, 2, F Tables, 3 Delay, and numbered switch assignments: Freq Down, Env1 Up Invert, Freq Up, Res Up, D Down.

FREQ DOWN, Mode 1, left switch: Decreases filter frequency.

FREQ UP, Mode 1, right switch: Increases filter frequency.

ENV1 UP, Mode 2, left switch: Increases envelope 1 amount.

RES UP, Mode 2, right switch: Increases filter resonance.

INVERT, Mode 3, left switch: Inverts filter envelope.

D DOWN, Mode 3, right switch: increases filter (env 1) decay time.

FILTER TYPE NUMBERS FOR THE F TABLES

SEM LP = 1

SEM BP = 2

SEM HP = 3

SEM BR = 4

MINI = 5

AUX 1 = 6

AUX 2 = 7

SWEEP ORDER FOR UNITS WITH SEM AND MINI

1234513524153125

SWEEP ORDER FOR UNITS WITH SEM, MINI AND AUX1 (FILTER SLOT 3)

1234564251361425

SWEEP ORDER FOR UNITS WITH SEM, MINI, AUX1 AND AUX2 (FILTER SLOT 4)

1357462514273617 - The most purposely out of order, in attempt to create the most interesting juxtapositions of filters and modes normally out of sequence, e.g., Juno/Jupiter (AUX 1 #6 - a typical plug-in slot for that filter) and SEM band reject (Bulit-in filter mode #4). Filter control not possible just Q dial scrolling.



The “CODES” for the filter allow for a speedy, orderly trip through the filter types and modes installed in your CODE, with the exception of fully loaded units, and then a quasi-random selection takes control. Both F Tables are identical so you can combine the filter type/mode scanning with MODES 1 & 2 FILTER CONTROL switch routings: 1 Freq Down (filter frequency -), 1 Freq Up (filter frequency +); 2 Env1 Up (envelope 1 +), 2 Res Up (resonance +). Get fancy...

9f ENVELOPES

When you're in the shape I'm in, it's telling me something...


FILTER (ENV) SERMON: The Filter envelope shapes the timbre and overtone content of the audio signal as it flows from the circuitry of the mixer. This contour generator is used to dynamically move the cutoff frequency. It works as such: Each time a key is triggered, an envelope or contour generator attached to the Filter's cutoff frequency responds, sending a control signal to the filter; that control signal rises at one rate: attack, falls at a second: decay, levels out to a certain point: sustain—a steady control voltage as long as the gate or note is maintained—finally falling off and vanishing at a third rate: release, upon cessation of gate, or fingers generally.

A - ATTACK x3: Attack time, the first stage in the envelope in which the initial rise in filter frequency (env1), volume (env2), or as assigned (env3) rises to peak at the adjusted rate.

D - DECAY x3: Decay time, second stage in the envelope in which peak levels of filter frequency (env1), volume (env2), or assigned (env3) fall from peak to the sustain level, if there be any.

S - SUSTAIN x3: Level to which the filter frequency (env1), volume (env2), or assigned (env3) falls at the end of the decay time, unless sustain level is high enough to override decay settings.

R - RELEASE x3: Release time. Release is the fourth and (mostly) final stage of our envelopes, after the initial rise and fall of the attack and decay times surrender to the

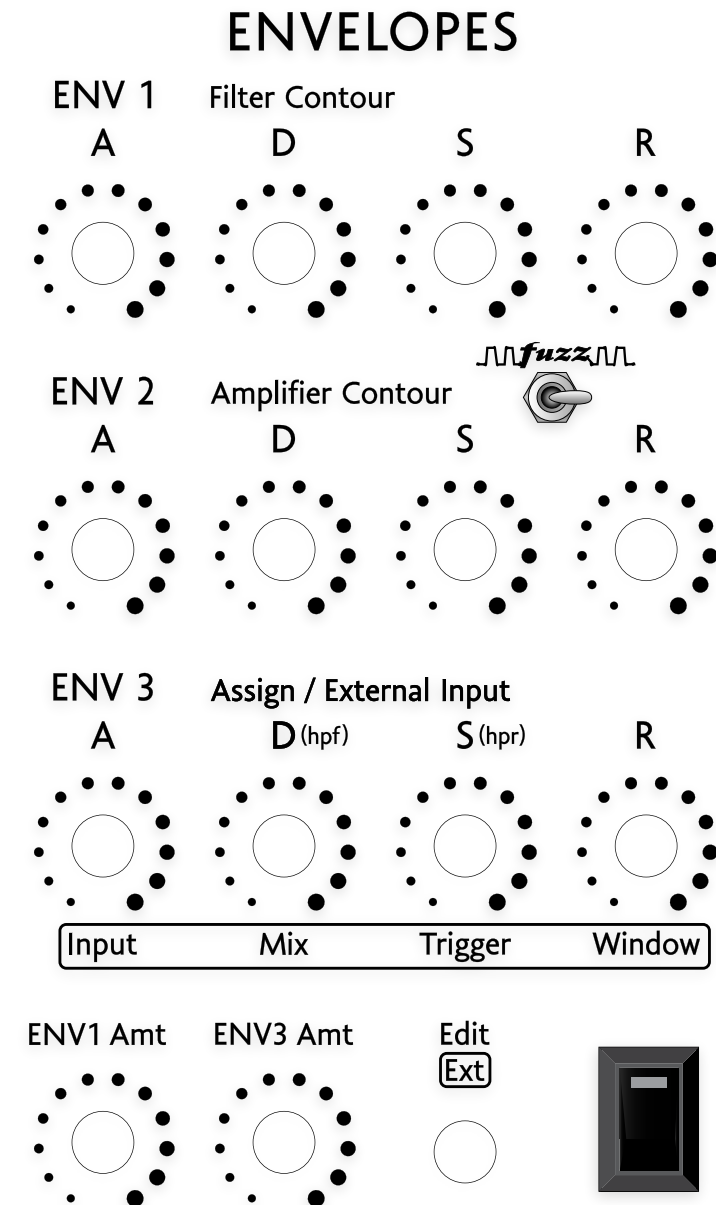

sustain level. RELEASE time follows key lift, determining the length of time for the envelope generator's output to go from the SUSTAIN level to zero.

ENV 1 Amt: The amount or depth of envelope 1 applied to the filter frequency. The shape of the filter envelope is determined by the contouring **A D S R** controls.

ENV 3 Amt: The amount or depth of envelope 3 (destination 1 only) applied to the selected destination. Destinations two and three are selected via the Q dial.

ENVELOPES

EDIT

Page 1: Envelope 3 destinations and amounts.

Page 2: [DKY2] x3 - Envelopes 1, 2 & 3 decay 2 time (from left to right). Decay 2 is an additional stage only active if a value greater than zero is set; it determines the time it takes while holding a note, for the sustain level to reach zero.

Page 3: [DYN] x3 - Dynamic sensitivity amounts for envelopes 1,2 & 3 (from left to right).

Page 4: [DLAY1] - Delay time to the start of env 1, [DLAY3] - delay time to the start of envelope 3. Envelope 3 can modulate up to three different destinations. If the same destination is selected in more than one location, the location furthest left will override and determine the ultimate depth.

ENVELOPE 3 DESTINATIONS:

FRE1 - Osc 1 frequency, **FRE2** - Osc 2 frequency, **1&2F** - Osc 1&2 frequency

LEV1 - Osc 1 level, **LEV2** - Osc 2 level

PW1 - Osc 1 pulse width, **PW2** - Osc 2 pulse width, **1&2P** - Osc 1&2 pulse width

FILT - Filter frequency

RESO - Filter resonance

LEVN - Noise level

XMOD - Cross-modulation depth

EXT - External input mix level

LF1R - LFO 1 rate, **LF2R** - LFO2 rate, **LF1D** - LFO 1 depth, **LF2D** - LFO 2 depth, **1&2D** - LFO 1&2 depth, **1&2R** - LFO 1&2

ENV 1

Filter Contour

A

D

S

R

ENV 2

Amplifier Contour

A

D

S

R

ENV 3

Assign / External Input

A

D (hpf)

S (hpr)

R

Input

Mix

Trigger

Window

ENV1 Amt

ENV3 Amt

Edit

Ext



Envelope 3 can be used most expressively bring in LFOs, massage oscillator levels, vary pulse widths, affect xmod amount... made all the more interesting by three discrete destination and amounts settings.

Remember, envelopes 1, 2 & 3 feature a secondary decay 2 which allow for the normally static, organ-like sustain, to fade to a zero value. So one can setup an organic-feeling, pointy initial decay, using "decay 1" and then not be stuck with that endless, numbing hold value, eternally sustaining—no my friends! You can move the sound from that careless cage, & taper it down with a natural '70s fade out.

10 EXTERNAL INPUT REVISIT

Sound Sources of Your Design

External Audio Input [see also [FILTERS - EXT](#) p. 21]

External sound sources replace the Noise circuit and can be processed through the CODE/Omega8's filter/amplifier circuits/signal path and modulated by LFOs, envelopes—anything normally reserved for the internal oscillators—by this auto-triggering circuit. The **[IN]** - Input level in the **FILTER EXT** menu (Page 2) sets the incoming audio level; high levels beyond a certain point will overload the filter input and distortion effects will occur—often a good thing.

Continuing on in the same menu:


[TRG] - Trigger: Sets envelope trigger level, or the threshold at which the gate of the VCA is opened, or responds;

[WIN] - Envelope trigger window: Determines high and low level response—ample room for experimentation there.

Front panel control of the External Input parameters makes the E.I. experience more engaging and effective: Press and hold the **FILTER EDIT** button, then press the **ENVELOPES EDIT** button; this directs Envelope 3's normally dedicated knobs to the External Input menu parameters. The **ENVELOPES EDIT** button will blink, to indicate the switch of functionality is made. Repeat the **EDIT** button press routine to release the controls back to standard op. of Envelope 3.

NOTE: A MIDI note must be sent/received, sustained or pulsed, to trigger the VCA (open the gate) and process audio.

External Audio Input connections are made via the [BACK PANEL](#).

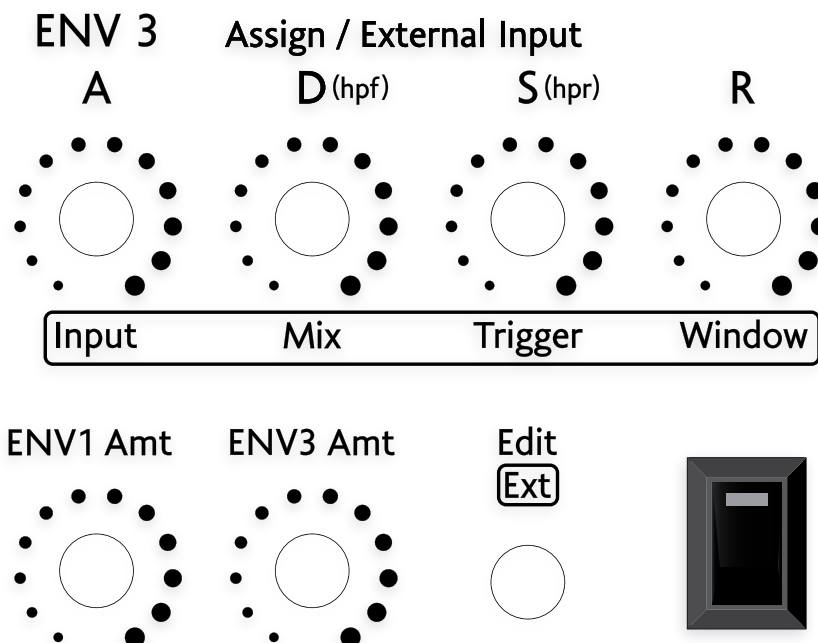

11 FACTORY PATCH BANKS

ROM BANK A

1 REVELATION 1-8	44 STELLAR FARFISA	87 DROP THAT BOMB!
2 WHIRLY BIRD	45 PIGALLE PARTY	88 PROPERTY OF NONE
3 WHIRLY BIRD CP30	46 HUBBLE'S TELE	89 FAILED BARETTA
4 WHIRLY FIRE BIRD	47 MELLOTRON MSR 08	90 SQUARE DANCER
5 WHIP IT FADE-IN	48 ANODAZED	91 SQUARE DANCER 2
6 SINATRALIKEBUZZ	49 ANOFAZED	92 DEPENDABLE WORM
7 SLINKI'S MOOD	50 HIGH DESERT SAGE	93 DEPENDABLE WORM2
8 ZIMMERMAN'S STAB	51 JEFFREY'S DANCE	94 CATERO'S 101WURM
9 BEETLE BOX	52 PRIMITIV NOTION	95 CATERO'S 102WURM
10 BEETLE BOX MINI	53 BOOM DA BASS	96 CATERO'S 103WURM
11 BEETLE BOX MOVER	54 GMF MESSAGE B 08	97 I WISH PLUCKR 08
12 ROYAL BLOOD LINE	55 I AM SINGING 08	98 VEGAS TOUCH
13 SWEET MURCHIE	56 BAD BAD THANG	99 SHADE ONTHELIGHT
14 SWEET MURCHIED	57 PROUD TO BE PHAT	100 MOROCCAN DANCE
15 HIT & RUN '08	58 ISN'T SHE LOVELY	101 MOROCCAN DANCER
16 USEMODWHEEL&ARPG	59 SUPERSTORM DECAY	102 ONE FIBER DEEP
17 WHEN THEY DOUBT	60 NEWS 4 CARMEN	103 SLIDE OUT WIDE
18 IF IT'S STEVIE	61 REPRISAL FRAME	104 UR THA 1 ORGAN
19 IF IT'S STEVIE 2	62 LATENT ECHO	105 TOM TOM CLUBBER
20 THEN I WONDER	63 OVERTONED	106 WHO EVER SAID UB
21 SENIL'S SYNTHI	64 THAT'S SWELL GUY	107 DYNAMIC CLUBBER
22 I AM SINGLE...	65 ROPE TRICK FOR 2	108 EMERSONICKED
23 DELAYED REALITY	66 HONEY GUIDE	109 EMERSONICKED 2
24 LEARNING EFFECT	67 SOME RELEASE B	110 EMERSONICKED 3
25 ODE2DAP5WAHSWEEP	68 IT STILL HERTZ	111 CLASSIC ATC LEAD
26 TOUCH THAA SKY	69 YOU'RE NEVA 2LOW	112 CLASSIC ATC L. 2
27 MY LOVELY HORN	70 VERO MOD	113 MULTITRIGGERD SR
28 MY LOVELY HORN 2	71 CAN'T MAKE UP	114 PLAY1 2ND&2 5THS
29 ETEVIEN	72 CHARACTER CALL	115 SUNDAYMORNINRIDE
30 CS-80 220 HORNS	73 VENERATIONAL	116 SILENT SCREAM
31 JP INFORMED	74 THE MOMENT UKNOW	117 ROWTHEMODEMASHOR
32 CHOCHOLATE TOUCH	75 THE MOMENT IKNOW	118 SHE'S AWAKE!
33 MY LOVELY REED	76 FREEWAVE	119 PURSUING WOLVES
34 MY LOVELY REEDA	77 BOOGIE BASS	120 GLISSANDOLOO
35 LOU'S REED	78 BOOGIE BASS 2	121 LOGRIAN'S RUN
36 FORGOTTEN PAINS	79 MOP IT UP	122 TAQUERI INCIDENT
37 RITUAL MEMORY	80 THAT GIRL THINKS	123 SAMPLING ON HOLD
38 LOCAL STRANGS	81 BAKER BOYS	124 HAZEL'S RING
39 SWEPTUP	82 ::RAM Utility::	125 NOMANZ LAHNDE
40 OBIE STRINGS	83 ::RAM Utility::	126 OBNOKALED
41 VILLAGE STRINGS	84 PHAT BLASTA	127 PROPER PURITY
42 VILLAGE STRINGS2	85 WHY I...	128 VANUJI CHOIR
43 ORGANY KAOS	86 EYE YA...	

ROM BANK B

1 WELOVEDAU.S.OFA.	44 BELLS 4 PIPER	87 PULSE 28
2 MARIMBA MYA	45 SEVETA ORGAN FAD	88 CAN'T BREAK UP
3 SHENEVERANSWERED	46 SEVETA ORGAN FAN	89 CHAMELEON SUB
4 DOUBLE G B MINOR	47 BEFORE THE NOISE	90 JUSTGOTALKTOGOD
5 MIDNIGHT MASS	48 BEFORE THE TOYS	91 JUITY JUITY *
6 RADIANT FOCUS	49 RUSTIC PHENOM	92 COTTON CANDY *
7 SEA BUTTERFLYE	50 RUSTIC PHENOMO	93 BEATS 4 ELLIS *
8 CHOCHOLATE GIFT	51 CAMILLE'S ESCAPE	94 BEATS 4 ELLIS 2*
9 CHOCHOLATE GIVER	52 JULY'S DECISION	95 BEATS 4 ELLIS 3*
10 DEPENDABLE SALVI	53 BONSAI DALIA	96 BEATS 4 ELLIS 4*
11 AMERICAN ENGLISH	54 KUBRESORI	97 BEATS 4PHATLIP *
12 PERFECT LOVE	55 KUBRESORI MORI	98 BEATS 4PHATLIP2*
13 TIME WAS WHEN	56 THOUGHTIKNEWHER	99 BEATS 4PHATLIP3*
14 SUPERSTINKIEST	57 ... I DIDN'T	00 ARPEGG & TWEAKME
15 RESOHNETTO	58 SEARINGAWARENESS	101 ARPEGG & FREAKME
16 KROGH'S NEST	59 REFLECTIVE WEBB	102 GLISSANDOMADNESS
17 MINOR 9TH GROOVE	60 DEARLY BELOVED	103 PRETENDR2DACLONE
18 THERIOT CLANS	61 ENDLESS DA DAA'S	104 PRETENDR2DACLON2
19 MUTED RESPONCE	62 BREATH EASY	105 3-10-02 MEASURE
20 ECHOPLEXIC	63 AFATHER'S PRAYER	106 GAZING ON ZENO
21 STREET PEEPS 08	64 AFATHER'S1STLOVE	107 THAT 3 AM ZENO
22 SWEEPSICORD	65 SMOOVLY FEEL U	108 ZENZERZEH ADEPT
23 ORRERY 4 THEOREM	66 HIS FAVORITE SON	109 ZENZERZEH WOES
24 ORRERY'S EARL	67 CLIFFS OF FERVOR	110 ZENZERZEH PANS
25 THANKU4EVRYTHING	68 PITCAIRN FAITH	111 CALL & RESPONCE
26 CHANGE THE WORLD	69 TIMITI'S CRACK	112 AMERICA AFTER U
27 SEVEN MYSTERIES	70 CLASSIC P5 SYNC	113 WATCHPULSE
28 SOFTEST SWEETEST	71 OOH WAH DIZ	114 CONSUMED
29 ETEVIEN	72 JAMSHIED LANE	115 DISCORDANTE
30 MERIDIAN KLIMAX	73 SOMETHINGOFHERS	116 MAD CYMBELZ
31 SYNTHFROMDAVAULT	74 BLATANT ECHO	117 MADCYMBL LULLABY
32 S.F.D.V.B.REJECT	75 BLATANT ECHO UP	118 BIG & PAISTE
33 S.F.D.V.BANDPASS	76 JUST PLAY IT LOW	119 INFINATOM
34 S.F.D.V. RAVI	77 WEBOYZ4LIFE Z...	120 ACID STRIP
35 STELLAPHANE WAIT	78 PROUD TO BE SE1Y	121 TRANCEPORTER
36 DEDICATED SPOUSE	79 PROUD TO B SE1XY	122 KENYAZ INDICATR*
37 4 NOTE DRAMA	80 SOUL FOOD	123 PUBLIC BROADCAST
38 DREAM FACTOR	81 IT AIN'T U	124 ORGANIK SUGAR
39 DREAM FACTORY	82 ::RAM Utility::	125 ALPHASONIX
40 ICAN'TCRYNOMORE	83 ::RAM Utility::	126 ELECTRONOIRSWELL
41 WHEN SHE DOES...	84 LEGATOGLIDEMAGIC	127 PHOTON CARLO
42 SHE DOES!	85 PULSE 26	128 TUNE DON'T ERASE
43 BELLS 4 LUKE	86 PULSE 27	

THERIOT - RAM BANK 1

1 PULSE AFTER LIFE	44 I1 GLIDE METALIK	87 JUSTOUTSIDEMY...
2 PULSE AFTER SUB	45 I1 FLYING TIGERS	88 UNCONQUERABLELOVE
3 PASS AFTER LIFE	46 PASS OF STRENGTH	89 RHETT'S OBSESHUN
4 POWELL'S COMPRES	47 CLOCK 'N FLUTE	90 SINCE BIRTH...
5 DE LEIGH 4 LUCA	48 MOMENT	91 I HAVE PULSED 4U
6 DL4L SUB	49 GRANDFATHER OCT	92 WITHOUT FAIL
7 DE LEIGH A LEE	50 EMPERORDYNAGLIDE	93 COMFORT IN G
8 DE LEIGH A LEE 8	51 OMEGA-CYCLE-KICK	94 BANDPASS IT 2 ME
9 DELEIGHXMODEVENT	52 OMEGA-NOTE-KICK	95 LOST INVENTION *
10 ARPEGGI COUNTER	53 OMEGA-NOTE-KICK2	96 PLAY MAJOR THRD
11 ARPEGGI C.XMODY	54 SQUASHA BD	97 GHOST IN THE BOX
12 ARPEGGI C. OCTO	55 SIMPLEFATHAKICK	98 OVERDRIVER UP
13 SAL W-THE NEENEE	56 KICK INVERT	99 OVERDRIVER DOWN
14 KEVIN'S MOMENT	57 PIPERATTLER KICK	100 POSITRAK LEAD
15 DL RISE & FADE	58 KICKA-LUTIONBASS	101 ALL FRED'S FALKE
16 HURRY DOWN HONEY	59 SUBSAW	102 FORMER GLORY
17 FULLMODWEALJACKT	60 WRIGHT GRIL KICK	103 DELAYAH
18 MODWHEEL 54	61 KICK THINKS SO	104 CASCADE RITE
19 BADEM BADEM	62 LIKEITOLDU KICK	105 CASCADE RITE 2
20 DONNA QUALITY	63 BLESSED RATTLE	106 CASCADE RITE 3
21 DONNA QUALITY DL	64 KICK FALLS	107 FUNKSTAGGERD
22 SUMMER DREAMS	65 KICK BASS	108 INFINITE 1 DRONE
23 GAINES ACCENT	66 KICK BASS 2	109 MAHARISHI DRONER
24 SUMMER'S END	67 KICK BASS 3	110 INDUSTRIAL DRONE
25 PEACE BASS	68 KICK BASS GALAXY	111 TEMP JOB DRONE
26 PEACE BASS OBIE	69 KICK BASS STEREO	112 THERIOT CLANS
27 VELVET VINTON	70 KBS2; DYNAMI{2+.	113 EURO EDGE BAYZ
28 SHIELD SCRAPER	71 KICK BASS ST MIN	114 BROMLEY REPORT
29 SHIELD OF PAPER	72 KICK BASS SS MIN	115 ELECTRICK EDGER
30 MODWHEEL SHIELD	73 KICK BASS SSDMIN	116 ELECTRICK REVERB
31 4TH FINGER BENT	74 KICK BASS SSDMN6	117 CONGA LINE SQUARE
32 4TH FINGER BENT2	75 UKNEWUSHOULD	118 CARLOCITY LOYALS
33 4TH FINGER BENT3	76 LESTER COULD	119 LADIES&GENTLEMEN
34 ROLL CHORD SCENT	77 PASTORIUS PULSE	120 THE VEGAS
35 JEALOUS TYPE L5	78 STICKY-TACQUI	121 LESLIE'S WEST
36 JEALOUS TYPE '04	79 SPREADING BUZZ	122 DELAYED B. ING
37 FAURE INTO LOVE	80 SALVAGEZ RUNTIME	123 KNIFE BLADE KEEF
38 THE DRIVE BACK	81 CHRISTOPH DUAL	124 122 CORNER
39 PLEASANT PAD	82 ::RAM Utility::	125 IFITMATTERS2U
40 PLEASANT PAD 2	83 ::RAM Utility::	126 TUNNEL TRUTH
41 PLEASANT PAD 3	84 WHEN CAM SMILES	127 COMA AIR
42 PLEASANT PAD 4	85 INEFFABLE YOU	128 FUTURE CLOCK SET
43 INSENSITIVE ONE	86 CIAO EMILO, CIAO	

CADIX - RAM BANK 2


1 TOUCHED RESPNOSE	44 THE LEADING MAN	87 KD ESTEREOPHONIC
2 FEEL LIKE AFRICA	45 THE LEADING UELO	88 SCOOP KICK
3 THE WATCHERS BET	46 THE LEGATO GLIDR	89 SCOOP KICK SARIO
4 BACK AWAY SLOWLY	47 WAH TOM CLUBBER	90 DIVIN' DIRTY
5 HOME 4 CHRISTMAS	48 CATERO'S XXX WRM	91 SOARINA KICK
6 CONSTANCE STATE	49 CATERO'S XXX WRM2	92 GREAT SPIRIT KCK
7 MAXIXAM SWELLS	50 R U SCARED SUB	93 SLOW DADD_ KICK
8 TO A BETTER LIFE	51 R U SCARED RELE	94 LUKEY SUBISH
9 HOLLYWOOD HIGH	52 PLAY COUSIN BASS	95 OOWEAD KICK
10 WHAT'S COMIN 2YA	53 BAIXO LONGO	96 OOWEAD KICK D LY
11 WHEN U STILL...	54 SINGOLA SPIGOLA	97 PROPAGANDA KICK
12 LOVE HER...	55 SPECIOUS FORCES	98 DEVORE CHILL KCK
13 AND IT'S TO LATE	56 PASTORIUS C0D3	99 TROMMEL & ZEILE
14 SEQUENCIA RAINS	57 SLIDE-OUT B'LEAD	100 DRUM 'N LINEMAN
15 PAZ FRAGIL	58 SLIDE-ON B'LEAD	101 DRUM 'N LINE HP
16 LESLIE'S WEST 07	59 SLIDE-IN 8	102 DRUM 'N LINE IV
17 CYBERNIA BANK	60 WHATUKNOWBOUTDIS	103 DRUM 'N LINE GX
18 SOFT STIKA JAB	61 STEALTH GREASE	104 DRUM 'N LINE ORO
19 2BCARLO'S FRIEND	62 TUBAHCELLO	105 CYBER GONG SHOW
20 NEGATIVE RESKURV	63 PULSE SYMPHO 1	106 UTILICUS PERCATF
21 FATHA BEAM	64 PULSE SYMPHO 2	107 UTILICA PERCATIF
22 AFATHER'SMODWEAL	65 PULSE SYMPHO 3	108 PANKI MOD SNARE
23 SMALLVILLE	66 PULSE SYMPHO 4	109 OOWEAD SNARE FUN
24 STARBRIGHT 007	67 SCROGGINS' PULSE	110 OMINOUS INTENT
25 "AHH FRANCE"	68 LATE RISER	111 SAMPLE & HIGH
26 WHIRLI LEERITI	69 NEUBLE INSPIRED	112 PURPLE DAZE
27 WHIRLI LEERI	70 TRACK WILL FOLOW	113 MOTOCICLETA MOD
28 WHIRLI LEERI VIB	71 MELLOW SUBMARINE	114 STEVE AUSTIN'D
29 WHIRLUSTER	72 DREADAY BASS	115 PARTY FLAVORS
30 KING LEERI	73 BARMENDERBRASSY	116 GHOST TOWN WINE
31 LE SHOW BLUES	74 JUMPWHEEL BASS	117 I'M SPARTICUS!
32 NOT FORGOTTEN	75 HARD CASE BASS	118 JAWA RADAR FARE
33 JEFF BARR LIVES	76 HARD CASE BASS 2	119 SPACE FLOYD
34 SAFRONZ HORN	77 FOUNKI DELAYER	120 TERMINATOR BYE
35 STICKY-STEVEKEY	78 FD 2	121 4TH FINGA FINALE
36 KRAFTY CLONE	79 I'LL EXPLAIN LTR	122 UNAMERICANCHOPPA
37 PLICK-PLOCK	80 DYAMIK STONAN	123 SPADA ESIGENTE
38 CLICK-CLOCK CAM	81 WITHIN WITHOUT	124 LOST CHILD MOM
39 VIRGIN SPRING	82 ::RAM Utility::	125 WHEAT AND TARES
40 CLEAN BLOOD DRTY	83 ::RAM Utility::	126 FUTURE CRUNK RAY
41 CLEANERBLOODIRTY	84 PRELUDE TO #85	127 RASTLOSE NOVA
42 CATCH 'N FLOAT	85 PLAY G, Z! KICK	128 I KNOW 4 BRISTLE
43 FELICETTA'S CRY	86 KICK SPECTROS	

MULTI BANK

1 WE REMEMBR FRANK	44 NAJIMA'S EMBRACE	87 SORRY SHUGA
2 LEARNED BEHAVIOR	45 O SACRUM -	88 IN D.C. 2 LONG
3 GET ETEVIAN	46 COVIVUM	89 143 SPACE
4 FOREIGN BRIBE	47 SHE'S COUNTING	90 SLIDE OUT WIDEST
5 WHEN SHE DOSEN'T	48 REMINDED OF 1	91 CLASSIC ATC ST.U
6 BEETLE ME BOX	49 SUIT FOR CHAOS	92 MAJOR CATERO
7 SLINKI'S 4 PLAY	50 COGENT RANCOR	93 ELLIS COTTON *
8 FOREVER CHOKLIT	51 ET IN SANTEFE...	94 ELLIS COTTON E.*
9 ORKESTRANO	52 BREATHE MARCO	95 ELLIS BEAT BASS*
10 ORKESTRANO CS-80	53 LUCKY YOU	96 UP 3OCT ARPEGI *
11 LUKE'S GOSPEL	54 FAVORITE MURCHIE	97 IMPERIAL RELIC
12 SEARING COMBO	55 FAVORITE MURISE	98 PUSH THE FX
13 DIFRENTLYORGANED	56 MORE B4	99 REMEMBERED LOSS
14 A STEVIE MOMENT	57 109 BPM DELAY	100 SPECTRAL KNELL
15 A STEVIE MOMENTO	58 109 BPM DISTURB	101 MULTI1-7BASS PAD
16 GX1 TRIBUTE	59 PEOPLE WHO FLY	102 1-1-6BASSLEADPAD
17 4 NOTE DRAMA LYR	60 PEOPLE WHO DON'T	103 1-2-5BASSLEADPAD
18 4 NOTE MASS	61 ROPETRICKREPRISE	104 1-2P5BASSLEADPAD
19 RAVI'S SEA	62 SHADRA CIRCA '73	105 2-2-4BASSLEADPAD
20 RAVI RECONSIDERD	63 STANKEOPHONIK'02	106 2-3-3BASSLEADPAD
21 DUELING MASTERS	64 READY 4 PFUNKIN	107 4-4PAD MEETS PAD
22 JAMSHIED PRAYER	65 IT'S ALLPRETEND?	108 8 MONO JOINTZ
23 JAMSHIEDZ POWER	66 GNAW THE BONE	109 USER (PREPARED)
24 FAZED & CONFUSED	67 SUPERNUMBER X6	110 USER (1-7 SPLIT)
25 AMAZED &CONFUSED	68 IMMORTAL 78	111 USER (4+4 LAYER)
26 PREY'D &CONFUSED	69 IT NEVAH HERTZ	112 USER(8MONOMULTI)
27 MUTED Z	70 BOOM THE THANG	113 USER (PREPARED)
28 MUTED Z2	71 SPEAKER HUGGER	114 USER (1-7 SPLIT)
29 WHITEROCKCHORUS	72 SWEET RELEASE	115 USER (4+4 LAYER)
30 LANDSBERG SKOOL	73 TAKI VERO	116 USER(8MONOMULTI)
31 NORMAN'S LESSON	74 CARMENBOOMANG	117 USER (PREPARED)
32 F MAJOR PLEASE	75 SAME 818	118 USER (1-7 SPLIT)
33 NO SUCH LIMIT	76 GAVE ME 2 TIMES	119 USER (4+4 LAYER)
34 CARLO'S WISH	77 PAVED THE WAY 4U	120 USER(8MONOMULTI)
35 WISH GRANTED	78 PULSTINO KNIGHT	121 USER (PREPARED)
36 HOPE TO THE END	79 PULSESAL	122 USER (1-7 SPLIT)
37 STILL CRYING...	80 FEEL HER PULSE	123 USER (4+4 LAYER)
38 CATERO \$\$	81 SQUARE ONE	124 USER(8MONOMULTI)
39 ANASAZI INN	82 ::RAM Utility::	125 USER (PREPARED)
40 PHENOMIC LOCK	83 ::RAM Utility::	126 USER (1-7 SPLIT)
41 JOYFUL RECKONING	84 LONE GASTRONOME	127 USER (4+4 LAYER)
42 LIVONIA ECHO	85 KENYAZ' CASE	128 USER(8MONOMULTI)
43 MIDNITE PRAYER *	86 PATIENCE LOCK	

12 BACK PANEL

Power (& AUDIO/MIDI) to the Panels

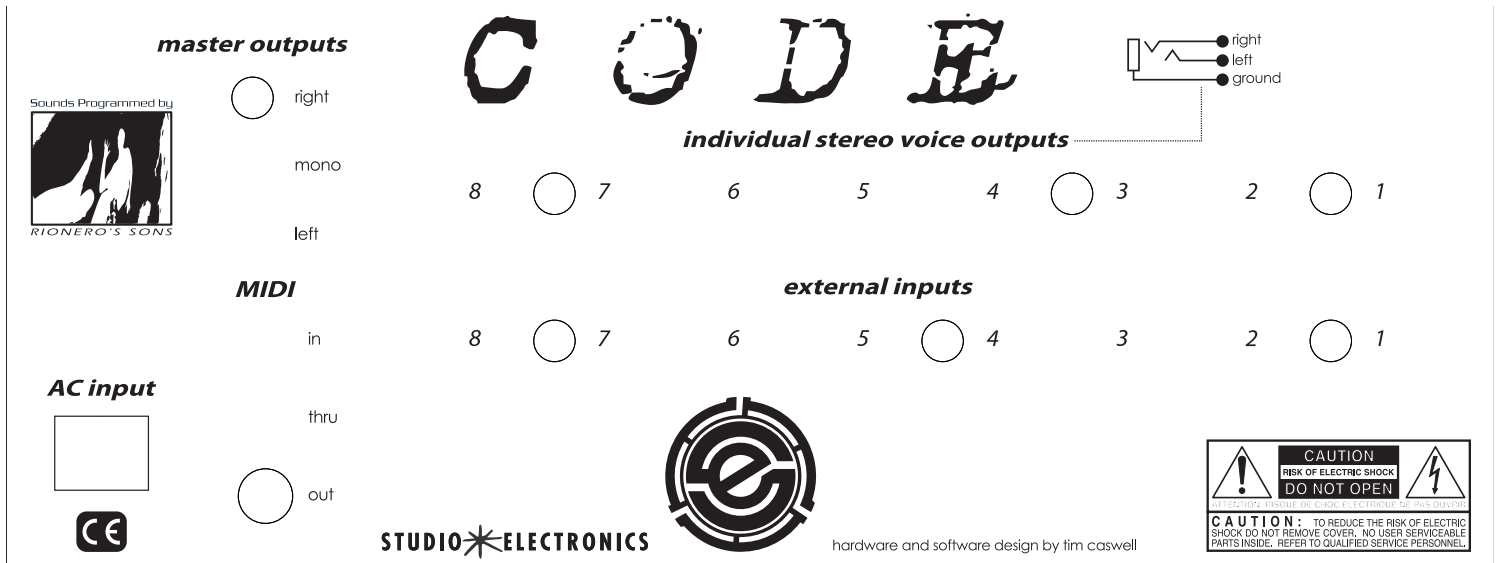

AC INPUT: Plug in female end of supplied IEC cable to unit and male end of cable to power socket. The CODE/Omega8's auto-switching regulated supply will operate properly on either 115 volt or 230 volt AC line voltage.

MASTER OUTPUTS

RIGHT: Right stereo output. Connect a 1/4" to 1/4" audio cable to this jack and then to the line input of a mixer, audio interface, keyboard amplifier, etc.

MONO: Mono output "

LEFT: Left stereo output "

MIDI

IN: Receives MIDI Notes, MIDI Volume, Velocity, Pitch Bend, Aftertouch, Mod Wheel and Sustain Pedal, Glide on/off, Glide

OUT: Sends standard MIDI messages and System Exclusive data to external MIDI hardware

THRU: Forwards the signal arriving at the MIDI IN jack to additional MIDI equipment

INDIVIDUAL STEREO VOICE OUTPUTS

1-8 Tip, Ring, Sleeve connections

EXTERNAL INPUTS

1-8 Mono connections processes External Audio information. MIDI notes must be sent to the CODE/Omega8 to open/trigger gate/VCA. Experiment with long values and rhythmic pulses for maximum effect.

13 GLOSSARY OF ABBREVIATIONS

CON: Controller

CV: Control Voltage

DYN: Dynamics

ENV: Envelope

EXT: External

IN: Input

KEY: Keyboard

LFO: Low Frequency Oscillator

LP: Low Pass

MOD: Modulation

OSC: Oscillator

OUT: Output

P. BEND: Pitch Bend

REL: Release

SYNC: Synchronisation

VCA: Voltage Controlled Amplifier

VCF: Voltage Controlled Filter

VCO: Voltage Controlled Oscillator



14 MIDI DOCUMENTATION / ASSIGNMENTS

MIDI Implementation Chart

	Function	Transmitted	Recognized	Remarks
Basic Channel	Default Changed	x x	1-16 1-16	Memorized
Note Numbers	: True Voice	x x	0 0 -127	
Velocity	Note On Note Off	x x	0 0	Envelopes 1-3
Aftertouch	Key Channel	x x	x 0	No defaults. Assigned per patch.
Pitch Bend		x	0	
Knobs		0	0	
Switches		0	0	
Control Change (Reserved)	1 5 7 64 65	x x x x x	0 0 0 0 0	Modulation Wheel Portamento Time Channel Volume Sustain Pedal Portamento On/Off See p. 38 for full list.
System Real Time	: Clock : Start : Continue : Stop	x x x x	0 x x x	LFO MIDI Sync

0=Yes
X-No

STUDIO ELECTRONICS OMEGA 8 DEDICATED MIDI CONTROLLER NUMBERS

#	PARAMETER	SENT	RECEIVED
54	OSC1 FREQ	Y	Y
55	OSC1 TRI WAVE ON/OFF	Y	Y
56	OSC1 SAW WAVE ON/OFF	Y	Y
57	OSC1 PULSE WAVE ON/OFF	Y	Y
58	OSC1 SUB OSC ON/OFF	Y	Y
59	OSC1 PULSE WIDTH	Y	Y
60	OSC2 FREQ	Y	Y
61	OSC2 TRI WAVE ON/OFF	Y	Y
62	OSC2 SAW WAVE ON/OFF	Y	Y
63	OSC2 PULSE WAVE ON/OFF	Y	Y
70	OSC2 PULSE WIDTH ON/OFF	Y	Y
71	LFO1 RATE	Y	Y
72	LFO1 DEPTH	Y	Y
73	LFO2 RATE	Y	Y
74	LFO2 DEPTH	Y	Y
84	OSC1 MIX	Y	Y
85	OSC2 MIX	Y	Y
86	NOISE MIX	Y	Y
87	XMOD MIX	Y	Y
88	VCF FREQ	Y	Y
89	VCF RESONANCE	Y	Y
90	VCF KEYBOARD TRACK	Y	Y
98	EXTERNAL IN MIX	N	Y
99	EXTERNAL TRIG LEVEL	N	Y
102	ENV1 AMOUNT	Y	Y
103	ENV1 ATTACK	Y	Y
104	ENV1 DECAY	Y	Y
105	ENV1 SUSTAIN LEVEL	Y	Y
106	ENV1 RELEASE	Y	Y
107	ENV2 ATTACK	Y	Y
108	ENV2 DECAY	Y	Y
109	ENV2 SUSTAIN LEVEL	Y	Y
110	ENV2 RELEASE	Y	Y
111	ENV3 AMOUNT	Y	Y
112	ENV3 ATTACK	Y	Y
113	ENV3 DECAY	Y	Y
114	ENV3 SUSTAIN LEVEL	Y	Y
115	ENV3 RELEASE	Y	Y
116	ARPEGIATOR TEMPO	Y	Y
117	ARPEGIATOR START/STOP	Y	Y
118	OSC2 SYNC ON/OFF	Y	Y

*NOTE: 98 & 99 ARE USED FOR FREQ & RESO OF THE HIPASS SECTION OF THE CS80-TYPE DUAL VCF: THIS REQUIRES A MODIFICATION TO THE VOICE BOARD.

15 TROUBLESHOOTING

No Sound

Check power and audio connections. [see [BACK PANEL - AC INPUT](#) p. 31]

Check MIDI connections. [see [BACK PANEL - MIDI](#) p. 31] Check MIDI channel. [see [MULTI/MIDI - UTILITY PAGE 2](#) p. 16]

Turn up Volume. [see [MULTI/MIDI - VOLUME](#) p. 14]

Turn up OSC/MIX levels. [see [OSCILLATORS - OSCILLATOR LEVEL](#) p. 20]

Soft Sound

Check all audio connections. [see [BACK PANEL - MASTER OUTPUTS](#) p. 31]

Turn up Volume. [see [MULTI/MIDI - VOLUME](#) p. 14]

Turn up OSC/MIX levels. [see [OSCILLATORS - OSCILLATOR LEVEL](#) p. 20]

Unwanted Distorted Sound

Turn down OSC/MIX levels. [see [OSCILLATORS - OSCILLATOR LEVEL](#) p. 20]

Unwanted Noise

Turn down Noise Level. [see [OSCILLATORS - NOISE](#) p. 20]

Out of Tune

Set Master Tune to 440 Hz. [see [PROGRAMMER - TUNE](#) p.19] Or one could experiment with 432 Hz, as was done here with our Boomstar SEM: <https://tinyurl.com/tha942f>

Plain Lost

Press EXIT, then rotate Q dial [see [PROGRAMMER - EXIT](#) p. 19]

16 SPECIFICATIONS & ARCHITECTURE

SYNTHESIZER TYPE

Stereo Polyphonic Multimbral Rackmount Analog

SOUND ENGINE

Discrete Analog, combinable Triangle, Sine (CODE), Sawtooth, Variable Pulse Width Waveforms

SOUND SOURCES

Two voltage controlled discrete analog oscillators; waveforms: sine (OSC 1), triangle, sawtooth and variable width square; simultaneous waveforms output; syncing of Osc 2 to Osc 1

Oscillator 1 Subharmonic wave

White Noise Generator

VOICES

4 or 8

MULTITIMBRALITY

4 voices = 4 part, 8 voices = 8 part; parameters: patch, number of voices, mono or poly: splits, layers, prepared

FILTERS

Two voltage controlled discrete analog filters: 12 db (classic Oberheim® style) hard-wired into voice board; 24db (classic Moog® style) in docking slot 1; 2 additional filter docking slots; 2 and 3 can host our classic Roland® 303, Arp® 2600, and Yamaha® CS-80 styled, all hardware filters; 12db filter modes: low pass, bandpass, high pass and band reject. Filters do not operate in series or parallel. Each voice can access all four filters.

AMPLIFIER

Loudness Contour with a Dynamic Range of 81 dMini FAQ Anticipator

Two takes on the USB/Analog Audio Out:

Marc St. Regis

The SE-02 produces analog and USB audio simultaneously, and as a result, with the Ext Box connected, the SE-02's analog signal, passing through the Ext Box's drive/hi-pass circuits, will continue through to the Ext Box's audio output. To clarify, the 12dB (6dB slope) drive/hi-pass audio path, sourced from the SE-02 and/or the External Input, is analog and passes only to the Ext Box audio output (1/8" and 1/4"). The frequency CV and gate are very high resolution digital controls, and affect the USB and analog audio. The Ext Box allows very smooth filter frequency manipulation (VCF Cutoff), expanded gate functionality, and external input processing to pass back to USB audio: plenty there for the for USB-only audio enthusiasts to discover, without the benefit of the Drive and Hi Pass filter in the mix, which of course is nevertheless always outputted.

Tim Caswell

The Xbox will affect the VCF Cutoff, the External Input, and the Gate in the USB output. The Hi Pass and Overdrive will not be heard thru the USB connection, only the 1/8 and 1/4" outputs of the EXT Box.

B

ENVELOPES

Three multiple stage envelope generators: attack, decay, sustain and release with inverting and multiple triggering; additional delay, decay 2, and breakpoint parameters for envelopes 1 and 2; assignable 3rd envelope with up to three destinations and depths. Envelope 1 fixed to filter frequency. Envelope 2 fixed to amplifier level. Envelope 3 knobs also can control the external inputs.

LFOs

Three low frequency oscillators, waveforms: triangle, sawtooth, reverse sawtooth, square, noise, random; three destinations and depths each for LFOs 1&2, with range, delay, key trigger, phase, mode (mono or poly), quantize, midi sync; LFO3 fixed to voice panning

MODULATION DESTINATIONS

LFOs 1, 2 and envelope 3: VCO 1 and 2 frequency, pulse width, and mix level, VCF frequency and resonance, noise level, Xmod amount, LFOs 1 and 2 rate and depth, VCA level, external mix level

GLIDE

Linear or exponential, parameters: time, mode (auto, legato, glissando), autoglide interval, dynamics, destination

UNISON MODE

One, two, four, six, or eight voices depending on voice configuration.

MULTI MODE

Prepared: one MIDI channel, up to eight different patches (synths); split: set point; layer: 4-4; multi: channelize up to 8 patches (synths)

ADDITIONAL FEATURES

Oscillator 2 audio frequency modulation, destinations: OSC 1 frequency, OSC 1 pulse width, filter frequency; white noise generator; auto triggering external input processor on each voice, parameters: input level, trigger level, mix level, window

FILTER CONTROL SECTION FEATURES

Sweep through all the filter types in real time

Increase or decrease the filter frequency

Increase the envelope amount

Increase the resonance amount

Filter ENV Delay

Invert the filter envelope

"CUT" Filter Decay

Controls CODE synth engine or external input

FILTER TYPE NUMBERS FOR THE F TABLES

SEM LP = 1

SEM BP = 2

SEM HP = 3

SEM BR= 4
MINI = 5
AUX 1 = 6
AUX 2 = 7

FOR UNITS WITH SEM AND MINI

1234513524153125

FOR UNITS WITH SEM, MINI AND AUX1 (FILTER SLOT 3)

1234564251361425

FOR UNITS WITH SEM, MINI, AUX1 AND AUX2 (FILTER SLOT 4)

1357462514273617

THE MONO VERSION

configured as a single input mono filterbank

THE 2 VOICE VERSION

configured as a dual input stereo filterbank

THE 4 VOICE VERSION

configured as a 4 input or quad filterbank

THE 8 VOICE VERSION

configured as an 8 channel filterbank.

Each voice card has two empty expansion slots for extra filters: the S.E.M. filter is built in and the Mini filter sits in expansion slot 1; three expansion slots total, as is the case for all Omega Series Synths.

OPTIONAL FILTER CARDS ALSO AVAILABLE

303
2600
CS80
Juno/Jupiter

PATCH BANK 3

INCLUDES THERIOT BANK (\$79 SOLD SEPARATELY)

PATCH BANK 4

Includes Cadix bank (\$69 sold separately)

PATCHES

RAM: 128 x2 patch locations in program mode, 128 in multi mode, ROM: 128 x2 patch locations in program mode

ADDITIONAL FEATURE FOCUS

Oscillator 2 audio frequency modulation, destinations: OSC 1 frequency, OSC 1 pulse width, filter frequency; white noise generator; auto triggering external input processor on each voice, parameters: input level, trigger level, mix level, window

INTERFACE

32 knobs with relative and jump modes, 1 rotary encoder, 35 tactile switches, 24 LEDs

DISPLAY

16 x 2 back lit liquid crystal

AUDIO INPUT

1/4" Rear Panel TS; Voltage: +10 millivolts (min); +10 volt (max); Nominal Input Impedance: 100K Ohms

AUDIO OUTPUT

One main stereo and mono output, one stereo 1/4" TRS output connection per voice

OVERDRIVE

OD (Optional): Eight: One per voice. Distortion amount fixed

MIDI SPECS

In out and thru. Receives program change, bank select, glide on/off, glide time, volume, SYSEX. Controllers: dynamics, modwheel, bender, pressure destination and amount (x2). Controller 1 assignments: dyn, mod, pressure, bend, tracking, continuous cont #2 (x2), controller 1 amount (x2). Controller 2 assignments: same as controller 1 (x2), controller 2 amount (x2). Dynamics, tracking, and bender can manipulate positive and negative modulation values. Fixed continuous controller assignments exist for all key functions.

MIDI CONTROLLERS

Dynamics, modwheel, bender, pressure, tracking, breath controller: LFOs 1, 2 and envelope 3 destinations, including envelopes 1, 2, and 3 attack, decay, sustain, release amounts

DIMENSIONS

19" (48.26 cm) Wide x 15" (38.1 cm) Deep x 7" (17.78 cm) High - 4 rack spaces

WEIGHT

20 lbs. / 9.07 kg

POWER

90 - 250 volts AC auto switching



17 LEGAL

LIABILITY

Neither Analogia Inc./Studio Electronics nor anyone else involved in the creation, production, or delivery of this product shall be liable for any direct, indirect, incidental, special, consequential or punitive damages whatsoever arising out of the use of this product, or inability to use this product; including without limitation: damages for loss of business, profits, goodwill, business interruption, loss of business information, data or any other pecuniary loss, even if Analogia Inc./Studio Electronics were previously advised of the possibility of such damages. Some states do not allow limitations on the length of an implied warranty, or the exclusion or limitation of incidental or consequential damages, so the above limitation and/or exclusions may not apply to you.

FCC

DO NOT MODIFY THE UNIT! This product, when installed as indicated in the instructions contained in this manual, meets FCC requirement. Modifications not expressly approved by Analogia Inc./Studio Electronics may void your authority granted by the FCC, to use this product.

IMPORTANT: When connecting this product to accessories and/or another product, use only high quality shielded cables. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class “B” digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies, and if not installed and used according to the instructions specified in this product’s operation manual, may cause interference harmful to the operation of aforementioned other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference (which can be determined by turning the unit “OFF” and “ON”), please try to eliminate the problem by using one of the following measures:

- Relocate either this product or the device that is being affected by the interference.
- Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter(s).
- In the case of radio or TV interferences, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial cable.
- If these corrective measures do not bring any satisfied results, please consult the local retailer authorized to distribute this type of product. If you cannot locate the appropriate retailer, please contact Analogia inc. These **FCC** statements apply only to those products distributed in the USA.

CANADA

NOTICE: This class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulation.

AVIS: Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

EUROPE

NOTICE: This product complies with the requirements for European Directive 89/336/EEC.

NOTES:

ANALOGIA INC. - Ardent Proprietors of STUDIO ELECTRONICS

310.640.3546

studioelectronics.com • contact@studioelectronics.com • facebook.com/StudioElectronics • youtube.com/user/StudioElectronics • soundcloud.com/studio-electronics • instagram.com/studioelectronics

