


BENCH — Arduino Due to one Tesla module via stock pigtail

No EVTV harness • no loopback jumpers • original 10-pin BMB connector remains plugged into module

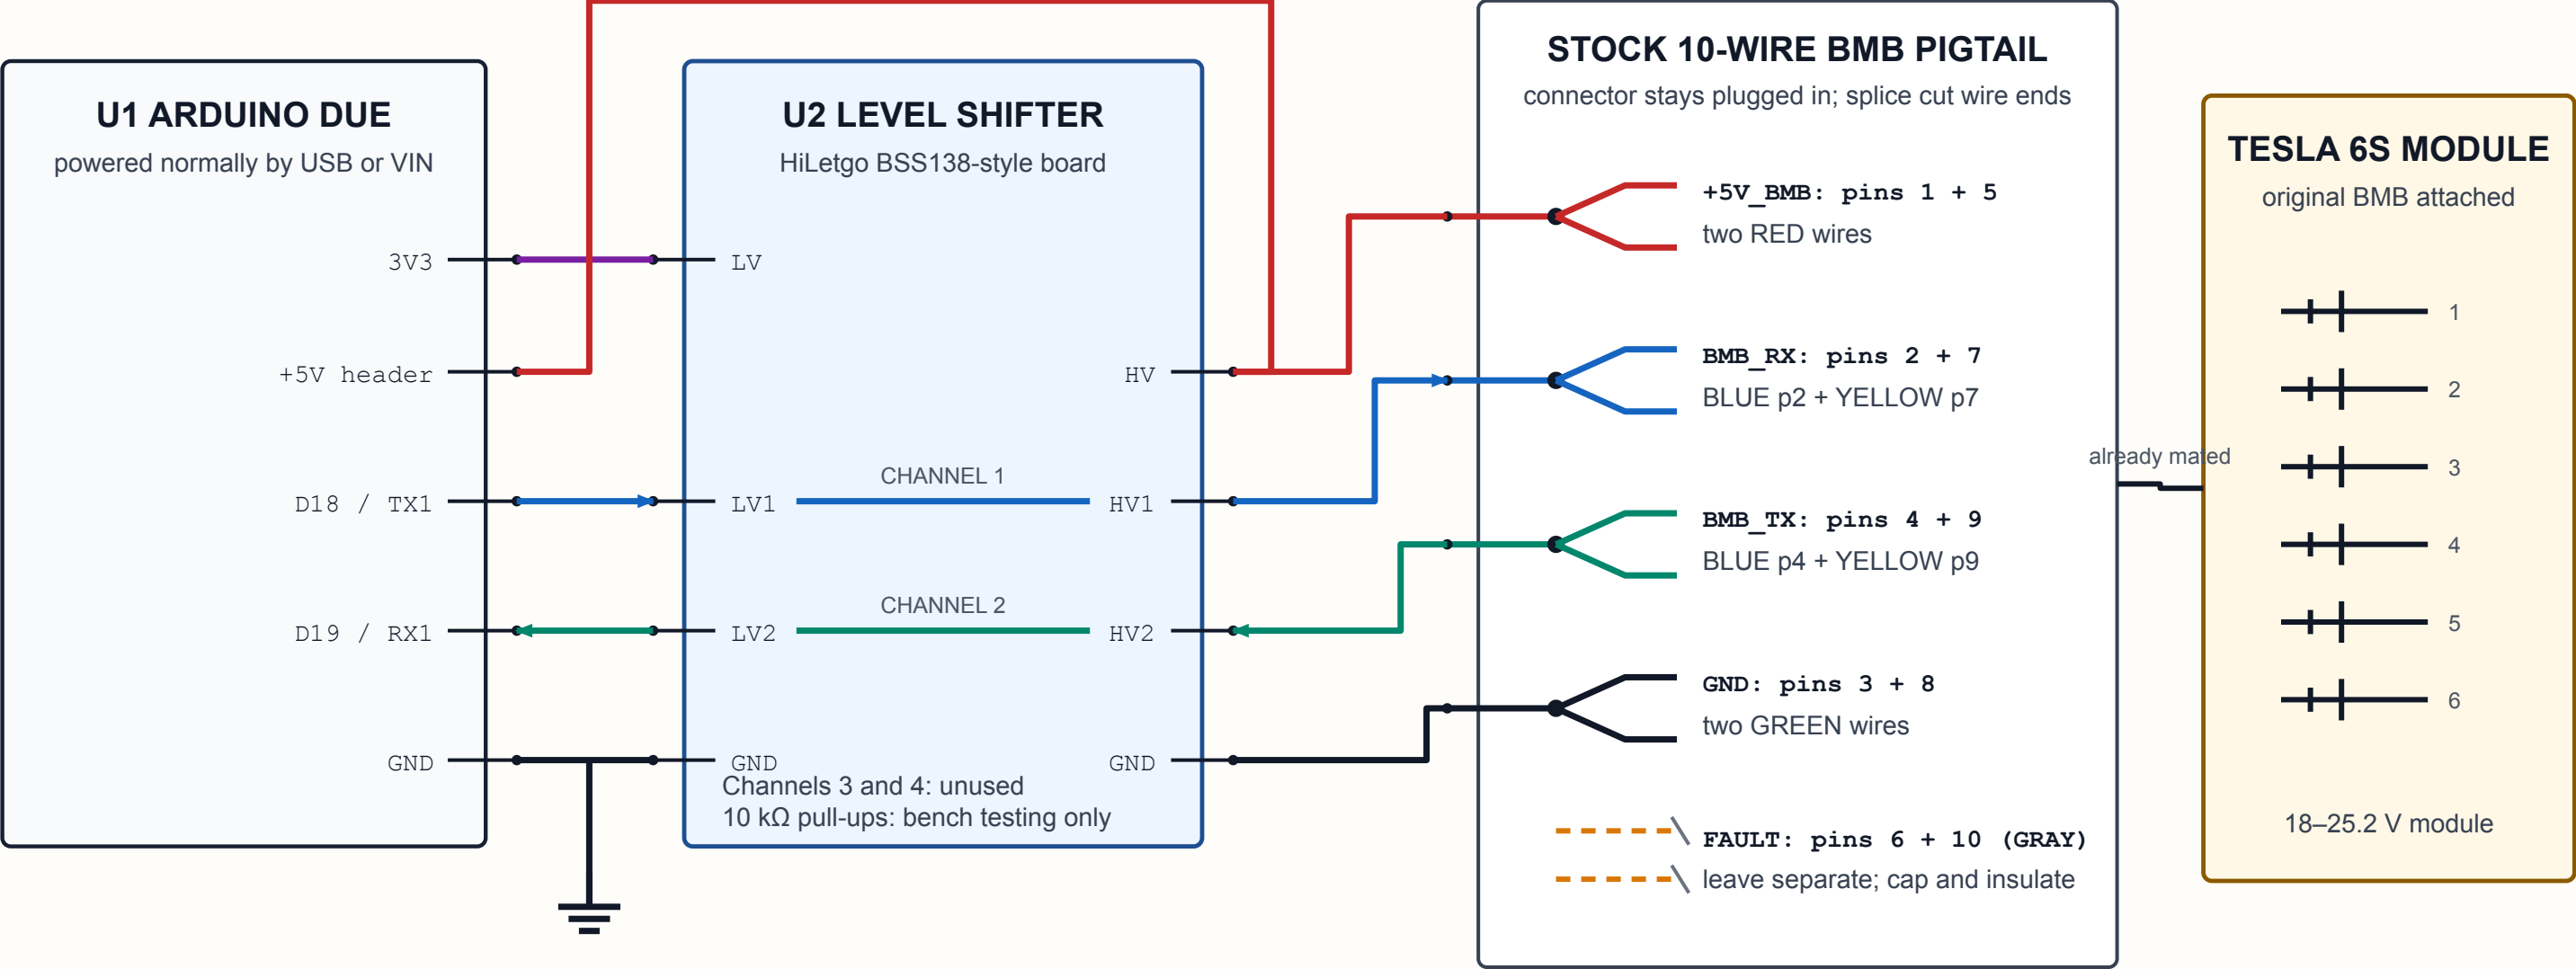

BENCH SPLICE CHECKLIST

1. With all power removed, identify every wire by molded connector cavity number.
2. Tie pins 1+5 to Due +5 V; tie pins 3+8 to Due GND.
3. Tie pins 2+7 to shifter HV1 (commands going into BMB).
4. Tie pins 4+9 to shifter HV2 (responses coming out of BMB).
5. Cap pins 6 and 10 separately. Insulate every splice before applying power.

DO NOT TRUST WIRE COLOR FOR UART DIRECTION

Pins 2 and 4 are both blue; pins 7 and 9 are both yellow. A color-only splice can connect two outputs together or reverse TX/RX. Confirm cavity numbers with continuity mode while the module and all power are disconnected.

The BSS138 shifter is marginal at 612.5 kbaud; this is an unloaded bench test.