


24V PACK — 6× Tesla 6S modules in parallel

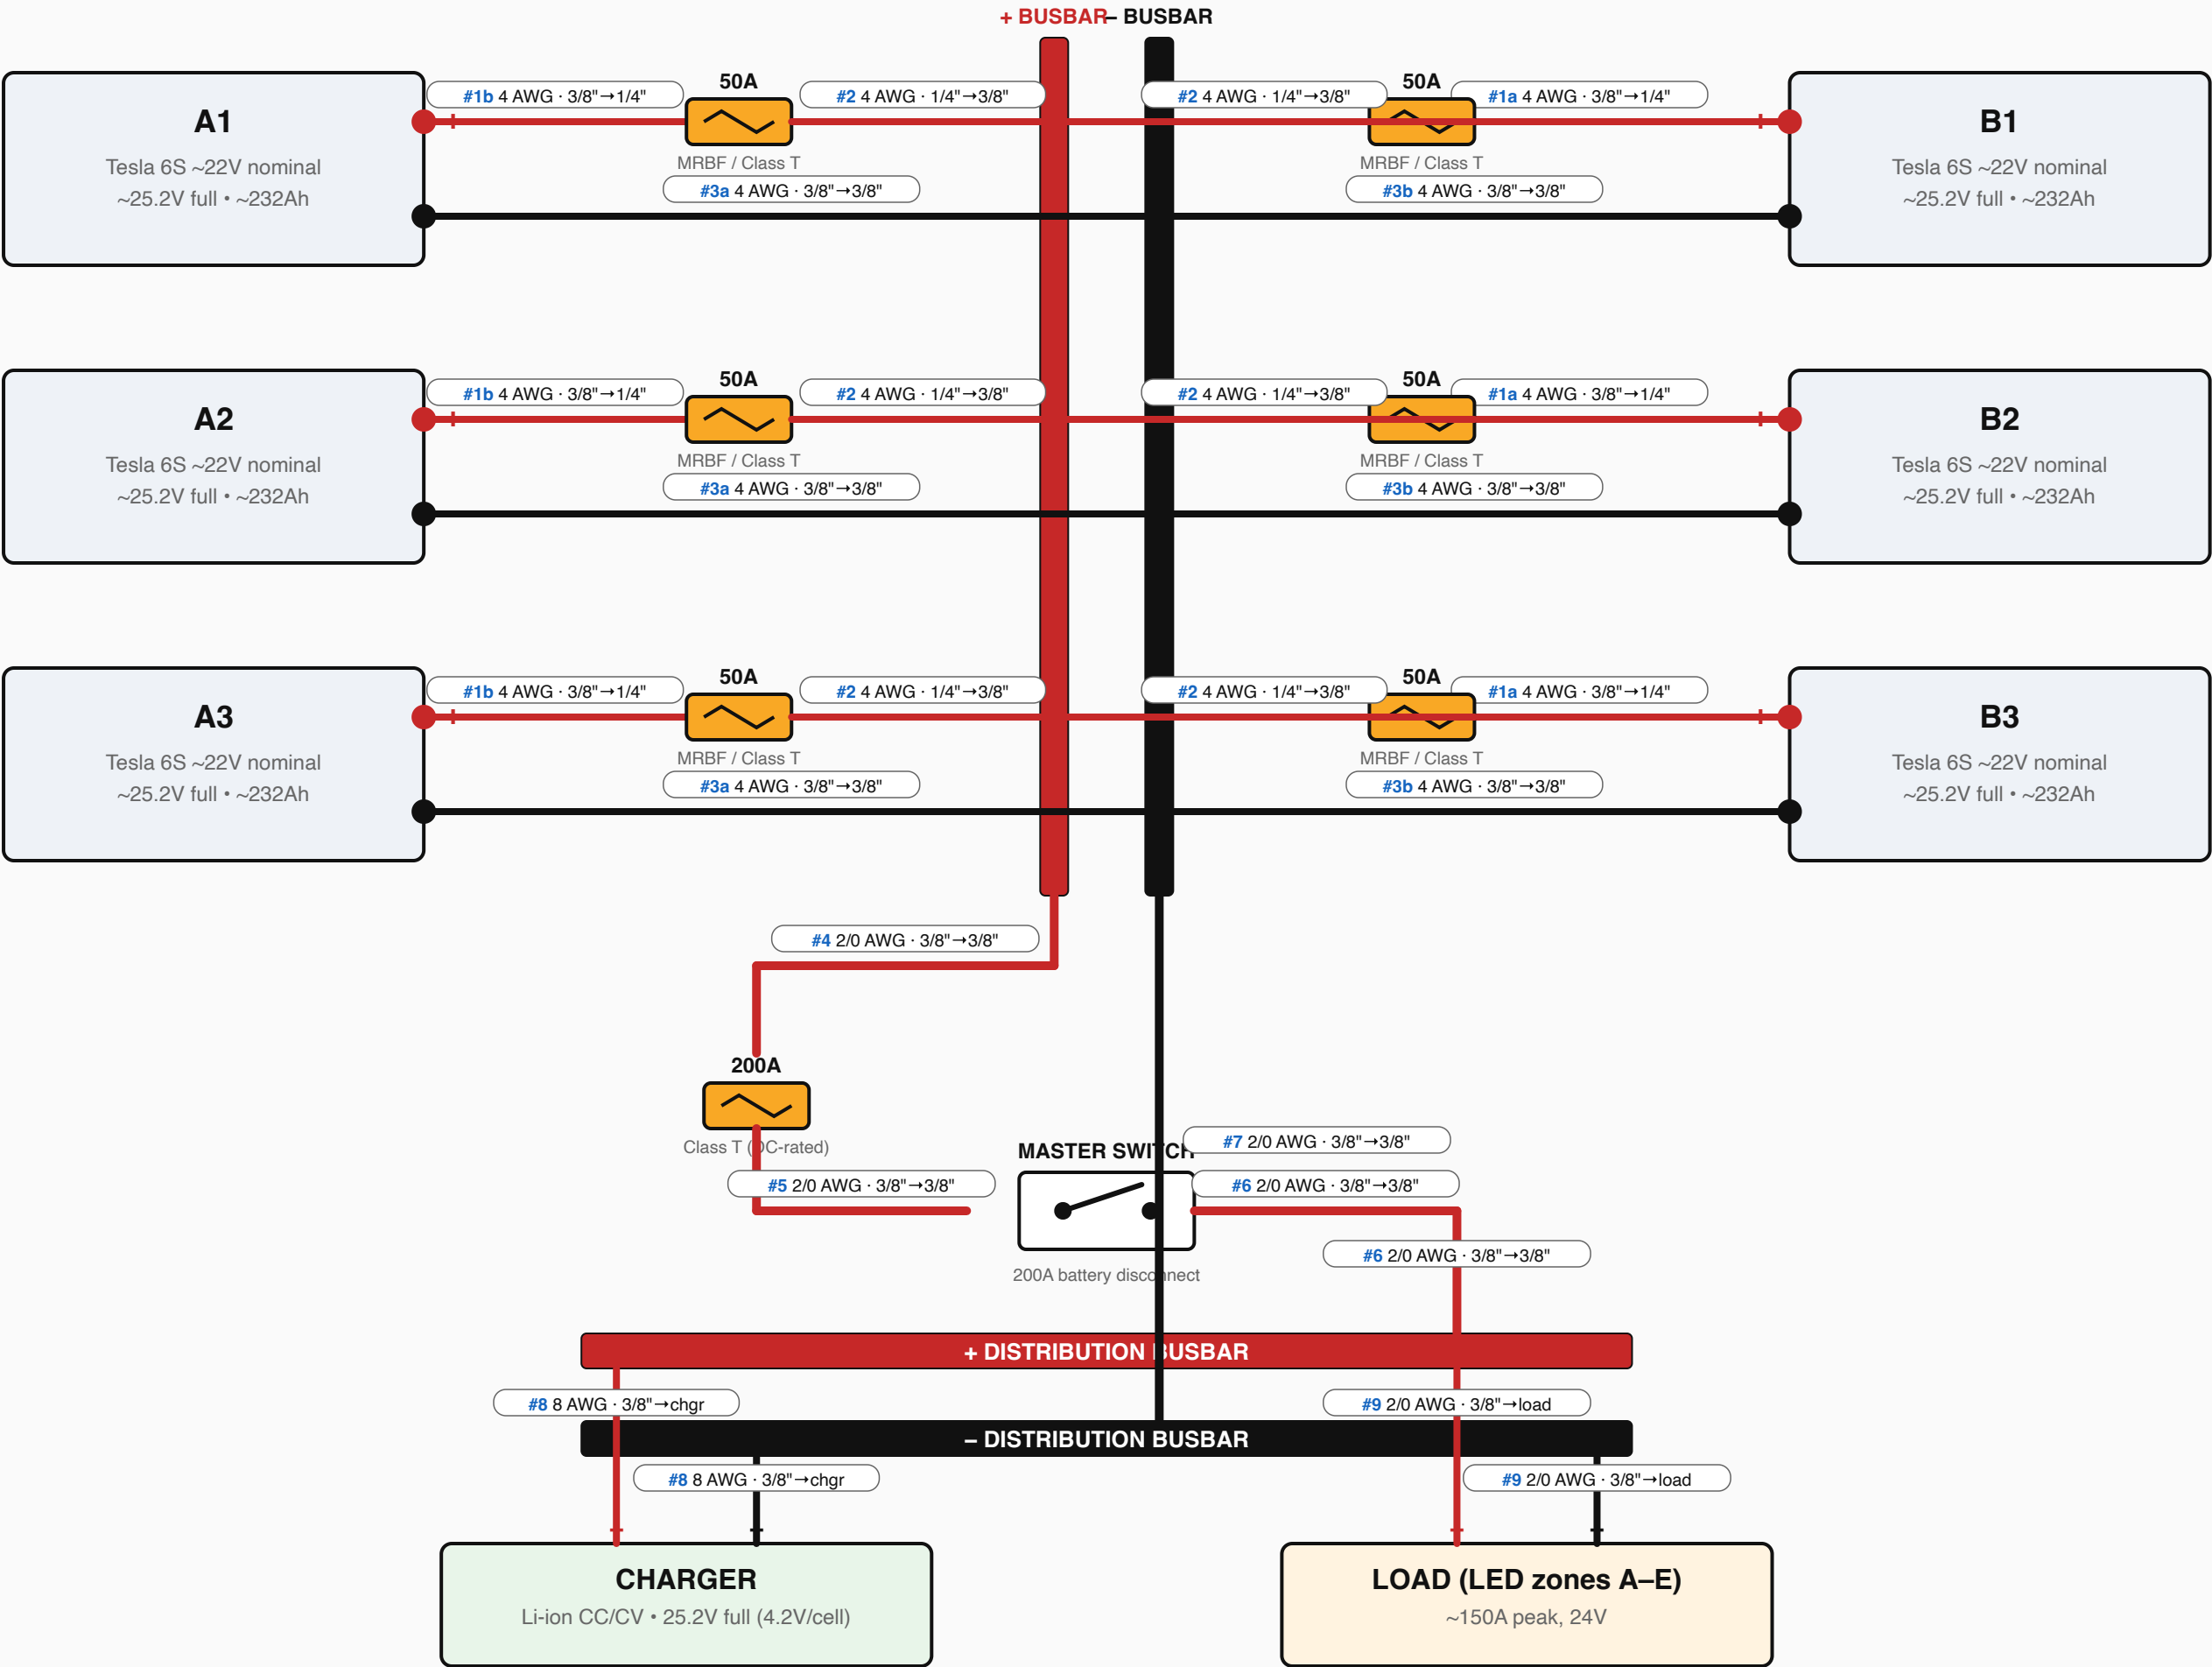

CABLE BOM — build list

#	Segment	Qty	Gauge	Lug A	Lug B	Length
1a	Module + → fuse in (near, b/m/t)	1/1/1	4 AWG	3/8"	1/4"	4" / 7" / 10"
1b	Module + → fuse in (far, b/m/t)	1/1/1	4 AWG	3/8"	1/4"	15.5" / 18.5" / 21.5"
2	Fuse out → + pack busbar (jumper)	6	4 AWG	1/4"	3/8"	2"
3a	Module – → – pack busbar (near, b/m/t)	1/1/1	4 AWG	3/8"	3/8"	6" / 9" / 12"
3b	Module – → – pack busbar (far, b/m/t)	1/1/1	4 AWG	3/8"	3/8"	17.5" / 20.5" / 23.5"
4	+ busbar → master fuse in	1	2/0 AWG	3/8"	3/8"	~8"
5	Master fuse out → switch in	1	2/0 AWG	3/8"	3/8"	~4"
6	Switch out → + distro bus	1	2/0 AWG	3/8"	3/8"	~8"
7	– pack bus → – distro bus	1	2/0 AWG	3/8"	3/8"	~10"
8	+/- distro → charger	2	8 AWG	3/8"	TBD	TBD
9	+/- distro → LED load	2	2/0 AWG	3/8"	TBD	TBD

NEAR = terminal on the busbar-facing corner (short run). FAR = terminal on the opposite corner (adds 11.5" for module-width traverse).
b/m/t = bottom / middle / top stack level (+3" per level up). Add ~1" per cable for bend & strain relief.

FUSING

- 50A per-module fuse: protects against inter-module fault current if any single module shorts internally
- 200A master fuse: protects the main pack wiring and interrupts a downstream short at the load
- Use DC-rated fuses (MRBF, Class T). Automotive blade fuses arc at DC and are not safe here.