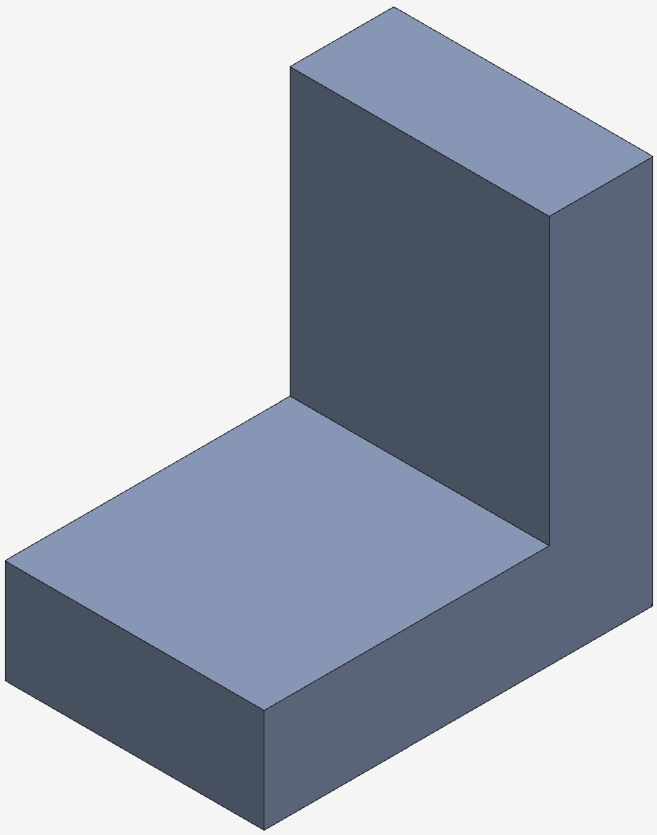


USER MANUAL

Saulitwerx

Open-source parametric 3D CAD

Describes	`main` at commit `652ef81`
Built	2026-11-08
Status	Pre-alpha: no desktop app yet

How to use this manual

This manual teaches you to use Saulitwerx, an open-source program for designing mechanical parts on a computer. You don't need to know anything about computer-aided design (CAD) to read it. Where a word has a special meaning, the manual explains it the first time it appears, and again in the glossary at the back.

Saulitwerx is young

Saulitwerx is being built in the open, one small step each night. Today it is **pre-alpha**: the parts that do the real geometry work exist and are tested, but there is no desktop app with windows and buttons yet. That changes what this edition of the manual can offer:

- The **Concepts** part is for everyone. It explains how parametric CAD works, with pictures, so you will be ready when the app arrives.
- The **Tasks** part shows what you can already do, by running real commands and small programs. These sections carry a purple **For developers** band, because they need a terminal and some comfort with installing software.
- Nothing in this manual describes a feature as working unless it works on the version named on the cover. Plans are kept apart, in **Coming next** at the back.

How the book is organized

Part	Read it when you want to
I. Getting started	Know what Saulitwerx is, install it, and make your first picture of a part.
II. Concepts	Understand sketches, constraints, dimensions, parameters, features and solids.
III. Tasks	Do one specific thing. Each section is one task, with numbered steps.
IV. Reference	Look up an exact option, default or allowed value.
V. Help	Fix a problem, or understand an error message.
Back matter	Look up a word, see what changed, or find a topic in the index.

Conventions

You see	It means
`swx-qa render`	Text you type exactly, or text the program prints.
Enter	A key on your keyboard.
sketch	A term defined at this spot. It is also in the glossary and the index.
1	A numbered step. Steps start with what to do, then say what you should see.
RESULT	What you have when a task is done.

> **TIP**
>
> Callouts like this one hold shortcuts and good habits.

> **CAUTION**
>
> Cautions warn about a mistake that is easy to make, and how to avoid it.

> **FOR DEVELOPERS**
>
> Sections with this band run programs from a terminal. You can skip them and still follow every concept.

Which version this describes

The cover names the commit of the `main` branch this edition describes, and the date it was built. The latest edition is always at github.com/glitchwizard/saulitwerx, in `docs/manual/`. **What's new**, near the back, lists what each edition added.

Contents

1 Welcome to Saulitwerx 2
- 1.1 What Saulitwerx is 2
- 1.2 What it can do today 2
- 1.3 Who should use it now 3

2 Installing Saulitwerx 4
- 2.1 What gets installed 4
- 2.2 Install the tools 4
- 2.3 Get the source and build it 5
- 2.4 Other systems 6

3 Your first part 7
- 3.1 Draw a sample part 7
- 3.2 Build a plate with a hole 8
- 3.3 What you just did 9

4 How parametric CAD works 11
- 4.1 Solids 11
- 4.2 Units 12
- 4.3 Sketches 12
- 4.4 Constraints 12
- 4.5 Dimensions 13
- 4.6 Degrees of freedom 14
- 4.7 Profiles and regions 14
- 4.8 Parameters 15
- 4.9 Features 15
- 4.10 History 16
- 4.11 Putting it together 16

5 Sketching 18
- 5.1 Solve a sketch 18
- 5.2 How the sample sketch is built 19
- 5.3 Check how fully a sketch is defined 20
- 5.4 Change a dimension 21
- 5.5 Keep a hole centered 21
- 5.6 Draw a slot 23
- 5.7 Find the region to extrude 25
- 5.8 Let Saulitwerx add constraints as you draw 26
- 5.9 Common mistakes 28

6 Solids and STEP files 29
- 6.1 Make a solid and save it as STEP 29
- 6.2 Combine solids 30
- 6.3 Faces, edges and vertices of a solid 30
- 6.4 Find the faces a Boolean made 32
- 6.5 Open a STEP file from another program 33

7 Extruding a profile 34

7.1 Extrude a profile ... 35
7.2 Choose the direction and the workplane ... 36
7.3 Join, cut or intersect with an extrude ... 37
7.4 Cut through the whole part ... 39
7.5 Find the faces an extrude made ... 41
7.6 Extrude up to a face ... 43
7.7 Common mistakes ... 45

8 Revolving a profile ... 47
8.1 Revolve a profile ... 48
8.2 Cut or join with a revolve ... 49
8.3 Common mistakes ... 50

9 Rounding and bevelling edges ... 52
9.1 Fillet and chamfer edges ... 52
9.2 Chamfer with two sizes ... 54
9.3 Round with a changing radius ... 56
9.4 Common mistakes ... 58

10 Hollowing a part ... 60
10.1 Shell a solid ... 60
10.2 Common mistakes ... 62

11 Making holes ... 63
11.1 Drill holes in a plate ... 64
11.2 Common mistakes ... 65

12 Tilting faces with draft ... 66
12.1 Draft the sides of a block ... 66
12.2 Common mistakes ... 68

13 Work planes, axes and points ... 69
13.1 Build work features ... 70
13.2 Place a feature on a work plane ... 71
13.3 Common mistakes ... 72

14 Pictures of parts and sketches ... 73
14.1 Draw a STEP file ... 73
14.2 Choose the size ... 73
14.3 Choose which edges are outlined ... 73
14.4 Draw a built-in sample ... 74
14.5 Draw a sketch ... 74

15 Parameters and history ... 76
15.1 See what a change rebuilds ... 76
15.2 How the sample is built ... 77
15.3 Roll back and insert a feature ... 77
15.4 Name and rename parameters ... 79
15.5 Drive a sketch with parameters ... 80
15.6 Work out an expression ... 81
15.7 Make one size follow another ... 83
15.8 Common mistakes ... 85

16 Reference ... 87
16.1 `swx-qa render` ... 87
16.2 `swx-qa sketch` ... 87
16.3 Build options ... 88
16.4 Geometry kernel operations ... 89

16.5 Profiles, extrude and revolve ... 91
16.6 Work features ... 93
16.7 Sketch entities and constraints ... 94
16.8 Solver settings and report ... 95
16.9 Profiles ... 95
16.10 Degree-of-freedom report ... 96
16.11 Inference ... 97
16.12 History ... 97
16.13 Parameters ... 98
16.14 Expressions ... 99
16.15 File formats and units ... 100
16.16 Keyboard and mouse ... 100

17 Help ... 102
17.1 Troubleshooting ... 102
17.2 Error messages ... 103
17.3 Questions ... 108
17.4 Known limitations ... 108

Glossary ... 111

What's new ... 114
2026-11-08: holes, draft, work features, and a fillet that changes size ... 114
2026-11-07: shells, and rolling back the history ... 114
2026-11-06: uneven chamfers, and faces through a Boolean ... 114
2026-11-05: up to a face, fillets and chamfers ... 114
2026-11-04: which face is which ... 115
2026-11-03: safer revolves ... 115
2026-11-02: faces, edges and vertices ... 115
2026-11-01: revolve, and cuts through all ... 115
2026-10-31: extrude modes ... 115
2026-10-30: extrude ... 115
2026-10-29: formulas in parameters, and inference ... 116
2026-10-28: dimensions as parameters, expressions, and joined arcs ... 116
2026-10-26: parameter table, and named conflicts ... 116
2026-10-25: more constraints, and profiles ... 116
2026-10-24: degrees of freedom and sketch pictures ... 116
2026-10-22: first edition ... 117

Coming next ... 118

Credits and licenses ... 121

Index ... 122

PART I

Getting started

What Saulitwerx is, what it can do today, how to install it, and a first session that ends with a picture of a real part.

CHAPTER 1

Welcome to Saulitwerx

1.1 What Saulitwerx is

Saulitwerx is a program for designing solid mechanical parts on a computer: brackets, plates, shafts, housings, and anything else you might machine, cast or 3D-print. Programs like this are called *CAD* (computer-aided design). Saulitwerx is free and open source, so anyone can use it, study it, change it, and build it into other software.

Saulitwerx is a *parametric* modeler. You don't sculpt a shape by pushing points around. Instead you describe how to build it, step by step, with measurements: "draw a 40 by 25 mm rectangle, push it up 5 mm, cut a 10 mm hole through the middle." Saulitwerx remembers those steps and their numbers. Change the hole to 12 mm later, and the part rebuilds itself to match. Chapter 4 explains how that works.

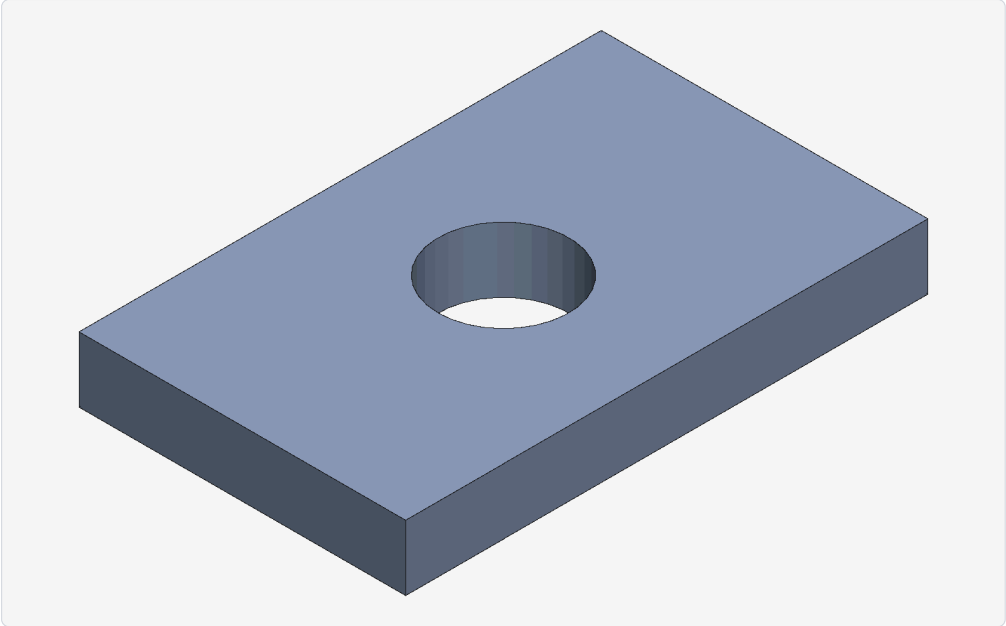


Figure 1.1 A plate with a hole, made by Saulitwerx's geometry engine and drawn by its renderer. You will make this part yourself in Chapter 3.

1.2 What it can do today

Saulitwerx is built in small, tested steps, in the order of a public plan (the *roadmap*). Here is where it stands for this edition.

Area	What exists	Use it
Solids	Make boxes, cylinders and spheres; combine them (add, subtract, keep the overlap); measure volume, surface area and size.	NOW

Area	What exists	Use it
Exchange	Save a solid as a STEP file, and read STEP files back.	NOW
Pictures	Draw a solid or a STEP file to a PNG picture with `swx-qa render`, and a sketch with `swx-qa sketch`.	NOW
Sketching	Lines, circles, arcs and points, with thirteen kinds of constraint (from horizontal and coincident to tangent and symmetric), a solver that moves the shape to satisfy them, a check of how fully a sketch is defined, and the regions a sketch encloses, ready to become solids.	NOW
History	Keep features in order with named parameters, work out which features a change affects, and roll back to insert features earlier in the history.	NOW
Extrude	Push a flat outline of lines, arcs and circles, with holes, into a solid, on any plane, one way or both, or cut right through a part; end it at a flat face of the part instead of a distance.	NOW
Revolve	Turn a flat outline around an axis into a round solid, by a full turn or part of one.	NOW
Edges	Round edges of a solid with a fillet, constant or changing along the edge, or bevel them with a chamfer.	NOW
Shell	Hollow a solid into walls of one thickness, open at the faces you choose.	NOW
Holes	Drill simple or counterbored holes, blind or through all, in any direction.	NOW
Draft	Tilt the sides of a part so it comes out of a mold.	NOW
Work features	Build work planes, axes and points to place features on.	NOW
Desktop app	Windows, menus, a 3D view and mouse control.	LATER
Part files	Saving your design with its full history in a Saulitwerx part file.	LATER
Features	Extrude and revolve driven by sketches and recorded in the history; countersunk and threaded holes, and more.	LATER
Assemblies, drawings	Putting parts together, and making 2D shop drawings.	LATER

Everything marked NOW is a building block that programmers can call today. The **Tasks** part shows each one with a real command or a short program you can run. Everything marked LATER is described in **Coming next** at the back, and nowhere else.

1.3 Who should use it now

- **If you are new to CAD,** read Parts I and II. You will learn the ideas every parametric modeler is built on, and you will be ready the day the desktop app arrives.
- **If you are comfortable in a terminal,** install Saulitwerx (Chapter 2) and follow Chapter 3. It takes about 15 minutes and ends with a picture of a part you built.
- **If you write software,** the **For developers** sections show how to call each building block from Rust.

> **NOTE**
>
> Saulitwerx reads and writes only open, documented file formats. It will never open another program's own native files. To bring in a design from elsewhere, export it as STEP first.

CHAPTER 2

Installing Saulitwerx

There is no installer yet. Until the first release, you build Saulitwerx from its source code. That sounds harder than it is: three tools to install, then one command builds everything. Plan on about 10 minutes, most of it waiting for downloads.

YOU WILL	Install the tools Saulitwerx needs, download its source code, build it, and check that it works.
YOU NEED	A computer running Linux (these steps were tested on Ubuntu 24.04), an internet connection, and permission to install software (`sudo`).
TIME	About 10 minutes.

2.1 What gets installed

Tool	Why Saulitwerx needs it	Required?
Git	Downloads the source code and keeps it up to date.	Yes
Rust (1.80 or newer)	The programming language Saulitwerx is written in. Its tool `cargo` builds and runs the program.	Yes
C++ compiler	Builds a small bridge between Saulitwerx and the geometry engine.	For solids and STEP
OpenCascade (OCCT) 7.6 or newer	The open-source geometry engine that does the solid modeling.	For solids and STEP

Without OpenCascade you can still sketch, try the document model, and draw the built-in sample parts. To make your own solids or read and write STEP files, you need it.

2.2 Install the tools

1. Open a terminal. On Ubuntu, press `Ctrl` + `Alt` + `T`. A window with a command prompt appears.
2. Install Git, a C++ compiler and OpenCascade:

   TERMINAL

   ```
   sudo apt-get update
   sudo apt-get install -y git build-essential curl \
      libocct-foundation-dev libocct-modeling-data-dev \
      libocct-modeling-algorithms-dev libocct-visualization-dev \
      libocct-data-exchange-dev
   ```

   Type your password when asked. The terminal prints a list of packages and ends at the prompt again.
3. Install Rust with its official installer, and accept the default choices when it asks:

   TERMINAL

   ```
   curl --proto '=https' --tlsv1.2 -sSf https://sh.rustup.rs | sh
   ```

It ends with `Rust is installed now. Great!`

4. Close the terminal and open a new one, so it finds the new tools. Then check them:

```
TERMINAL
cargo --version
```

You should see a version line such as `cargo 1.97.0 (…)`. Any version 1.80 or newer works.

2.3 Get the source and build it

1. Download the source code into a folder named `saulitwerx`, and go into it:

```
TERMINAL
git clone https://github.com/glitchwizard/saulitwerx
cd saulitwerx
```

2. Build Saulitwerx and run its own checks:

```
TERMINAL
cargo test --workspace
```

The first build downloads a few small libraries and takes a minute or two. It ends with several lines that start `test result: ok.` and none that say `FAILED`.

3. Build the picture tool with OpenCascade support:

```
TERMINAL
cargo build --release -p swx-qa --features occt
```

It ends with a line that starts `Finished`. The tool is now at `target/release/swx-qa`.

4. Check that the picture tool runs:

```
TERMINAL
target/release/swx-qa --help
```

You should see its help text, which starts `Usage: swx-qa render`.

RESULT Saulitwerx is built, its tests pass, and the `swx-qa` picture tool is ready. Go on to Chapter 3.

> **TIP** **Staying up to date**
>
> Saulitwerx changes most nights. To get the newest version, go into the `saulitwerx` folder and run `git pull`, then build again.

> **CAUTION** **Commands run from the `saulitwerx` folder**
>
> Every command in this manual assumes your terminal is in the `saulitwerx` folder. If a command says it can't find a file, run `cd saulitwerx` first. Chapter 17 lists other problems and their fixes.

2.4 Other systems

The build is regularly checked only on Ubuntu Linux. Saulitwerx aims to run on macOS and Windows too, and the same steps should work there once Rust and OpenCascade are installed, but they are untested. Without OpenCascade, leave out `--features occt` in step 3.

CHAPTER 3

Your first part

In this tutorial you draw a sample part, then build a real one, a plate with a hole through it, measure it, save it in a standard file format, and draw it. Along the way you will meet the ideas the rest of the manual builds on.

YOU WILL	Draw a built-in sample part, build a plate with a hole, check its measurements, save it as a STEP file, and draw it.
YOU NEED	Saulitwerx built with OpenCascade support (Chapter 2), and a terminal in the `saulitwerx` folder.
TIME	About 15 minutes.

3.1 Draw a sample part

Saulitwerx comes with three sample parts built in: a cube, a cylinder and an L-shaped bracket. They need nothing else, so they are a quick way to check that drawing works.

1. Draw the cube to a picture file named `cube.png`:

   TERMINAL

   ```
   target/release/swx-qa render --fixture cube -o cube.png
   ```

   The tool answers with one line:

   OUTPUT

   ```
   wrote cube.png (800x600, 27669 bytes)
   ```

2. Open `cube.png` in any image viewer. On Ubuntu, type `xdg-open cube.png`. You should see a grey-blue cube on a light grey background, like Figure 3.1.

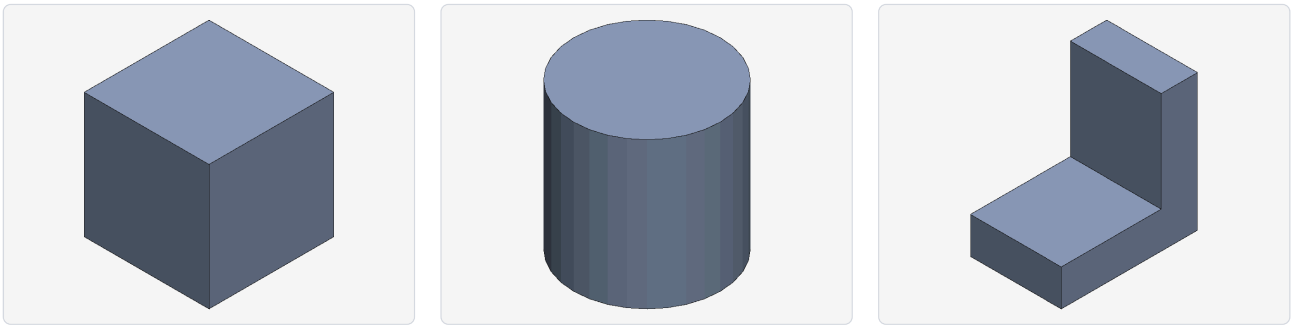


Figure 3.1 The three built-in sample parts: `cube`, `cylinder` and `l-bracket`.

The picture is always drawn from the same corner, looking down at an angle, so that three sides of a box show at once. Each flat face gets one even shade, and sharp edges get a dark outline. This kind of view is called *isometric*.

> **TIP**
>
> Try `--fixture cylinder` and `--fixture l-bracket` too. Add `--size 1600x1200` for a bigger, sharper picture.

3.2 Build a plate with a hole

Now build a real part. Saulitwerx doesn't have a window to draw in yet, so this part comes from a small program that ships with Saulitwerx. The program asks the geometry engine for three things:

1. a *solid* block 40 mm long, 25 mm wide and 5 mm thick;
2. a cylinder 10 mm across, standing where the hole should go, a little taller than the plate;
3. the block **minus** the cylinder. Taking one solid away from another is called a *cut*.

1. Run the program, and tell it to save the part as `plate.step`:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example plate_with_hole -- plate.step
   ```

   After a few seconds of building, it prints the part's measurements. The geometry engine also prints a short report about writing the file, framed in rows of `*`; you can ignore it.

   OUTPUT

   ```
   volume        4607.30 mm³
   surface area  2650.00 mm²
   faces         7
   bounding box  [0.0, 0.0, 0.0] to [40.0, 25.0, 5.0]
   …  (the geometry engine's file report)
   wrote plate.step (read back: 4607.30 mm³, 7 faces)
   ```

2. Check the numbers. The block holds $40 \times 25 \times 5 = 5000$ mm³. The hole removes $\pi \times 5^2 \times 5 \approx 392.7$ mm³. $5000 - 392.7 = 4607.3$, which is what the program reports. The part has 7 faces: top, bottom, four sides and the inside of the hole.

3. Draw the part:

   TERMINAL

   ```
   target/release/swx-qa render --step plate.step --size 1600x1000 -o plate.png
   ```

   The tool answers `wrote plate.png (1600x1000, …)`.

4. Open `plate.png`. You should see the plate of Figure 3.2, with the hole showing light background through it.

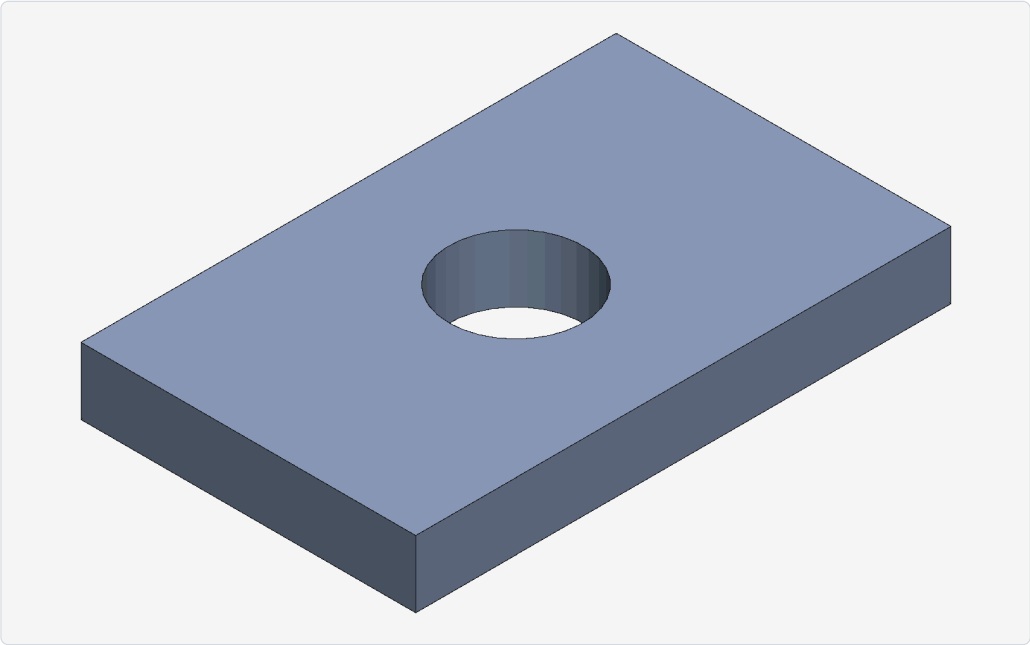


Figure 3.2 The plate you built, drawn from the STEP file the program saved.

RESULT You built a solid part, checked its volume, saved it as `plate.step`, and drew it as `plate.png`.

3.3 What you just did

The file `plate.step` is in the *STEP* format, an international standard (ISO 10303) for exchanging 3D parts. Almost every CAD program can open it, so you can take this plate into another tool, send it to a machine shop, or prepare it for 3D printing.

What you did **not** see yet is the parametric part of Saulitwerx: the numbers 40, 25, 5 and 10 are typed into the program, not stored as named, editable parameters. That comes with the part features and part files on the roadmap. Chapter 4 explains the ideas behind it, and Chapter 15 shows the piece of it that already works.

> **FOR DEVELOPERS**
>
> The program you ran is `crates/swx-kernel/examples/plate_with_hole.rs`. Change `5.0` (the hole radius) in the `make_cylinder` line to `8.0`, run step 1 again, and the volume drops to 3994.69 mm³. Chapter 6 explains each call.

PART II

Concepts

The ideas behind parametric CAD, in plain words. Read this before the task chapters; every procedure later relies on these terms.

CHAPTER 4

How parametric CAD works

Every parametric modeler, Saulitwerx included, is built on a handful of ideas. Once you know them, the commands make sense on their own. This chapter explains each idea in the order you meet it when you design a part. For each one it says what it is, why it matters, and where it stands in Saulitwerx today.

4.1 Solids

A *solid* is a closed 3D shape with an inside and an outside, like a real object. Because Saulitwerx knows what is inside, it can tell you how much material a part holds (its *volume*), how much surface it has to paint (its *surface area*), and how big a box it would fit in (its *bounding box*).

The outside of a solid is made of *faces*: flat or curved patches of surface. Where two faces meet there is an *edge*, and where edges meet there is a corner point, a *vertex* (plural: vertices). The plate from Chapter 3 has 7 faces: top, bottom, four sides, and the round inside of the hole.

Faces, edges and vertices are what you will later pick to say “round this edge” or “sketch on this face”, so it helps to see how they hang together. Each face is bounded by edges, and each edge ends at vertices. A box has 6 faces, 12 edges and 8 vertices; every edge sits between exactly two faces.

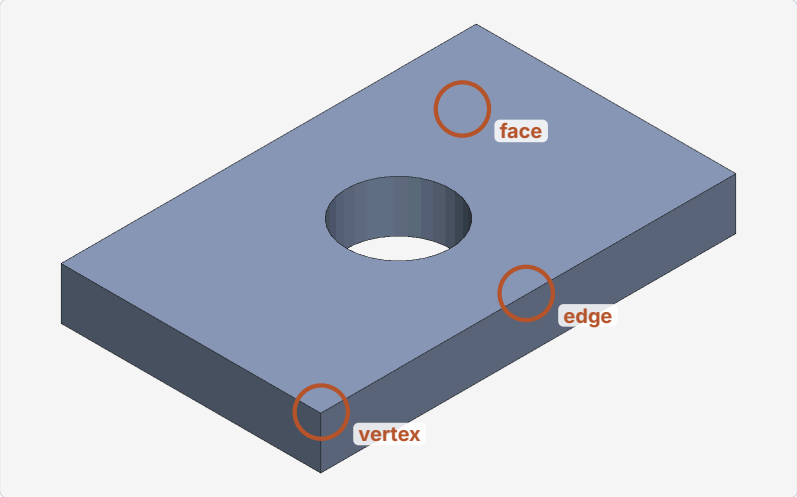


Figure 4.1 A solid, with one face, one edge and one vertex ringed. Faces are shaded and edges outlined. Volume 4607.30 mm³, 7 faces.

In Saulitwerx today: the geometry engine makes boxes, cylinders and spheres, and measures volume, surface area, bounding box and face count. It can also count a solid’s faces, edges and vertices, and list which ones touch (Section 6.3). Chapter 6 shows how.

4.2 Units

Every length in a part has a *unit*. In Saulitwerx the default is the millimeter (mm), and all of today's building blocks work in millimeters: a box 40 long is 40 mm long, and volumes come out in mm³. Angles are in degrees where you type them, and in radians inside the sketch geometry.

In Saulitwerx today: everything is in millimeters. STEP files are written in millimeters too. Choosing units per part comes with part files.

4.3 Sketches

Most solids start as a flat drawing. A *sketch* is a 2D drawing on a flat plane, made of simple pieces: points, straight lines, circles and arcs. Together these are called sketch *geometry* or *entities*.

A sketch for the plate would be a rectangle (four lines) and a circle. You don't need to draw it accurately. A rough shape is fine, because the next two ideas, constraints and dimensions, make it exact.

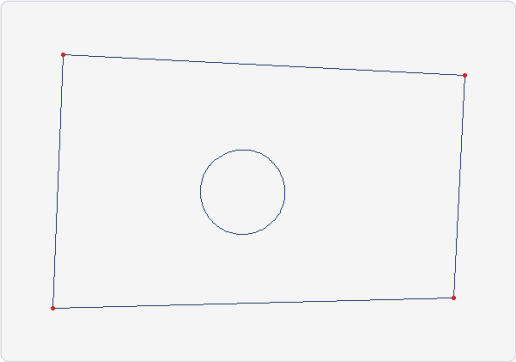


Figure 4.2 A rough sketch of the plate: four lines and a circle, drawn by eye. The red dots are the ends of the lines.

In Saulitwerx today: sketches with points, lines, circles and arcs exist as a building block (Chapter 5). There is no drawing window yet, so sketches are written as a short program, and `swx-qa sketch` draws them to a picture (Section 14.5).

4.4 Constraints

A *constraint* is a rule about the shape of a sketch: "this line is horizontal," "these two corners touch," "this point stays at the origin." Constraints carry the **intent** of a design. If you later change a size, a line that must stay horizontal stays horizontal.

Constraint	Rule it keeps
Coincident	Two points are at the same place. Use it to join the end of one line to the start of the next.
Horizontal	A line runs left–right; or two points are at the same height.
Vertical	A line runs up–down; or two points are directly above each other.
Fixed	A point stays at exact coordinates. Use it to anchor a sketch.
Parallel	Two lines point the same way, like opposite sides of a rectangle.
Perpendicular	Two lines meet at a right angle (90°), like the corner of a rectangle.
Equal	Two lines are the same length, or two circles or arcs are the same size.
Midpoint	A point sits exactly halfway along a line.
Symmetric	Two points are mirror images of each other across a line.
Tangent	A line just touches a circle or arc without cutting into it; or two circles or arcs just touch.

Some constraints are about direction (horizontal, vertical, parallel, perpendicular), some about position (coincident, fixed, midpoint, symmetric), and some about how curves meet (tangent) or match (equal). Parallel and perpendicular are relative: a parallel pair can lean at any angle, as long as both lean the same way. That is why a rectangle usually gets one horizontal side, to say which way is level, and perpendicular and parallel for the rest.

You don't have to add every constraint by hand. Saulitwerx can add the ones your drawing already almost shows, such as a corner that nearly touches or a line that is nearly level (Section 5.8).

Saulitwerx satisfies constraints with a *solver*: a calculation that nudges every point until all the rules hold at once. You give it a rough drawing and the rules; it gives back the exact shape.

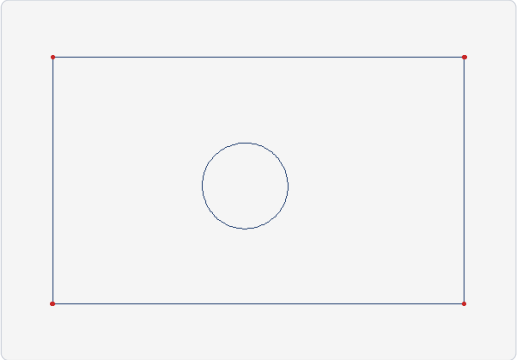


Figure 4.3 The same sketch after the solver applied coincident, horizontal, vertical and fixed. It is now a true rectangle, but its size is still whatever the rough drawing happened to be.

4.5 Dimensions

A *dimension* is a constraint with a number: a length, a distance, a radius or a diameter. "The bottom line is 40 mm long." "The hole is 10 mm across." Dimensions fix the size of a sketch, the way the plain constraints above fix its shape.

Dimension	Number it sets
Distance	The straight-line distance between two points, for example the two ends of a line.
Radius	The radius of a circle or arc.
Diameter	The diameter of a circle or arc: twice the radius.

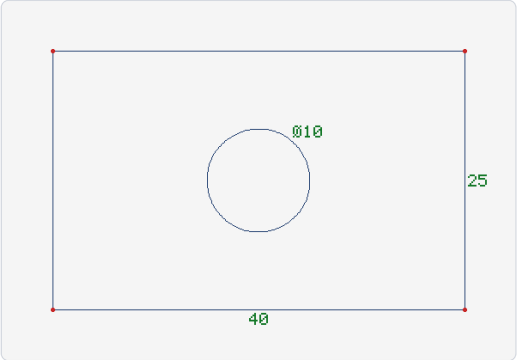


Figure 4.4 With dimensions added, the plate sketch is exactly 40 × 25 mm with a ⌀10 mm hole. Each green number is a dimension.

4.6 Degrees of freedom

Each way a piece of a sketch can still move is called a *degree of freedom*, or DOF for short. A free point on a sheet has two (left–right and up–down). A free line has four (two for each end); a free circle has three (its center's two, and its size). Each constraint takes some away: fixed takes two from a point, horizontal takes one from a line.

Counting what is left tells you how finished a sketch is. A sketch is in one of four states: *under-constrained*, *fully constrained*, *over-constrained* or *conflicting*.

State	What it means
Under-constrained	Something can still move. Add constraints or dimensions until the count reaches zero.
Fully constrained	Nothing can move, and no rule repeats another. This is the goal.
Over-constrained	At least one rule repeats what other rules already say, but they all agree. The repeated rule is *redundant*: harmless today, but it will fight you as soon as you change one of the sizes it repeats.
Conflicting	Redundant rules that disagree, such as two sides of a rectangle dimensioned 40 and 45 mm. No shape can satisfy them, so the solver stops short.

The plate sketch starts with 19 degrees of freedom: four lines and a circle. Figure 4.3 still has 5 (the rectangle's width and height, and the circle's position and size); Figure 4.4 has none. Section 5.3 shows how to get these numbers.

> **TIP**
>
> Constrain the shape first (coincident, horizontal, vertical), then add dimensions. Then anchor one point with fixed, so the whole sketch can't slide around.

In Saulitwerx today: all of the constraints and dimensions in these tables work, and the solver reports whether it found a shape that meets them. A degree-of-freedom report gives the count and the state, and names each redundant constraint (Section 5.3). Constraints can name every point of a sketch: a point, a line's ends, a circle's or arc's center, and an arc's two ends, so lines and arcs join into closed outlines such as a slot (Section 5.6).

4.7 Profiles and regions

A sketch on its own is just lines. To become a solid, it has to enclose an area that a feature can push into 3D. A closed chain of sketch pieces, where each one ends exactly where the next begins, is a *loop*. The flat area a loop encloses is a *region*, and the regions of a sketch together are its *profile*.

A region can have holes. In the plate sketch the rectangle is one loop and the circle is another, inside it. Saulitwerx works out that the circle is a hole, so the plate's region is the rectangle **minus** the circle: 1000 − 78.54 = 921.46 mm². Pushed up 5 mm, that region is exactly the plate of Chapter 3, hole included, with no separate cut.

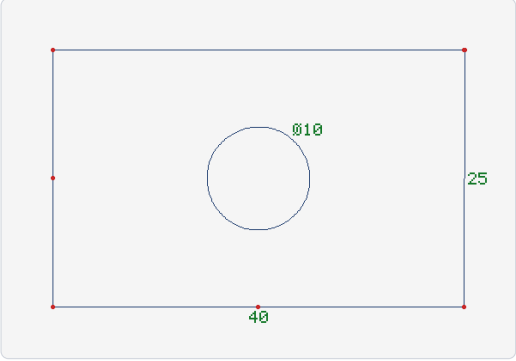


Figure 4.5 Two loops, one region: the rectangle is its outside edge and the circle its hole.

Pieces that don't close a loop, like a line with a free end, are *open edges*. They are left out of every region and listed separately, so you can find the gap. Pieces that cross each other are an error: Saulitwerx won't guess which of the shapes they form you meant.

In Saulitwerx today: profiles are worked out from any sketch of lines, circles and arcs, with holes, nested islands and open edges (Section 5.7). The geometry engine can extrude an outline with holes into a solid (Chapter 7), or revolve one around an axis (Chapter 8), but the outline is typed in by hand: a sketch's regions can't be passed to either yet.

4.8 Parameters

A *parameter* is a named number, like `thickness = 5` or `hole_dia = 10`. Features and dimensions refer to parameters by name instead of holding a bare number. Change the parameter, and everything that uses it follows.

This is the "parametric" in parametric CAD. One plate design, with its thickness as a parameter, is really a whole family of plates: set `thickness` to 3, 5 or 8 and rebuild.

Parameters come in two kinds. Each dimension owns a *model parameter*, named `d0`, `d1`, … in the order the dimensions were made. You add *user parameters* yourself, with names you choose. Rename `d0` to `thickness`, and everything that uses it follows.

An *expression* is a small formula with units, such as `d1 / 2 + 5 mm`: half of `d1`, plus 5 millimeters. Saulitwerx checks that the units make sense, so adding a length to an angle is an error, not a silent wrong answer.

In Saulitwerx today: parts keep a parameter table with both kinds, units and comments, and features refer to parameters by name (Section 15.4). A sketch's distance, radius and diameter dimensions can each make their own model parameter and follow it when it changes (Section 15.5). A parameter can hold an expression, and follows the parameters it names (Section 15.7).

4.9 Features

A *feature* is one step in building a part: a sketch, or something done to the solid, such as pushing a sketch out into 3D or cutting a hole. Each feature records **what** it does and **which** sketch and parameters it uses, not just the shape that resulted.

Figure 4.6 shows the idea of a cut, done directly with the geometry engine: a block, minus a cylinder, gives the plate. An **extrude** can make the same plate in one step, from the outline of the rectangle and its hole (Chapter 7). Recording those steps as features in a part's history comes later.

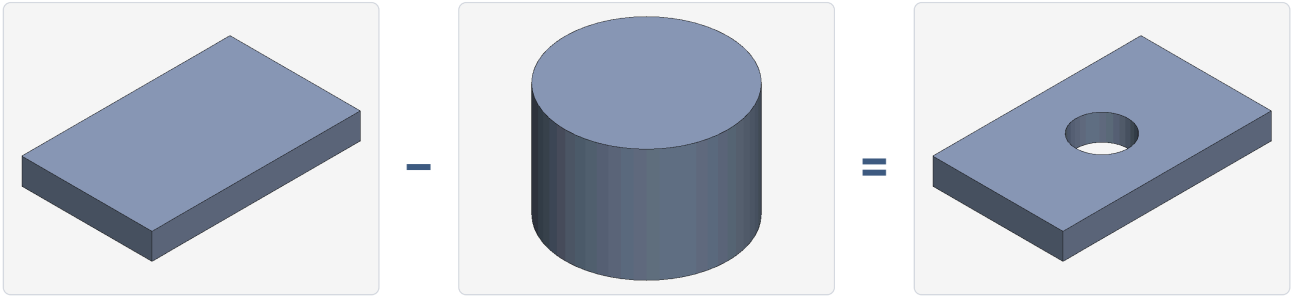


Figure 4.6 A cut takes one solid away from another. Each picture is scaled to fill its frame, so the cylinder looks larger than it is.

There are three ways to combine two solids. Together they are called *Boolean operations*:

- **Union** (join): keep everything that is in either solid.
- **Cut** (subtract): keep the first solid, minus anything the second one overlaps.
- **Intersect**: keep only the part that is in both.

4.10 History

A part's *history*, also called its *feature tree*, is its list of features in the order they were made. Each feature can use only what came before it: a cut needs a solid to cut into, and an extrude needs a sketch to push.

#	Feature	Uses
0	Sketch1	nothing: a rectangle on a plane
1	Extrude1	Sketch1, and the parameter `thickness`
2	Sketch2	nothing: a profile for a pin
3	Revolve1	Sketch2, and the parameter `sweep`

Because the history remembers how each feature was made, Saulitwerx can **rebuild** a part after a change. It doesn't rebuild everything. It works out which features depend on what changed, and redoes only those. Change `thickness`, and only Extrude1 rebuilds; edit Sketch2, and Sketch2 and Revolve1 rebuild.

A history also has an **end-of-part marker**, normally after the last feature. Move it up, and the features below it are set aside, as if the part stopped there; new features then go in at the marker, in the middle of the history (Section 15.3).

In Saulitwerx today: the history, the end-of-part marker and the "what needs rebuilding" logic exist (Chapter 15), using the exact example in the table above. Running the rebuild on real geometry comes with the part features.

4.11 Putting it together

Here is how the ideas line up when you design a part, once the app exists:

1. Make a **sketch** on a plane, roughly the shape you want.
2. Add **constraints** to fix its shape, and **dimensions** to fix its size, until no degrees of freedom are left.
3. Turn the sketch into a **solid** with a **feature**, such as extrude.
4. Add more features (cuts, holes, rounded edges) to finish the part. They form its **history**.
5. Change a **parameter** or a dimension later, and the part rebuilds to match.

PART III

Tasks

How to do things, one task per section. Until the desktop app arrives, every task here runs a real command or a small program, and is marked for developers.

CHAPTER 5

Sketching

> **FOR DEVELOPERS**
>
> Until the desktop app's sketch mode arrives, sketches are written as a short Rust program against the `swx-sketch` library. This chapter runs one that ships with Saulitwerx.

5.1 Solve a sketch

The sketch for the plate of Chapter 3 is a 40 × 25 mm rectangle with a 10 mm circle in the middle. In this task you run a program that draws that sketch **roughly**, adds the constraints and dimensions, and asks the solver for the exact shape.

YOU WILL	Run the sample sketch, read the solver's report, and see the rough shape become exact.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the sample sketch:

   TERMINAL
   ```
   cargo run -p swx-sketch --example plate_sketch
   ```


   It prints the solver's report, then each line and the circle:

   OUTPUT
   ```
   solved: true (Converged, 3 iterations, residual 5.3e-14)
   bottom (  0.00,   0.00) -> ( 40.00,   0.00)  length 40.00 mm
   right  ( 40.00,   0.00) -> ( 40.00,  25.00)  length 25.00 mm
   top    ( 40.00,  25.00) -> (  0.00,  25.00)  length 40.00 mm
   left   (  0.00,  25.00) -> (  0.00,   0.00)  length 25.00 mm
   hole   center (20.00, 12.50)  diameter 10.00 mm
   ```

2. Read the first line. `solved: true` and `Converged` mean the solver found a shape that meets every rule. `residual` is how far off it still is, here about 0.00000000000005 mm: exact for any practical purpose.

3. Compare the result with the rough drawing in the program (below). The bottom line was drawn 38 mm long and tilted; it is now exactly 40 mm and level.

RESULT A fully sized, square-cornered sketch: a 40 × 25 mm rectangle with its lower-left corner at the origin, and a 10 mm circle centered at (20, 12.5).

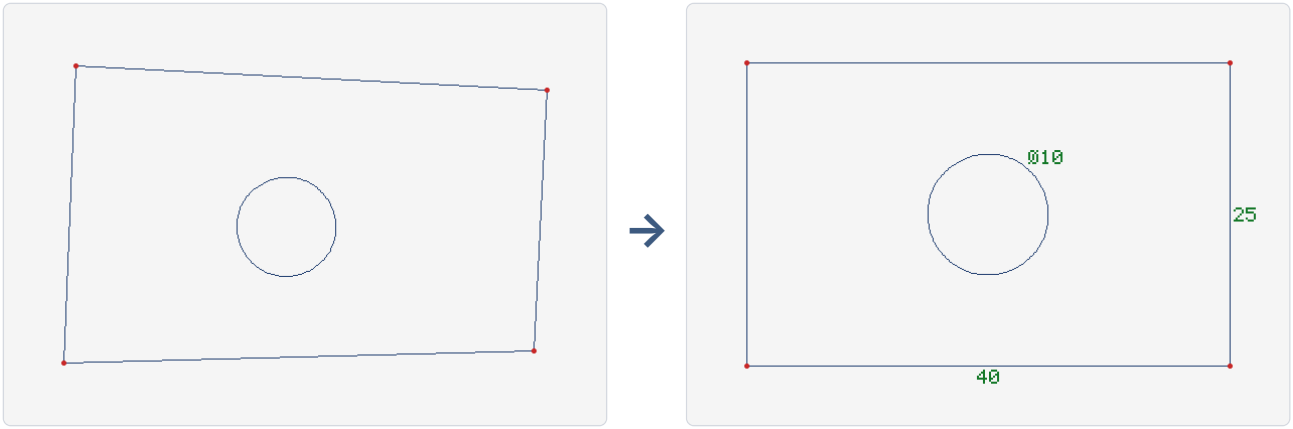

Before: the rough drawing After: solved

Figure 5.1 The sample sketch before and after solving. Section 14.5 shows how to draw pictures like these.

5.2 How the sample sketch is built

The program is `crates/swx-sketch/examples/plate_sketch.rs`. It works in four stages, the same ones you will use in the app. The code below is shortened from the file.

1. Draw roughly. Four lines and a circle, deliberately off-size:

```
let bottom = s.add(Geometry::Line(Line::new(p(0.0, 0.0)?, p(38.0, 1.0)?)?))?;
let right = s.add(Geometry::Line(Line::new(p(38.0, 1.0)?, p(39.0, 22.0)?)?))?;
let top = s.add(Geometry::Line(Line::new(p(39.0, 22.0)?, p(1.0, 24.0)?)?))?;
let left = s.add(Geometry::Line(Line::new(p(1.0, 24.0)?, p(0.0, 0.0)?)?))?;
let hole = s.add(Geometry::Circle(Circle::new(p(18.0, 11.0)?, 4.0)?))?;
```

2. Fix the shape. Join each line's end to the next line's start with **coincident**, then make two lines horizontal and two vertical:

```
for (a, b) in [(bottom, right), (right, top), (top, left), (left, bottom)] {
    s.add_constraint(Constraint::Coincident(PointRef::End(a), PointRef::Start(b)))?;
}
s.add_constraint(Constraint::Horizontal(bottom))?;
s.add_constraint(Constraint::Vertical(left))?;   // and likewise top, right
```

3. Anchor and size it. Pin the lower-left corner to the origin with **fixed**, and set two **distances** and the hole's **diameter**:

```
s.add_constraint(Constraint::Fixed { point: PointRef::Start(bottom), x: 0.0, y: 0.0 })?;
s.add_constraint(Constraint::Distance {
    a: PointRef::Start(bottom), b: PointRef::End(bottom), value: 40.0 })?;
s.add_constraint(Constraint::Diameter { geom: hole, value: 10.0 })?;
```

4. Solve. One call moves everything into place and returns a report:

```
let report = s.solve(SolveOptions::default())?;
```

A `PointRef` names a point the constraint acts on: `Start(line)`, `End(line)`, `Center(circle)`, `ArcStart(arc)`, `ArcEnd(arc)` or `Point(point)`. Section 16.7 lists every entity and constraint with its exact form.

5.3 Check how fully a sketch is defined

A sketch that solves is not necessarily finished: parts of it may still be free to move, or some rules may repeat each other. A degree-of-freedom report (Section 4.6) tells you which. In this task you run a program that builds the plate sketch one group of rules at a time and checks it after each.

YOU WILL	Watch the degrees of freedom of a sketch fall to zero, then see what a repeated or contradicting dimension looks like.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the sample:

   TERMINAL

   ```
   cargo run -p swx-sketch --example sketch_dof
   ```

   It prints one line per stage, with the number of equations the rules make, the degrees of freedom left, and the state:

   OUTPUT

   ```
   1 rough drawing            equations  0  dof 19  UnderConstrained
   2 + coincident x4          equations  8  dof 11  UnderConstrained
   3 + horizontal, vertical   equations 12  dof  7  UnderConstrained
   4 + fixed corner           equations 14  dof  5  UnderConstrained
   5 + two distances          equations 16  dof  3  UnderConstrained
     solve: Converged
   6 + hole, then solve       equations 19  dof  0  FullyConstrained
     solve: Converged
   7 + distance top 40        equations 20  dof  0  OverConstrained
                              redundant: distance top 40
     solve: Stagnated
   7 + distance top 45        equations 20  dof  0  Conflicting
                              redundant: distance top 45
   ```

2. Read stages 1 to 6. The four lines and the circle start with 19 degrees of freedom. Each group of rules takes some away, and after the hole is placed and sized none are left: `FullyConstrained`.
3. Read the first stage 7. A third distance, 40 mm on the top line, repeats what the bottom line and the horizontal and vertical rules already say. The solver still succeeds, but the report says `OverConstrained` and names the repeated rule.
4. Read the second stage 7. With 45 mm on the top line instead, no rectangle can meet every rule. The solver stops with `Stagnated`, and the report says `Conflicting` and names the 45 mm distance.

RESULT You can tell an unfinished sketch (`UnderConstrained`, with the number of degrees of freedom still open) from a finished one (`FullyConstrained`), and spot a repeated or contradicting rule.

How the check works

The program is `crates/swx-sketch/examples/sketch_dof.rs`. One call on the sketch makes the report:

```rust
use swx_sketch::dof::DofOptions;

let r = s.dof(DofOptions::default())?;
println!("dof {} {:?}", r.report.dof, r.report.state);
for id in &r.redundant_constraints {
    println!("redundant: {}", names[id.0 as usize]);
}
```

`r.report` holds `dof` and the `state`. `r.redundant_constraints` lists the repeated rules as constraint ids: the number `add_constraint` gave each one, counting from 0 in the order you added them. The sample keeps a list of names in the same order, so `names[id.0]` prints the rule in words. A rule that adds two equations, such as a repeated coincident, is listed once. Section 16.10 lists every field and setting.

> **TIP** **Solve first, then check**
>
> The difference between over-constrained and conflicting is whether the rules are met. Run the check after `solve`: on a rough drawing that hasn't been solved yet, a harmless repeated rule can show as `Conflicting`.

> **CAUTION** **Only the later rule is named**
>
> When two rules repeat each other, the report names the one you added **later**, because the earlier one was still independent when it arrived. The fix may be to delete either one.

5.4 Change a dimension

1. Open `crates/swx-sketch/examples/plate_sketch.rs` in a text editor.
2. Find `value: 40.0` and change it to `value: 60.0`. Save the file.
3. Run the sample again (step 1 above). The bottom and top lines now report `length 60.00 mm`; the right line moves to x = 60. The hole stays at (20, 12.5), because it is fixed there, not centered.
4. Change the value back to `40.0` when you are done.

> **TIP**
>
> The hole stayed put because it is fixed at (20, 12.5). To keep it centered whatever the width, use midpoint instead (Section 5.5).

5.5 Keep a hole centered

A good sketch says what you **mean**. If the hole belongs in the middle of the plate, the sketch should say "in the middle", not "at x = 20". Then a wider plate keeps its hole centered with no extra work. The tool for this is the *midpoint* constraint, which keeps a point exactly halfway along a line.

YOU WILL	Center a hole with midpoint constraints, then change the plate's width and watch the hole follow.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the centered-plate sample:

   TERMINAL

   ```
   cargo run -p swx-sketch --example centered_plate
   ```

   It solves the sketch, checks its degrees of freedom, and prints the sizes and the region an extrude would use:

OUTPUT

```
solved: true (Converged), dof 0 FullyConstrained
bottom length 40.00 mm
right  length 25.00 mm
hole   center (20.00, 12.50)  diameter 10.00 mm
regions: 1
  region 0: outer edges 4, holes 1, area 921.46 mm²
open edges: 0
```

2. Check the first line. `FullyConstrained` with `dof 0` means every piece is pinned down, including the hole, even though no rule gives the hole's coordinates.

3. Run it again for a plate 60 mm wide. The two numbers after `--` are the width and the height:

TERMINAL


```
cargo run -p swx-sketch --example centered_plate -- 60 25
```

OUTPUT

```
solved: true (Converged), dof 0 FullyConstrained
bottom length 60.00 mm
right  length 25.00 mm
hole   center (30.00, 12.50)  diameter 10.00 mm
regions: 1
  region 0: outer edges 4, holes 1, area 1421.46 mm²
open edges: 0
```

The hole has moved to x = 30, the middle of the new width.

RESULT A plate whose hole stays in the middle whatever its width or height, and a sketch that is fully constrained.

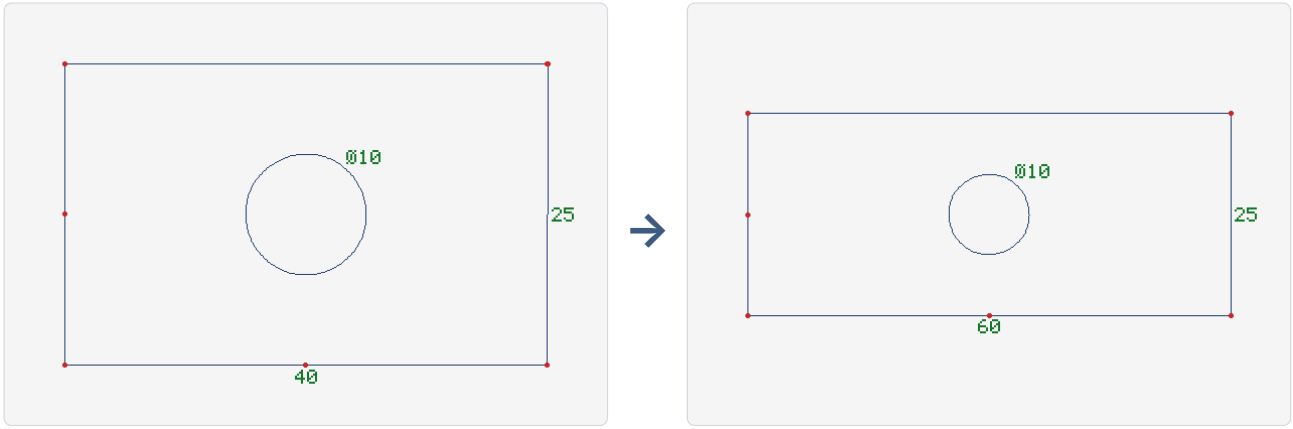

40 mm wide 60 mm wide

Figure 5.2 The same sketch with only the width changed. The red dots at the middle of the bottom and left sides are the helper points that center the hole.

How the centered plate is built

The program is `crates/swx-sketch/examples/centered_plate.rs`. It starts from the same rough drawing as the plate sketch, and changes two things.

Square corners without four direction rules. Only the bottom is horizontal. The left side is *perpendicular* to it, and each side is *parallel* to the one opposite:

```
s.add_constraint(Constraint::Horizontal(bottom))?;
s.add_constraint(Constraint::Perpendicular(bottom, left))?;
```

```
s.add_constraint(Constraint::Parallel(top, bottom))?;
s.add_constraint(Constraint::Parallel(right, left))?;
```

Center the hole with two helper points. A point entity sits at the middle of the bottom side, and another at the middle of the left side. The hole's center is lined up straight above the first and level with the second:

```
let mid_bottom = s.add(Geometry::Point(p(19.0, 0.0)?))?;
let mid_left = s.add(Geometry::Point(p(0.0, 12.0)?))?;
s.add_constraint(Constraint::Midpoint { point: PointRef::Point(mid_bottom), line: bottom })?;
s.add_constraint(Constraint::Midpoint { point: PointRef::Point(mid_left), line: left })?;
s.add_constraint(Constraint::VerticalPoints(
    PointRef::Point(mid_bottom), PointRef::Center(hole)))?;
s.add_constraint(Constraint::HorizontalPoints(
    PointRef::Point(mid_left), PointRef::Center(hole)))?;
```

Helper points are safe to add: they are not part of any outline, so the profile ignores them.

> **TIP** **Why not a diagonal?**
>
> Drawing the rectangle's diagonal and putting the hole's center at its midpoint would also work for the solver. But the diagonal would cut through the hole and the plate, and profiles can't be found from pieces that cross (Section 5.7). Helper points avoid that.

The *symmetric* constraint is the other way to say "centered": `Symmetric { a, b, line }` makes points `a` and `b` mirror images across `line`. It suits pairs, such as two holes placed evenly either side of a center line.

5.6 Draw a slot

A slot is a rounded-end opening, like the hole a bolt slides along. Its outline is two straight sides and two half circles, and the sides must run smoothly into the curves, with no corner. Three constraints say that. Coincident joins each side's ends to the arcs' ends, so the outline closes. The *tangent* constraint makes a line touch a circle or arc without cutting into it, so there is no corner where they meet. The *equal* constraint keeps both ends the same size, so you set the radius only once.

YOU WILL	Close a roughly drawn slot with coincident, tangent and equal constraints, check that it is fully defined, and find its region.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the slot sample:

   TERMINAL

   ```
   cargo run -p swx-sketch --example slot_sketch
   ```

   It prints the slot twice: as drawn, then after solving.

OUTPUT

```
1 as drawn
  left   arc center (  0.00,  0.00)  radius 4.00 mm  from   90° to  260°
  right  arc center ( 28.00,  1.00)  radius 6.00 mm  from  -90° to   90°
  bottom (  0.00, -4.00) -> ( 28.00, -5.00)
  regions: 0
  open edges: [0, 1, 2, 3]
2 solved: true
  dof 0 FullyConstrained
  left   arc center (  0.00,  0.00)  radius 5.00 mm  from   90° to  270°
  right  arc center ( 30.00,  0.00)  radius 5.00 mm  from  -90° to   90°
  bottom (  0.00, -5.00) -> ( 30.00, -5.00)
  regions: 1
    outer edges 4, holes 0, area 378.54 mm²
  open edges: []
```

2. Read stage 1. The slot was drawn carelessly on purpose: the ends have radii 4 and 6, the slot is tilted, and the left arc stops at 260°, 10° short of the bottom side (Figure 5.3). Because of that one gap the outline doesn't close, so there is no region and all four pieces are listed as open edges.
3. Read stage 2. Both radii are now 5 mm, the centers are 30 mm apart and level, and the left arc runs the full half circle from 90° to 270°. The solver turned the arc's end until it met the bottom side.
4. Read `dof 0 FullyConstrained`. Every piece of the slot is pinned down: its size, its shape and where it sits. Nothing is left to chance.
5. Read the region. The closed slot encloses one region of 378.54 mm²: a 30 × 10 mm rectangle plus two half circles of radius 5 mm.

RESULT A fully defined 30 mm slot with 5 mm round ends, and one region ready to become a solid.

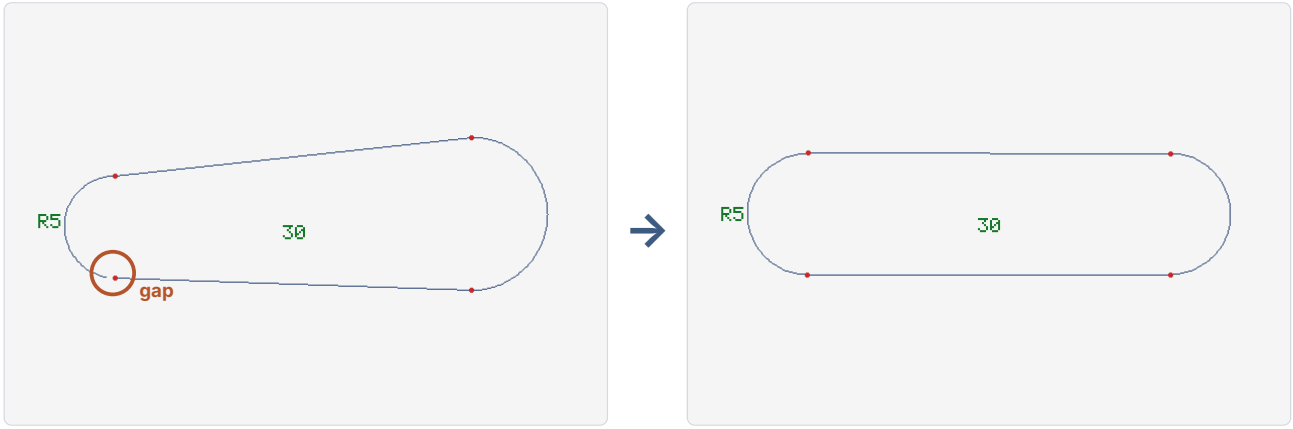


Figure 5.3 The slot before and after solving. As drawn, the ends differ in size, the slot is tilted, and the left arc stops short of the bottom side (ringed). Solved, it is level, with equal 5 mm ends joined all the way round.

How the slot is built

The program is `crates/swx-sketch/examples/slot_sketch.rs`. An arc's two ends are named with `PointRef::ArcStart(arc)` and `PointRef::ArcEnd(arc)`. An arc always runs counterclockwise from its start to its end, so the left arc, drawn from the top (90°) round to the bottom (270°), ends where the bottom side starts:

```
for (a, b) in [
    (PointRef::Start(bottom), PointRef::ArcEnd(left)),
    (PointRef::End(bottom), PointRef::ArcStart(right)),
    (PointRef::Start(top), PointRef::ArcEnd(right)),
```

```
    (PointRef::End(top), PointRef::ArcStart(left)),
] {
    s.add_constraint(Constraint::Coincident(a, b))?;
}
for (line, arc) in [(bottom, left), (bottom, right), (top, left), (top, right)] {
    s.add_constraint(Constraint::Tangent(line, arc))?;
}
s.add_constraint(Constraint::Equal(left, right))?;
s.add_constraint(Constraint::Radius { geom: left, value: 5.0 })?;
```

Then the bottom side is made horizontal, the left center is fixed at the origin, and the centers are set 30 mm apart. That is all the slot needs.

> **TIP** **Which end is which**
>
> Picture walking round the arc counterclockwise, the way the angles grow. Where you set off is `ArcStart`; where you stop is `ArcEnd`. If you join the wrong end, the solver still tries to obey, and you get a different shape from the one you meant. Check the angles in the output, or plot the sketch (Section 14.5).

> **TIP**
>
> A tangent line stays on the side of the circle it started on, and two tangent circles stay touching on the outside or the inside, whichever they were closer to when you added the constraint. Draw roughly the right arrangement and the solver keeps it. When a line's end is joined to an arc's end, tangent there means the line meets the arc square to its radius, which is exactly "no corner".

5.7 Find the region to extrude

Before a sketch can become a solid, Saulitwerx has to know which areas it encloses (Section 4.7). Both samples above end by asking for exactly that. This section shows the call, and how to read the answer.

YOU WILL	Get the regions of a sketch, with their holes and areas, and find the open edges when a sketch doesn't close.
YOU NEED	The two samples above, run once each.
TIME	5 minutes.

1. Look at the end of the centered-plate output (Section 5.5): `regions: 1`, `holes 1`, `area 921.46 mm²`. The rectangle is the region's outside edge and the circle its hole; the area is the rectangle's 1000 mm² minus the hole's 78.54 mm².
2. Look at stage 2 of the slot output (Section 5.6): one region with `outer edges 4` (two lines, two arcs) and no holes.
3. Look at stage 1: `regions: 0` and `open edges: [0, 1, 2, 3]`. The numbers are the pieces in the order they were added to the sketch: 0 and 1 are the arcs, 2 and 3 the lines. When a sketch has no region, the open edges show where to look for the gap.

RESULT You can tell whether a sketch is ready to become a solid, and how much area it encloses. Chapter 7 shows how an outline like this becomes a solid.

How it works

One call returns every region and the open edges:

```rust
use swx_sketch::profile::{profile_report, ProfileOptions};

let profile = profile_report(&s, &ProfileOptions::default())?;
for r in &profile.regions {
    println!("holes {}, area {:.2} mm²", r.holes.len(), r.area());
}
println!("open edges: {:?}", profile.open_edges);
```

`profiles(&s, &options)` returns only the regions. Ends of pieces closer together than a small tolerance count as joined; Section 16.9 lists the setting, every field, and the rules for loops inside loops.

> **CAUTION** **Crossing pieces stop the search**
>
> If two pieces cross, overlap or touch away from their ends, `profile_report` returns an error naming both, such as `geometry 2 and 5 intersect`, and no regions. Saulitwerx doesn't split pieces where they cross. Move or shorten one of them so they meet only end to end.

5.8 Let Saulitwerx add constraints as you draw

Most of a sketch's constraints say what your drawing already almost shows: this corner joins that one, this line is level, this circle touches that line. Adding each of them by hand is slow. *Inference* does it for you. After you add a piece, Saulitwerx compares it with everything already in the sketch, suggests the constraints it nearly satisfies, adds them and solves. It never adds a dimension: sizes stay yours to set.

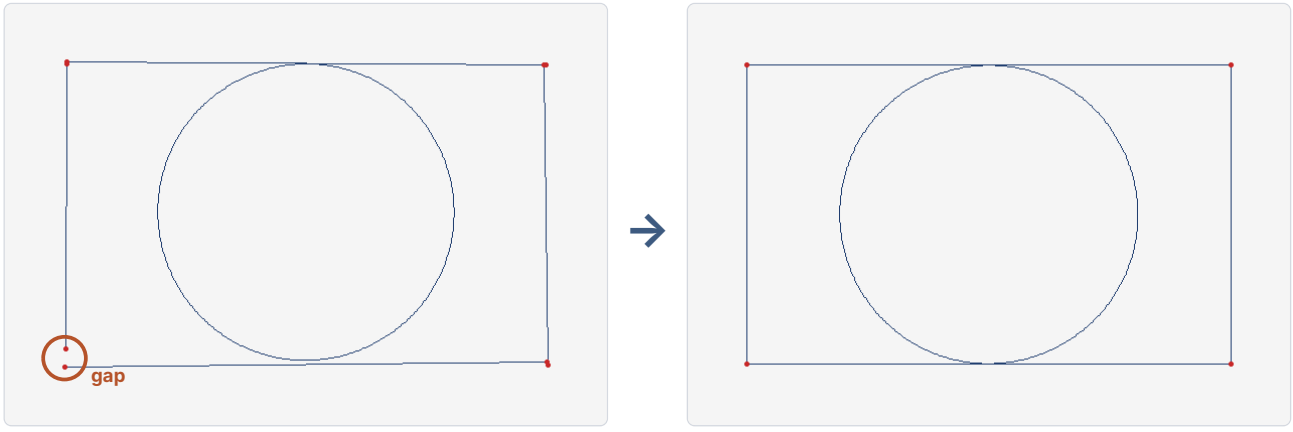


Figure 5.4 The sketch before and after inference. As drawn, the sides lean slightly and the left side stops short of the bottom-left corner (ringed). After inference and solving, the sides are level and upright, every corner is joined, and the circle touches the top and bottom.

YOU WILL	Draw a rough rectangle and a circle one piece at a time, and see which constraints inference adds after each.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the inference sample:

   TERMINAL

   ```
   cargo run -p swx-sketch --example inferred_sketch
   ```

   It draws four sides and then a circle, and after each one lists what inference suggested.

OUTPUT

```
bottom: 1 suggested
  horizontal: bottom
right: 2 suggested
  coincident: start of right = end of bottom
  vertical: right
top: 2 suggested
  coincident: start of top = end of right
  horizontal: top
left: 2 suggested
  coincident: start of left = end of top
  vertical: left
  (missed the first corner by 1.31 mm; the default point_tol is 0.047 mm)
again with point_tol 2 mm:
left: 3 suggested
  coincident: start of left = end of top
  coincident: end of left = start of bottom
  vertical: left
corners: (0.13, 0.52) (39.90, 0.52) (39.90, 25.07) (0.13, 25.07)
circle: 2 suggested
  tangent: circle and bottom
  tangent: circle and top
```

2. Read the first three pieces. The bottom was drawn 0.6° off level, so it got horizontal. The right side starts a few hundredths of a millimeter from the bottom's end, so its start was joined to that end, and it got vertical. The top went the same way. No piece was made parallel or perpendicular to another: once a line is horizontal or vertical, those would only repeat the rule.
3. Read the first try at the left side. Its start was joined to the top, but its end stopped 1.31 mm short of the first corner. That is far more than the default reach of 0.047 mm, so that corner was left open.
4. Read the second try. With a reach of 2 mm the gap was closed, and the rectangle is complete. Its corners are now exactly square (Figure 5.4).
5. Read the circle. It was drawn 0.01 mm short of touching the top and bottom, so it got tangent to both.

RESULT A closed rectangle with a circle touching its top and bottom, held by ten constraints you didn't have to add yourself.

Inference doesn't make a sketch fully defined. This rectangle has no sizes yet, and its corner is not fixed, so it still has degrees of freedom (Section 5.3). Add a fixed point and the dimensions next.

How the sample is built

The program is `crates/swx-sketch/examples/inferred_sketch.rs`. After each `add`, one call infers, adds and solves:

```rust
use swx_sketch::infer::{add_inferred, infer, InferOptions};

let right = s.add(Geometry::Line(Line::new(start, end)?))?;
let opts = InferOptions::for_sketch(&s);
let suggested = infer(&s, right, &opts)?;      // look only
let added = add_inferred(&mut s, right, &opts)?; // add and solve
```

`infer` only looks and changes nothing, so you can show the suggestions first and let the user choose. `add_inferred` adds every suggestion and solves. Two settings decide how near is near enough. `point_tol` is the reach for joining points and for tangency; by default it is a thousandth of the sketch's overall size, its diagonal. `angle_tol_deg` is the reach for directions; by default 1°. Section 16.11 gives the full rules.

> **TIP** **Draw from where you stopped**
>
> Inference joins only points that are very close by default. Start each new piece where the last one ended, as precisely as you can, and the corners join themselves. When a drawing is coarser, widen `point_tol`, but not so far that it joins points you meant to keep apart.

> **CAUTION** **It adds what it sees**
>
> A line drawn half a degree off level becomes level, even if you meant it to lean, and a constraint can't be taken out of a sketch yet. When that matters, call `infer` first, and add only the suggestions you want with `add_constraint`. A constraint already in the sketch is never suggested again.

5.9 Common mistakes

- **A value of zero or less.** Distance, radius and diameter must be greater than zero. Adding `value: 0.0` fails with `value must be > 0, got 0`.
- **The wrong kind of point.** `PointRef::Start` and `End` work only on lines, `ArcStart` and `ArcEnd` only on arcs, and `Center` only on circles and arcs. Using `Center` on a line fails with `geometry 0 has a different kind`.
- **Rules that fight each other.** Two fixed points 30 mm apart with a distance of 40 mm between them can't both hold. The solver then stops with `solved: false` and a reason of `Stagnated`, and moves the points as close to meeting the rules as it can. A degree-of-freedom check then says `Conflicting` and names the clashing constraint (Section 5.3).
- **The wrong kind of entity.** Parallel and perpendicular take two lines. Equal takes two lines or two round pieces (circles and arcs), not one of each. Tangent takes a line and a round piece, or two round pieces, never two lines. Each of these fails with `geometry N has a different kind`.
- **An outline with a gap.** Pieces that look joined but aren't leave no region. Join every corner with coincident, including where a line meets an arc (Section 5.6).
- **Expecting inference to set sizes.** Inference adds coincident, horizontal, vertical, parallel, perpendicular and tangent only. Add distances, radii and diameters yourself (Section 5.8).
- **Too few rules.** A sketch can solve and still be under-constrained: the solver keeps unconstrained pieces near where you drew them. Check that the degrees of freedom reach zero before you rely on the sizes.

CHAPTER 6

Solids and STEP files

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

The part of a CAD program that does the 3D math is its *geometry kernel*. Saulitwerx talks to its kernel through one interface, the `Kernel` trait, so the rest of the program never depends on which kernel is underneath. Today that kernel is OpenCascade, reached through `OcctKernel`.

6.1 Make a solid and save it as STEP

YOU WILL	Build the plate with a hole, measure it, save it as STEP and read it back.
YOU NEED	Saulitwerx built with OpenCascade (Chapter 2).
TIME	5 minutes.

You already ran this program in Chapter 3. Here is what each part of it does. The file is `crates/swx-kernel/examples/plate_with_hole.rs`.

1. **Make the two starting solids.** A box is given by its lowest corner and its three sizes; a cylinder stands on +Z, given by the center of its base, its radius and its height:

```
let plate = k.make_box([0.0, 0.0, 0.0], [40.0, 25.0, 5.0])?;
let tool  = k.make_cylinder([20.0, 12.5, -1.0], 5.0, 7.0)?;
```

2. **Cut one from the other.** The cylinder starts 1 mm below the plate and ends 1 mm above it, so the hole goes cleanly all the way through:

```
let part = k.cut(&plate, &tool)?;
```

3. **Measure the result** with `volume`, `surface_area`, `face_count` and `bounding_box`. The program prints them; Chapter 3 checks them by hand.

4. **Save and read back.** `export_step` writes the file, in millimeters; `import_step` reads it back as one solid. Matching volume and face count show nothing was lost:

```
k.export_step(&part, &out)?;
let back = k.import_step(&out)?;
```

RESULT A STEP file of the plate, checked by reading it back: `wrote plate.step (read back: 4607.30 mm³, 7 faces)`.

> **TIP** **Make the tool overlap**
>
> When you cut a hole, make the tool solid a little longer than the part on both sides. A tool that ends exactly on a face can leave a paper-thin skin, or confuse the kernel.

6.2 Combine solids

The kernel has three Boolean operations (Section 4.9). Each takes two solids and returns a new one; the inputs are left unchanged.

Call	Result
`k.union(&a, &b)`	Everything in `a` or `b`.
`k.cut(&a, &b)`	`a` minus whatever `b` overlaps.
`k.intersect(&a, &b)`	Only what is in both.

> **CAUTION**
>
> Sizes must be finite and greater than zero, and positions finite. A box with a zero size is refused before it reaches the kernel, with `invalid input: box dx must be finite and > 0, got 0`.

6.3 Faces, edges and vertices of a solid

A solid's faces, edges and vertices (Section 4.1) are its *sub-shapes*. Later features will need them: a fillet rounds an edge, a sketch sits on a face. Today you can count them and walk from one to its neighbours. Two sub-shapes are *adjacent* when one bounds the other: a face and the edges around it, or an edge and the two vertices at its ends.

The kernel numbers the sub-shapes of each kind from 0. `SubShape { kind, index }` names one of them, such as face 6, and `TopoKind` is the kind: `Face`, `Edge` or `Vertex`.

YOU WILL	Count the plate's faces, edges and vertices, and find the faces around the hole.
YOU NEED	Saulitwerx built with OpenCascade (Chapter 2).
TIME	5 minutes.

The program is `crates/swx-kernel/examples/part_topology.rs`. It builds the same plate as above, then asks the kernel about its parts.

1. **Count each kind** with `sub_shape_count`:

```rust
for kind in [TopoKind::Face, TopoKind::Edge, TopoKind::Vertex] {
    println!("{kind:?} count: {}", k.sub_shape_count(&part, kind)?);
}
```

   A shared sub-shape counts once: the edge between two faces is one edge.

2. **Go down from a face to its edges** with `adjacent`. Give it the sub-shape to start from and the kind you want back:

```rust
let face = SubShape { kind: TopoKind::Face, index };
let edges = k.adjacent(&part, face, TopoKind::Edge)?;
```

   The list comes back sorted by index, with no repeats.

3. **Go up from an edge to its faces** the same way, asking for `TopoKind::Face`. The program does this for each edge of the hole's wall, the only face with 3 edges.
4. **Run it:**

TERMINAL

```
cargo run -p swx-kernel --features occt --example part_topology
```

You should see:

OUTPUT

```
Face count: 7
Edge count: 15
Vertex count: 10

face 0: 4 edges [0, 1, 2, 3]
face 1: 4 edges [0, 4, 5, 6]
face 2: 5 edges [1, 6, 7, 8, 9]
face 3: 4 edges [2, 7, 10, 11]
face 4: 5 edges [3, 4, 10, 12, 13]
face 5: 4 edges [5, 8, 11, 12]
face 6: 3 edges [9, 13, 14]

hole wall is face 6
  edge 9: faces [2, 6]
  edge 13: faces [4, 6]
  edge 14: faces [6]

face 7: invalid input: face index 7 is out of range: the shape has 7 faces
```

RESULT The plate has 7 faces, 15 edges and 10 vertices. Faces 2 and 4 have 5 edges each, four sides plus the rim of the hole: they are the top and the bottom, the two faces the hole passes through. The hole's wall, face 6, meets them along edges 9 and 13.

> **NOTE** **Why 15 edges, and an edge with one face**
>
> A box has 12 edges; the hole adds its two rims, which makes 14. The fifteenth is a *seam*: the kernel makes a closed round face, like the hole's wall, from a sheet rolled up until its two sides meet, and the line where they meet is an edge. It doesn't show in pictures. Because the wall lies on both sides of it, the seam, edge 14, lists only one face.

> **CAUTION** **A number belongs to one shape**
>
> Indices count the sub-shapes of one shape, so face 6 of this plate means nothing for another shape, even the same plate after a change. Ask again after every operation. An extrude and a Boolean can tell you which of their faces is which (Section 7.5, Section 6.4); names that last through changes are on the way, see **Coming next**.

Common mistakes

- **Asking for the same kind you start from,** such as the edges of an edge. That gives: `invalid input: adjacent needs two different kinds, got edge and edge`.
- **Counting from 1.** The last face of a 7-face part is face 6. Face 7 gives: `invalid input: face index 7 is out of range: the shape has 7 faces`.

6.4 Find the faces a Boolean made

A Boolean renumbers the faces of its result (Section 6.3), so face 5 of a block need not be face 5 after a cut. To keep track of a face, such as the top you want to round next, ask for the Boolean *with history*. Next to the new solid you get one entry for each face of both inputs: first every face of `a`, then every face of `b`, each with the faces of the result it became.

An entry can list:

- **One face.** The face lives on in the result. It may be trimmed: the cutting tool's bottom becomes a groove's floor, cut to the block's width.
- **Several faces.** The face was *split*: a groove across the top leaves two pieces of top, one each side.
- **No faces.** The face was deleted: nothing of it is left on the result's surface.

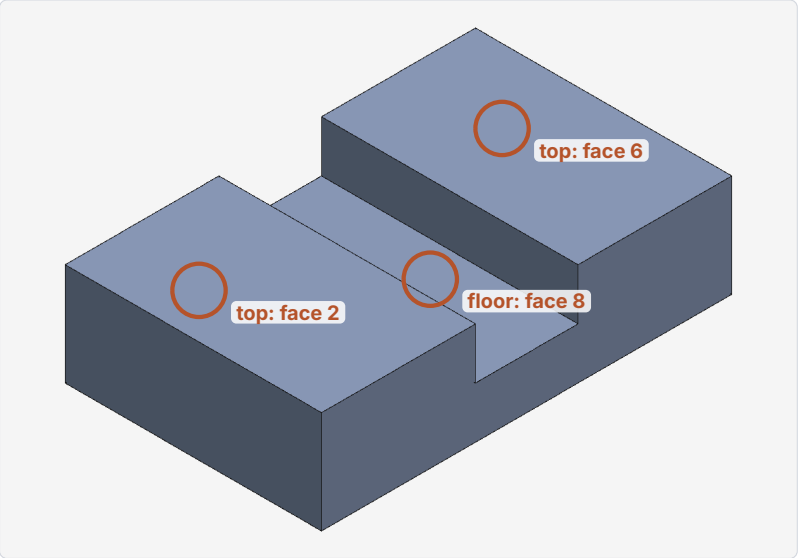


Figure 6.1 A groove cut across a block, with history. The block's top, face 5, was split into faces 2 and 6 of the result. The tool's bottom became the groove's floor, face 8.

YOU WILL	Cut a groove across a block with history, and find what became of each face.
YOU NEED	Saulitwerx built with OpenCascade (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save the part as `groove.step`:

TERMINAL

```
cargo run -p swx-kernel --features occt --example boolean_history -- groove.step
```

It prints the face counts, one line for each face of the block and of the tool, then the groove's floor:

```
OUTPUT
block 6 faces, tool 6 faces, part 10 faces
block face 0  x 0..0  y 0..25  z 0..10     one face   -> [0]
block face 1  x 40..40  y 0..25  z 0..10   one face   -> [5]
block face 2  x 0..40  y 0..0  z 0..10     one face   -> [1]
block face 3  x 0..40  y 25..25  z 0..10   one face   -> [3]
block face 4  x 0..40  y 0..25  z 0..0     one face   -> [4]
block face 5  x 0..40  y 0..25  z 10..10   split in 2 -> [2, 6]
tool  face 0  x 15..15  y -1..26  z 5..11  one face   -> [9]
tool  face 1  x 25..25  y -1..26  z 5..11  one face   -> [7]
tool  face 2  x 15..25  y -1..-1  z 5..11  deleted    -> []
tool  face 3  x 15..25  y 26..26  z 5..11  deleted    -> []
tool  face 4  x 15..25  y -1..26  z 5..5   one face   -> [8]
tool  face 5  x 15..25  y -1..26  z 11..11 deleted    -> []
groove floor is part face 8  x 15..25  y 0..25  z 5..5
part volume 8750.00 mm³
…  (the geometry engine's file report)
wrote groove.step
```

2. Read the line `block face 5`. It lies flat at z = 10: the block's top. The groove split it in two, faces 2 and 6 of the part.
3. Read the `tool` lines. The tool's two walls at x = 15 and x = 25 became the groove's walls, faces 9 and 7. Its bottom at z = 5 became the floor, face 8. Its two ends and its top stuck out of the block, so nothing of them is left.
4. Count the part's faces: the block's 6, plus one more piece of top, plus the tool's 3 that survive, make 10.

RESULT Every face of the grooved block traced back to the face it came from.

The sample calls `boolean_tracked` with the operation to do, `BooleanOp::Union`, `Cut` or `Intersect`, and the two solids. It returns the solid, the same as `union`, `cut` or `intersect` would, and an `OpHistory`:

```
let (part, history) = k.boolean_tracked(BooleanOp::Cut, &block, &tool)?;
for (operand, face, images) in &history.modified {
    // operand: Operand::A (the block) or Operand::B (the tool)
    // face: a face of that input; images: the faces of `part` it became
}
```

In Saulitwerx today: history covers faces only. Edges are found through their faces (Section 6.3). `history.generated` is always empty for a Boolean, because a Boolean makes no new faces, only the edges where the two solids meet. A cut or join made by an extrude (Section 7.3) doesn't report a history yet, and the part's history doesn't keep it.

6.5 Open a STEP file from another program

`import_step` reads any STEP file, and `swx-qa render --step` draws one (Chapter 14). Everything in the file comes in as one shape. Saulitwerx can't edit an imported shape yet; using it as a starting feature is on the roadmap.


CHAPTER 7

Extruding a profile

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

An *extrude* takes a flat shape and pushes it straight out into 3D, the way a cookie cutter pressed into dough makes a shape with straight sides. It is the most common way to start a part: draw the outline, then give it a thickness.

Think back to the plate of Chapter 3. There you made it in two steps: a block, then a cylinder cut out of it. With an extrude you draw the plate's outline once, rectangle and hole together, and push it up 5 mm. The hole comes with it, with no separate cut (Figure 7.1).

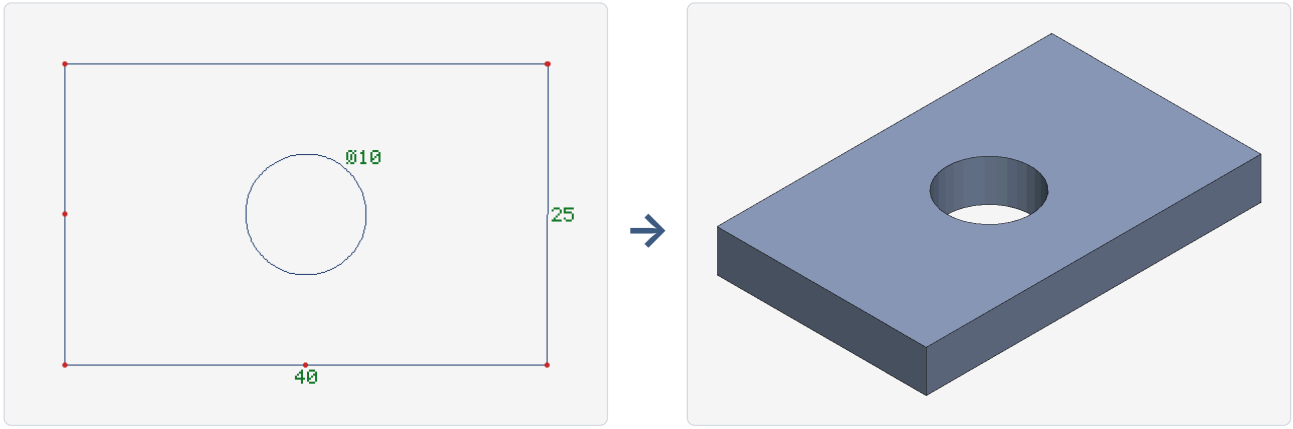

Profile: rectangle with a hole — Extruded 5 mm

Figure 7.1 An extrude pushes a flat profile straight out. The circle inside the rectangle becomes a hole all the way through.

Two more words come with it:

- The *workplane* is the flat plane the outline is drawn on. It has its own left–right and up–down directions, and a third direction straight out of it, called its *normal*. The extrude goes along the normal.
- The *extent* says how far the extrude goes: a distance one way, a length split evenly on both sides of the workplane, or up to a face of the part.

In Saulitwerx today: the geometry engine can make a flat face from outlines of lines, arcs and circles on any workplane, and extrude it by a distance or symmetrically. The result can be a new solid, or be joined to a part, cut from it or intersected with it in the same step (Section 7.3). A cut can also go through the whole part, however thick it is (Section 7.4), an extrude can end on a face of the part instead of at a distance (Section 7.6), and a plain extrude can report which face each piece of the outline became (Section 7.5). You type the outline's pieces into a small program; a sketch's regions (Section 5.7) can't be handed to the extrude yet, and the extrude isn't recorded in a part's history.

7.1 Extrude a profile

YOU WILL	Make the plate with a hole from its outline, in one extrude, and save it as STEP.
YOU NEED	Saulitwerx built with OpenCascade (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save the part as `extruded-plate.step`:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example extrude_plate -- extruded-plate.step
   ```

   It prints the solid's measurements, then the geometry engine's report about writing the file:

   OUTPUT

   ```
   volume        4607.30 mm³
   faces         7
   bounding box  [0.0, 0.0, 0.0] to [40.0, 25.0, 5.0]
   …  (the geometry engine's file report)
   wrote extruded-plate.step
   ```

2. Compare the numbers with the plate you made in Chapter 3. They are the same: 4607.30 mm³, 7 faces, 40 × 25 × 5 mm. The region's area, 921.46 mm² (Section 5.7), times the 5 mm height gives the volume.

3. Draw the part:

   TERMINAL

   ```
   target/release/swx-qa render --step extruded-plate.step -o extruded-plate.png
   ```

   Open `extruded-plate.png`. You should see the plate of Figure 7.1, with the hole showing light background through it.

RESULT The plate with a hole, made from its outline in one step instead of a block and a cut.

How the sample is built

The program is `crates/swx-kernel/examples/extrude_plate.rs`. It does three things.

1. **Describe each loop.** A `ProfileLoop` is a list of pieces, `Segment2`, in workplane coordinates. Each piece starts where the one before it ended, and the last one ends where the first began. A full circle is a loop on its own:

   ```
   let corners = [[0.0, 0.0], [40.0, 0.0], [40.0, 25.0], [0.0, 25.0]];
   let outer = ProfileLoop {
       segments: (0..4)
           .map(|i| Segment2::Line { start: corners[i], end: corners[(i + 1) % 4] })
           .collect(),
   };
   let hole = ProfileLoop {
       segments: vec![Segment2::Circle { center: [20.0, 12.5], radius: 5.0 }],
   };
   ```

2. **Make the face.** `make_face` takes the workplane, the outer loop, and a list of holes. The hole loops must lie inside the outer one:

   ```
   let face = k.make_face(&Workplane::XY, &outer, &[hole])?;
   ```

3. **Extrude it.** `Extent::Distance(5.0)` pushes the face 5 mm along the workplane's normal, which for the XY plane is up, +Z:

```rust
let part = k.extrude(&face, Extent::Distance(5.0))?;
```

> **TIP Direction doesn't matter**
>
> You can list a loop's pieces clockwise or counterclockwise, and any piece may run backwards. Saulitwerx puts them in order before the geometry engine sees them. What matters is that the ends meet: closer than 0.0000001 mm.

7.2 Choose the direction and the workplane

An extrude doesn't have to go up. A negative distance goes the other way, below the workplane. A symmetric extent splits the length evenly, half on each side, which is handy for a part whose middle should sit on the plane, like a bracket centered on its mounting plate.

YOU WILL	Extrude a slot up, down and symmetrically, and see where each result sits.
YOU NEED	Saulitwerx built with OpenCascade.
TIME	5 minutes.

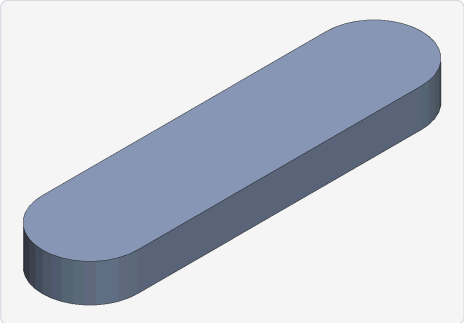


Figure 7.2 The slot you will make: two lines and two half-circles, extruded 4 mm.

1. Run the slot sample:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example extrude_slot -- extruded-slot.step
   ```

   It extrudes the slot three ways, 4 mm each, and prints each result's volume and height:

   OUTPUT

   ```
   Distance(4.0)   1514.16 mm³, z from 0 to 4
   Distance(-4.0)  1514.16 mm³, z from -4 to 0
   Symmetric(4.0)  1514.16 mm³, z from -2 to 2
   …  (the geometry engine's file report)
   wrote extruded-slot.step
   ```

2. Read the three lines. The volume is the same each time; only the position changes. `Distance(4.0)` sits on the workplane and rises to 4 mm; `Distance(-4.0)` hangs below it; `Symmetric(4.0)` straddles it, 2 mm each side.

3. Draw the first one:

   TERMINAL

   ```
   target/release/swx-qa render --step extruded-slot.step -o extruded-slot.png
   ```

You should see the slot of Figure 7.2: flat sides and round ends.

RESULT You can place an extrude above, below or across its workplane.

The slot's outline mixes lines and arcs. An arc, `Segment2::Arc`, runs counterclockwise from `start_angle` to `end_angle`, in radians measured from the workplane's left–right axis, just as in a sketch (Section 5.6). The right-hand end of the slot is the arc from $-\pi/2$ to $\pi/2$ around (30, 5).

Three workplanes are built in. To draw on another plane, give your own `Workplane` with an `origin`, an `x_dir` and a `normal` at right angles to it (Section 16.5).

Workplane	Left–right	Up–down	Extrude goes
`Workplane::XY`	+X	+Y	+Z
`Workplane::XZ`	+X	+Z	−Y
`Workplane::YZ`	+Y	+Z	+X

CAUTION **XZ extrudes toward −Y**


Looking down on the XZ plane so that X runs right and Z runs up, you are looking from the −Y side, and that is where a positive distance goes. If a part comes out on the wrong side, use a negative distance.

7.3 Join, cut or intersect with an extrude

Most extrudes change a part that already exists. A boss stands up from a plate; a pocket sinks into it. You could extrude a new solid and then combine it with a Boolean operation (Chapter 6), but an extrude can do both in one step. Its *extrude mode* says what happens to the extruded shape:

Mode	What you get
New solid	The extruded shape on its own. The part is left as it was.
Join	The part with the extruded shape added to it.
Cut	The part with the extruded shape taken out of it.
Intersect	Only the part's material that lies inside the extruded shape.

The part an extrude joins, cuts or intersects is its *target body*. A good habit: draw the outline on a face of the target, then extrude away from the part to add material, and into it to remove material. Figure 7.3 shows one block and the three combining modes.

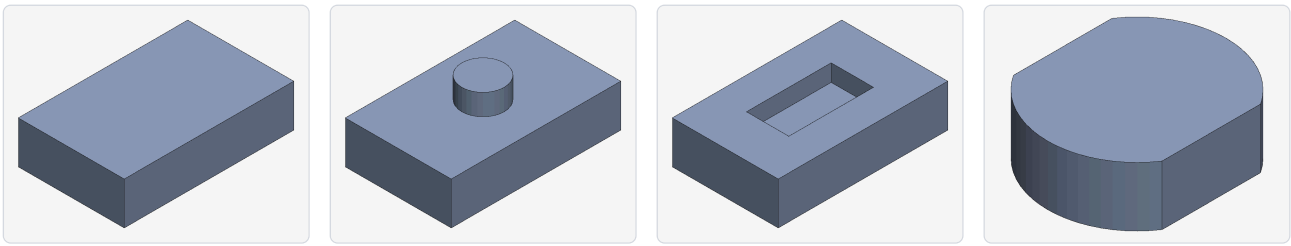

Target: 40 × 25 × 10 mm block | Join: circle, 5 mm up | Cut: rectangle, 4 mm down | Intersect: circle, 10 mm down

Figure 7.3 One target and three extrude modes, each outline drawn on the block's top face. The intersect keeps the part of the block inside a 30 mm circle: the block's long sides trim the circle flat. Each picture is scaled to fill its frame.

YOU WILL Add a boss to a block, sink a pocket into it, and trim it to a circle, each with one extrude.
YOU NEED Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME 10 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `modes`:

   TERMINAL
   ```
   cargo run -p swx-kernel --features occt --example extrude_modes -- modes
   ```

   It prints a line for the block and one for each mode, then two errors on purpose, then the files it wrote:

   OUTPUT
   ```
   target     10000.00 mm³   6 faces  z from 0 to 10
   join       10392.70 mm³   8 faces  z from 0 to 15
   cut         9200.00 mm³  11 faces  z from 0 to 10
   intersect   6505.89 mm³   7 faces  z from 0 to 10
   join, no target -> error: invalid input: extrude mode "join" needs a target body
   cut, all of it -> error: empty result: extrude cut leaves no solid (volume 0e0)
   …  (the geometry engine's file reports)
   wrote modes/modes-target.step
   wrote modes/modes-join.step
   wrote modes/modes-cut.step
   wrote modes/modes-intersect.step
   ```

2. Read the `join` line. The block grew by the boss: a 10 mm circle 5 mm tall adds 392.70 mm³, and the part now reaches 15 mm up.
3. Read the `cut` line. A 20 × 10 mm rectangle cut 4 mm deep removes 800 mm³. The height stays 10 mm, and the pocket's floor and four walls bring the faces to 11.
4. Read the `intersect` line. What is left is the block's material inside a 30 mm circle: less than either one on its own.
5. Draw the cut result:

   TERMINAL
   ```
   target/release/swx-qa render --step modes/modes-cut.step -o modes-cut.png
   ```

   Open `modes-cut.png`. You should see the block with a pocket in its top, as in Figure 7.3. Draw the other files the same way.

RESULT A boss, a pocket and a trimmed block, each made by one extrude against the same target. The block itself is never changed: each mode returns a new solid.

How the sample is built

The program is `crates/swx-kernel/examples/extrude_modes.rs`. The outlines sit on the block's top face, a workplane at z = 10:

```
const TOP: Workplane = Workplane {
    origin: [0.0, 0.0, 10.0],
    x_dir: [1.0, 0.0, 0.0],
    normal: [0.0, 0.0, 1.0],
};
```

Each mode is one call to `extrude_feature`. It takes the face, the extent, the mode and the target. The join goes up, +5 mm, away from the block; the cut goes down, −4 mm, into it:

```
let joined = extrude_feature(&k, &boss, Extent::Distance(5.0),
    ExtrudeMode::Join, Some(&block))?;
let cut = extrude_feature(&k, &pocket, Extent::Distance(-4.0),
    ExtrudeMode::Cut, Some(&block))?;
```

For `ExtrudeMode::NewSolid` the target isn't used, so pass `None`. That gives the same solid as `extrude` (Section 7.1).


> **TIP** **Which way is "into" the part?**
>
> The extrude goes along the workplane's normal for a positive distance. On a top face whose normal points up, a cut needs a negative distance. If a cut leaves the part unchanged, it probably went the wrong way, into empty space.

> **CAUTION** **A result must have something left**
>
> A cut that removes the whole target, or an intersect whose shapes don't overlap, leaves nothing. That is an error, `empty result: …`, not an empty part. The sample's last line shows one: a rectangle larger than the block, cut all the way through.


7.4 Cut through the whole part

Holes for bolts and pins usually go all the way through a part. You could measure the part and cut exactly that deep, but if the part later gets thicker, the hole would stop short. A *through-all* cut has no depth of its own: it goes right through the target body, whatever its size.

A through-all cut still needs a direction. It can go along the workplane's normal, against it, or both ways at once. Both ways is the one to use when the outline sits on a plane in the middle of the part (Figure 7.4).

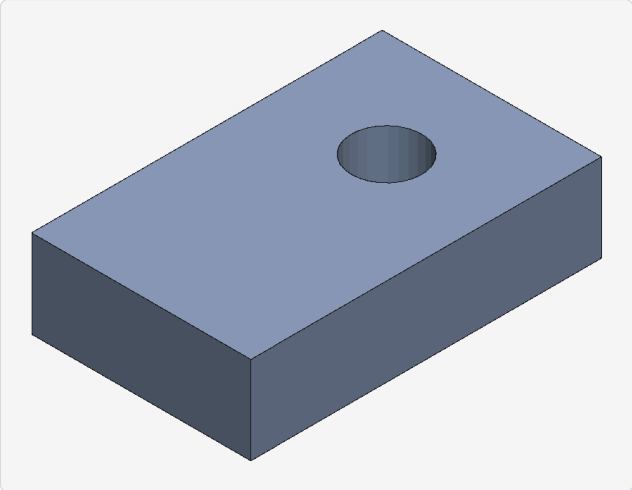

Down from the top face (reversed)

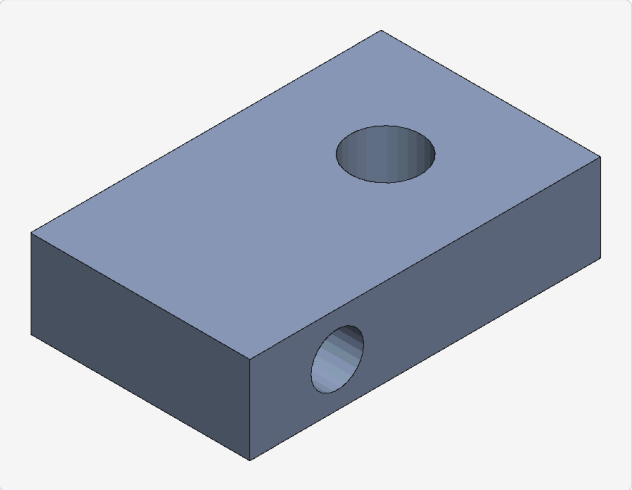

Then both ways from the middle

Figure 7.4 Two through-all cuts in a 40 × 25 × 10 mm block. The first hole is drawn on the top face and cut against its normal, down. The second is drawn on a plane through the middle of the block and cut both ways, out of the front and the back.

YOU WILL	Cut two holes right through a block, one from its top face and one from a plane in its middle.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `through`:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example extrude_through_all -- through
   ```

   It prints a line for the block and one for each cut, then two errors on purpose, then the files it wrote:

OUTPUT

```
block            10000.00 mm³   6 faces
down (reversed)   9497.35 mm³   7 faces
both ways         8790.49 mm³   8 faces
up (normal) -> error: invalid input: the through-all cut misses the target: it removes nothing
join -> error: invalid input: a through-all extent works only with the cut mode, not "join"
…  (the geometry engine's file reports)
wrote through/through-down.step
wrote through/through-both.step
```

2. Read the `down` line. An 8 mm hole through 10 mm of block removes 502.65 mm³, and adds one face: the hole's wall.
3. Read the `both ways` line. A 6 mm hole through the block's 25 mm width removes another 706.86 mm³. The cut started in the middle of the block and went out through both sides.
4. Read the first error. From the top face, the normal points up, away from the block. A through-all cut that way finds nothing to remove, and says so.
5. Draw the result with both holes:

   TERMINAL

   ```
   target/release/swx-qa render --step through/through-both.step -o through-both.png
   ```

   Open `through-both.png`. You should see the block of Figure 7.4, with a hole down through its top and a smaller one through its side.

RESULT Two holes that go right through the block. If the block were 50 mm thick instead of 10, the same two cuts would still go through it.

How the sample is built

The program is `crates/swx-kernel/examples/extrude_through_all.rs`. The extent is `Extent::ThroughAll`, with a direction:

Direction	The cut goes
`ThroughDirection::Normal`	Along the workplane's normal.
`ThroughDirection::Reversed`	Against the normal.
`ThroughDirection::Both`	Both ways from the workplane.

The first hole is drawn on the top face, so it goes against the normal, down into the block:

```
let drilled = extrude_feature(&k, &top_hole,
    Extent::ThroughAll(ThroughDirection::Reversed),
    ExtrudeMode::Cut, Some(&block))?;
```

The second is drawn on a workplane through the middle of the block, at y = 12.5, and cut from the result of the first:

```
let cross = extrude_feature(&k, &cross_hole,
    Extent::ThroughAll(ThroughDirection::Both),
    ExtrudeMode::Cut, Some(&drilled))?;
```

> **NOTE** **How far is “all”?**
>
> Saulitwerx measures the outline and the target, and makes the cut a little longer than the distance needed to clear the whole target. That is why a through-all extent works only with `extrude_feature` and the cut mode: it needs a target to measure. `extrude` on its own refuses it.

> **TIP** **A missed cut is an error**
>
> If a through-all cut removes nothing, Saulitwerx refuses it instead of handing back the part unchanged, so a cut that went the wrong way never passes unnoticed. Change the direction, or move the outline over the part.

7.5 Find the faces an extrude made

Most features after the first one point at something already in the part: round *this* edge, draw on *that* face, cut down to *this* face. The kernel numbers every face and edge (Section 6.3), but the numbers come from the geometry engine, not from you, so you can’t tell in advance which number the top of the plate gets.

An extrude can tell you. Ask for it *with history*, and next to the solid you get a record of where each face came from. Faces of an extrude come in two sorts:

- The two *caps*: the flat faces at each end of the push. On the plate, the bottom and the top.
- One *side face* for each edge of the outline: the wall it swept as it moved. A straight edge sweeps a flat wall; the hole’s circle sweeps a round one.

Follow one piece of your outline through both steps, and you know its face: the rectangle’s line at x = 40 became edge 1 of the flat face, and edge 1 swept face 1 of the plate (Figure 7.5).

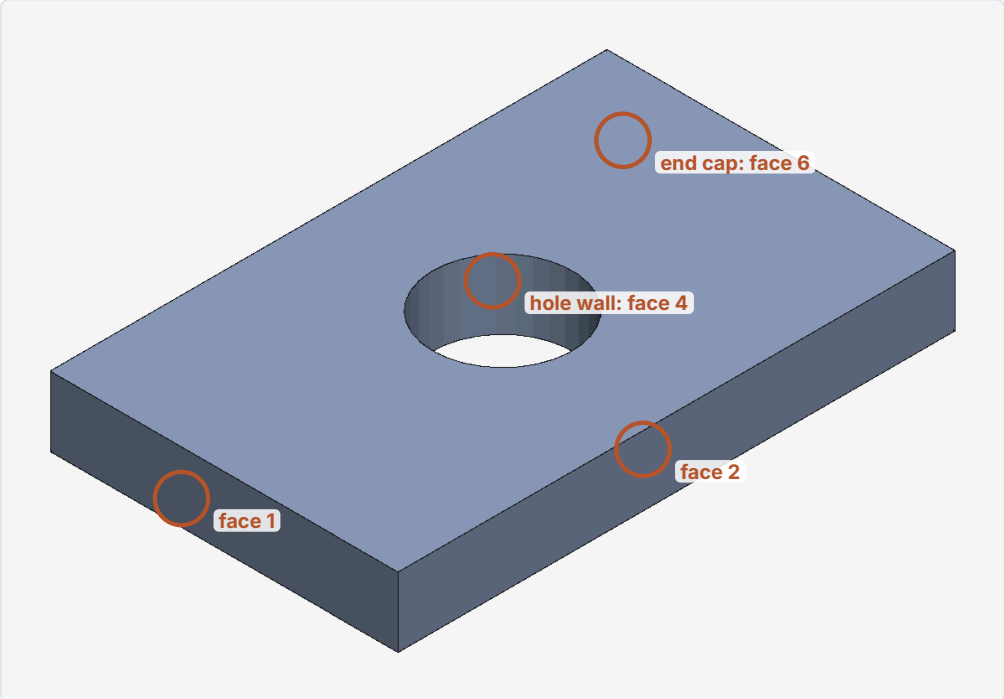


Figure 7.5 The plate’s faces, as its extrude history names them. Face 1 was swept by the rectangle’s line at x = 40, face 2 by its line at y = 25, face 4 by the hole’s circle. The start cap, face 5, is underneath.

In Saulitwerx today: the geometry engine keeps this record for a plain extrude, the one that makes a new solid. You get it in your own program. The extrude with join, cut or intersect doesn't give one yet, the part's history doesn't keep it, and no later feature can use it to find a face yet.

YOU WILL	Extrude the plate with history, and find which face each piece of its outline became.
YOU NEED	Saulitwerx built with OpenCascade (Chapter 2).
TIME	5 minutes.

1. Run the sample program:

TERMINAL

```
cargo run -p swx-kernel --features occt --example extrude_history
```

It prints the two caps, then one line for each piece of the outline, then where the top is:

OUTPUT

```
start cap     face 5
end cap       face 6
outer 0  ->  edge 0  ->  face 0   x 0..40  y 0..0  z 0..5
outer 1  ->  edge 1  ->  face 1   x 40..40  y 0..25  z 0..5
outer 2  ->  edge 2  ->  face 2   x 0..40  y 25..25  z 0..5
outer 3  ->  edge 3  ->  face 3   x 0..0  y 0..25  z 0..5
hole 0  ->  edge 4  ->  face 4   x 15..25  y 7.5..17.5  z 0..5
end cap is    x 0..40  y 0..25  z 5..5
```

2. Read the line `outer 1`. The second line of the rectangle, from (40, 0) to (40, 25), became edge 1 of the face, and edge 1 swept face 1. The box after it shows where that face is: flat at x = 40, the full 25 mm wide and 5 mm tall. That is the short side at the front left in Figure 7.5.
3. Read the line `hole 0`. The circle swept face 4, the hole's wall: 10 mm across and 5 mm tall, around the hole's center.
4. Read the last line. The end cap lies flat at z = 5 mm: it is the top of the plate.

RESULT Every face of the plate, named by the piece of the outline that made it. Faces 0 to 4 are the sides, 5 the bottom and 6 the top.

How the sample is built

The program is `crates/swx-kernel/examples/extrude_history.rs`. It uses the outline of `extrude_plate`, and three calls do the work.

1. **Make the face with history.** `make_face_tracked` takes the same inputs as `make_face`. It also returns, for each loop (the outer one first, then the holes), the edge each piece became, in the order you listed the pieces:

```
let (face, edges) = k.make_face_tracked(&Workplane::XY, &outer, &[hole])?;
```

Here `edges[0][1]` is the edge made from the outer loop's second piece.

2. **Extrude it with history.** `extrude_tracked` takes the same inputs as `extrude`, and returns an `ExtrudeHistory` with the solid:

```
let (part, history) = k.extrude_tracked(&face, Extent::Distance(5.0))?;
```

`history.start_cap` and `history.end_cap` are the two caps. `history.sides` holds one pair per edge of the face: the edge, then the side face it swept.

3. **Follow an edge to its face**, and ask where that face is. `sub_shape_bounding_box` gives the smallest axis-aligned box around one face, edge or vertex:

```
let side = history.sides.iter()
    .find(|(e, _)| e == edge)
    .map(|(_, f)| *f)
    .ok_or("edge not in history")?;
let bb = k.sub_shape_bounding_box(&part, side)?;
```

CAUTION **The start cap isn't always the face you drew**

The sweep runs from the start cap to the end cap, along the workplane's normal. With a positive distance, the start cap is where your outline was drawn. With a negative one, the sweep starts below it: the end cap is the face you drew, and the start cap is the far end. With a symmetric extent, neither cap is on the workplane. When it matters, check with `sub_shape_bounding_box`, as the sample does.

NOTE **Same plate, other numbers**

The plate of Section 6.3, made as a block with a cylinder cut out, has its hole's wall as face 6. The extruded plate has it as face 4. The two shapes are the same; the steps that made them differ, and so do the numbers. That is why a number is only good for the shape it came from, and why the history is worth having: it tells you which number is which.

TIP **Your order, not the engine's**

However you list a loop's pieces, clockwise or counterclockwise, the edges come back in your order: the second piece you gave is always `edges[loop][1]`. You don't have to know how Saulitwerx reordered the loop.

7.6 Extrude up to a face

Often the depth you want isn't a number but a place on the part: a post that should end level with the top, a pocket that should go down exactly to a step. You could measure the height and type it in, but if the part changes later, the number is wrong. An extent can name a face of the target body instead. A *to-face* extent goes from the workplane to that face. A *between-faces* extent goes from one face to another, wherever the outline was drawn.

The face has to be flat and parallel to the workplane, like a step or a top face. The extrude ends on the plane that face lies on, so the face can be on either side of the workplane: Saulitwerx works out which way to go.

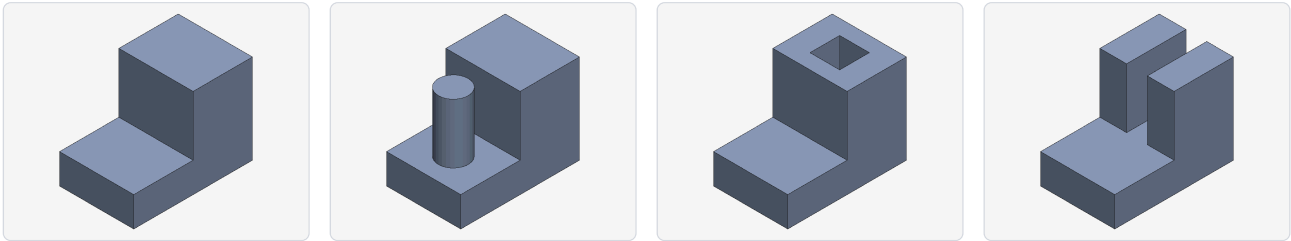


Figure 7.6 Three extrudes whose depth comes from faces of the target. The step face is the top of the low part, 10 mm up; the top face is the top of the tall part, 30 mm up. Each picture is scaled to fill its frame.

In Saulitwerx today: you give the face by its number in the target (Section 6.3), so your program finds it first. The face must be flat; a round face, or one standing at an angle to the workplane, is refused. The face's number belongs to the target as it is, so if the target changes, find the face again.

YOU WILL	Add a post that ends level with a part's top, a pocket that stops at its step, and a slot between the two, each with one extrude.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	10 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `toface`:

   TERMINAL
   ```
   cargo run -p swx-kernel --features occt --example extrude_to_face -- toface
   ```

   It prints the block and its two faces, a line for each extrude, then two errors on purpose, then the files it wrote:

   OUTPUT
   ```
   stepped block  20000.00 mm³  14 faces  z from 0 to 30
   step face is face 12, top face is face 7
   post to top    21570.80 mm³  16 faces  z from 0 to 30
   pocket to step 18000.00 mm³  19 faces  z from 0 to 30
   slot between   17200.00 mm³  20 faces  z from 0 to 30
   from 10 to 30   2800.00 mm³   6 faces  z from 10 to 30
   new solid -> error: invalid input: a to-face or between-faces extent needs a target body: it
   works with the join, cut and intersect modes, not "new solid"
   side face -> error: invalid input: target face 11 (normal [1.0, 0.0, -0.0]) is not parallel to
   the workplane (normal [0.0, 0.0, 1.0])
   …  (the geometry engine's file reports)
   wrote toface/toface-target.step
   wrote toface/toface-post.step
   wrote toface/toface-pocket.step
   wrote toface/toface-slot.step
   ```

2. Read the second line. The program looked through the block's faces and found the step face, number 12, and the top face, number 7.
3. Read the `post to top` line. The post is drawn on the step face and joined up to the top face: a 10 mm circle 20 mm tall adds 1570.80 mm³. Nobody typed 20 mm; it is the distance between the two faces.
4. Read the `pocket to step` line. The pocket is drawn on the top face and cut to the step face. The step face is below the outline, so the cut goes down, 20 mm, and removes 10 × 10 × 20 = 2000 mm³.
5. Read the `slot between` line. The slot is drawn on the XY plane at the very bottom, z = 0, but it is cut only between the step face and the top face: a 20 × 7 mm rectangle, 20 mm tall, removes 2800 mm³ and splits the tall part in two.
6. Draw the slot result:

   TERMINAL
   ```
   target/release/swx-qa render --step toface/toface-slot.step -o toface-slot.png
   ```

   Open `toface-slot.png`. You should see the block of Figure 7.6 with its tall part split by a slot. Draw the other files the same way.

RESULT Three extrudes whose depths come from the part itself. If the tall part were 50 mm high instead of 30, the post would still end level with its top, and the slot would still reach the step.

How the sample is built

The program is `crates/swx-kernel/examples/extrude_to_face.rs`. It does two new things.

1. **Find the faces.** `face_plane(s, face)` gives a flat face's plane: a point on it and its *outward normal*, the direction pointing out of the solid. The sample's `find_face` goes through every face and keeps the one whose normal points up and whose plane is at the height it wants. A round face has no plane, and `face_plane` refuses it, so the search skips it:

```
for index in 0..k.sub_shape_count(s, TopoKind::Face)? {
    let face = SubShape { kind: TopoKind::Face, index };
    if let Ok((p, n)) = k.face_plane(s, face) {
        if dot(n, normal) > 0.999_999 && (dot(p, normal) - at).abs() < 1e-6 {
            return Ok(face);
        }
    }
}
```

2. **Name the faces in the extent.** `Extent::ToFace(face)` and `Extent::BetweenFaces(first, second)` take faces of the target, and work with `extrude_feature` in the join, cut and intersect modes:

```
let joined = extrude_feature(&k, &post, Extent::ToFace(top),
    ExtrudeMode::Join, Some(&stepped))?;
let slotted = extrude_feature(&k, &slot, Extent::BetweenFaces(step, top),
    ExtrudeMode::Cut, Some(&stepped))?;
```

Behind the scenes, Saulitwerx measures how far each face's plane is from the workplane, along its normal, and turns the face extent into a plain one. A to-face extent becomes a distance: +20 mm for the post, −20 mm for the pocket. A between-faces extent becomes a *from–to* extent, `Extent::FromTo(start, end)`: from 10 mm to 30 mm along the normal for the slot. You can use a from–to extent yourself, with no target at all, as the sample's `from 10 to 30` line does:

```
let block = k.extrude(&slot, Extent::FromTo(10.0, 30.0))?;
```

> **TIP** **The order of the two faces doesn't matter**
>
> Either order gives the same slot, from the step up to the top or from the top down to the step. The same goes for the two numbers of a from–to extent.

> **CAUTION** **A face extent needs a target**
>
> The faces belong to the target body, so a to-face or between-faces extent works only with `extrude_feature` and the join, cut or intersect mode. With the new-solid mode, as in the sample's first error, or with `extrude` or `extrude_tracked`, it is refused.

7.7 Common mistakes

- **The ends don't quite meet.** A loop whose last piece stops short of the first is refused with `outer loop: consecutive segments don't meet within 0.0000001`. Compute shared corners once and reuse them, as `extrude_plate` does with `corners`.
- **A circle mixed with other pieces.** A full circle must be a loop of its own. To round a corner, use an arc.

- **A hole outside the outline, or touching its edge.** The geometry engine refuses the face: `make_face failed: the face is invalid …`. Keep every hole wholly inside the outer loop.
- **An outline that crosses itself,** like a figure eight. Same message; or, when the two halves are the same size, `outer loop encloses no area`, because their areas cancel out. Split it into separate outlines.
- **A distance of zero.** An extrude has to go somewhere: `extrude distance must be finite and non-zero, got 0`.
- **Join, cut or intersect with no target.** These modes need a part to work on: `invalid input: extrude mode "cut" needs a target body`. Pass the part as `Some(&part)`, or use `ExtrudeMode::NewSolid`.
- **A cut that goes the wrong way.** It misses the part, and the part comes back unchanged. Check the sign of the distance (Section 7.3).
- **A cut that removes everything,** or an intersect that doesn't overlap: `empty result: extrude cut leaves no solid …`. Make the outline smaller than the face it cuts, or move it over the part.
- **A through-all extent with another mode.** Only a cut can go through all: `a through-all extent works only with the cut mode, not "join"`. Give a distance for a join or an intersect.
- **A through-all extent with history.** `extrude_tracked` has no target to measure, so it refuses through-all just as `extrude` does: `a through-all extent needs a target body to measure; use extrude_feature with the cut mode`.
- **A face number from another shape.** The numbers in an extrude history belong to that solid. After a cut, face 6 may be another face, or not exist: `sub_shape_bounding_box` then gives the wrong face's box, or `face index 7 is out of range: the shape has 7 faces` (Section 6.3). Take the numbers again from the step that made the shape you ask about.
- **A through-all cut the wrong way.** It misses the part: `the through-all cut misses the target: it removes nothing`. On a top face, use `ThroughDirection::Reversed`, or `Both` (Section 7.4).
- **A face that isn't parallel to the workplane.** A to-face extrude can only end on a face that faces the same way as the outline, or the opposite way: `target face 11 (normal …) is not parallel to the workplane (normal …)`. Pick a face whose normal matches the workplane's, or its reverse (Section 7.6).
- **A round face.** A to-face extrude can't end on a curved face: `face 2 is not planar`. Use a flat face.
- **A face in the workplane.** If the face lies on the same plane as the outline, there is nothing to extrude: `face 5 lies in the workplane: the to-face extrude has zero length`. The same goes for two faces on one plane: `faces 7 and 9 are coplanar: the between-faces extrude has zero length`.

CHAPTER 8


Revolving a profile

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

A *revolve* turns a flat shape around a line, the way a potter's wheel turns a lump of clay into a pot. Every point of the shape sweeps a circle around that line, so the result is round: a shaft, a knob, a washer, a bottle.

Where an extrude (Chapter 7) pushes an outline straight out, a revolve swings it around. You draw only half of the part's cross-section, the half on one side of the center line, and the revolve makes the rest.

The line the shape turns around is the *axis of revolution*. The *revolve angle* says how far it turns: a full turn makes a closed, round part; less than a full turn makes a wedge, like a slice of a cake.

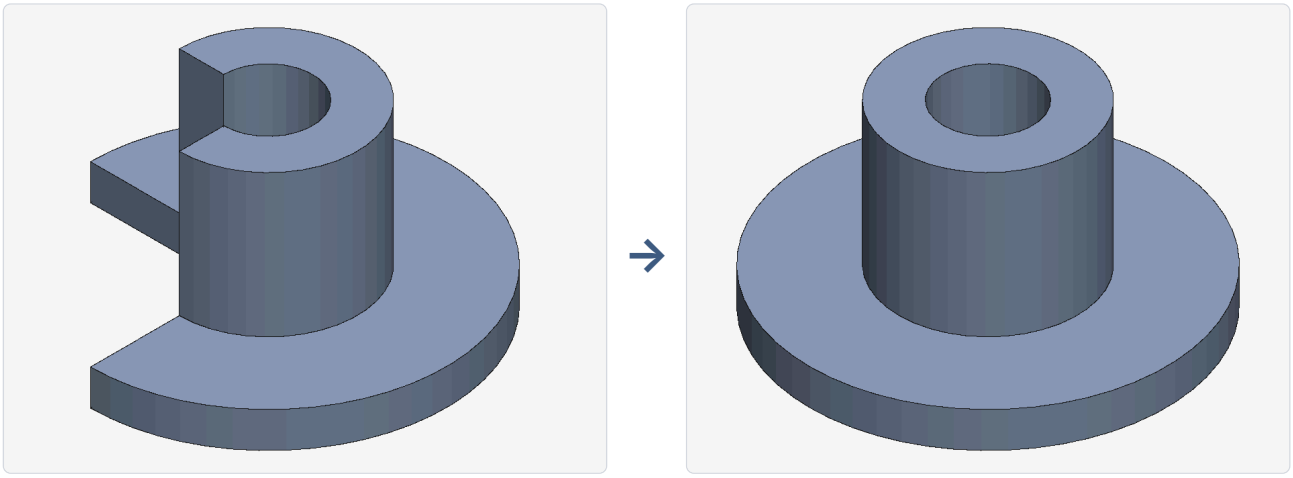

Three quarters of a turn A full turn

Figure 8.1 A flanged bushing made by one revolve. Stopped at three quarters of a turn (left), the open quarter shows the outline that was turned: an L-shape beside a hollow center. A full turn (right) closes the part.

In Saulitwerx today: the geometry engine can revolve a flat face from `make_face` about any axis, by any angle up to a full turn. Like an extrude, the result can be a new solid, or be joined to a part, cut from it or intersected with it in the same step. Before it turns anything, it checks that the axis lies in the outline's plane and stays clear of the outline, and says plainly when it doesn't (Section 8.3). You type the outline's pieces into a small program; a sketch's regions can't be handed to the revolve yet, and the revolve isn't recorded in a part's history.

8.1 Revolve a profile

YOU WILL	Make a flanged bushing from half its cross-section, with a full turn and with three quarters of a turn.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	10 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `revolve`:

   TERMINAL
   ```
   cargo run -p swx-kernel --features occt --example revolve_bushing -- revolve
   ```

   It prints a line for each part, then five errors on purpose, then the files it wrote. The two longest error lines are broken here to fit the page; on your screen each is one line:

   OUTPUT
   ```
   full turn   8482.30 mm³   6 faces  x from -20 to 20
   270°        6361.73 mm³   8 faces  x from -20 to 20
   grooved     8362.92 mm³  10 faces  x from -20 to 20
   360 -> error: invalid input: revolve angle must be in (0, 2π] radians, got 360
   zero axis -> error: invalid input: revolve axis direction must be non-zero
   cut, no target -> error: invalid input: revolve mode "cut" needs a target body
   axis through the outline -> error: invalid input: the profile crosses
     the revolve axis (origin [12.0, 0.0, 0.0], direction [0.0, 0.0, 1.0]):
     it reaches 7 on one side and 8 on the other
   axis out of the plane -> error: invalid input: revolve axis (origin
     [0.0, 0.0, 0.0], direction [0.0, 1.0, 0.0]) is not in the profile's
     plane (through [0.0, 0.0, 0.0], normal [0.0, -1.0, 0.0])
   …  (the geometry engine's file reports)
   wrote revolve/bushing.step
   wrote revolve/bushing-270.step
   wrote revolve/bushing-grooved.step
   ```

2. Read the `full turn` line. The outline reaches 20 mm from the axis, so the part runs from x = −20 to 20 mm: 40 mm across. The six faces are the bore, the tube's outside, the flange's rim, and the top, the flange's top and the bottom.

3. Read the `270°` line. Three quarters of a turn gives three quarters of the volume, 6361.73 mm³. The two flat ends of the wedge add two faces.

4. Draw the three-quarter part:

   TERMINAL
   ```
   target/release/swx-qa render --step revolve/bushing-270.step -o bushing-270.png
   ```

   Open `bushing-270.png`. You should see the left picture of Figure 8.1: the open quarter shows the L-shaped outline that was turned. Draw `revolve/bushing.step` the same way to see the full part.

RESULT A round part made from one flat outline. The bushing's bore, tube and flange came from a single six-sided shape.

How the sample is built

The program is `crates/swx-kernel/examples/revolve_bushing.rs`. It does three things.

1. **Draw half the cross-section.** The outline sits on the XZ workplane, so left–right is X, the distance from the axis, and up–down is Z, the height. It starts 5 mm from the axis, which leaves a 10 mm bore down the middle:

```
let outline = polygon(&[
    [5.0, 0.0], [20.0, 0.0], [20.0, 4.0],
    [10.0, 4.0], [10.0, 20.0], [5.0, 20.0],
]);
let section = k.make_face(&Workplane::XZ, &outline, &[])?;
```

`polygon` is a small helper in the sample that joins the points with lines, the last back to the first.

2. **Give the axis.** An `Axis` is a point on the line and the line's direction. Here it is the Z axis, through the origin and pointing up:

```
let z_axis = Axis { origin: [0.0, 0.0, 0.0], dir: [0.0, 0.0, 1.0] };
```

3. **Revolve it.** `revolve_feature` takes the face, the axis, the angle in radians, the mode and the target. `TAU` is a full turn, 2π; `1.5 * PI` is three quarters of one:

```
let bushing = revolve_feature(&k, &section, z_axis, TAU,
    ExtrudeMode::NewSolid, None)?;
let cutaway = revolve_feature(&k, &section, z_axis, 1.5 * PI,
    ExtrudeMode::NewSolid, None)?;
```

> **NOTE** **How close is close enough?**
>
> The checks allow 0.0000001 mm (`REVOLVE_AXIS_TOLERANCE`), the same small gap the geometry engine treats as zero. An axis that misses the plane by less than that still counts as in it, and an outline that pokes past the axis by less than that still counts as touching it.

> **TIP** **Which way does it turn?**
>
> Point your right thumb along the axis direction: your fingers curl the way a positive angle turns. Here the axis points up, so the outline swings from +X towards +Y, counterclockwise seen from above. A full turn looks the same either way.

> **CAUTION** **Radians, not degrees**
>
> The geometry engine takes the angle in radians: a full turn is 2π, about 6.283, and 360 is refused. To work in degrees, multiply by π/180, or write `360.0_f64.to_radians()` .

8.2 Cut or join with a revolve

A revolve uses the same four modes as an extrude (Section 7.3): new solid, join, cut and intersect, with a target body for the last three. A revolve cut is how you make a round groove, such as the seat for a sealing ring around a shaft (Figure 8.2).

YOU WILL	Cut a groove around the bushing with a second revolve.
YOU NEED	The sample run of Section 8.1.
TIME	5 minutes.

1. Read the `grooved` line of the output in Section 8.1. The groove took 119.38 mm³ from the bushing, and its floor and two walls added three faces, bringing the bushing's six faces to nine, plus one more where the groove splits the tube's outside in two: ten.
2. Draw the grooved part:

```
TERMINAL
target/release/swx-qa render --step revolve/bushing-grooved.step -o bushing-grooved.png
```

   Open `bushing-grooved.png`. You should see Figure 8.2: a narrow groove around the tube, halfway up.

RESULT A groove around a round part, made by turning a small rectangle around the same axis as the part itself.

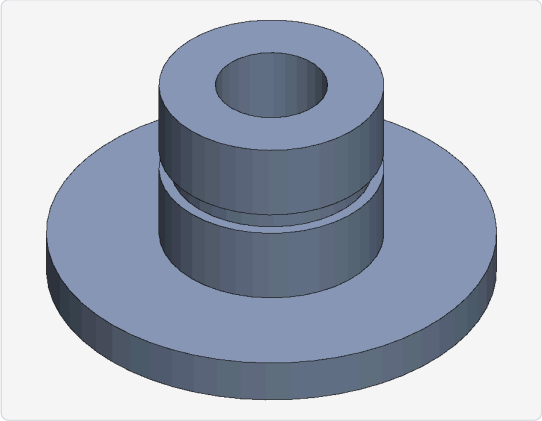


Figure 8.2 The bushing with a groove around its tube: a small rectangle, revolved a full turn and cut from the part.

The groove's outline is a 2 × 2 mm square that straddles the tube's outer wall, at x = 10 mm. Only the half inside the tube removes material; the other half turns through empty space. Letting a cutting outline overlap the edge like this makes sure the groove opens cleanly onto the surface:

```
let groove = k.make_face(&Workplane::XZ,
    &polygon(&[[9.0, 11.0], [11.0, 11.0], [11.0, 13.0], [9.0, 13.0]]), &[])?;
let grooved = revolve_feature(&k, &groove, z_axis, TAU,
    ExtrudeMode::Cut, Some(&bushing))?;
```

The rules are the extrude's: join, cut and intersect need a target, a result with nothing left is an `empty result` error, and the target itself is never changed. `ExtrudeMode` is the name of the mode type for both features.

8.3 Common mistakes

- **Degrees instead of radians.** `revolve angle must be in (0, 2π] radians, got 360`. Convert the angle (Section 8.1).
- **An angle of zero, or a negative one.** A revolve has to turn: the same message. To turn the other way, reverse the axis direction.
- **An axis with no direction.** `revolve axis direction must be non-zero`. Give the axis a direction, such as `[0.0, 0.0, 1.0]`.
- **The axis runs through the outline.** The outline would sweep through itself, so the revolve is refused: `the profile crosses the revolve axis (…): it reaches 7 on one side and 8 on the other`. The two numbers say how far, in millimeters, the outline reaches on each side; the sample's flange runs from 5 to 20 mm, and an axis at 12 mm splits it 7 and 8. Move the axis, or the outline, so the whole outline is on one side. Touching the axis is fine, and makes a solid center with no bore.

- **The axis isn’t in the outline’s plane.** An axis that is tilted out of the plane, stands straight out of it, or runs beside it is refused: `revolve axis (…) is not in the profile's plane (through …, normal …)`. The message gives a point on the plane and its normal, the direction straight out of it; the axis direction must be at right angles to that normal, and the axis point must lie on the plane. Draw the outline on a plane that contains the axis, as the sample does with the XZ plane and the Z axis.
- **A shape that isn’t one flat face.** `revolve needs a single planar face`. Give the revolve a face from `make_face`, not a solid.
- **Join, cut or intersect with no target.** `revolve mode "cut" needs a target body`. Pass the part as `Some(&part)`, or use `ExtrudeMode::NewSolid`.

CHAPTER 9


Rounding and bevelling edges

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

Sharp edges are rare on real parts. They cut hands, chip easily, and crack under load. So designers soften them, in one of two ways:

- A *fillet* rounds an edge into a smooth curve, like the corners of a phone. Its size is a *radius*: the radius of the curve that replaces the edge.
- A *chamfer* cuts an edge off at an angle, leaving a narrow flat face, like the bevel on the edge of a tabletop. Its size is a *distance*: how far the cut reaches back along each of the two faces that meet at the edge. It can also reach back further on one face than the other (Section 9.2).

Both work on edges of a solid you already have. You pick the edges, give one size, and get back a new solid with those edges softened (Figure 9.1).

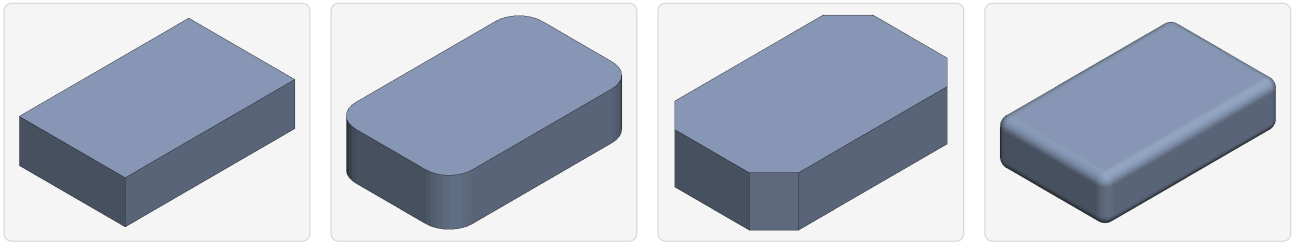

Block: 40 × 25 × 10 mm | Fillet 5 mm, 4 edges | Chamfer 5 mm, 4 edges | Fillet 2 mm, all edges

Figure 9.1 One block, three ways to soften its edges. The fillet and the chamfer take the same four upright corner edges and the same size, 5 mm. The last picture rounds every edge at once. Each picture is scaled to fill its frame.

In Saulitwerx today: the geometry engine can fillet edges with one radius, and chamfer them with one distance, the same on both faces. A fillet of one edge can also change its radius from one end to the other (Section 9.3), and a chamfer can take two different distances, or a distance and an angle (Section 9.2). You give the edges, and for an uneven chamfer the face to measure from, by their numbers in the solid (Section 6.3), so your program finds them first. A fillet or a chamfer isn't recorded in a part's history yet.

9.1 Fillet and chamfer edges

YOU WILL	Round the four corners of a block, bevel them instead, and round every edge at once.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `edges`:

   TERMINAL
   ```
   cargo run -p swx-kernel --features occt --example fillet_chamfer -- edges
   ```

   It prints the block, the edges it picked, one line for each result, then four errors on purpose, then the files it wrote:

   OUTPUT
   ```
   block              10000.00 mm³   6 faces  12 edges
   upright edges: [0, 2, 4, 6]
   fillet r 5          9785.40 mm³  10 faces  24 edges
   chamfer 5           9500.00 mm³  10 faces  24 edges
   fillet all, r 2     9753.19 mm³  26 faces  56 edges
   r 15 -> error: kernel failure: fillet failed
   no edges -> error: invalid input: the edge list is empty
   a face -> error: invalid input: expected an edge, got face 0
   r 0 -> error: invalid input: fillet radius must be finite and > 0, got 0
   …  (the geometry engine's file reports)
   wrote edges/edges-fillet.step
   wrote edges/edges-chamfer.step
   wrote edges/edges-all.step
   ```

2. Read the second line. Of the block's 12 edges, numbers 0, 2, 4 and 6 are the four that stand upright at its corners.
3. Read the `fillet r 5` line. Each corner lost a 5 × 5 mm square less a quarter circle, 5.37 mm², over the block's 10 mm height. Four corners make 214.60 mm³. Each rounded corner is a new face, so the block now has 10.
4. Read the `chamfer 5` line. Each corner lost a triangle with two 5 mm sides, 12.5 mm², so four corners take 500 mm³. The new faces are flat.
5. Read the `r 15` line. A 15 mm fillet doesn't fit: on the block's 25 mm side, the two rounded corners would need 15 + 15 = 30 mm. The geometry engine can't build it and says so. The block is unchanged.
6. Draw the filleted block:

   TERMINAL
   ```
   target/release/swx-qa render --step edges/edges-fillet.step -o edges-fillet.png
   ```

   Open `edges-fillet.png`. You should see the block of Figure 9.1 with its four corners rounded. Draw the other files the same way.

RESULT Three softened blocks, each made by one call. The block itself is left as it was.

How the sample is built

The program is `crates/swx-kernel/examples/fillet_chamfer.rs`. It does two things.

1. **Find the edges.** An edge is a `SubShape` of kind `Edge`, numbered from 0. To find the upright ones, the sample asks for each edge's bounding box (Section 7.5). An upright edge's box has no width and no depth, only height:

   ```
   let bb = k.sub_shape_bounding_box(&block, edge)?;
   if bb.max[0] - bb.min[0] < 1e-6 && bb.max[1] - bb.min[1] < 1e-6 {
       corners.push(edge);
   }
   ```

2 **Fillet or chamfer them.** `fillet` takes the solid, a list of edges and a radius; `chamfer` takes the same with a distance. Every edge in the list gets the same size:

```
let rounded = k.fillet(&block, &corners, 5.0)?;
let bevelled = k.chamfer(&block, &corners, 5.0)?;
let soft = k.fillet(&block, &all, 2.0)?;
```

TIP Round many edges in one call

Give all the edges that should be rounded in one list, as the sample does for `all`. Where the rounded edges meet at a corner, the geometry engine blends them into one smooth corner. Listing an edge twice is harmless; it counts once.

CAUTION The numbers change

A fillet or a chamfer makes new faces and edges, so the result is numbered afresh: the block had 12 edges, the filleted one has 24. Edge 0 of the result may be a different edge. To soften more edges later, find them again in the new solid.


9.2 Chamfer with two sizes

An even chamfer cuts back the same distance on both faces, at 45° where they meet square. Sometimes you want it uneven: a long, shallow lead-in on the top of a part so a mating part slides on, or a bevel at a set angle to match a tool. Then one number isn't enough, and the chamfer needs to know which face each number belongs to. That face is the *reference face*: one of the two faces that meet at the edge.

You can size an uneven chamfer in two ways:

- **Two distances.** The first is measured on the reference face, the second on the other face.
- **A distance and an angle.** The distance is measured on the reference face. The angle is between the reference face and the new sloping face, so a smaller angle makes a flatter bevel. Where the faces meet square, the setback on the other face is the distance times the tangent of the angle: 6 mm at 30° reaches 3.46 mm down the side.

Swap the reference face and the same two numbers give a different part (Figure 9.2).

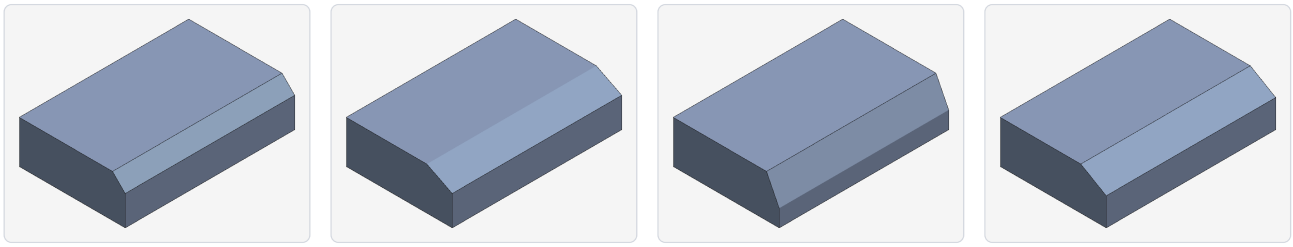

Even, 3 mm | 6 and 3 mm, top first | 6 and 3 mm, side first | 6 mm at 30°, top first

Figure 9.2 Four chamfers on the same edge of the 40 × 25 × 10 mm block: where the top meets the long side nearest you. The middle two use the same two distances, 6 and 3 mm, measured from different reference faces.

YOU WILL	Bevel one edge of a block evenly, with two distances from each face in turn, and with a distance and an angle.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `edges`:

```
TERMINAL
cargo run -p swx-kernel --features occt --example chamfer_sizes -- edges
```

It prints the block, the faces and the edge it found, one line for each chamfer, four errors on purpose, then the files it wrote:

```
OUTPUT
block                  10000.00 mm³
top face 5, side face 3, edge 11
equal 3                 9820.00 mm³  slope y 22..25  z 7..10
6 and 3, top first      9640.00 mm³  slope y 19..25  z 7..10
6 and 3, side first     9640.00 mm³  slope y 22..25  z 4..10
6 at 30°, top first     9584.31 mm³  slope y 19..25  z 6.54..10
6 and 30 -> error: kernel failure: chamfer failed
6 at 90° -> error: invalid input: chamfer angle must be finite and
    strictly between 0 and π/2, got 1.5707963267948966
bottom face -> error: invalid input: face 4 does not bound edge 11
both faces -> error: invalid input: edge 11 is listed with two
    different faces (3 and 5)
…  (the geometry engine's file reports)
wrote edges/chamfer-equal.step
wrote edges/chamfer-top.step
wrote edges/chamfer-side.step
wrote edges/chamfer-angle.step
```

Two long error lines are wrapped here to fit the page.

2. Read the second line. The top of the block is face 5, the long side at y = 25 is face 3, and the edge where they meet is edge 11.
3. Read the `slope` part of each chamfer line. It is where the new sloping face lies: how far it reaches across the top (in y, from the edge at 25) and down the side (in z, from the top at 10). The even chamfer reaches 3 mm each way.
4. Compare the two `6 and 3` lines. With the top as reference face, the slope reaches 6 mm across the top (y 19..25) and 3 mm down the side (z 7..10). With the side as reference face, it is the other way round. Both take away the same 360 mm³: a triangle of 6 × 3 ÷ 2 = 9 mm² along the 40 mm edge.
5. Read the `6 at 30°` line. The slope reaches 6 mm across the top and 3.46 mm down the side, to z = 6.54.
6. Draw the chamfers:

```
TERMINAL
target/release/swx-qa render --step edges/chamfer-top.step -o chamfer-top.png
```

Open `chamfer-top.png`. You should see the second block of Figure 9.2. Draw the other files the same way.

RESULT One edge bevelled four ways. The block itself is left as it was.

How the sample is built

The program is `crates/swx-kernel/examples/chamfer_sizes.rs`. It does three things.

1. **Find the faces and the edge.** The sample finds the top and the side by their bounding boxes, the way Section 9.1 found the upright edges. The edge it wants is the one both faces list as theirs (Section 6.3):

```
let top_edges = k.adjacent(&block, top, TopoKind::Edge)?;
let edge = k.adjacent(&block, side, TopoKind::Edge)?
    .into_iter()
    .find(|e| top_edges.contains(e))
    .expect("shared edge");
```

2. **Pair the edge with its reference face.** An `EdgeOnFace` holds an edge and the face to measure from. The face must be one of the two that meet at the edge:

```
let on_top = EdgeOnFace { edge, face: top };
let on_side = EdgeOnFace { edge, face: side };
```

3. **Give the size, and chamfer.** `ChamferSize::TwoDistances` takes `d1` (on the reference face) and `d2` (on the other face). `ChamferSize::DistanceAngle` takes a `distance` and an `angle` in radians, so convert degrees with `to_radians()`:

```
let two = ChamferSize::TwoDistances { d1: 6.0, d2: 3.0 };
let angled = ChamferSize::DistanceAngle {
    distance: 6.0,
    angle: 30f64.to_radians(),
};
let from_top = k.chamfer_asymmetric(&block, &[on_top], two)?;
let from_side = k.chamfer_asymmetric(&block, &[on_side], two)?;
```


> **TIP** **Many edges, one size**
>
> `chamfer_asymmetric` takes a list, like `chamfer`. Every edge in it gets the same size, each measured from its own reference face. Listing the same edge and face twice is harmless; it counts once.

> **CAUTION** **Angles are in radians**
>
> The angle must be strictly between 0 and $\pi/2$ (90°). Typing `30.0` means 30 radians and is refused; write `30f64.to_radians()`, or 0.5236.


9.3 Round with a changing radius

A constant fillet is the same size all along its edge. Sometimes the rounding should grow instead: a handle that is gentle at one end and generous where the hand rests, or a blend that must be small where it meets a narrow part and large where there is room. A *variable fillet* does this. You give a radius for each end of the edge, and the radius changes evenly from one to the other along the way (Figure 9.3).

The geometry engine needs to know which end is which. An edge runs between two *vertices*, its end points. You name one of them as the *start*: the first radius belongs there, and the second radius to the other end.

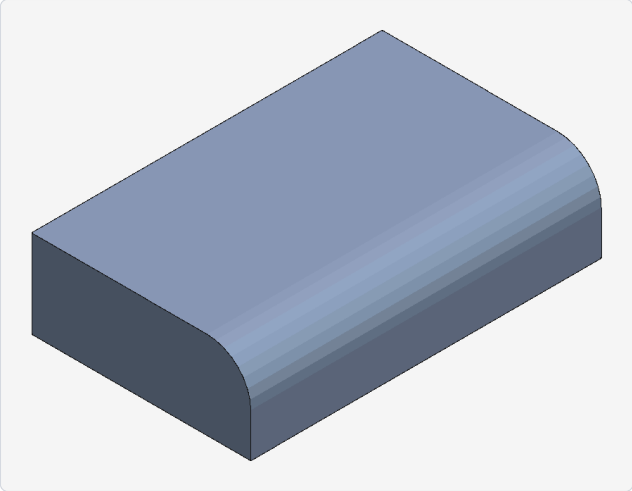

Before: constant 5 mm

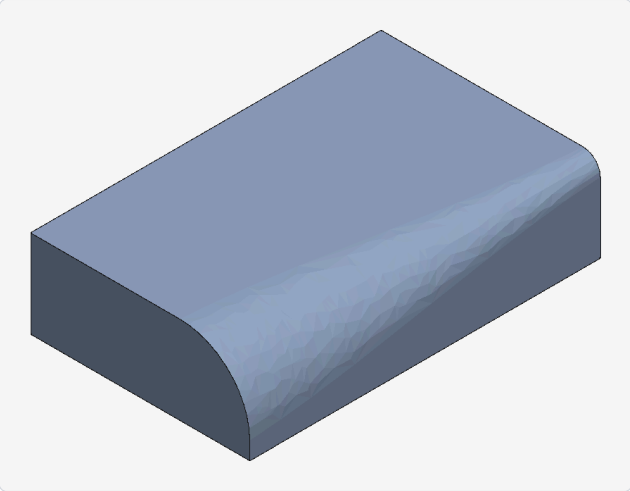

After: 2 mm to 8 mm

Figure 9.3 The same edge of the 40 × 25 × 10 mm block, rounded two ways: with one 5 mm radius, and with a radius that grows from 2 mm at the far end (x = 0) to 8 mm at the near end (x = 40). The faint ripples on the curved face come from the picture tool's triangles, not from the part.

YOU WILL	Round one edge of a block from 2 mm at one end to 8 mm at the other, and compare it with a constant fillet.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `edges`:

TERMINAL

```
cargo run -p swx-kernel --features occt --example fillet_variable -- edges
```

It prints the block, the edge and its two ends, one line for each fillet, four errors on purpose, then the files it wrote:

OUTPUT

```
block                  10000.00 mm³   6 faces
edge 11: vertex 2 at x = 0, vertex 6 at x = 40
constant r 5            9785.40 mm³   7 faces
2 at x = 0, 8 at 40     9753.28 mm³   7 faces
2 at x = 40, 8 at 0     9753.28 mm³   7 faces
2 to 12 -> error: kernel failure: fillet failed
wrong vertex -> error: invalid input: vertex 1 is not on edge 11
a face -> error: invalid input: a variable fillet needs an edge and a
    vertex, got Face 0 and Vertex 2
0 to 8 -> error: invalid input: fillet start radius must be finite and
    > 0, got 0
…  (the geometry engine's file reports)
wrote edges/fillet-constant.step
wrote edges/fillet-variable.step
```

Two long error lines are wrapped here to fit the page.

2. Read the second line. The edge is number 11: the top edge of the long side at y = 25, running from vertex 2 at x = 0 to vertex 6 at x = 40.

3. Read the `constant r 5` line. A 5 mm fillet along the 40 mm edge takes away 214.60 mm³, as in Section 9.1, and adds one curved face.

4. Read the two variable lines. Starting at vertex 2 puts 2 mm at x = 0 and 8 mm at x = 40; starting at vertex 6 swaps the ends. Both take away the same 246.72 mm³. That is a little more than the constant 5 mm fillet, although 5 mm is the average radius: the material a rounding takes away grows with the square of its radius, so the large end takes more than the small end saves.
5. Read the `2 to 12` line. The side of the block is only 10 mm tall, so a 12 mm rounding can't fit on it. The geometry engine says so, and the block is unchanged.
6. Draw the variable fillet:

   TERMINAL
   ```
   target/release/swx-qa render --step edges/fillet-variable.step -o fillet-variable.png
   ```

   Open `fillet-variable.png`. You should see the right-hand block of Figure 9.3, with the 8 mm end (x = 40) nearest you.

RESULT One edge rounded with a radius that changes along it. The block itself is left as it was.

How the sample is built

The program is `crates/swx-kernel/examples/fillet_variable.rs`. It does two things.

1. **Find the edge and its ends.** The sample finds the edge by its bounding box, as Section 9.1 does. `adjacent` lists the edge's two vertices (Section 6.3), and the sample tells them apart by where they are:

   ```rust
   for v in k.adjacent(s, edge, TopoKind::Vertex)? {
       if (k.sub_shape_bounding_box(s, v)?.min[0] - x).abs() < 1e-6 {
           return Ok(v);
       }
   }
   ```

2. **Round it.** `fillet_variable` takes the solid, one edge, the start vertex, the radius at the start and the radius at the other end:

   ```rust
   let growing = k.fillet_variable(&block, edge, left, 2.0, 8.0)?;
   ```

> **TIP** **Equal radii**
>
> Give the same radius at both ends and you get the constant fillet of Section 9.1. A variable fillet rounds one edge per call; to round several edges, call it once for each, finding the next edge again in the new solid.

> **CAUTION** **Edges that flow on**
>
> If the edge runs smoothly into the next one, as the edges round a filleted corner do, the geometry engine would have to round the whole smooth chain, so it refuses. Use a variable fillet on edges with a sharp corner at each end.

9.4 Common mistakes

- **A size too large for the part.** The rounding or the bevel has to fit on both faces next to each edge, and must not run into the next one: `kernel failure: fillet failed` (or `chamfer failed`). Make it smaller than the narrowest face it touches, and less than half of it where two softened edges share that face.
- **An empty list.** `invalid input: the edge list is empty`. Give at least one edge.
- **A face or a vertex in the list.** Only edges can be rounded: `invalid input: expected an edge, got face 0`. Ask for edges with `TopoKind::Edge`, or turn a face into its edges with `adjacent` (Section 6.3).

- **An edge number from another solid.**
  `invalid input: edge index 12 is out of range: the shape has 12 edges`, or worse, the wrong edge. Find the edges in the solid you are softening.
- **A size of zero or less.** `invalid input: fillet radius must be finite and > 0, got 0` (or `fillet start radius`, `fillet end radius`, `chamfer distance`, `chamfer d1`, `chamfer d2`).
- **An uneven chamfer that doesn't fit.** Each setback must fit on its own face:
  `kernel failure: chamfer failed`. The sample's 30 mm on the 10 mm side is far too much.
- **An angle of 90° or more, or in degrees.**
  `invalid input: chamfer angle must be finite and strictly between 0 and π/2, got 1.5707963267948966`. Give radians, between 0 and π/2.
- **A reference face that doesn't touch the edge.** `invalid input: face 4 does not bound edge 11`. Use one of the two faces that `adjacent` lists for the edge.
- **The same edge with both faces.** `invalid input: edge 11 is listed with two different faces (3 and 5)`. Each edge gets one reference face; pick the one to measure the first distance on.
- **A variable fillet's start that isn't on its edge.** `invalid input: vertex 1 is not on edge 11`. Ask `adjacent` for the edge's two vertices and pick one (Section 9.3).
- **A face or a vertex where the edge goes.**
  `invalid input: a variable fillet needs an edge and a vertex, got Face 0 and Vertex 2`. The first is the edge, the second its start vertex.
- **A variable fillet too large at one end.** The larger radius must fit as a constant fillet would:
  `kernel failure: fillet failed`.

CHAPTER 10


Hollowing a part

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

Many parts are hollow: a box for electronics, a tray, a cup, a cover. Making them solid would waste material, add weight, and in a molded or printed part cause sink marks and warping. You could model the inside as a second, smaller shape and cut it away, but there is a quicker way.

A *shell* hollows a solid in one step. It leaves walls of one thickness all round and takes away everything inside. The faces you choose to remove become the openings; they are the *open faces*. A box with its top as the open face becomes a tray. Open the top and the bottom, and it becomes a frame. Open the top of a cylinder, and it becomes a cup (Figure 10.1).

The walls grow *inward* from the faces of the solid. The outside of the part stays where it was, at the size you drew, and only the inside changes. That is usually what a design needs: the outside fits a space, and the walls are as thick as the material requires.

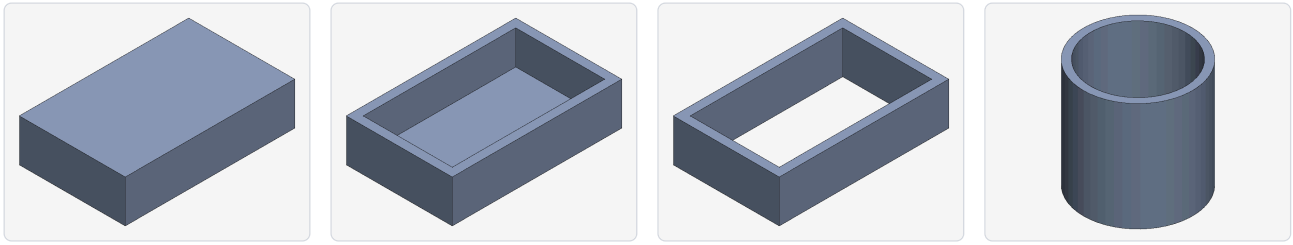

Block: 40 × 25 × 10 mm | Top open: a tray | Top and bottom open: a frame | Cylinder, top open: a cup

Figure 10.1 Shells with 2 mm walls. The tray and the frame are made from the same block, opened at one face and at two. The cup is a cylinder opened at its top. Each part keeps its outside size. Each picture is scaled to fill its frame.

In Saulitwerx today: the geometry engine can shell a solid with one wall thickness, open at one or more faces. You give the open faces by their numbers in the solid (Section 6.3), so your program finds them first. Every wall has the same thickness, and a shell must have at least one opening. A shell isn't recorded in a part's history yet.

10.1 Shell a solid

YOU WILL	Hollow a block into a tray and a frame, and a cylinder into a cup, all with 2 mm walls.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `shells`:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example shell_parts -- shells
   ```

   It prints the block and the faces it found, one line for each solid, then five errors on purpose, then the files it wrote:

   OUTPUT

   ```
   block            10000.00 mm³   6 faces  outside 40 × 25 × 10 mm
   top face 5, bottom face 4
   tray, wall 2      3952.00 mm³  11 faces  outside 40 × 25 × 10 mm
   frame, wall 2     2440.00 mm³  10 faces  outside 40 × 25 × 10 mm
   cylinder         21205.75 mm³   3 faces  outside 30 × 30 × 30 mm
   cup, wall 2       6339.73 mm³   5 faces  outside 30 × 30 × 30 mm
   wall 13 -> error: kernel failure: shell failed
   no faces -> error: invalid input: the face list is empty
   an edge -> error: invalid input: expected a face, got edge 0
   face 6 -> error: invalid input: face index 6 is out of range: the shape has 6 faces
   wall 0 -> error: invalid input: shell thickness must be finite and > 0, got 0
   …  (the geometry engine's file reports)
   wrote shells/shell-tray.step
   wrote shells/shell-frame.step
   wrote shells/shell-cup.step
   ```

2. Read the second line. The block's top is face 5 and its bottom is face 4.

3. Read the `tray` line. The outside is still 40 × 25 × 10 mm. The 2 mm walls leave a hollow 36 × 21 mm across and 8 mm deep, which is 6048 mm³ taken away. The tray has 11 faces: five outside, five inside, and the rim on top.

4. Read the `frame` line. With the bottom open too, the hollow goes all the way through, 36 × 21 × 10 mm, and only the four walls are left.

5. Read the `cup` line. The cylinder is 30 mm across and 30 mm tall. Its walls and floor are 2 mm thick, so the hollow is 26 mm across and 28 mm deep. The cup has 5 faces: the outside, the bottom, the inside wall, the floor and the rim.

6. Read the `wall 13` line. The block is 25 mm wide, and two walls of 13 mm would need 26 mm. The geometry engine can't build it and says so. The block is unchanged.

7. Draw the tray:

   TERMINAL

   ```
   target/release/swx-qa render --step shells/shell-tray.step -o shell-tray.png
   ```

   Open `shell-tray.png`. You should see the tray of Figure 10.1. Draw the other files the same way.

RESULT A tray, a frame and a cup, each made by one call. The solids you started from are left as they were.

How the sample is built

The program is `crates/swx-kernel/examples/shell_parts.rs`. It does two things.

1. **Find the faces to open.** A face is a `SubShape` of kind `Face`, numbered from 0. The sample looks for the flat face whose outward normal points the way it wants, up for the top and down for the bottom. `face_plane` gives each flat face's normal (Section 7.6), and refuses curved faces, which the sample skips:

```
for index in 0..k.sub_shape_count(s, TopoKind::Face)? {
    let face = SubShape { kind: TopoKind::Face, index };
    if let Ok((_, n)) = k.face_plane(s, face) {
        if dot(n, normal) > 0.999_999 {
            return Ok(face);
        }
    }
}
```

2. **Shell the solid.** `shell` takes the solid, a list of open faces and the wall thickness in mm:

```
let tray = k.shell(&block, &[top], 2.0)?;
let frame = k.shell(&block, &[top, bottom], 2.0)?;
let cup = k.shell(&can, &[rim], 2.0)?;
```

> **TIP** **Choosing a wall thickness**
>
> Pick the thickness your material and process need, then check that the part still has room for it: every wall comes off the inside, so a part 25 mm wide with 2 mm walls is 21 mm wide inside. Listing a face twice is harmless; it counts once.

> **CAUTION** **The numbers change**
>
> A shell makes new faces and edges, so the result is numbered afresh: the block had 6 faces, the tray has 11. To round the tray's rim or open another face later, find the faces again in the new solid.

10.2 Common mistakes

- **A wall too thick for the part.** The walls from opposite sides must not meet: `kernel failure: shell failed`. Keep the thickness under half the part's narrowest width.
- **No open face.** `invalid input: the face list is empty`. Give at least one face to open. A part hollow inside with no opening can't be made yet.
- **An edge or a vertex in the list.** Only faces can be opened: `invalid input: expected a face, got edge 0`. Ask for faces with `TopoKind::Face`, or turn an edge into its faces with `adjacent` (Section 6.3).
- **A face number from another solid.** `invalid input: face index 6 is out of range: the shape has 6 faces`, or worse, the wrong face opened. Find the faces in the solid you are shelling.
- **A thickness of zero or less.** `invalid input: shell thickness must be finite and > 0, got 0`.

CHAPTER 11

Making holes

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

Almost every part has holes: for screws and bolts, for pins that line parts up, for shafts and wires to pass through. You could make each one by sketching a circle and cutting it (Section 7.4), but a hole is so common that it has its own feature. You say where it starts, which way it goes, how wide and how deep it is, and the geometry engine drills it.

A *hole* has three things to choose:

- **Where and which way.** A start point on the face of the part, and a direction pointing into the material, the way a drill would go. The direction can be any way at all, so a hole can go into the top, the side or a sloping face.
- **Its shape.** A *simple hole* is a plain round hole of one diameter. A *counterbore* adds a wider, flat-bottomed recess at the mouth of the hole, so that a screw head sits flush with the surface or below it.
- **How deep.** A *blind hole* stops at a depth you give, with a flat bottom. A *through hole* goes all the way through the part.

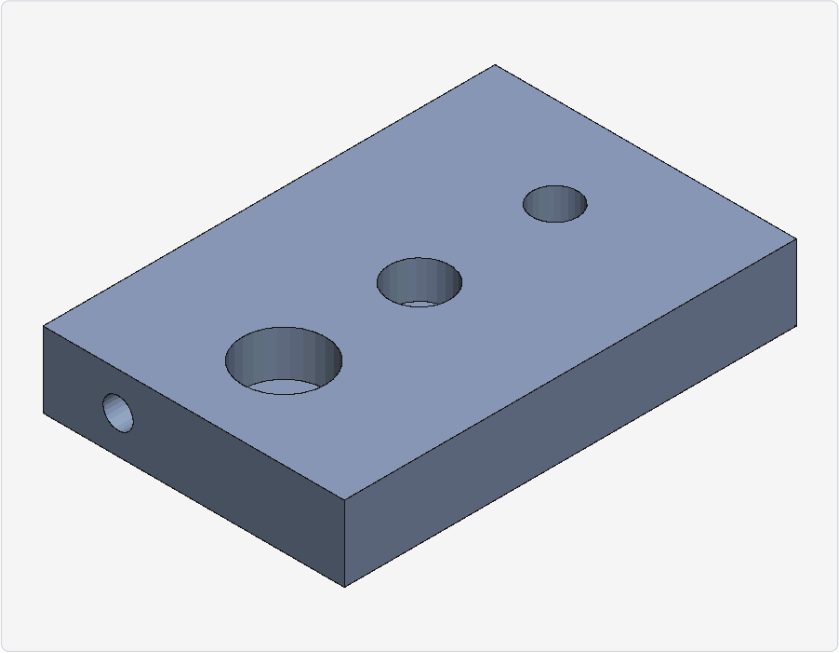


Figure 11.1 A 60 × 40 × 10 mm plate with four holes. In its top, from the back: a 6 mm simple hole through the plate, an 8 mm blind hole 5 mm deep, and a 6 mm through hole with an 11 mm counterbore 6 mm deep. In the end nearest you, a 4 mm blind hole 20 mm deep, drilled sideways.

In Saulitwerx today: the geometry engine can drill simple and counterbored holes, blind or through all, in any direction. Holes have flat bottoms; there are no drill points, countersinks or threads yet. You give the start point and the direction as numbers, so your program works them out first. A hole isn't recorded in a part's history yet.

11.1 Drill holes in a plate

YOU WILL	Drill a through hole, a blind hole, a counterbored hole and a sideways hole in a plate.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its part in a folder called `holes`:

   TERMINAL
   ```
   cargo run -p swx-kernel --features occt --example hole_plate -- holes
   ```

   It prints the plate, one line after each hole, four errors on purpose, then the file it wrote:

   OUTPUT
   ```
   plate              24000.00 mm³   6 faces
   6 through          23717.26 mm³   7 faces
   + 8 blind 5        23465.93 mm³   9 faces
   + counterbore      22782.63 mm³  12 faces
   + 4 side, 20 deep  22531.31 mm³  14 faces
   cb 5 on hole 6 -> error: invalid input: counterbore diameter 5 must be
       larger than the hole diameter 6
   blind 4, cb 6 -> error: invalid input: hole depth 4 must be larger than
       the counterbore depth 6
   off the plate -> error: invalid input: the hole misses the solid: it
       removes nothing
   diameter 0 -> error: invalid input: hole diameter must be finite and > 0,
       got 0
   …  (the geometry engine's file reports)
   wrote holes/hole-plate.step
   ```

   Four long error lines are wrapped here to fit the page.

2. Read the `6 through` line. A 6 mm hole through the 10 mm plate takes away a cylinder of $\pi \times 3^2 \times 10 = 282.74$ mm³. It adds one face: the wall of the hole.

3. Read the `8 blind 5` line. The 8 mm hole stops 5 mm down and takes away 251.33 mm³. It adds two faces: the wall and the flat bottom.

4. Read the `counterbore` line. The 6 mm hole goes through, and the 11 mm recess is 6 mm deep, so 683.30 mm³ goes in all. It adds three faces: the recess wall, the flat step at the recess's bottom, and the wall of the narrow hole.

5. Read the `4 side` line. This hole starts on the plate's end at x = 60 and points back along −X, so it goes in sideways, 20 mm deep.

6. Read the four errors. Each one says what is wrong, and the plate is unchanged after each.

7. Draw the plate:

   TERMINAL
   ```
   target/release/swx-qa render --step holes/hole-plate.step -o hole-plate.png
   ```

   Open `hole-plate.png`. You should see the plate of Figure 11.1.

RESULT A plate with four holes, each made by one call. Each call gives a new solid; the one before it is left as it was.

How the sample is built

The program is `crates/swx-kernel/examples/hole_plate.rs`. Each hole is one call to `hole`, with four things: the solid, where it starts and which way it goes, its shape, and its depth.

1. **Say where it starts and which way it goes.** An `Axis` holds a point and a direction. The sample's top holes start on the top face, at z = 10, and point straight down. The direction doesn't need to be one unit long. The sample's helper `down_at(x, y)` builds this axis for any spot on the top:

```
let at = Axis { origin: [12.0, 20.0, 10.0], dir: [0.0, 0.0, -1.0] };
```

2. **Give its shape and depth, and drill.** `HoleKind::Simple` takes a diameter; `HoleKind::Counterbore` takes the hole's diameter, the recess's diameter and the recess's depth. `HoleDepth::Blind` takes a depth in mm; `HoleDepth::ThroughAll` takes nothing:

```
let one = k.hole(&plate, at, HoleKind::Simple { diameter: 6.0 },
                 HoleDepth::ThroughAll)?;
let cb = HoleKind::Counterbore {
    diameter: 6.0, cb_diameter: 11.0, cb_depth: 6.0,
};
let two = k.hole(&one, down_at(48.0, 20.0), cb, HoleDepth::ThroughAll)?;
```

> **TIP** **Sizes for a screw**
>
> A counterbore is sized for the screw it holds: the hole a little wider than the screw, the recess a little wider than its head, and the recess at least as deep as the head is tall. The sample's 6 mm hole, 11 mm recess and 6 mm depth are close to the usual sizes for a 5 mm cap screw. Check the sizes your screws need.

> **CAUTION** **Depths are measured from the start point**
>
> A blind depth and a counterbore depth both run from the start point along the direction. Put the start point on the face where the hole begins: start it 2 mm above the part, and a 5 mm hole is only 3 mm deep in the material.

11.2 Common mistakes

- **A direction pointing away from the part.** The hole goes the wrong way and finds nothing: `invalid input: the hole misses the solid: it removes nothing`. Point the direction into the material.
- **A start point off the part.** The same message when the hole's line misses the part altogether. Check the coordinates against the part's bounding box (Section 16.4).
- **A counterbore no wider than its hole.** `invalid input: counterbore diameter 5 must be larger than the hole diameter 6`.
- **A blind hole no deeper than its counterbore.** `invalid input: hole depth 4 must be larger than the counterbore depth 6`. Make the hole deeper, or use a through hole.
- **A size of zero or less.** `invalid input: hole diameter must be finite and > 0, got 0` (or `hole depth`, `counterbore diameter`, `counterbore depth`).
- **No direction.** `invalid input: hole direction must be finite and non-zero, got [0.0, 0.0, 0.0]`.
- **A hole that takes the whole part.** `empty result: the hole removes the whole solid`: the hole is wider than the part.

CHAPTER 12

Tilting faces with draft

> **FOR DEVELOPERS**
>
> This chapter calls the geometry engine, `swx-kernel`, from Rust. It needs OpenCascade and the `occt` build feature (Chapter 2).

Plastic and cast parts are made in molds. Once the material has set, the part has to come out. If its sides are perfectly upright, they rub against the mold all the way out, and the part sticks or scrapes. So designers tilt the sides a little, a degree or a few, so that the part comes free as soon as it starts to move. That tilt is called *draft*.

Three things set a draft:

- **The *pull direction*:** the way the part leaves the mold.
- **The *neutral plane*:** a flat plane across the part, at right angles to the pull direction. Where each tilted face crosses it, the face stays where it was; the face turns about that line. On a part that sits on a mold's floor, the neutral plane is usually its bottom, so the bottom keeps its size.
- **The angle,** and which faces to tilt. A positive angle makes the part smaller as you go along the pull direction, which is what lets it come out. A negative angle makes it larger.

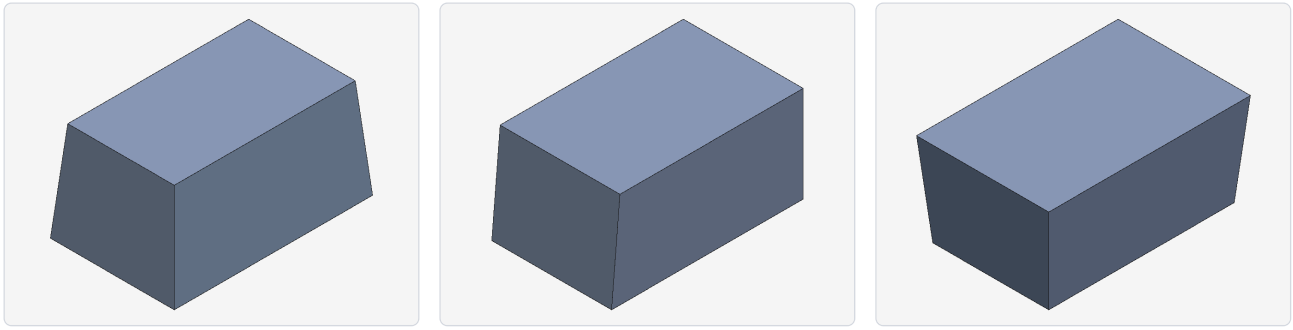


Figure 12.1 A 40 × 25 × 20 mm block, drafted three ways. The neutral plane is the bottom and the part is pulled up, so the bottom keeps its size and the top changes: 1.75 mm in from each tilted side at 5°, 1.75 mm out at −5°.

In Saulitwerx today: the geometry engine can draft flat faces of a solid by one angle, about one neutral plane. You give the faces by their numbers in the solid (Section 6.3), and the neutral plane as a point and the pull direction. Every face in one call gets the same angle. A draft isn't recorded in a part's history yet.

12.1 Draft the sides of a block

YOU WILL	Tilt the four sides of a block by 5°, then one side only, then the four sides outward.
YOU NEED	Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME	5 minutes.

1. Run the sample program, and tell it to save its parts in a folder called `draft`:

   TERMINAL

   ```
   cargo run -p swx-kernel --features occt --example draft_block -- draft
   ```

   It prints the block and its faces, one line for each draft with the size of the bottom and the top, four errors on purpose, then the files it wrote:

   OUTPUT

   ```
   block          20000.00 mm³  bottom 40.00 × 25.00 mm  top 40.00 × 25.00 mm
   side faces [1, 0, 3, 2], top face 5
   4 sides, 5°    17806.94 mm³  bottom 40.00 × 25.00 mm  top 36.50 × 21.50 mm
   +X side, 5°    19562.56 mm³  bottom 40.00 × 25.00 mm  top 38.25 × 25.00 mm
   4 sides, -5°   22356.35 mm³  bottom 40.00 × 25.00 mm  top 43.50 × 28.50 mm
   top face -> error: kernel failure: draft failed
   90° -> error: invalid input: draft angle must be finite, non-zero and
       below π/2 in size, got 1.5707963267948966
   0° -> error: invalid input: draft angle must be finite, non-zero and
       below π/2 in size, got 0
   no faces -> error: invalid input: the face list is empty
   …  (the geometry engine's file reports)
   wrote draft/draft-four.step
   wrote draft/draft-one.step
   wrote draft/draft-flared.step
   ```

   Two long error lines are wrapped here to fit the page.

2. Read the second line. The four upright sides are faces 0 to 3, and the top is face 5.

3. Read the `4 sides, 5°` line. The bottom is still 40 × 25 mm. Each side leans in by 20 × tan 5° = 1.75 mm over the block's 20 mm height, so the top is 3.5 mm smaller each way: 36.50 × 21.50 mm.

4. Read the `+X side` line. Only the end facing +X leans, so only the length shrinks at the top.

5. Read the `-5°` line. A negative angle leans the sides out, so the top is 3.5 mm larger each way.

6. Read the `top face` line. The top is parallel to the neutral plane, so it doesn't cross it and has no line to turn about. The geometry engine can't draft it and says so. The block is unchanged.

7. Draw the drafted block:

   TERMINAL

   ```
   target/release/swx-qa render --step draft/draft-four.step -o draft-four.png
   ```

   Open `draft-four.png`. You should see the first block of Figure 12.1. Draw the other files the same way.

RESULT A block drafted three ways, each by one call. The block itself is left as it was.

How the sample is built

The program is `crates/swx-kernel/examples/draft_block.rs`. It does two things.

1. **Find the faces.** The sample finds each side by the way its outward normal points, as Section 10.1 found the top of a block, with `face_plane` (Section 7.6).

2. **Draft them.** `draft` takes the solid, the list of faces, the neutral plane and the angle in radians. The neutral plane is an `Axis`: a point on the plane, and the pull direction, which is also the plane's normal:

   ```
   let pull_up = Axis { origin: [0.0, 0.0, 0.0], dir: [0.0, 0.0, 1.0] };
   let tapered = k.draft(&block, &sides, pull_up, 5f64.to_radians())?;
   ```

> **TIP** **How much draft**
>
> One or two degrees is common for plastic parts, and more for textured surfaces or deep parts. Ask whoever makes the mold. Draft the sides before you round their edges: a fillet made first would have to be tilted too.

> **CAUTION** **Angles are in radians**
>
> `5.0` means 5 radians, which is refused. Write `5f64.to_radians()`. The angle must not be zero, and must be less than π/2 (90°) either way.

12.2 Common mistakes

- **A face parallel to the neutral plane.** A top or a bottom can't be drafted: `kernel failure: draft failed`. Draft the faces that run along the pull direction.
- **An angle of zero, 90° or more, or in degrees.** `invalid input: draft angle must be finite, non-zero and below π/2 in size, got 0`.
- **No faces.** `invalid input: the face list is empty`.
- **An edge or a vertex in the list, or a face number from another solid.** `invalid input: expected a face, got edge 0`, or `face index 6 is out of range: the shape has 6 faces`. Find the faces in the solid you are drafting.
- **No pull direction.** `invalid input: draft pull direction must be finite and non-zero, got [0.0, 0.0, 0.0]`.
- **The wrong sign.** If the part grows where it should shrink, the pull direction points the wrong way, or the angle's sign is wrong. Flip one of them.

CHAPTER 13

Work planes, axes and points

> **FOR DEVELOPERS**
>
> This chapter calls `swx-kernel` from Rust. The work features themselves need no geometry engine, so its first sample runs on a plain build; the second needs OpenCascade and the `occt` build feature (Chapter 2).

Every sketch sits on a plane, every revolve turns about an axis, and every hole starts at a point. Often a face of the part gives you what you need: you sketch on the top, or drill into the side. But sometimes the plane, the line or the point you need isn't on the part at all: a plane 10 mm above the top, a plane tilted 30° to hold a sloping post, the line where two faces would meet. So you build it.

That reference geometry is called a *work feature*. It has no material of its own, so it never adds to or takes from the part; it is there to place other features. There are three kinds:

- A *work plane*: a flat plane to sketch on, extrude from or measure to.
- A *work axis*: a straight line, to revolve about or line things up on.
- A *work point*: one point in space, to start a hole at or measure from.

Every part starts with a set of them, all meeting at the *part origin*, the point (0, 0, 0): three planes, XY, XZ and YZ, and three axes, X, Y and Z, along their edges. You build new ones from those, or from each other (Figure 13.1).

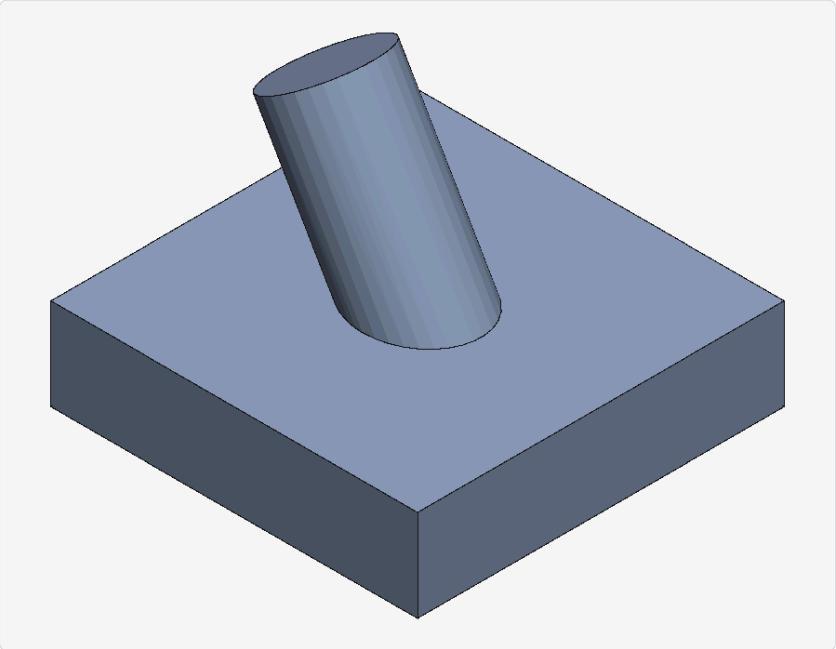


Figure 13.1 A post that leans at 30°. Its circle is sketched on a work plane: the plate's top plane, made by offsetting the XY plane 10 mm, then turned 30° about a work axis across the middle of the top.

In Saulitwerx today: work planes, axes and points can be built from numbers, from the part origin and its planes and axes, and from each other. A work plane can be used wherever a `Workplane` goes (Section 16.5), and a work axis wherever an `Axis` goes: a revolve, a draft or a hole. No call builds one straight from a face or an edge of a part yet, though `face_plane` (Section 7.6) gives the point and normal that `from_point_normal` takes. Work features aren't recorded in a part's history.

13.1 Build work features

The sample in this section builds one of each kind of work feature from the part origin and its planes, then shows the errors you can meet.

YOU WILL	Build an offset plane, a plane through three points, a tilted plane, two axes and a point, and see the errors.
YOU NEED	Saulitwerx built from source (Chapter 2). OpenCascade isn't needed.
TIME	5 minutes.

1. Run the sample program:

   TERMINAL

   ```
   cargo run -p swx-kernel --example work_features
   ```

   It prints each work feature it builds, then five errors on purpose:

   OUTPUT

   ```
   part origin            (0, 0, 0)
   Z axis                 through (0, 0, 0)  along (0, 0, 1)
   XY plane               origin (0, 0, 0)  normal (0, 0, 1)
   XY offset 10           origin (0, 0, 10)  normal (0, 0, 1)
   through 3 points       origin (0, 0, 10)  normal (0, -0.447, 0.894)
   top turned 30°         origin (0, 2.679, 0)  normal (0, -0.5, 0.866)
   slope meets YZ         through (0, -4, 8)  along (0, 0.894, 0.447)
   through 2 points       through (0, 0, 0)  along (0.816, 0.408, 0.408)
   diagonal meets top     (20, 10, 10)
   two parallel planes -> error: invalid input: the planes are parallel:
       they have no line in common
   3 points in a line -> error: invalid input: the three plane points are
       collinear
   2 points the same -> error: invalid input: axis direction (the points
       coincide) must be non-zero
   X axis meets top -> error: invalid input: the axis is parallel to the plane
   turn about Z axis -> error: invalid input: the axis does not lie in the
       plane
   ```

   Four long error lines are wrapped here to fit the page.

2. Read the `XY offset 10` line. The plane has moved 10 mm up and still faces up. It is the top of a 10 mm plate.

3. Read the `through 3 points` line. The points (0, 0, 10), (40, 0, 10) and (0, 20, 20) make a slope that rises 10 mm over 20 mm, so its normal leans back from straight up: (0, −0.447, 0.894).

4. Read the `top turned 30°` line. The top plane turned 30° about a line along X through (0, 20, 10). Its normal now leans 30° from straight up: (0, −0.5, 0.866), since sin 30° = 0.5 and cos 30° = 0.866. Turning the plane moved its origin too, to (0, 2.679, 0); the turning line stays put.

5. Read the `slope meets YZ` line. It is the line where the slope meets the YZ plane. Its point is the one on the line nearest the origin.

6. Read the last two lines before the errors. The axis from (0, 0, 0) towards (40, 20, 20) crosses the top plane at (20, 10, 10), halfway along.

7 Read the errors. Each says why the work feature can't be built.

RESULT Six new work features, built from the origin's planes and axes and from each other.

Here are all the ways to build each kind. Every one checks its input and gives an error if the result wouldn't make sense, such as a plane through three points in a line.

To get	Build it with
The origin and its planes and axes	`ORIGIN`, `Workplane::XY`, `::XZ`, `::YZ`, `Axis::X`, `::Y`, `::Z`.
A plane parallel to another	`plane.offset(distance)`: moved along its normal by `distance` mm; a negative distance goes the other way.
A plane through three points	`Workplane::through_points(p0, p1, p2)`. Its origin is `p0`; its normal follows the right-hand rule from `p0 → p1` to `p0 → p2`.
A plane through a point, square to a direction	`Workplane::from_point_normal(p, n)`.
A plane at an angle to another	`plane.angled(axis, angle)`: turned about an axis that lies in the plane, by an angle in radians (right-hand rule).
An axis through two points	`Axis::through_points(p, q)`, pointing from `p` to `q`.
The axis where two planes meet	`Axis::plane_intersection(a, b)`.
The point where an axis crosses a plane	`plane_axis_intersection(plane, axis)`.

13.2 Place a feature on a work plane

A work plane is used like any other plane. The sample in this section builds the leaning post of Figure 13.1: it sketches a circle on a tilted work plane and extrudes it into the plate.

YOU WILL Stand a post at 30° on a plate, using a tilted work plane.
YOU NEED Saulitwerx built with OpenCascade, and `swx-qa` built with it too (Chapter 2).
TIME 5 minutes.

1 Run the sample program, and tell it to save its part in a folder called `work`:

TERMINAL

```
cargo run -p swx-kernel --features occt --example tilted_post -- work
```

It prints the tilted plane and the finished part:

OUTPUT

```
tilted plane: origin [0.0, 2.6794919243112254, 1.7763568394002505e-15],
    normal [0.000, -0.500, 0.866]
plate with post: 18261.95 mm³, 8 faces
…  (the geometry engine's file reports)
wrote work/tilted-post.step
```

The long first line is wrapped here to fit the page. The tiny number at the end of the origin is zero, give or take rounding.

2 Read the `plate with post` line. The plate is 40 × 40 × 10 mm, 16000 mm³. The post is 12 mm across and stands 20 mm out of the plate along its leaning axis, which adds $\pi \times 6^2 \times 20 = 2261.95$ mm³.

3. Draw the part:

```
TERMINAL
target/release/swx-qa render --step work/tilted-post.step -o tilted-post.png
```

Open `tilted-post.png`. You should see the part of Figure 13.1.

RESULT A post standing at an angle that no face of the plate could give you.

How the sample is built

The program is `crates/swx-kernel/examples/tilted_post.rs`. It does three things.

1. **Build the work plane.** The plate's top plane is the XY plane moved up 10 mm. The work axis runs along X across the middle of the top, at y = 20. The tilted plane is the top turned 30° about it:

```
let top = Workplane::XY.offset(10.0)?;
let across = Axis { origin: [0.0, 20.0, 10.0], dir: [1.0, 0.0, 0.0] };
let tilted = top.angled(across, 30f64.to_radians())?;
```

2. **Sketch on it.** The circle goes on the plane at (u, v) = (20, 20): 20 mm along X, and 20 mm from the plane's origin, which is where the turning line is. The sample starts it on a plane 4 mm below the tilted one, so the whole foot of the post is buried in the plate:

```
let foot = tilted.offset(-4.0)?;
let face = k.make_face(&foot, &circle, &[])?;
```

3. **Extrude and join.** It extrudes 24 mm along the tilted normal and joins the post to the plate (Section 7.3):

```
let part = extrude_feature(&k, &face, Extent::Distance(24.0),
                           ExtrudeMode::Join, Some(&plate))?;
```

> **CAUTION** **Leave no gap under a leaning feature**
>
> A circle on a tilted plane rises on one side above the plane it turned from. Started right on the tilted plane, the post's high side would float above the plate, and the join would leave a gap. Start the sketch a little below, as the sample does, so the foot is inside the part.

13.3 Common mistakes

- **Two parallel planes.** They never meet, so there's no line: `invalid input: the planes are parallel: they have no line in common`.
- **Three points in a line.** Many planes pass through them, so none is chosen: `invalid input: the three plane points are collinear`. The same if two of them are the same point.
- **Two points the same.** An axis needs two different points: `invalid input: axis direction (the points coincide) must be non-zero`.
- **An axis parallel to a plane.** It never crosses it: `invalid input: the axis is parallel to the plane`.
- **Turning a plane about an axis that isn't in it.** `invalid input: the axis does not lie in the plane`. The axis must lie on the plane: build it from two points on the plane, or where the plane meets another.
- **An angle in degrees.** `angled` takes radians: write `30f64.to_radians()`.

CHAPTER 14

Pictures of parts and sketches

`swx-qa render` draws a part to a PNG picture file, and `swx-qa sketch` draws a sketch. They need no graphics card and no window, and the same input always gives the same picture, byte for byte. The project uses them to show its work in reviews; this manual's pictures come from them too.

14.1 Draw a STEP file

YOU WILL Draw any STEP file to a PNG, at the size you want.
YOU NEED `swx-qa` built with OpenCascade (Chapter 2), and a STEP file. `plate.step` from Chapter 3 works.

1. Run `render` with the STEP file, a size and an output name:

   TERMINAL

   ```
   target/release/swx-qa render --step plate.step --size 1600x1000 -o plate.png
   ```

   It answers `wrote plate.png (1600x1000, …)`, with the file size in bytes.

2. Open `plate.png`. The part fills the picture, seen from the same corner as every other render.

RESULT A PNG of the part, ready to share or to put in a document.

The renderer chooses how finely to break curved faces into flat pieces for you: the mesh stays within 0.1 % of the part's overall size of the true surface.

14.2 Choose the size

`--size` takes the width and height in pixels, written `W` `x` `H`, for example `1600x1000`. The default is `800x600`; the largest is `8192x8192`. For a picture you will print, allow about 80 pixels per centimeter (200 per inch) of printed width: a picture printed 10 cm wide needs about 800 pixels.

14.3 Choose which edges are outlined

The renderer outlines the edges where faces meet at a sharp angle. `--crease` sets how sharp, in degrees, from 0 to 180; the default is 30. Where the surface bends by more than this angle from one face to the next, the edge gets a dark line. The edges of a box bend by 90°, so they are always outlined; the many small facets of a curved face bend by only a few degrees, so they are not. A smaller value outlines more edges; a larger value outlines fewer.

> **TIP**
>
> On a curved part that looks striped with lines, raise `--crease` (try 45). If an edge you want to see has no outline, lower it.

14.4 Draw a built-in sample

`--fixture` draws one of three built-in parts instead of a file: `cube` (10 mm), `cylinder` (5 mm radius, 10 mm tall) or `l-bracket` (30 mm legs, 8 mm thick, 20 mm deep). They need no OpenCascade, so they are a quick way to test the tool.

TERMINAL

```
target/release/swx-qa render --fixture l-bracket -o bracket.png
```

Section 16.1 lists every option.

14.5 Draw a sketch

`swx-qa sketch` solves a built-in sketch and draws it from above, with x to the right and y up. Lines, circles and arcs are dark blue; points and the ends of lines are red dots; each dimension's value is written in green beside what it measures.

YOU WILL	Draw a built-in sketch to a PNG.
YOU NEED	`swx-qa` built (Chapter 2). OpenCascade is not needed.
TIME	2 minutes.

1. Run `sketch` with a sample name and an output name:

   TERMINAL

   ```
   target/release/swx-qa sketch --fixture rectangle -o rectangle.png
   ```

   It answers `wrote rectangle.png (800x600, …)`, with the file size in bytes.

2. Open `rectangle.png`. You should see a 40 × 25 mm rectangle, labeled `40` along the bottom and `25` up the right side.

3. Try the other sample, a right triangle with sides of 4 and 3:


   TERMINAL

   ```
   target/release/swx-qa sketch --fixture triangle-345 -o triangle.png
   ```

RESULT A PNG of a solved sketch with its dimension values (Figure 14.1).



rectangle

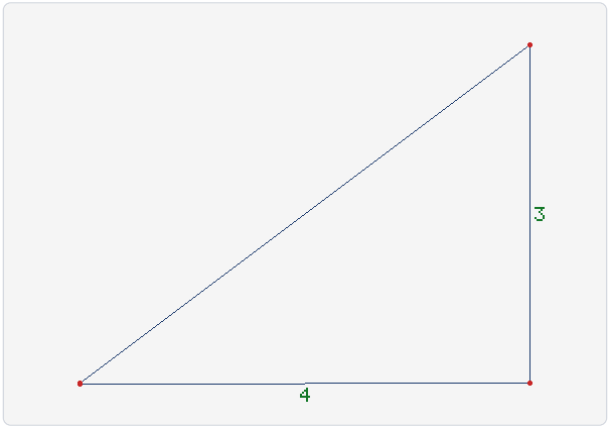

triangle-345

Figure 14.1 The two built-in sketches. The triangle's long side has no number: it has no dimension of its own, and comes out 5 because the other two sides are 4 and 3.

`--size` works as it does for parts; the default is `800x600`. The sketch is scaled to fill the picture with a margin, so a small sketch and a large one come out the same size. Labels are drawn at a fixed size in pixels, so they look smaller in a large picture.

FOR DEVELOPERS

To draw your own sketch, call `swx_qa::sketch::plot(&sketch, &PlotOptions::default())` and save the result with `to_png()`. It draws the sketch as it is, solved or not. The manual's sketch pictures come from `crates/swx-qa/examples/plate_sketch_plot.rs`, which does exactly this:

TERMINAL

```
cargo run -p swx-qa --example plate_sketch_plot -- <dir> 600x420
```

It writes `sketch-rough.png`, `sketch-shape.png` and `sketch-sized.png` in `<dir>`.

Only distances, radii and diameters are labeled. Other constraints, such as horizontal or fixed, don't show in the picture, and there are no dimension arrows yet.

CHAPTER 15

Parameters and history

> **FOR DEVELOPERS**
>
> This chapter uses the document model, `swx-core`, and the sketcher, `swx-sketch`, from Rust. It needs no OpenCascade.

The document model holds what makes a part parametric: its named parameters and its ordered list of features (Section 4.8, Section 4.10). It doesn't make geometry itself. Its job is to keep the history valid and to work out what must be rebuilt after a change.

15.1 See what a change rebuilds

YOU WILL	Build a four-feature history and ask which features a change affects.
YOU NEED	Saulitwerx built (Chapter 2).
TIME	5 minutes.

1. Run the sample:

   TERMINAL

   ```
   cargo run -p swx-core --example feature_history
   ```

   OUTPUT

   ```
   history:
     0  Sketch1
     1  Extrude1
     2  Sketch2
     3  Revolve1
   change thickness -> rebuild Extrude1
   edit Sketch2     -> rebuild Sketch2, Revolve1
   add Extrude2 with depth `height` -> error: unknown parameter `height`
   ```

2. Read the history. It is the table in Section 4.10: two sketches, an extrude that uses `thickness`, and a revolve that uses `sweep`.
3. Read the two rebuild lines. Changing `thickness` touches only Extrude1, the one feature that uses it. Editing Sketch2 rebuilds Sketch2 and Revolve1, which consumes it; Sketch1 and Extrude1 are left alone.
4. Read the last line. A feature may use only parameters that exist, so adding an extrude whose depth is `height` is refused.

RESULT You saw Saulitwerx decide, from the history alone, the smallest set of features a change needs rebuilt.

15.2 How the sample is built

The program is `crates/swx-core/examples/feature_history.rs`. A `Document` holds parameters and features:

```
let mut doc = Document::new();
doc.set_param("thickness", 5.0);
let plate_sketch = doc.add_feature("Sketch1", FeatureKind::Sketch)?;
doc.add_feature("Extrude1", FeatureKind::Extrude {
    profile: plate_sketch,
    depth: "thickness".into(),
})?;
```

Then two questions give the rebuild lists, in history order:

```
doc.dirty_after_param_change("thickness");   // [Extrude1]
doc.dirty_after_feature_edit(pin_sketch)?;    // [Sketch2, Revolve1]
```

The features that need rebuilding are called *dirty*. Today's feature kinds are `Sketch`, `Extrude` (with a depth parameter) and `Revolve` (with an angle parameter, in degrees). They are records in the history only; making their geometry comes with the part features on the roadmap.

15.3 Roll back and insert a feature

New features go at the end of the history. Sometimes a new feature belongs earlier: a boss that later features should build on, say, or a cut that should happen before the edges are rounded. Instead of rebuilding the part, you move the history's *end-of-part marker* up, above the features that should come after the new one. This is called *rolling back*. The features below the marker are kept but not used: the part is built as if they weren't there. While the history is rolled back, new features go in at the marker, and the marker moves down past each one. Move the marker back to the end, and the rolled-back features return, built on top of what you inserted.

The marker's position is a number: how many features are above it. In a history of four features, 4 means the end (nothing rolled back), and 2 means the last two are rolled back.

YOU WILL	Roll a four-feature history back, insert two features above the rolled-back ones, and roll forward again.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the sample:

```
TERMINAL
cargo run -p swx-core --example roll_back
```

```
OUTPUT
history:
  0  Sketch1
  1  Extrude1
  2  Sketch2
  3  Revolve1
  -- end of part --
roll back to 2 -> rebuild nothing
rolled back:
  0  Sketch1
  1  Extrude1
  -- end of part --
  2  Sketch2
  3  Revolve1
change sweep -> rebuild nothing
after inserting Sketch3 and Extrude2:
  0  Sketch1
  1  Extrude1
  2  Sketch3
  3  Extrude2
  -- end of part --
  4  Sketch2
  5  Revolve1
add Extrude3 from Sketch2 -> error: feature 6 references
    feature 2 which is not earlier in the history
roll forward to 6 -> rebuild Sketch2, Revolve1
edit Sketch1 -> rebuild Sketch1, Extrude1
roll forward to 9 -> error: end-of-part position 9 is past the end of the history (6 features)
```

One long error line is wrapped here to fit the page.

2. Read the first history. It is the four features of Section 4.10, with the marker at the end.
3. Read `roll back to 2`. The marker now sits after Extrude1, and Sketch2 and Revolve1 are rolled back. Rolling back rebuilds nothing: the part simply stops at Extrude1.
4. Read `change sweep`. Revolve1 uses `sweep`, but while it is rolled back, changing `sweep` rebuilds nothing.
5. Read the third history. Sketch3 and Extrude2 went in at the marker, above Sketch2 and Revolve1, and the marker moved down past them.
6. Read the `Extrude3` line. A new feature can use only features above the marker, so an extrude of the rolled-back Sketch2 is refused, and the history is unchanged. The numbers in the message are the features' numbers, given when they were made (Section 16.12), not their places in the list: Sketch2 is feature 2, now in place 4.
7. Read `roll forward to 6`. With the marker back at the end, Sketch2 and Revolve1 return, and they must be rebuilt, now on top of Extrude2.
8. Read the last line. The history has six features, so the marker can't go to 9. It stays where it was.

RESULT Two features inserted in the middle of a history, without touching the features after them.

How the sample is built

The program is `crates/swx-core/examples/roll_back.rs`. Two calls move the marker and read it:

```
doc.set_end_of_part(2)?;        // roll back: 2 features above the marker
doc.end_of_part();              // 2
doc.active_features();          // the features above the marker
let back = doc.history().len();
let rebuild = doc.set_end_of_part(back)?;   // [Sketch2, Revolve1]
```

`add_feature` needs no change: it always inserts at the marker. `history()` still lists every feature, rolled back or not; `active_features()` lists only those above the marker. `set_end_of_part` returns the features that came back and must be rebuilt, which is nothing when you roll back.

> **CAUTION** **Places and numbers**
>
> A feature's number never changes, but its place in the history does when a feature is inserted above it. To find a feature by its number, search the history for it, as the sample's `names` helper does; don't use the number as a place in the list.

15.4 Name and rename parameters

Every part keeps its parameters in one parameter table. Each row has a name, a value, a unit and an optional comment, and says where the parameter came from. A *model parameter* belongs to a dimension and gets the next free name in the series `d0`, `d1`, `d2`, … A *user parameter* is one you create yourself, with a name you choose, for a value you want to reuse or change in one place.

Names like `d0` are quick to make but say nothing. Renaming `d0` to `thickness` makes the part easier to read, and every feature that uses it follows the new name, so nothing breaks.

YOU WILL	Build a small parameter table, rename a parameter a feature uses, and see which names are refused.
YOU NEED	Saulitwerx built (Chapter 2).
TIME	5 minutes.

1. Run the sample:

   TERMINAL

   ```
   cargo run -p swx-core --example parameter_table
   ```

   OUTPUT

   ```
   model parameters: d0, d1, d2
   after renaming d0 to thickness:
     name       kind   value  unit  comment
     thickness  model      5  mm
     d1         model     40  mm
     d2         model     10  mm
     clearance  user     0.2  mm    gap around the pin
   Extrude1 depth reads `thickness`
   next model parameter: d3
   add `2nd_hole` -> error: invalid parameter name `2nd_hole`: must start with a letter or `_`
   and contain only letters, digits and `_`
   rename d1 to thickness -> error: a parameter named `thickness` already exists
   ```

2. Read the first line. Three dimensions of a plate (its thickness, width and hole size) were given the model names `d0`, `d1` and `d2`, in the order they were made.

3. Read the table. `d0` is now called `thickness`; it is still a model parameter. `clearance` is a user parameter, with a comment saying what it is for. The rows stay in the order they were made.
4. Read the line about Extrude1. The extrude was made with depth `d0`. After the rename it reads `thickness`, with no change to the extrude itself.
5. Read `next model parameter: d3`. The name `d0` became free when it was renamed, but it is not handed out again. A model name always means one parameter, for the life of the part.
6. Read the last two lines. A name may not start with a digit, and two parameters may not share a name. In both cases the table is left as it was.

RESULT You have a parameter table with meaningful names, and a feature that kept working through a rename.

> **TIP** **Name what you will change**
>
> Rename the parameters you expect to edit later, such as a thickness or a hole size. Leave the rest as `d0`, `d1`, …

How the sample is built

The program is `crates/swx-core/examples/parameter_table.rs`. Each call works on the document:

```
let depth = doc.add_model_param(5.0, "mm");        // "d0"
doc.add_user_param("clearance", 0.2, "mm")?;
doc.set_param_comment("clearance", "gap around the pin")?;
doc.rename_param(&depth, "thickness")?;
for p in doc.parameters() { /* name, kind, value, unit, comment */ }
```

The unit is free text, such as `"mm"` or `"deg"`, and may be empty; Saulitwerx doesn't check it yet. `set_param`, used in the history sample above, changes a parameter's value; given a new name, it makes a user parameter with no unit. Section 16.13 lists every call.

A parameter can also hold a formula instead of a plain number, so that it follows other parameters (Section 15.7).

15.5 Drive a sketch with parameters

A sketch dimension can be tied to a parameter, so the parameter table becomes the place where you change the part's sizes. Each tied dimension makes its own model parameter, `d0`, `d1`, … in the order you add them. Change the parameter, and the dimension follows the next time you apply the table and solve. The tie is called a *binding*.

YOU WILL	Bind a rectangle's width and height to parameters, rename one, change it, and see the sketch follow.
YOU NEED	Saulitwerx built (Chapter 2). OpenCascade is not needed.
TIME	5 minutes.

1. Run the sample:

TERMINAL

```
cargo run -p swx-sketch --example driven_plate
```

OUTPUT

```
dimension 40 mm -> parameter d0
dimension 25 mm -> parameter d1
solved: 40.00 × 25.00 mm
renamed d0 to width (1 dimension follows)
width = 60: 60.00 × 25.00 mm
rename d1 without rename_bound -> error: a sketch dimension is bound to unknown parameter `d1`
height = 0 -> error: value must be > 0, got 0
sketch still 60.00 × 25.00 mm
```

2. Read the first two lines. The width dimension, 40 mm, made parameter `d0`; the height, 25 mm, made `d1`.
3. Read `renamed d0 to width`. The parameter got a meaningful name, and the sketch was told, so its width dimension now reads `width`.
4. Read `width = 60`. Setting `width` to 60 and applying the table made the rectangle 60 mm wide. The height stayed 25 mm.
5. Read the last three lines. Renaming `d1` in the table alone left the sketch looking for `d1`, which no longer exists. A height of 0 was refused, and the sketch kept its size.

RESULT A rectangle whose size you change from the parameter table.

How the sample is built

The program is `crates/swx-sketch/examples/driven_plate.rs`. Instead of `add_constraint`, a dimension goes in with `bind_dimension`, which also adds its parameter:

```rust
use swx_sketch::params::{apply_params, bind_dimension, rename_bound};

let (_, name) = bind_dimension(&mut s, &mut doc, Constraint::Distance {
    a: PointRef::Start(bottom), b: PointRef::End(bottom), value: 40.0 })?;
// name == "d0"
doc.rename_param("d0", "width")?;
rename_bound(&mut s, "d0", "width");
doc.set_param("width", 60.0);
apply_params(&mut s, &doc)?;              // copy the values into the sketch
s.solve(SolveOptions::default())?;        // then move the geometry
```

CAUTION **Rename in both places**

The document and the sketch keep their own lists. `doc.rename_param` renames the parameter and the features that use it, but not the sketch's bindings. Call `rename_bound` with the same two names straight after, or `apply_params` fails with `a sketch dimension is bound to unknown parameter`.

TIP

Only distance, radius and diameter can be bound. A diameter's parameter holds the diameter, not the radius. `apply_params` checks every value before it changes anything, so one bad value leaves the whole sketch as it was.

15.6 Work out an expression

An expression lets one size depend on others: a hole that is always half the plate's width plus 5 mm is `d1 / 2 + 5 mm`. Saulitwerx reads the formula, looks up each name, and checks the units as it goes. Adding a length to an angle is an error, but a length times a length is an area.

YOU WILL	Work out six expressions from a small parameter table, and see each error an expression can give.
YOU NEED	Saulitwerx built (Chapter 2).
TIME	5 minutes.

1. Run the sample:

   TERMINAL

   ```
   cargo run -p swx-core --example expressions
   ```

   The table holds `d0` = 5 mm, `d1` = 40 mm, `wall` = 2.5 mm and `angle` = 30 deg.

   OUTPUT

   ```
   d1 / 2 + 5 mm        = 25.00 mm
   (d1 - 2 * wall) / 3  = 11.67 mm
   2 in + d0            = 55.80 mm
   90 deg - angle       = 60.00 deg
   d1 * d0              = 200.00 mm²
   d1 / d0              = 8.00 (unitless)
   d1 + 5 deg
     error: dimension mismatch at byte 3: cannot apply `+` to length and angle
   5 mmm
     error: unknown unit `mmm` at byte 2 (expected mm, cm, m, in, ft, deg or rad)
   d9 * 2
     error: unknown name `d9` at byte 0
   d1 / (d0 - 5 mm)
     error: division by zero at byte 3
   d1 / (2
     error: syntax error at byte 7: expected `)`
   ```

2. Read the first line. Half of 40 mm is 20 mm, plus 5 mm is 25 mm. Multiplication and division come before addition and subtraction, as in school arithmetic; brackets change the order, as in the second line.
3. Read `2 in + d0`. Units can be mixed: 2 inches is 50.8 mm, plus 5 mm. Results are always worked out in millimeters and radians.
4. Read the next three lines. An angle minus an angle is an angle. A length times a length is an area, in mm². A length divided by a length is a plain number with no unit.
5. Read the errors. Each one says what is wrong and where, counting characters from 0: in `d1 + 5 deg`, byte 3 is the `+`.

RESULT You can work out a size from other sizes, in any of seven units, and trust that mixed-up units are caught.

How the sample is built

The program is `crates/swx-core/examples/expressions.rs`. `parse` reads the text once; `eval` works it out, asking a function you supply for each name's value:

```rust
use swx_core::expr::{eval, parse, Quantity, Unit};

let resolve = |name: &str| -> Option<Quantity> {
    let p = doc.parameters().iter().find(|p| p.name == name)?;
    let unit = Unit::from_suffix(&p.unit)?;
    Some(Quantity::new(p.value * unit.factor(), unit.dim()))
};
let q = eval(&parse("d1 / 2 + 5 mm")?, &resolve, Unit::Mm)?;
// q.value == 25.0 (mm), q.dim == Dim::LENGTH
```

The parameter table stores a unit as plain text, so the sample turns it into a `Unit` itself. Section 16.14 lists the rules and every unit.

> **TIP** **Give every number its unit**
>
> `d1 + 5` is an error, because `d1` is a length and `5` is a bare number. Write `d1 + 5 mm`. A bare number is right only where it scales something, as in `d1 / 2`.

15.7 Make one size follow another

A parameter can hold an expression instead of a plain number. Then it is worked out from the parameters it names, and it changes whenever they do. Give a plate's hole the formula `d0 / 2 + 5 mm`, and when you make the plate wider, the hole grows with it. You change one number; the rest follow.

Saulitwerx works the formulas out in *dependency order*: every parameter after the ones its formula uses. It also refuses a formula that would make a loop, such as `a` from `b` while `b` comes from `a`, because a loop has no answer.

YOU WILL	Give two parameters formulas, change and rename the one they depend on, and see which formulas are refused.
YOU NEED	Saulitwerx built (Chapter 2).
TIME	5 minutes.

1. Run the sample:

TERMINAL

```
cargo run -p swx-core --example parameter_formulas
```

The table starts with `d0` = 40 mm, the plate's width, and `wall` = 2.5 mm. `d1` gets the formula `d0 / 2 + 5 mm` and `d2` gets `(d0 - 2 * wall) / 3`.

OUTPUT

```
  name   value  unit  formula
  d0     40.00  mm
  d1     25.00  mm    d0 / 2 + 5 mm
  d2     11.67  mm    (d0 - 2 * wall) / 3
  wall    2.50  mm
worked out in order: d0, d1, wall, d2
change d0 -> rebuild Extrude1
after d0 = 60:
  name   value  unit  formula
  d0     60.00  mm
  d1     35.00  mm    d0 / 2 + 5 mm
  d2     18.33  mm    (d0 - 2 * wall) / 3
  wall    2.50  mm
after renaming d0 to width:
  name   value  unit  formula
  width  60.00  mm
  d1     35.00  mm    width / 2 + 5 mm
  d2     18.33  mm    (width - 2 * wall) / 3
  wall    2.50  mm
width = d1 - 5 mm -> error: parameter expressions form a cycle: width -> d1 -> width
d1 = width * wall -> error: expression for `d1` gives length^2, but its unit expects length
d1 = height / 2 -> error: expression for `d1`: unknown name `height` at byte 0
after d1 = 30 (typed as a plain number):
  name   value  unit  formula
```

```
width  60.00  mm
d1     30.00  mm
d2     18.33  mm    (width - 2 * wall) / 3
wall    2.50  mm
```

2. Read the first table. Each parameter with a formula shows it, and its value is the formula's result: 40 / 2 + 5 = 25 mm, and (40 − 5) / 3 = 11.67 mm.
3. Read `worked out in order`. `d2` needs `wall`, which was made after it, so `d2` is worked out last. Parameters that need nothing keep the order they were made in.
4. Read `change d0 -> rebuild Extrude1`. The sample's one extrude has depth `d1`, and `d1` comes from `d0`, so changing `d0` rebuilds the extrude, though the extrude never names `d0` (Section 4.10).
5. Read the table after `d0 = 60`. `d1` and `d2` followed on their own: 35 mm and 18.33 mm.
6. Read the table after the rename. The formulas now say `width`, and every value is the same.
7. Read the three errors. `width` from `d1` would make a loop, so it is refused, and the message traces it. `width * wall` is an area, which can't go in a length. `height` doesn't exist. Each time the table is left exactly as it was.
8. Read the last table. Typing a plain number into `d1` replaced its formula. `d1` is 30 mm from now on, and no longer follows `width`.

RESULT A parameter table where one change updates every size that depends on it.

How the sample is built

The program is `crates/swx-core/examples/parameter_formulas.rs`. `set_param_expr` stores a formula and works out the whole table:

```rust
let width = doc.add_model_param(40.0, "mm");      // d0
let hole = doc.add_model_param(0.0, "mm");        // d1
doc.add_user_param("wall", 2.5, "mm")?;
doc.set_param_expr(&hole, "d0 / 2 + 5 mm")?;    // d1 is now 25
doc.set_param(&width, 60.0);                      // d1 follows: 35
doc.evaluation_order();                           // names, dependencies first
```

Each `Parameter` has an `expr` field holding the formula as typed, or `None` for a plain number. The result is stored in the parameter's own unit: a formula giving 1 inch, in a parameter whose unit is `mm`, stores 25.4. A bare number, such as `5`, is taken in the parameter's unit. Section 16.13 lists every call.

> **CAUTION** **A plain number replaces the formula**
>
> `set_param` stores a number and drops any formula the parameter had. To change how a parameter is worked out, give it a new formula with `set_param_expr` instead.

> **TIP** **When a change can't be worked out**
>
> If a new value would break a formula that depends on it, such as a count of 0 under `10 mm / n`, the value is still stored, but the formulas that depend on it keep their old results without an error. Check the values after such a change.

15.8 Common mistakes

- **Using a parameter before it exists.** Call `set_param` first; otherwise `add_feature` fails with `unknown parameter`.
- **Naming a parameter badly.** A name starts with a letter or `_` and holds only letters, digits and `_`: `hole_2` works, `2nd_hole` and `hole-2` don't. Names are case-sensitive.
- **Reusing a name.** Every parameter needs its own name, whether it is a model or a user parameter. To swap two names, rename one of them to a spare name first.
- **Renaming a bound parameter in one place only.** Call `rename_bound` after `rename_param` (Section 15.5).
- **Forgetting to apply and solve.** Changing a parameter changes the table only. Call `apply_params`, then `solve`, to move the sketch.
- **A formula that loops.** A parameter can't depend on itself, directly or through others. Break the loop by making one of them a plain number.
- **Replacing a formula by accident.** `set_param` drops the formula (Section 15.7).
- **Using a feature that comes later.** A feature may use only features already in the history and above the end-of-part marker. Otherwise `add_feature` fails with `feature N references feature M which is not earlier in the history`. If `M` is rolled back, roll forward first, or insert the new feature after it.
- **Using a feature's number as its place.** Once a feature has been inserted above others, numbers and places differ (Section 15.3). Search `history()` for the number.
- **Moving the marker past the end.** `end-of-part position 9 is past the end of the history (6 features)`. The end is `history().len()`.

PART IV

Reference

Every command, option, operation and setting that exists today, with its default and its allowed values.

CHAPTER 16

Reference

16.1 `swx-qa render`

Draws a part as an isometric, flat-shaded PNG with its sharp edges outlined.

FORM

```
swx-qa render (--fixture <name> | --step <file.step>) -o <out.png> [options]
```

Option	What it does	Default
`--fixture <name>`	Draws a built-in part: `cube`, `cylinder` or `l-bracket`. Give this or `--step`, not both.	—
`--step <file>`	Draws a STEP file. Needs a build with `--features occt`.	—
`-o`, `--output <file>`	The PNG to write. Required. An existing file is replaced.	—
`--size <W>x<H>`	Picture size in pixels. Each side from 1 to 8192.	`800x600`
`--crease <deg>`	Outline edges where the surface bends by more than this many degrees. 0 to 180.	`30`
`-h`, `--help`	Prints the help text and does nothing else.	—

On success it prints `wrote <file> (<W>x<H>, <bytes> bytes)` and exits with status 0. On an error it prints `swx-qa:` and the message (Section 17.2) and exits with status 1, without writing a file.

Built-in part	Shape
`cube`	A 10 mm cube with one corner at the origin.
`cylinder`	Radius 5 mm, height 10 mm, standing on +Z; 32 flat segments around.
`l-bracket`	An L profile with 30 mm legs and 8 mm thickness, 20 mm deep.

16.2 `swx-qa sketch`

Solves a built-in sketch and draws it from above as a PNG, with its dimension values.

FORM

```
swx-qa sketch --fixture <name> -o <out.png> [--size <W>x<H>]
```

Option	What it does	Default
`--fixture <name>`	The built-in sketch to draw: `rectangle` or `triangle-345`. Required.	—
`-o`, `--output <file>`	The PNG to write. Required. An existing file is replaced.	—
`--size <W>x<H>`	Picture size in pixels. Each side from 1 to 8192.	`800x600`
`-h`, `--help`	Prints the help text and does nothing else.	—

Success and errors work as for `render`. `--step` and `--crease` belong to `render` only.

Built-in sketch	Shape
`rectangle`	40 × 25 mm, lower-left corner fixed at the origin; sides horizontal and vertical; bottom and right dimensioned.
`triangle-345`	A right triangle with its right angle fixed at the origin; a horizontal side of 4 and a vertical side of 3, both dimensioned. The long side comes out 5.

In the picture	Drawn as
Lines, circles, arcs	Dark blue lines, 1 pixel wide.
Points, line ends	Red dots, 5 pixels across.
Distance	Its value, in green, beside the middle of the two points, on the side away from the sketch's center.
Radius, diameter	Its value with `R` or `Ø` in front, outside the circle at the upper right, or outside an arc at its middle.
Values	Up to 3 decimals, with trailing zeros dropped: `40`, `12.5`, `R2.125`.

16.3 Build options

Command	What it builds
`cargo test --workspace`	Everything without OpenCascade, and runs every test.
`cargo build --release -p swx-qa --features occt`	The `swx-qa` tool with STEP input, at `target/release/swx-qa`.
`cargo run -p swx-sketch --example plate_sketch`	Runs the sample sketch (Chapter 5).
`cargo run -p swx-sketch --example sketch_dof`	Runs the degree-of-freedom sample (Section 5.3).
`cargo run -p swx-sketch --example centered_plate -- [<width> <height>]`	Runs the centered-hole sample (Section 5.5). Defaults: 40 and 25.
`cargo run -p swx-sketch --example slot_sketch`	Runs the slot sample (Section 5.6).
`cargo run -p swx-qa --example plate_sketch_plot -- <dir> [<W>x<H>]`	Draws the sample sketch in three stages, as PNGs in `<dir>` (Section 14.5).
`cargo run -p swx-qa --example constraint_plots -- <dir> [<W>x<H>]`	Draws the centered-plate and slot sketches as PNGs in `<dir>`.
`cargo run -p swx-kernel --features occt --example plate_with_hole -- <file.step>`	Builds the plate and saves it (Chapter 6). The file defaults to `plate.step`.
`cargo run -p swx-kernel --features occt --example part_topology`	Counts the plate's faces, edges and vertices and lists their neighbours (Section 6.3).
`cargo run -p swx-kernel --features occt --example plate_stages -- <dir>`	Saves the block, the cylinder and the plate as three STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example extrude_plate -- <file.step>`	Extrudes the plate from its outline (Section 7.1).
`cargo run -p swx-kernel --features occt --example extrude_slot -- <file.step>`	Extrudes a slot three ways (Section 7.2).
`cargo run -p swx-kernel --features occt --example extrude_modes -- <dir>`	Joins, cuts and intersects extrudes with a block (Section 7.3). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example extrude_through_all -- <dir>`	Cuts two holes through a block (Section 7.4). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example extrude_history`	Extrudes the plate with history and prints which face each piece of the outline became (Section 7.5).

Command	What it builds
`cargo run -p swx-kernel --features occt --example extrude_to_face -- <dir>`	Extrudes up to and between the faces of a stepped block (Section 7.6). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example revolve_bushing -- <dir>`	Revolves a bushing and cuts a groove in it (Chapter 8). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example fillet_chamfer -- <dir>`	Fillets and chamfers the edges of a block (Chapter 9). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example chamfer_sizes -- <dir>`	Chamfers one edge of a block four ways (Section 9.2). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example boolean_history -- <out.step>`	Cuts a groove with history and prints what became of each face (Section 6.4).
`cargo run -p swx-kernel --features occt --example shell_parts -- <dir>`	Shells a block into a tray and a frame, and a cylinder into a cup (Chapter 10). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example fillet_variable -- <dir>`	Rounds one edge of a block from 2 mm to 8 mm (Section 9.3). STEP files in `<dir>`.
`cargo run -p swx-kernel --features occt --example hole_plate -- <dir>`	Drills four holes in a plate (Chapter 11). A STEP file in `<dir>`.
`cargo run -p swx-kernel --features occt --example draft_block -- <dir>`	Drafts the sides of a block three ways (Chapter 12). STEP files in `<dir>`.
`cargo run -p swx-kernel --example work_features`	Builds work planes, axes and a point, and prints them (Section 13.1). Needs no OpenCascade.
`cargo run -p swx-kernel --features occt --example tilted_post -- <dir>`	Stands a post at 30° on a plate, from a tilted work plane (Section 13.2). A STEP file in `<dir>`.
`cargo run -p swx-core --example feature_history`	Runs the history sample (Chapter 15).
`cargo run -p swx-core --example roll_back`	Runs the roll-back sample (Section 15.3).
`cargo run -p swx-core --example parameter_table`	Runs the parameter-table sample (Section 15.4).
`cargo run -p swx-sketch --example driven_plate`	Runs the bound-dimension sample (Section 15.5).
`cargo run -p swx-core --example expressions`	Runs the expression sample (Section 15.6).
`cargo run -p swx-core --example parameter_formulas`	Runs the stored-formula sample (Section 15.7).
`cargo run -p swx-sketch --example inferred_sketch`	Runs the inference sample (Section 5.8).
`cargo run -p swx-qa --example inference_plots -- <dir> [<W>x<H>]`	Draws the inference sketch as drawn and after inference, as PNGs in `<dir>`.

The `occt` feature switches on OpenCascade. It is off by default, so a plain build needs only Rust.

16.4 Geometry kernel operations

Operation	What it does and what it accepts
`make_box(corner, size)`	A box with its lowest corner at `corner` and sides `size` = [x, y, z]. Sizes > 0.
`make_cylinder(base, r, h)`	A cylinder along +Z with its base circle centered at `base`. Radius and height > 0.
`make_sphere(center, r)`	A sphere. Radius > 0.

Operation	What it does and what it accepts
`union(a, b)`, `cut(a, b)`, `intersect(a, b)`	Boolean operations (Section 4.9). Inputs unchanged.
`boolean_tracked(op, a, b)`	The same solid as `union`, `cut` or `intersect` (by `op`), with an `OpHistory` (Section 6.4). Same errors as the plain call.
`volume(s)`, `surface_area(s)`	In mm³ and mm².
`bounding_box(s)`	The smallest box, aligned with the axes, that holds the solid: its `min` and `max` corners.
`face_count(s)`	The number of faces.
`sub_shape_count(s, kind)`	The number of faces, edges or vertices (`kind`), each shared one counted once. Their indices run from 0 to the count minus 1 (Section 6.3).
`adjacent(s, of, kind)`	The sub-shapes of `kind` that touch `of`, sorted by index, without repeats: going down, the edges or vertices of a face, or the vertices of an edge; going up, the faces or edges that contain `of`. `kind` must differ from `of.kind`, and `of.index` must be in range.
`sub_shape_bounding_box(s, of)`	The smallest axis-aligned box around one face, edge or vertex `of` of `s`, as for `bounding_box`. `of.index` must be in range.
`face_plane(s, face)`	The plane of the flat face `face` of `s`: a point on it and its unit outward normal, pointing out of the solid (Section 7.6). `face` must be a face, in range, and flat.
`fillet(s, edges, radius)`	Rounds every edge in `edges` with one radius (Chapter 9). Radius > 0; the list not empty, edges only, each in range; an edge listed twice counts once. A radius that doesn't fit fails, and `s` is unchanged.
`fillet_variable(s, edge, start, r_start, r_end)`	Rounds one `edge` with a radius that changes evenly from `r_start` at the vertex `start` to `r_end` at the edge's other end (Section 9.3). Both radii > 0; `edge` an edge and `start` a vertex, each in range; `start` one of the edge's two vertices. The larger radius must fit as a constant fillet would, and the edge must not run smoothly into another; otherwise it fails, and `s` is unchanged.
`chamfer(s, edges, distance)`	Bevels every edge in `edges`, set back `distance` along both of its faces. Same rules as `fillet`.
`chamfer_asymmetric(s, edges, size)`	Bevels every edge in `edges`, a list of `EdgeOnFace`, by one `ChamferSize` measured from each edge's reference face (Section 9.2). The list not empty; each edge an edge and each face a face, in range; each face one of the two that bound its edge; an edge listed once, or twice with the same face. A size that doesn't fit fails, and `s` is unchanged.
`shell(s, open, thickness)`	Hollows `s` into walls of one `thickness` (mm, > 0), grown inward so the outside size is unchanged, with the faces in `open` removed as openings (Chapter 10). The list not empty, faces only, each in range; a face listed twice counts once. A thickness that doesn't fit fails, and `s` is unchanged.
`hole(s, at, kind, depth)`	Drills a hole of `kind` and `depth` into `s` (Chapter 11). `at` is an `Axis`: its `origin` the hole's center on the start face, its `dir` pointing into the material. Depths are measured from `at.origin` along `dir`, to a flat bottom. A hole that removes nothing is refused; one that removes everything is `EmptyResult`. `s` is unchanged.
`draft(s, faces, neutral, angle)`	Tilts every face in `faces` by `angle` radians about the line where it crosses the neutral plane (Chapter 12). `neutral` is an `Axis`: a point on the neutral plane, and the pull direction, which is the plane's normal. A positive angle makes the solid smaller along the pull direction. The angle not zero and less than π/2 either way; the list not empty, faces only, each in range; a face listed twice counts once. A face the engine can't draft, such as one parallel to the neutral plane, fails, and `s` is unchanged.
`tessellate(s, deflection)`	Breaks the surface into triangles, no farther than `deflection` (mm, > 0) from the true surface.

Operation	What it does and what it accepts
`export_step(s, path)`	Writes a STEP file in millimeters, replacing any existing file.
`import_step(path)`	Reads everything in a STEP file as one shape.

All positions must be finite numbers; all sizes finite and greater than zero.

Type	Fields and rules
`TopoKind`	`Face`, `Edge` or `Vertex`.
`SubShape { kind, index }`	One face, edge or vertex: the `index`-th of its `kind`, counted from 0. Valid only for the shape it came from; ask again after each operation.
`EdgeOnFace { edge, face }`	An edge, and the reference face an uneven chamfer measures its first size on: one of the two faces that meet at the edge.
`ChamferSize::TwoDistances { d1, d2 }`	`d1` on the reference face, `d2` on the other face. Both finite and > 0, in mm.
`ChamferSize::DistanceAngle { distance, angle }`	`distance` on the reference face, finite and > 0, in mm. `angle` between the reference face and the new face, in radians, strictly between 0 and π/2.
`HoleKind::Simple { diameter }`	A plain round hole. Diameter > 0, in mm.
`HoleKind::Counterbore { diameter, cb_diameter, cb_depth }`	A hole with a wider, flat-bottomed recess at its mouth. All > 0, in mm; `cb_diameter` larger than `diameter`.
`HoleDepth::Blind(depth)`	Stops `depth` mm from the start point, with a flat bottom. Depth > 0, and larger than a counterbore's `cb_depth`.
`HoleDepth::ThroughAll`	Through the whole solid, along the direction from the start point.
`BooleanOp`	`Union`, `Cut` or `Intersect`.
`OpHistory { modified, generated }`	`modified`: one entry `(operand, face, images)` for each face of `a` (`Operand::A`), then of `b` (`Operand::B`), in index order. `images` are the result's faces it became, sorted: one if it lives on (perhaps trimmed), several if split, none if deleted. `generated` is empty for a Boolean. Faces only.

16.5 Profiles, extrude and revolve

`make_face(plane, outer, holes)` makes a flat face on `plane`, bounded by the `outer` loop, with each loop in `holes` cut out. `extrude(face, extent)` sweeps that face along the plane's normal into a new solid (Chapter 7).

Type	Fields and rules
`Workplane`	`origin` (a point), `x_dir` (the plane's left–right direction) and `normal` (straight out of the plane). Both directions non-zero and at right angles; their length doesn't matter. A 2D point (u, v) sits at `origin + u·x_dir + v·(normal × x_dir)`.
`Workplane::XY`, `::XZ`, `::YZ`	Built-in planes through the origin, with normals +Z, −Y and +X (Section 7.2).
`Segment2::Line { start, end }`	A straight piece. Its ends must be apart.
`Segment2::Arc { center, radius, start_angle, end_angle }`	A circular arc, counterclockwise from `start_angle` to `end_angle`, in radians from the +u axis. Radius > 0; the two angles must give different end points.
`Segment2::Circle { center, radius }`	A full circle. Radius > 0. It must be the only piece of its loop.

Type	Fields and rules
`ProfileLoop { segments }`	Pieces in chain order, each meeting the next and the last meeting the first. Any piece may run backwards, and the loop may go either way round.
`Extent::Distance(d)`	`d` mm along the normal; negative goes the other way. Not zero.
`Extent::Symmetric(l)`	`l` mm in total, half on each side of the plane. Not zero.
`Extent::ThroughAll(dir)`	Through the whole target body (Section 7.4). Only `extrude_feature` with `ExtrudeMode::Cut` accepts it; `extrude` refuses it.
`ThroughDirection::Normal`, `::Reversed`, `::Both`	Which way a through-all cut goes: along the normal, against it, or both ways.
`Extent::FromTo(start, end)`	From `start` mm to `end` mm along the normal, in either order. Both finite, and not equal.
`Extent::ToFace(face)`	From the workplane to the plane of `face`, a flat face of the target body parallel to the workplane, on either side of it (Section 7.6). Only `extrude_feature` with join, cut or intersect accepts it.
`Extent::BetweenFaces(a, b)`	From the plane of face `a` to the plane of face `b`, both flat faces of the target body parallel to the workplane; the workplane's own position doesn't matter. Accepted as `ToFace`.
`LOOP_GAP_TOLERANCE`	1e-7 mm: the largest gap between two ends that still counts as joined. Ends that close are moved to meet exactly.
`PERPENDICULAR_TOLERANCE`	1e-9: how far from a right angle `x_dir` and `normal` may be.
`PARALLEL_FACE_TOLERANCE`	1e-9 radians: how far a face's normal may tilt from the workplane's normal, or its reverse, and still count as parallel.
`FACE_DISTANCE_TOLERANCE`	1e-7 mm: two planes closer than this count as one, so the extrude between them has no length and is refused.
`REVOLVE_AXIS_TOLERANCE`	1e-7 mm: how far a revolve's axis may be off the face's plane, and how far the face may reach past the axis, and still pass (Section 8.3).

All numbers must be finite. A face is refused if a loop is empty, has no area, doesn't close, or crosses itself, or if a hole isn't wholly inside the outer loop. Every refusal is an error (Section 17.2), never a crash.

`make_face_tracked(plane, outer, holes)` and `extrude_tracked(face, extent)` do the same as `make_face` and `extrude`, and also say where each piece went (Section 7.5). They take the same inputs and give the same errors; `extrude_tracked` refuses `Extent::ThroughAll`, `ToFace` and `BetweenFaces` as `extrude` does.

Returns	What it holds
`make_face_tracked` → `(face, edges)`	`edges[l][i]`: the edge of `face` made from piece `i` of loop `l`, with loop 0 the outer loop and loop 1 onward the holes in order. Pieces in the order you listed them, whichever way round the loop goes.
`extrude_tracked` → `(solid, history)`	The solid, as `extrude` makes it, and its `ExtrudeHistory`.
`ExtrudeHistory::start_cap`	The face the sweep starts from: the input face moved by the extent's start, a face of the solid. For a positive distance it is on the workplane; for a negative distance or a symmetric extent it isn't.
`ExtrudeHistory::end_cap`	The face where the sweep ends: the start cap moved by the length along the normal.
`ExtrudeHistory::sides`	One `(edge, face)` pair per edge of the input face, in edge index order: an edge of the input face, then the side face of the solid it swept.

`extrude_feature(k, face, extent, mode, target)` extrudes `face` like `extrude`, then combines the result with `target` as `mode` says (Section 7.3). It returns a new solid; `target` is left unchanged.

Mode or value	Result and rules
`ExtrudeMode::NewSolid`	The extrusion alone. `target` is ignored and may be `None`.
`ExtrudeMode::Join`	Target ∪ extrusion. Needs a target.
`ExtrudeMode::Cut`	Target − extrusion. Needs a target.
`ExtrudeMode::Intersect`	Target ∩ extrusion. Needs a target.
`EMPTY_VOLUME_TOLERANCE`	1e-9 mm³: a result with less volume than this counts as empty and is refused with `EmptyResult`.

A through-all extent with any mode but cut, a face extent with the new-solid mode, and a missing target, are checked first, before any geometry is made. A face extent is then turned into a plain one: `ToFace` into `Distance(d)`, `BetweenFaces` into `FromTo(d_a, d_b)`, where each `d` is the signed distance of a face's plane from the workplane along its normal, so a face behind the workplane gives a negative distance. A through-all cut is made a little longer than the distance from the outline to the far side of the target, measured from their bounding boxes. If it leaves the target's volume unchanged (within a relative 1e-9), it is refused as a miss. Errors from `extrude` and from the Boolean operations come through unchanged.

`revolve(face, axis, angle)` turns a face from `make_face` about `axis` by `angle` radians into a new solid (Chapter 8). `revolve_feature(k, face, axis, angle, mode, target)` revolves it and combines the result with `target`, with the same modes and rules as `extrude_feature` (Section 8.2).

Type or value	Fields and rules
`Axis { origin, dir }`	The line through the point `origin` along `dir`. `origin` finite; `dir` finite and non-zero, any length (it is scaled to length 1).
`angle`	Radians, greater than 0 and at most 2π (a full turn; up to 1e-12 over 2π also counts as a full turn). A positive angle turns counterclockwise looking against `dir`, from its tip (right-hand rule).

The axis and the angle are checked before any geometry is made. Then `revolve` checks the face against the axis: the face must be one flat face, the axis must lie in its plane, and the face must not have points on both sides of the axis. Each check allows `REVOLVE_AXIS_TOLERANCE`, 1e-7 mm; a face that touches the axis passes (Section 8.3).

16.6 Work features

Work planes are `Workplane` values and work axes `Axis` values (Section 16.5), so they go wherever those do. Work points are `Point3` values, `[x, y, z]` in mm. None of these calls needs OpenCascade (Chapter 13).

Call or value	What it gives and what it accepts
`ORIGIN`	The part origin, (0, 0, 0).
`Axis::X`, `::Y`, `::Z`	The origin axes: through the origin along +X, +Y and +Z.
`plane.offset(distance)`	The plane moved `distance` mm along its normal, keeping its directions. Any finite distance, negative included.
`Workplane::through_points(p0, p1, p2)`	The plane through three points: origin `p0`, `x_dir` towards `p1`, normal along (p1 − p0) × (p2 − p0). The points different and not in a line.
`Workplane::from_point_normal(p, n)`	The plane through `p` with normal `n`. Its `x_dir` is +X laid flat on the plane, or +Y if `n` is along X. `n` non-zero.
`plane.angled(axis, angle)`	The plane turned `angle` radians about `axis` (right-hand rule), origin included. The axis must lie in the plane. Any finite angle.
`Axis::through_points(p, q)`	The axis through `p` pointing towards `q`. The points different.
`Axis::plane_intersection(a, b)`	The line where two planes meet, along a.normal × b.normal, through its point nearest the origin. The planes not parallel.
`plane_axis_intersection(plane, axis)`	The point where the axis crosses the plane. The axis not parallel to the plane.

Every input must be finite, and every refusal is `InvalidInput` (Section 17.2). The checks use `DATUM_TOLERANCE`, 1e-9: directions this close count as parallel, points this close (in mm) as the same, and an axis this close to a plane as lying in it.

16.7 Sketch entities and constraints

Entity	Defined by
`Point`	x, y.
`Line`	A start point and an end point.
`Circle`	A center point and a radius > 0.
`Arc`	A center, a radius > 0, and start and end angles in radians, running counter-clockwise; the end angle must be after the start. Solving can change all five; it keeps the arc's sweep more than 0 and at most one full turn.

Constraint	Rule
`Coincident(p, q)`	Points `p` and `q` are at the same place.
`Horizontal(line)`	The line's two ends are at the same height.
`HorizontalPoints(p, q)`	`p` and `q` are at the same height.
`Vertical(line)`	The line's two ends are directly above each other.
`VerticalPoints(p, q)`	`p` is directly above or below `q`.
`Fixed { point, x, y }`	The point stays at (x, y).
`Distance { a, b, value }`	Points `a` and `b` are `value` apart. Value > 0.
`Radius { geom, value }`	The circle or arc has this radius. Value > 0.
`Diameter { geom, value }`	The circle or arc has this diameter. Value > 0.
`Parallel(l1, l2)`	Lines `l1` and `l2` point the same way (or exactly opposite ways).
`Perpendicular(l1, l2)`	Lines `l1` and `l2` are at 90°.
`Equal(g1, g2)`	Two lines of equal length, or two circles or arcs of equal radius (any mix of circle and arc). A line and a circle can't be made equal.
`Midpoint { point, line }`	The point is halfway between the line's two ends.
`Symmetric { a, b, line }`	Points `a` and `b` are mirror images across the line: the middle of `a` – `b` lies on the line (or on its extension), and `a` – `b` is perpendicular to it.
`Tangent(g1, g2)`	A line and a circle or arc, in either order, touch: the distance from the center to the line (extended without end) equals the radius. Or two circles or arcs touch, from outside or inside.

A point `p` is written `PointRef::Point(id)` for a point entity, `Start(id)` or `End(id)` for a line's ends, `Center(id)` for a circle's or arc's center, or `ArcStart(id)` or `ArcEnd(id)` for the point of an arc at its start or end angle. Every constraint that takes a point accepts all six.

Tangent detail	How it is decided
Line and circle	The circle stays on the side of the line its center was on when the constraint was added.
Two circles	Touching from outside (centers `r1 + r2` apart) or inside (`|r1 – r2|` apart), whichever the drawing was closer to when the constraint was added.
Line end joined to arc end	When a coincident joins one of the line's ends directly to one of the arc's ends, tangent means the line is square to the arc's radius at that shared point. This holds whichever of the two constraints is added first; a join made through a separate point entity is not recognized.
Where they touch	Otherwise anywhere along the line. Tangent alone doesn't say where a line stops; add other constraints for its ends.

Tangency uses the standard distance conditions for lines and circles; see A. Bowyer and J. Woodwark, *A Programmer's Geometry*, chapters 3 and 5.

16.8 Solver settings and report

Setting	Meaning	Default
`tolerance`	Done when the remaining error is at most this.	`1e-10`
`max_iterations`	Give up after this many attempts.	`100`
`initial_damping`	How cautious the first steps are.	`1e-6`

Stop reason	Meaning
`Converged`	Every rule holds, within the tolerance. `converged` is `true`.
`MaxIterations`	The attempts ran out first.
`Stagnated`	No move makes it better: usually rules that conflict.
`NonFinite`	A value became infinite or not a number.

The solver uses the Levenberg–Marquardt method, a standard way to solve many equations at once; see J. Nocedal and S. J. Wright, *Numerical Optimization*, 2nd ed., chapter 10.

16.9 Profiles

`swx_sketch::profile::profile_report(&sketch, &options)` finds the regions a sketch encloses and the pieces left open (Section 4.7). `profiles(&sketch, &options)` returns the regions alone. Point entities are ignored.

Setting	Meaning	Default
`weld_tolerance`	Ends of pieces closer than this count as one corner. `None` uses 0.000001 × the diagonal of the box around the sketch. Must be > 0 when given.	`None`

Result	Meaning
`regions`	Every region found. Each has an `outer` loop and a list of `holes`.
`Region::area()`	The region's area: the outer loop's area minus its holes', in mm².
`Loop`	The `edges` around it in order, each a piece's id and whether it is walked backwards (`reversed`), and its `signed_area`.
`signed_area`	Positive for an outer loop, which runs counter-clockwise; negative for a hole, which runs clockwise. Exact for arcs.
`open_edges`	Ids of the pieces in no loop: free-ended pieces, pieces that only link two loops, and pieces of zero length. Smallest id first.

Rule	What happens
Circle	A loop on its own. So is an arc that goes all the way round.
Loop inside a loop	Becomes a hole of the smallest loop around it. A loop inside that hole is a new region (an island), and so on, alternating.
Pieces that cross, overlap or touch away from their ends	An error, `SelfIntersecting`, naming the first two such pieces. No regions are returned.
No closed loop	No regions, and no error.

Loops are found by walking around each corner in angle order, the standard method for the faces of a flat network of lines; see M. de Berg, O. Cheong, M. van Kreveld and M. Overmars, *Computational Geometry*, 3rd ed., §2.2. Areas use Green's theorem (J. Stewart, *Calculus*, 8th ed., §16.4).

16.10 Degree-of-freedom report

`sketch.dof(options)` checks a sketch as it is now (Section 4.6) and returns a `SketchDofReport`. Run it after `solve`. The lower-level `swx_sketch::dof::analyze(&sketch, sketch.params(), options)` returns the `DofReport` alone.

Setting	Meaning	Default
`rank_tolerance`	How independent an equation must be, compared with the largest, to count as a new rule rather than a repeat.	`1e-9`
`residual_tolerance`	A sketch with a repeated rule is `Conflicting`, not `OverConstrained`, when its remaining error is more than this.	`1e-8`

Report field	Meaning
`dof`	Degrees of freedom left: the sketch's numbers minus its independent equations.
`rank`	The number of independent equations.
`redundant`	The numbers of the equations that repeat earlier ones, smallest first, counting from 0 in the order the constraints were added.
`residual_norm`	The remaining error: how far the rules are from being met, overall.
`state`	One of the states below.

State	When
`UnderConstrained`	No repeated rule, and `dof` is more than 0.
`FullyConstrained`	No repeated rule, and `dof` is 0.
`OverConstrained`	At least one repeated rule, and every rule is met.
`Conflicting`	At least one repeated rule, and the remaining error is more than `residual_tolerance`.
`NonFinite`	A value is infinite or not a number. Nothing else was worked out.

SketchDofReport field	Meaning
`report`	The `DofReport` above.
`redundant_constraints`	The constraints that own a repeated equation, as `ConstraintId`s, smallest first, each listed once. Of two rules that repeat each other, the one added later is listed.

`sketch.constraint_of_row(n)` gives the constraint that made equation `n`, or `None` when there is no such equation.

Entity or constraint	Numbers or equations
Point · Line · Circle · Arc	2 · 4 · 3 · 5 numbers (degrees of freedom when free).
Coincident · Fixed · Midpoint · Symmetric	2 equations each.
Every other constraint	1 equation.

The count uses a Householder QR factorization, taking the equations in the order they were added; see G. H. Golub and C. F. Van Loan, *Matrix Computations*, 4th ed., §5.2.

16.11 Inference

`swx_sketch::infer` suggests the constraints a newly added entity already almost satisfies (Section 5.8). `infer(&sketch, new, &options)` returns them and changes nothing. `add_inferred(&mut sketch, new, &options)` adds them in order, then solves, and returns the new constraint ids. Both fail if `new` doesn't exist or a setting is invalid.

Setting	Meaning	Default
`point_tol`	How close, in mm, two points must be to be joined, and how near a line or circle must come to touching to be made tangent. Finite and > 0.	diagonal ÷ 1000
`angle_tol_deg`	How close, in degrees, a line must be to level, upright, parallel or perpendicular. Finite and > 0.	1

`InferOptions::for_sketch(&sketch)` gives the defaults for that sketch. The diagonal is that of the smallest axis-aligned box holding the whole sketch, with circles and arcs counted as full circles; for an empty sketch `point_tol` is 0.001. The suggestions come in this order:

Suggestion	When
Coincident	For each point of the new entity (a line's start, then end; a circle's center; an arc's center, start, then end), the nearest other point within `point_tol`, if any: a point, a line end, an arc end or a center. Ties go to the entity added first.
Horizontal, vertical	The new entity is a line within `angle_tol_deg` of level or upright.
Parallel, perpendicular	The new line is within `angle_tol_deg` of parallel or square to another line. At most one, the closest. When the new line got horizontal or vertical, lines that are themselves level or upright are skipped.
Tangent	A line whose distance to a circle's or arc's center is within `point_tol` of the radius (the line counted as endless); or two circles or arcs whose centers are within `point_tol` of touching, outside or inside. Circles with the same center are skipped.

A constraint the sketch already holds, in either order, is never suggested, so inferring twice adds nothing. Inference never suggests a dimension.

Error from add_inferred	Meaning
`Sketch`	The entity doesn't exist, or a setting is not finite or not > 0. Nothing is added.
`Solve`	The solver could not start.
`NotConverged`	The constraints were added, but the solve did not finish; the geometry is the solver's best attempt.

16.12 History

A `swx_core::Document` keeps its features in history order, with the end-of-part marker between the active features and the rolled-back ones (Section 4.10, Section 15.3). Each feature has a `FeatureId`, a number given when it is made: 0, 1, 2, … in the order of making, never reused or changed. Once a feature is inserted above others, a feature's number and its place in the history differ.

Call	What it does
`add_feature(name, kind)`	Inserts a feature at the end-of-part marker, moves the marker down past it, and returns its `FeatureId`. Fails if a parameter it uses doesn't exist, or a feature it uses isn't above the marker; then nothing changes.
`history()`	Every feature in history order, active or rolled back.
`end_of_part()`	The marker's position: how many features are above it, from 0 to the number of features. A new document has 0; while the marker is at the end, `add_feature` keeps it there.
`active_features()`	The features above the marker: the first `end_of_part()` features of `history()`.
`set_end_of_part(pos)`	Moves the marker so that `pos` features are above it, and returns the features that became active, in history order; they must be rebuilt. Rolling back, or staying in place, returns none. A `pos` past the number of features fails, and the marker stays.
`dirty_after_feature_edit(id)`	The active features to rebuild after feature `id` is edited, in history order: itself and every feature that uses it, directly or not. A rolled-back feature rebuilds nothing. Fails for an unknown `id`.
`dirty_after_param_change(name)`	See Section 16.13. Rolled-back features are never listed.

Feature kind	Uses
`FeatureKind::Sketch`	nothing
`FeatureKind::Extrude { profile, depth }`	the sketch `profile`, and the parameter named `depth`
`FeatureKind::Revolve { profile, angle_deg }`	the sketch `profile`, and the parameter named `angle_deg`, in degrees

16.13 Parameters

A `swx_core::Document` keeps its parameters in creation order (Section 15.4). Every call that can fail leaves the table unchanged when it does.

Call	What it does
`add_model_param(value, unit)`	Makes a model parameter named `d<N>` and returns the name. `N` starts at 0 and only goes up; a name already taken is skipped.
`add_user_param(name, value, unit)`	Makes a user parameter. Fails if the name is invalid or taken.
`rename_param(old, new)`	Renames a parameter, every feature that uses it, and every formula that names it (whole names only: renaming `d1` leaves `d10` alone). The kind is kept. Renaming to the same name does nothing.
`set_param_comment(name, comment)`	Sets the comment. Fails if there is no such parameter.
`set_param(name, value)`	Sets the value and drops the parameter's formula, if it had one, then works out every formula that depends on it. If one of those fails, they keep their old values, with no error. An unknown name makes a user parameter with an empty unit; this name is not checked.
`set_param_expr(name, text)`	Gives the parameter a formula (Section 16.14) and works out the whole table. The result is stored in the parameter's unit; a unitless result is taken in that unit. Fails if the parameter or a name in the formula is unknown, the formula doesn't parse or can't be worked out, its result is the wrong kind of quantity for the unit, or formulas would form a loop.
`evaluation_order()`	Every parameter name, each after the parameters its formula names; ties keep creation order.
`dirty_after_param_change(name)`	The active features to rebuild when `name` changes, including those that use a parameter whose formula depends on it, directly or through other formulas.
`param(name)`	The value, or `None`.
`parameters()`	Every parameter, in creation order.
`is_valid_param_name(name)`	Whether a name is allowed.

Parameter field	Meaning	Allowed values
`name`	Unique within the part. Case-sensitive.	a letter or `_`, then letters, digits or `_` (ASCII)
`kind`	Where it came from.	`Model`, `User`
`value`	The number; for a parameter with a formula, its latest result.	any number
`unit`	Free text; not checked. Formulas understand only the units in Section 16.14.	any, may be empty
`comment`	A note for people.	any; empty by default
`expr`	The formula as typed, or `None` for a plain number.	`None` by default

The dependency order uses Kahn's algorithm, always taking the earliest-made parameter that is ready; see A. B. Kahn, "Topological sorting of large networks", *Communications of the ACM* 5(11), 1962, and T. H. Cormen et al., *Introduction to Algorithms*, 3rd ed., §22.4.

A unit that is not one of the seven in Section 16.14, including an empty one, counts as unitless when a formula reads or stores the parameter.

`swx_sketch::params` ties a sketch's dimensions to a document's parameters (Section 15.5). A sketch remembers each binding as a pair of constraint and parameter name; `sketch.bindings()` lists them in the order they were made.

Call	What it does
`bind_dimension(sketch, doc, c)`	Adds dimension `c` (a `Distance`, `Radius` or `Diameter`) to the sketch, and a model parameter with the same value and unit `mm` to the document; returns the constraint id and the parameter's name. A diameter's parameter holds the diameter. On error neither changes.
`apply_params(sketch, doc)`	Copies each bound parameter's current value into its dimension. Checks every value first, so on error nothing changes. Solve afterwards to move the geometry.
`rename_bound(sketch, old, new)`	Points the sketch's bindings from `old` to `new`; returns how many changed. Call it with every `doc.rename_param`.
`sketch.set_dimension_value(id, value)`	Changes one dimension's value directly. Value finite and > 0.

16.14 Expressions

`swx_core::expr` reads and works out expressions (Section 15.6). `parse(text)` turns the text into an `Expr`; `eval(&expr, &resolve, default_length)` works it out, asking `resolve(name)` for each name's value. `expr.names()` lists the names an expression uses, each once, in first-use order. The result is a `Quantity`: a `value` in millimeters and radians and a `dim` (its powers of length and angle). `q.in_unit(unit)` converts the value for display. `default_length` is the unit for showing lengths; it doesn't change the result.

Part	Rule
Numbers	`5`, `2.5`, `.5`, `1e-3`. A bare number has no unit.
Names	A letter or `_`, then letters, digits or `_`, as for parameters.
Operators	`+ - * /`, unary `-`, and `( )`. `*` and `/` before `+` and `-`; left to right otherwise.
Units	Written straight after a number or a `)`: `5 mm`, `(2 + 3) mm`. After a name, a word is not a unit.
`+` and `-`	Both sides must have the same dimension: two lengths, two angles, or two bare numbers.
`*` and `/`	Any dimensions; they multiply or divide. A length times a length is an area.
Limits	At most 1024 pieces and 64 levels of brackets or minus signs.

Unit	Measures	Size
`mm`	length	1 mm
`cm`	length	10 mm
`m`	length	1000 mm
`in`	length	25.4 mm
`ft`	length	304.8 mm
`deg`	angle	π/180 rad
`rad`	angle	1 rad

16.15 File formats and units

Format	Read / write	Notes
STEP (`.step` , `.stp`), ISO 10303-21	Both	Solids only. Written in millimeters.
PNG (`.png`)	Write	Pictures from `swx-qa render` and `swx-qa sketch` .
Saulitwerx part (`.sltwx`)	Not yet	Planned: the part with its full history.

Quantity	Unit
Length	millimeter (mm)
Area, volume	mm^2, mm^3
Angle	degrees for feature parameters such as a revolve's sweep; radians for arc angles in sketches and for the geometry engine's `revolve` and `revolve_feature`

16.16 Keyboard and mouse

There are no keyboard or mouse controls yet, because there is no app window. They arrive with the desktop app and will be listed here.

PART V

Help

What to do when something goes wrong: symptoms, every error message you can see, common questions and known limitations.

CHAPTER 17

Help

17.1 Troubleshooting

Symptom	What to do
`cargo: command not found`	Rust isn't installed, or this terminal started before it was. Open a new terminal; if that doesn't help, repeat the Rust step in Chapter 2.
`could not find Cargo.toml`	The terminal isn't in the `saulitwerx` folder. Run `cd saulitwerx` and try again.
A build with `--features occt` fails with errors about `.hxx` files or `TK…` libraries	OpenCascade isn't installed. Install the `libocct-…-dev` packages from Chapter 2.
`swx-qa: cannot read … STEP input needs OCCT`	`swx-qa` was built without OpenCascade. Rebuild it: `cargo build --release -p swx-qa --features occt`.
`target/release/swx-qa: No such file or directory`	The tool isn't built yet. Run the build step in Chapter 2.
Rows of `*` and colored text appear when saving or reading STEP	Normal. The geometry engine prints its own report. Saulitwerx's own lines come before and after it.
The picture looks small or blurry when printed	Use a larger `--size`: about 80 pixels per centimeter of printed width.
A curved part is covered in lines	Raise `--crease`, for example to 45.
The numbers in a sketch picture are too small to read	Use a smaller `--size`. Labels have a fixed size in pixels, so they take up more of a small picture.
A sketch solves, but its sizes aren't what you expect	Some of it is still free to move. Check the degrees of freedom (Section 5.3) and add the missing dimensions.
A sketch looks closed, but has no region	Some ends don't meet. The open-edge list names the pieces (Section 5.7). Join every end, line or arc, to its neighbor with coincident (Section 5.6).
An arc flips or bulges the wrong way after solving	An arc runs counterclockwise from `ArcStart` to `ArcEnd`. Check that each line end is joined to the right end of the arc (Section 5.6).
A sketch dimension ignores a new parameter value	Copy the values into the sketch with `apply_params`, then solve again (Section 15.5).
Inference left a corner open	The ends were farther apart than `point_tol`. Draw the new piece from where the last one ended, or widen `point_tol` (Section 5.8).
Inference made a line level that you meant to lean	It was within `angle_tol_deg` of level. Lower the setting, or don't add the suggestion (Section 5.8).
A parameter stopped following its formula	`set_param` replaced the formula with a plain number. Give it the formula again with `set_param_expr` (Section 15.7).
A formula's value didn't change after its inputs did	The new inputs made the formula fail, for example by dividing by zero, so it kept its old value. Change the inputs back, or give a formula that works (Section 15.7).
The solver stops with `Stagnated`	Two or more rules contradict each other. Check the degrees of freedom: the report says `Conflicting` and gives the clashing equation's number.

17.2 Error messages

From `swx-qa`

Every message starts with `swx-qa:` . No picture is written when there is an error.

Message	Meaning and fix
`missing command`	Nothing after `swx-qa` . Add `render` , `sketch` , or `--help` .
`unknown command `x``	Only `render` , `sketch` and `help` exist.
`unknown option `x``	A misspelled option, or one that belongs to the other command (`--crease` and `--step` are for `render` only). The help text follows the message.
`` `--size` needs a value ``	An option was last on the line without its value. The same goes for the other options.
`missing input: give --fixture <name> or --step <file.step>`	Say what to draw.
`give exactly one of --fixture and --step`	Two inputs were given. Keep one.
`missing input: give --fixture <name>`	`sketch` needs the name of a built-in sketch.
`missing output: give -o <out.png>`	Say where to save the picture.
`unknown fixture `x`; available: cube, cylinder, l-bracket`	Use one of the listed names.
`unknown sketch fixture `x`; available: rectangle, triangle-345`	Use one of the listed names.
`invalid --size `x`: expected <W>x<H>, e.g. 800x600`	Write the size as two whole numbers joined by `x` , with no spaces.
`invalid --size `x`: width and height must be > 0`	Neither side may be 0.
`image size WxH must be between 1x1 and 8192x8192`	Use a smaller size.
`invalid --crease `x`: expected degrees`	Give a number, such as `45` .
`crease angle x must be between 0 and 180 degrees`	Use a value from 0 to 180.
`cannot read f: invalid input: no such file: f`	The STEP file isn't there. Check the name and the folder.
`cannot read f: kernel failure: import_step from f failed`	The file isn't valid STEP. The geometry engine prints the reason just above.
`cannot write f: …`	The picture can't be saved there, for example because the folder doesn't exist.
`mesh is empty` , `mesh has no visible extent`	The STEP file holds nothing that can be drawn.

From the geometry kernel

Message	Meaning and fix
`invalid input: <name> must be finite and > 0, got <v>`	A size, radius or height is zero, negative or not a number.
`invalid input: <name> must have finite coordinates, got …`	A position contains an infinite value or not-a-number.
`invalid input: no such file: f`	The STEP file to read doesn't exist.
`invalid input: adjacent needs two different kinds, got edge and edge`	`adjacent` was asked for the same kind it starts from. Ask for another kind: the faces or vertices of an edge (Section 6.3).
`invalid input: face index 7 is out of range: the shape has 7 faces`	The index is past the last sub-shape of its kind. Indices start at 0, so the last is the count minus 1. An index from another shape, or from before a change, can also be out of range (Section 6.3).
`kernel failure: <operation> failed`	OpenCascade couldn't complete the operation. For a cut, check that the tool solid overlaps the part (Chapter 6). For a `fillet` or a `chamfer` , the size is too large for the faces next to the

Message	Meaning and fix
	edges: make it smaller (Section 9.4). For a `shell`, the walls are too thick for the part: keep them under half its narrowest width (Section 10.2). For a `draft`, a face can't be tilted, such as one parallel to the neutral plane (Section 12.2).
`invalid input: the edge list is empty`	A fillet or a chamfer was given no edges. Give at least one (Chapter 9).
`invalid input: the face list is empty`	A shell was given no faces to open, or a draft no faces to tilt. Give at least one (Chapter 10, Chapter 12).
`invalid input: vertex 1 is not on edge 11`	A variable fillet's start vertex isn't one of its edge's two ends. Ask `adjacent` for the edge's vertices (Section 9.3).
`invalid input: a variable fillet needs an edge and a vertex, got Face 0 and Vertex 2`	The first sub-shape must be an edge, the second a vertex (Section 9.3).
`invalid input: counterbore diameter 5 must be larger than the hole diameter 6`	A counterbore's recess must be wider than its hole (Section 11.2).
`invalid input: hole depth 4 must be larger than the counterbore depth 6`	A blind hole must go deeper than its recess. Make it deeper, or go through all.
`invalid input: hole direction must be finite and non-zero, got …`	The hole's direction is missing or not a number. Point it into the material.
`invalid input: the hole misses the solid: it removes nothing`	The hole's line misses the part, or points away from it (Section 11.2).
`kernel failure: hole failed: the result is not a valid solid`	The geometry engine made the hole, but the result isn't a sound solid. Try a slightly different position or size.
`empty result: the hole removes the whole solid`	The hole is so large that nothing is left.
`invalid input: draft angle must be finite, non-zero and below π/2 in size, got <v>`	A draft angle is zero, 90° or more, not a number, or given in degrees. Give radians: `5f64.to_radians()` (Section 12.1).
`invalid input: draft pull direction must be finite and non-zero, got …`	The neutral plane's direction is missing or not a number.
`invalid input: the planes are parallel: they have no line in common`	Two parallel planes have no line where they meet (Section 13.3).
`invalid input: the three plane points are collinear`	Three points in a line don't fix a plane. Move one off the line.
`invalid input: axis direction (the points coincide) must be non-zero` `plane points (two coincide) must be non-zero`	An axis or a plane was given the same point twice.
`invalid input: the axis is parallel to the plane`	The axis never crosses the plane, so there is no point (Section 13.3).
`invalid input: the axis does not lie in the plane`	A plane can turn only about an axis on it (Section 13.3).
`invalid input: <name> must be finite, got …`, `<name> must be non-zero`	A work feature was given a number that isn't finite, or a zero direction: for example `plane normal`, `axis direction` or `offset distance`.
`invalid input: shell thickness must be finite and > 0, got <v>`	A shell's wall thickness is zero, negative or not a number. Give a thickness in mm (Section 10.1).
`invalid input: chamfer angle must be finite and strictly between 0 and π/2, got <v>`	An uneven chamfer's angle is 0, 90° or more, not a number, or given in degrees. Give radians: `30f64.to_radians()` (Section 9.2).
`invalid input: face 4 does not bound edge 11`	An uneven chamfer's reference face isn't one of the two faces that meet at its edge. Ask `adjacent` for the edge's faces and pick one (Section 9.4).

Message	Meaning and fix
`invalid input: edge 11 is listed with two different faces (3 and 5)`	An uneven chamfer lists the same edge twice, with different reference faces. Keep one.
`invalid input: expected a face, got edge 0` (or `vertex`)	An uneven chamfer's reference face, or one of a shell's open faces, is an edge or a vertex. Give a face (Section 10.2).
`invalid input: expected an edge, got face 0` (or `vertex`)	A fillet's or a chamfer's list holds something that isn't an edge. Give edges only (Section 9.4).
`invalid input: edge index 12 is out of range: the shape has 12 edges`	As for faces: the edge number is past the last edge, or comes from another solid. Find the edges in the solid you are softening.
`invalid input: face index 14 is out of range (the shape has 14 faces)`	`face_plane`, or a face extent, was given a face number past the last face of the target.
`invalid input: face_plane needs a face, got a Edge sub-shape` (or `Vertex`)	`face_plane` was given an edge or a vertex. Give a face.
`invalid input: face 2 is not planar`	The face is curved, so it has no plane: a to-face extrude can't end on it. Pick a flat face (Section 7.6).
`invalid input: outer loop: consecutive segments don't meet` (or `within 0.0000001` `hole N loop: …`)	Two pieces of the loop, or its last and first, don't meet. Reuse the same corner values for both ends (Chapter 7).
`invalid input: outer loop is empty`, `… loop encloses no area`	The loop has no pieces, or they enclose nothing: a line there and back, or a figure eight whose halves are the same size.
`invalid input: … loop of one segment must be a circle`, `… a circle must be the only segment of its loop`	A loop of one piece must be a full circle, and a circle can't share a loop. Use arcs to round corners.
`invalid input: line from … to … has no length`, `arc from … to … rad has no sweep; use a circle`	A piece starts and ends at the same point.
`invalid input: radius must be > 0, got <v>`	An arc or circle has a zero or negative radius.
`invalid input: line must be finite, got …` (also `arc`, `circle`, `workplane origin`)	A number is infinite or not a number.
`invalid input: workplane x_dir must be non-zero` (or `normal`), `workplane x_dir and normal must be perpendicular (dot …)`	The workplane's directions are missing or not at right angles (Section 16.5).
`kernel failure: make_face failed: the face is invalid (e.g. a self-intersecting loop or a hole outside the outer loop)`	The loops pass the checks above, but the outline crosses itself, or a hole is outside the outline or touches its edge.
`invalid input: extrude distance must be finite and non-zero, got <v>` (or `symmetric extrude length`)	The extent is zero or not a number.
`kernel failure: extrude failed`	The shape given to `extrude` or `extrude_tracked` isn't a face from `make_face` or `make_face_tracked`.
`invalid input: extrude mode "join" needs a target body` (or `"cut"`, `"intersect"`)	The mode combines with a part, but none was given. Pass the part as the target, or use `NewSolid` (Section 7.3).
`invalid input: a through-all extent works only with the cut mode, not "join"` another mode)	Only a cut can go through all. Give a distance instead (Section 7.4).
`invalid input: a through-all extent needs a target body to measure; use extrude_feature with the cut mode`	A through-all extent was given to `extrude` or `extrude_tracked`, which have no target to measure. Use `extrude_feature` with `ExtrudeMode::Cut`.
`invalid input: a to-face or between-faces extent needs a target body: it works with the join, cut and intersect modes, not "new solid"`	A face extent was given with the new-solid mode. Use join, cut or intersect, with the part as the target (Section 7.6).
`invalid input: a to-face or between-faces extent needs a target body to measure; use extrude_feature with the join, cut or intersect mode`	A face extent was given to `extrude` or `extrude_tracked`. Use `extrude_feature`.

Message	Meaning and fix
`invalid input: target face 11 (normal …) is not parallel to the workplane (normal …)`	The face stands at an angle to the outline's plane. Pick a face parallel to the workplane (Section 7.6).
`invalid input: face 5 lies in the workplane: the to-face extrude has zero length` `faces 7 and 9 are coplanar: the between-faces extrude has zero length`	The face is on the outline's own plane, or the two faces are on one plane, so the extrude has no length. Pick another face.
`invalid input: extrude start and end must be finite, got …`, `extrude length (end − start) must be finite and non-zero, got 0`	A from–to extent has a number that isn't finite, or the same start and end.
`invalid input: the through-all cut misses the target: it removes nothing`	The cut went the wrong way, or the outline isn't over the part. Change the direction or move the outline (Section 7.4).
`invalid input: revolve angle must be in (0, 2π] radians, got <v>`	The angle is zero, negative, more than a full turn, not a number, or given in degrees. Give radians: a full turn is 2π (Section 8.1).
`invalid input: revolve axis direction must be non-zero` (or `must be finite, got …`), `revolve axis origin must be finite, got …`	The axis is missing its direction, or has a number that isn't finite.
`invalid input: the profile crosses the revolve axis (origin …, direction …): it reaches <a> on one side and <b> on the other`	The axis runs through the outline. Move the axis or the outline so the outline is all on one side; touching the axis is fine (Section 8.3).
`invalid input: revolve axis (origin …, direction …) is not in the profile's plane (through …, normal …)`	The axis is tilted out of the outline's plane, stands straight out of it, or runs beside it. Use an axis that lies in the plane (Section 8.3).
`invalid input: revolve needs a single planar face`	The shape given to the revolve isn't one flat face. Pass a face from `make_face`.
`kernel failure: revolve failed`	The geometry engine couldn't make the revolve, although its input passed every check above.
`invalid input: revolve mode "join" needs a target body` (or `"cut"`, `"intersect"`)	As for an extrude: pass the part as the target, or use `NewSolid` (Section 8.2).
`empty result: revolve new solid leaves no solid (volume …)` (or `join`, `cut`, `intersect`)	Nothing is left: for a cut or an intersect, as for an extrude.
`empty result: extrude cut leaves no solid (volume …)` (or `intersect`, `join`)	Nothing is left: the cut removed the whole part, or the intersect found no overlap. Make the outline smaller, or move it over the part.

From sketches

Message	Meaning and fix
`geometry values must be finite`	A coordinate, radius or angle is infinite or not a number.
`radius must be > 0, got r`	A circle or arc needs a positive radius.
`value must be > 0, got v`	A distance, radius or diameter constraint needs a positive value.
`unknown geometry N`	The constraint names an entity that isn't in this sketch.
`geometry N has a different kind`	Wrong kind of point or entity, such as `Center` of a line, `ArcStart` of a circle, a circle in parallel, or a line made equal to a circle (Chapter 5).
`unknown constraint N`	No constraint with that number is in this sketch.
`constraint N is not a dimension`	Only a distance, radius or diameter has a value to change.
`only distance, radius and diameter can be bound, got …`	`bind_dimension` was given another kind of constraint. Add it with `add_constraint` instead (Section 15.5).

Message	Meaning and fix
`a sketch dimension is bound to unknown parameter `p``	The parameter was renamed or never existed. After `doc.rename_param`, call `rename_bound` with the same names (Section 15.5).

From profiles

Message	Meaning and fix
`geometry A and B intersect`	Pieces A and B cross, overlap, or touch away from their ends. Move or shorten one so they meet only end to end (Section 5.7).
`weld tolerance must be > 0, got t`	Give a `weld_tolerance` greater than zero, or `None` for the default.

Any sketch message above can also come from profiles, when the sketch itself is at fault.

From the document model

Message	Meaning and fix
`unknown parameter `p``	Set the parameter before a feature uses it. Renaming or commenting on a parameter that doesn't exist also gives this.
`a parameter named `p` already exists`	Every parameter needs its own name. Pick another, or rename the other parameter first (Section 15.4).
`invalid parameter name `p`: must start with a letter or `_` and contain only letters, digits and `_``	Use a name like `hole_2`: no leading digit, no spaces, dashes, dots or accents.
`unknown feature N`	No feature with that number is in the history.
`feature N references feature M which is not earlier in the history`	A feature can use only features above the end-of-part marker. `M` is a feature number, not a place in the history: it may be rolled back (Section 15.3), or not made yet.
`end-of-part position P is past the end of the history (N features)`	The marker can go anywhere from 0 to the number of features, `N`. It stayed where it was (Section 15.3).
`expression for `p`: …`	The formula for `p` doesn't parse, names an unknown parameter, or can't be worked out. The rest is an expression message, below.
`parameter expressions form a cycle: a -> b -> a`	The formulas would depend on each other in a loop, traced in the message. Make one of them a plain number (Section 15.7).
`expression for `p` gives length^2, but its unit expects length`	The formula's result is the wrong kind of quantity for the parameter's unit, here an area for a length. A parameter with no unit, or a unit outside the seven, expects `unitless`.

From expressions

Each message gives the byte where the problem is, counting from 0 at the first character (Section 15.6).

Message	Meaning and fix
`syntax error at byte n: …`	The text isn't a formula: an unexpected character, a missing `)` or number, or an expression too long or too deeply nested. The rest of the message says which.
`unknown unit `u` at byte n (expected mm, cm, m, in, ft, deg or rad)`	A word after a number isn't one of the seven units. Check the spelling.
`unknown name `p` at byte n`	No parameter has that name. Names are case-sensitive.
`dimension mismatch at byte n: cannot apply `+` to length and angle`	Both sides of `+` or `-` must measure the same thing. Give a bare number its unit, as in `d1 + 5 mm`.
`division by zero at byte n`	The part after `/` works out to zero.

From inference

For an unknown entity, `infer` and `add_inferred` give the sketch messages above. They can also give:

Message	Meaning and fix
`geometry values must be finite`	A setting is infinite or not a number (Section 16.11).
`value must be > 0, got v`	A setting is zero or less. Both tolerances must be greater than zero.
`solve did not converge (residual r)`	From `add_inferred` only. The suggested constraints were added, but couldn't all be met. Check the degrees of freedom for a conflict (Section 5.3). A constraint can't be removed yet, so build the sketch again and add only the suggestions you want (Section 5.8).

17.3 Questions

Is there a version with windows and buttons? Not yet. The desktop app is a later milestone; see **Coming next**.

Can I open files from other CAD programs? Yes, if you save them as STEP first. Saulitwerx doesn't read any program's own native file format, and won't.

Can I save my design and edit it later? Not yet. Today you can save solids as STEP, which keeps the shape but not the history. Saulitwerx part files come later.

Does it cost anything? No. Saulitwerx is free and open source, under the MIT or Apache-2.0 license, at your choice.

Why millimeters? Mechanical design works mostly in millimeters, so it is the default. Choosing other units per part is planned.

17.4 Known limitations

- No desktop app, 3D view, mouse or keyboard controls yet.
- A sketch's regions can't be extruded or revolved directly yet: type the outline's pieces into a program (Chapter 7, Chapter 8).
- An extrude can end on a face (Section 7.6) only when the face is flat and parallel to the workplane, and it ends on the face's whole plane: it doesn't stop at the face's edges, or follow a curved face.
- A fillet has one radius for all its edges, and a chamfer one size for all its edges: one distance, two distances, or a distance and an angle (Chapter 9). A fillet whose radius changes along the edge rounds one edge per call, changing evenly from one end to the other (Section 9.3).

- A shell has one wall thickness for every wall, and needs at least one open face (Chapter 10). A part hollow inside with no opening, or with walls of different thicknesses, can't be made yet.
- A revolve turns one way from the outline's plane by an angle; it can't yet turn both ways or symmetrically.
- An extrude's or a revolve's target is a solid you hold in your program. Faces and edges can be counted and numbered (Section 6.3), a plain extrude says which face each piece of the outline became (Section 7.5), and a Boolean what became of each face (Section 6.4), but they can't be picked, and their numbers don't last through a change; so the outline's workplane is given by its numbers (Section 7.3).
- Holes have flat bottoms and are simple or counterbored: no drill points, countersinks or threads yet (Chapter 11).
- A draft tilts flat faces by one angle about one neutral plane; it can't split a face or step its neutral line (Chapter 12).
- Work planes, axes and points are built from numbers and from each other, not picked on a part (Chapter 13).
- Extrudes, revolves, fillets, chamfers, shells, holes, drafts and work features aren't recorded in a part's history, so they don't rebuild when a parameter changes.
- No native part files; work can't be saved with its history.
- `swx-qa sketch` draws only its two built-in sketches. Your own sketches need a short program (Section 14.5). Sketch pictures show no dimension arrows and no marks for constraints such as horizontal.
- A parameter's unit is free text. Only the seven units of Section 16.14 are understood by formulas; any other unit counts as none.
- When a new value breaks a formula that depends on it, the formula keeps its old value without an error (Section 15.7).
- A constraint can't be removed from a sketch once added; build the sketch again without it.
- Inference needs a program: there is no drawing with the mouse yet, so nothing is inferred as you move the pointer (Section 5.8).
- Renaming a parameter doesn't update the sketches bound to it by itself; call `rename_bound` too (Section 15.5).
- There are no angle dimensions and no point-to-line distance yet.
- Profiles don't split pieces where they cross; crossing pieces are an error.
- Only built on and tested on Ubuntu Linux.
- An imported STEP file becomes one shape, and can't be edited.

PART VI

Back matter

Glossary, what changed, what comes next, a one-page card, credits and licenses, and the index.

Glossary

Adjacent
Said of two sub-shapes when one bounds the other, such as a face and one of its edges.

Binding
The link between a sketch dimension and the parameter that drives it.

Axis of revolution
The line a revolve turns its outline around.

Blind hole
A hole that stops at a set depth, with a flat bottom.

Bounding box
The smallest box, with sides parallel to the axes, that holds a solid.

Boolean operation
Combining two solids by union, cut or intersect.

CAD
Computer-aided design: using a computer to design physical objects.

Between faces
An extrude extent that runs from one flat face of the target body to another.

Cap
One of the two flat faces at the ends of an extrude: where the push starts and where it ends.

Chamfer
A flat, angled face cut along an edge in place of the sharp edge. It is set back the same distance on both faces, or by two distances, or by a distance and an angle.

Coincident
A constraint that puts two points at the same place.

Conflicting
Said of a sketch whose rules contradict each other, so no shape can meet them all.

Constraint
A rule about a sketch's shape, such as "horizontal" or "these points touch".

Counterbore
A wider, flat-bottomed recess at the mouth of a hole, so a screw head sits flush or below the surface.

Cut
A Boolean operation that removes one solid from another.

Degree of freedom (DOF)
One way a piece of a sketch can still move. A free point has two.

Dependency order
The order formulas are worked out in: each parameter after the parameters its formula uses.

Diameter
The width of a circle through its center; twice the radius.

Dimension
A constraint with a number: a distance, radius or diameter.

Dirty
Said of a feature that must be rebuilt after a change.

Draft
A small tilt given to the sides of a molded or cast part so it comes out of the mold.

Edge
A curve where two faces of a solid meet, or where one round face meets itself (a seam).

Equal
A constraint that makes two lines the same length, or two circles or arcs the same size.

Entity
One piece of sketch geometry: a point, line, circle or arc.

Extent
How far an extrude goes: a distance one way, a length split evenly on both sides of the workplane, through all, or up to a face.

Extrude
Pushing a flat outline straight out into a solid with straight sides.

Extrude mode
What an extrude does with its shape: keep it as a new solid, or join, cut or intersect it with a target body.

Face
One flat or curved patch of a solid's surface.

Expression
A small formula with units that works out a value, such as `d1 / 2 + 5 mm`.

Feature
One step in building a part, such as a sketch or a cut. Features are kept in the history.

Feature tree
Another name for a part's history.

End-of-part marker
The point in a part's history after which features are set aside (rolled back). New features go in at the marker.

Hole
A feature that drills a round hole into a solid from a start point, in a direction, to a depth or through all.

Neutral plane
The plane a draft turns faces about. Where a drafted face crosses it, the face stays put.

Open face
A face that a shell removes, leaving an opening in the hollowed part.

Part origin
The point (0, 0, 0) of a part, where its three origin planes and axes meet.

Pull direction
The way a part leaves its mold. Draft makes the part smaller along it.

Rolling back
Moving the end-of-part marker up the history, so the features below it are kept but not used.

Shell
A feature that hollows a solid, leaving walls of one thickness and openings where its open faces were.

Fillet
A rounded face along an edge in place of the sharp edge, with a set radius.

Fixed
A constraint that keeps a point at exact coordinates.

Fully constrained
A sketch whose constraints and dimensions leave nothing free to move.

From–to
An extrude extent given by a start and an end distance along the workplane's normal.

Geometry kernel
The part of a CAD program that does the 3D math. Saulitwerx uses OpenCascade.

History
A part's features, in the order they were made.

Inference
Saulitwerx adding the constraints a newly drawn piece already almost satisfies, such as coincident or horizontal.

Intersect
A Boolean operation that keeps only what two solids share.

Island
A region inside a hole of another region.

Isometric
A view from a corner, looking down at an angle, so that three sides of a box show equally.

Loop
A closed chain of sketch pieces, each ending where the next begins.

Midpoint
A constraint that keeps a point halfway along a line.

Model parameter
A parameter that belongs to a dimension, named `d0`, `d1`, … in turn.

Open edge
A sketch piece that isn't part of any closed loop.

OpenCascade (OCCT)
The open-source geometry kernel Saulitwerx uses.

Over-constrained
Said of a sketch with a rule that repeats what other rules already say.

Parallel
A constraint that makes two lines point the same way.

Parameter
A named number that features and dimensions refer to.

Parametric
Built from steps and numbers that can be changed later, with the design rebuilding to match.

Perpendicular
A constraint that makes two lines meet at a right angle.

Pre-alpha
Early, unfinished software: the parts work, but it isn't ready for real use.

Profile
The regions of a sketch: the areas a feature can turn into a solid.

Redundant
Said of a rule that repeats what other rules already say.

Reference face
For an uneven chamfer, the one of an edge's two faces that its first distance, or its distance and angle, is measured on.

Region
A flat area enclosed by an outer loop, minus any holes inside it.

Revolve
Turning a flat outline around an axis into a round solid.

Revolve angle
How far a revolve turns: a full turn (2π radians, 360°) or part of one.

Seam
An edge where a closed round face, such as the wall of a hole, meets itself.

Side face
A face of an extrude swept by one edge of its outline: a flat wall from a line, a round one from an arc or circle.

Simple hole
A plain round hole of one diameter.

Sketch
A 2D drawing on a plane, made of points, lines, circles and arcs.

Split face
A face that an operation cut into several faces of the result, such as a top divided by a groove.

Solid
A closed 3D shape with an inside and an outside.

Solver
The calculation that moves sketch geometry until every constraint holds.

Sub-shape
One face, edge or vertex of a solid.

Symmetric
A constraint that makes two points mirror images across a line.

STEP
An international standard file format (ISO 10303) for exchanging 3D parts.

Surface area
The total area of a solid's faces.

Tangent
Touching without cutting in: a line and a circle, or two circles, that meet at one point.

Target body
The solid an extrude or a revolve joins to, cuts from or intersects with.

Through hole
A hole that goes all the way through a solid.

To face
An extrude extent that ends on the plane of a flat face of the target body.

Through all
An extrude cut with no depth of its own, which goes right through the target body.

Under-constrained
Said of a sketch with at least one degree of freedom left.

Union
A Boolean operation that joins two solids into one.

Unit
What a number measures in, such as millimeters.

User parameter
A parameter you create yourself, with a name you choose.

Variable fillet
A fillet whose radius changes evenly from one end of its edge to the other.

Vertex
A corner point of a solid, where its edges meet. Plural: vertices.

Volume
How much space a solid fills.

Work axis
A straight line built to place features, such as an axis to revolve about. It has no material.

Work feature
Reference geometry built to place other features: a work plane, a work axis or a work point. It adds no material.

Work plane
A flat plane built to sketch on or place features from, such as one offset from a face or tilted at an angle. Used as a workplane.

Work point
One point in space, built to place features, such as where an axis crosses a plane.

Workplane
The flat plane an outline is drawn on, with its own directions and a normal pointing straight out of it.

What’s new

2026-11-08: holes, draft, work features, and a fillet that changes size

- **New:** drill simple and counterbored holes, blind or through all, in any direction (Chapter 11).
- **New:** tilt the sides of a part with draft, so it comes out of a mold (Chapter 12).
- **New:** build work planes, axes and points from the part origin and from each other, and place features on them (Chapter 13).
- **New:** round one edge with a radius that changes from one end to the other (Section 9.3).
- **Pictures:** a plate with four holes; a block drafted three ways; a post leaning on a tilted work plane; a constant and a variable fillet side by side.
- Reference: the new calls and types, and a work-features section (Section 16.6). Help: sixteen new error messages, new common mistakes, and the known limitations updated. Glossary: fourteen new terms, from blind hole to work point.

2026-11-07: shells, and rolling back the history

- **New:** hollow a solid into walls of one thickness, open at the faces you choose: a tray, a frame or a cup in one call (Chapter 10).
- **New:** move the history’s end-of-part marker to roll a part back, insert features in the middle of its history, and roll forward again (Section 15.3). A new reference section lists the history calls (Section 16.12).
- **Pictures:** a block shelled into a tray and a frame, and a cylinder into a cup.
- Help: three new error messages, seven new common mistakes, and the known limitations updated. Glossary: end-of-part marker, open face, rolling back, shell.

2026-11-06: uneven chamfers, and faces through a Boolean

- **New:** chamfer an edge by two different distances, or by a distance and an angle, measured from a face you choose (Section 9.2).
- **New:** combine two solids with history, and find out which faces of the result each input face became: kept, split or deleted (Section 6.4).
- **Pictures:** one edge chamfered four ways; a grooved block with its faces named.
- Help: four new error messages, four new common mistakes, and the known limitations updated. Glossary: reference face, split face.

2026-11-05: up to a face, fillets and chamfers

- **New:** extrude up to a flat face of the part, or between two of its faces, instead of by a distance; and give an extrude a start and an end distance (Section 7.6).
- **New:** round edges with a fillet, or bevel them with a chamfer, in a new chapter (Chapter 9).
- **New:** ask for the plane of a flat face (Section 16.4).
- **Pictures:** a stepped block extruded up to its faces; a block with filleted and chamfered edges.
- Help: thirteen new error messages, eight new common mistakes, and the known limitations updated. Glossary: between faces, chamfer, fillet, from–to, to face.

2026-11-04: which face is which

- **New:** extrude with history, and find out which face of the solid each piece of your outline became: the two caps and every side face (Section 7.5, Section 16.5).
- **New:** ask for the bounding box of a single face, edge or vertex (Section 16.4).
- **Pictures:** the extruded plate, with its faces named by their history.
- Help: two new common mistakes; two error messages and a known limitation updated. Glossary: cap, side face.

2026-11-03: safer revolves

- **New:** a revolve now checks its axis first. An axis that runs through the outline, or doesn't lie in the outline's plane, gets a clear message saying which, instead of a broken solid or a vague failure (Section 8.3).
- The revolve sample shows both new errors (Section 8.1).
- Help: three new error messages; the revolve rows and the known limitation about unchecked axes updated.

2026-11-02: faces, edges and vertices

- **New:** count a solid's faces, edges and vertices, and list which ones touch: the edges around a face, the faces along an edge (Section 6.3, Section 16.4).
- Concepts: vertices join faces and edges in Section 4.1, with the plate's figure now marking one of each.
- Help: two new error messages; the known limitation about faces and edges updated.

2026-11-01: revolve, and cuts through all

- **New:** revolve a flat outline around an axis into a round solid, by a full turn or part of one, as a new solid or joined to, cut from or intersected with a part (Chapter 8, Section 16.5).
- **New:** an extrude cut can go right through a part, one way or both, however thick the part is (Section 7.4).
- **Pictures:** a flanged bushing at three quarters of a turn and at a full turn, the bushing with a groove, and a block with two through holes.
- Help: nine new error messages, eight new common mistakes, and known limitations updated. The limitations that there is no revolve and no "through all" are gone.

2026-10-31: extrude modes

- **New:** an extrude can join its shape to a part, cut it out, or keep only the overlap, in one step (Section 7.3, Section 16.5).
- **Pictures:** one block with a boss, a pocket and a trimmed shape made from it.
- Help: two new error messages, three new common mistakes, and known limitations updated. The limitation that an extrude always makes a new solid is gone.

2026-10-30: extrude

- **New:** extrude a flat outline into a solid. Outlines are made of lines, arcs and circles, can have holes, and can sit on any plane; the extrude goes a distance one way or splits evenly on both sides (Chapter 7, Section 16.5).
- **Pictures:** a profile and the plate extruded from it, and an extruded slot.
- Concepts: the profile and feature sections now point to the extrude.
- Help: eleven new error messages, and known limitations updated. The limitation that nothing turns outlines into solids is gone.

2026-10-29: formulas in parameters, and inference

- **New:** a parameter can hold a formula, such as `d0 / 2 + 5 mm`, and follows the parameters it names. Formulas are worked out in dependency order, loops and wrong units are refused, and renaming a parameter rewrites the formulas that use it (Section 15.7, Section 16.13).
- **New:** inference adds the coincident, horizontal, vertical, parallel, perpendicular and tangent constraints a newly drawn piece already almost satisfies (Section 5.8, Section 16.11).
- **Pictures:** a rough rectangle and circle before and after inference.
- Help: new error messages for formulas and inference, four troubleshooting rows, new common mistakes, and known limitations updated. The limitation that parameters hold only plain numbers is gone.

2026-10-28: dimensions as parameters, expressions, and joined arcs

- **New:** constraints can name an arc's two ends (`ArcStart`, `ArcEnd`), so lines and arcs join into closed outlines. The slot task is rewritten: it now starts from a careless drawing and solves to a fully defined slot (Section 5.6, Section 16.7).
- **New:** a sketch's distance, radius and diameter dimensions can each make a model parameter, `d0`, `d1`, ..., and follow it when it changes (Section 15.5).
- **New:** work out expressions with units, such as `d1 / 2 + 5 mm`, with unit checking (Section 15.6, Section 16.14).
- **Pictures:** the slot before and after solving replaces the slot with a gap.
- Help: new error messages for bound dimensions and expressions; troubleshooting and known limitations updated. The limitation on arc ends is gone.

2026-10-26: parameter table, and named conflicts

- **New:** a part's parameters form a table: model parameters named `d0`, `d1`, ... in turn, user parameters with names you choose, units and comments. Renaming a parameter updates every feature that uses it (Section 4.8, Section 15.4, Section 16.13).
- **Changed:** the degree-of-freedom report now names the redundant or conflicting constraints, not just equation numbers (Section 5.3, Section 16.10). The matching known limitation is gone.
- Help: two new parameter error messages, and two new common mistakes.

2026-10-25: more constraints, and profiles

- **New:** six constraints: parallel, perpendicular, equal, midpoint, symmetric and tangent (Section 4.4, Section 16.7).
- **New:** keep a hole centered whatever the plate's size (Section 5.5), and draw a slot with tangent, equal-sized ends (Section 5.6).
- **New:** find the regions a sketch encloses, with their holes and areas, and the pieces left open (Section 4.7, Section 5.7, Section 16.9).
- **Pictures:** the centered plate at two widths, and a slot with a gap, ringed by the template.
- Help: profile error messages, two new troubleshooting rows, and known limitations updated, including arcs whose ends can't be constrained.
- Corrected: midpoint and symmetric add two equations each to the degree-of-freedom count.

2026-10-24: degrees of freedom and sketch pictures

- **New:** check how fully a sketch is defined: degrees of freedom left, and whether it is under-, fully or over-constrained, or conflicting (Section 4.6, Section 5.3, Section 16.10).
- **New:** draw a sketch to a PNG with `swx-qa sketch` (Section 14.5, Section 16.2).
- **Pictures:** the sketch sections of **Concepts** and **Sketching** now show the plate sketch, rough and solved.

- Help: new troubleshooting rows and `swx-qa sketch` error messages; known limitations updated.

2026-10-22: first edition

The first edition of this manual. It covers everything on `main` today:

- Installing from source, and a first tutorial that builds, measures, saves and draws a plate with a hole.
- The ideas of parametric CAD: solids, units, sketches, constraints, dimensions, parameters, features and history.
- Sketching with the coincident, horizontal, vertical, fixed, distance, radius and diameter constraints, and the solver.
- Making and combining solids, and saving and reading STEP files.
- Drawing parts with `swx-qa render`.
- The feature history, and finding what a change rebuilds.
- Reference tables, every error message, troubleshooting, and known limitations.

Coming next

These are the next items on the public roadmap. None of them works yet. When one arrives, it moves into the chapters of this manual and into **What's new**.

Soon	What you'll be able to do
Extrude from a sketch	Hand a sketch's region straight to the extrude and the revolve.
More part features	Countersunk and threaded holes; shells with walls of different thicknesses; fillets, chamfers, shells, holes and drafts kept in a part's history.
Work features from the part	Build a work plane from a face, or a work axis from an edge, by picking them.
Lasting references	A feature built on a face or an edge keeps finding it when earlier features change.
Part files	Save a part with its full history, and open it again.
Desktop app	A window with a 3D view, a model browser, sketch mode and property panels.

Later milestones add assemblies, 2D drawings and exploded views. The full plan is in `docs/ROADMAP.md` in the source code.

Quick reference

BUILD

TERMINAL

```
cargo test --workspace
cargo build --release -p swx-qa \
  --features occt
```

DRAW A PART

TERMINAL

```
swx-qa render --step part.step -o part.png
swx-qa render --fixture cube -o cube.png
  --size 1600x1000   (default 800x600)
  --crease 45     (default 30)
```

DRAW A SKETCH

TERMINAL

```
swx-qa sketch --fixture rectangle -o r.png
  (or triangle-345)
```

SAMPLES

TERMINAL

```
cargo run -p swx-sketch \
  --example plate_sketch
cargo run -p swx-sketch \
  --example sketch_dof
cargo run -p swx-sketch \
  --example centered_plate -- 60 25
cargo run -p swx-sketch \
  --example slot_sketch
cargo run -p swx-kernel --features occt \
  --example plate_with_hole -- plate.step
cargo run -p swx-kernel --features occt \
  --example extrude_plate
cargo run -p swx-kernel --features occt \
  --example revolve_bushing -- revolve
cargo run -p swx-core \
  --example feature_history
cargo run -p swx-core \
  --example roll_back
cargo run -p swx-core \
  --example parameter_table
cargo run -p swx-sketch \
  --example driven_plate
cargo run -p swx-core \
  --example expressions
cargo run -p swx-core \
  --example parameter_formulas
cargo run -p swx-sketch \
  --example inferred_sketch
```

SKETCH CONSTRAINTS

Constraint	Keeps
Coincident	two points together
Horizontal	a line level
Vertical	a line upright
Fixed	a point at (x, y)
Distance	two points a length apart
Radius / Diameter	a circle's size
Parallel · Perpendicular	two lines' directions
Equal	two lengths or radii alike
Midpoint	a point mid-line
Symmetric	two points mirrored
Tangent	a line touching a curve

SKETCH STATES

State	Means
Under-constrained	can still move: add rules
Fully constrained	done: 0 DOF left
Over-constrained	a rule repeats others
Conflicting	rules contradict

SOLIDS

Call	Gives
`make_box`	box from corner + sizes
`make_cylinder`	cylinder on +Z
`make_sphere`	sphere
`union` · `cut` · `intersect`	Boolean result
`make_face` · `extrude`	outline ⟶ face ⟶ solid
`extrude_feature`	extrude and combine
`revolve_feature`	revolve and combine
`fillet` · `chamfer`	round / bevel edges
`chamfer_asymmetric`	bevel by 2 sizes
`shell`	hollow, open at faces
`fillet_variable`	round, 2 radii
`hole`	simple or counterbore
`draft`	tilt faces for a mold
`offset` · `angled`	work planes
`boolean_tracked`	Boolean + face history
`export_step` · `import_step`	STEP file out / in

UNITS

Millimeters. Angles: degrees in feature parameters; radians in sketch arcs and kernel revolves.

Credits and licenses

Saulitwerx is written by its contributors and is licensed under either the MIT license or the Apache License 2.0, at your choice. It is an independent project, not affiliated with or derived from any commercial CAD product.

Component	License	Notes
OpenCascade Technology (OCCT) 7.6	LGPL-2.1 with the OCCT exception	The geometry kernel. Used as a separate, dynamically linked library; not included in Saulitwerx's source.
`png`, `flate2`, `miniz_oxide`, `fdeflate`, `crc32fast`, `adler2`, `simd-adler32`, `bitflags`, `cfg-if`	MIT, Apache-2.0, Zlib or 0BSD	Write the PNG pictures of `swx-qa`.
`cc`, `shlex`, `find-msvc-tools`	MIT or Apache-2.0	Build the bridge to OpenCascade.
Typst 0.15.1	Apache-2.0	Typesets this manual.
Inter 4.0, by The Inter Project Authors	SIL Open Font License 1.1	Headings and labels in this manual. License in `docs/manual/fonts/OFL-Inter.txt`.
Libertinus Serif, DejaVu Sans Mono	SIL Open Font License 1.1; Bitstream Vera license	Body text and code in this manual, as bundled with Typst.

Every picture of a part in this manual was drawn by Saulitwerx's own renderer, `swx-qa render`, and every picture of a sketch by `swx-qa sketch`'s plotter, from geometry made by Saulitwerx.

Index

A

adjacent 30
analyze 96
arc ends 25
axis of revolution 47

B

between faces 43
between-faces 43
bind_dimension 99
binding 80
blind hole 63
Boolean history 32
boolean operations 15
bounding box 11

C

CAD 2
cap 41
chamfer 52, 54
coincident 13
conflicting 14
constraint 12
constraint id 21
counterbore 63
cut 15

D

degree of freedom 14
degree-of-freedom report 20
dependency order 83
diameter 13
dimension 13
dirty 77
distance 13
Document 98
dof 96
doubly connected edge list 96
draft 66

E

edge 11
end-of-part marker 77, 97
entities 12
equal 13, 23
expression 15, 99
extent 34
extrude 34
extrude history 41
extrude mode 37

F

faces 11
feature 15
feature tree 16
fillet 52, 56
fixed 13
from–to 45
fully constrained 14

G

geometry 12
geometry kernel 4, 29

H

history 16
hole 63
horizontal 13
Householder QR 96

I

inference 26, 97
intersect 15
isometric 7

K

Kahn's algorithm 99

L

Levenberg–Marquardt 95
loop 14

M

midpoint 13, 21
model parameter 79

N

neutral plane 66

O

occt feature 89
open edges 15
open face 60
OpenCascade 4
over-constrained 14

P

parallel 13, 22
parameter 15
parameter table 79
parametric 2
part origin 69
perpendicular 13, 22
PointRef 19
profile 14
profile_report 95
pull direction 66

R

radius 13
rebuild 77
redundant 14
reference face 54
region 14
revolve 47
revolve angle 47
revolve mode 49
rolling back 77

S

seam 31
shell 60
side face 41
simple hole 63
sketch 12
solid 8, 11
solver 13
split face 32
STEP 9
sub-shape 30
sub-shapes 30
surface area 11
swx-qa render 87
swx-qa sketch 87
symmetric 13, 23

T

tangent 13, 23, 95
target body 37
through all 39
through hole 63
through-all 39
to face 43
to-face 43

U

under-constrained 14
union 15
unit 12
user parameter 79

V

variable fillet 56
vertex 11, 56
vertical 13
volume 11

W

work axis 69
work feature 69
work plane 69
work point 69
workplane 34