# Basic guide to soldering electronic components

# Types of soldering iron

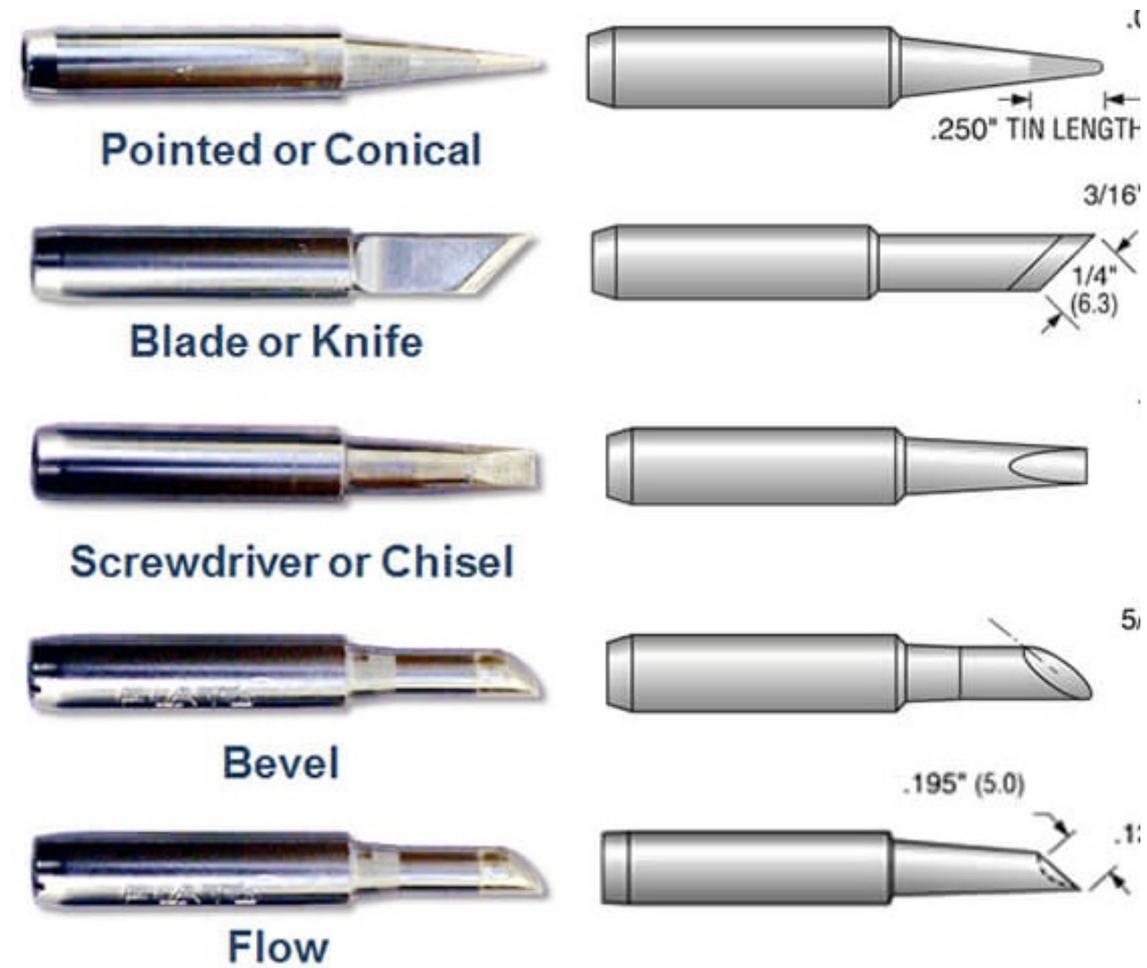

## Soldering iron

Gas-powered soldering iron

**Soldering gun**

# Rework station

# Soldering Iron

- Preparation: Clean the iron tip with a damp sponge or brass cleaner.
- Secure Components: Ensure wires or parts are firmly held in place.
- Preheat iron: Wait for 1 minute to reach a typical temperature of 350C.
- Make soldering: apply flux, set the iron (3-5 seconds), and apply solder.
- Idle time: do not use the iron longer than 10 minutes; turn it off to protect the tip from oxidation.

# Useful l Flux

# Soldering process

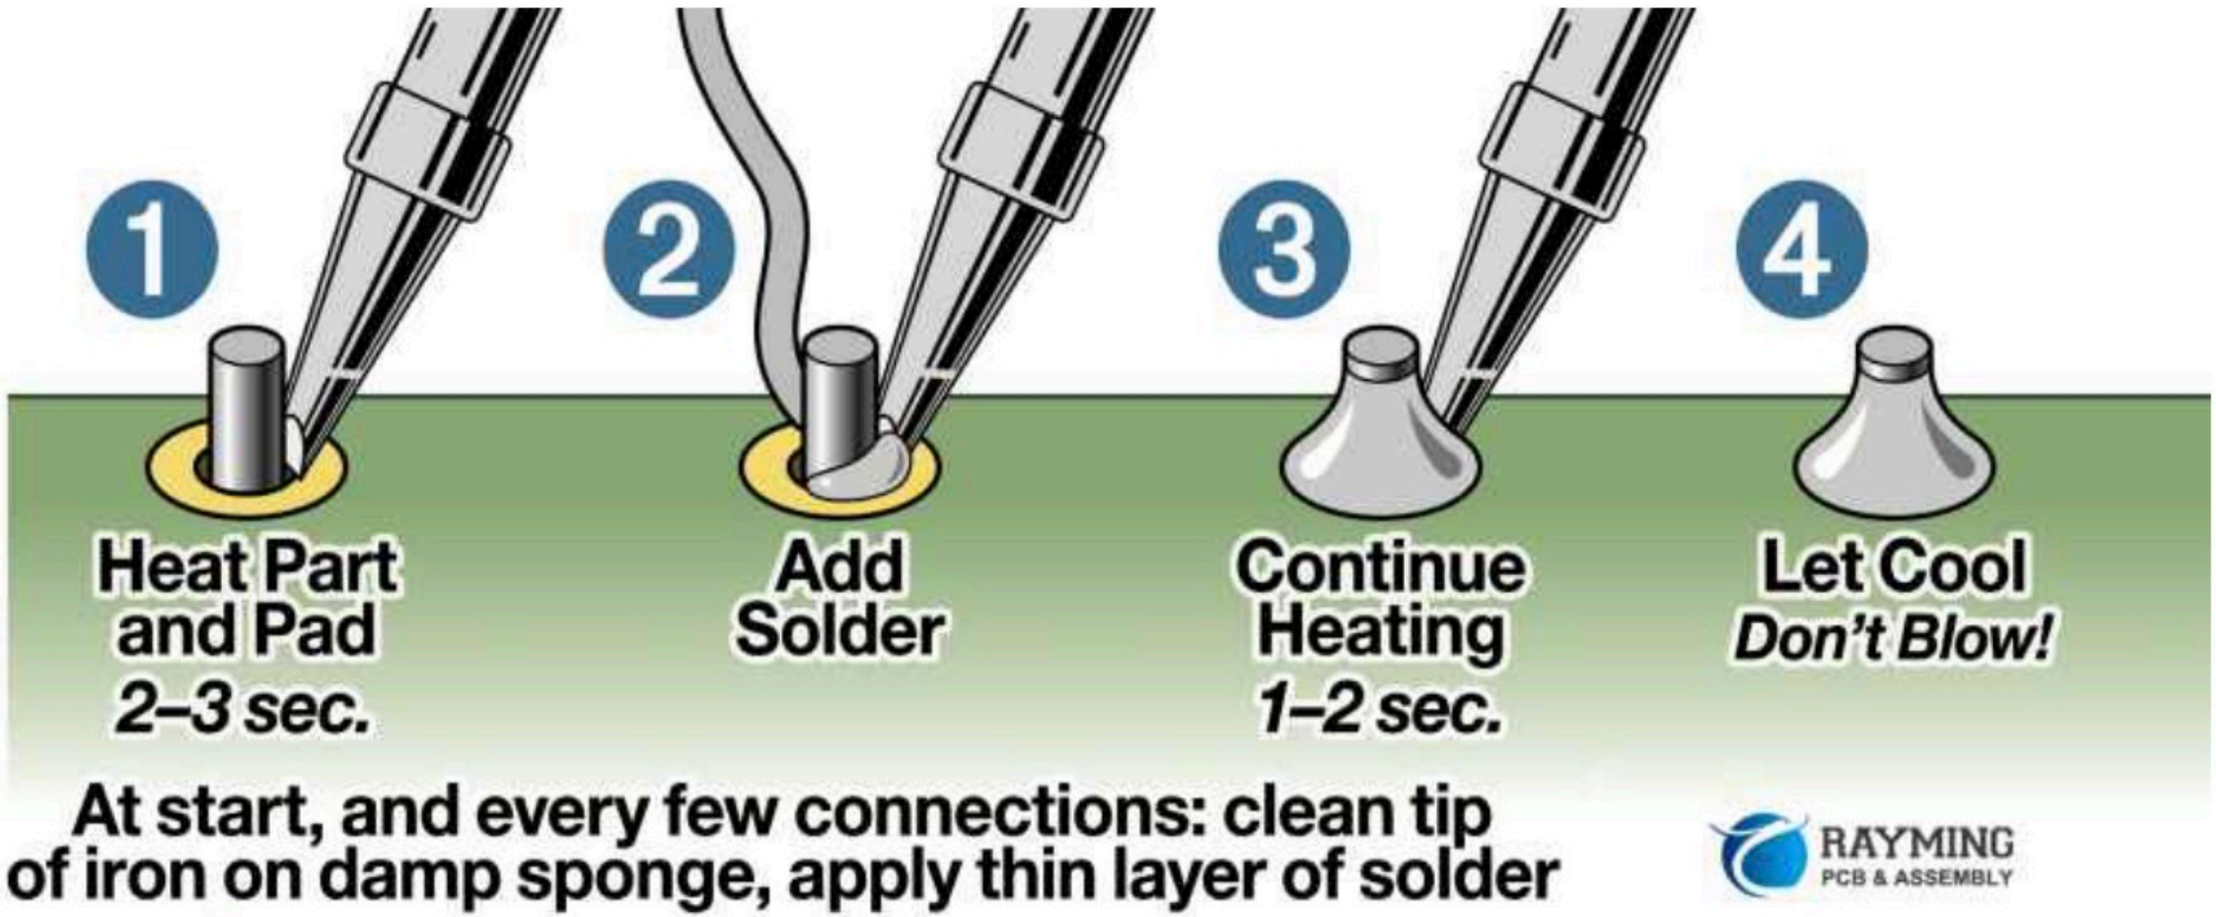

# Soldering process

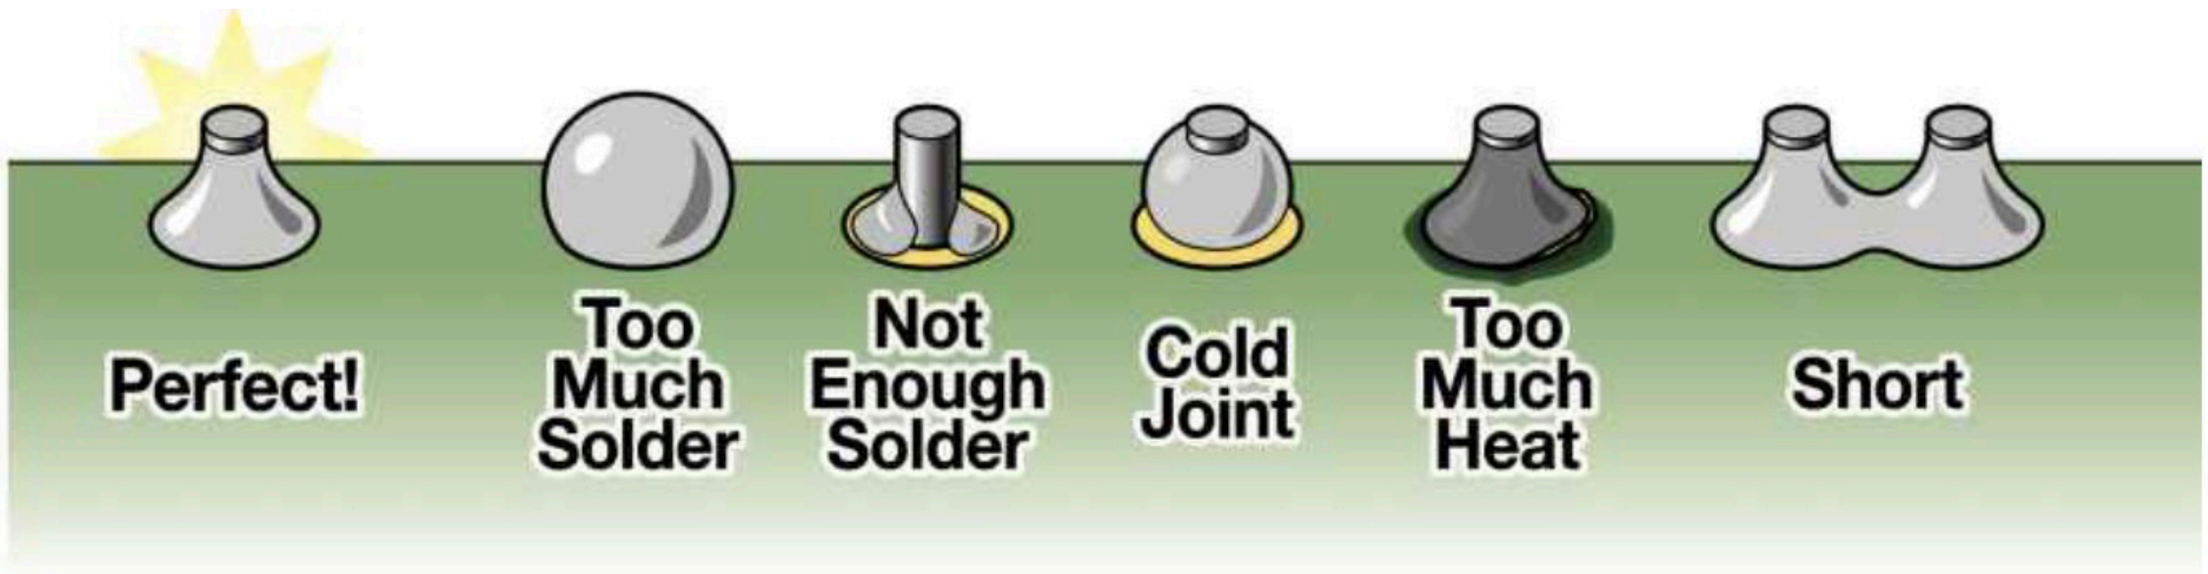

# Maintenance

Before

After