

Change SLS Screen Resolution BIOS Settings


- Power on the SLS and press the key multiple times to enter the BIOS.
- Enter the password "478236"
- The Main Bios screen will open.

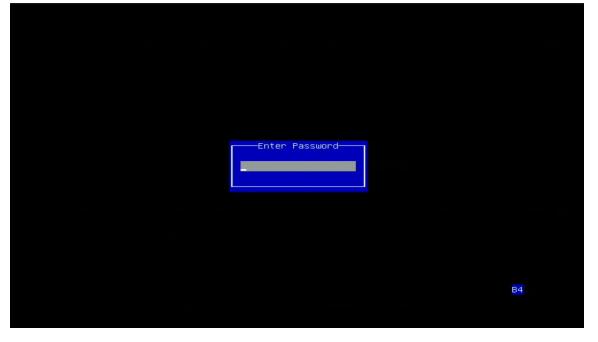

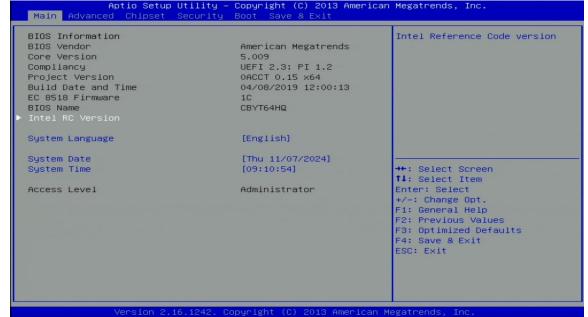


11/27/2024 ASSEMBLED BY GMCCUTCHEON 2

- Use the <R-Arrow> key to navigate to the "Chipset" tab.
- Use the arrow keys to select "North Bridge"
- Press the <Enter> key.

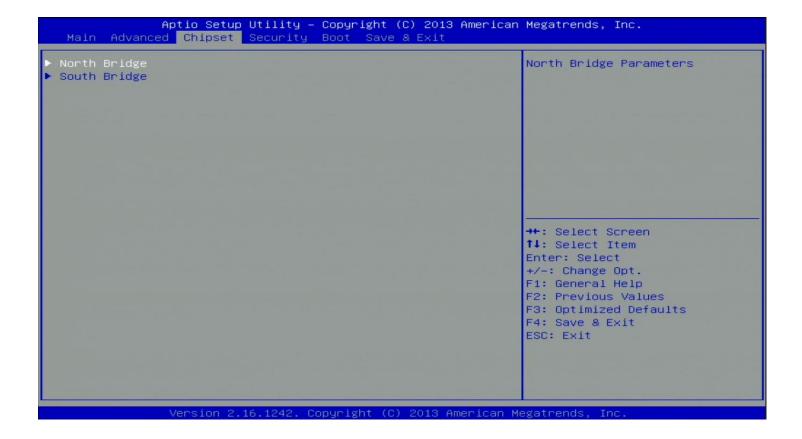


11/27/2024 ASSEMBLED BY GMCCUTCHEON


- Use the arrow keys to navigate to the "IGD
 LCD Control" selection.
- Press the <Enter> key.

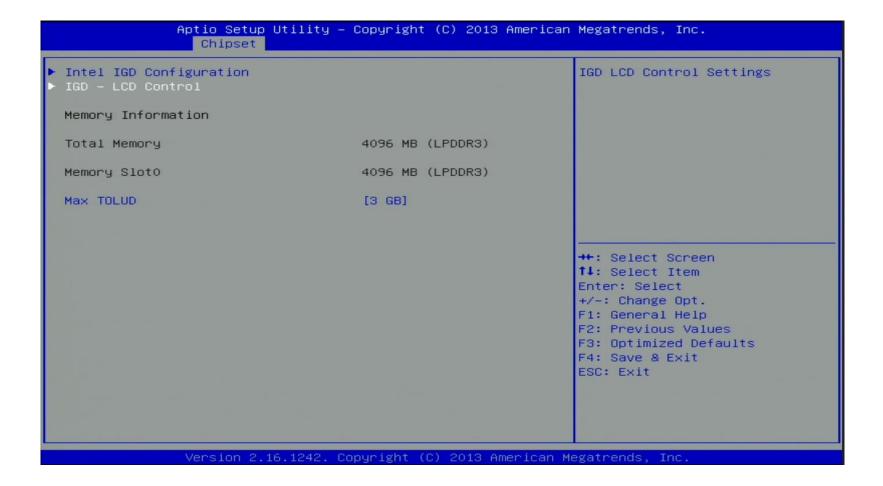

- Use the arrow keys to navigate to the "Active LVDS(Ch7511)" selection.
- Press the <Enter> key.
- On the pop-up window, use the arrow keys to navigate to the "Disabled" selection.
- Press the <Enter> key.

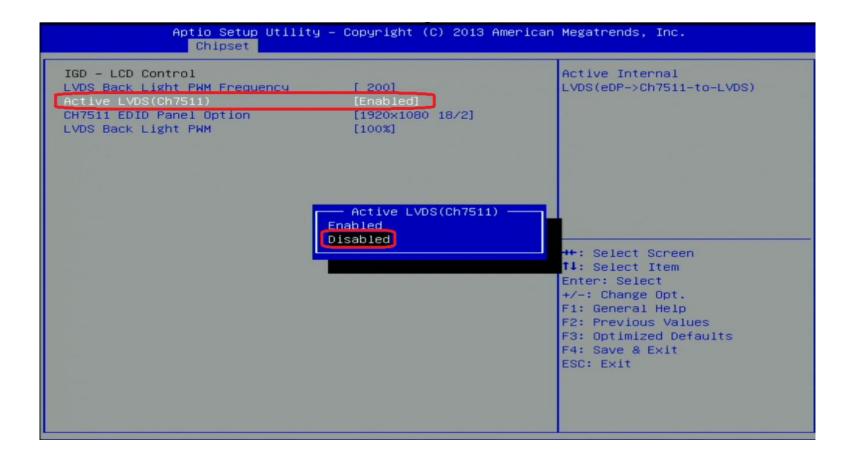

- Use the arrow keys to navigate to the "CH7511 EDID Panel Option" selection.
- Press the <Enter> key.
- On the pop-up window, use the arrow keys to navigate to the "1024x768 18/1" selection.
- Press the <Enter> key.

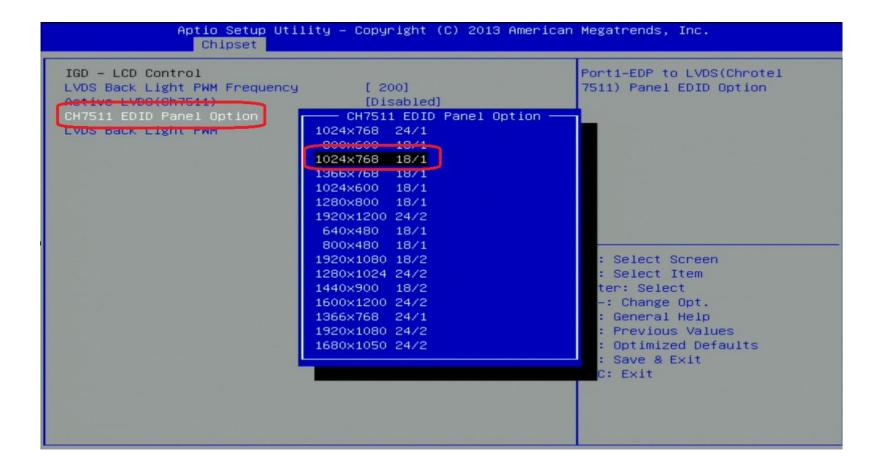

- The "Active LVDS(Ch7511)" selection should now set to "Disabled".
- The "CH7511 EDID Panel Option" selection should now set to "1024x768 18/1".
- Press the <F4> key to save the changes and exit the BIOS.

