TERMINAL JUMPERS

REVIEW C | 29 OCT 2026

POWERMATIC 1200 / FRONT VIEW / MODULE + LETTER (SKIP I/O) / GROUNDS G#

18 sections
13 x 2-pole + 4 x 3-pole + 1 x 6-pole

44 contact poles
26 adjacent terminal-to-terminal links

5 stock bars
KN-10J12: one pack of five 10-pole bars

FIT ONLY THE NUMBERED TEAL SECTIONS. KEEP 4E / 4F / 4G SEPARATE.
Work de-energized. Match the new labels to the installed blocks first; see Terminal_numbering.md for the old-to-new map.

1 UPPER RAIL / MODULE 1

All terminals are to the right of the K1 / K2 reversing contactors. Read left to right.

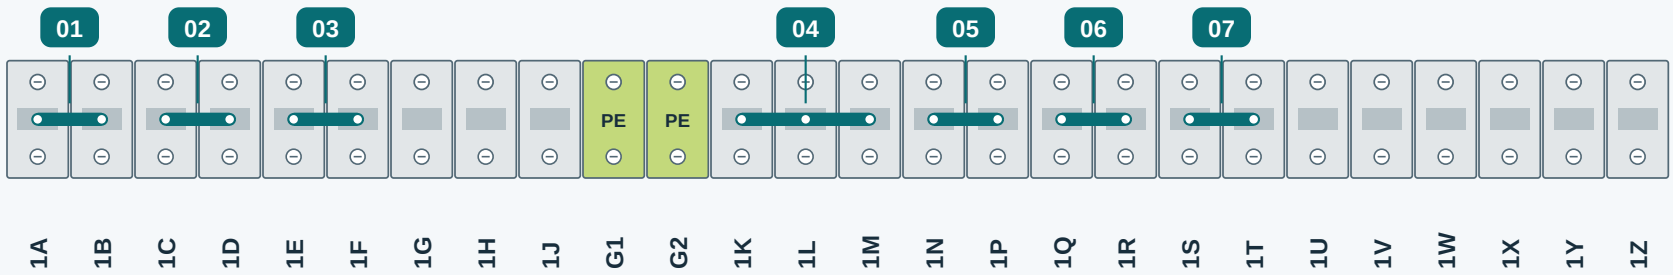

Teal tag = jumper section ID (01-18). Gray without teal = no bar. Green G# = PE; no bar.

- ☐ 01 M1_T1 2P
- ☐ 02 M1_T2 2P
- ☐ 03 M1_T3 2P
- ☐ 04 DIRECTION_ENABLE 3P
- ☐ 05 DIRECTION_FWD_CMD 2P
- ☐ 06 DIRECTION_REV_CMD 2P
- ☐ 07 CONTROL_RUN_ENABLE 2P

2 MIDDLE RAIL / MODULES 2 + 3

0V bank at far left; sequence-control banks to the right of TD1 / TD2.

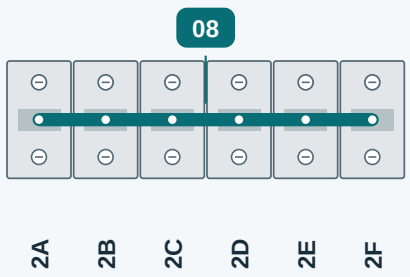

K6 / K4 / K5
then TD1 / TD2

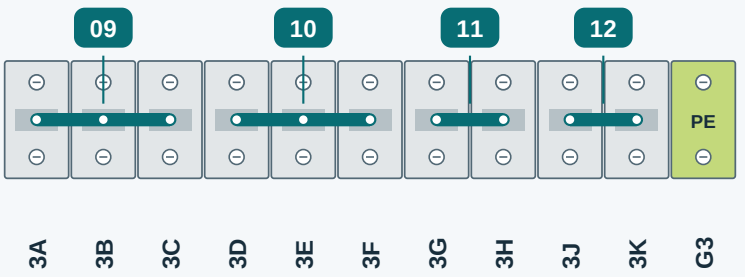

08 includes 2F: six poles total. Keep the 0V bank separate from PE.

- ☐ 08 0V 6P
- ☐ 09 CONTROL_RUN_ENABLE 3P
- ☐ 10 HIGH_SEQUENCE_ENABLE 3P
- ☐ 11 HIGH_SEQUENCE_TRIGGER 2P
- ☐ 12 LOW_SEQUENCE_ENABLE 2P

3 LOWER RAIL / MODULES 4 + 5

E-stop / +24V at left of K3; switched power and incoming terminals at right of PS1.

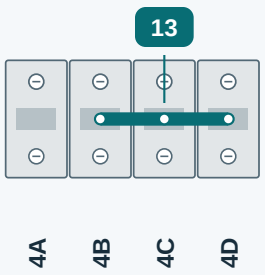

K3 / F4 / Q1 / PS1
devices between terminal groups

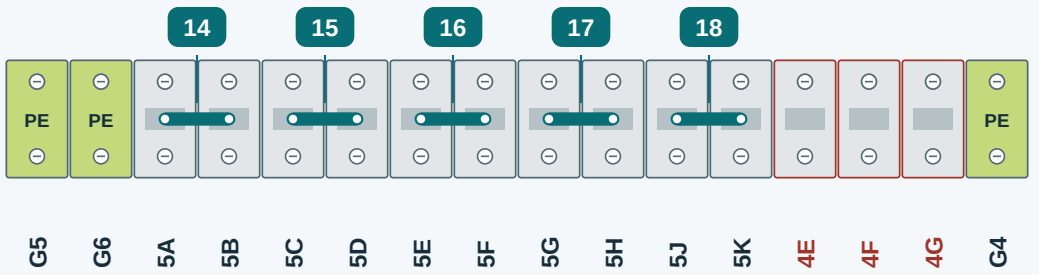

Incoming 4E / 4F / 4G and G4 are at far right. Phases remain separate. 15 joins 5C to 5D.

- ☐ 13 +24V 3P
- ☐ 14 L1_SW 2P
- ☐ 15 L2_SW 2P
- ☐ 16 L1_DIR 2P
- ☐ 17 L2_DIR 2P
- ☐ 18 L3_DIR 2P

CUT PLAN / FIVE 10-POLE STOCK BARS

A	08 / 6P		01 / 2P	02 / 2P
B	04 / 3P	09 / 3P	03 / 2P	05 / 2P
C	10 / 3P	13 / 3P	06 / 2P	07 / 2P
D	11 / 2P	12 / 2P	14 / 2P	15 / 2P	16 / 2P
E	17 / 2P	18 / 2P	6 POLES REMAIN	

Count poles, not length.

Cut each section separately between poles; deburr and remove all chips before fitting.

44 poles used; 6 remain. Each numbered tag identifies one independent jumper section.

INSTALL / CHECK

1 Match & fit
Match every terminal label to the map. Seat each section in the central jumper channel of the gray KN-T12 blocks.

2 Tighten
KN-10J12 jumper screws: 0.4-0.6 N m (3.5-5.3 lb-in). Use a torque screwdriver; this is the bar-screw value.

3 Separate & cover
Keep separators at circuit boundaries and cut ends. Fit KN-TC-1S covers; leave no cut end touching the next bank.

4 Check before wiring
Verify continuity within each numbered bank and isolation to adjacent different circuits. Check off all 18 sections.

PE blocks bond through their rail feet; inter-rail bonding wires remain a separate wiring step. This sheet covers terminal bars only.

Map from saved board JMP links; circuit names checked against the saved schematic netlist. Position drawing is not to scale.

OEM references: jumper selection / torque chart [1] | separator / cover guidance [2]