POWERMATIC 1200

BACKPANEL SCREW LOCATIONS

Front view | Hammond EP3020 | Dimensions in mm | Location plan

PM1200-BP-01

REV E / 2026-10-23

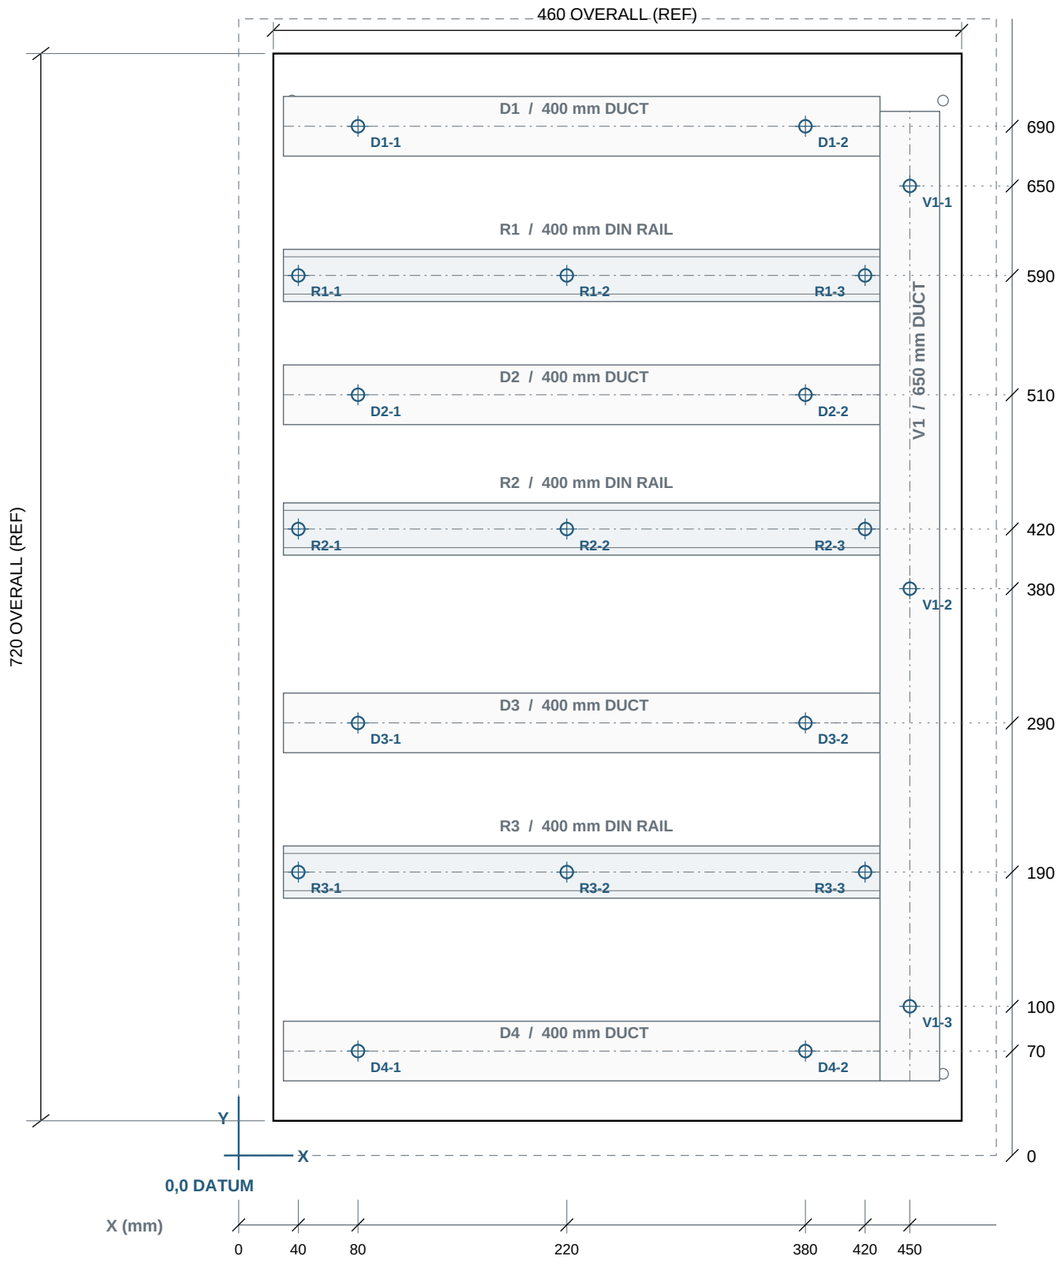

SCREW CENTER COORDINATES

X from ENCLOSURE LEFT; Y from ENCLOSURE BOTTOM. Same datum as sheet 2.

Dashed outline = enclosure exterior. Solid outline = existing EP3020 backplate.

DIN RAILS / 3 screws each / 9 total

ID	X	Y	ID	X	Y	ID	X	Y
R1-1	40	590	R1-2	220	590	R1-3	420	590
R2-1	40	420	R2-2	220	420	R2-3	420	420
R3-1	40	190	R3-2	220	190	R3-3	420	190

HORIZONTAL DUCTS / 2 screws each / 8 total

ID	X	Y	ID	X	Y
D1-1	80	690	D1-2	380	690
D2-1	80	510	D2-2	380	510
D3-1	80	290	D3-2	380	290
D4-1	80	70	D4-2	380	70

VERTICAL DUCT / 3 screws / 3 total

ID	X	Y	ID	X	Y	ID	X	Y
V1-1	450	650	V1-2	450	380	V1-3	450	100

LAYOUT AND DRILLING NOTES

1. Common enclosure LEFT/BOTTOM datum on both sheets. Do not measure these coordinates from the backplate edges. Dashed lines identify the enclosure reference.

2. SHARED HEIGHTS: D1 / indicators H1-H2 = 690; R2 / disconnect SW1 = 420; R3 / M12 J1 = 190. These centerlines are identical on sheet 2.

3. V1 / motor entry J4 share X = 450. Rails and horizontal ducts span X = 30 to 430; their right ends meet the left edge of V1. V1 and D4 share bottom Y = 50.

4. Rail screws fit existing slots at 10, 190 and 390 from the left cut end. Duct screw positions are proposed; check actual base perforations before drilling.

5. 20 screw centers total. Crosshair circles are location symbols, not drill diameters. Select pilot/tap or clearance sizes to suit the chosen fasteners.

6. Layout coordinates use multiples of 10 mm. Preserve hardware sizes and shared alignments. Panel overall dimensions are rounded references. Verify physical fit; do not scale.

POWERMATIC 1200

ENCLOSURE CUTOUT LOCATIONS

Hammond EN4SD30208GY | Exterior views | Dimensions in mm | Shared enclosure datum / aligned layout

PM1200-BP-01

REV E / 2026-10-23

TOP / LOOKING DOWN

Left and right follow the enclosure front view.

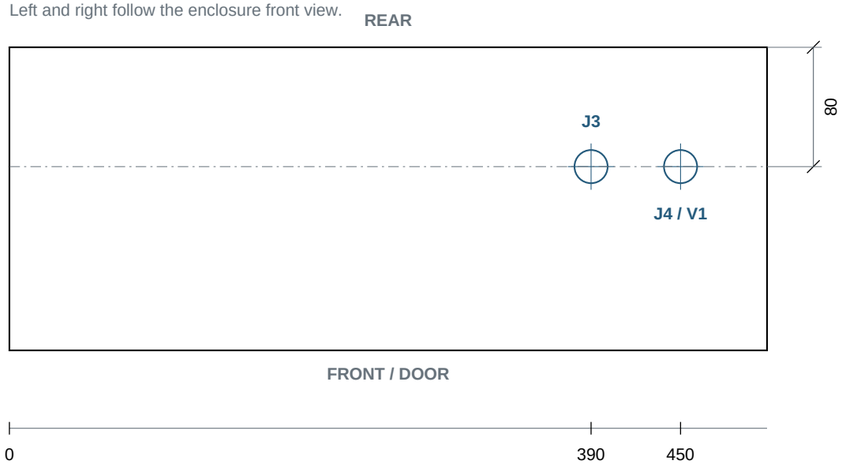

BOTTOM / LOOKING UP

FRONT at top; physical LEFT remains on the left.

CUTOUT SCHEDULE

A = X from left on TOP / BOTTOM.

A = height from enclosure bottom on LEFT.

D = depth from REAR exterior face on every view.

ID	FACE	A	D	CUTOUT
J3	TOP	390	80	C1
J4	TOP	450	80	C1
J2	BOTTOM	90	80	C2
H1	LEFT	690	75	C3
H2	LEFT	690	125	C3
SW1	LEFT	420	100	C4
J1	LEFT	190	100	C5

CUTOUT SIZES / DO NOT ROUND

C1 2 x DIA 22.2 (7/8 in), 1/2-trade LFNC fittings.

C2 DIA 28.2 (1-7/64 in), mains gland.

C3 2 x DIA 22.5, pilot lights.

C4 DIA 10 shaft + 2 x DIA 4.3, 30 spacing.

C5 DIA 15.4 with 13.6 flats; see detail below.

J1 / C5

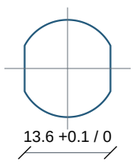

DIA 15.4 +0.1 / 0

Flats parallel to height axis.

SW1 / C4



2 x DIA 4.3; center DIA 10

Mount holes along depth axis.

LEFT SIDE / OUTSIDE VIEW

Rear at left; front / door at right.

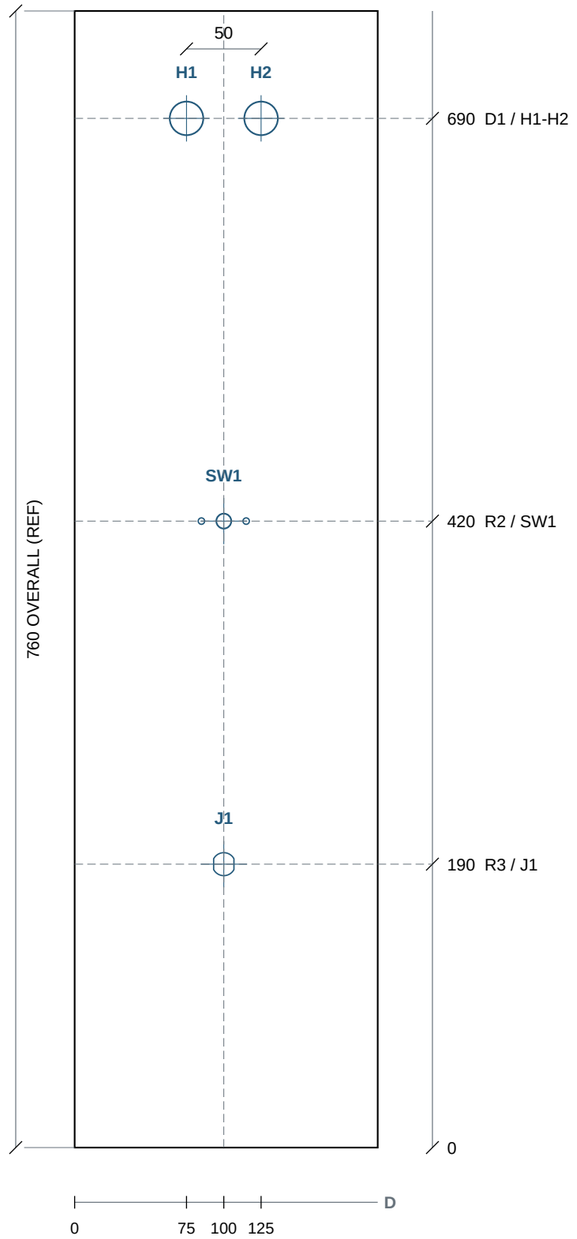

1. SAME ENCLOSURE DATUM AS SHEET 1. Shared heights: D1 / H1-H2 = 690; R2 / SW1 = 420; R3 / J1 = 190. J4 / V1 share X = 450.
2. J3/J4 use the selected 1/2-inch LFNC-B fittings; the old gland models are routing proxies. J2 retains the BNSPDX-23-W mains gland.
3. H1 (white) D = 75 and H2 (red) D = 125 preserve 50 spacing about SW1 / J1 depth D = 100. Keep these 5 mm dimensions and all functional hole sizes exact.
4. Seven devices require nine openings including SW1 mount holes. Body REF: 510 wide x 760 high x 200 deep. Retain factory features; verify parts before cutting.