

CONFIDENTIAL



TABLE OF CONTENTS

1. Contents
2. Power
3. NRF52840
4. NRF9160
5. UbloxGps
6. SX1262

CONFIDENTIAL




CONFIDENTIAL

Project	Sigma5.PrjPcb	Revision	C0	COREKINET
Title	1_Contents.SchDoc	Sheet	1 / 6	
Description		Date	2/24/2022	

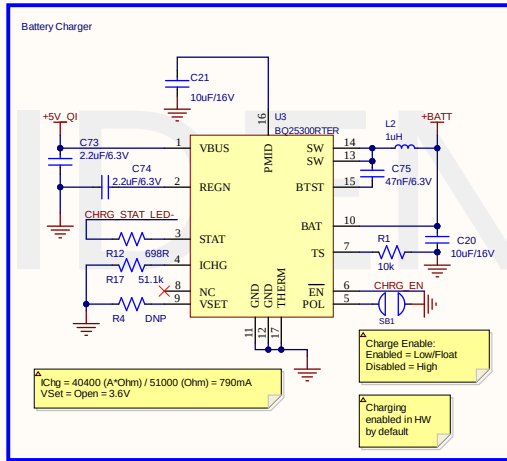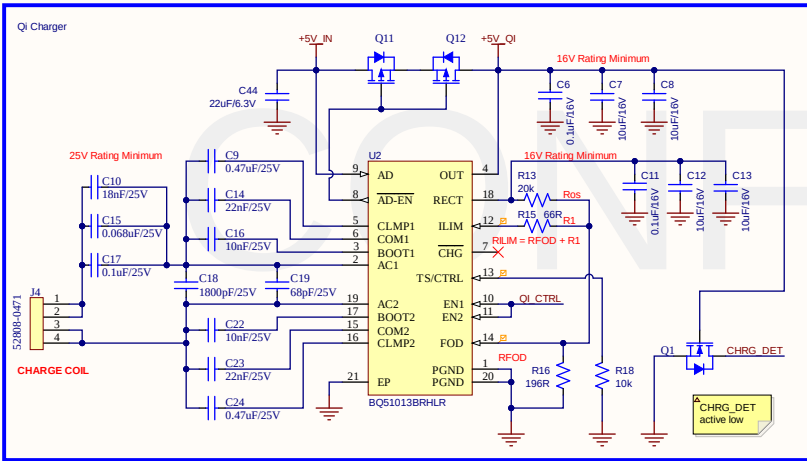

Power Rails:
+5V_IN = Injectable 5V DC Source
+5V_QI = 5V Qi Charger Output
+BATT = Battery Before UVP
+VBAT = Battery After UVP
+VIN = +VBAT or +5V_QI (when charging)
+3.3V = 3.3V DCDC Output
+VBCKP = 2.5V after LDO


Qi_Ctrl must be low or high-z to enable wireless charging. Set high to disable.

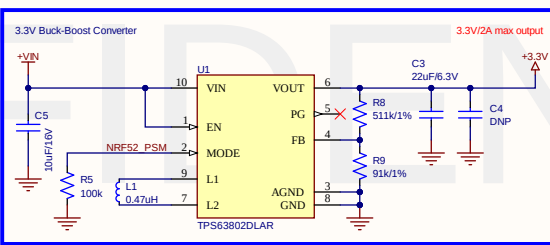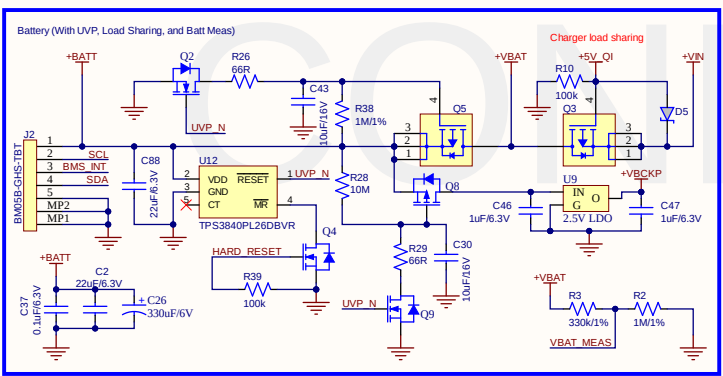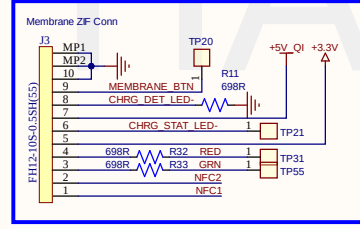

TPS3802DLAR
Vgs(TH) => -2.5V to -1.0V
R = 1M | C = 10uF
Power off @ 2.6V => 0.4s to 9.5s
Power off @ 3.2V => 2.5s to 11.6s



TPS63802DLAR
Vgs(TH) => -1.0V to -0.5V
R = 10M | C = 10uF
Power off @ 2.6V => minimum 95s
Power off @ 3.2V => minimum 116s

HARD_RESET must be configured as wired-or on both microcontrollers.
Disconnect '0', standard '1'.

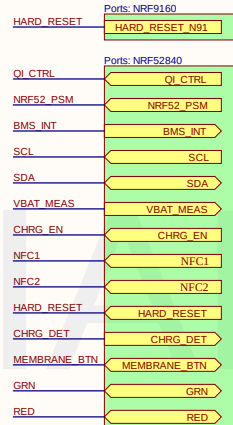













Project	Sigma5.PrjPcb	Revision	C0
Title	2_Power.SchDoc	Sheet	2 / 6
Description		Date	8/27/2024

COREKINET

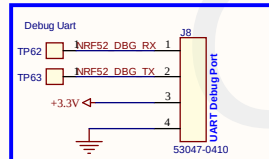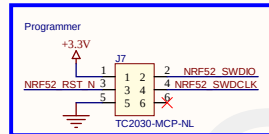


C_{Load} ≤ 12.5pF
 C_{Shunt} ≤ 2pF
 C_{Load} = 7pF
 C_{Load} = (C₁ * C₂) / (C₁ + C₂) + C_{stray}
 C_{stray} = 5pF
 C₁ = C₂ = 4pF



C_{Load} ≤ 12pF
 C_{Shunt} ≤ 7pF
 C_{Load} = 10pF
 C_{Load} = (C₁ * C₂) / (C₁ + C₂) + C_{stray}
 C_{stray} = 5pF
 C₁ = C₂ = 10pF

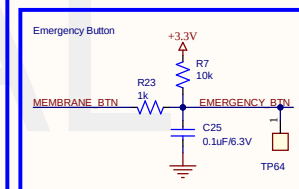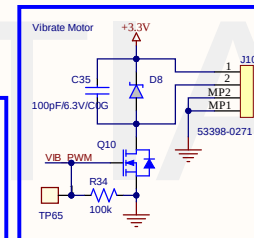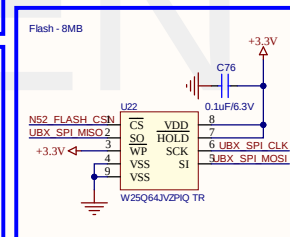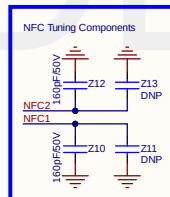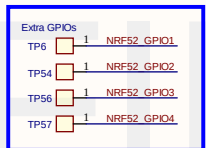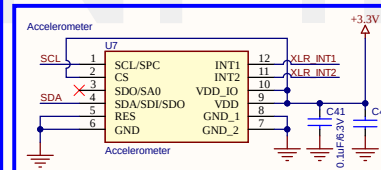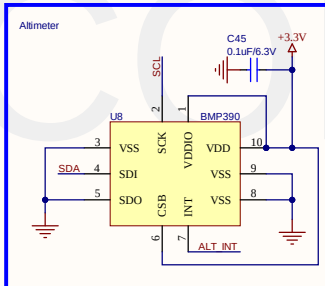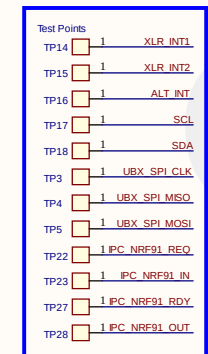
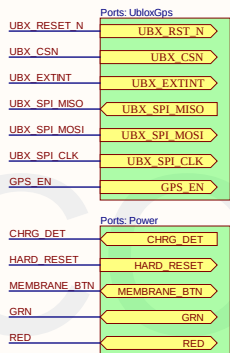
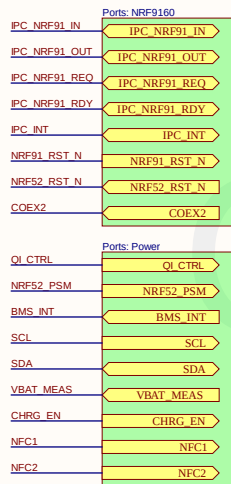


Project	Sigma5.PrjPcb	Revision	C0
File	3_NRF52840.SchDoc	Sheet	3 / 6
Description		Date	8/27/2024


COREKINET

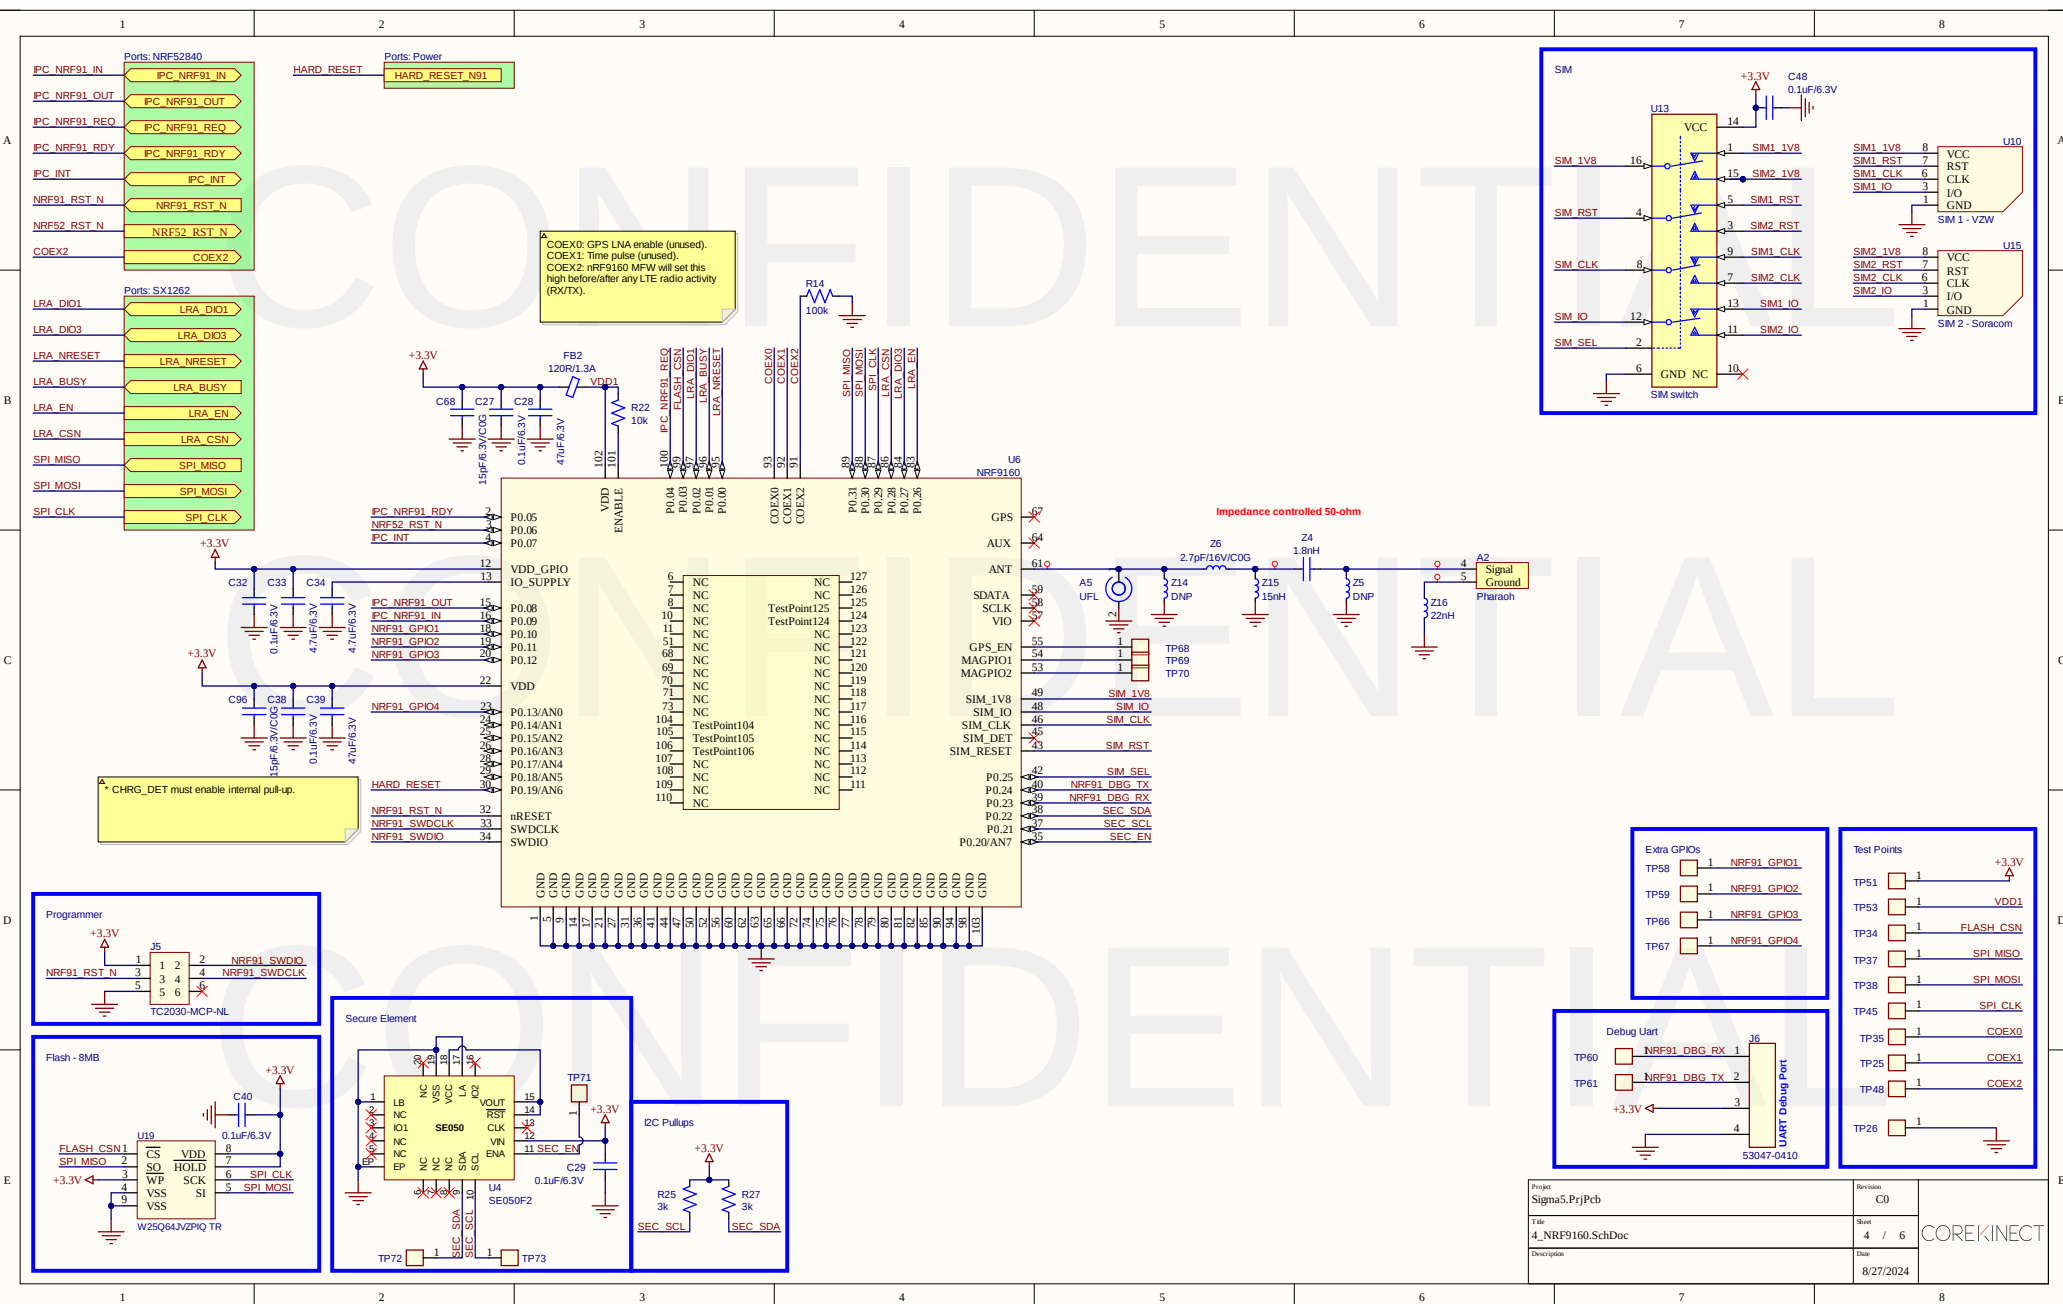

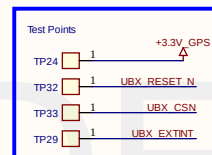

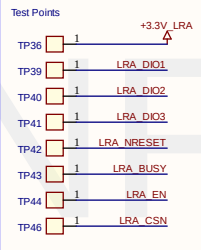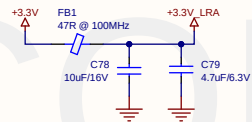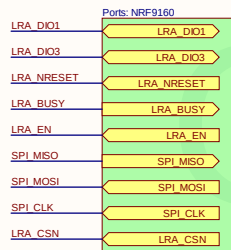

A
C_Load = 10pF (Datasheet)
C_Shunt <= 2pF
C_Load = 10pF (Crystal)
C1 = C2 = DNP (internal)

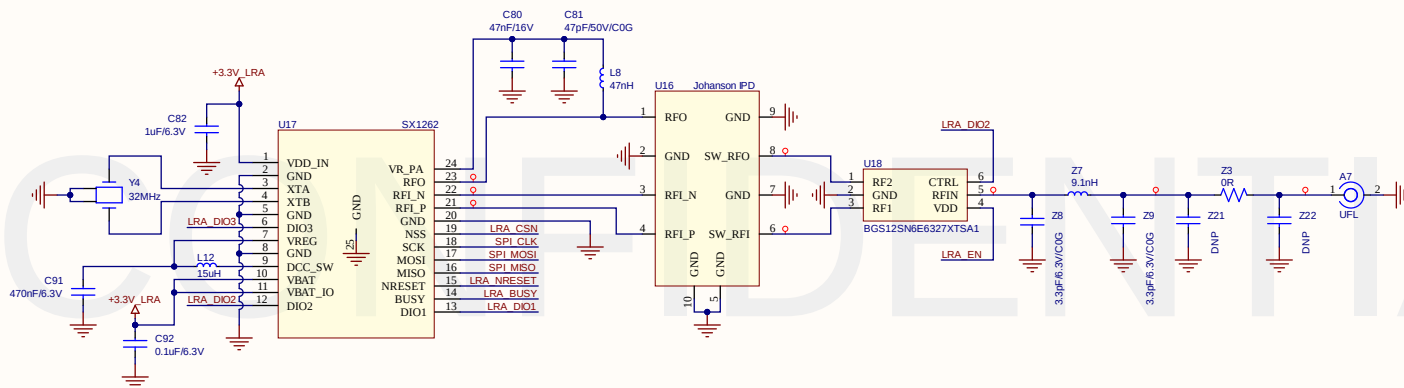

Project	Sigma5.PrjPcb	Revision	C0	COREKINET
Title	6_SX1262.SchDoc	Sheet	6 / 6	
Description		Date	8/27/2024	