

CONFIDENTIAL



TABLE OF CONTENTS

1. Contents
2. Power
3. NRF52840
4. NRF9160
5. UbloxGps
6. SX1262

CONFIDENTIAL




CONFIDENTIAL

Project	Sigma5.PrjPcb	Revision	C1	CORFINKECT
Title	1_Contents.SchDoc	Sheet	1 / 6	
Description		Date	2/24/2022	

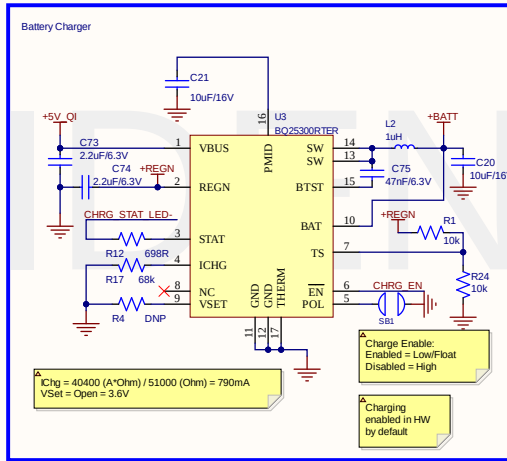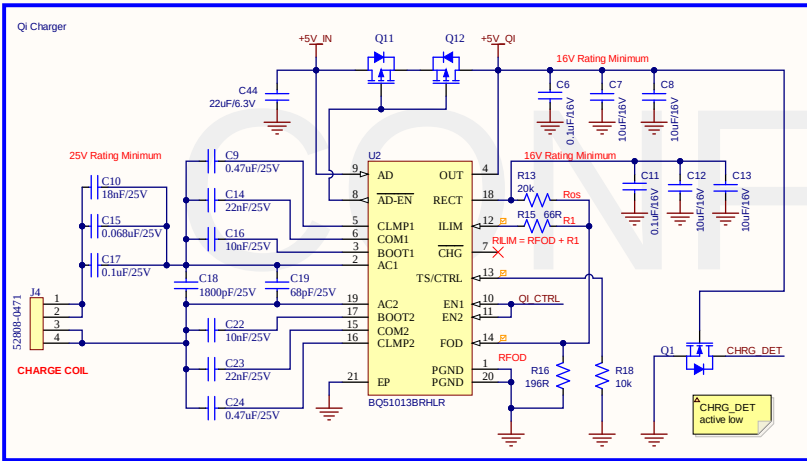

Power Rails:
+5V_IN = Injectable 5V DC Source
+5V_OI = 5V Qi Charger Output
+BATT = Battery Before UVP
+VBAT = Battery After UVP
+VIN = +VBAT or +5V_OI (when charging)
+3.3V = 3.3V DCDC Output
+VBCKP = 2.5V after LDO


Qi Ctrl must be low or high-Z to enable wireless charging. Set high to disable.

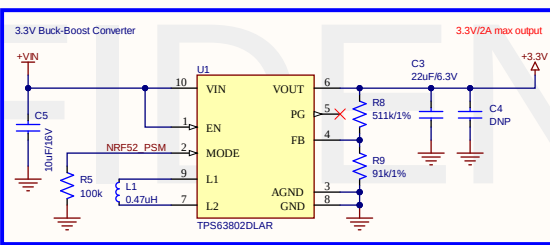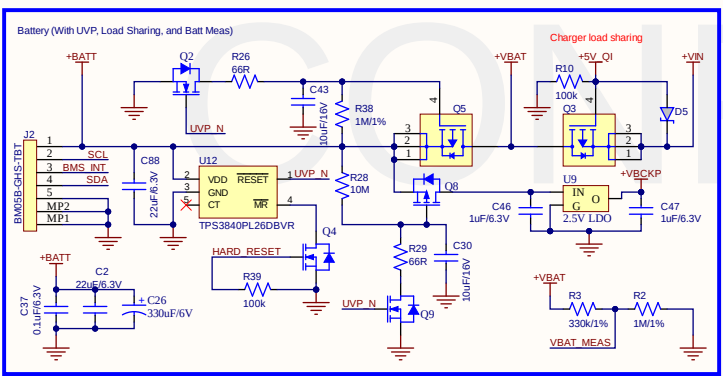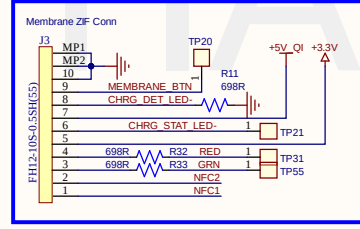


















SIS413DN-T1-GE3 +VBAT
Vgs(th) => -2.5V to -1.0V
R = 1M | C = 10uF
Power off @ 2.6V => 0.4s to 9.5s
Power off @ 3.2V => 2.5s to 11.6s

DMG1013UW-7 +VBCKP
Vgs(th) => -1.0V to -0.5V
R = 10M | C = 10uF
Power off @ 2.6V => minimum 95s
Power off @ 3.2V => minimum 116s




HARD_RESET must be configured as wired-or on both microcontrollers.
Disconnect 'V', standard '1'.

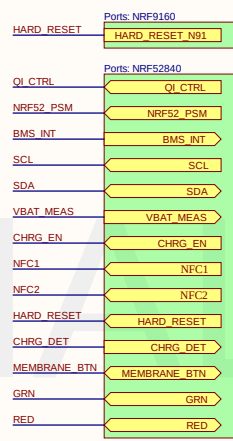

Project	Sigma5_PriPcb	Revision	C1
File	2_Power.SchDoc	Sheet	2 / 6
Description		Date	1/9/2025

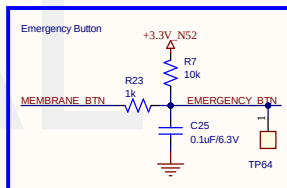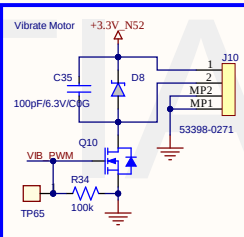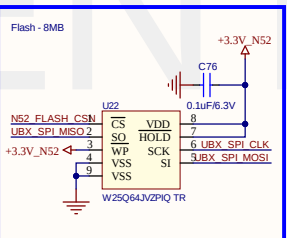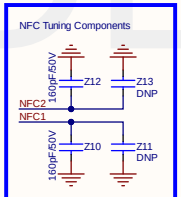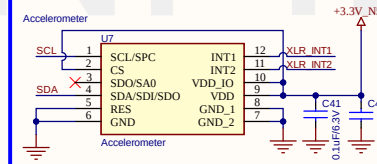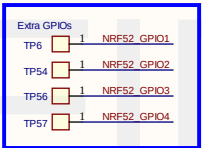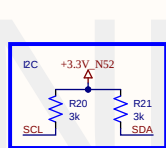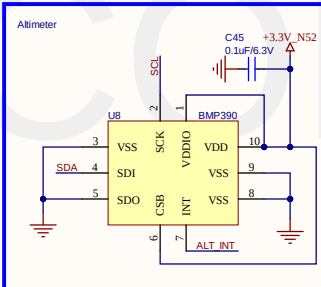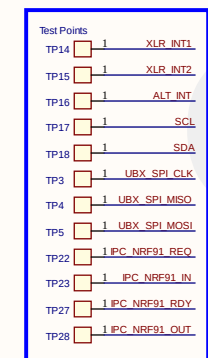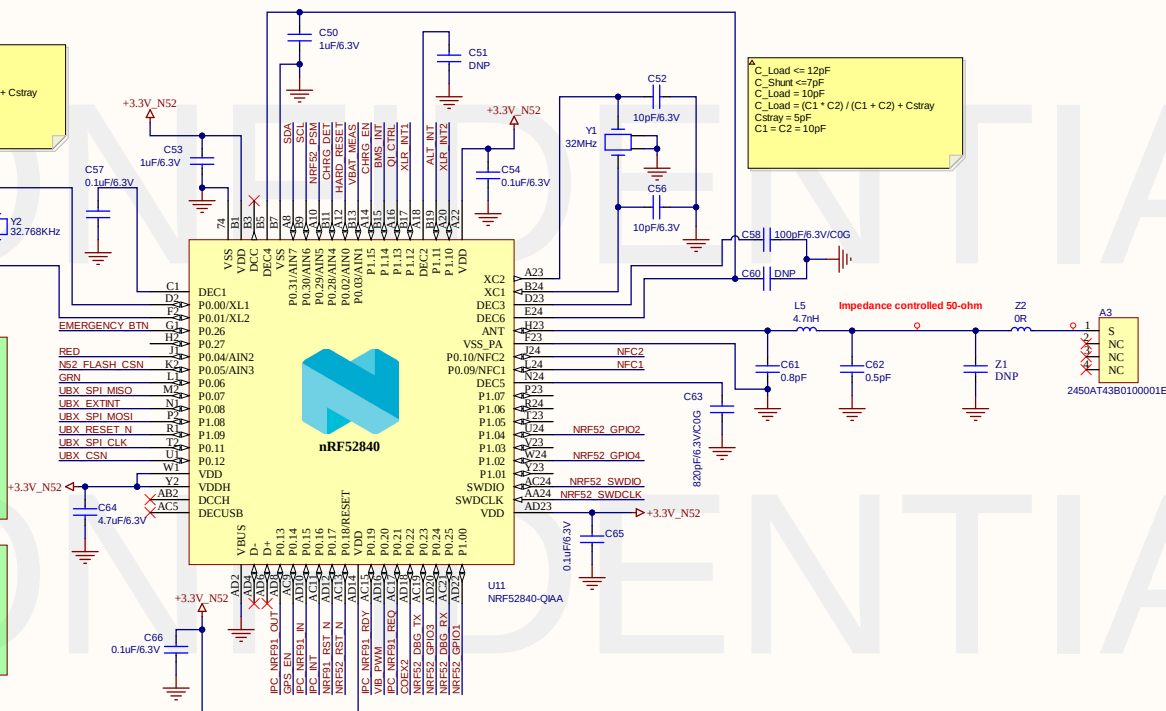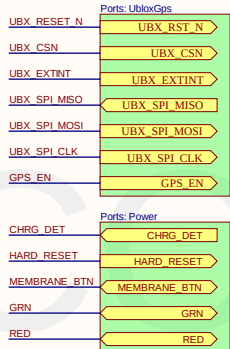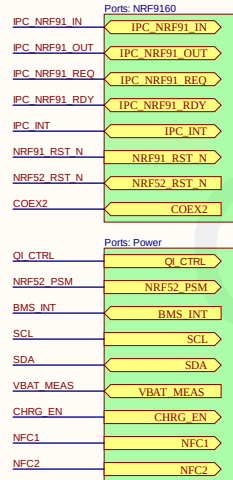

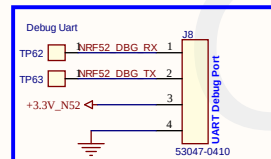


Project	Revision	CORF IN FECT
Signa5.PrjPcb	C1	
Title	Sheet	
3_NRF52840_SchDoc	3 / 6	
Description	Date	
	1/9/2025	

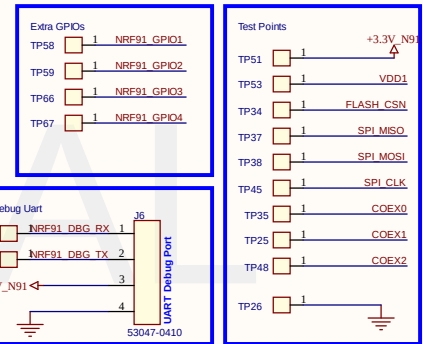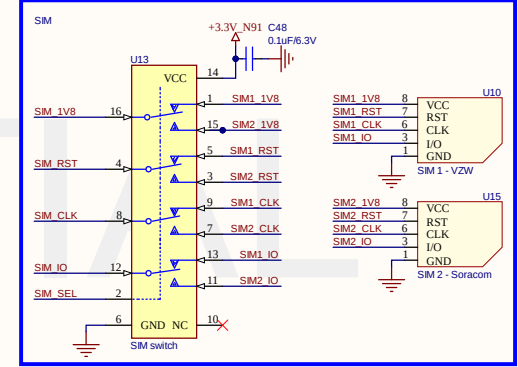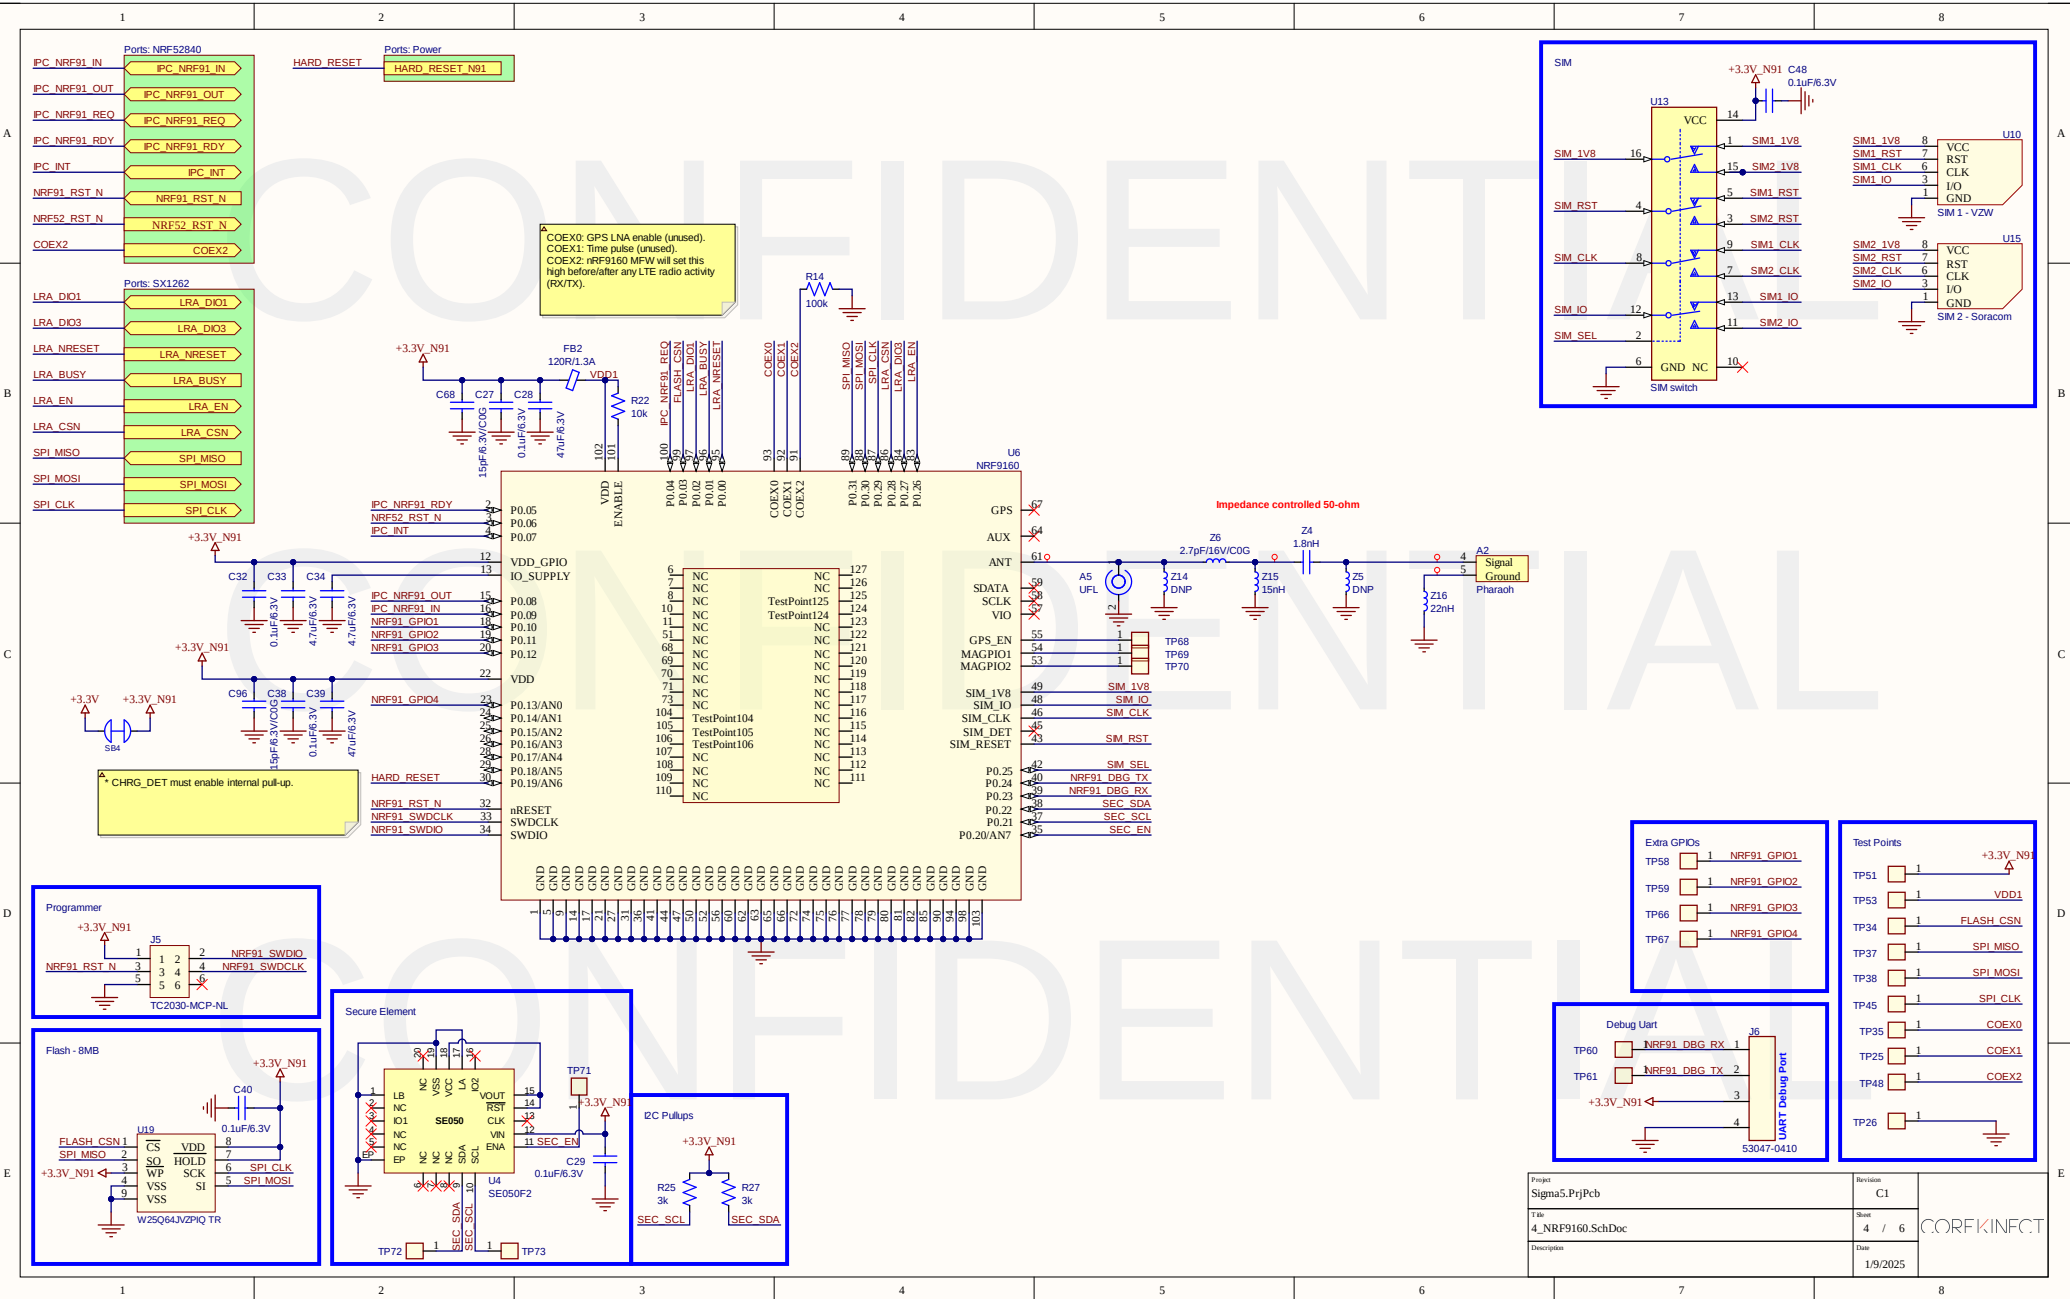


Project	Sigma5.PrjPcb	Revision	C1
File	4_NRF9160.SchDoc	Sheet	4 / 6
Description		Date	1/9/2025

CORFINKECT

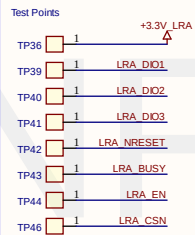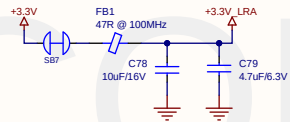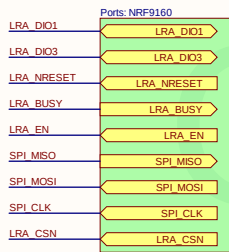

A

C_Load = 10pF (Datasheet)
C_Shunt <= 2pF
C_Load = 10pF (Crystal)
C1 = C2 = DNP (internal)

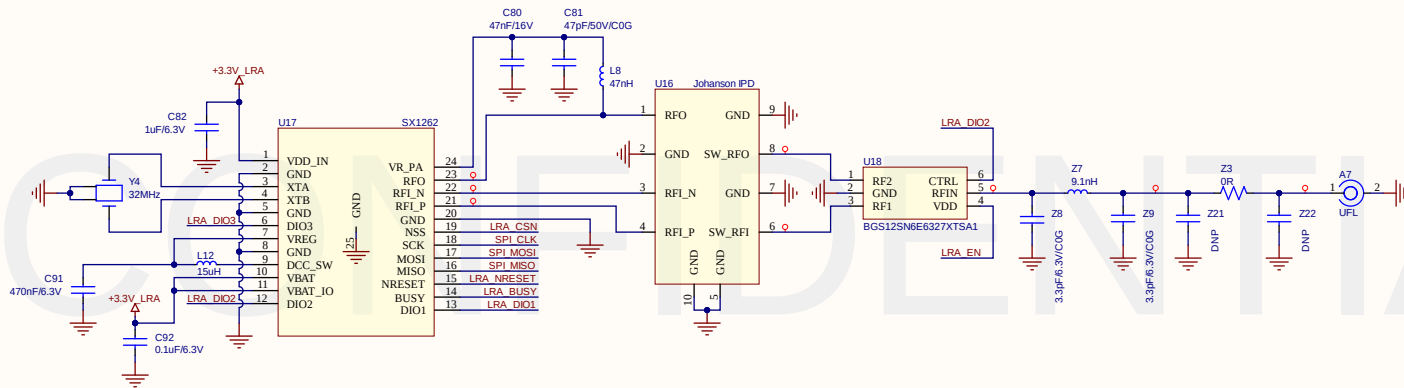

Project	Sigma5.PrjPcb	Revision	C1
File	6_SX1262.SchDoc	Sheet	6 / 6
Description		Date	1/9/2025

CORFINKINCT