OneNote

Praktikum05

Montag, 18. Oktober 2021 20:18



CT Lab: Arithmetic Operations

1 Introduction

In this lab you will write your own assembly programs to perform additions and subtractions on the CT Board.

2 Learning Objectives

- You can apply addition and subtraction operations in assembly programs.
- You understand the implications of these operations on the processor flags.
- You can implement additions, which exceed the word size of the processor.

3 Task 1 – Sum and Difference

3.1 Introduction

You shall write a program that adds and subtracts two 8 bit values. To be able to observe the carry and overflow flags, the two 8 bit values will be shifted to the left by 24 bits. The right part will be filled with zeroes.

Open the given project frame sum_diff and expand it, so that one 8 bit value is read from the DIP-switches S15 to S8 (operand A) and another from S7 to S0 (operand B). Both operands shall be expanded to 32 bit, as mentioned in the introduction. Display the most significant byte of the sum on LED7 to LED0 and the most significant byte of the difference on LED23 to LED16.

The instruction LSLS (i.e. LSLS R1, R1, #24) shifts the content of register R1 to the left by 24 bits. The right part gets filled with zeroes. You will learn about the shift instructions in a future lesson.

Additionally you shall display the flags set by these two operations on the LEDs. The flags from the addition shall be displayed on LED15 to LED12 and the ones from the subtraction on LED31 to LED28 (See Figure 1).

i.e.: LSRS R1, R1, #24 shifts the content of R1 to the right by 24 bits.

ZHAW Computer Engineering / 31.07.2017

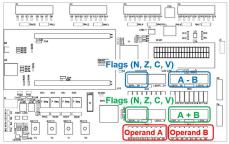


Figure 1: In and output of values for the sum and difference

3.3 Verification

Calculate the expected results based on the following table, i.e. sum, difference and flags

			Addition: A + B					Subtractio	Subtraction: A – B			
	Α	В	Result	N	Z	С	٧	Result	N	Z	С	٧
1	0x82	0x12	0×94	1	0	0	0	OFX0	0	0	1	1
٤	0x34	0x72	OXBG	1	0	\bigcirc	1	OXC2	1	0	7	3
3	0xC2	0x87	0×49	0	\bigcirc	1	1	0x3B	O	0	1	\bigcirc
4	0xA3	0x62	0x05	0	Ō	1	Ó	0x41	Ŏ	0	1	1
5	0x67	0x99	0x00	0	1	1	\bigcirc	OXCE	1	\bigcirc	0	1

Note for subtraction: C = '0' means 'borrow', while C = '1' means, that 'borrow' is not necessary.

Use the filled in table to verify the correct behavior of your program. Are all results and flags

3 1 100 0010 +1000 0111


001/0100 10000010 + 0111,0010

ZHAW Computer Engineering / 31.07.2017








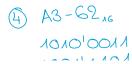

23.10.21, 09:23

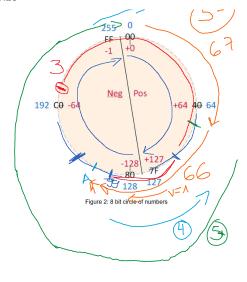

ZHAW Computer Engineering / 31.07.2017

110110 00111 0110'0010 67-99 5 67+99 V V V O V V O 011010111 + 1001 1001 1111111 Gibt kein Gibt overflow wege O und 1 unterschiedliche let Carry bits Overflow

OneNote

4 Task 2 - 64 Bit Addition

4.1 Implementation

Write an assembly program which has a 64 bit summation variable (unsigned interpretation). Every time you press button T0, the program shall read a 32 bit input value from the DIP-switches and shall add the read value to the summation variable. The sum shall be displayed continuously of the total original (See Figure 3). Use the given project frame add64.

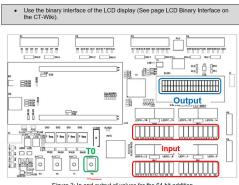


Figure 3: In and output of values for the 64 bit addition

4.2 Verification

Verify the results of your program, especially the overflow from one word to the other.

ZHAW Computer Engineering / 31.07.2017

5 Task 3 - Arithmetic Commands (optional)

Assemble, link and load the given project <code>arith_operations</code> with the debugger. Execute the program step by step. Watch and comprehend the changes in the registries and flags.

6 Grading

The working programs have to be presented to the lecturer. The student has to understand the solution / source code and has to be able to explain it to the lecturer.

Task	Criteria	Weight
1	The program meets the requirements described in chapter 3.2.	2/4
2	The program meets the requirements described in chapter 4.1.	2/4

ZHAW Computer Engineering / 31.07.2017