





Real-Time Clock




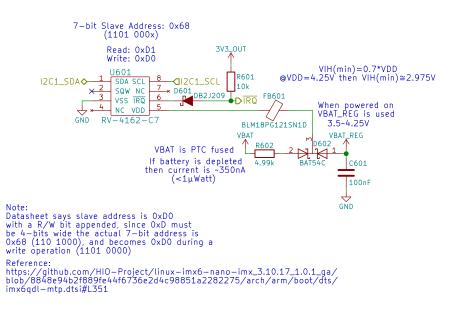

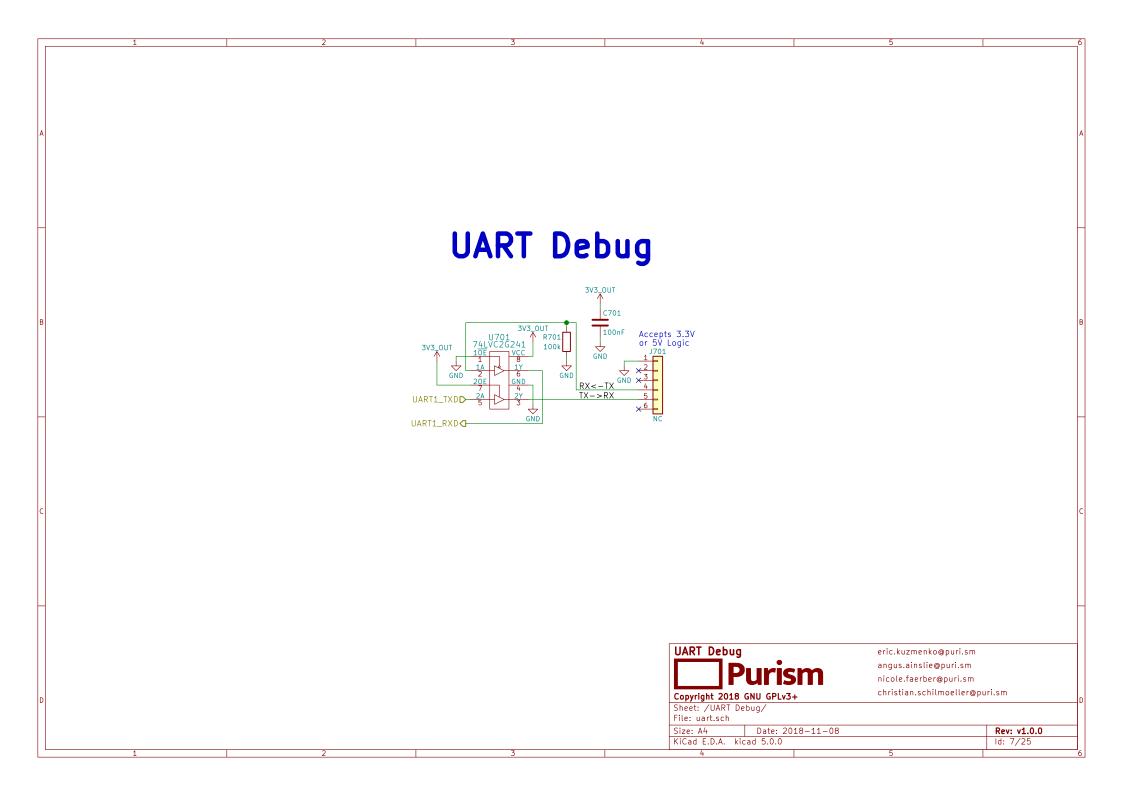


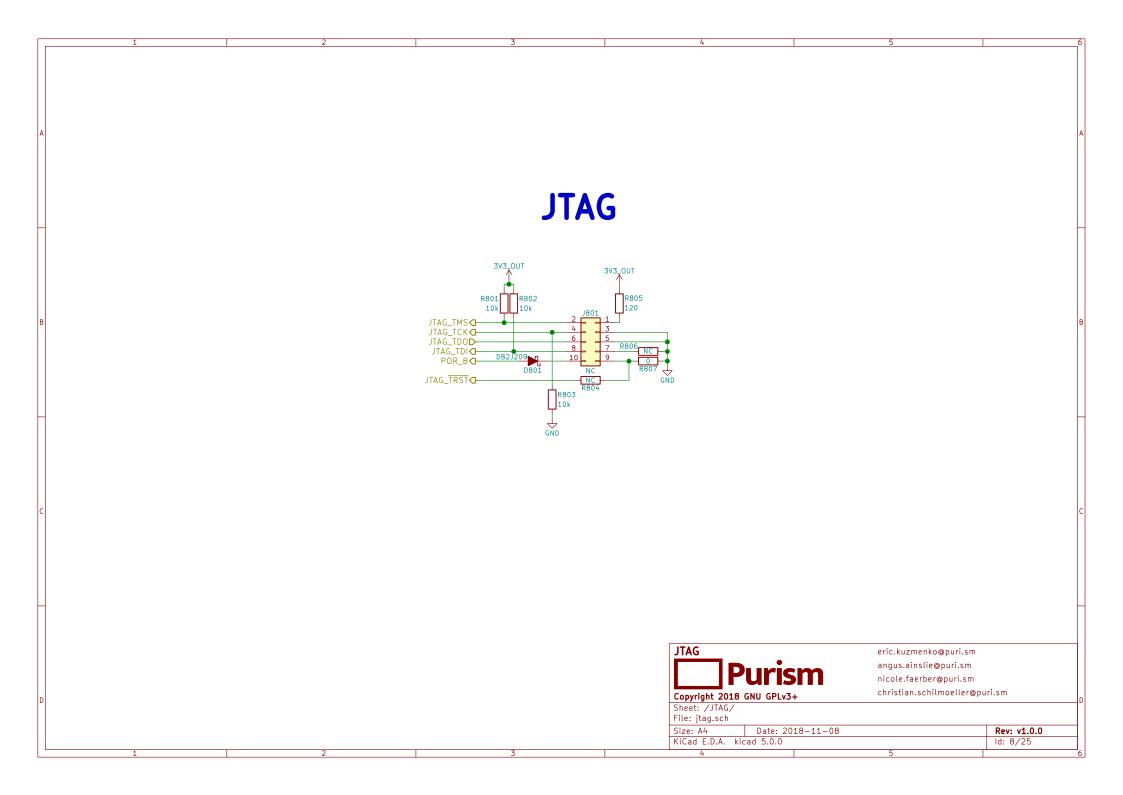

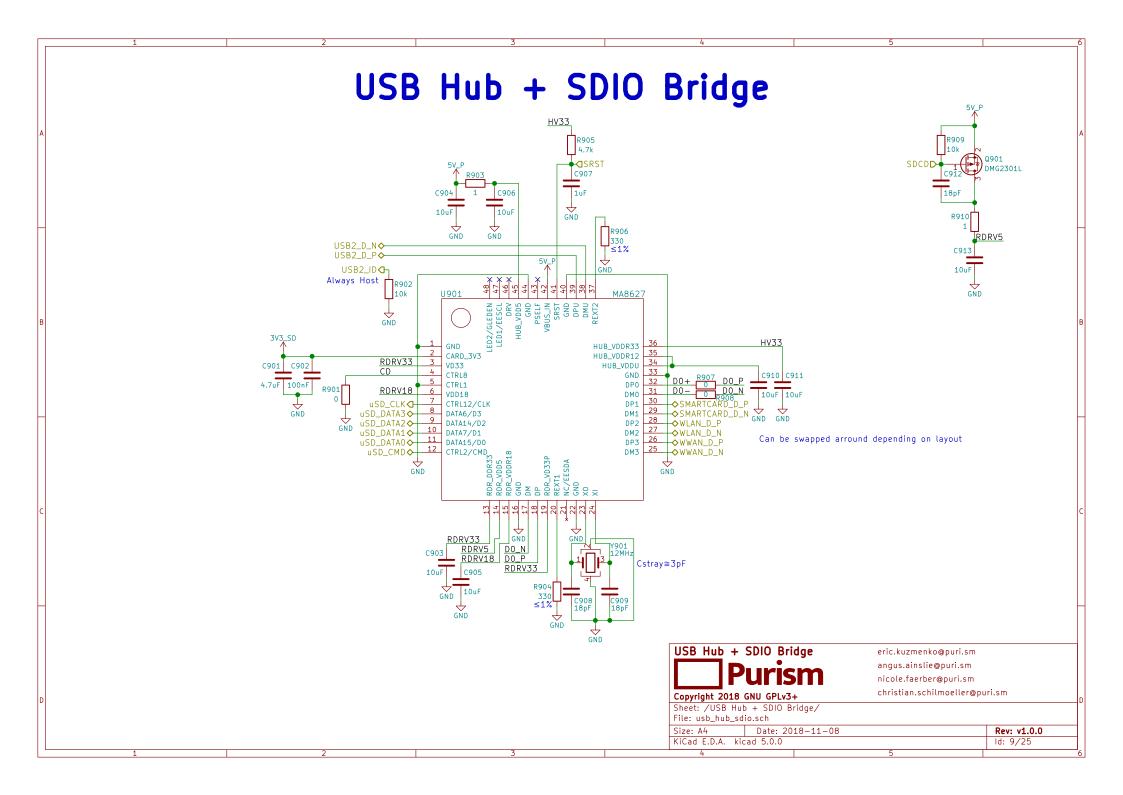

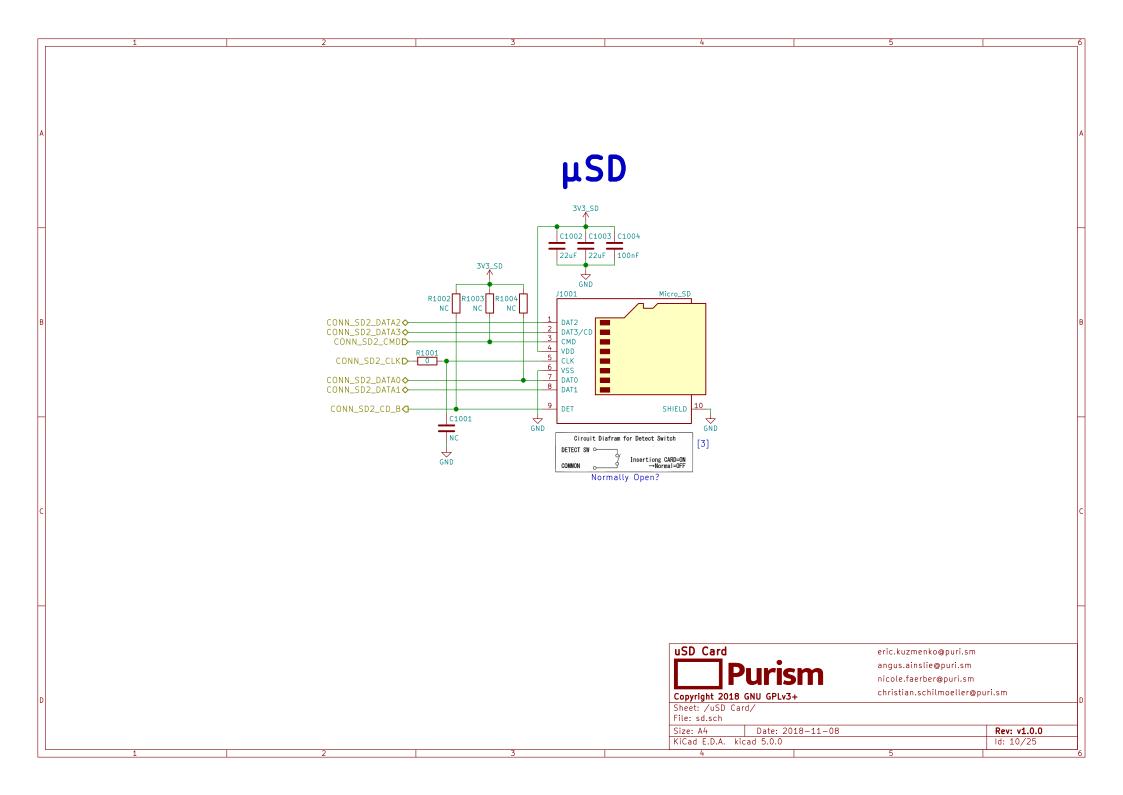



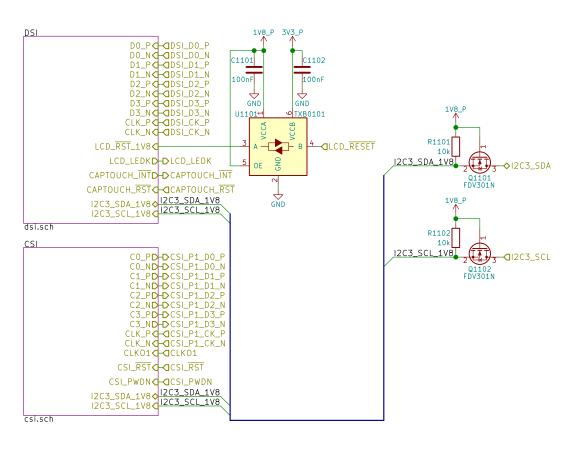



Purism Copyright 2018 GNU GPLv3+		eric.kuzmenko@puri.sm	
		angus.ainslie@puri.sm nicole.faerber@puri.sm	
		christian.schilmoeller@puri.sm	
Sheet: /MIPI/ File: mipi.sch			
Size: A4	Date: 2018-11-08		Rev:

 Fite: mipi.scn


 Size: A4
 Date: 2018-11-08
 Rev: v1.0.0

 KiCad E.D.A. kicad 5.0.0
 Id: 11/25

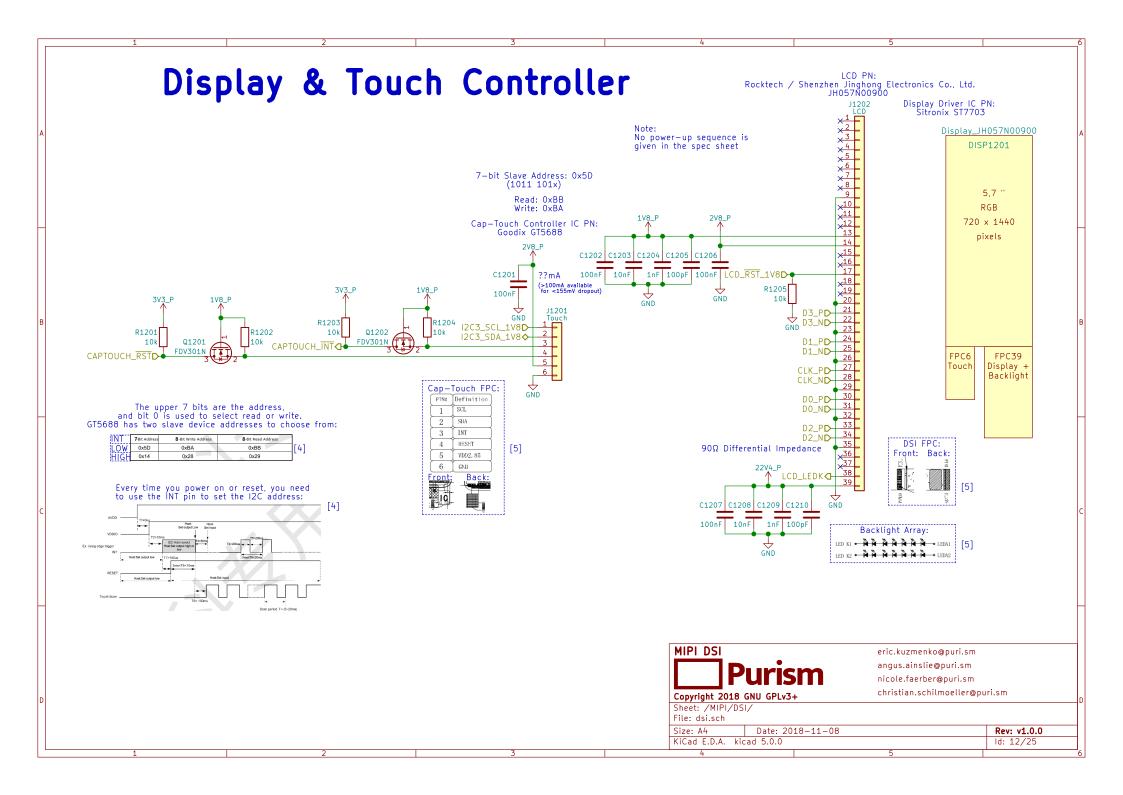

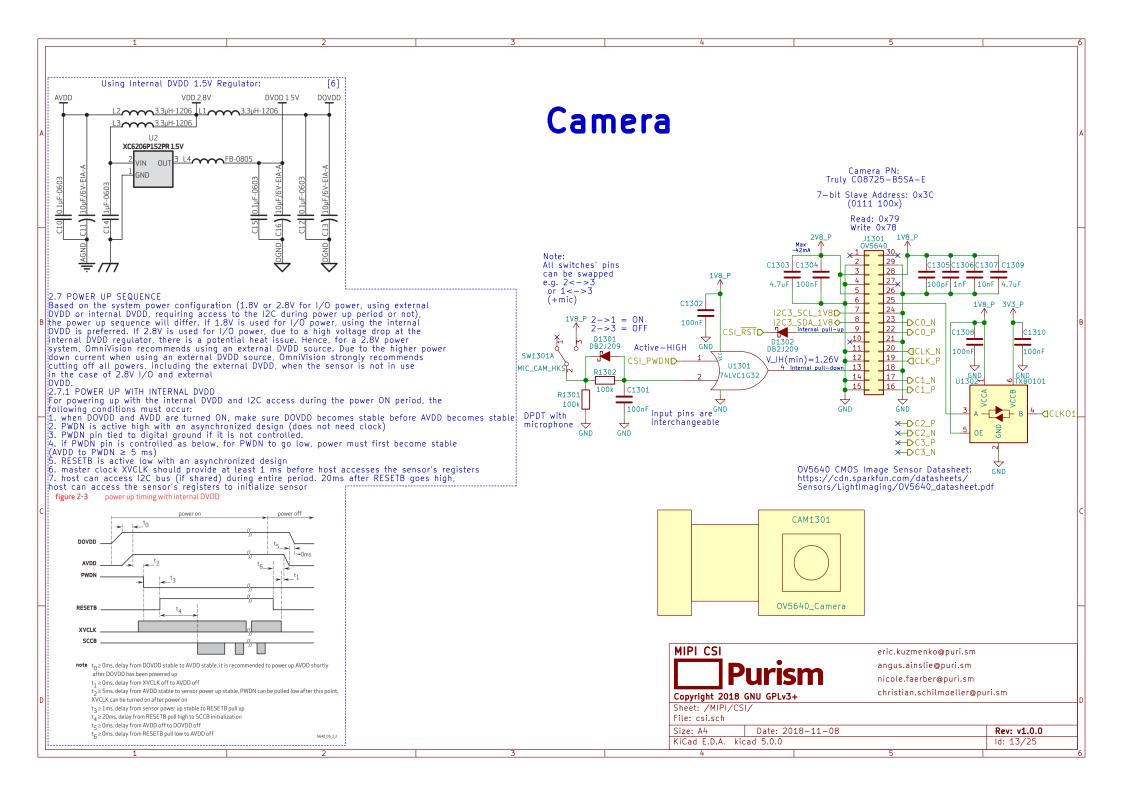


Buttons & LED

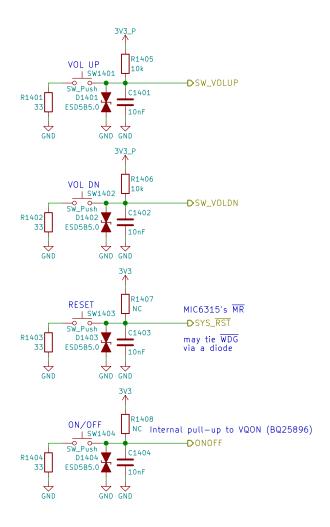



Use PWM2_PWMSAR to set the compare value (duty cycle)
Use PWM2_PWMCR[15:4] to set the PRESCALER (frequency)
Use PWM2_PWMPR to set the top of the counter (frequency)






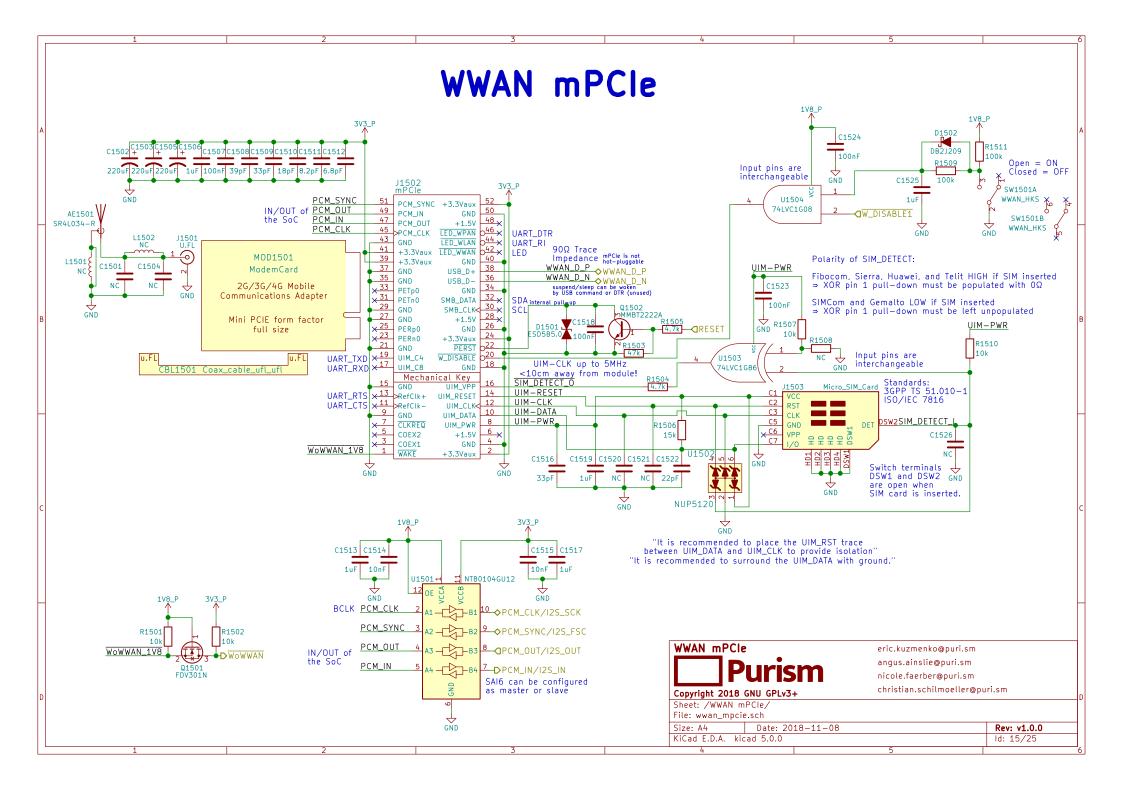

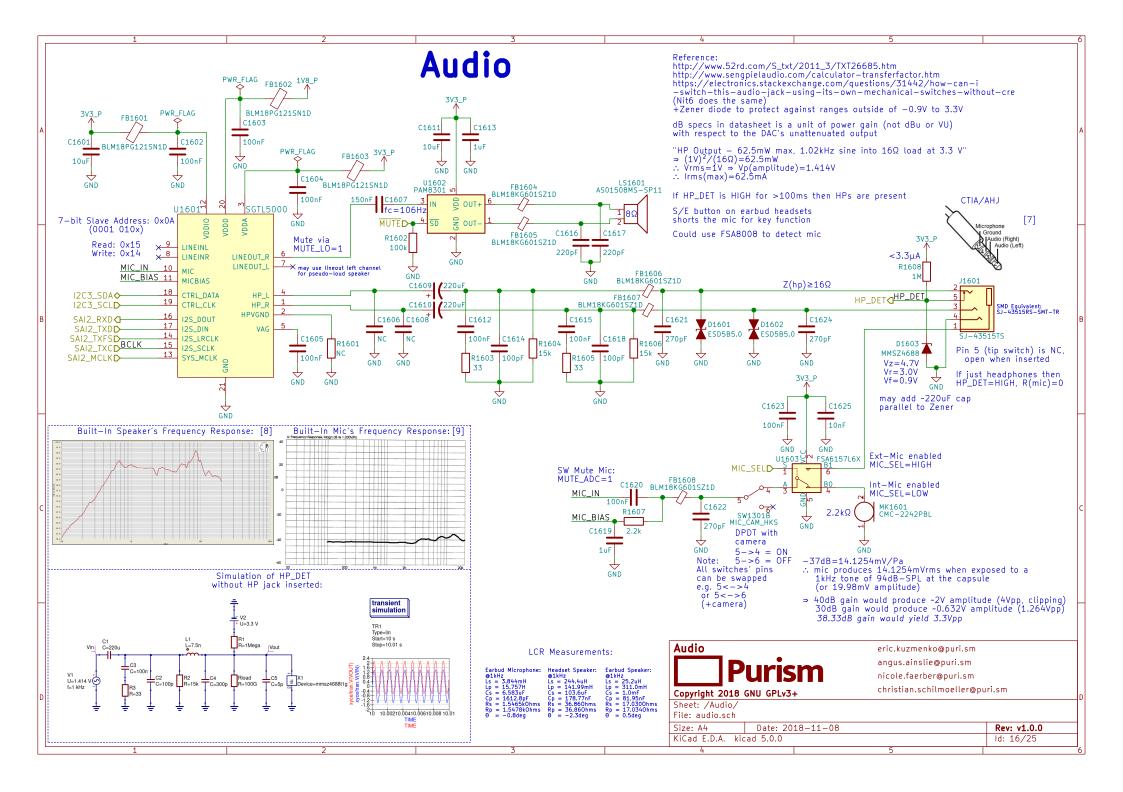


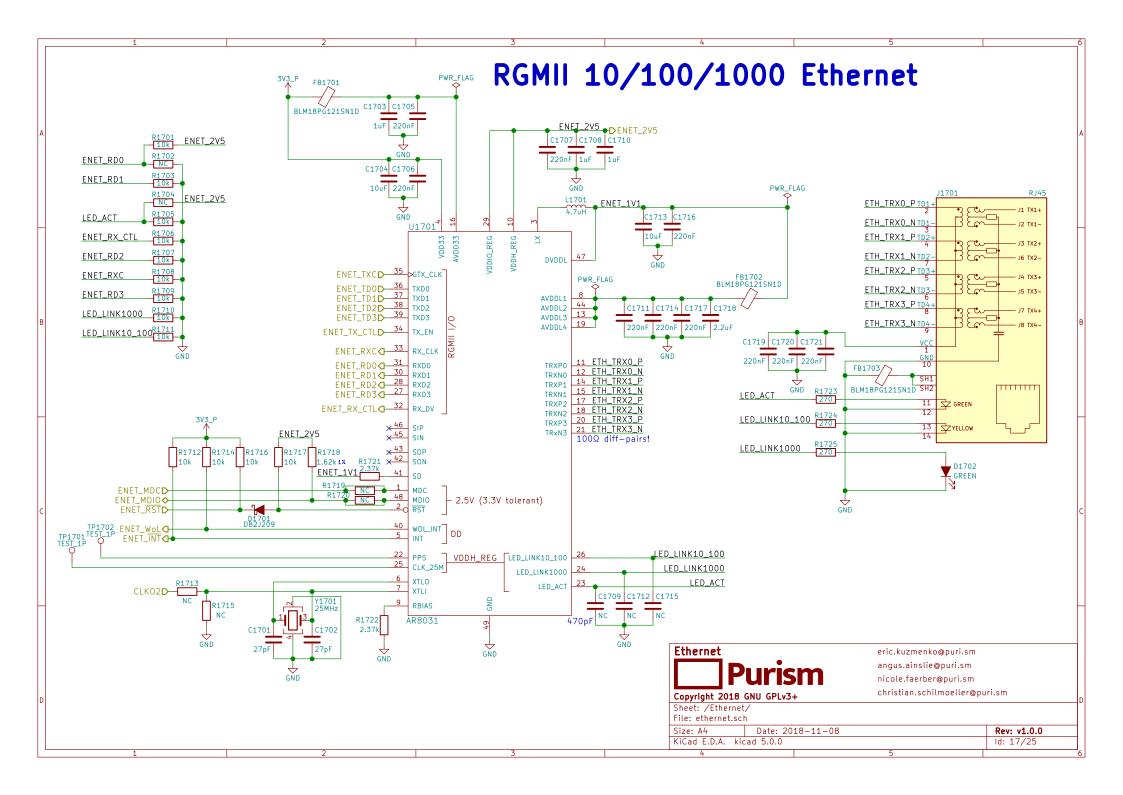


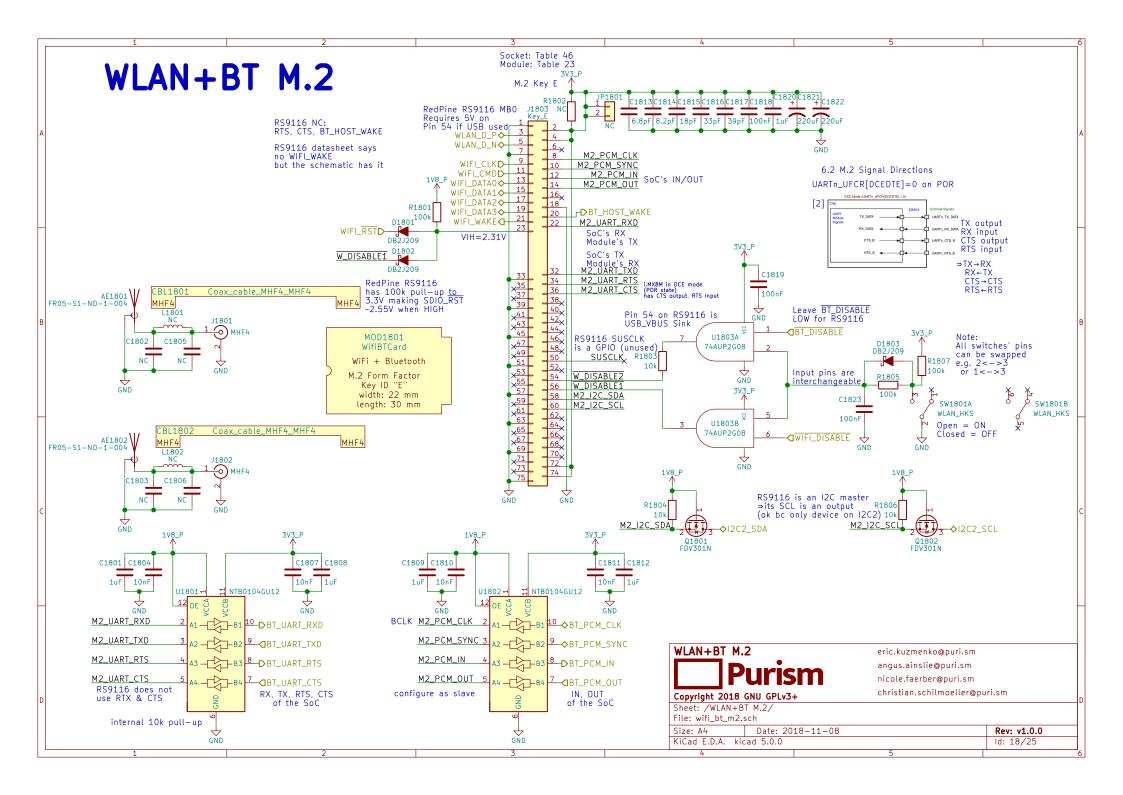

TUSB546A-DCI can be used for HDMI over USB-C

HDMI

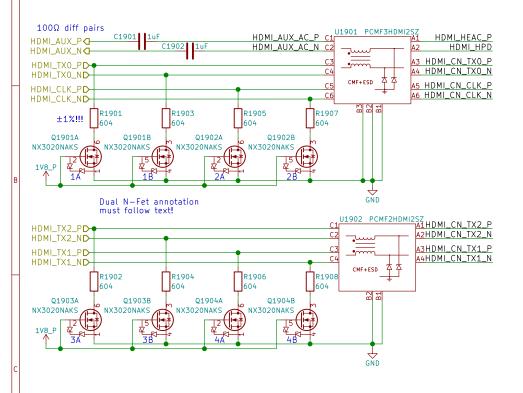


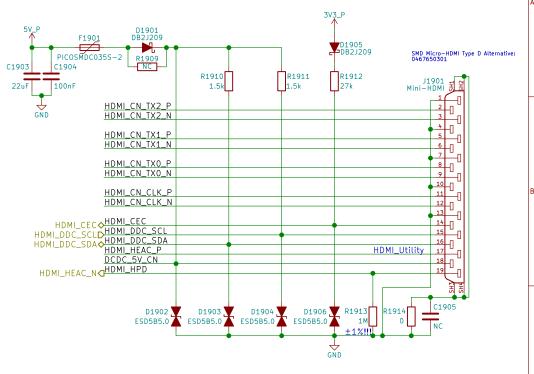




Sensors

Proximity & Ambient Light

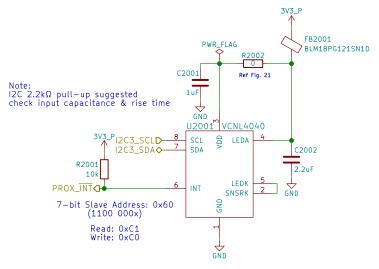


Reference: https://www.vishay.com/docs/84307/designingvcnl4040.pdf http://www.vishay.com/docs/84931/vcnl4040sensorboardfiles.pdf


9-Axis IMU

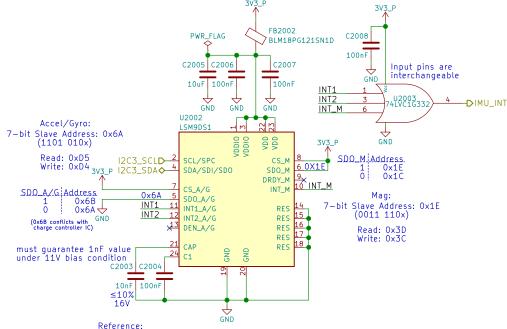


http://www.st.com/en/evaluation-tools/steval-mki159v1.html

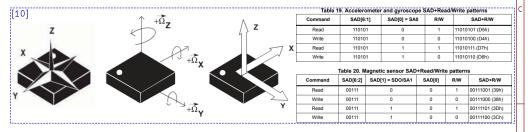



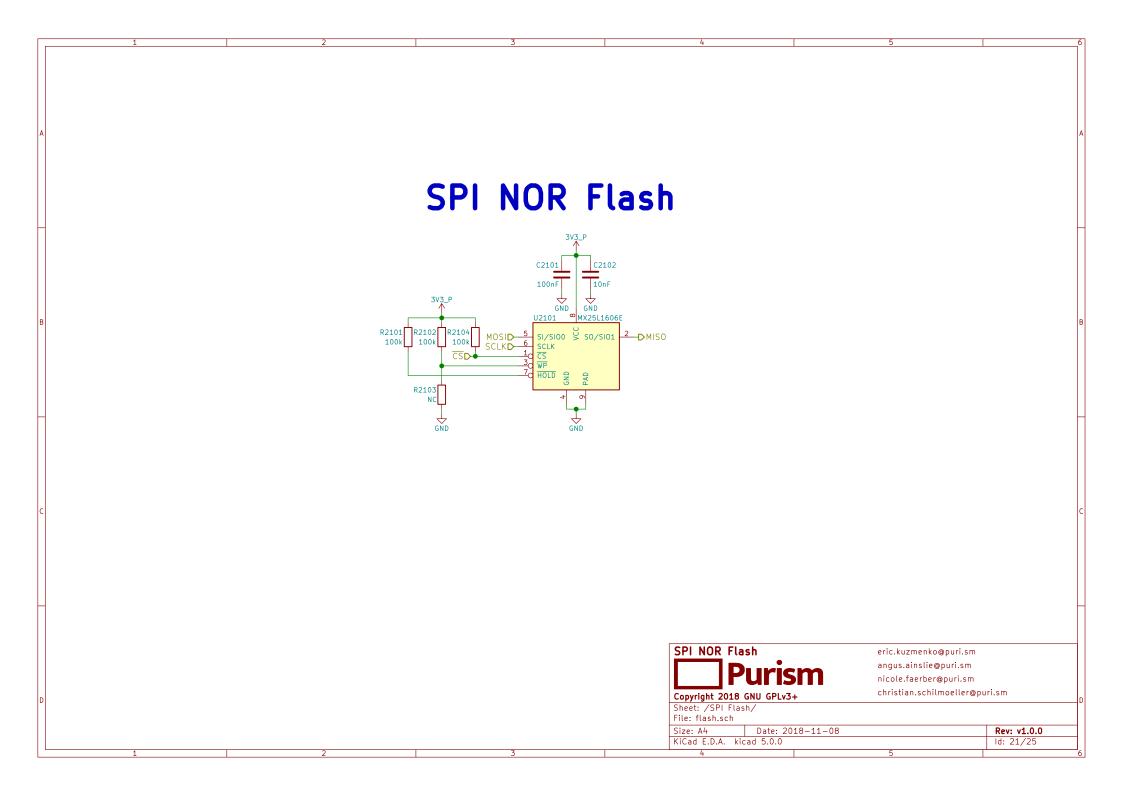


Smart Card

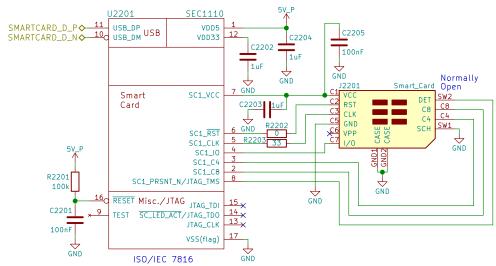


Reference: http://www.microchip.com/DevelopmentTools/ProductDetails.aspx?PartN0=EVB-SEC1110



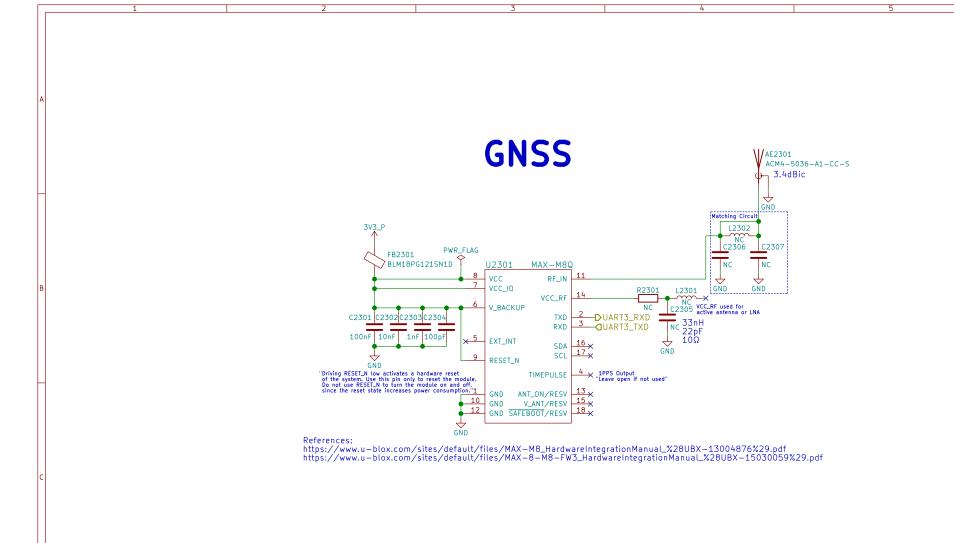



Haptic Motor

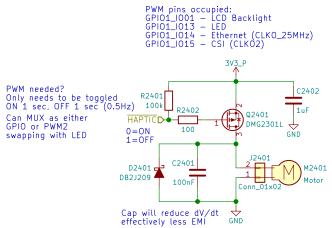

When the motor is off both terminals are at GND Motor will have wire leads
with a 2-pin Molex or Boom Precision
connector installed (by request) Metal housing is floating thick adhesive layer underneath (not connected to either pin)

Haptic/Vibration Motor Copyright 2018 GNU GPLv3+

eric.kuzmenko@puri.sm angus.ainslie@puri.sm nicole.faerber@puri.sm christian.schilmoeller@puri.sm

Sheet: /Haptic Motor/ File: haptic.sch

Size: A4

Date: 2018-11-08 Rev: v1.0.0 KiCad E.D.A. kicad 5.0.0 ld: 24/25

