
OpcDaLink

OPC DA TO OPC UA BRIDGE

OpcDaLink sits in front of a legacy OPC DA server, connects to it as a client over DCOM, and republishes the whole address space as a modern OPC UA server, with history from OPC HDA and alarms from OPC AE alongside it. The original server is left exactly as it is.

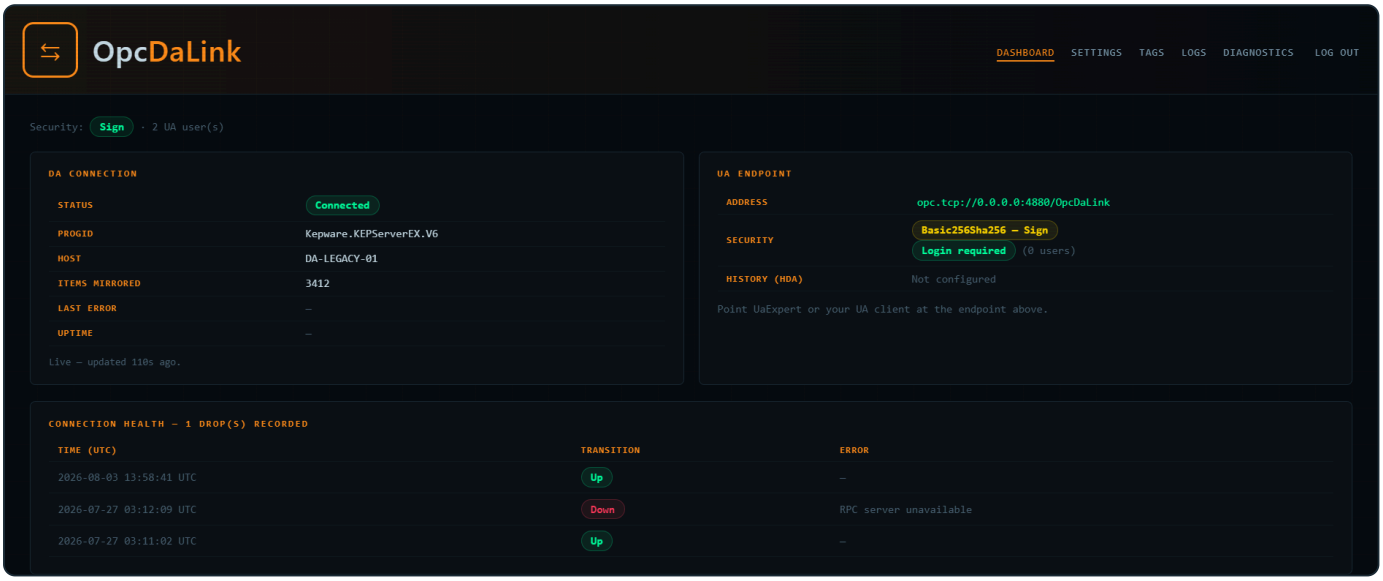

KEY FEATURES

- **Full address-space mirror.** Branches become folders, leaves become variables, item IDs carry through as string NodeIds.
- **Faithful type mapping.** VARIANT types to UA types, DA quality to UA status codes, item timestamps as source timestamps.
- **Read and write.** Writes pass back to the DA server, only for the UA users you allow.
- **History over OPC UA.** Standard HistoryRead translated on demand into OPC HDA reads. No history is stored locally.
- **Alarms.** OPC AE or OPC UA alarms and conditions, republished as UA nodes. Optional agent for OLE DB alarm archives.
- **Big-server mode.** Feed it a tag list file and skip browsing on servers with tens of thousands of items.

AT A GLANCE

Role	OPC DA client and OPC UA server
Works with	OPC DA 2.0 servers, 32-bit or 64-bit, plus optional OPC HDA and AE
UA endpoint	opc.tcp, port 4880 by default
OPC UA security	Basic256Sha256, Sign or Sign and Encrypt
Administration	Web interface on the local machine only
Platform	Windows Server 2016+ or Windows 10+, 64-bit
Footprint	Self-contained MSI. No Automation Wrapper, no database, no internet

Leaves the DA server alone

OpcDaLink needs only the access any DA client has. Installed on the DA server machine, it keeps DCOM off the network entirely.

Licensing

One perpetual licence per site, covering every OpcDaLink machine there. Signed licence file, checked offline. No per-tag pricing.

Free 90-day trial

Full feature set, no tag limit. Installer, manual and trial licence sent by email. Most trials are running the same day.