




# Worm Mill (WM02)

GBC Module Instructions by  
Matt Norman





Version 1.1  
<http://www.greatballpit.com>



**1**

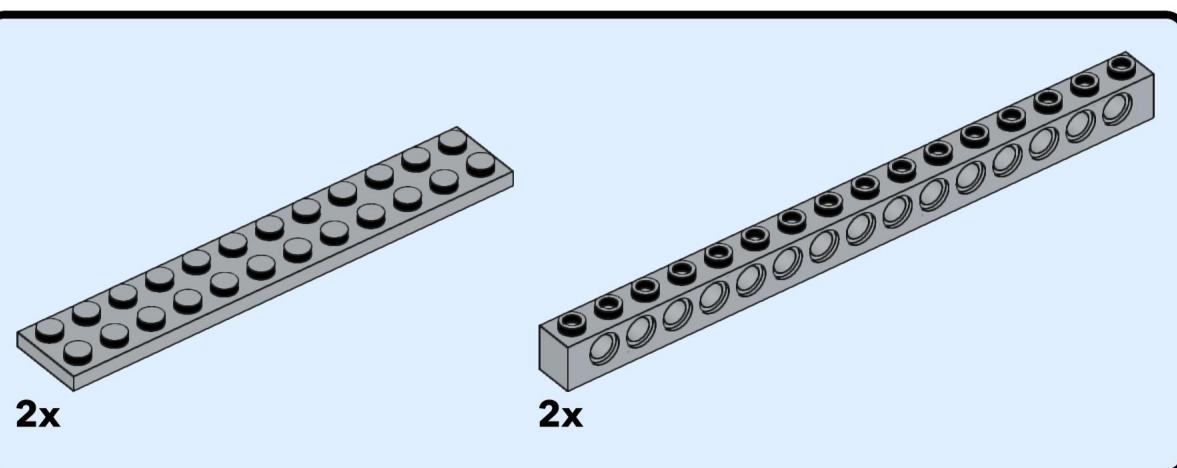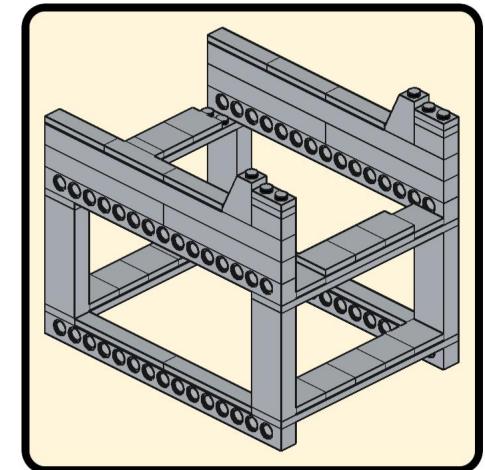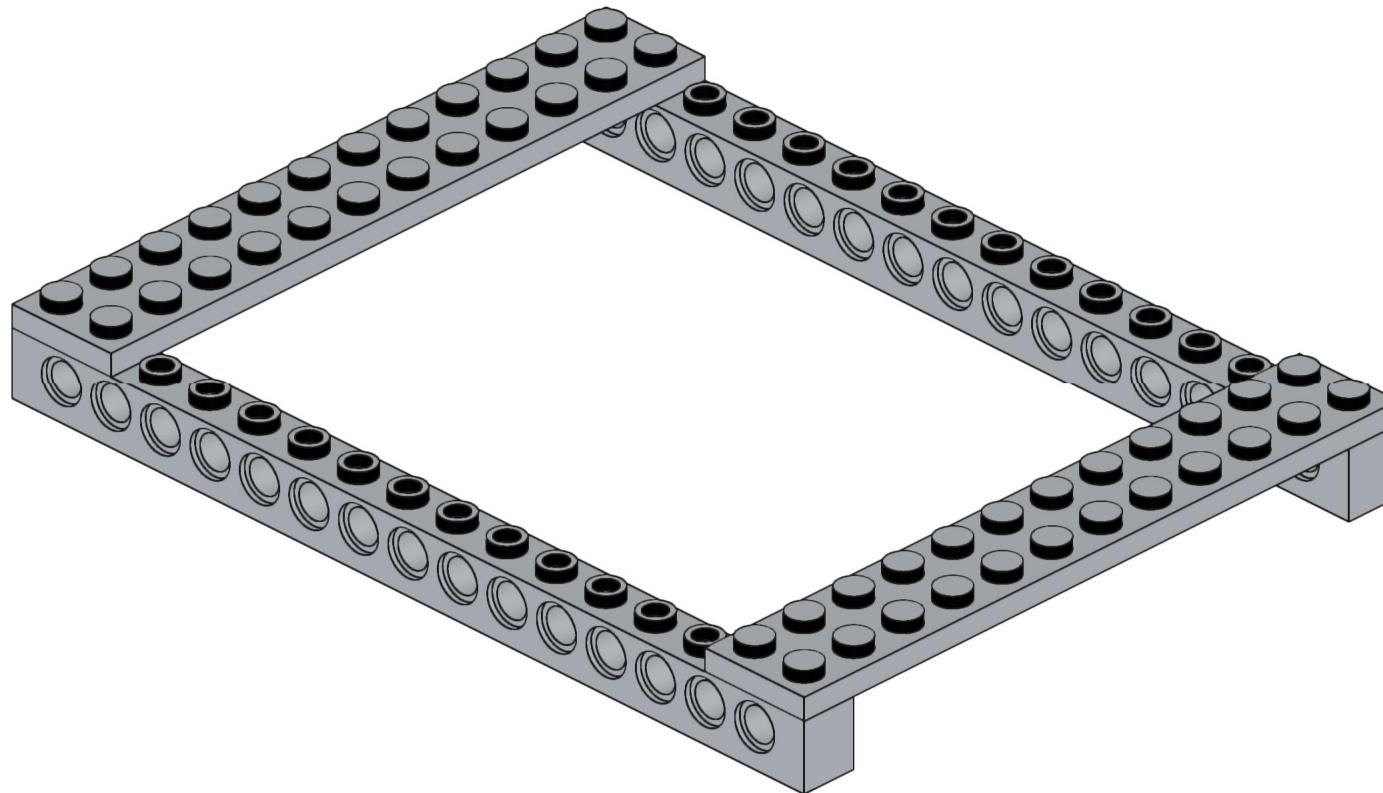



**2**

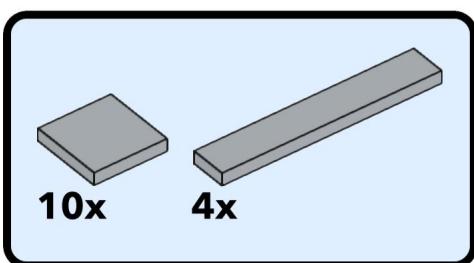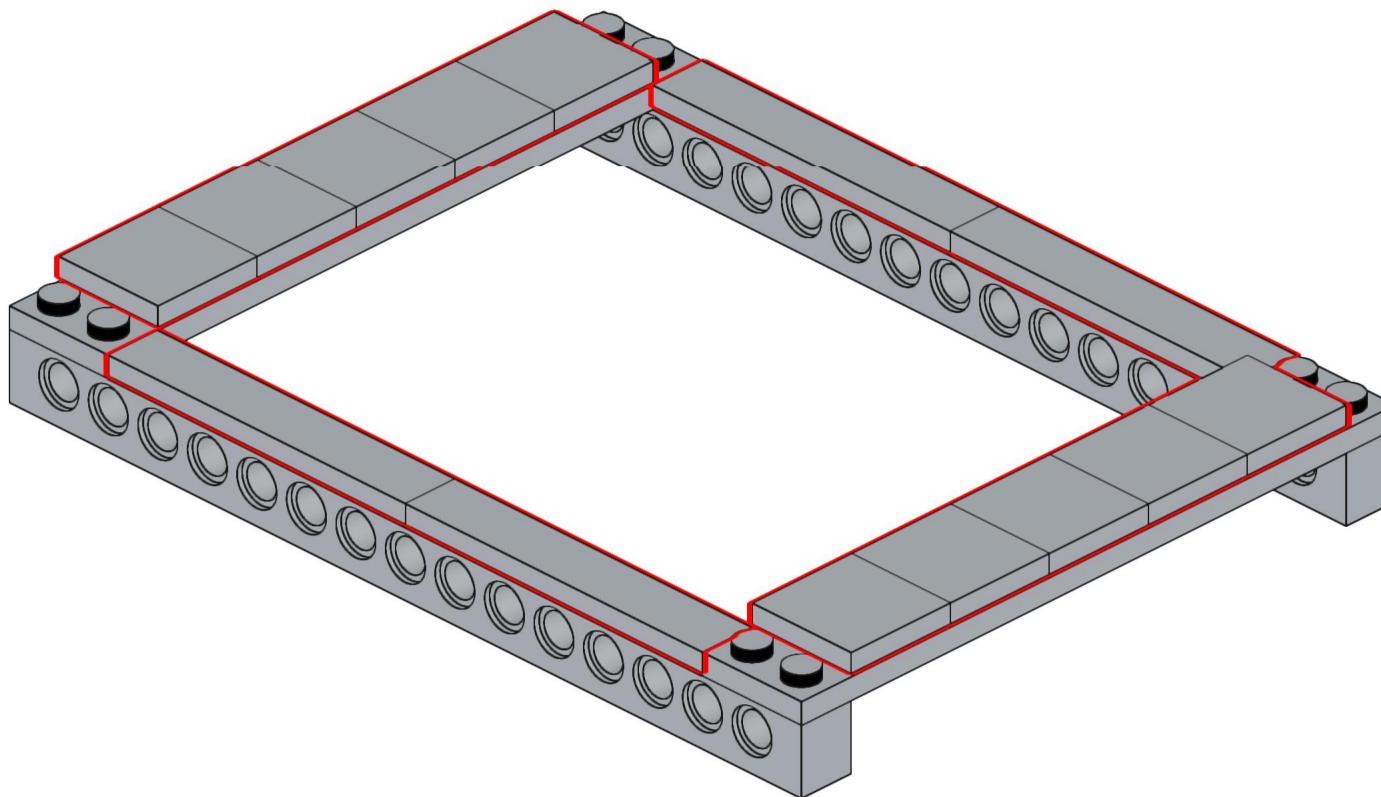



**3**

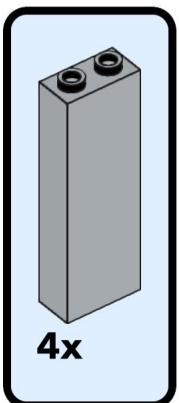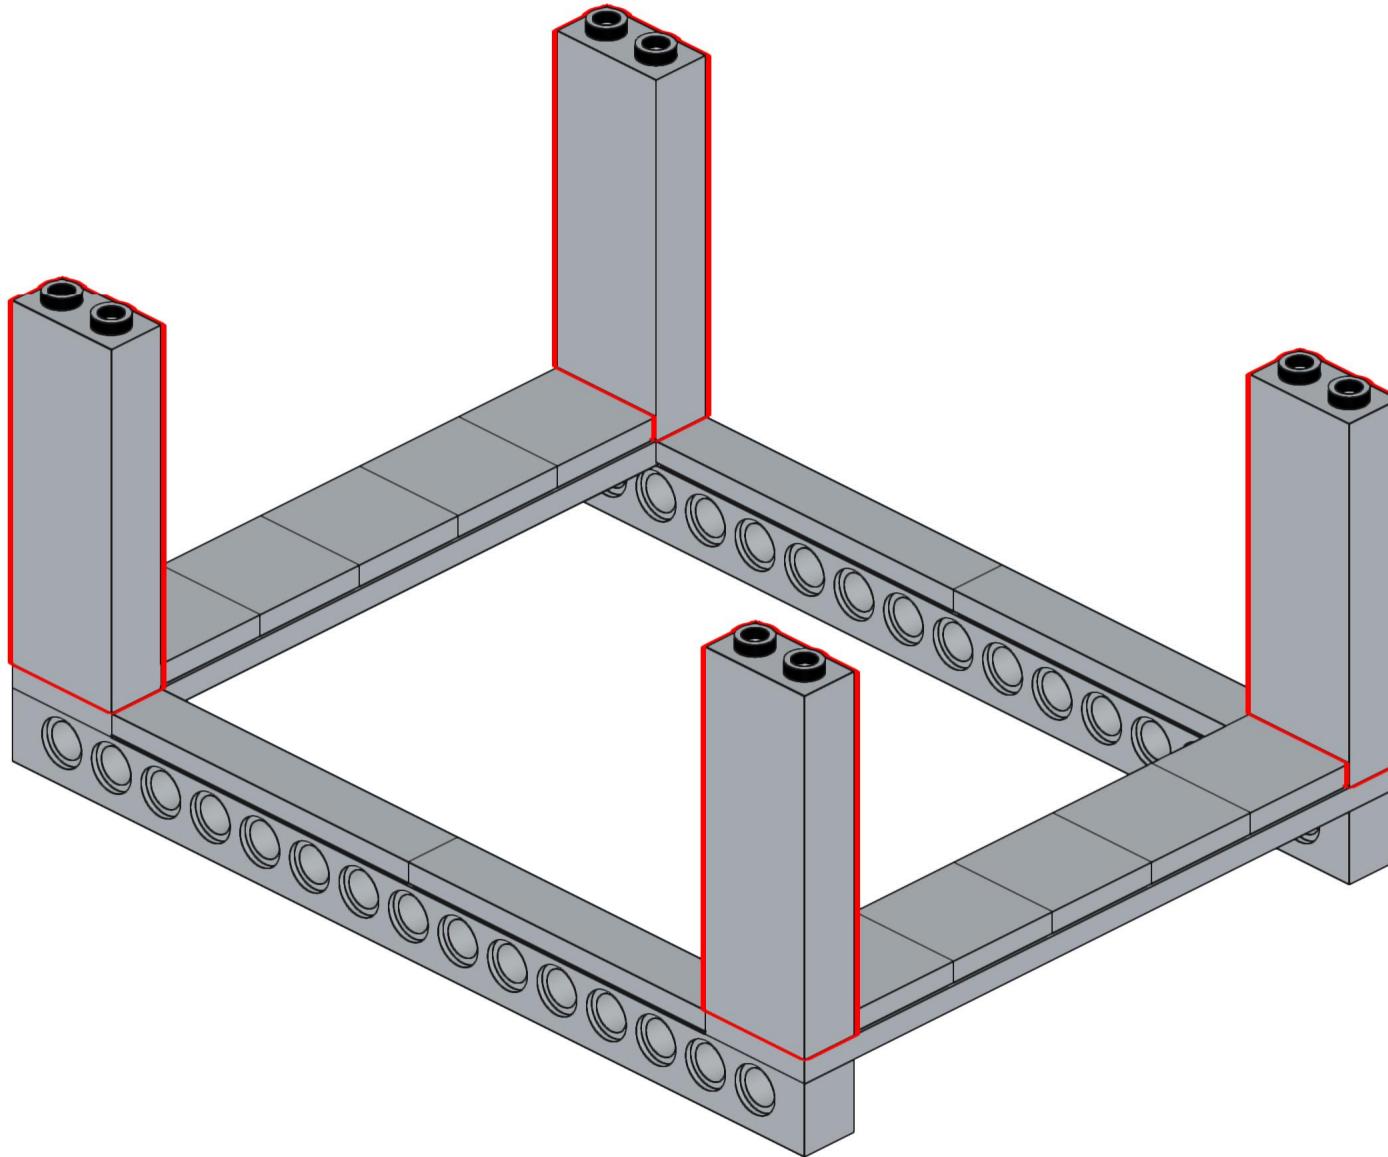



**4**

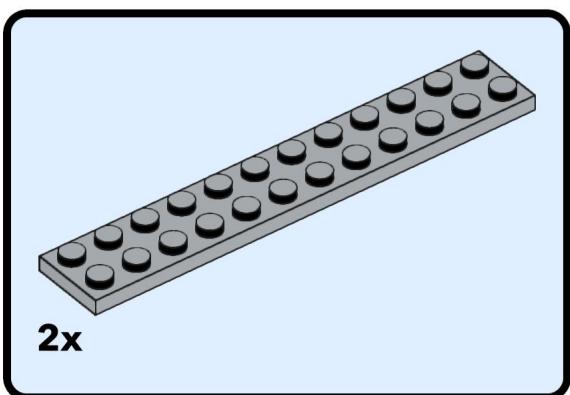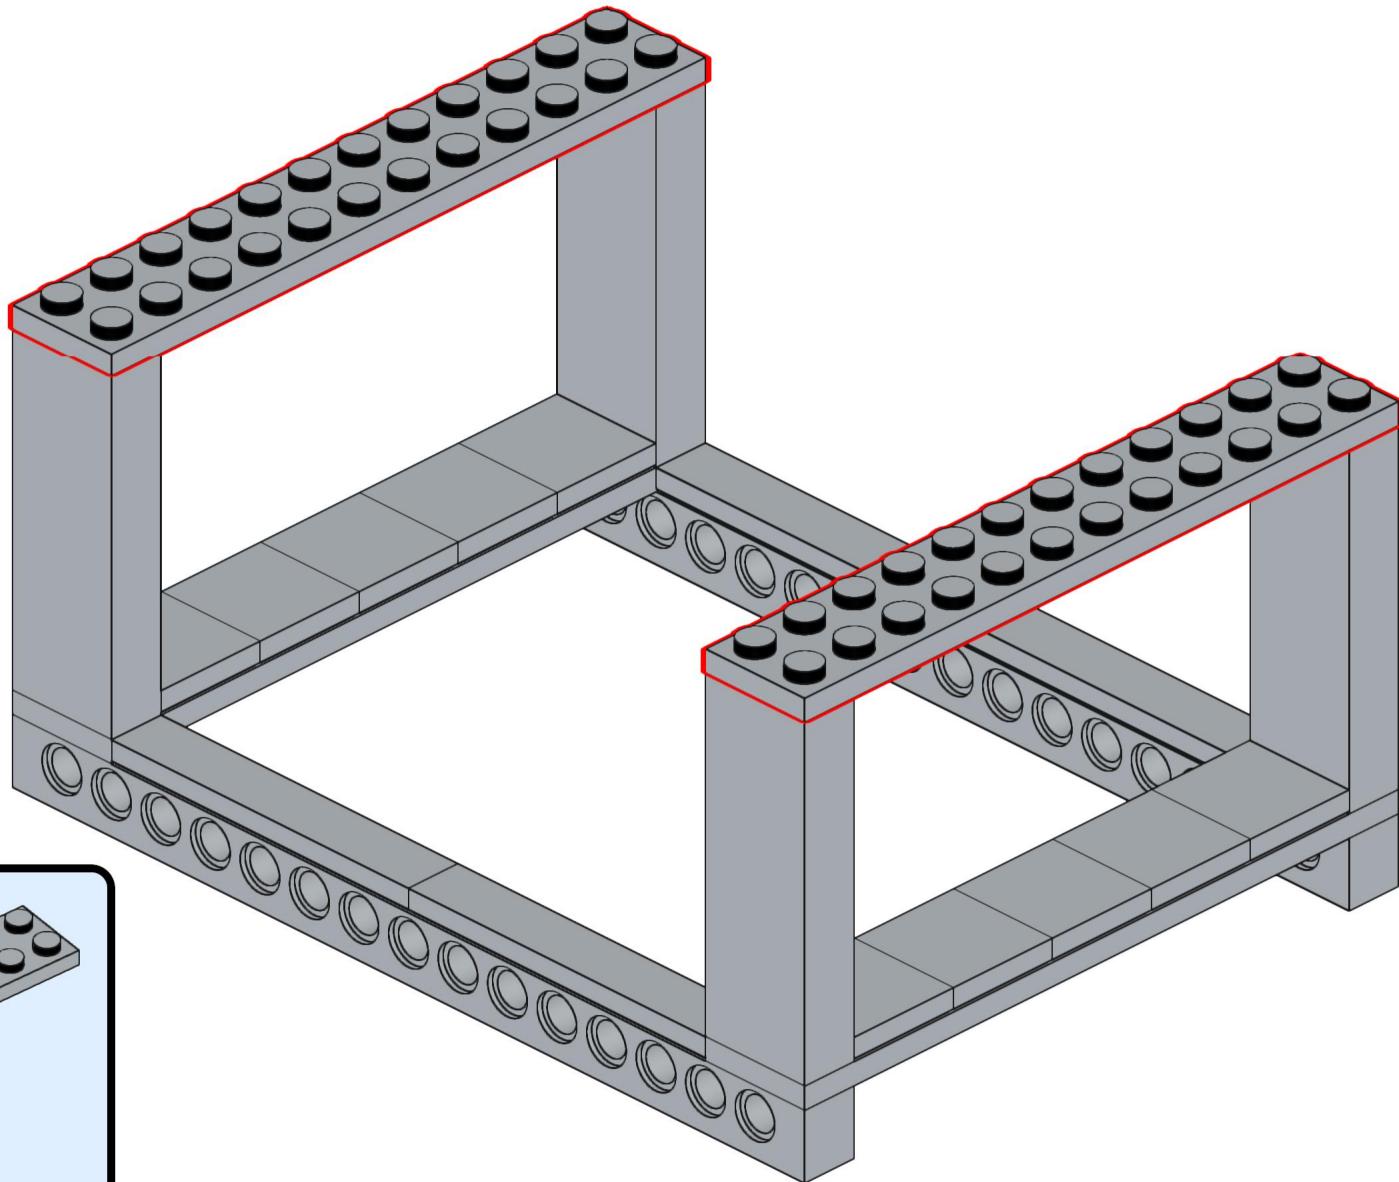

**5**

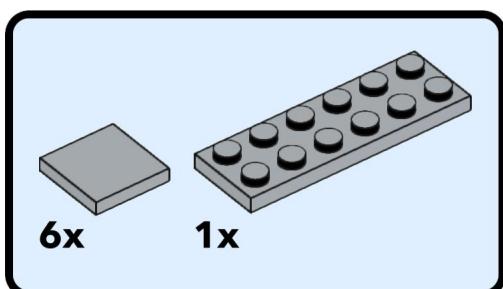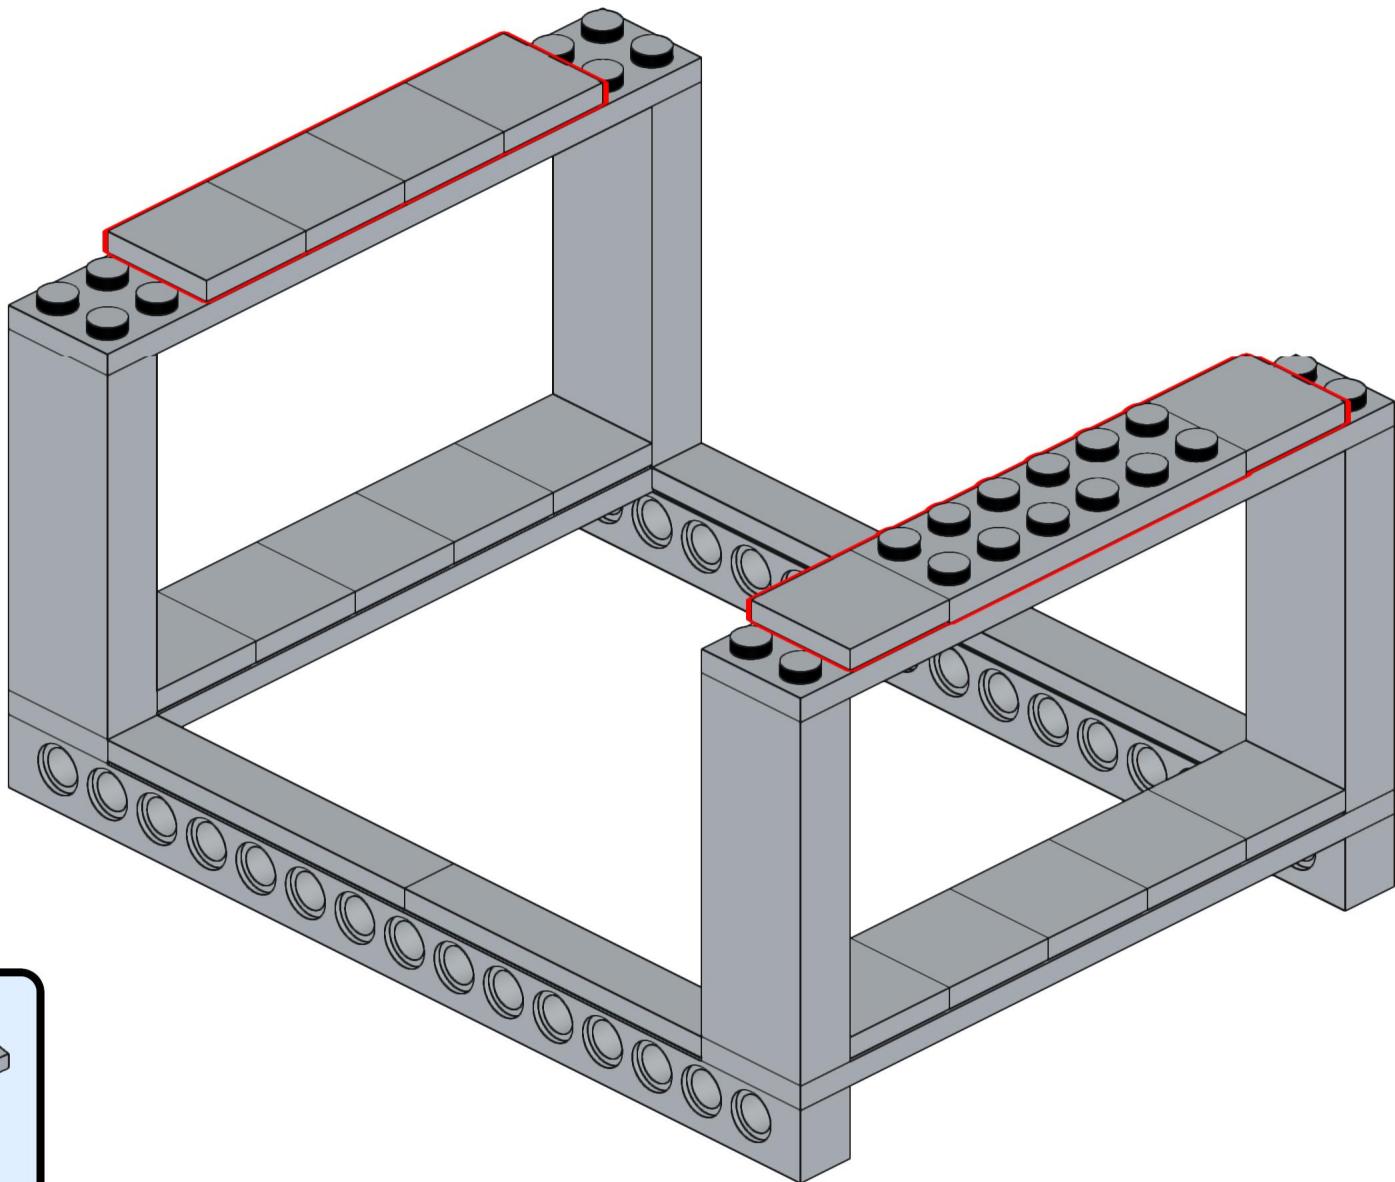


6

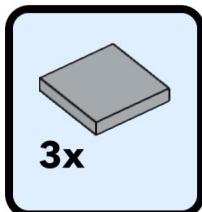
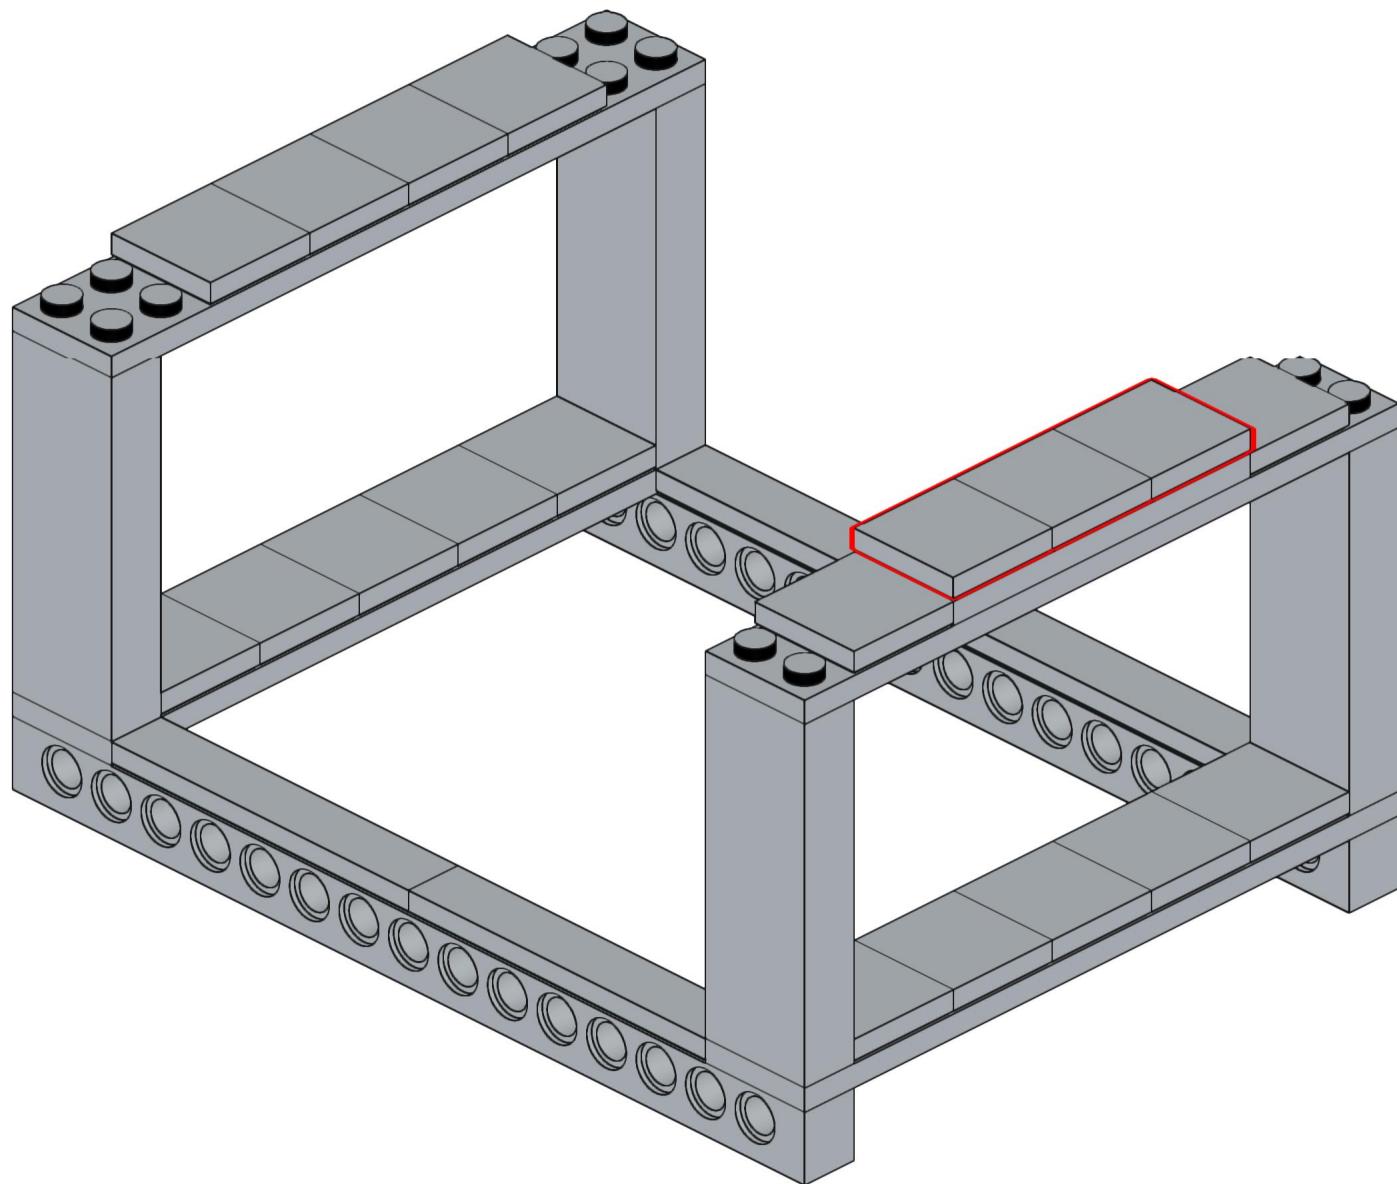


3x


7

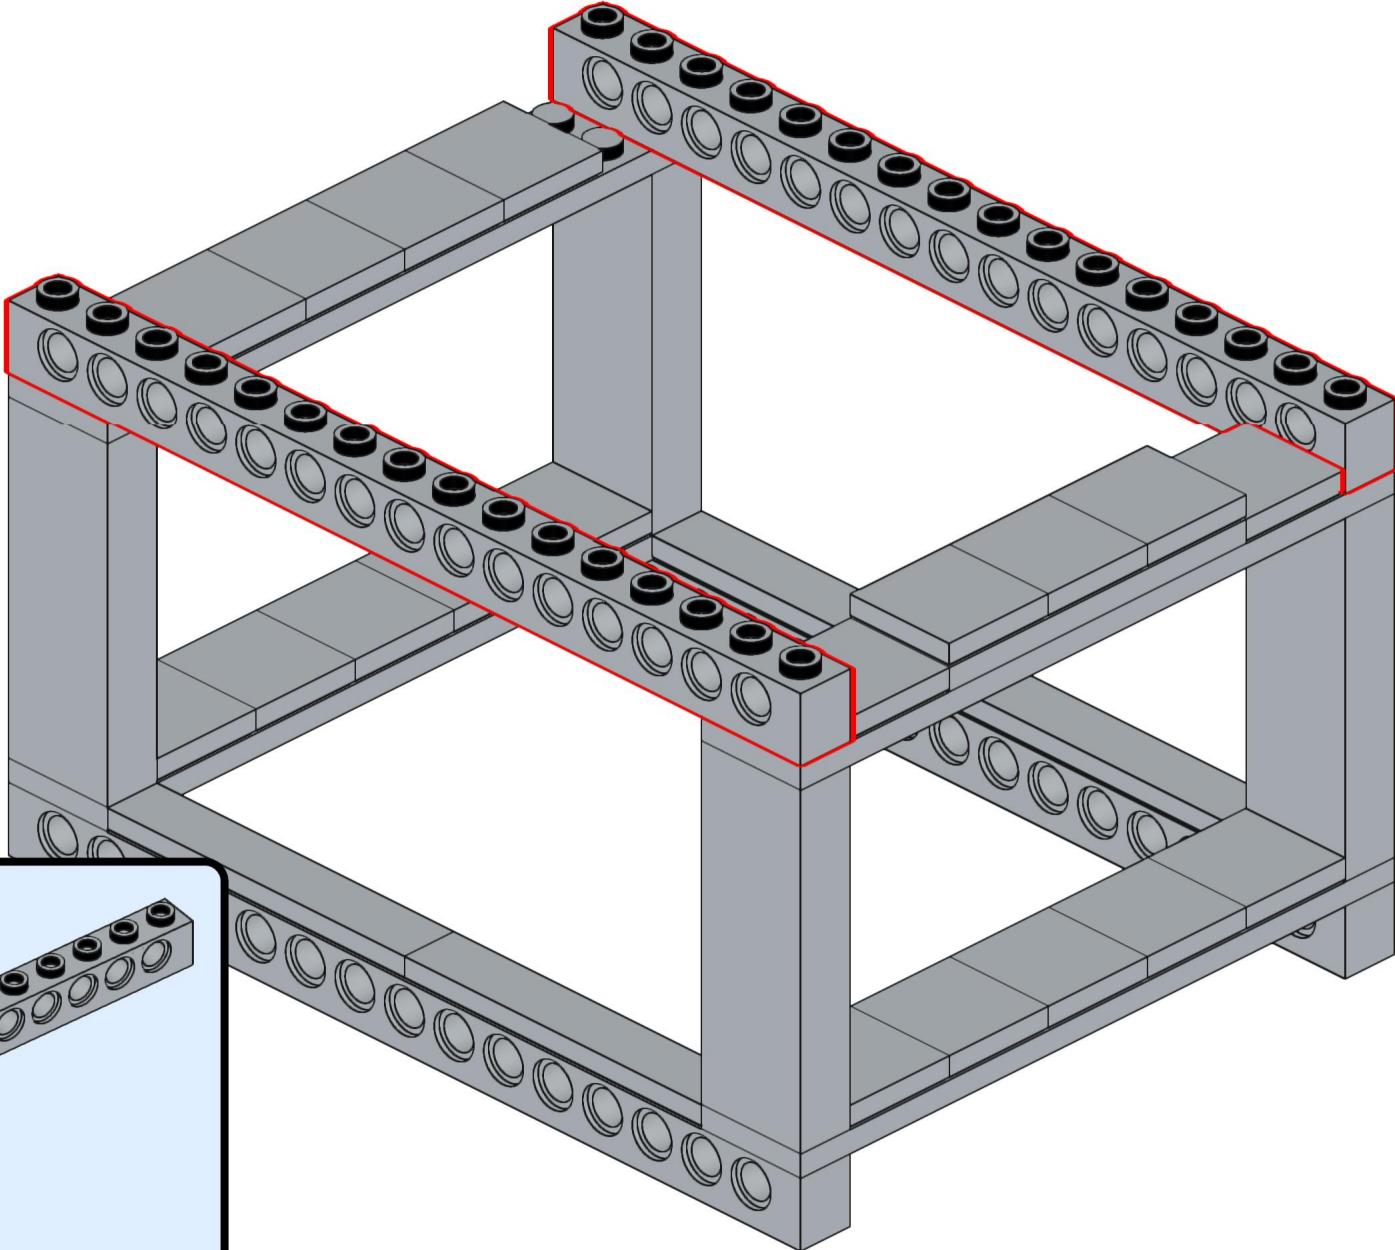



**8**

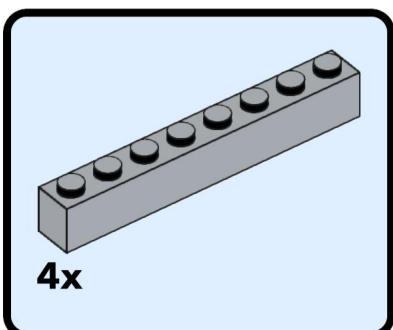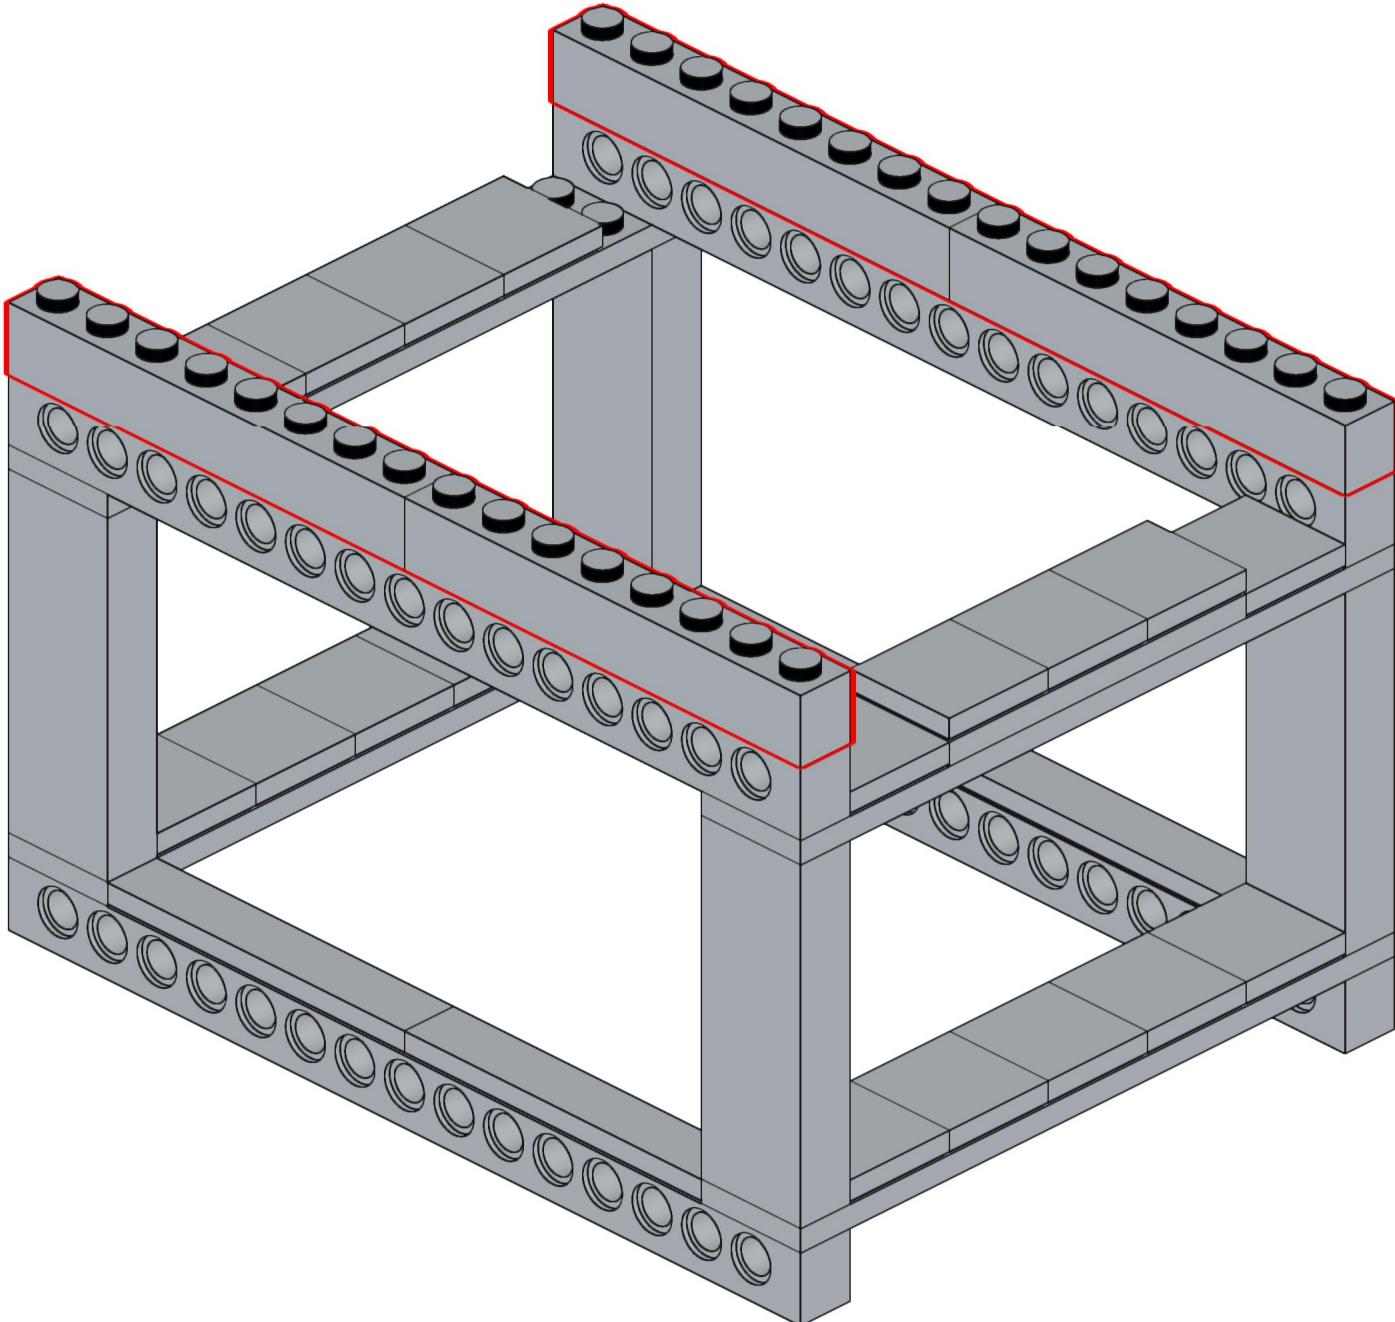



**9**

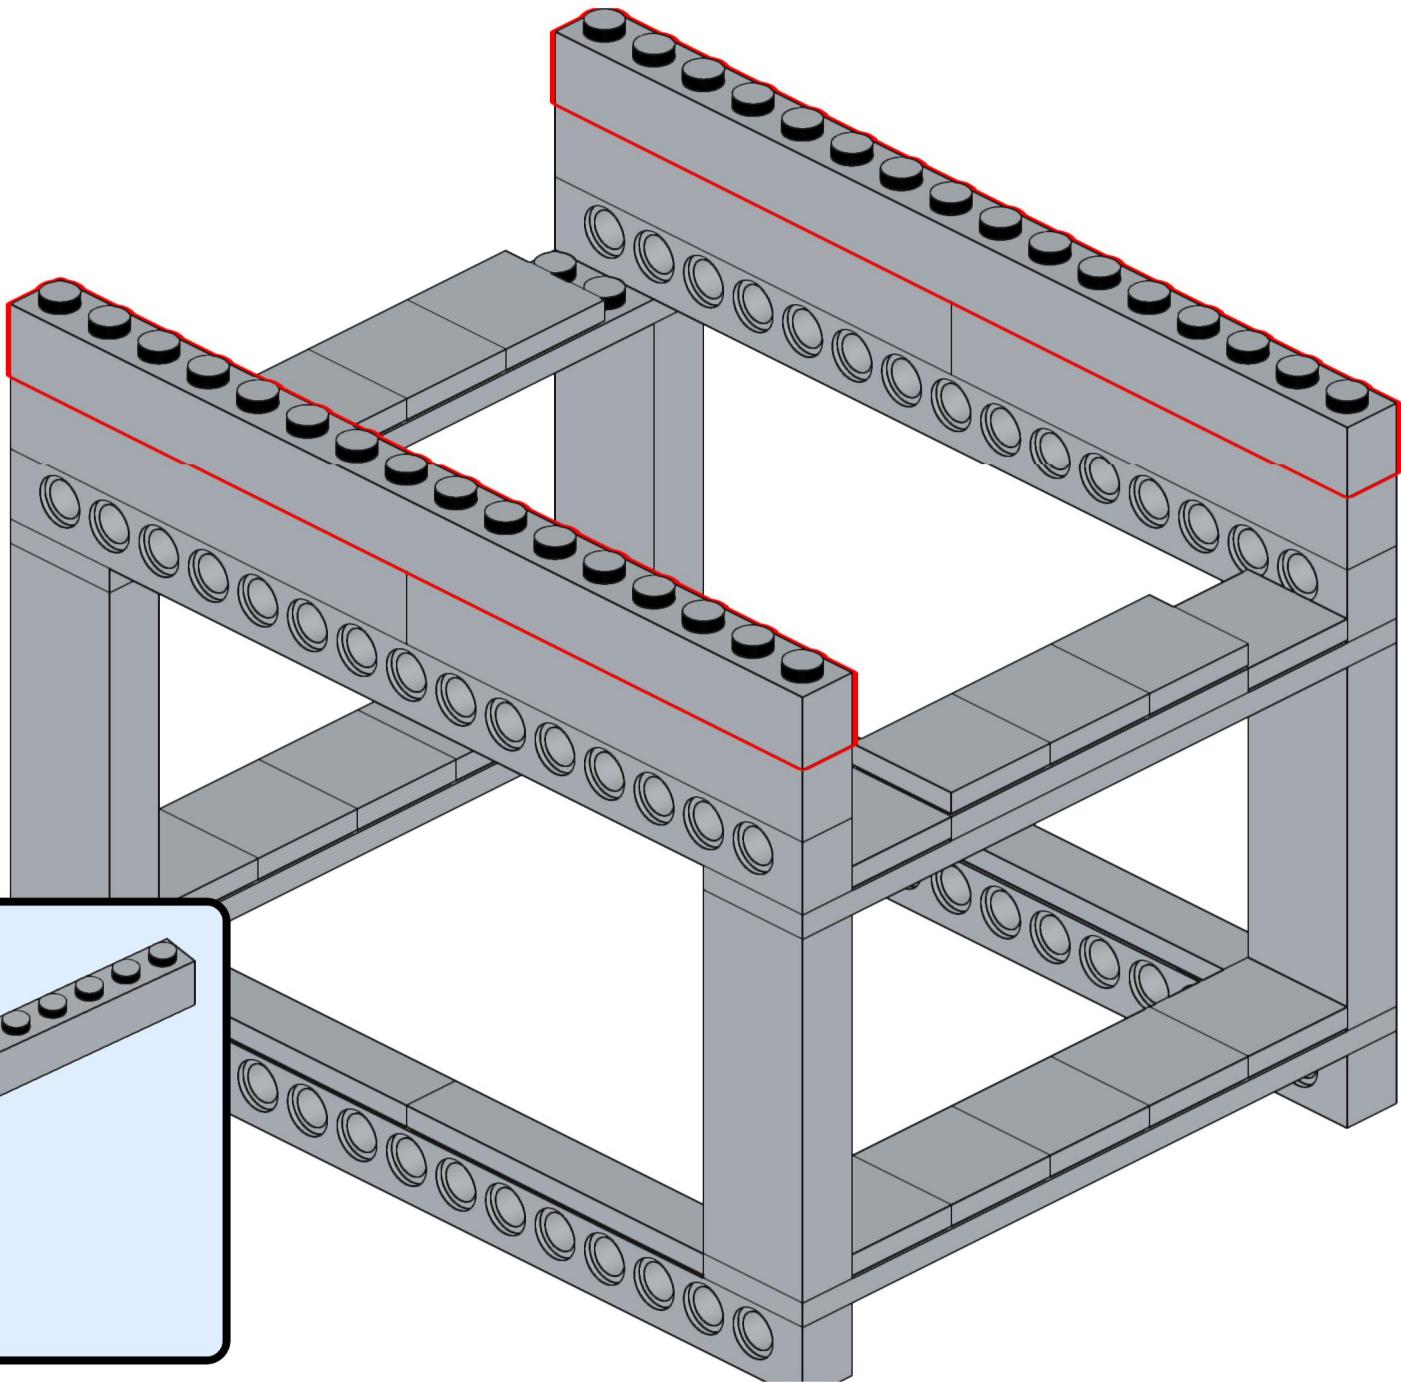



# 10

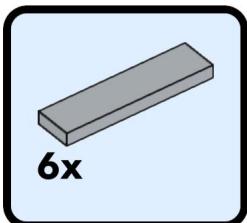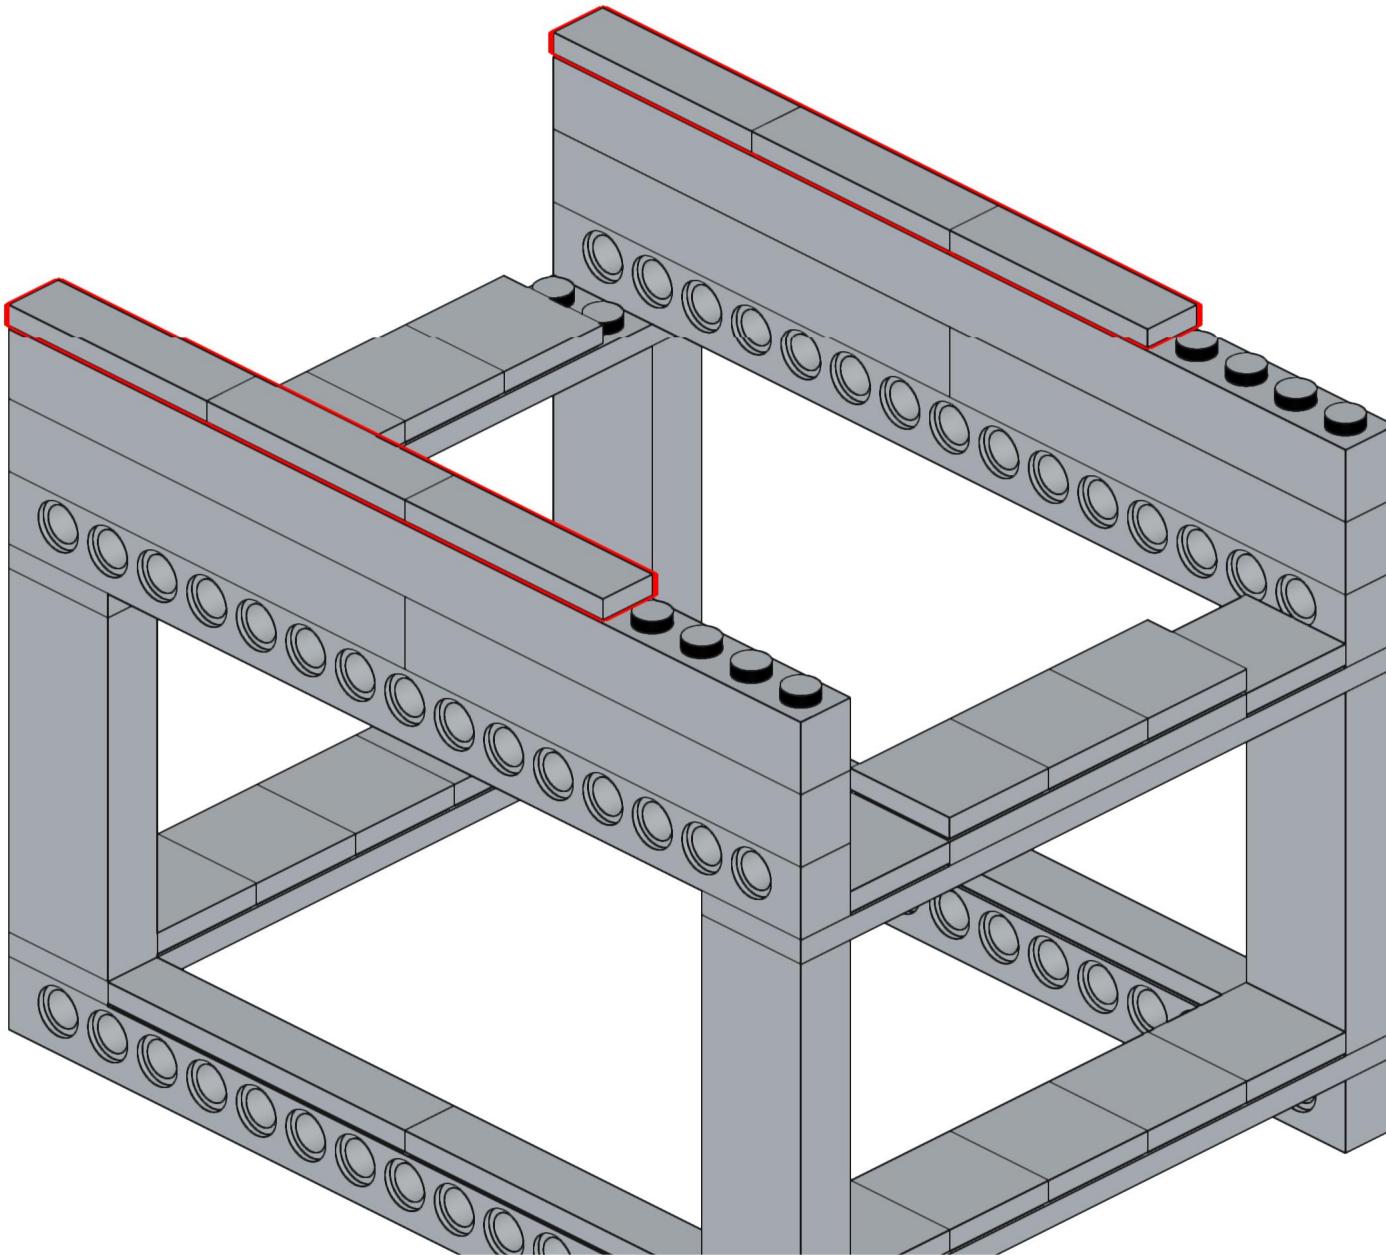


# 11

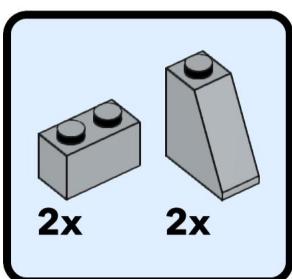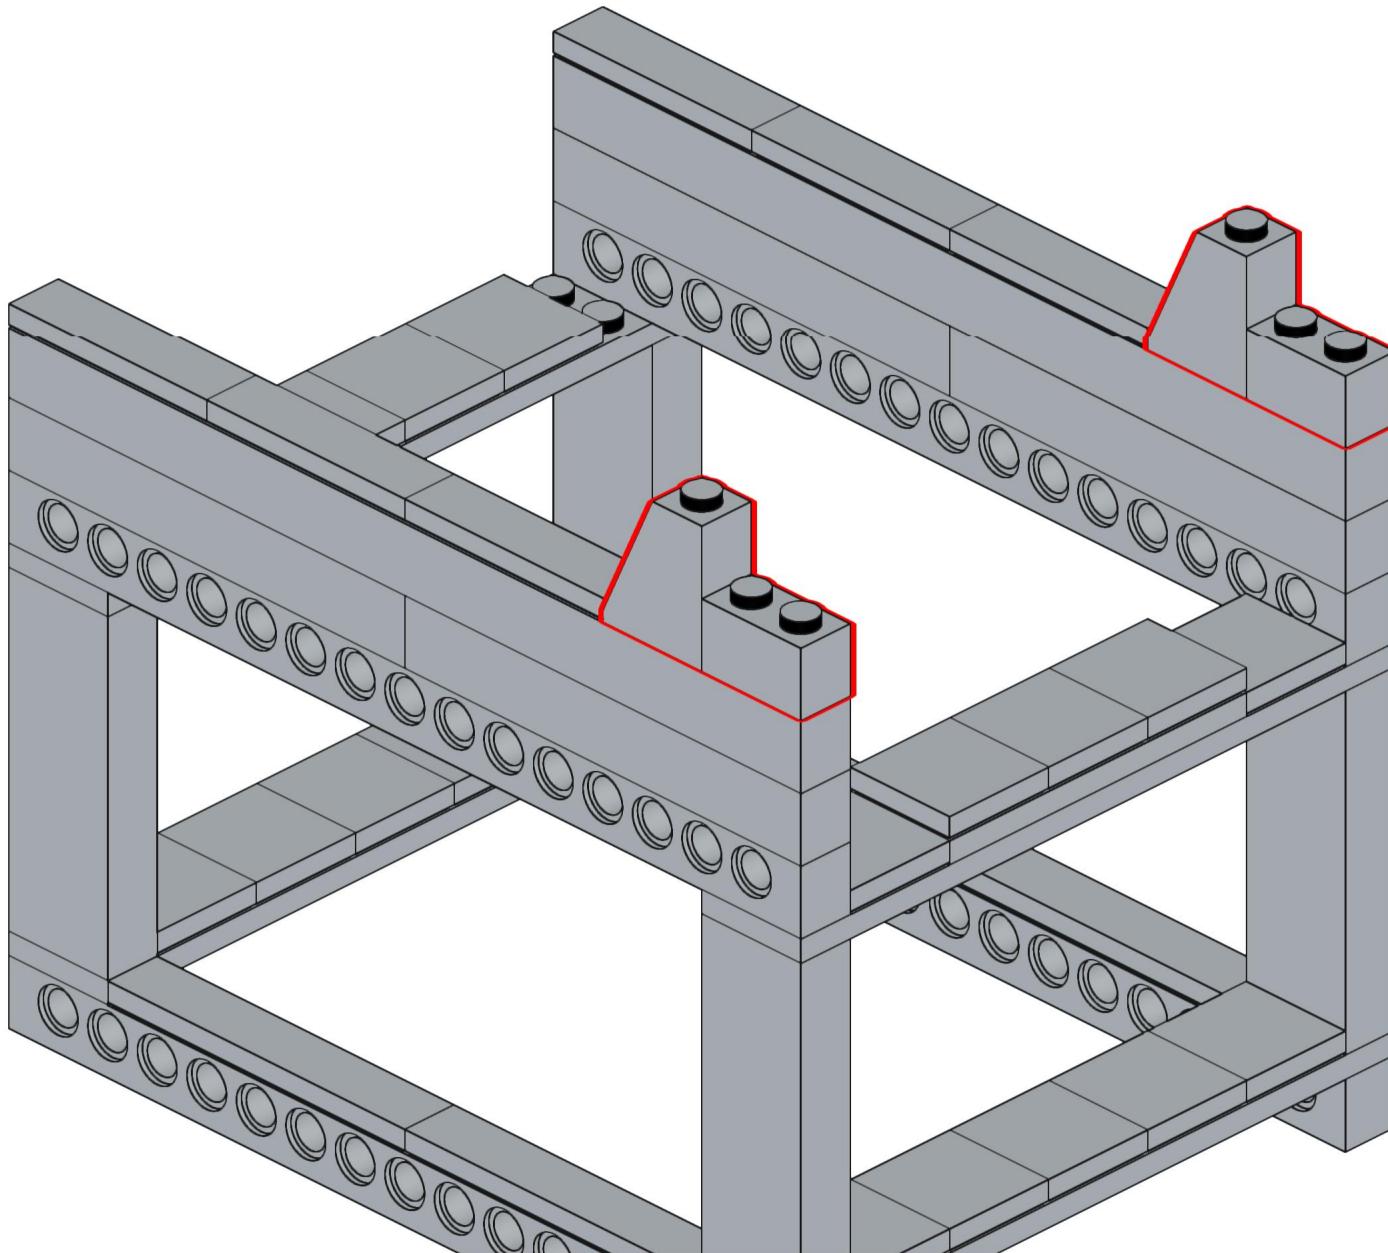

# 12


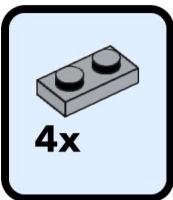
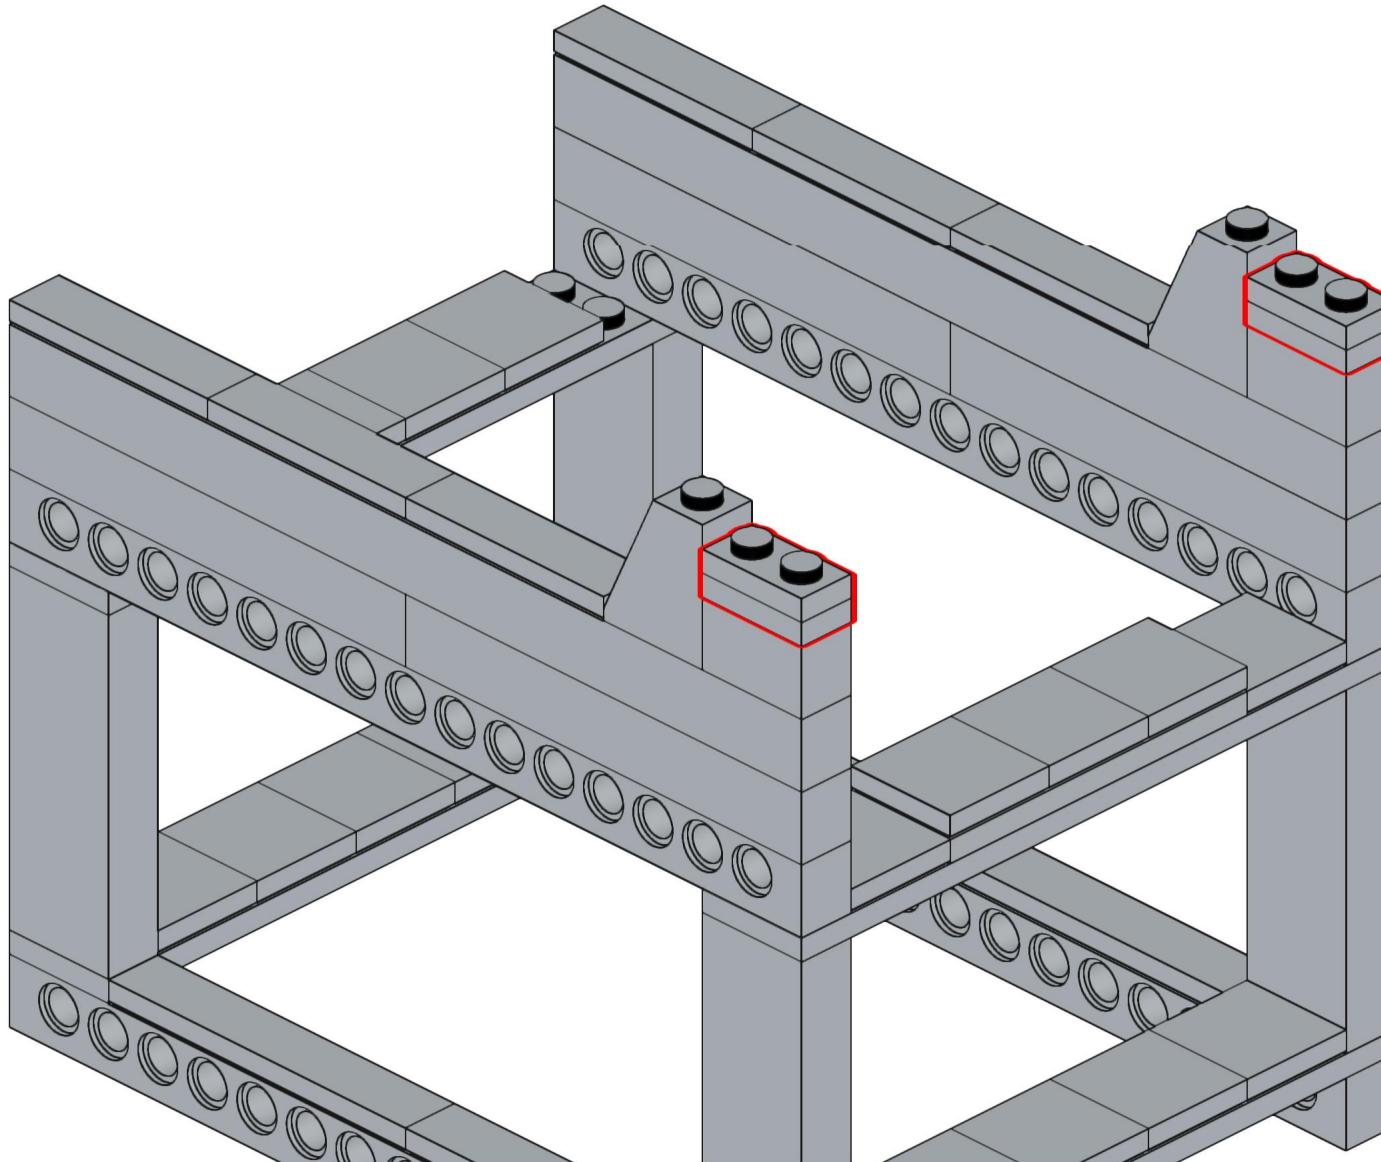


# 13


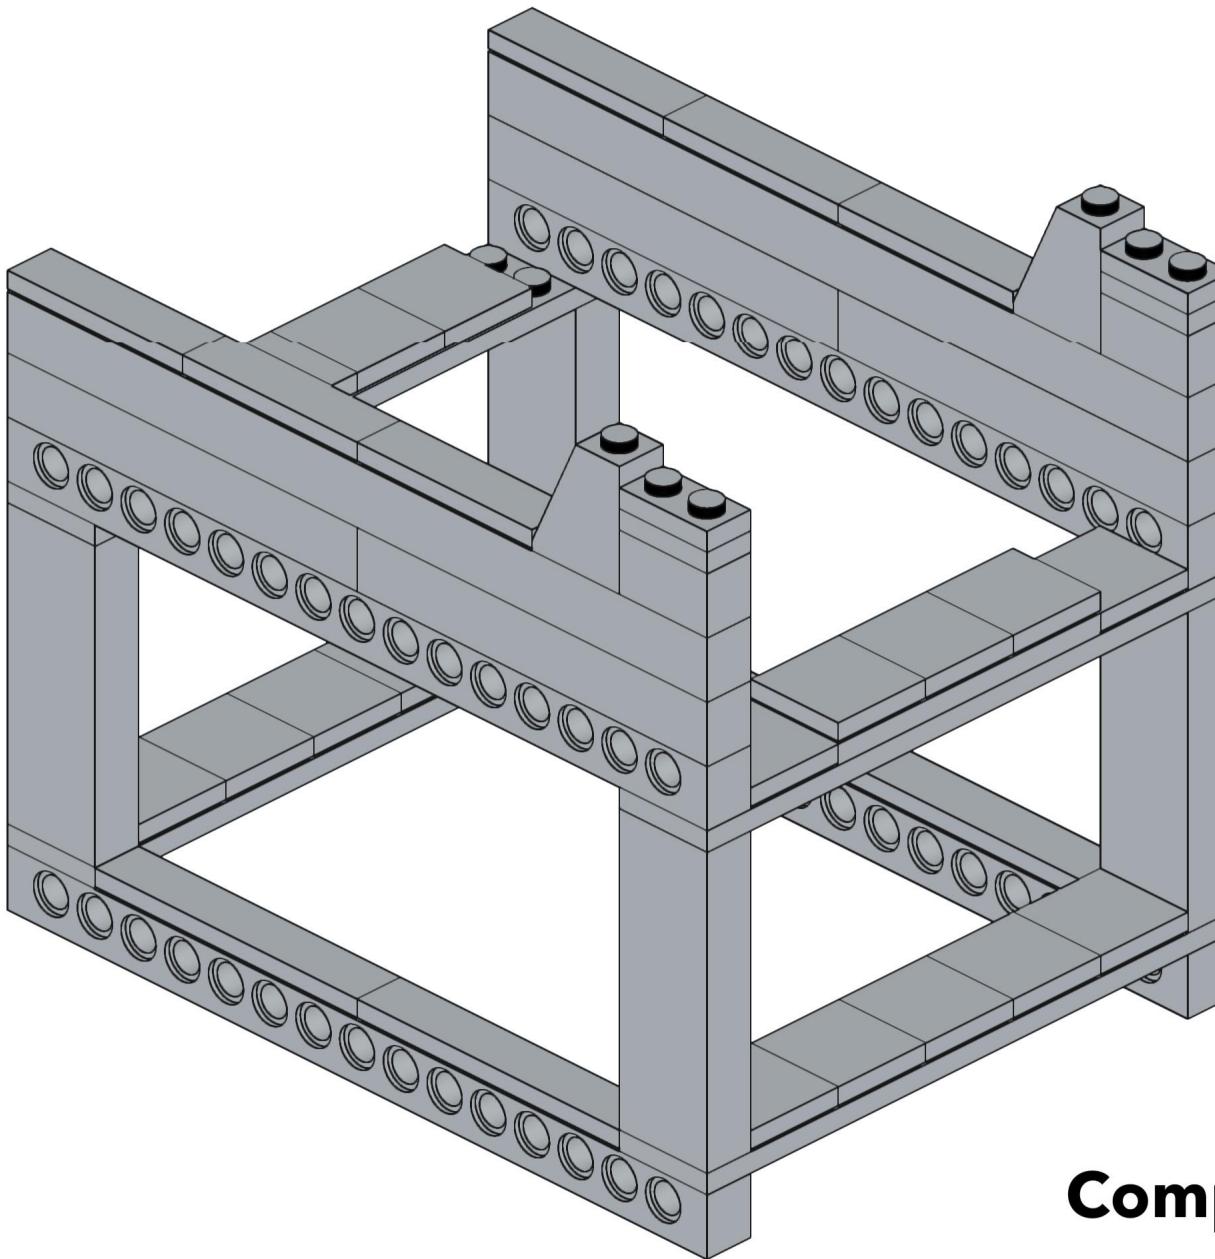


**Completed base.**



**14**

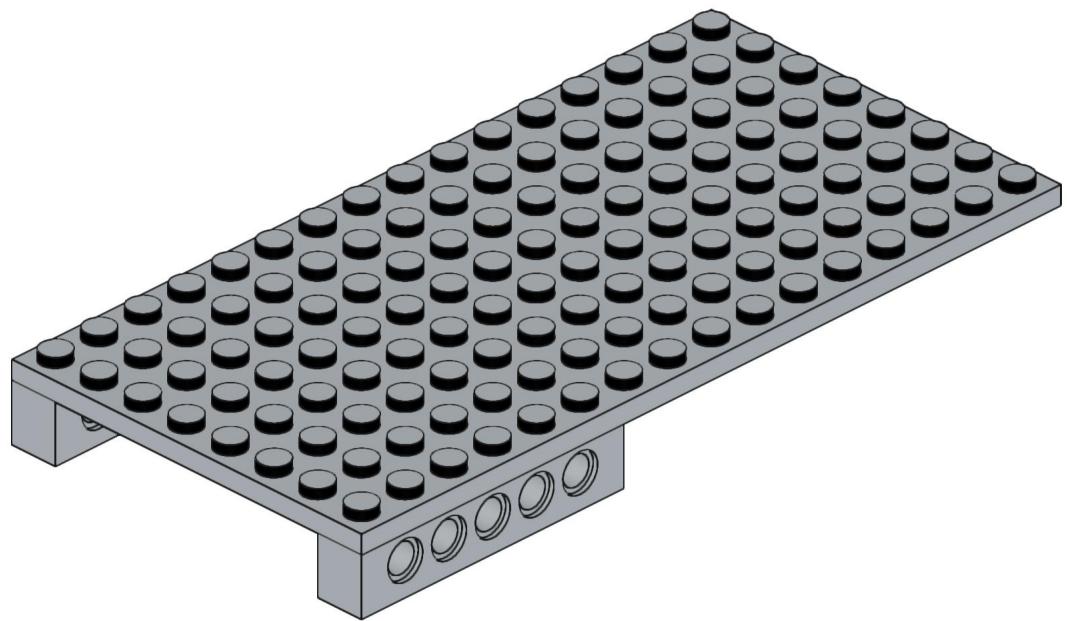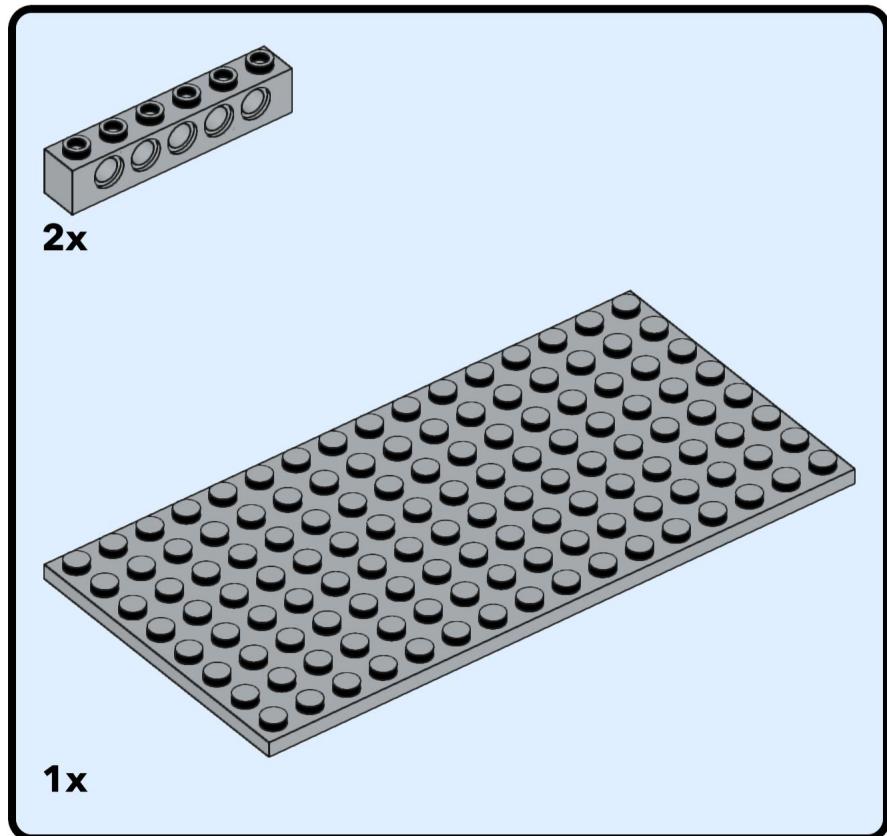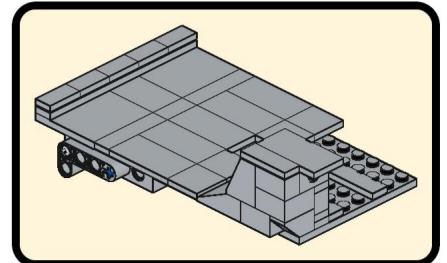


# 15

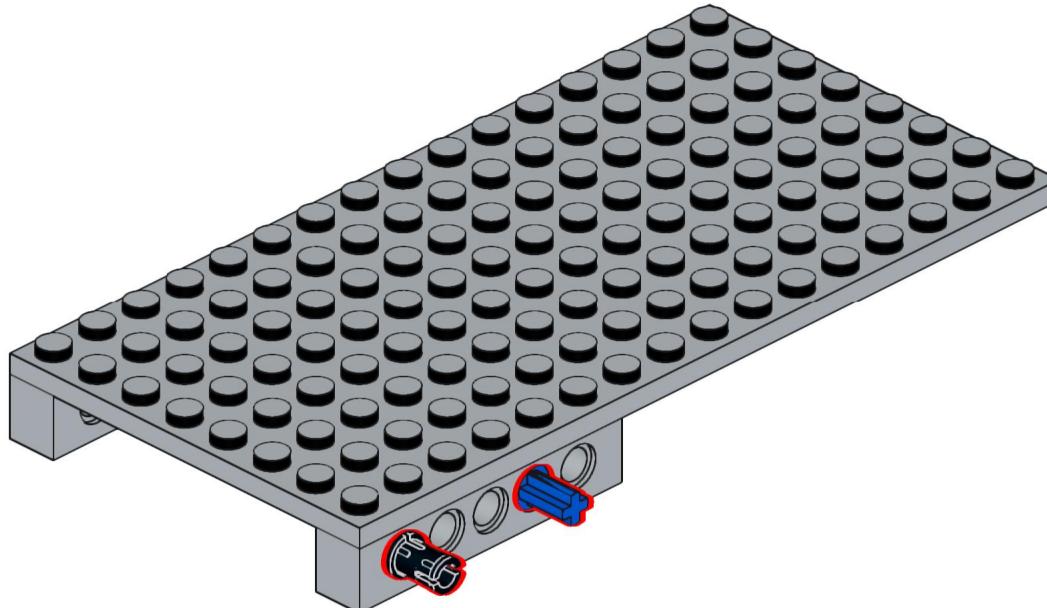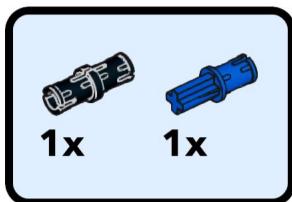



# 16

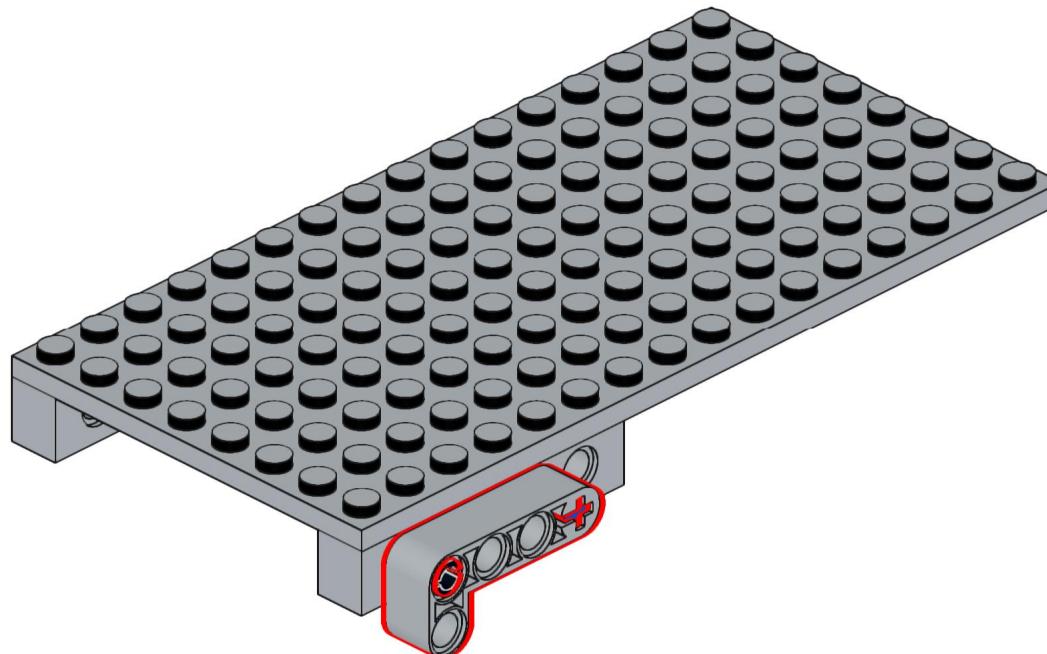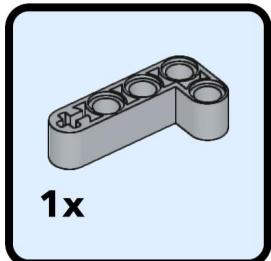


**17**

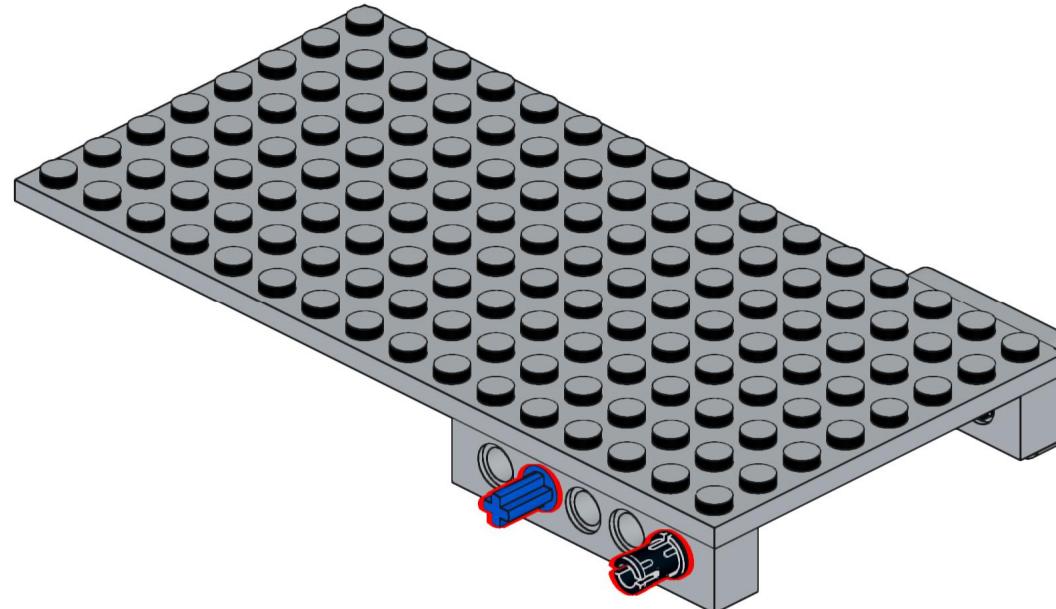



**18**

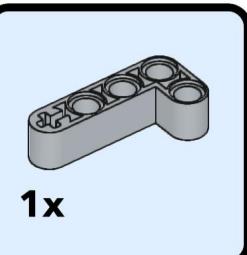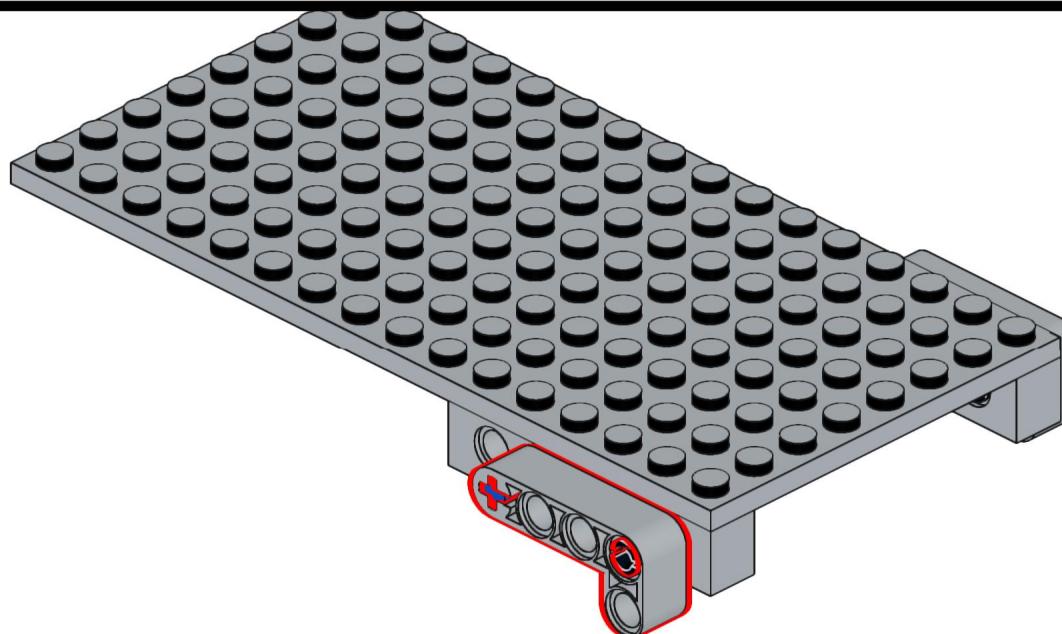



# 19

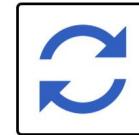



**These tiles overhang off the back of the plate.**

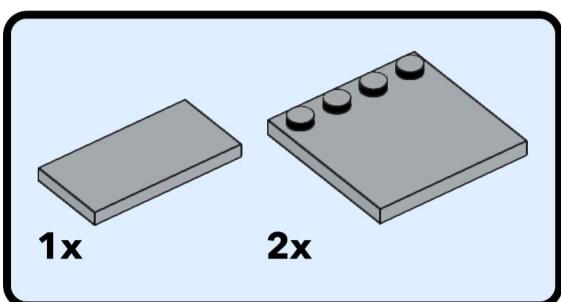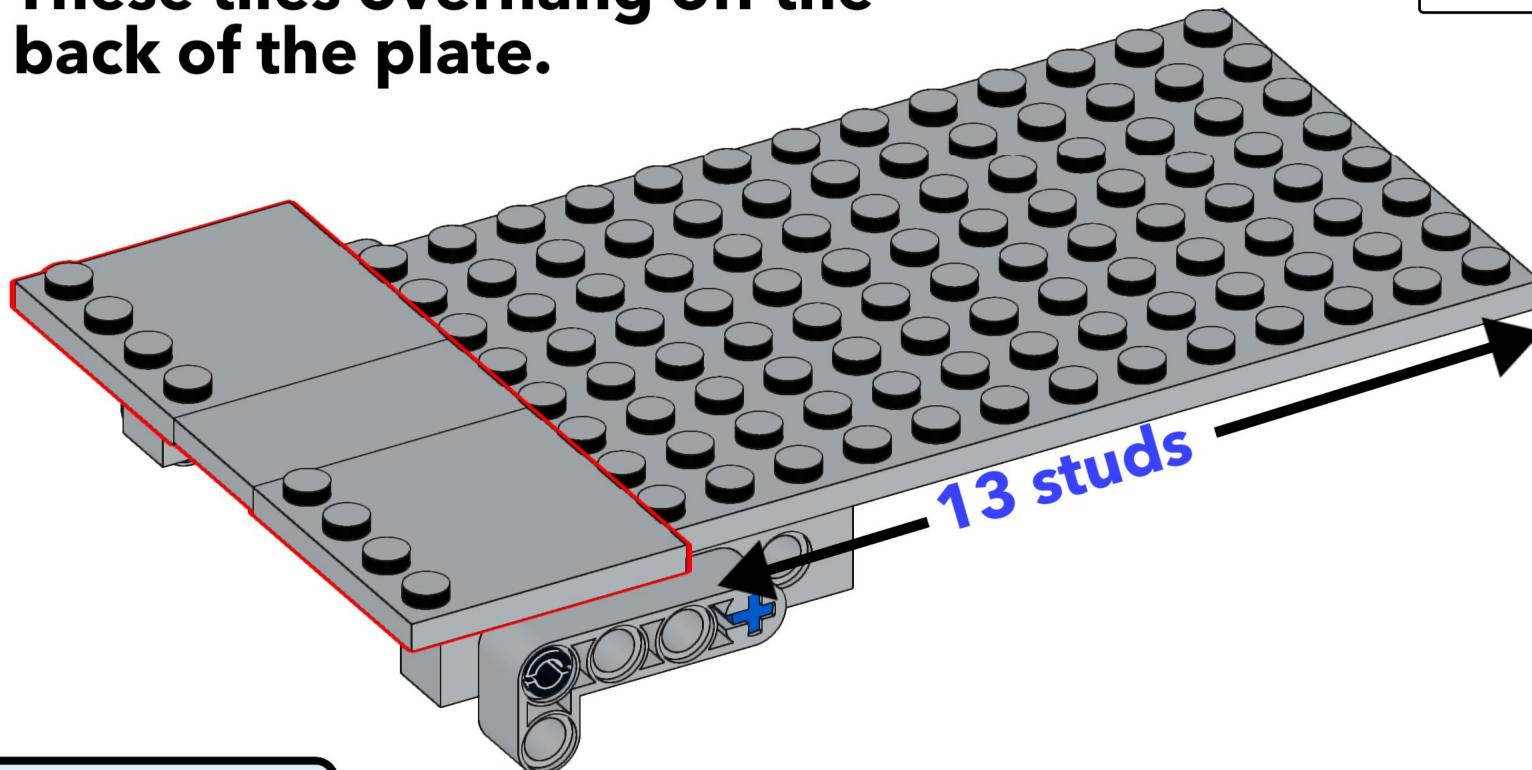



# 20

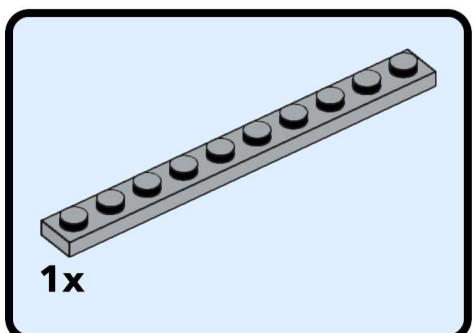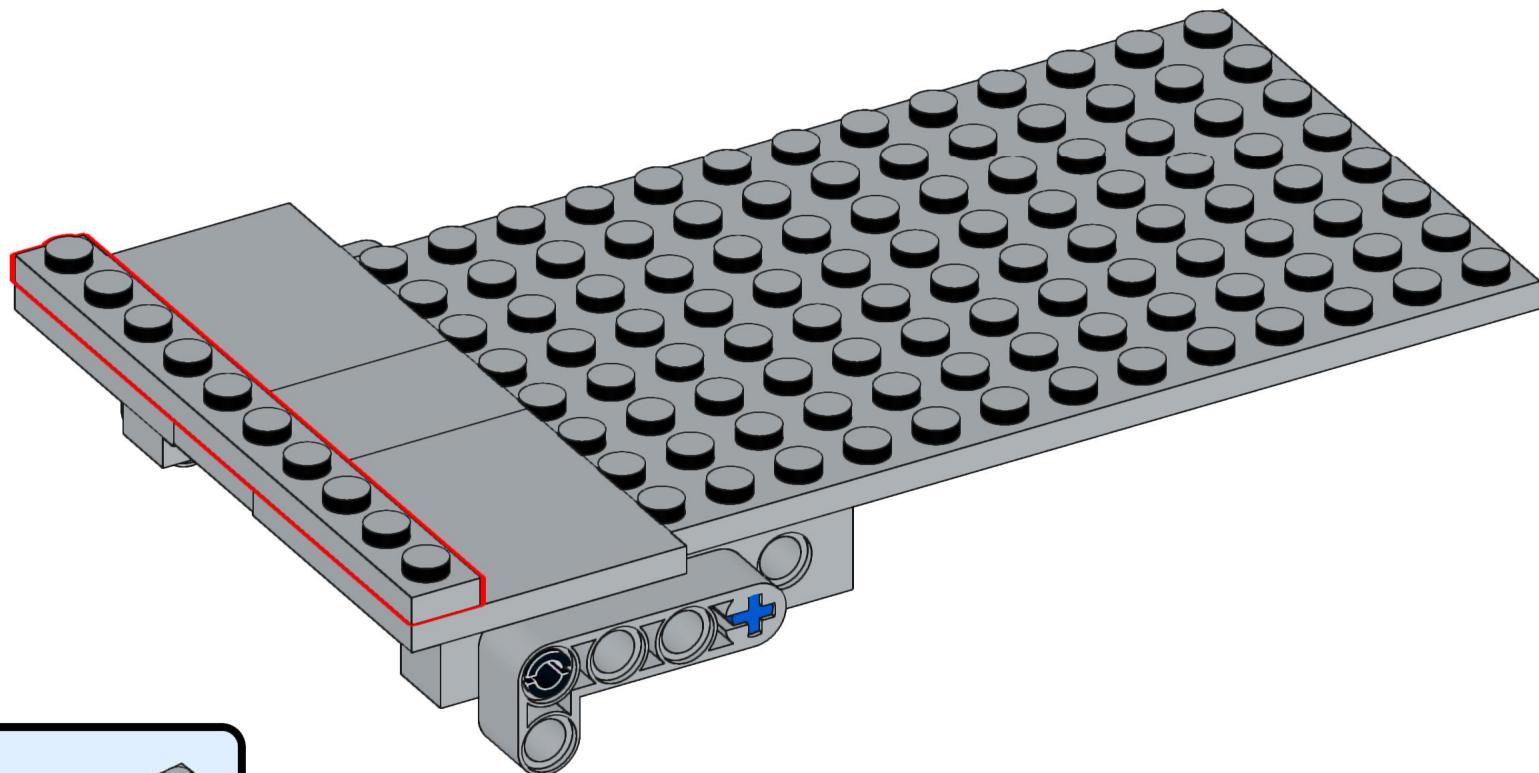



# 21

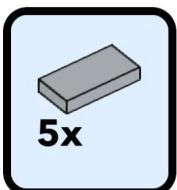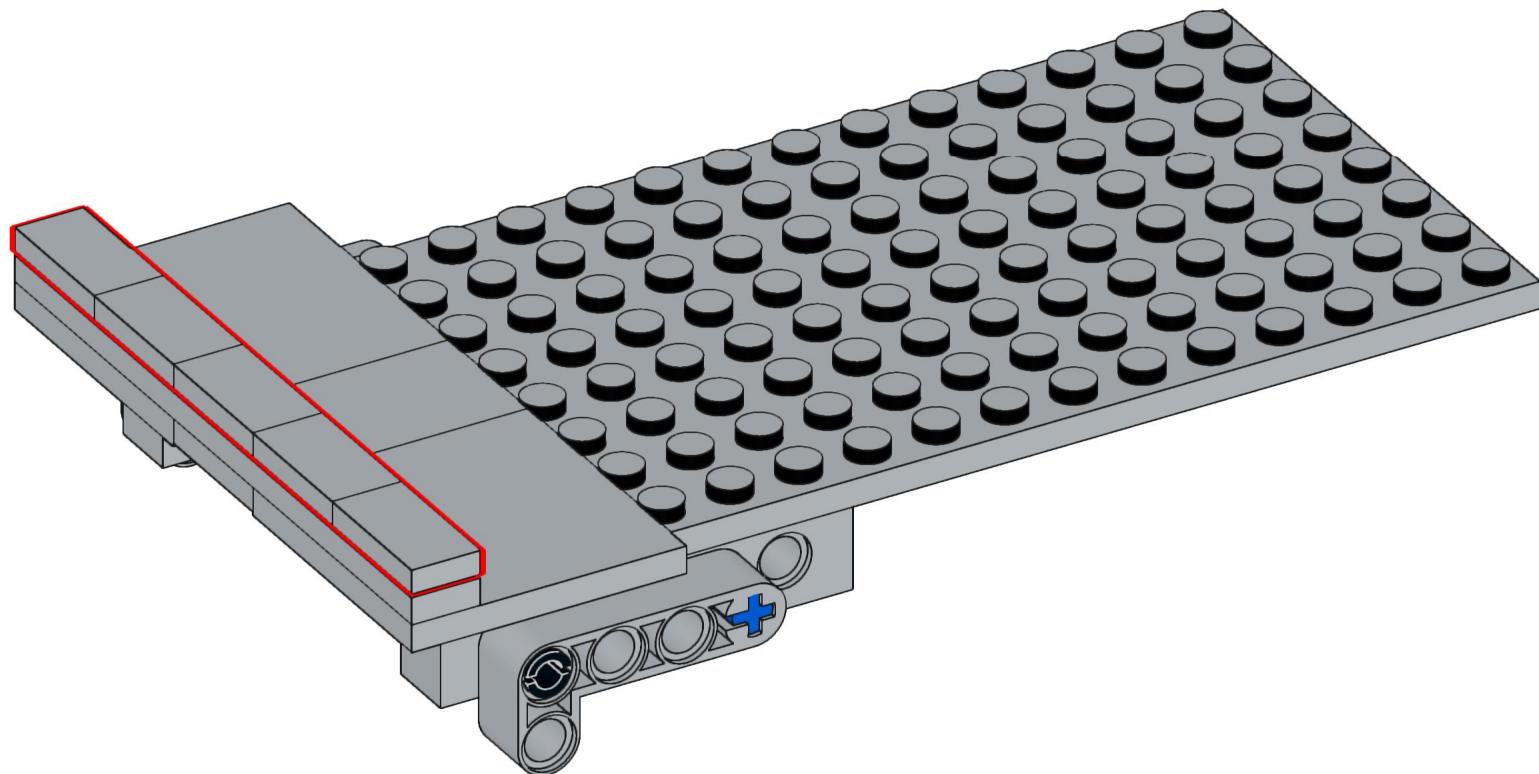



# 22

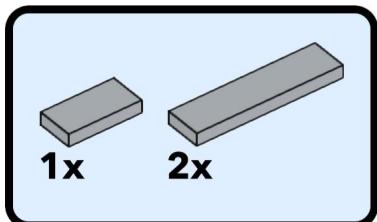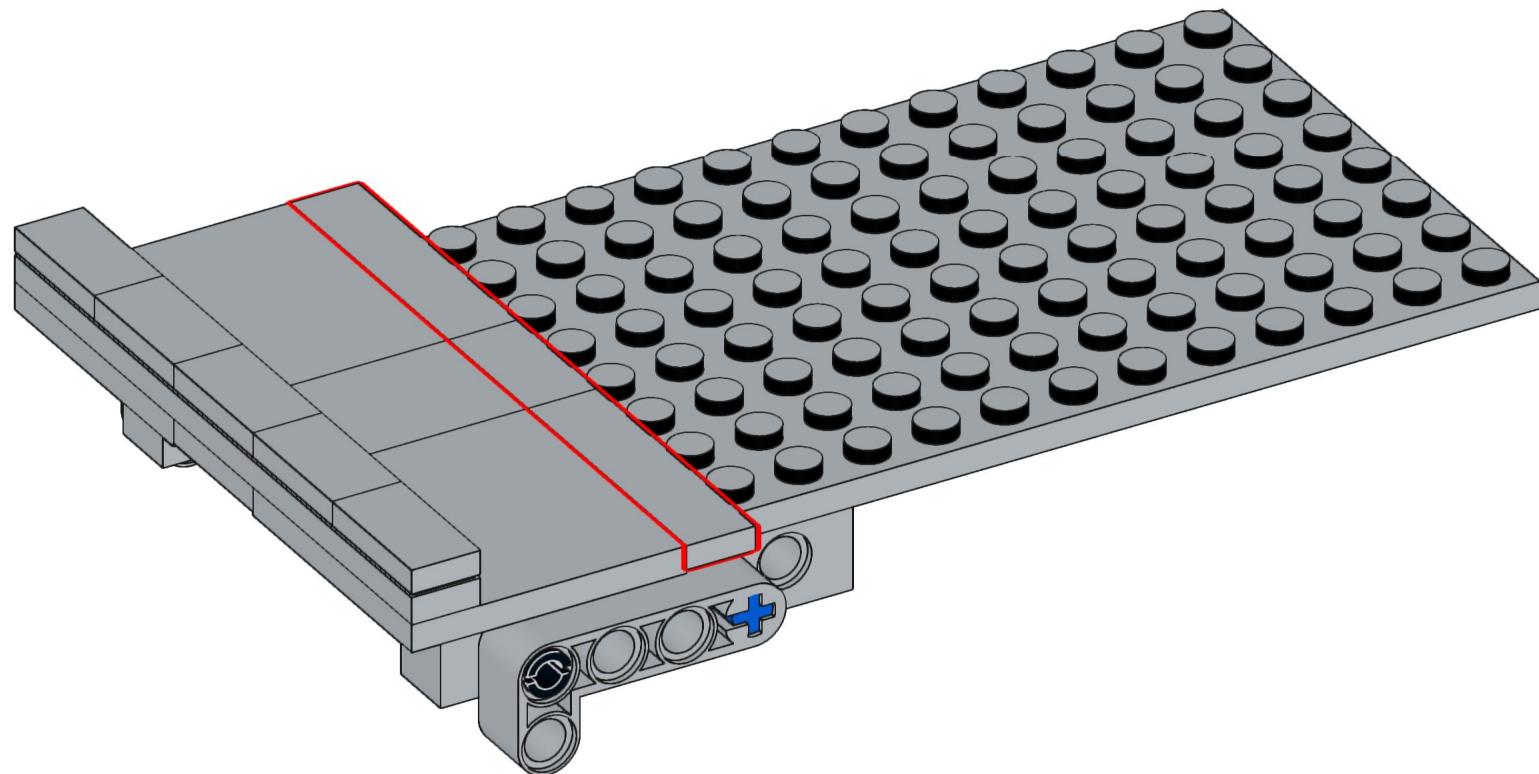



# 23

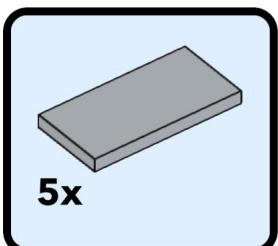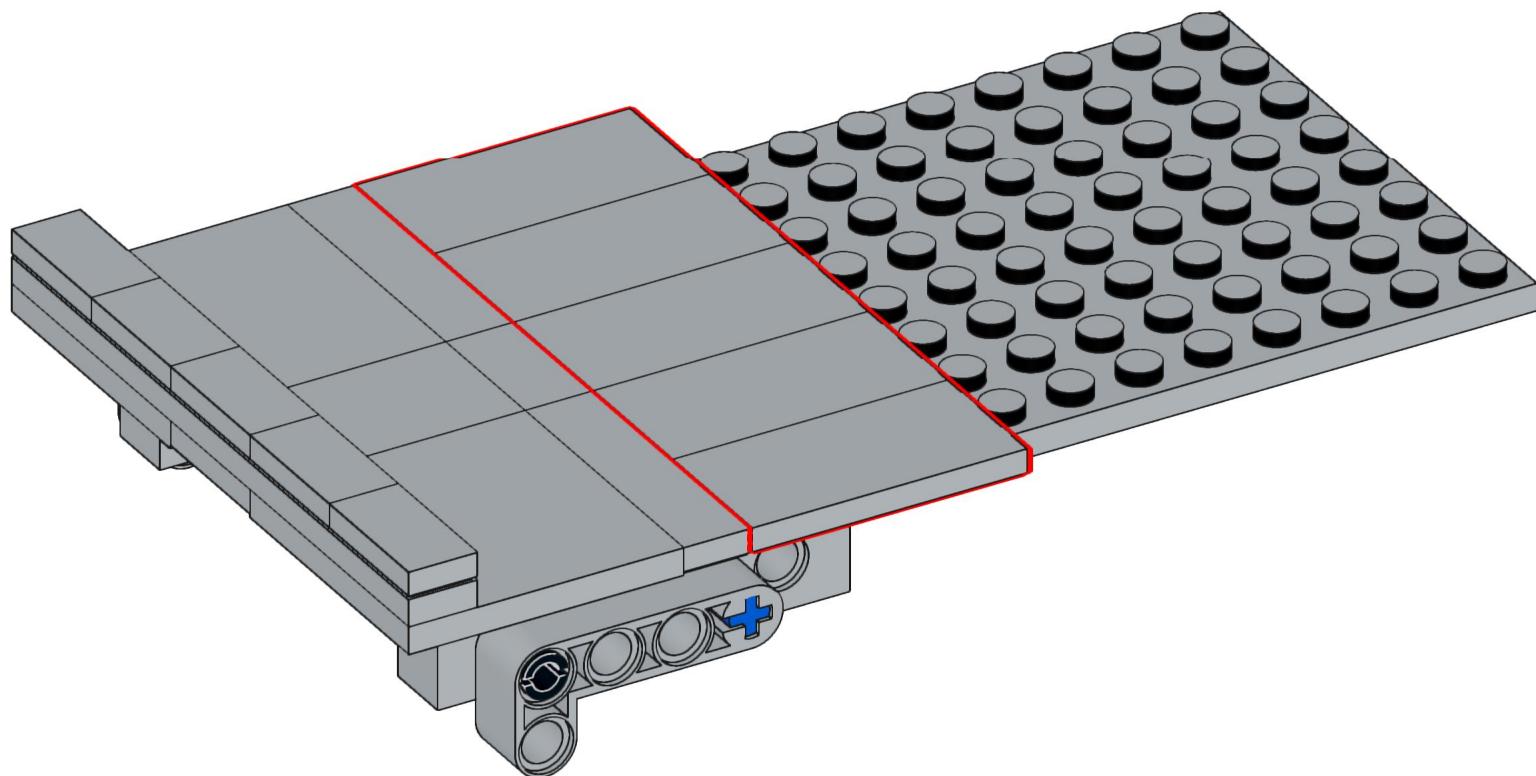




# 24

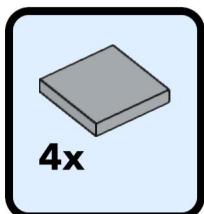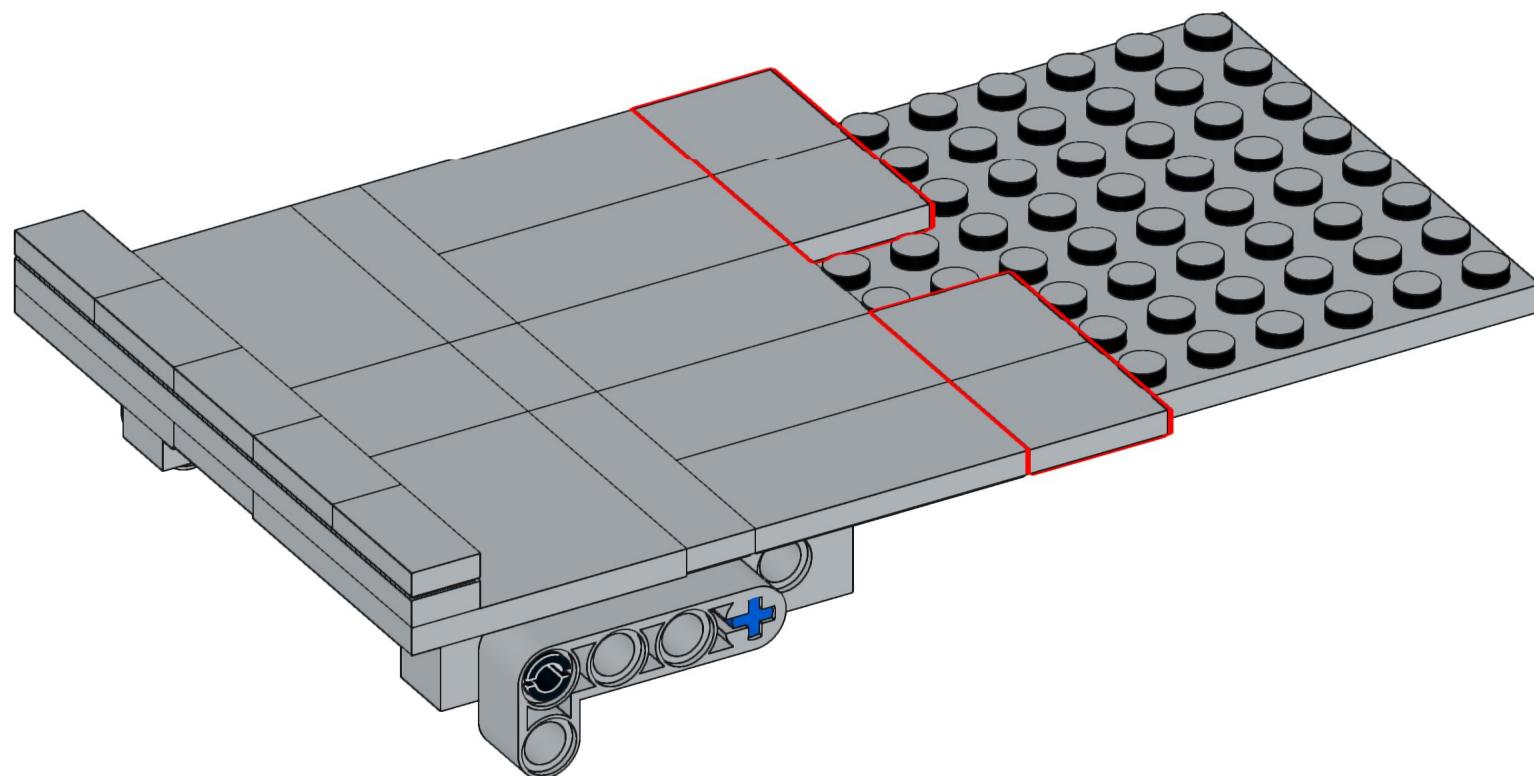



# 25

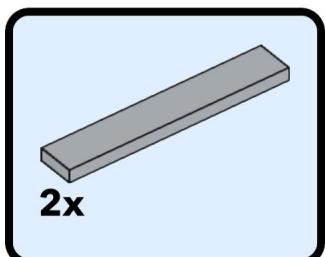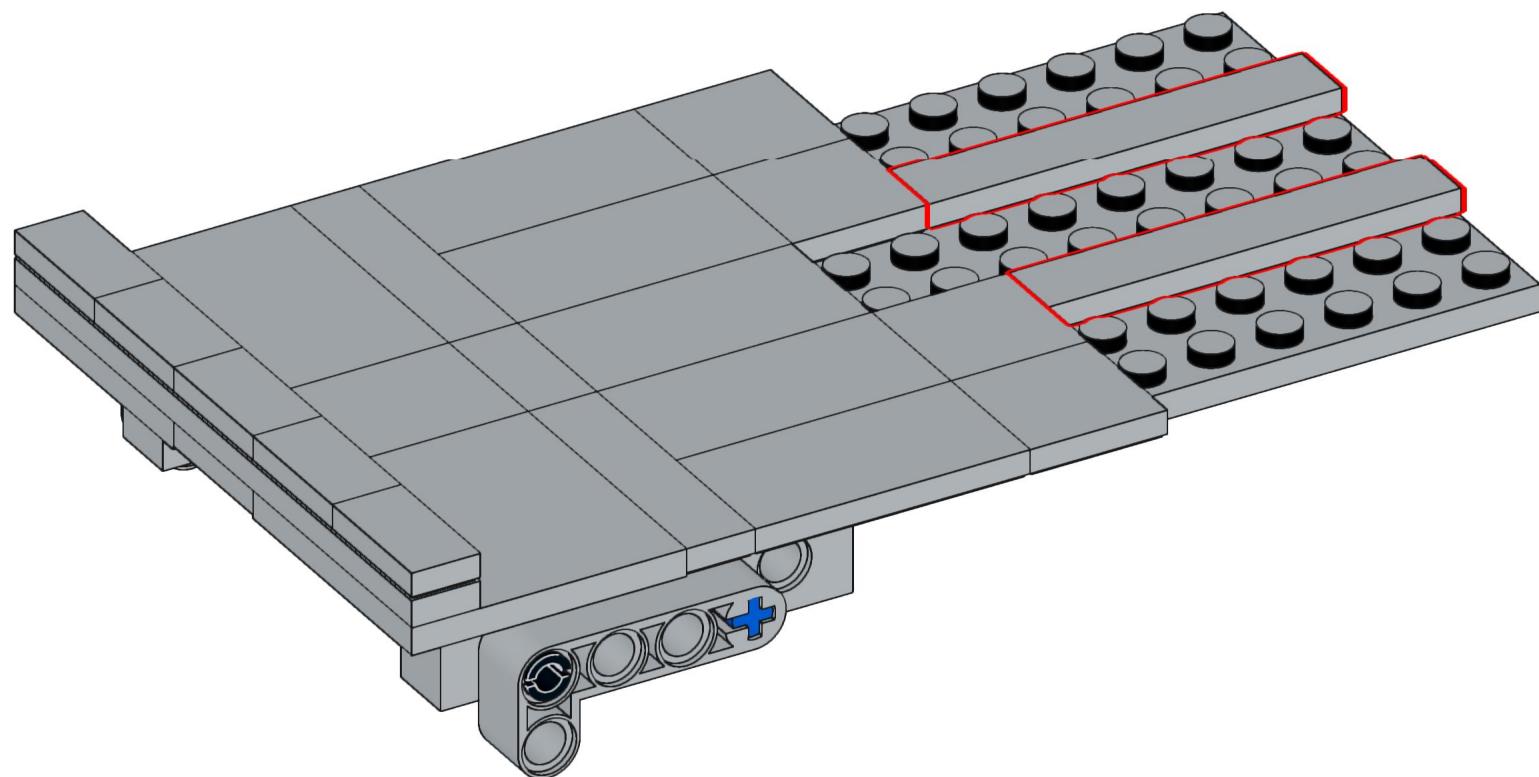



# 26

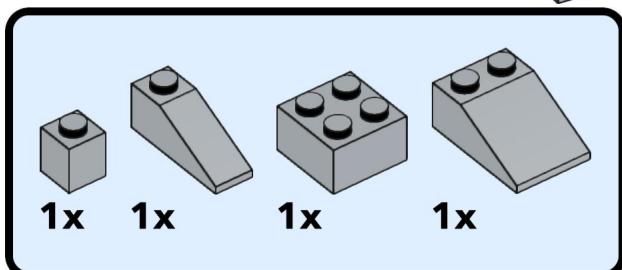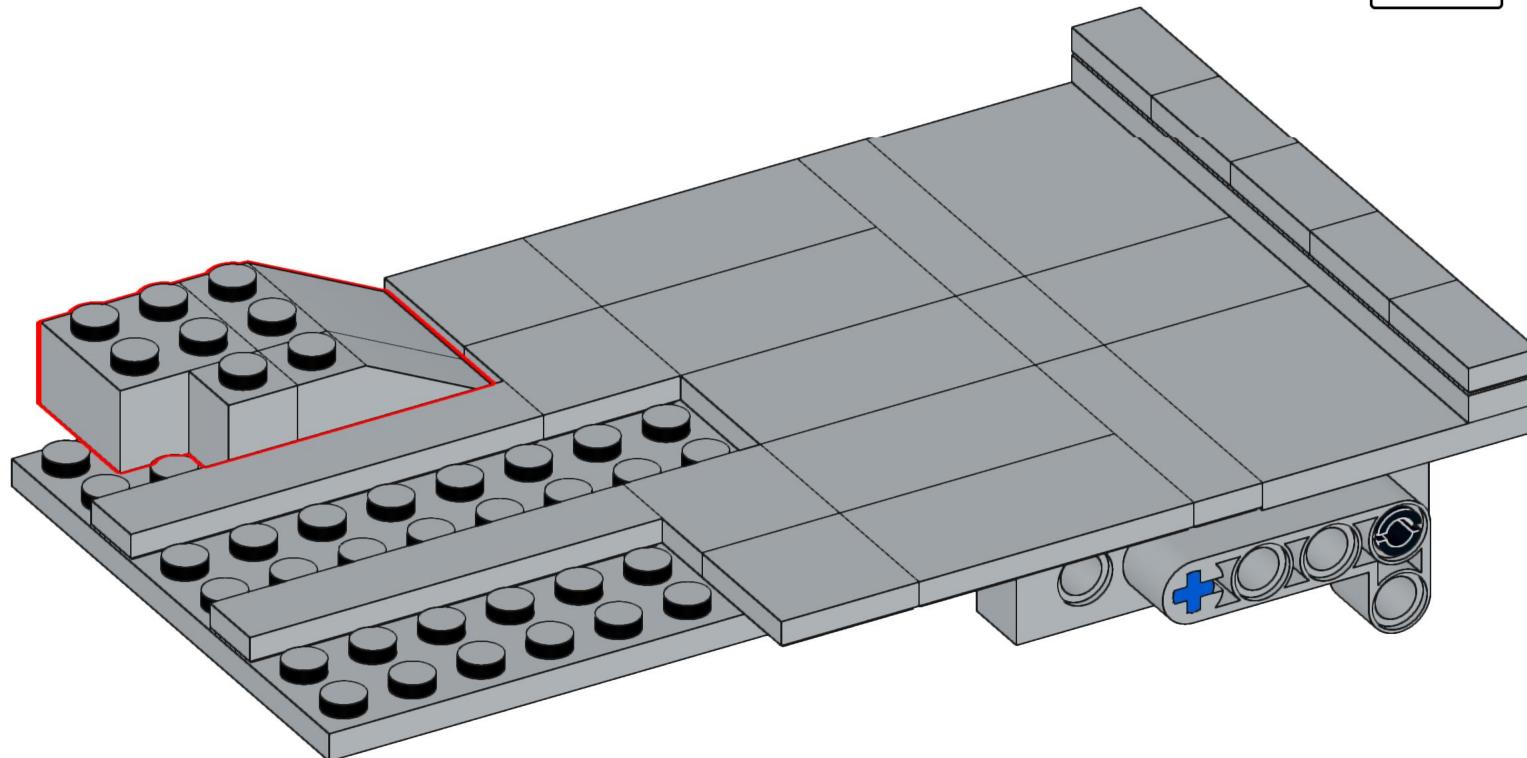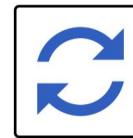



# 27

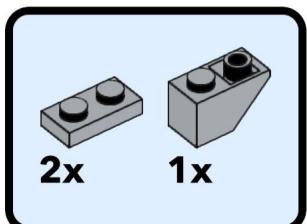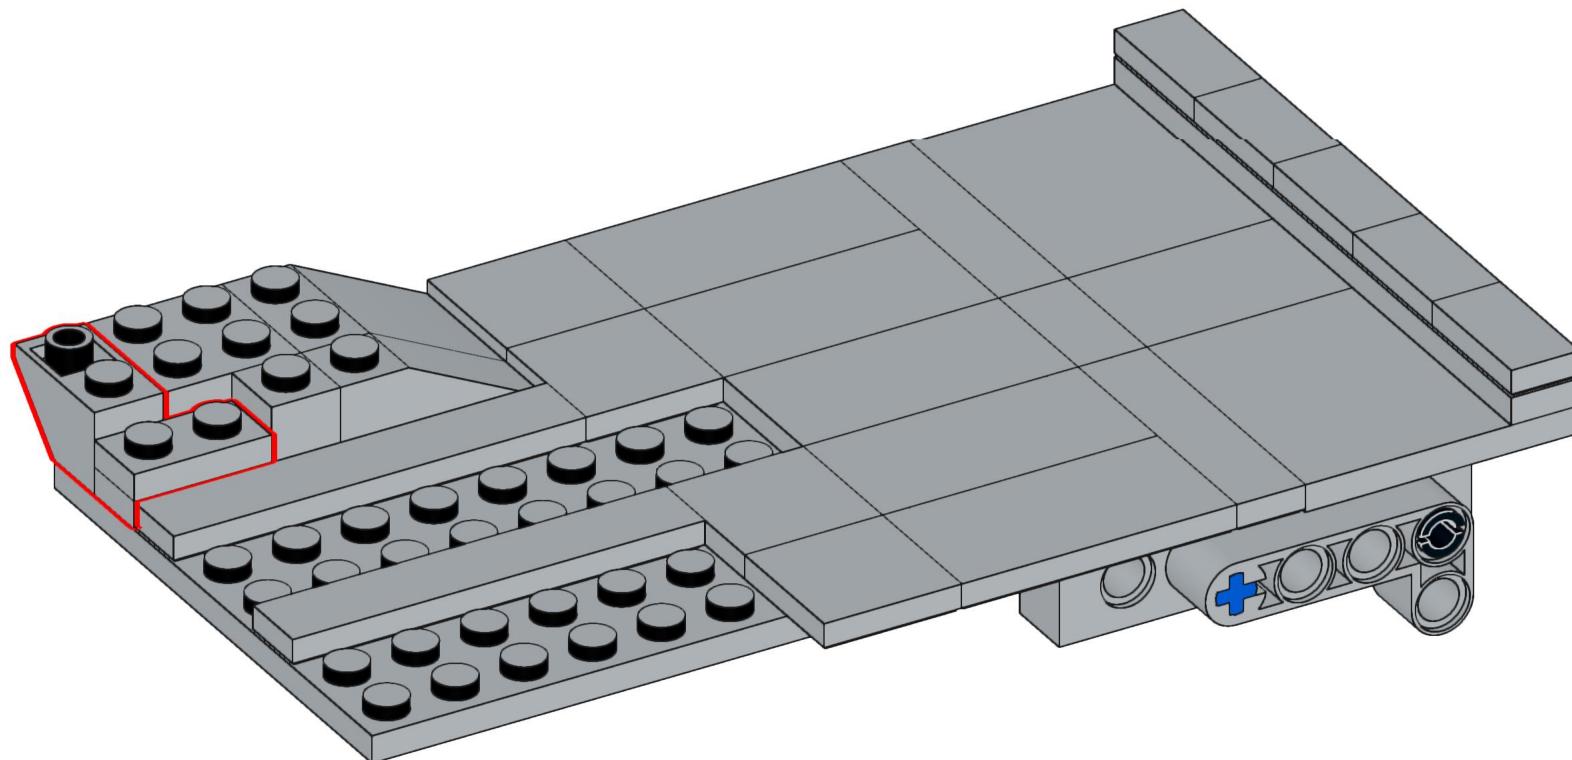



# 28

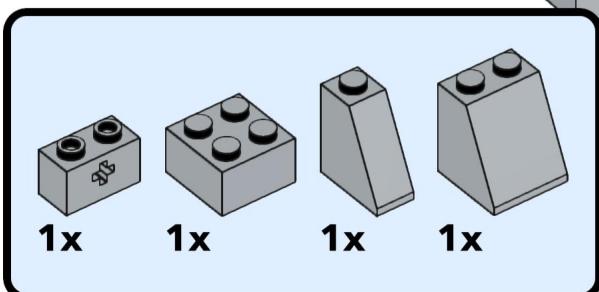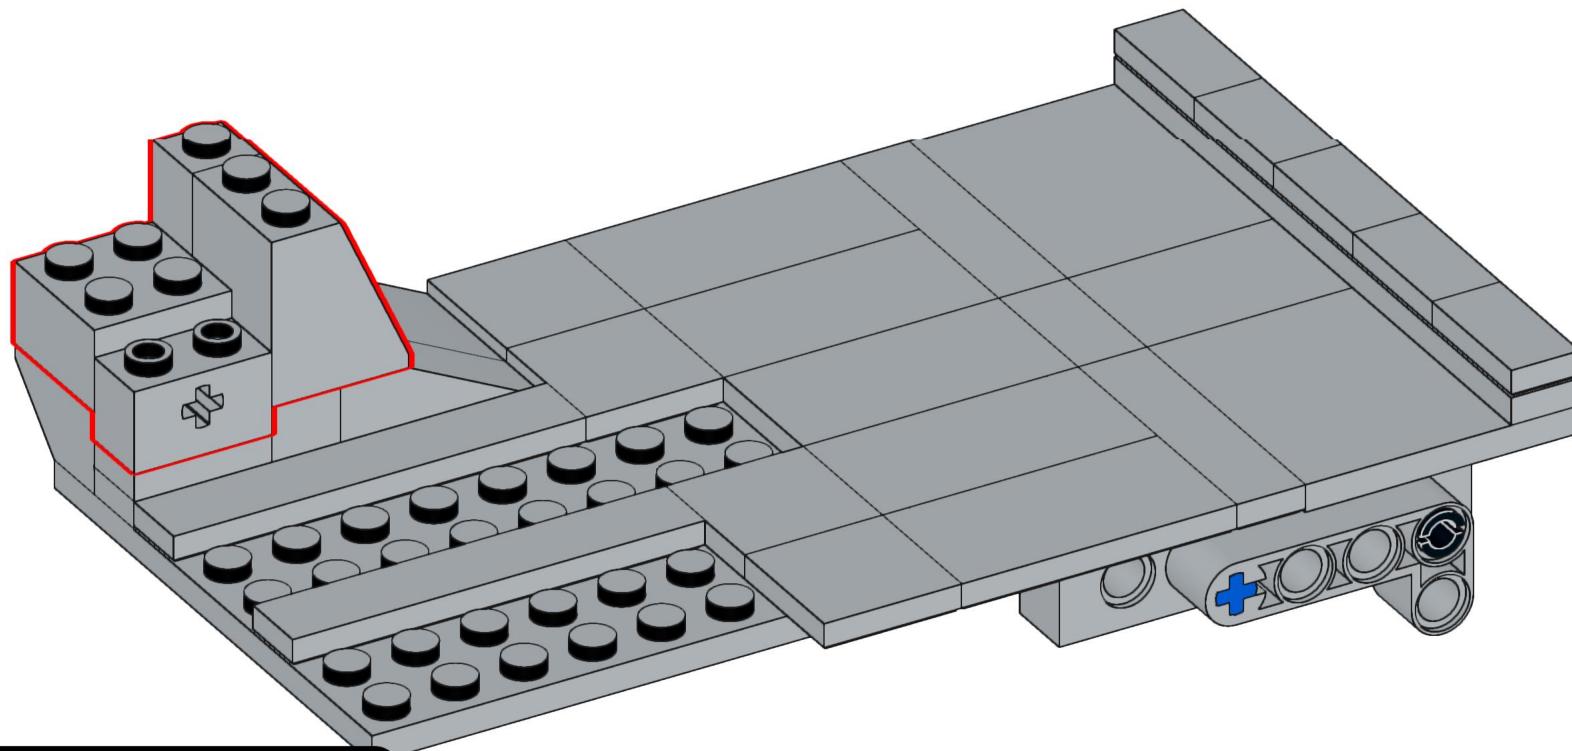



# 29

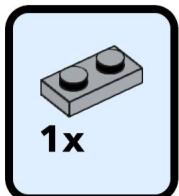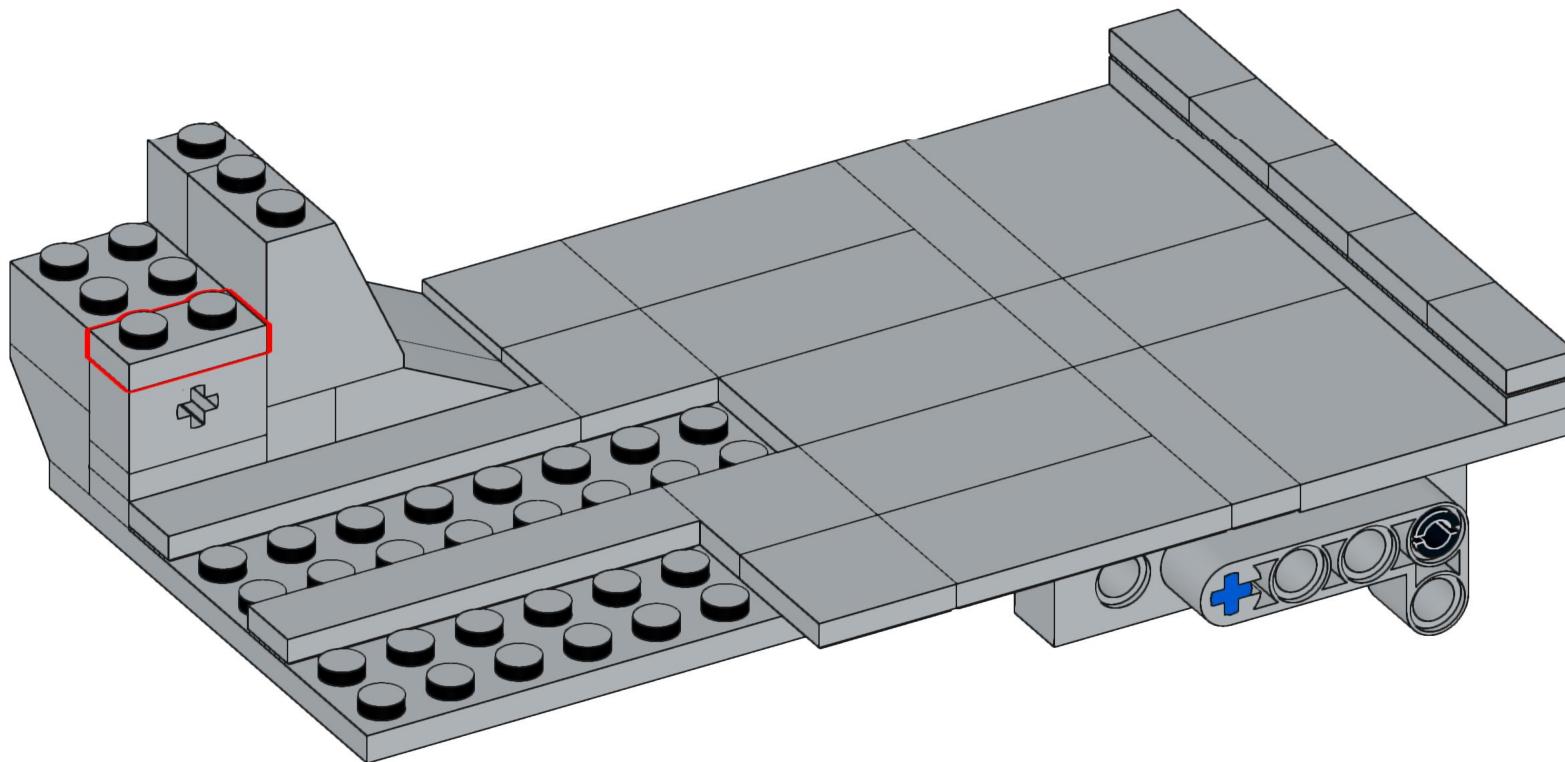



# 30

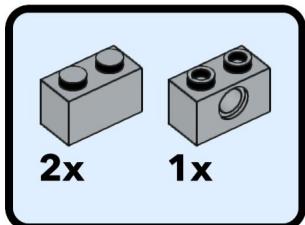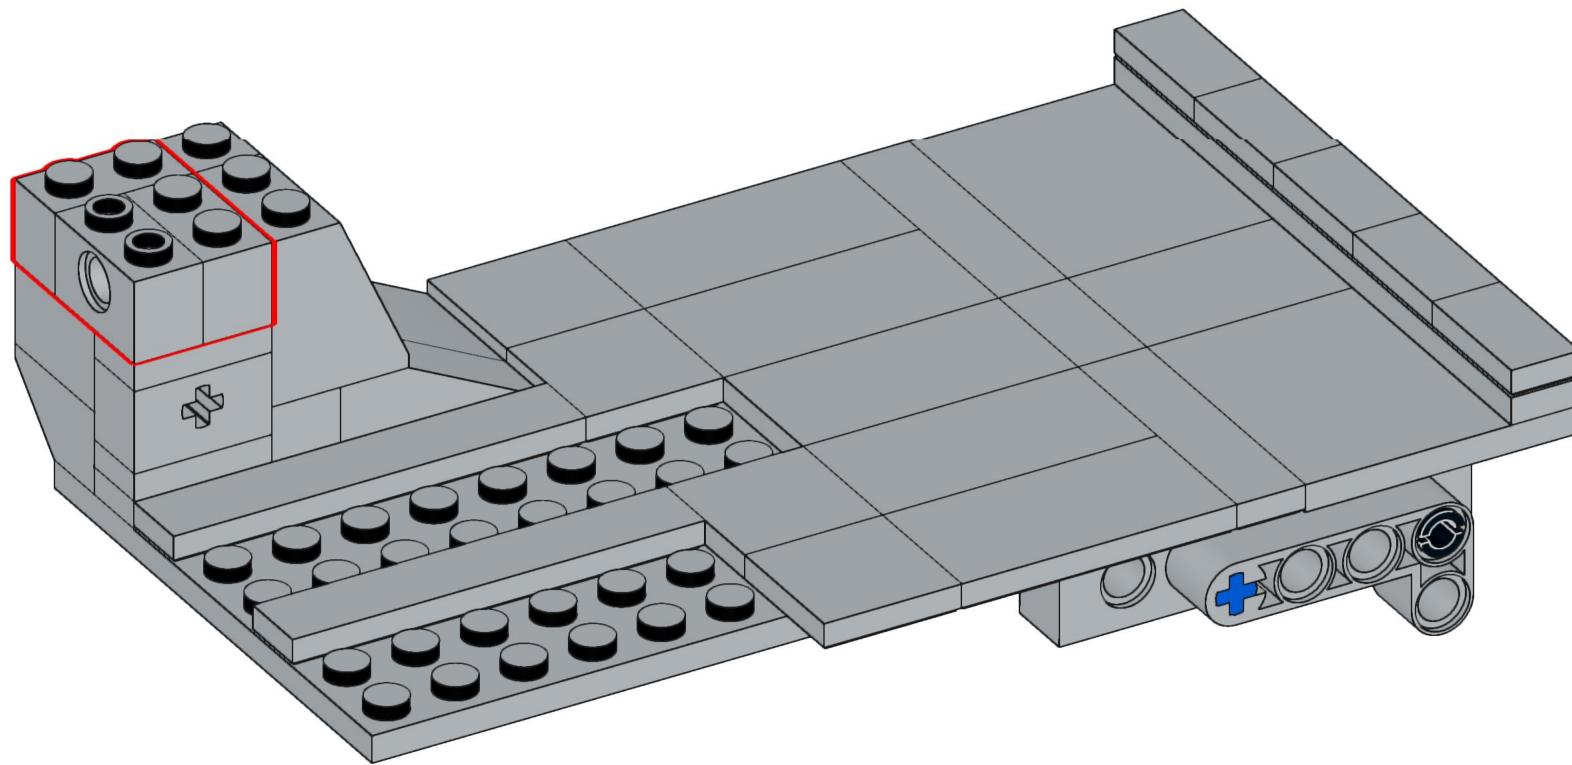

# 31


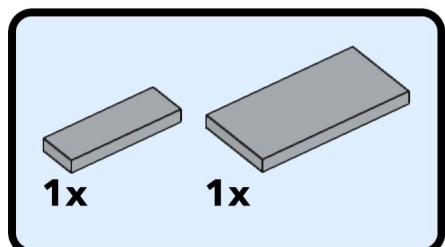
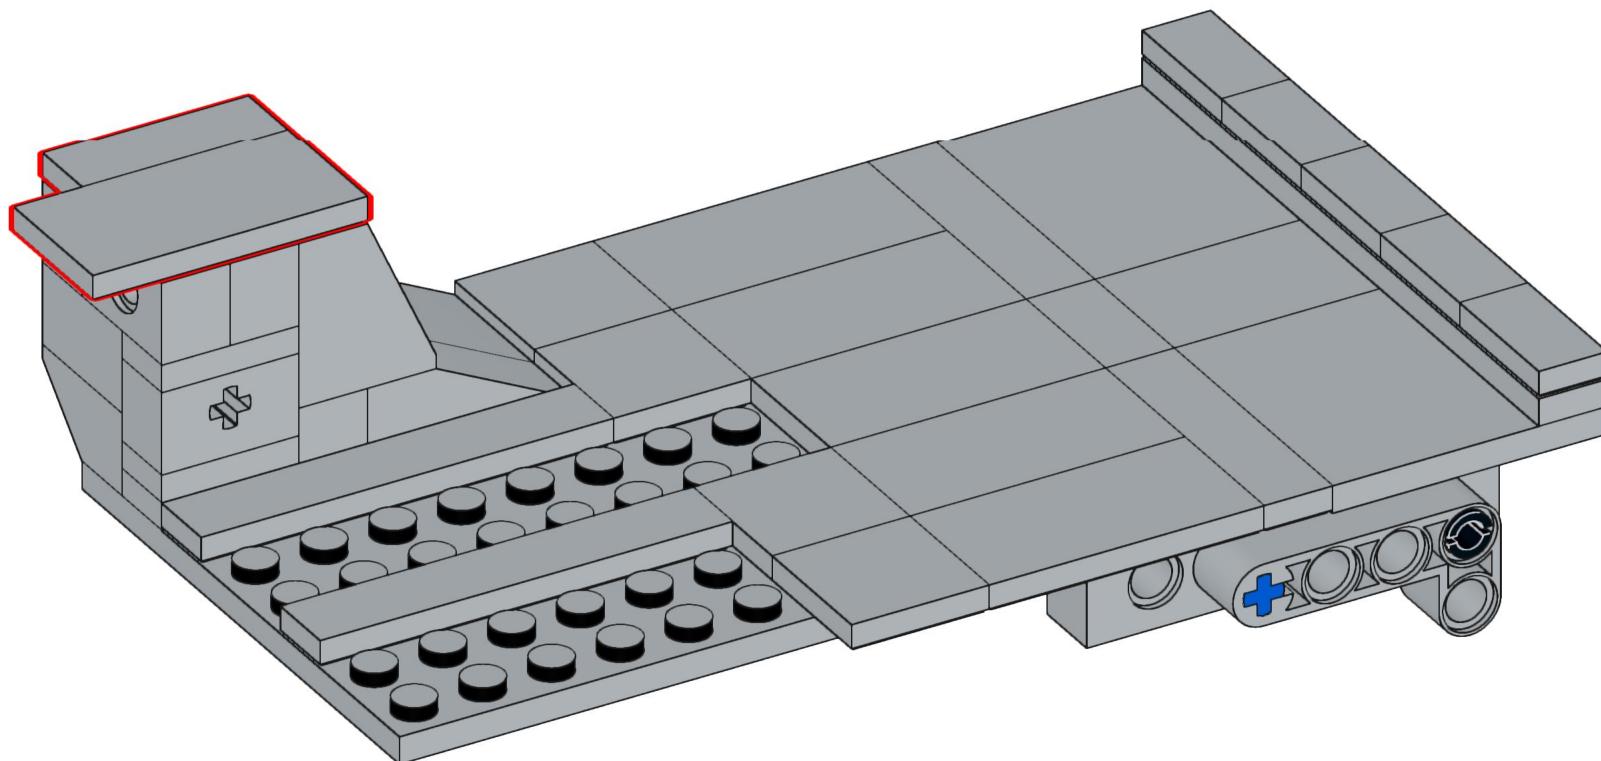


# 32

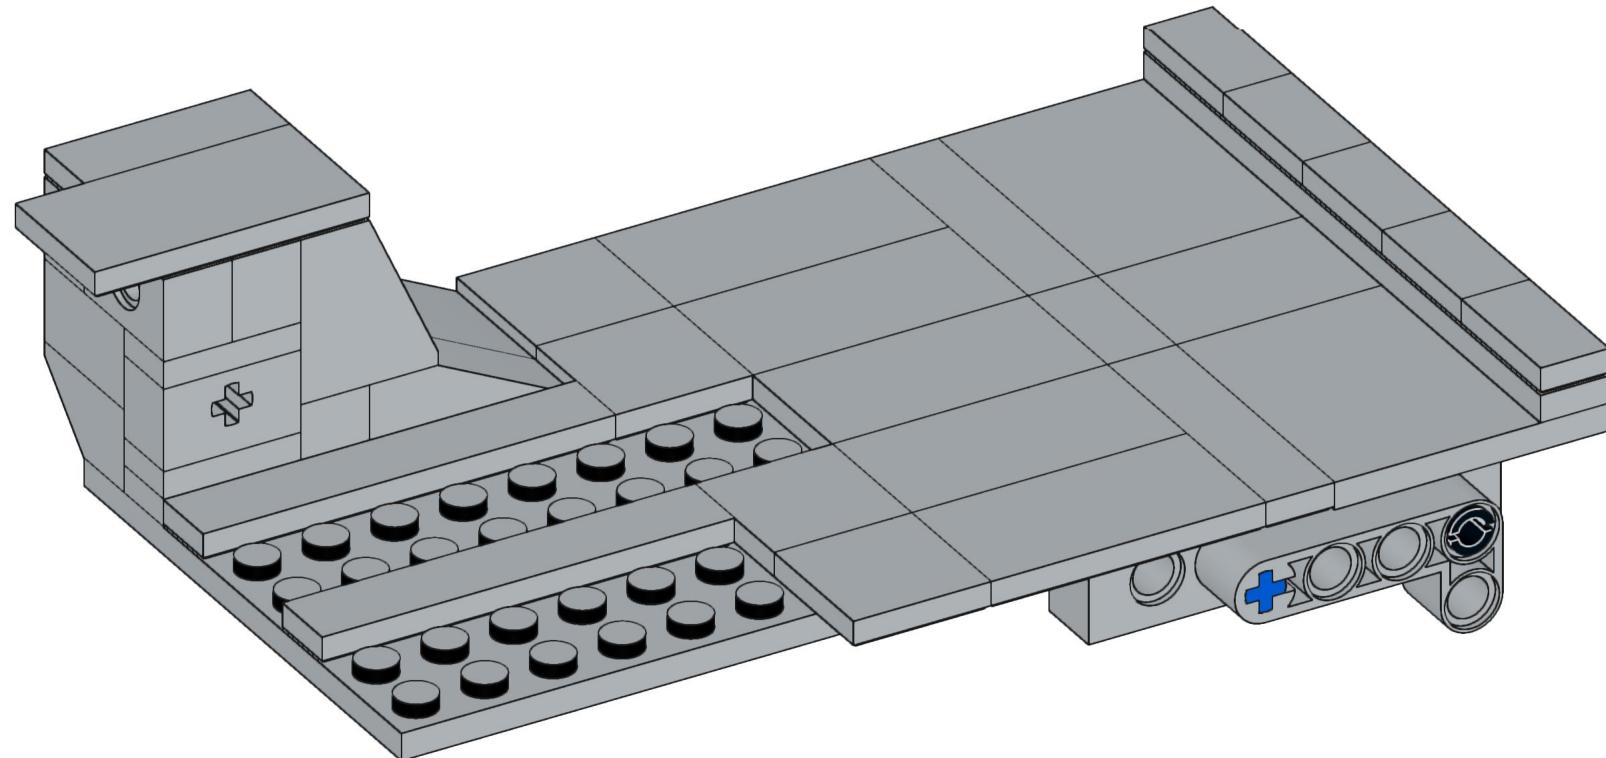
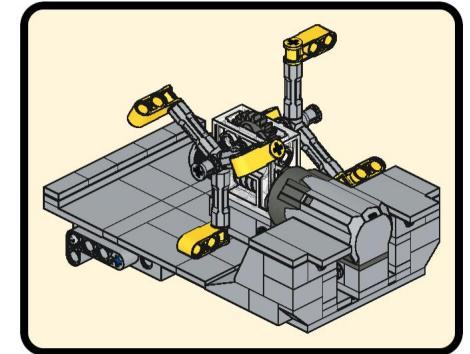


**Upper deck is half-complete.**



**33**

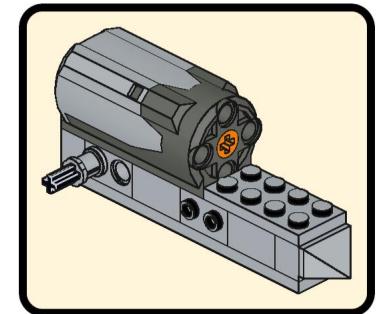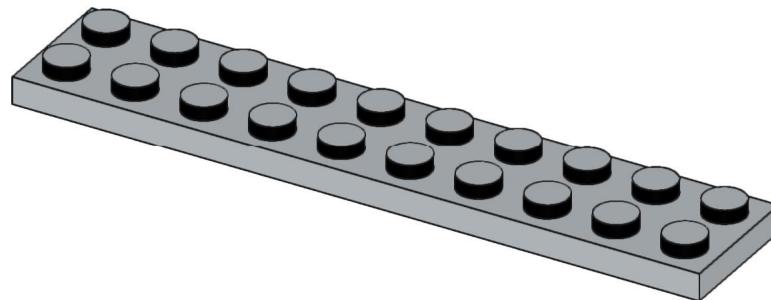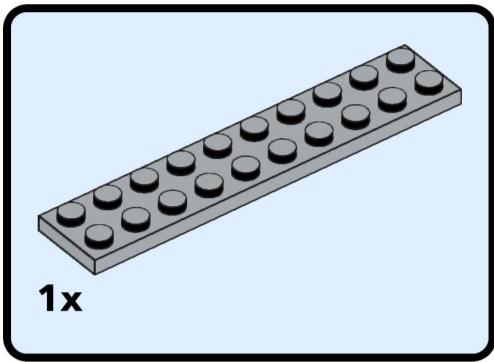



**34**

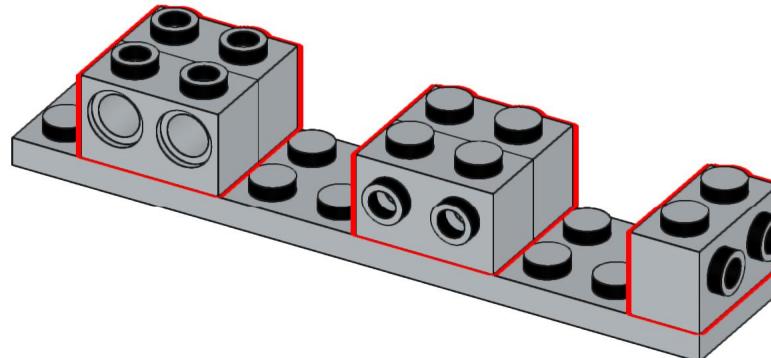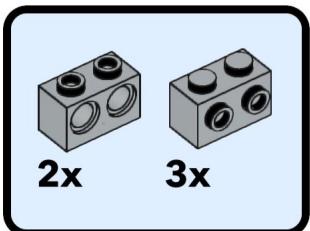



# 35

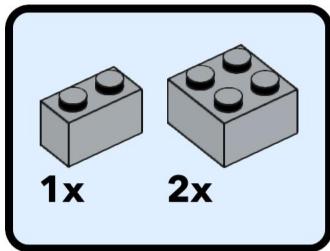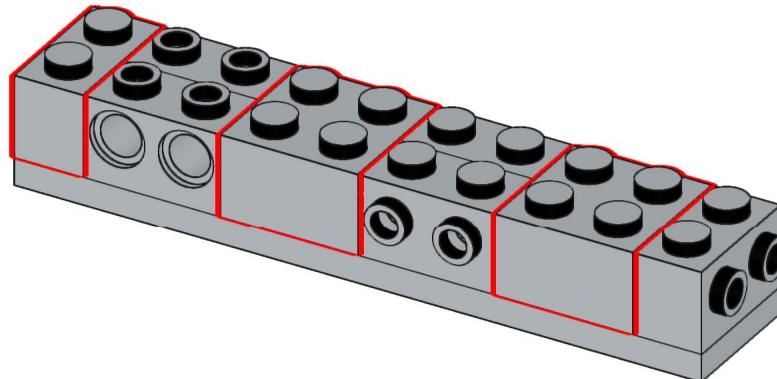


# 36

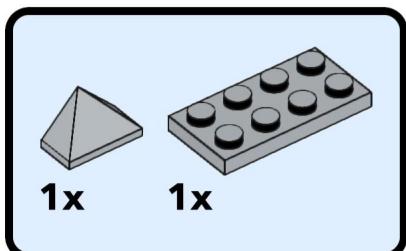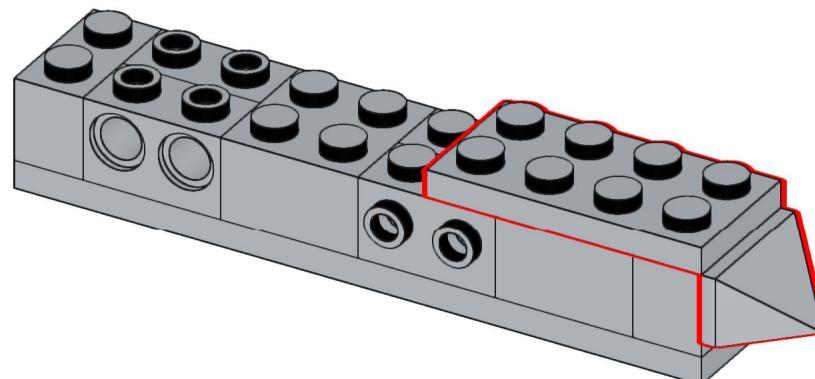


**37**

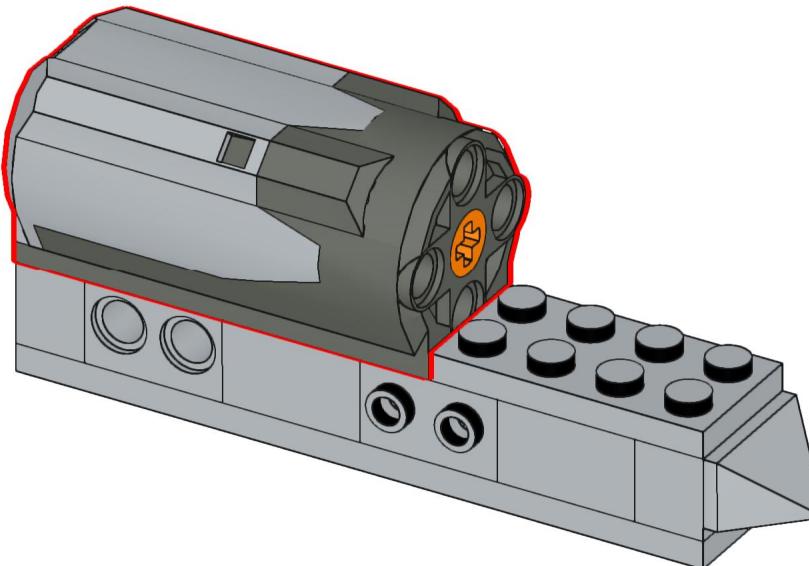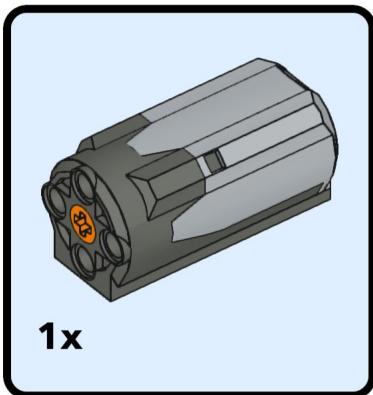

**38**

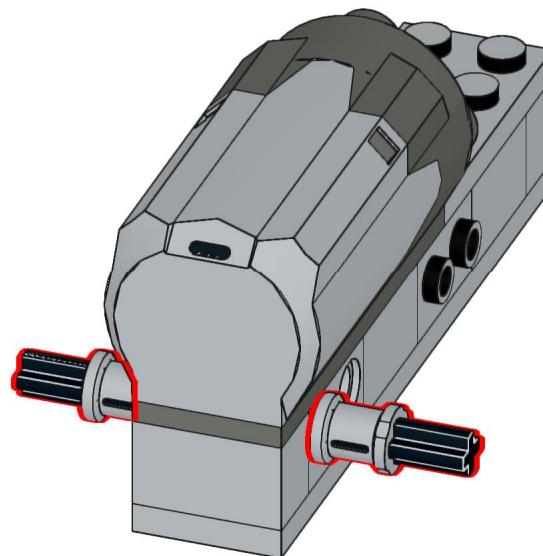


# 39

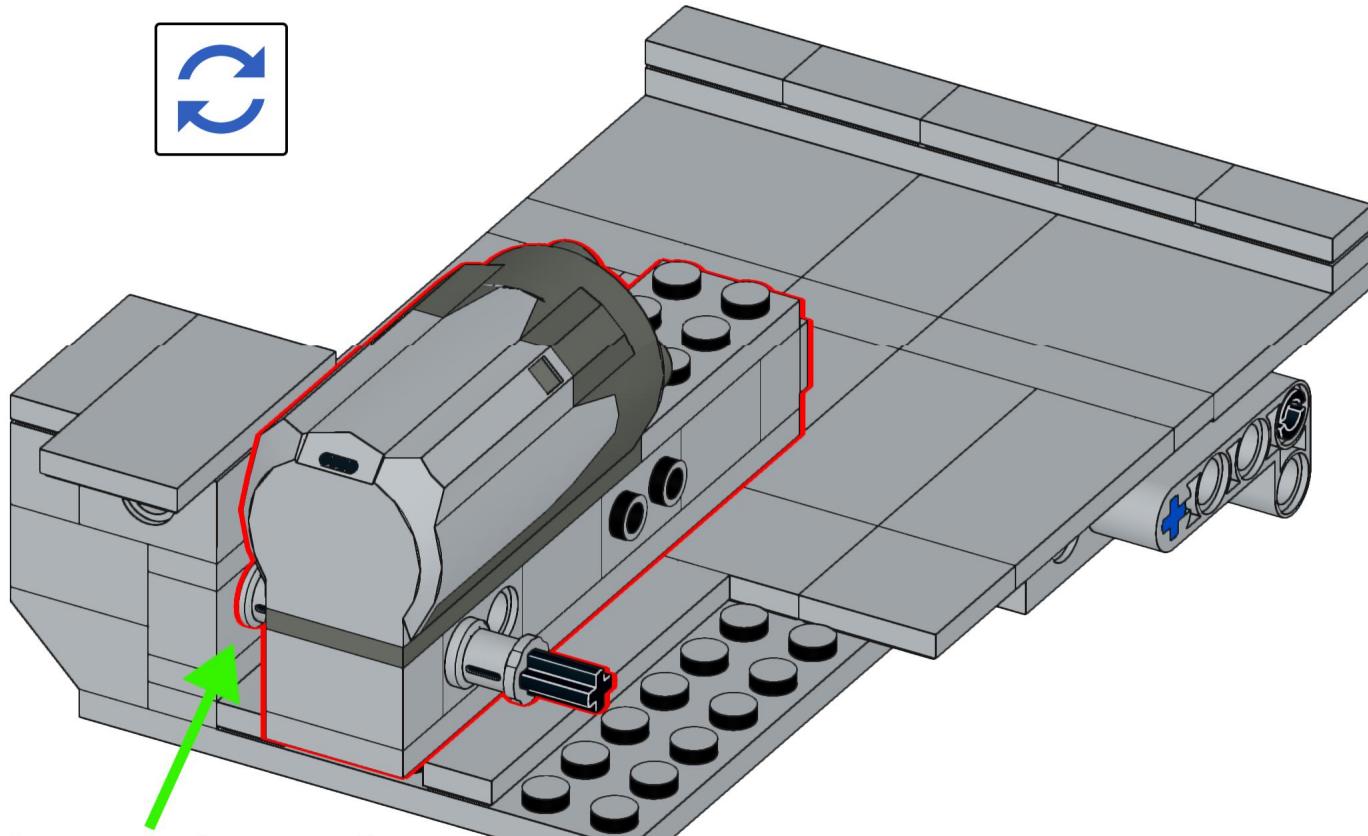


**Attach the drive unit to the upper deck by inserting cross axle into existing brick with cross axle hole.**




# 40

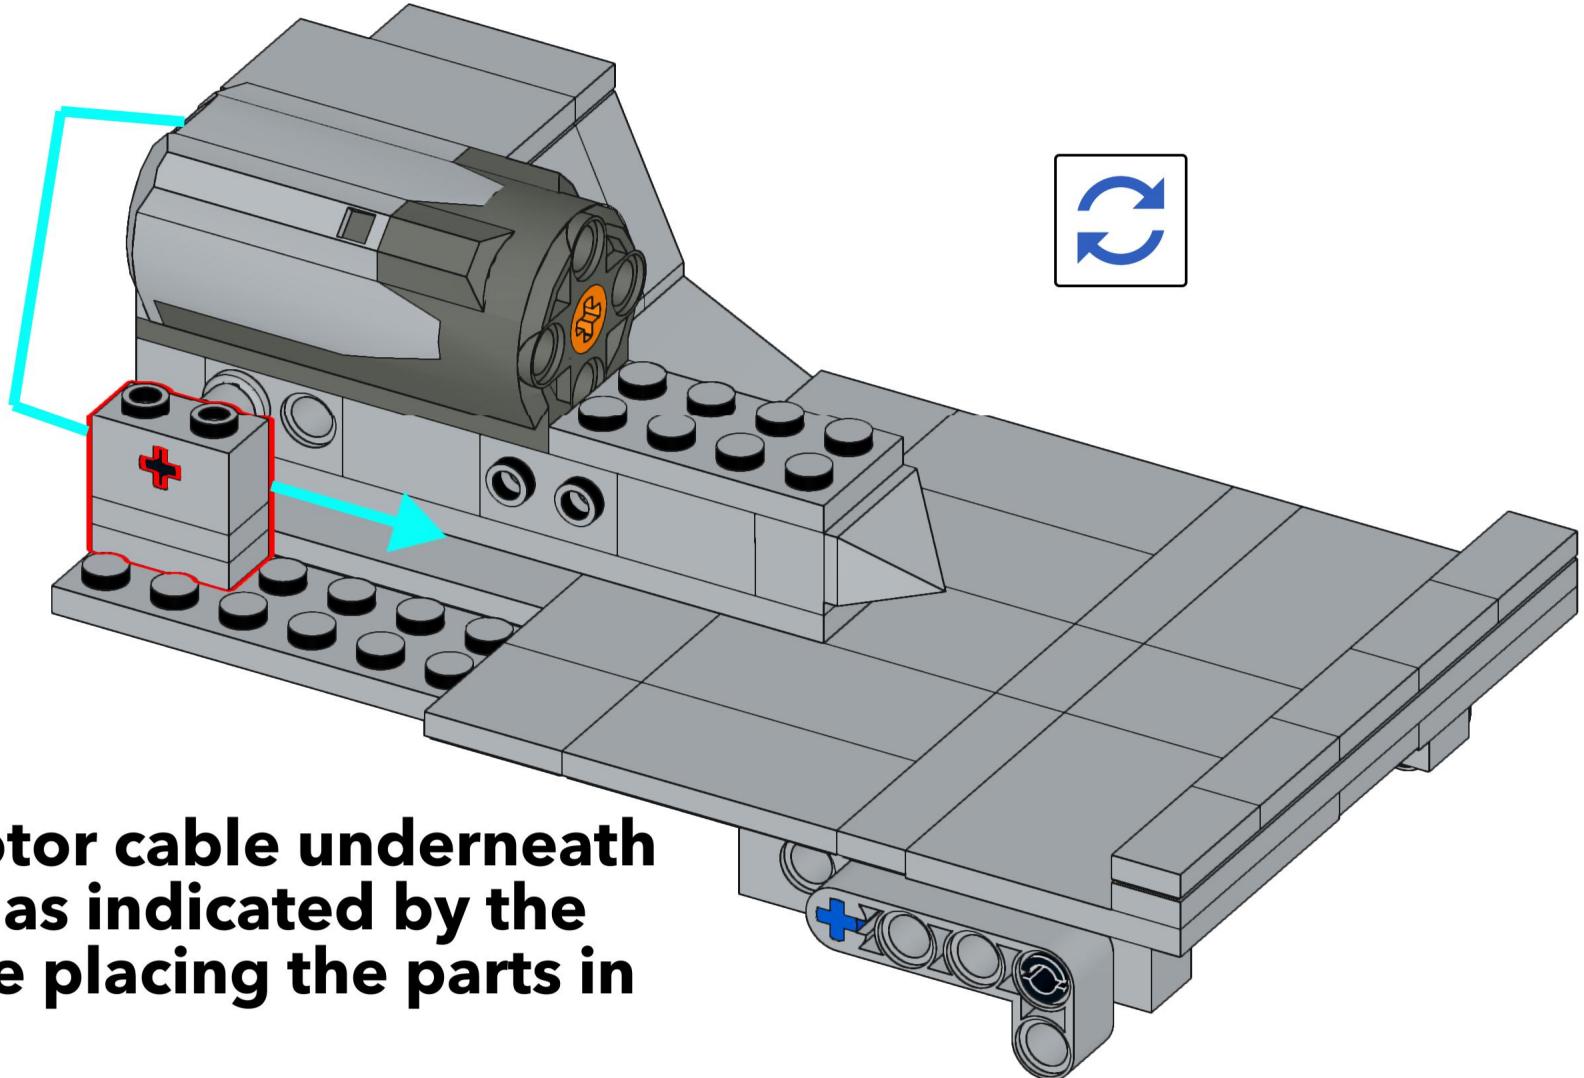

**Feed the motor cable underneath  
the bushing as indicated by the  
arrow before placing the parts in  
this step.**


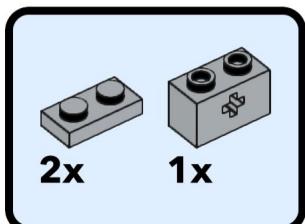


# 41

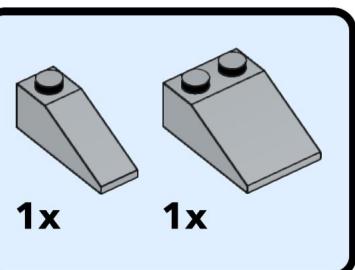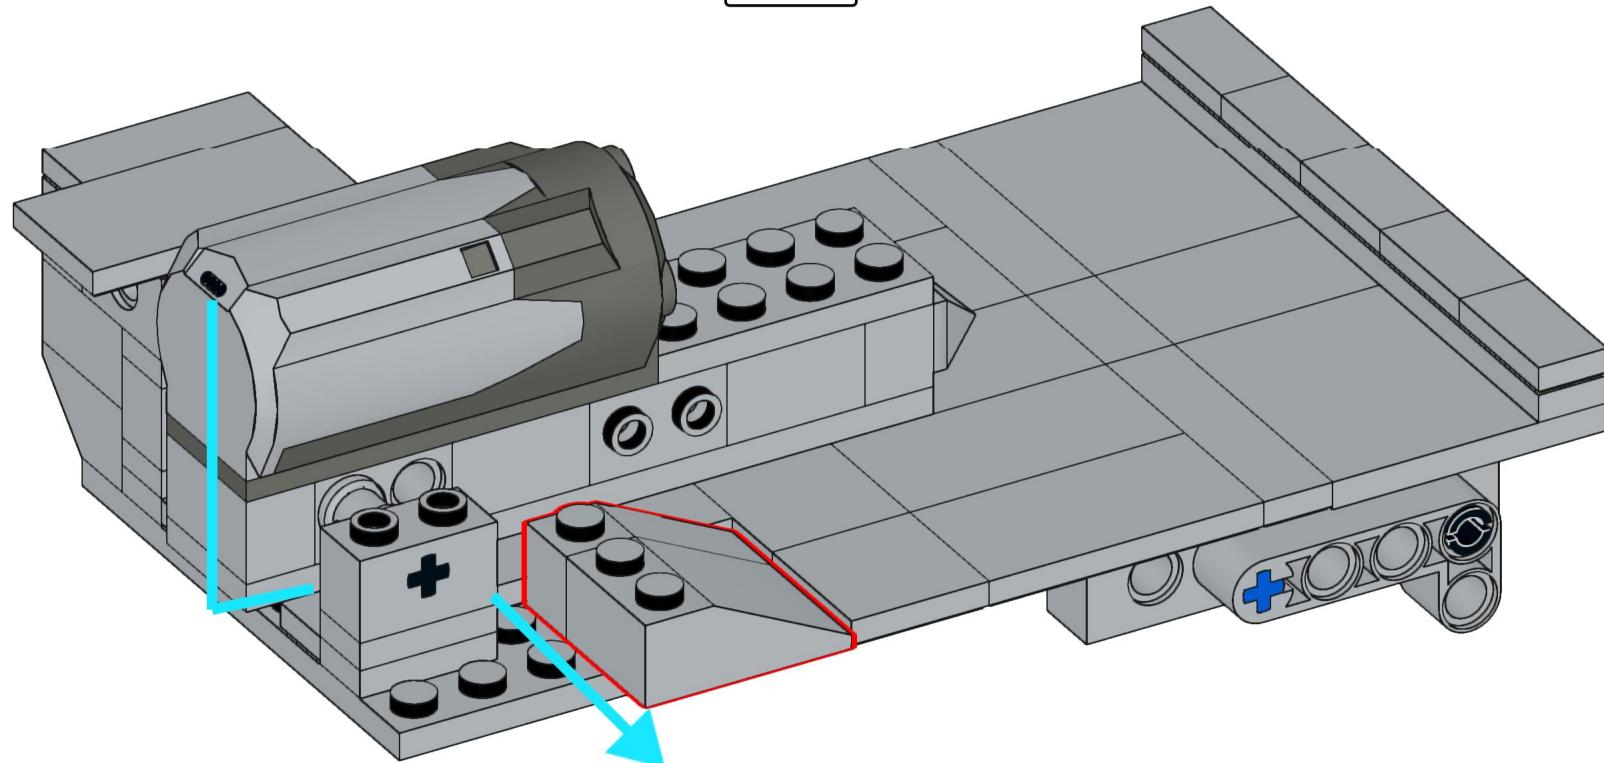
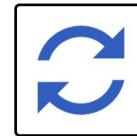


**Feed motor cable through the gap.**

# 42

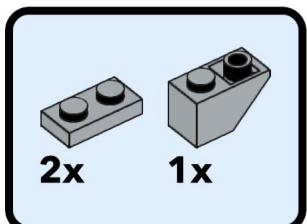
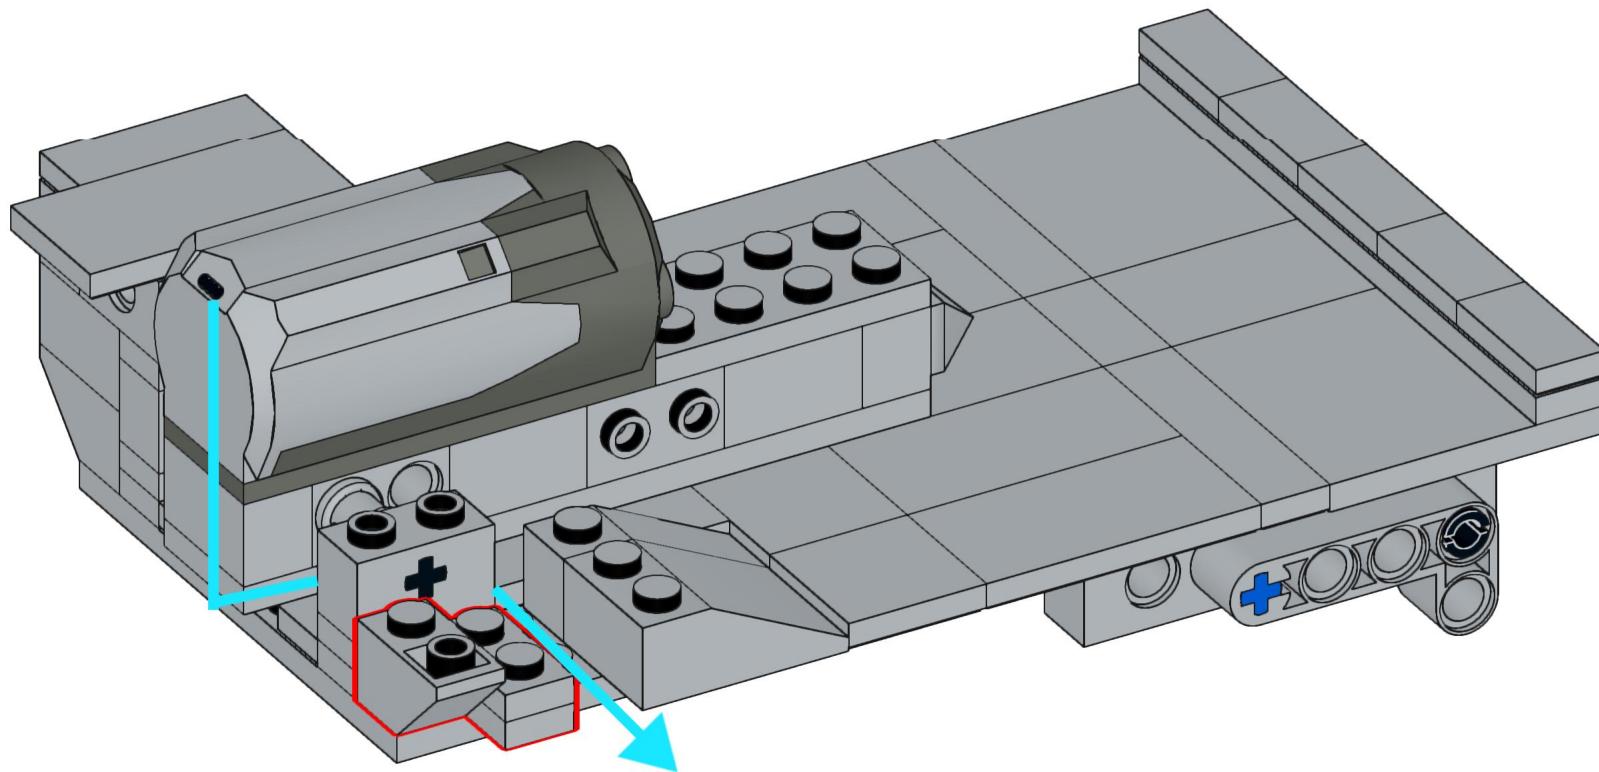


# 43

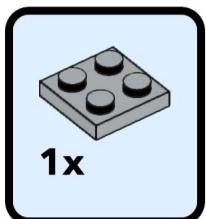
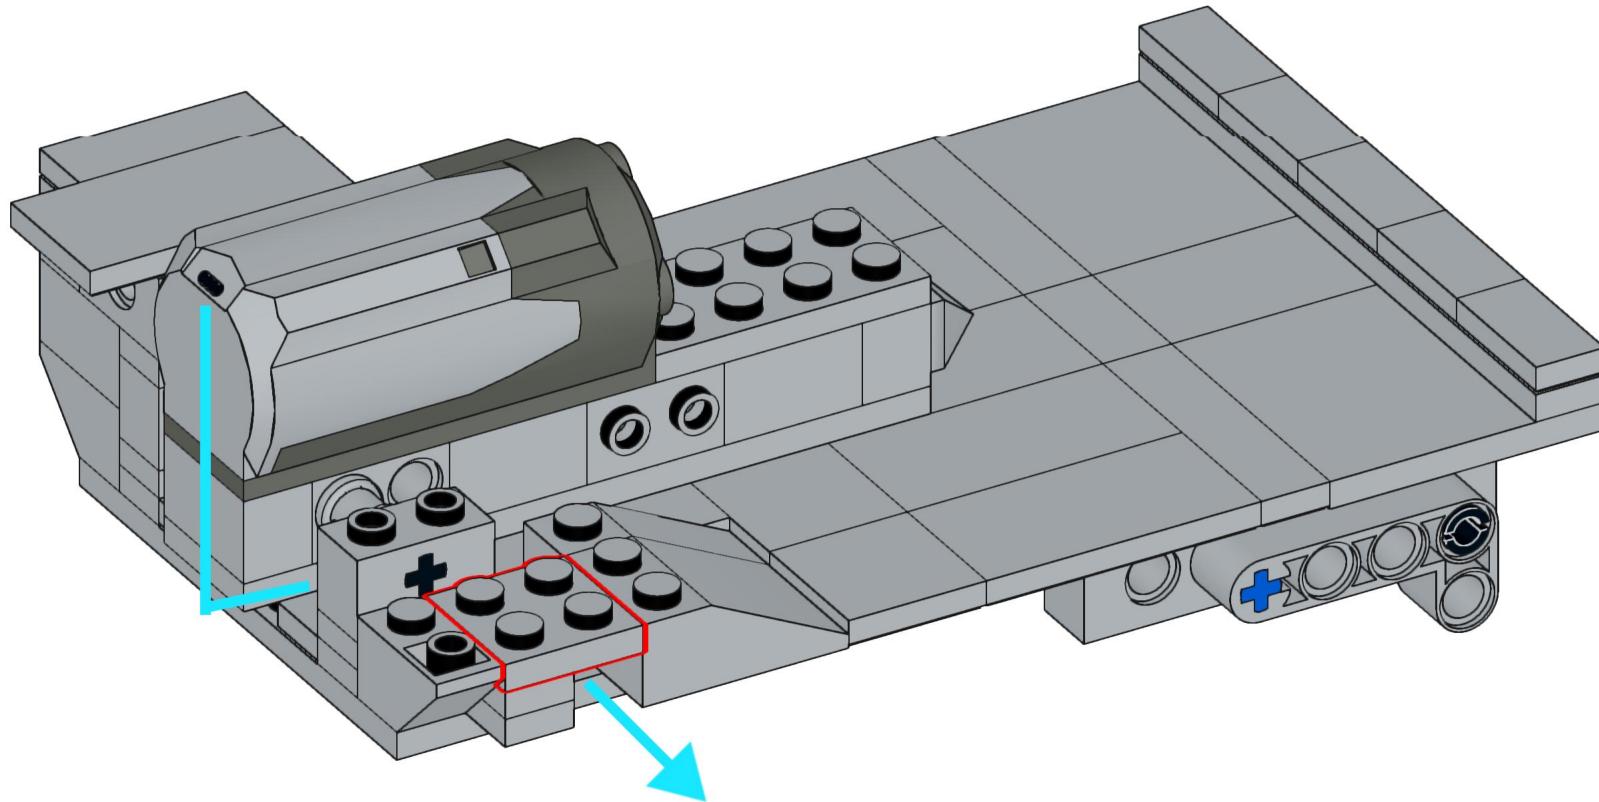


**Make sure the motor cable is  
underneath the 2x2 plate.**



# 44

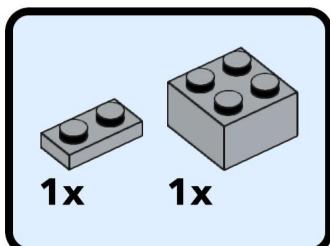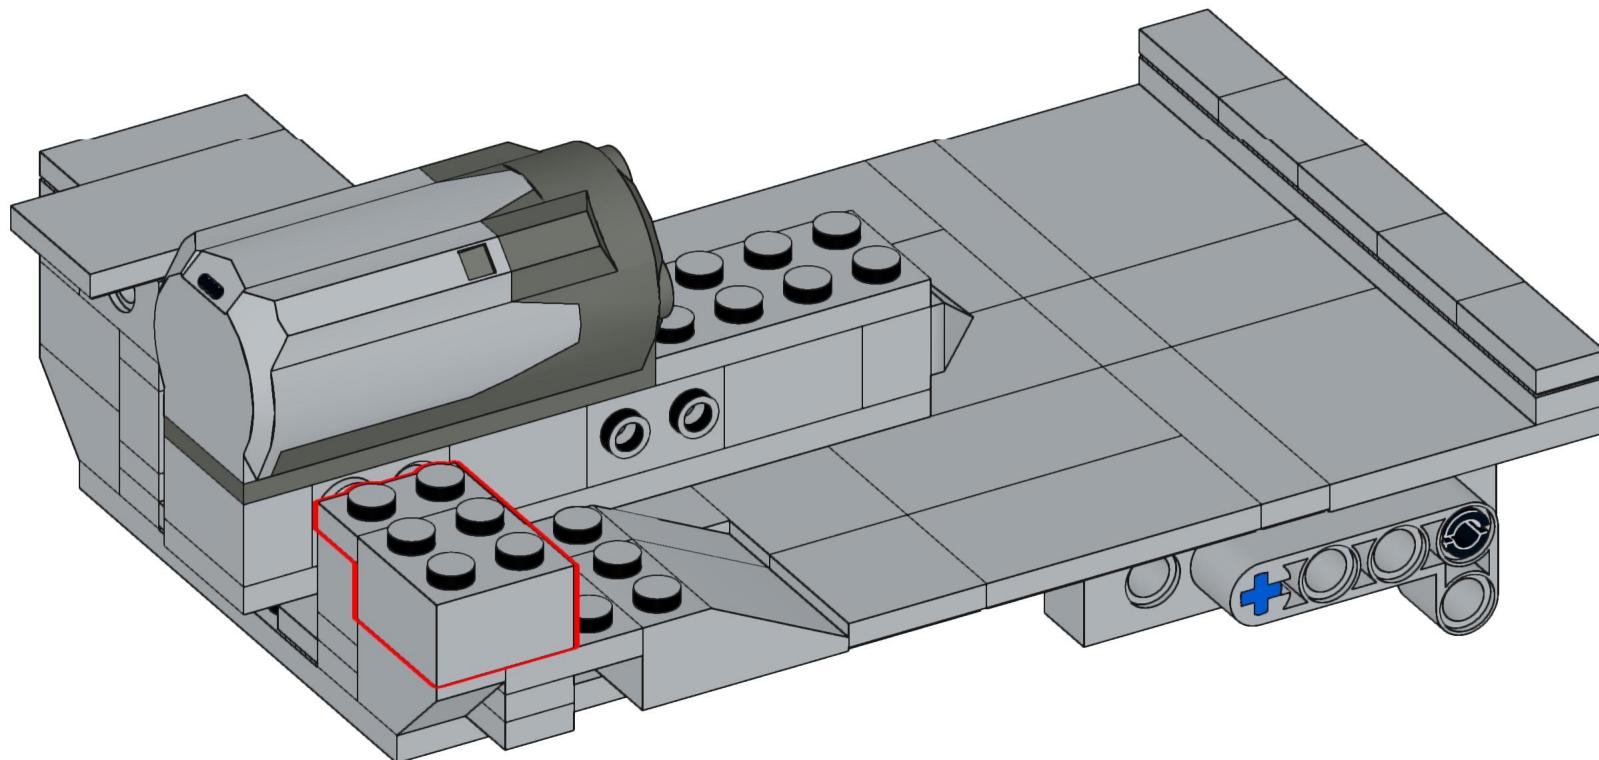



# 45

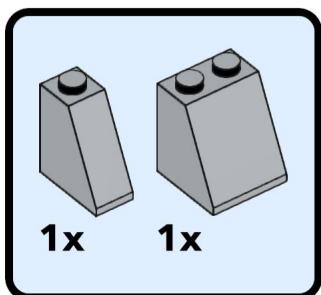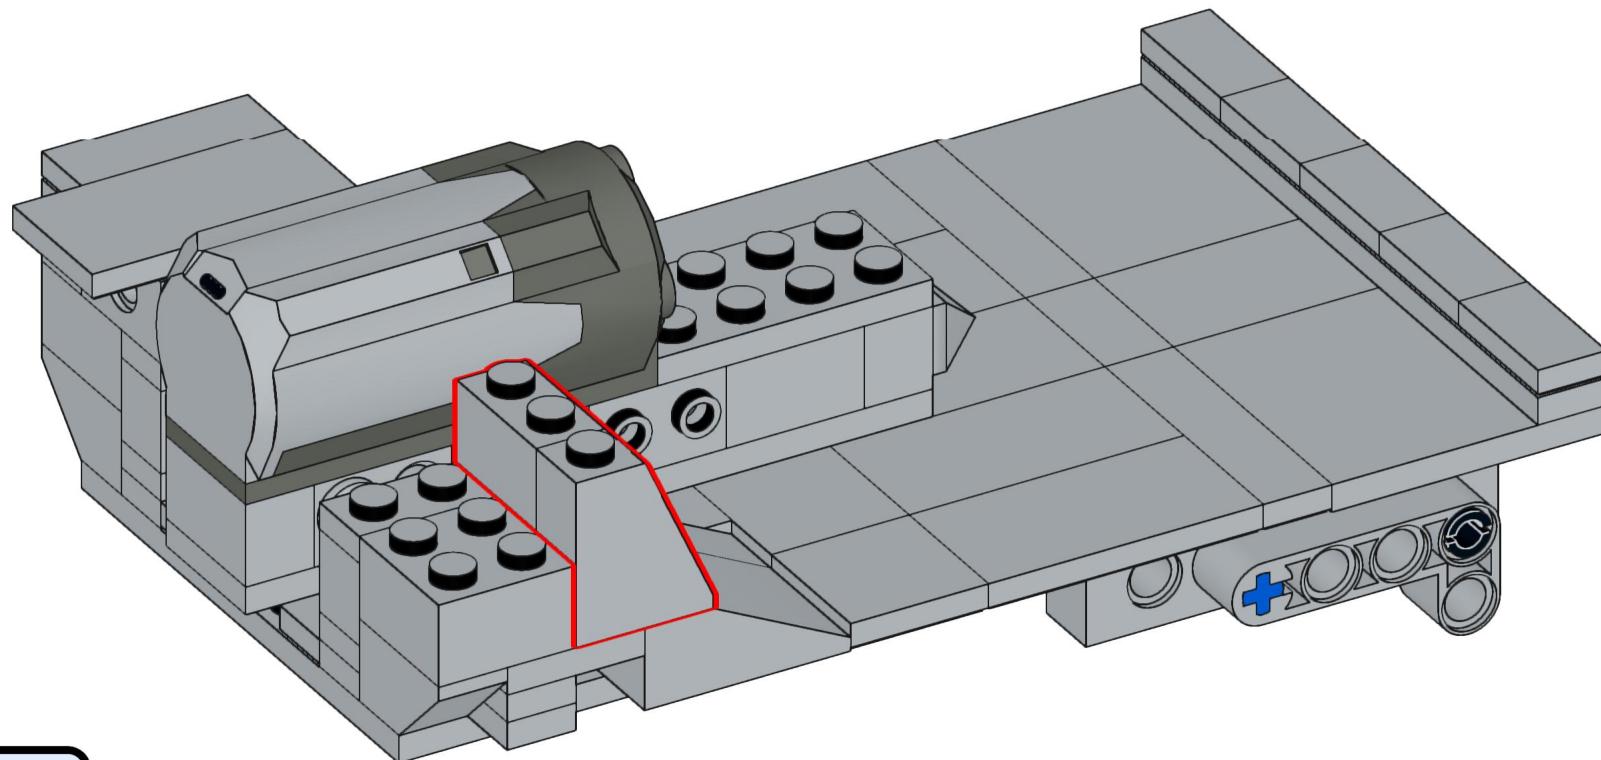




# 46

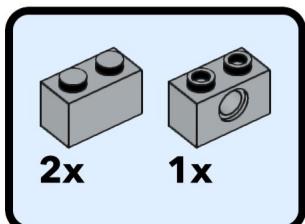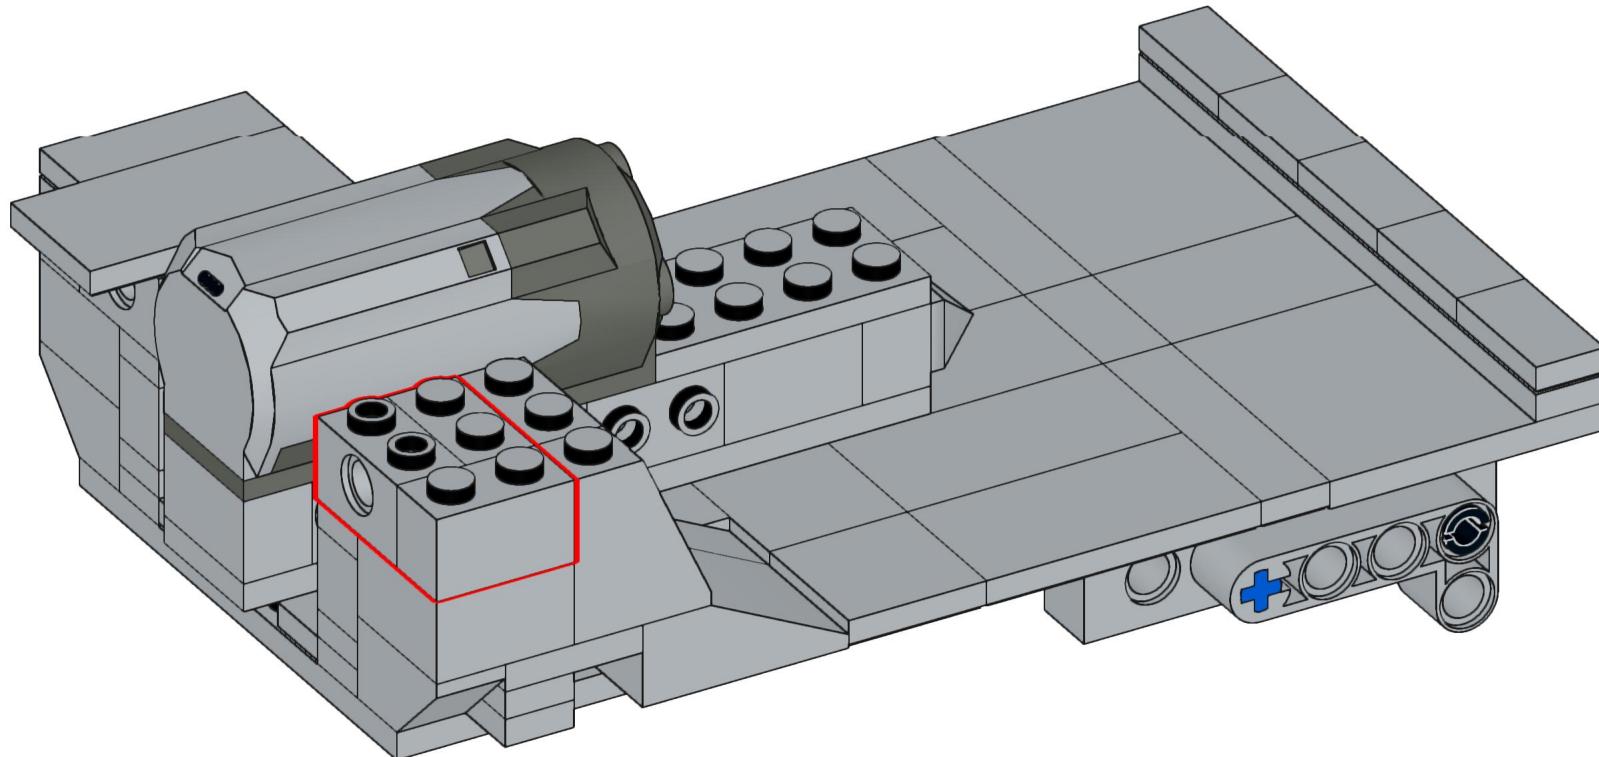



**47**

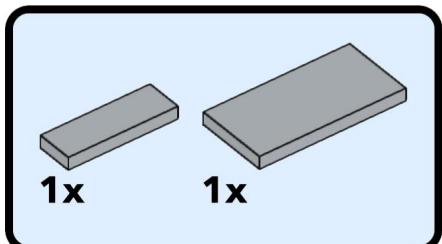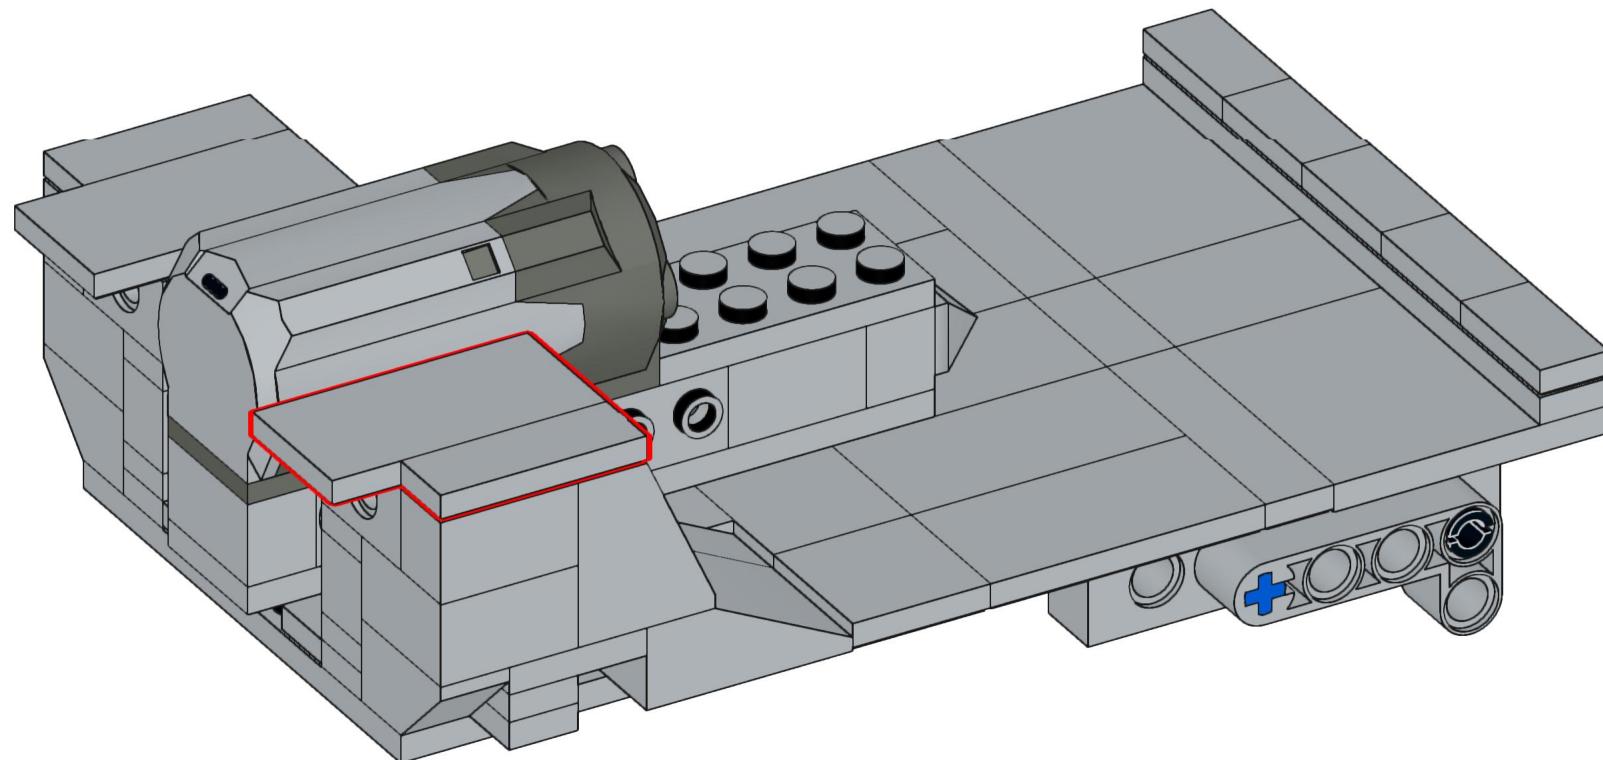



# 48

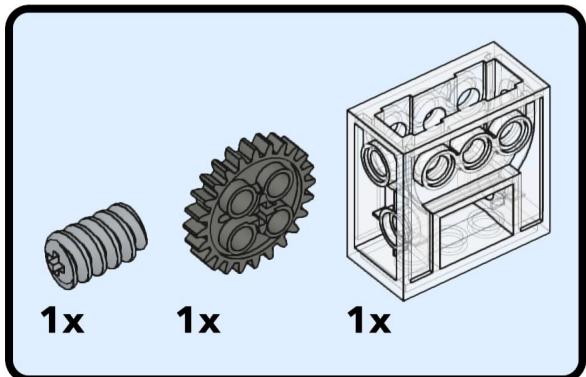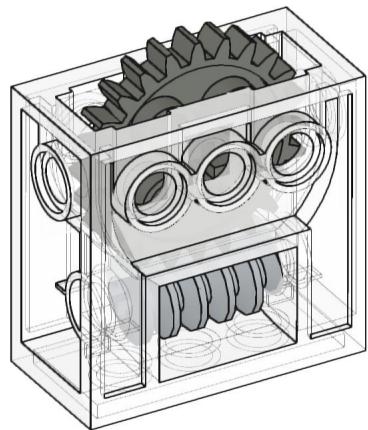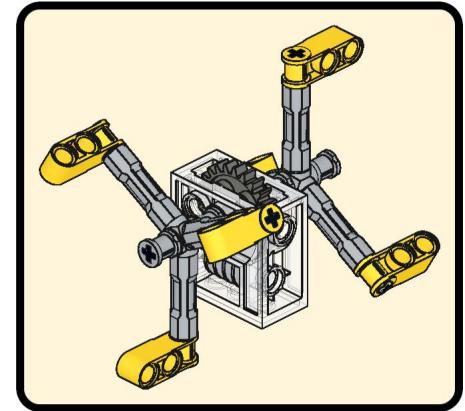



**49**

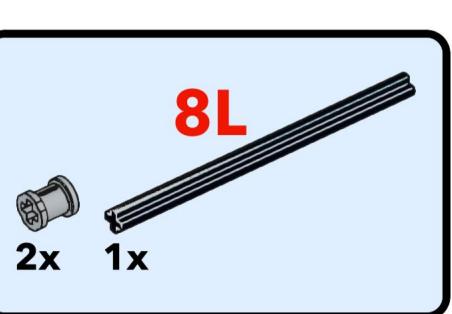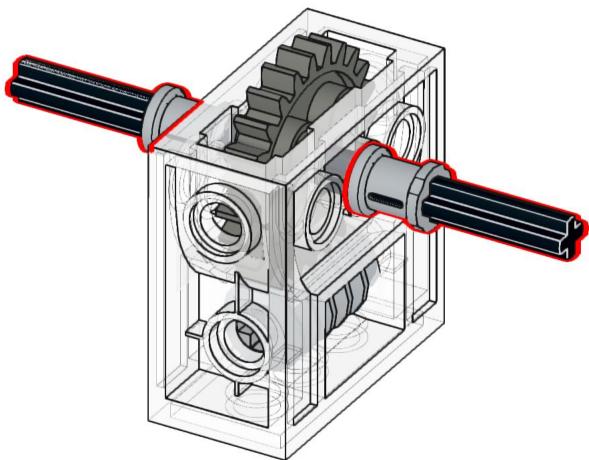

**50**

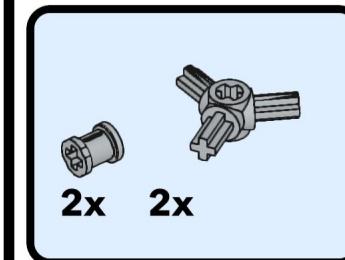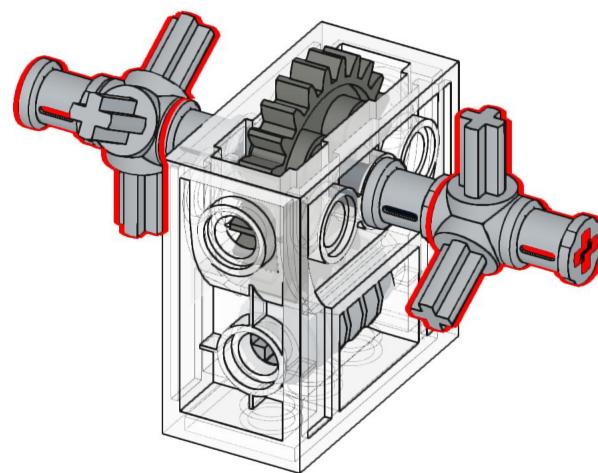


**51**

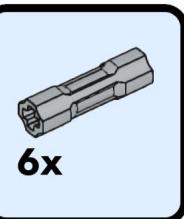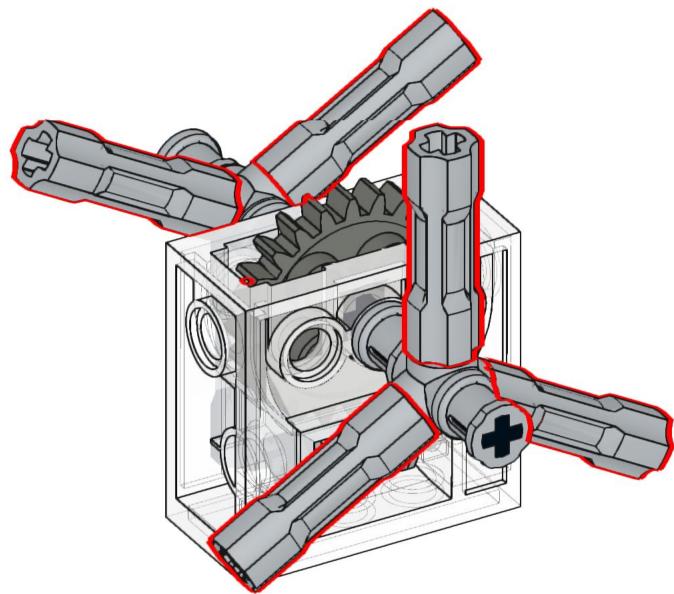

**6x**



**52**

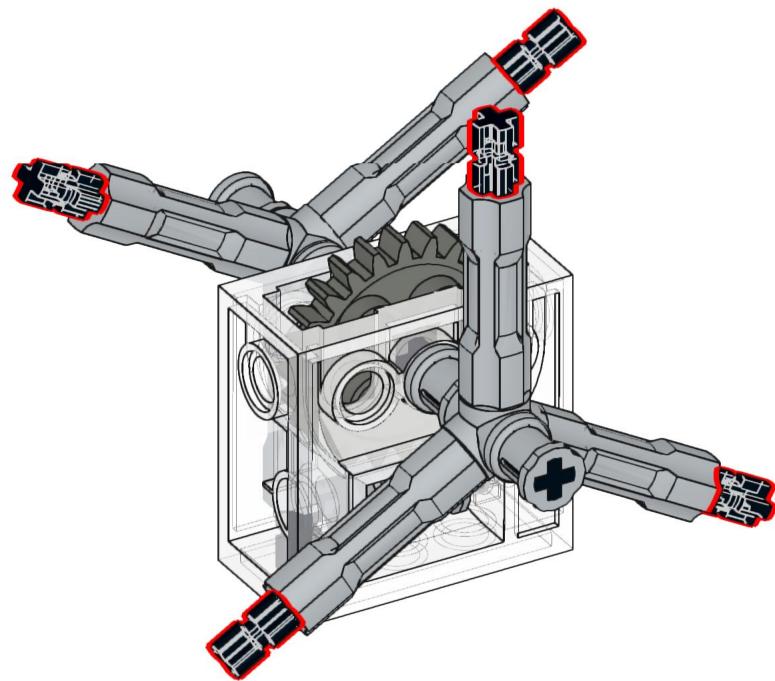

**2L**


**6x**

**53**

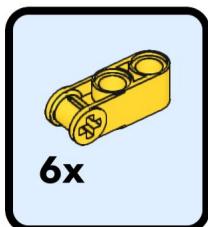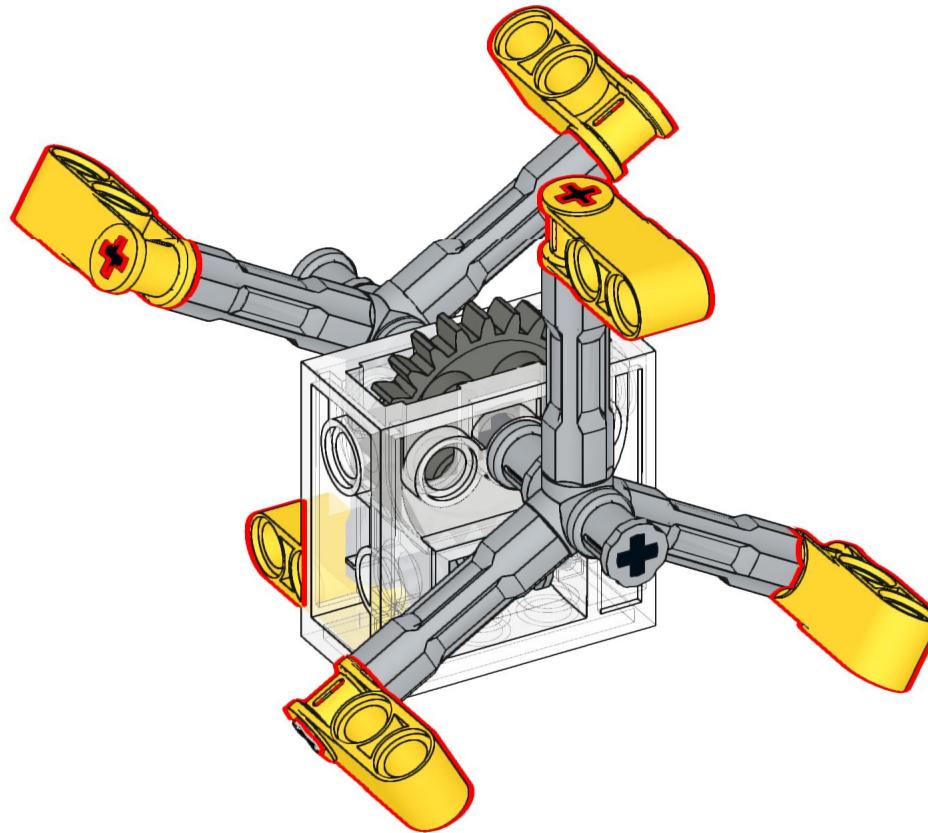


**6x**


# 54

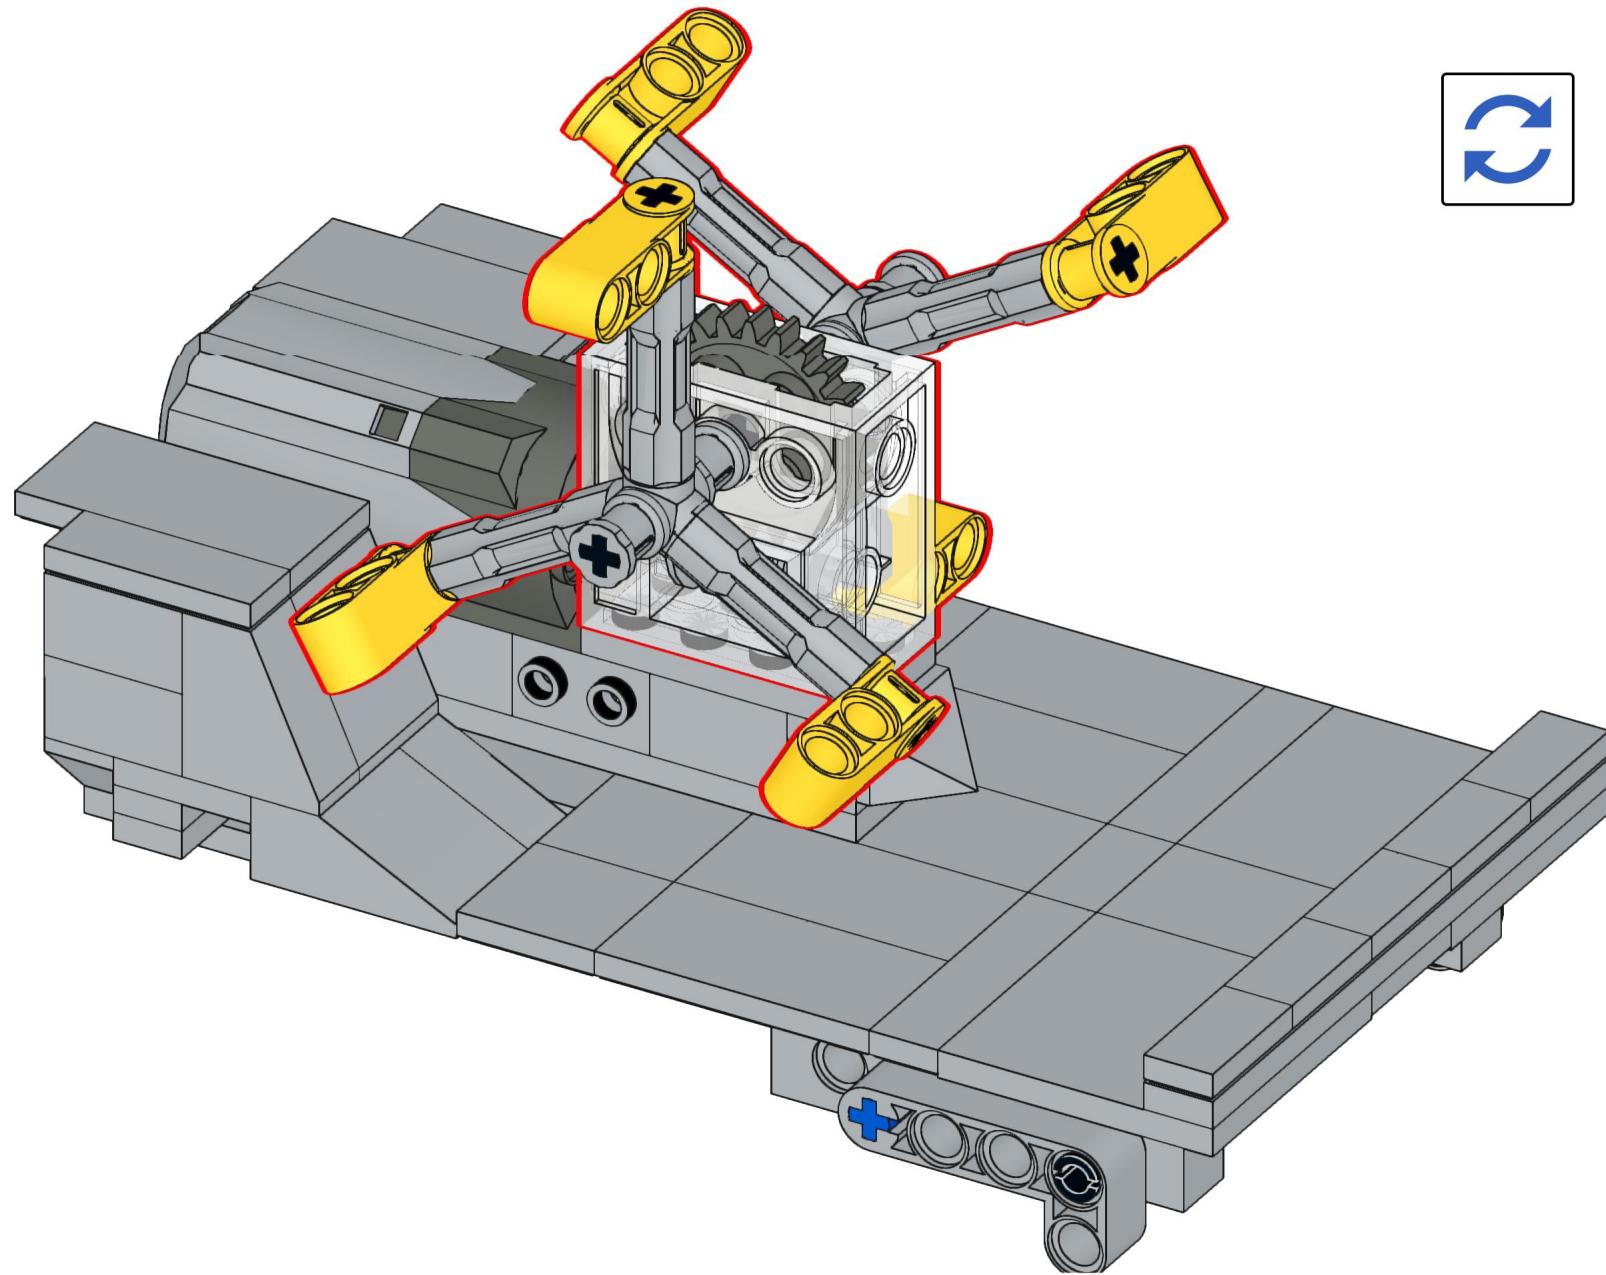

**55**

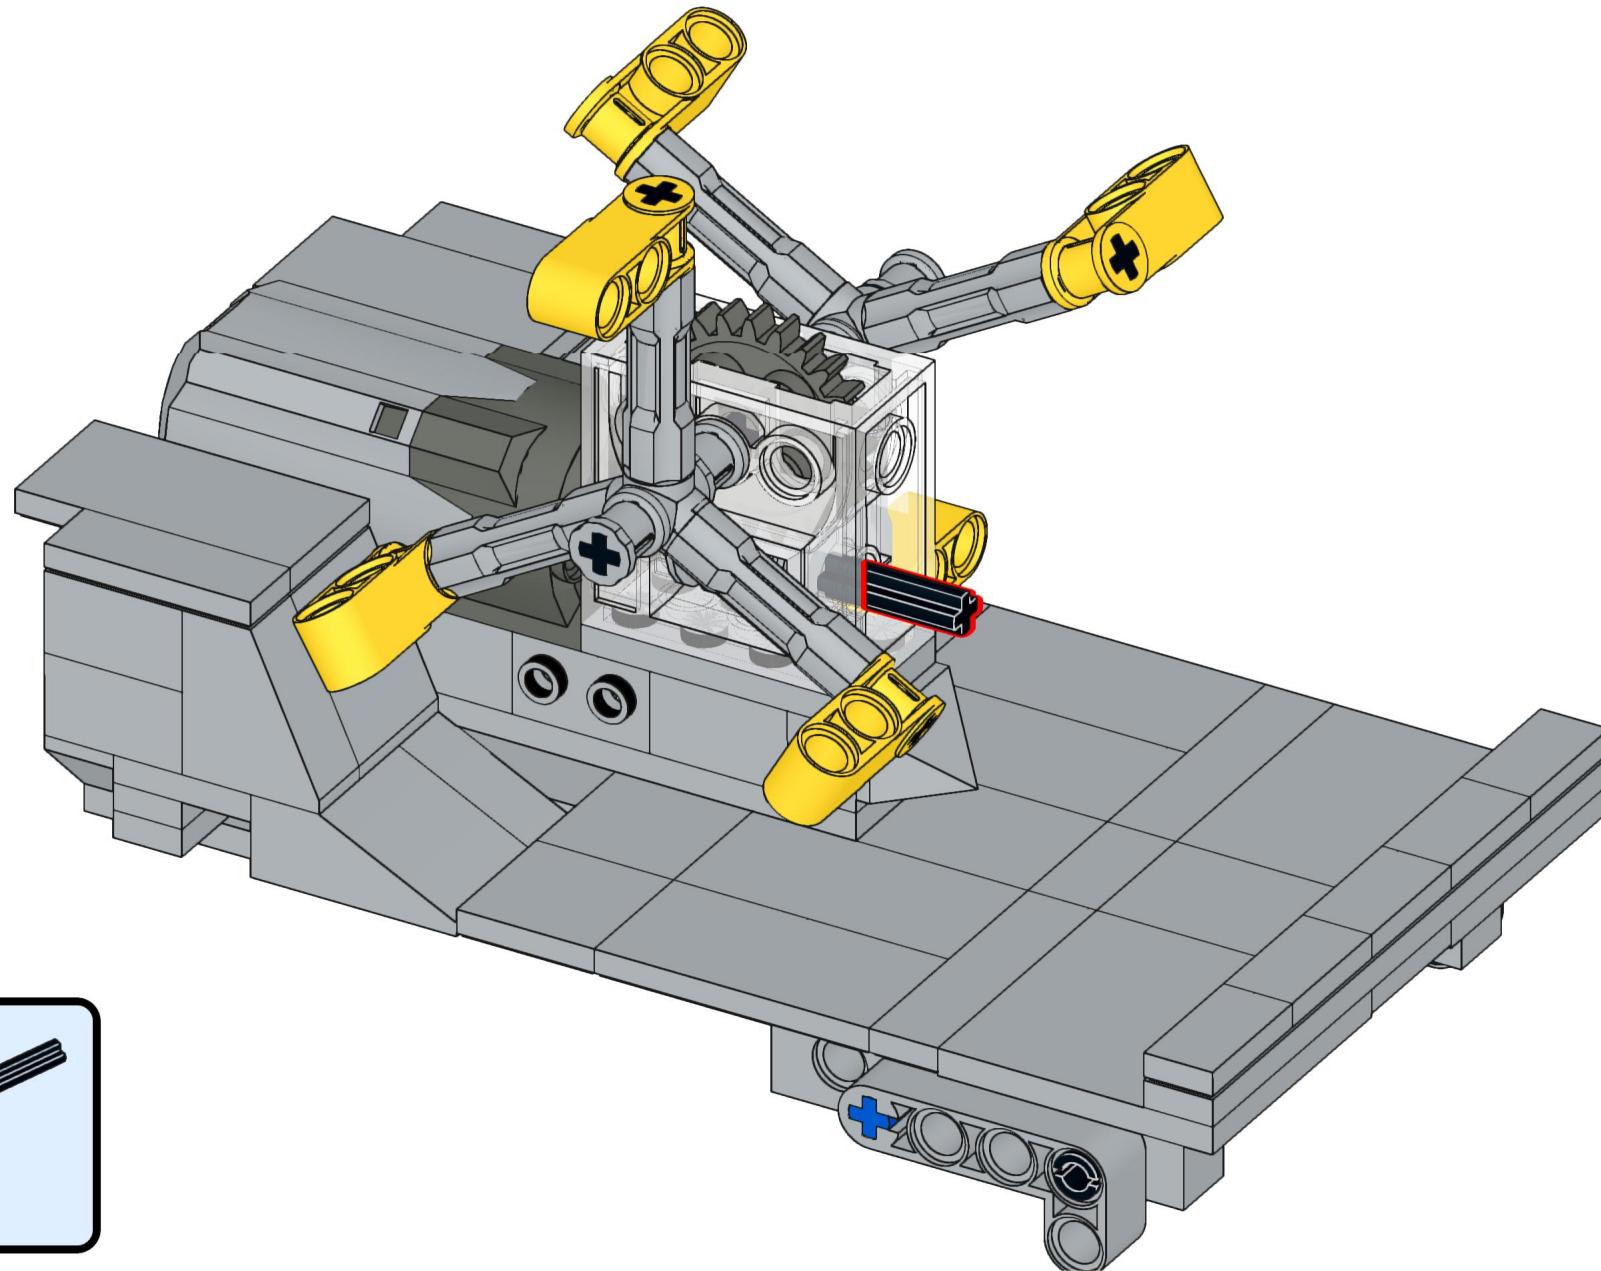


**56**

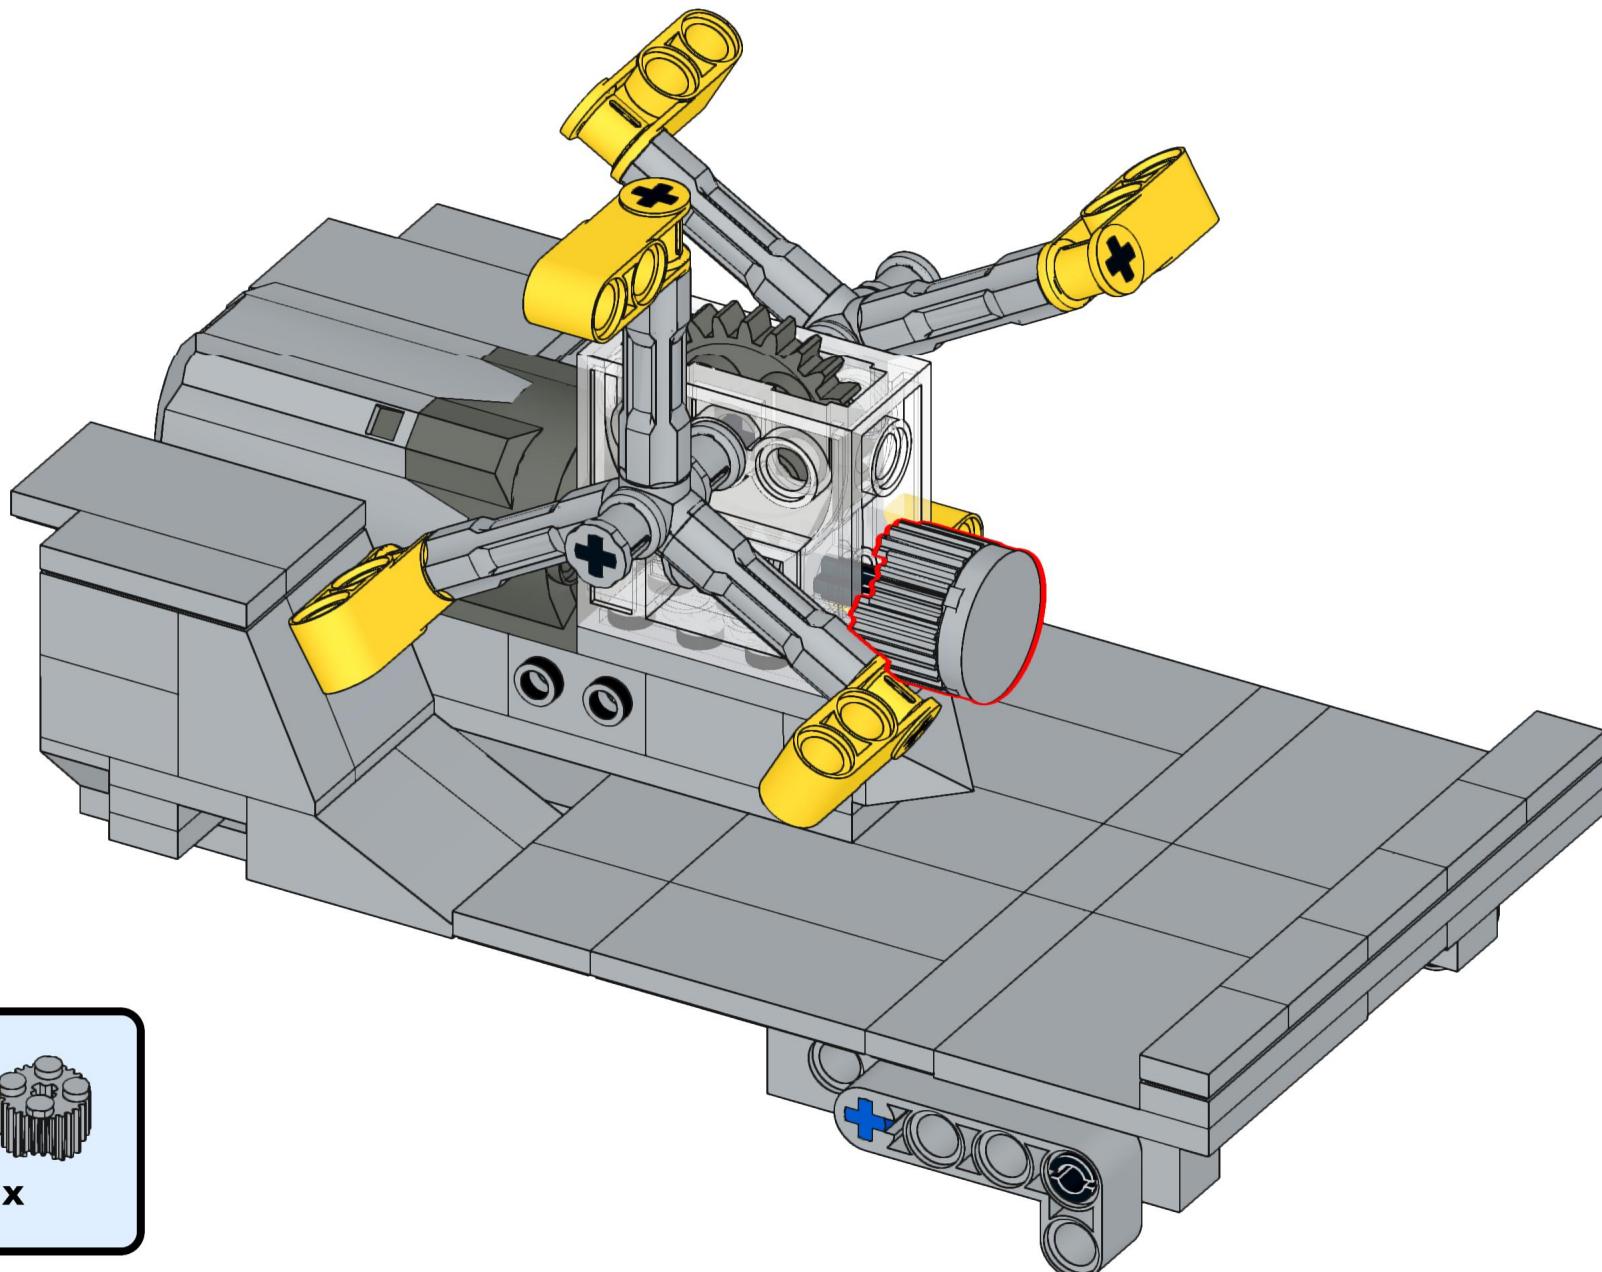


# 57

Place completed upper deck on base. The motor cable should be hanging below the upper deck.


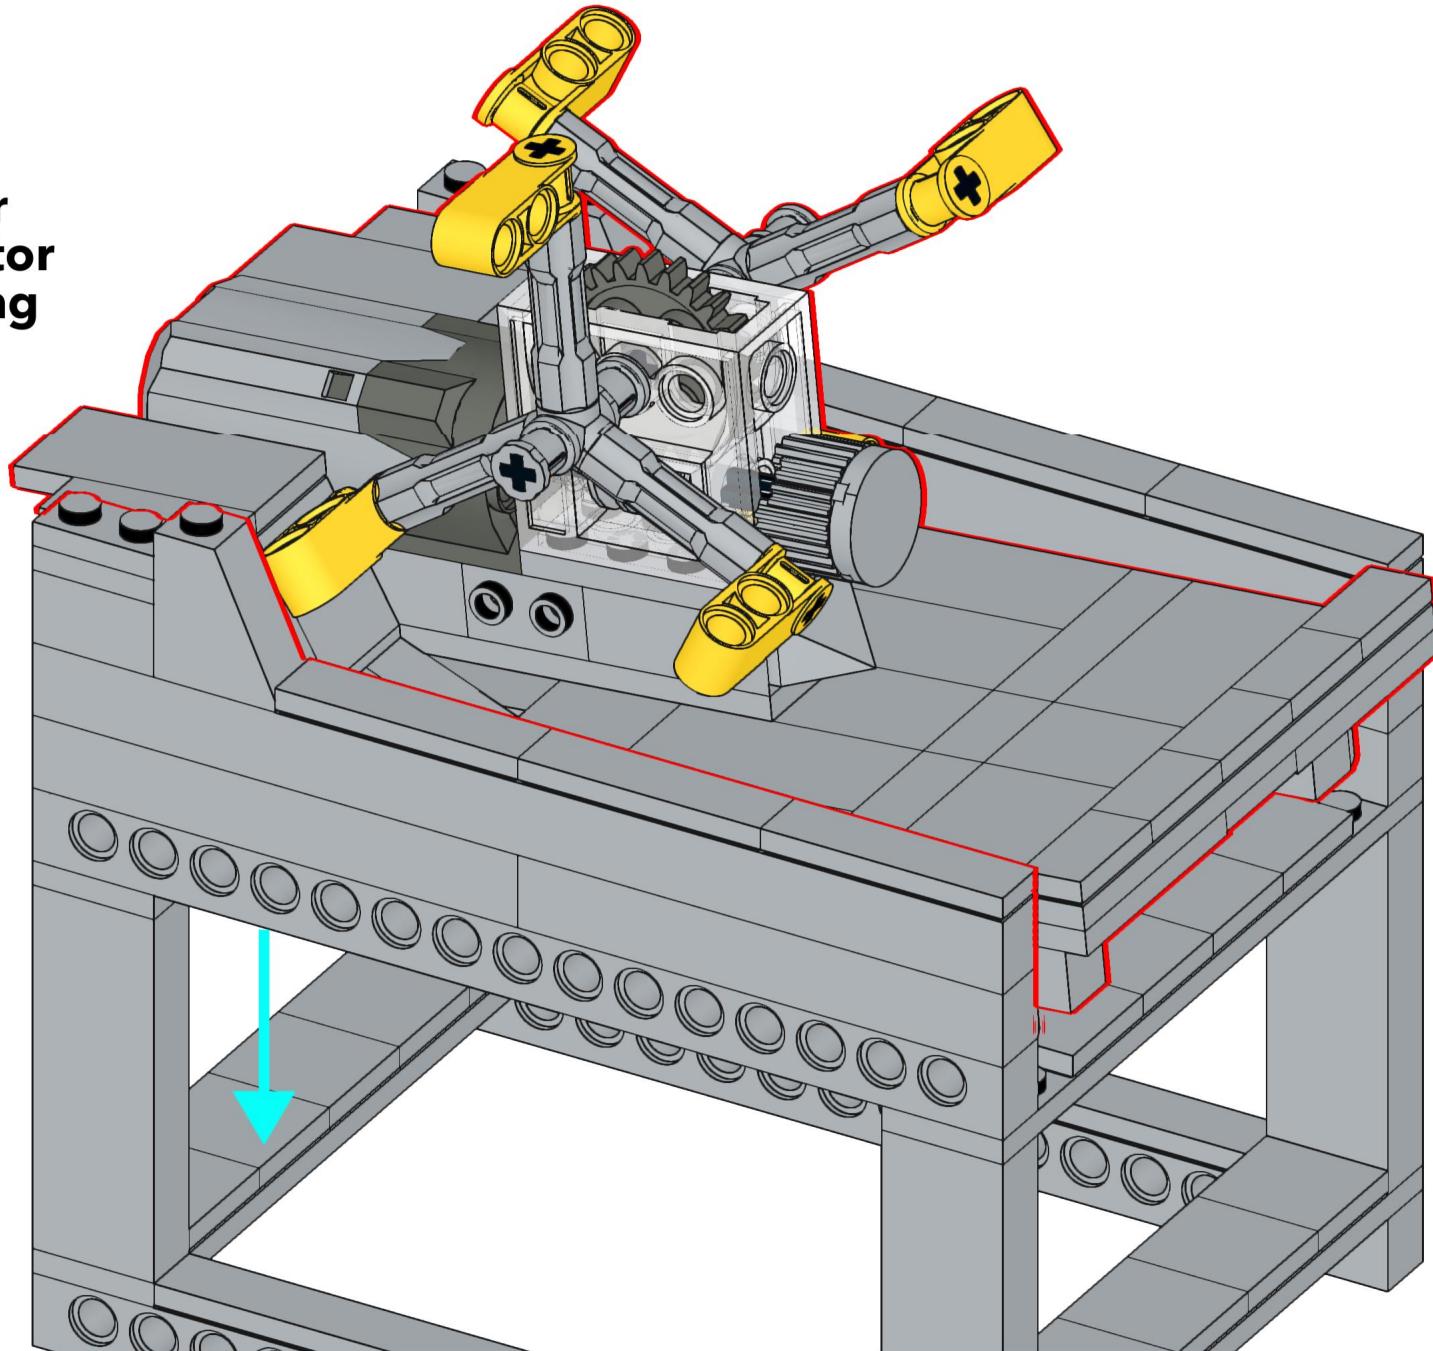


# 58



**Secure upper deck with 3L pins connected to the small L-beams.**

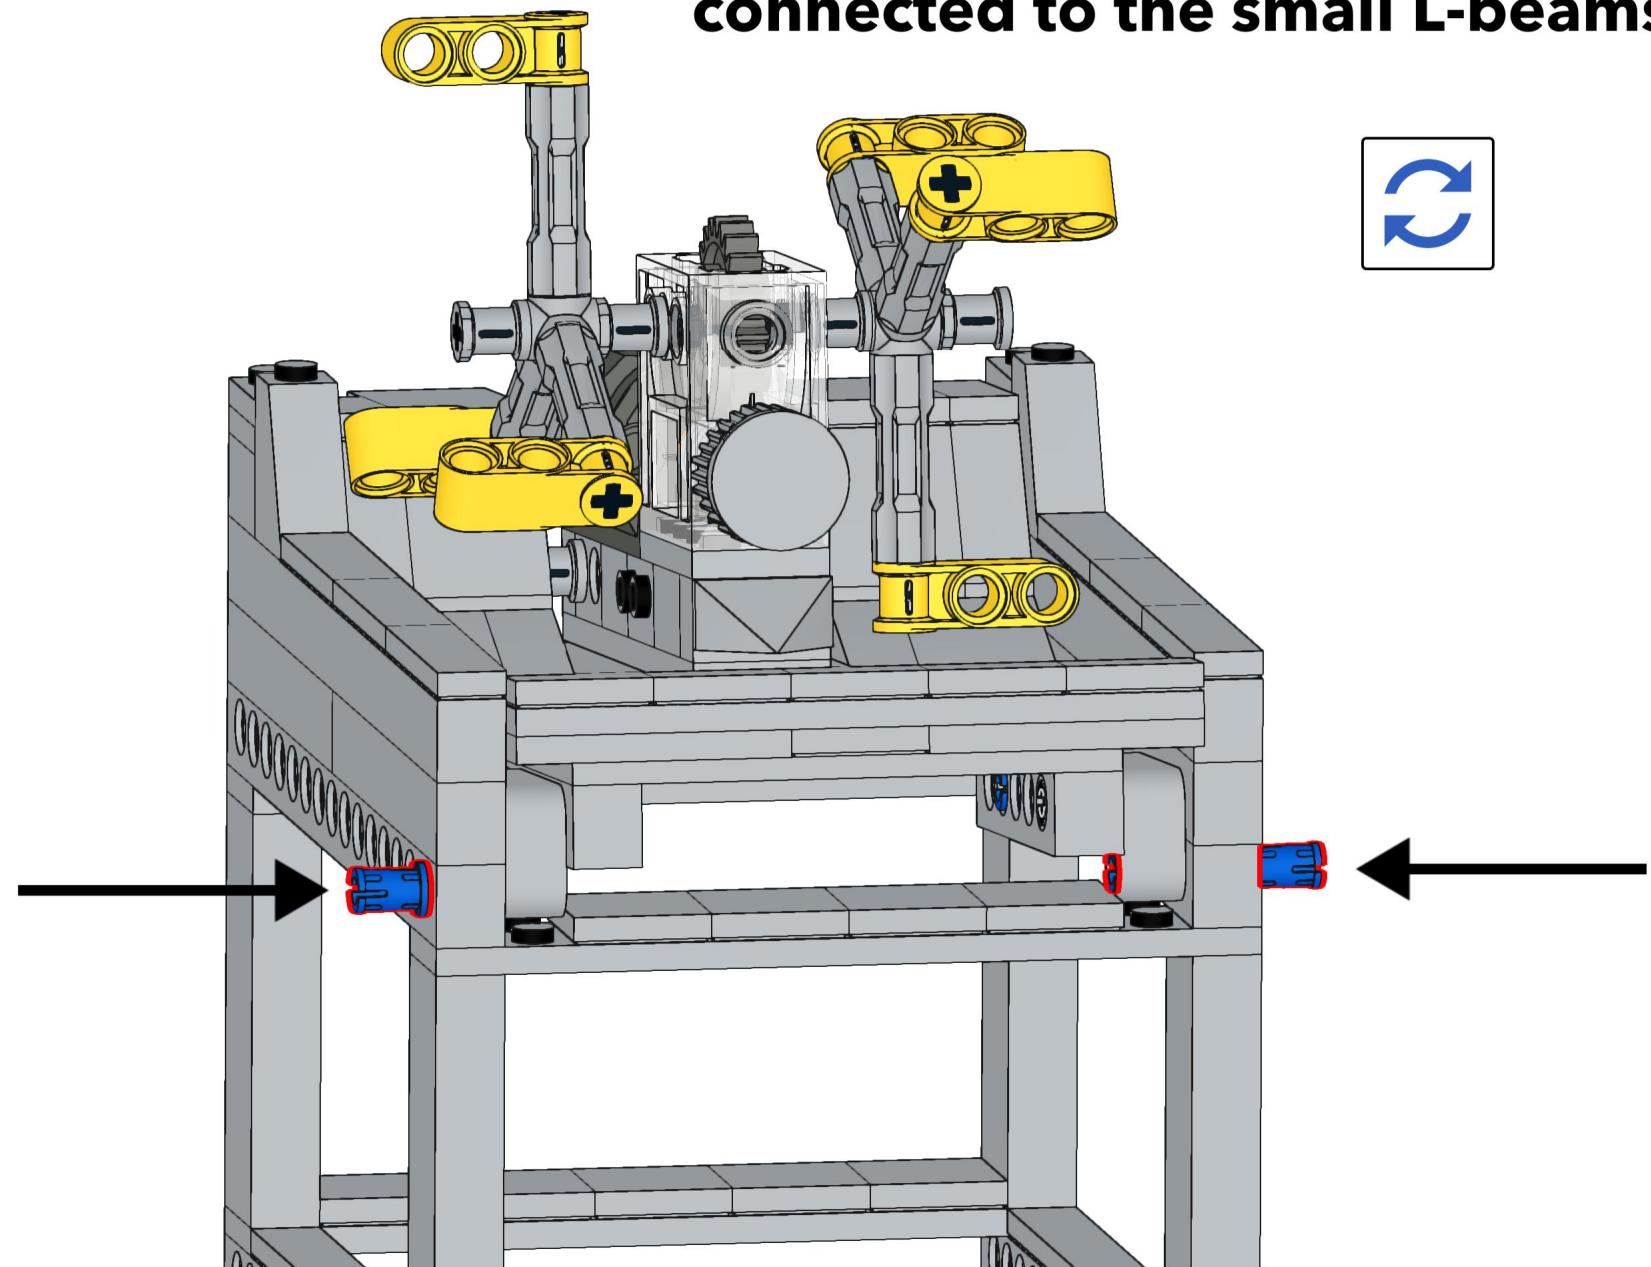


**59**

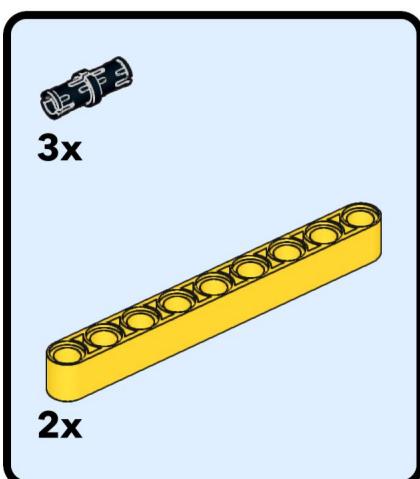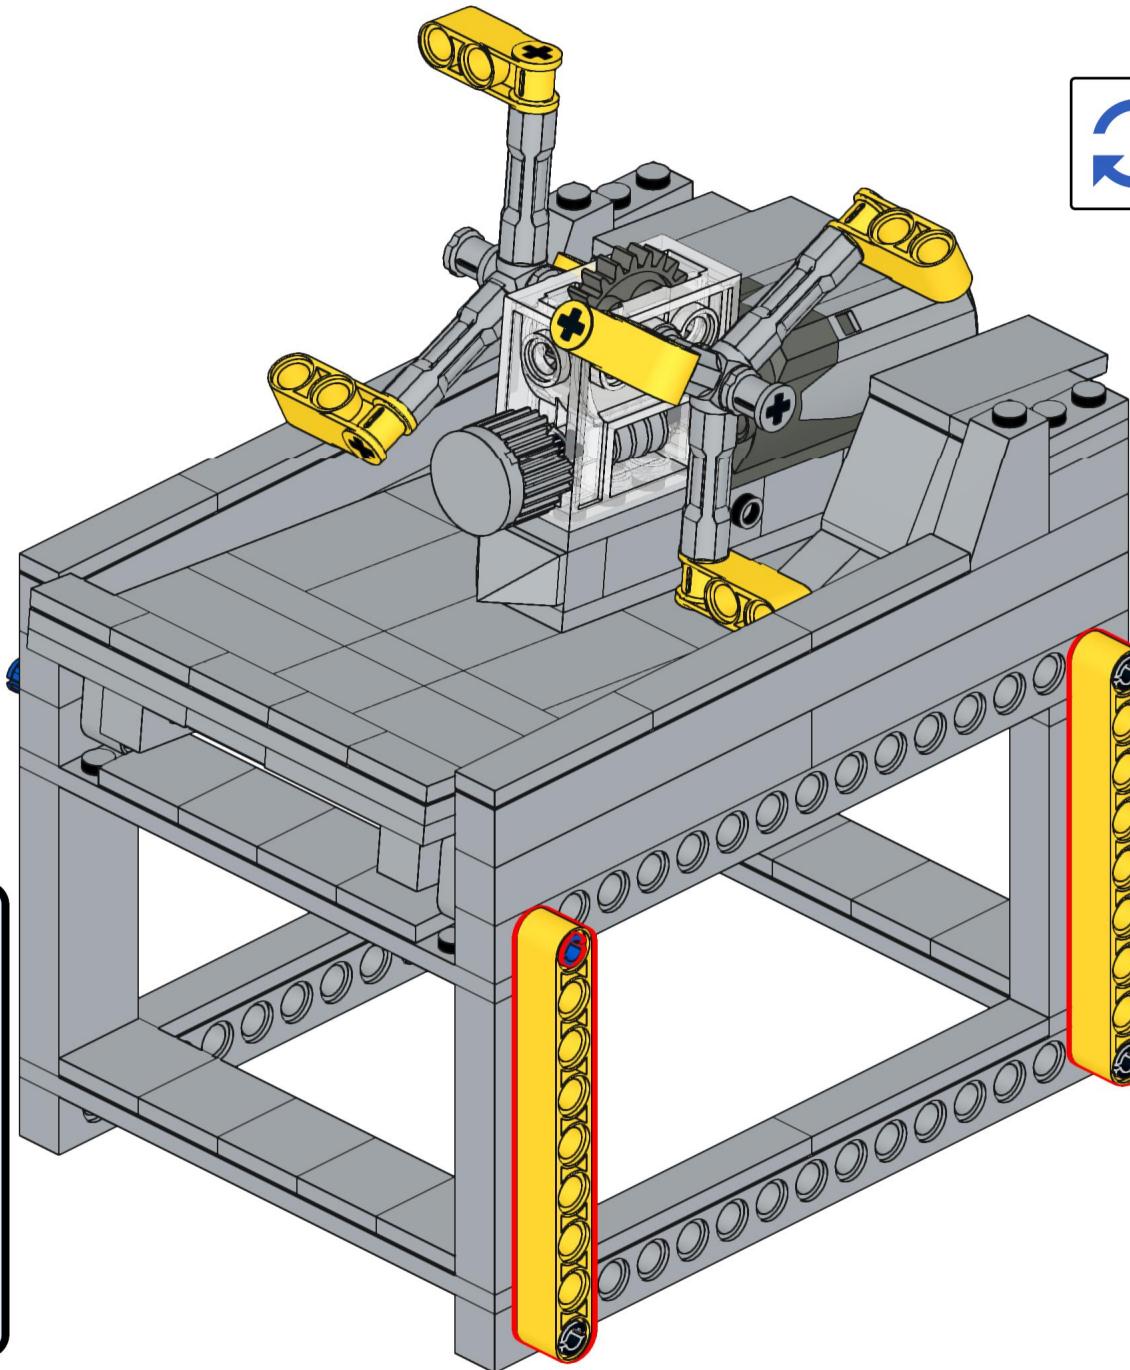


**60**

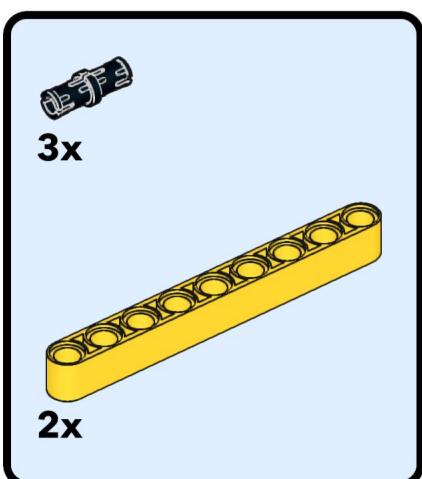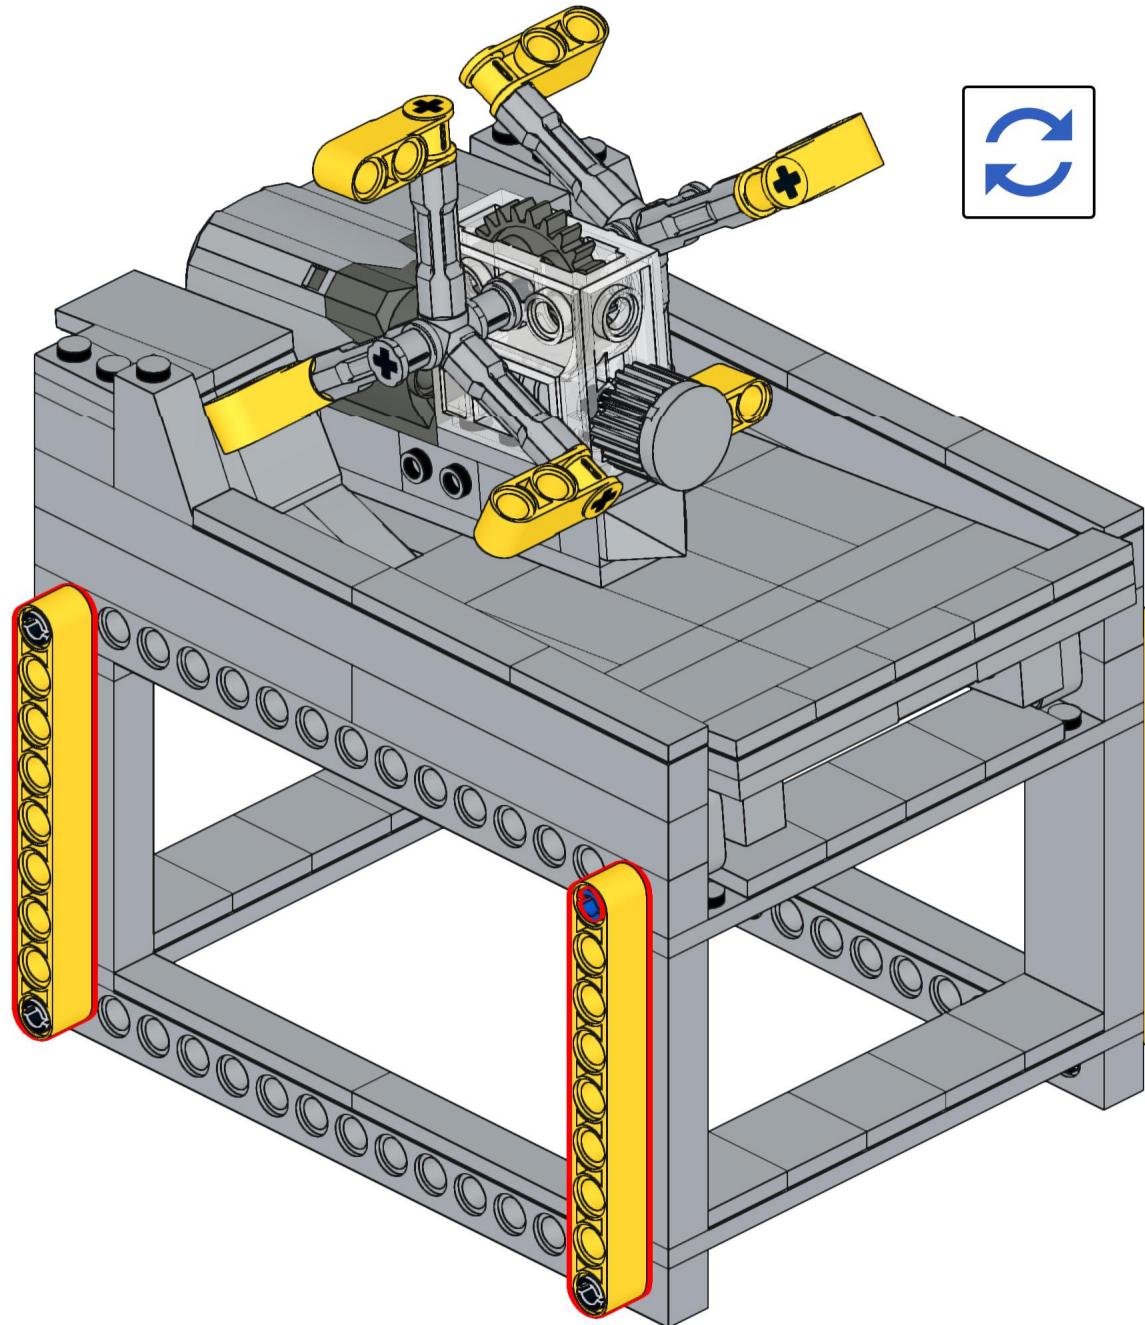


**61**

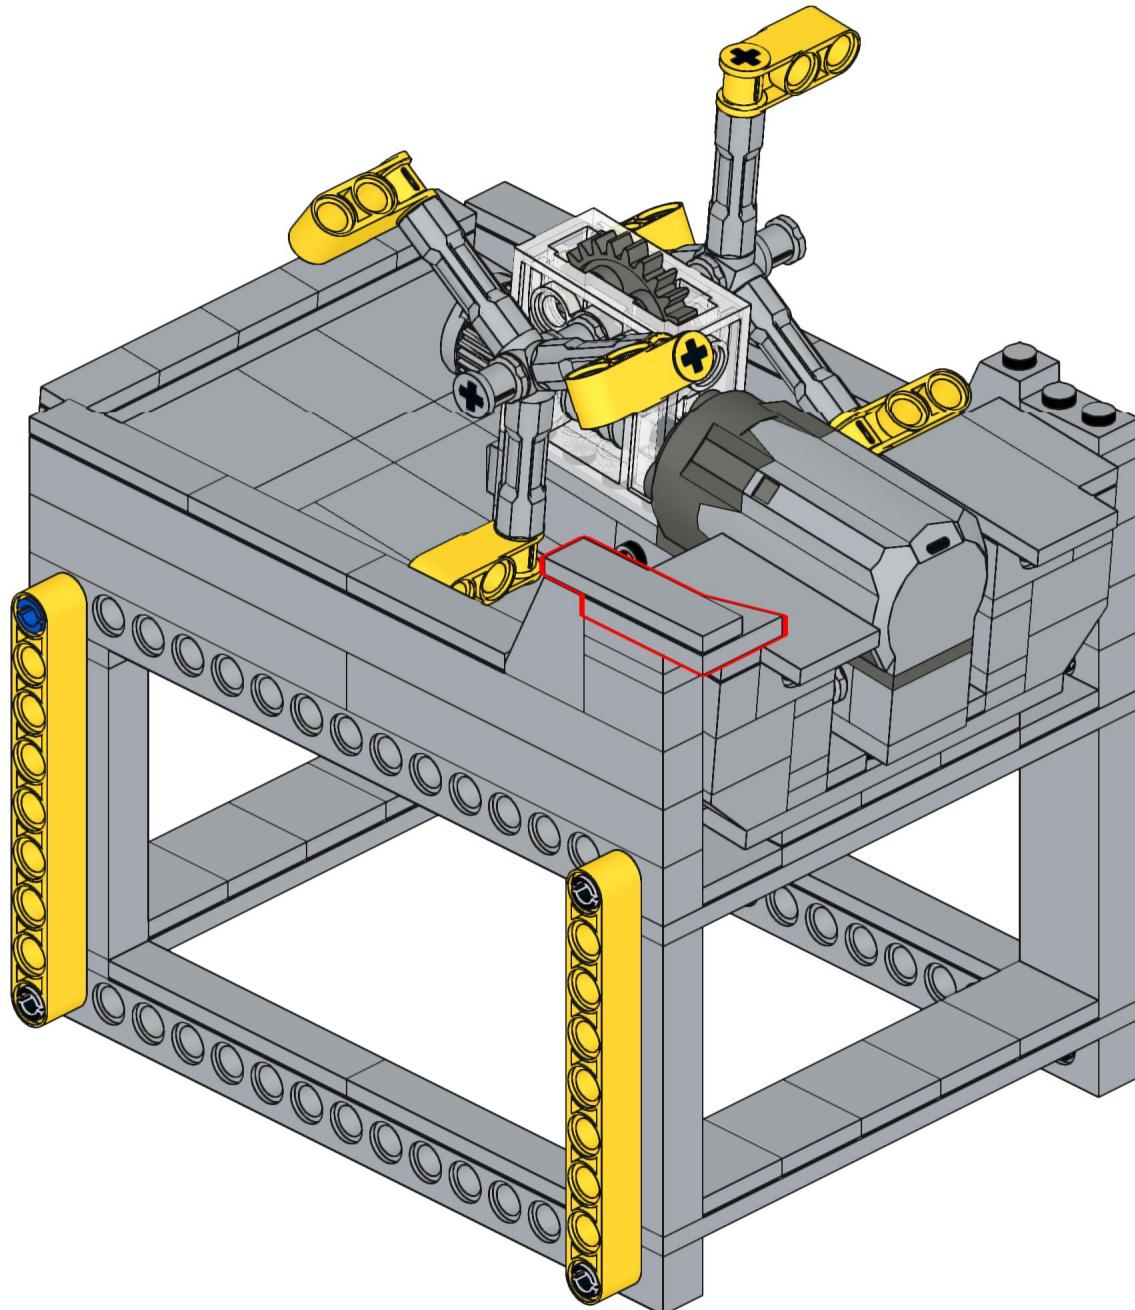





62

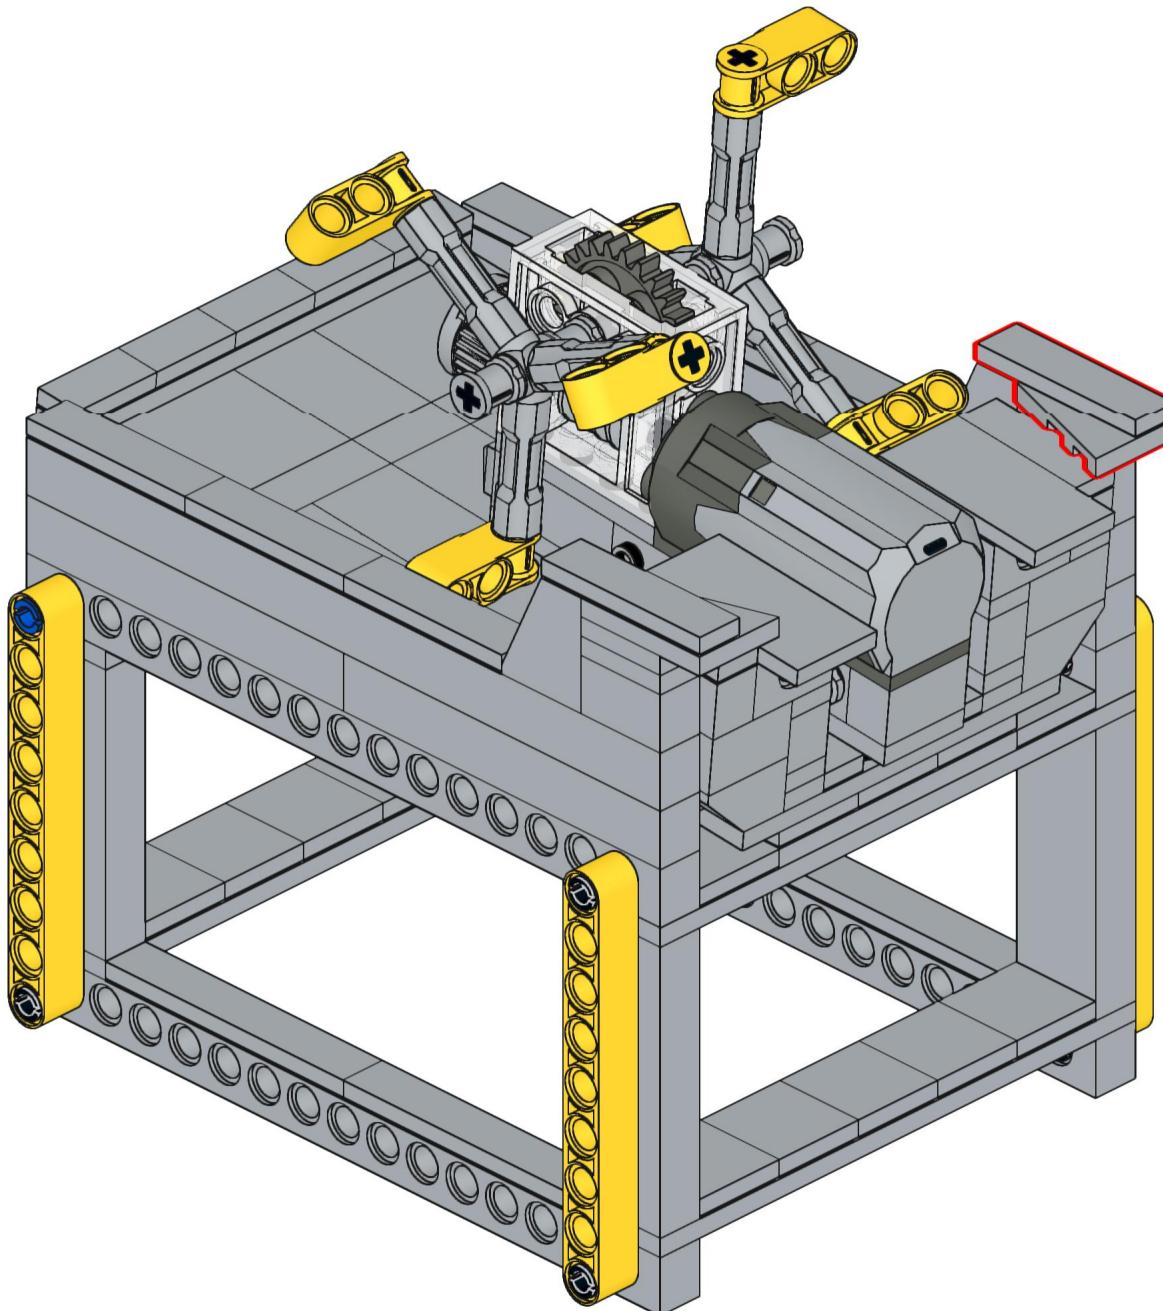



**63**

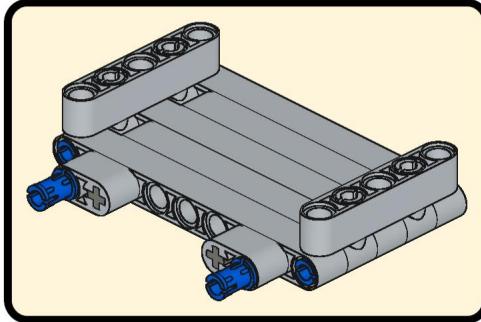



**64**

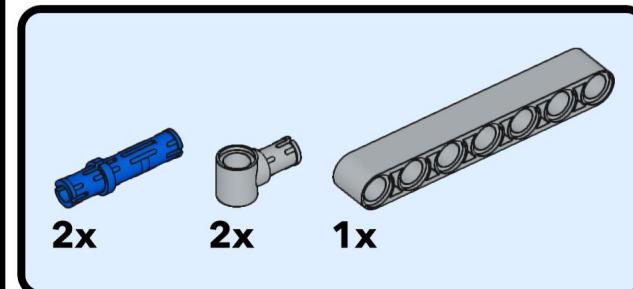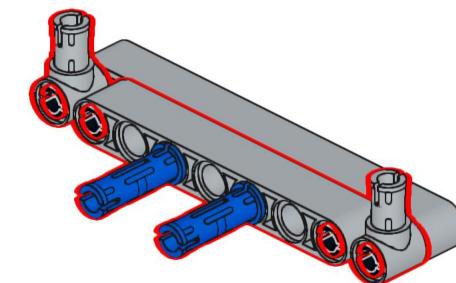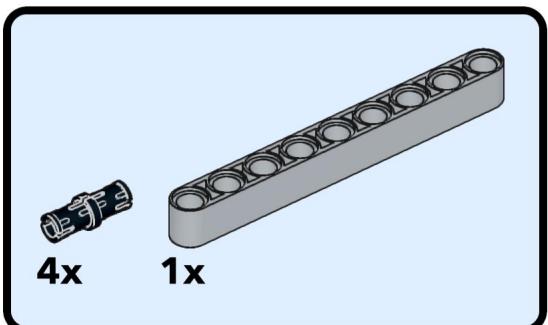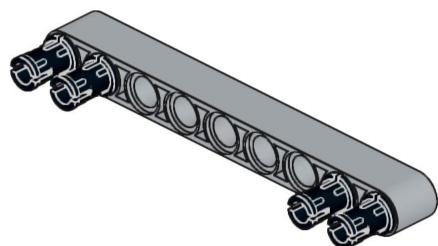



# 65

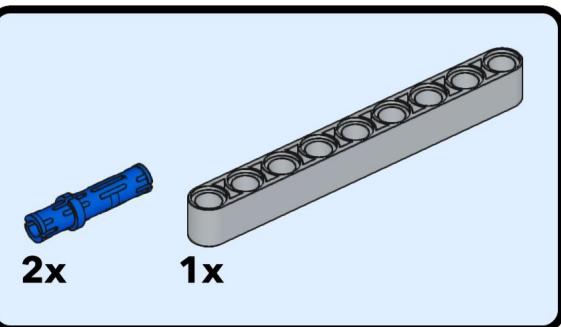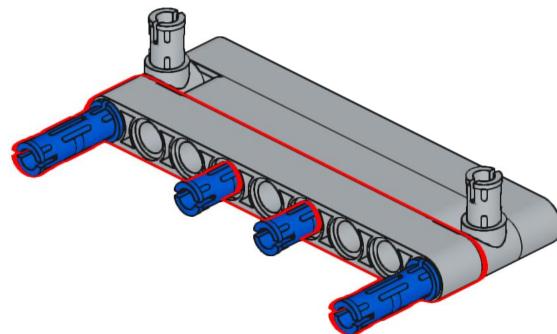



# 66

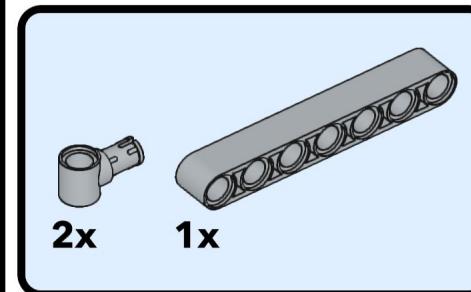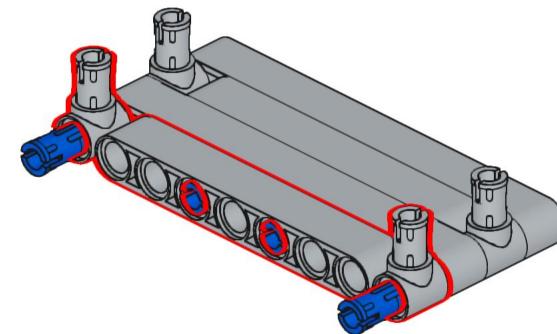



**67**

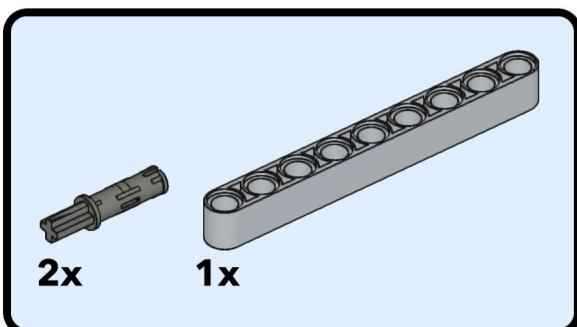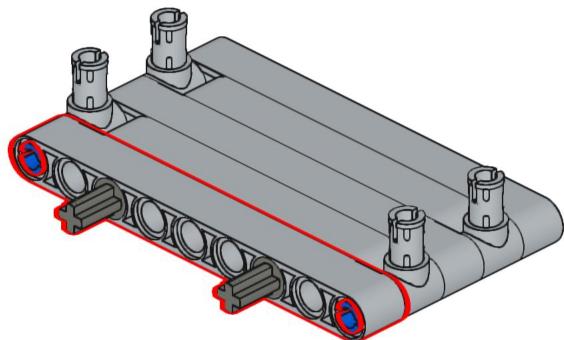

**68**

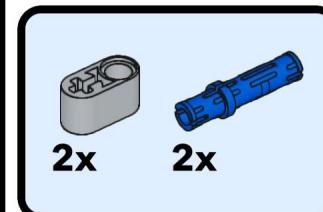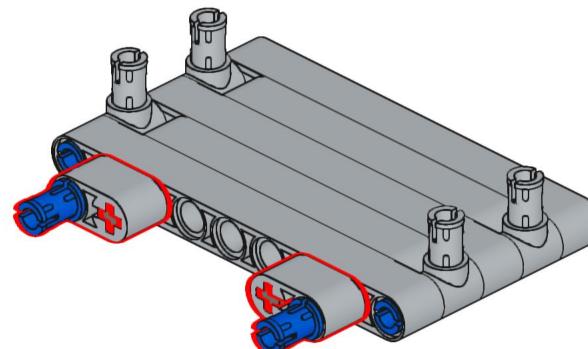


**69**

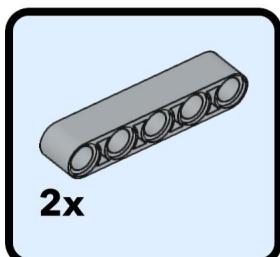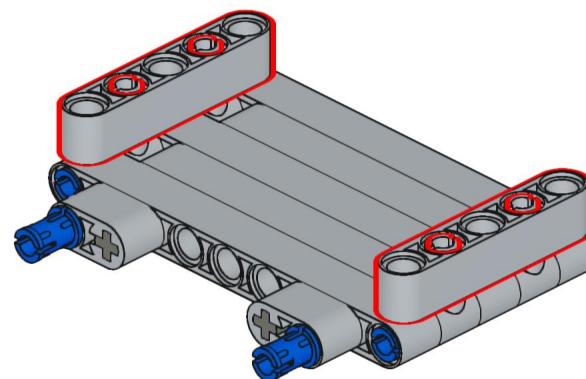

**2x**

70

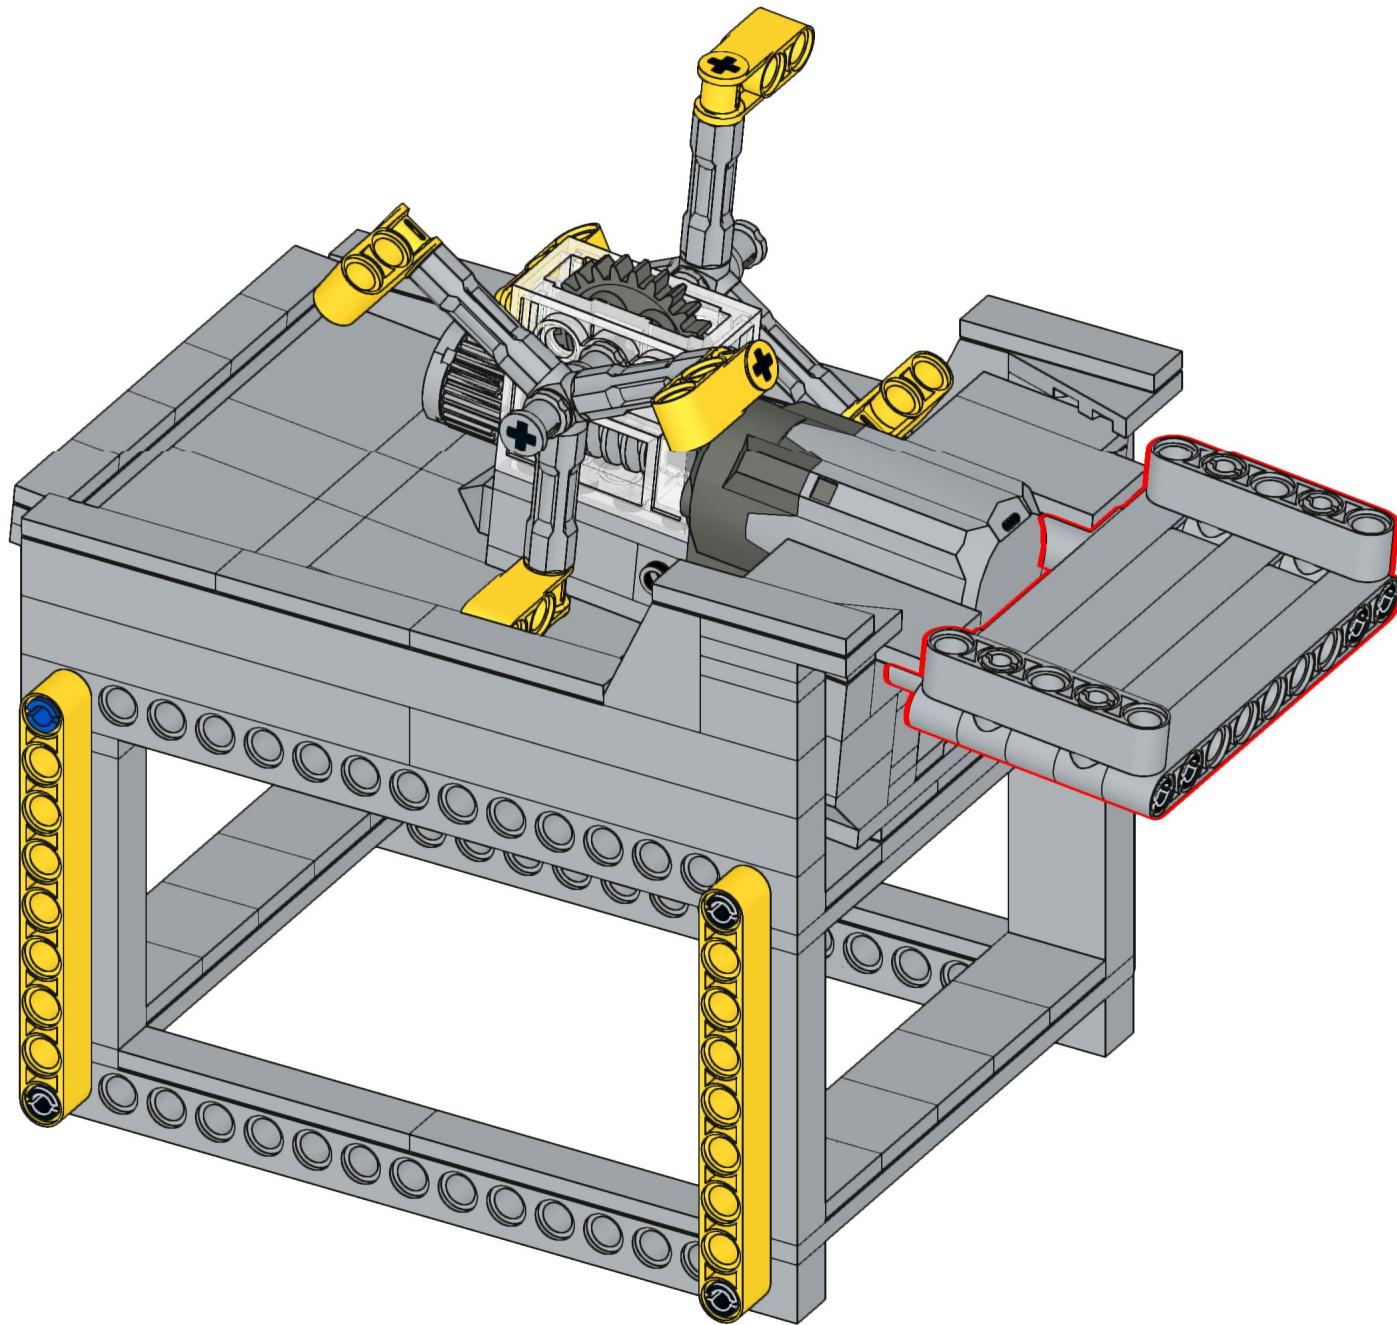

## Part Number / Color Code

 **2L**

6x  
32062, 11



12x  
2780, 11


**6L**

2x  
3706, 11

**8L**

1x  
3707, 11

   
 2x  
11214, 85

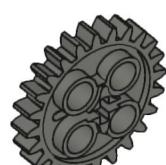

1x  
3648, 85



6x  
3713, 86



1x  
3005, 86



6x  
3069b, 86




12x  
3023, 86



4x  
15100, 86



2x  
60483, 86

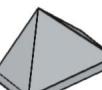

2x  
32000, 86



1x  
15571, 86




7x  
3004, 86



2x  
32064, 86



3x  
11211, 86

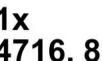

1x  
4716, 86



1x  
14769, 86



2x  
3700, 86



1x  
3022, 86



2x  
3665, 86



23x  
3068b, 86



1x  
92947, 86



2x  
4286, 86



2x  
63864, 86



1x  
43723, 86



5x  
3003, 86



1x  
43722, 86



6x  
26287, 86




2x  
3678b, 86



4x  
60481, 86




2x  
32140, 86

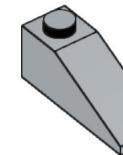

2x  
3298, 86



1x  
3020, 86

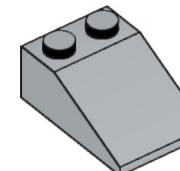


2x  
32316, 86



2x  
57585, 86




10x  
2431, 86

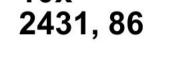


8x  
87079, 86




6x  
6636, 86

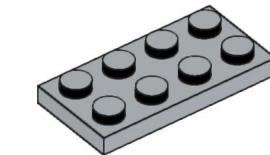


1x  
32316, 86

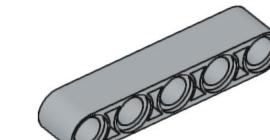


2x  
32316, 86

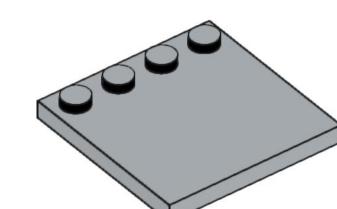


2x  
6179, 86

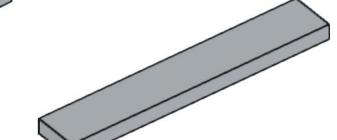


**Part Number / Color Code**

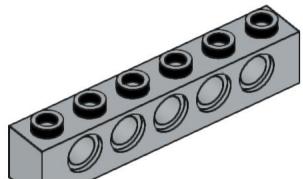


**2x  
3894, 86**

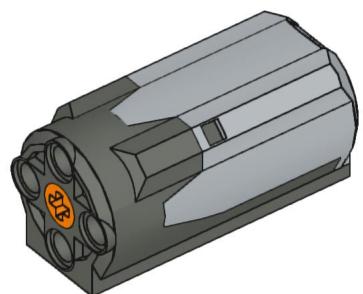

**1x  
58120c01, 86**

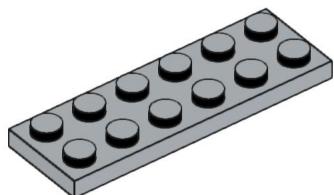


**1x  
3795, 86**

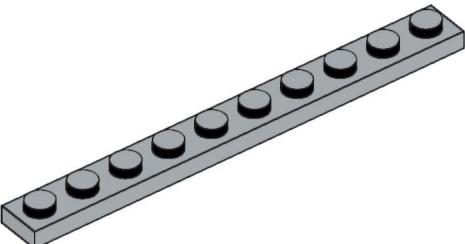


**1x  
4477, 86**




**4x  
2454, 86**

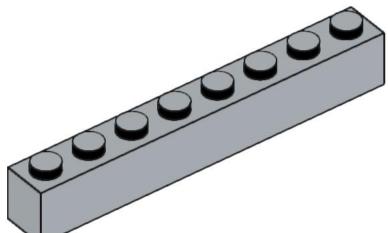


**4x  
3008, 86**

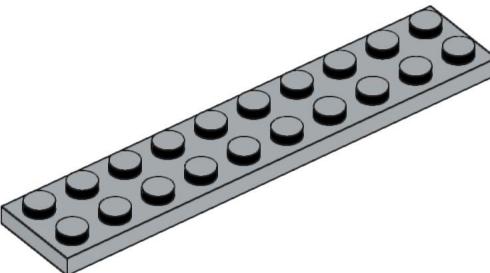


**1x  
3832, 86**

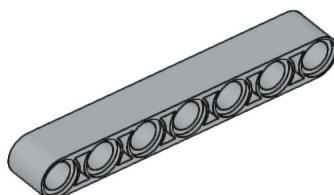

**2x  
32524, 86**

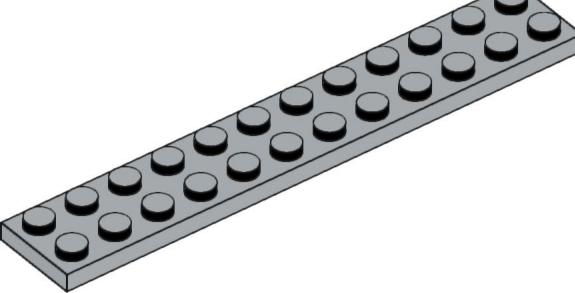


**4x  
2445, 86**

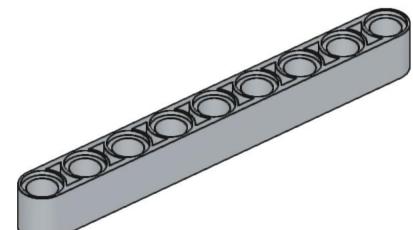


**3x  
40490, 86**


## Part Number / Color Code

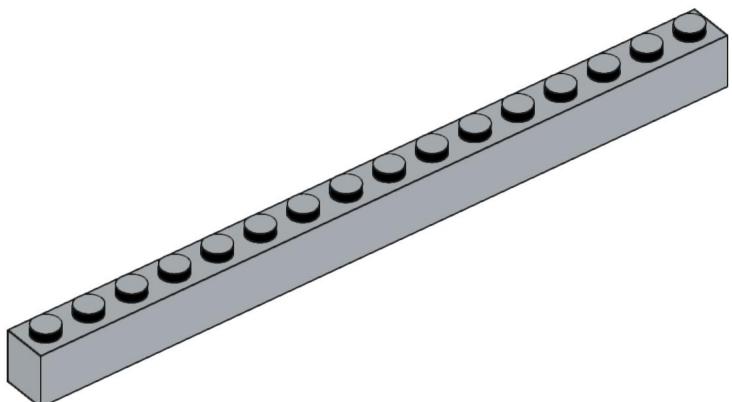

2x  
2465, 86

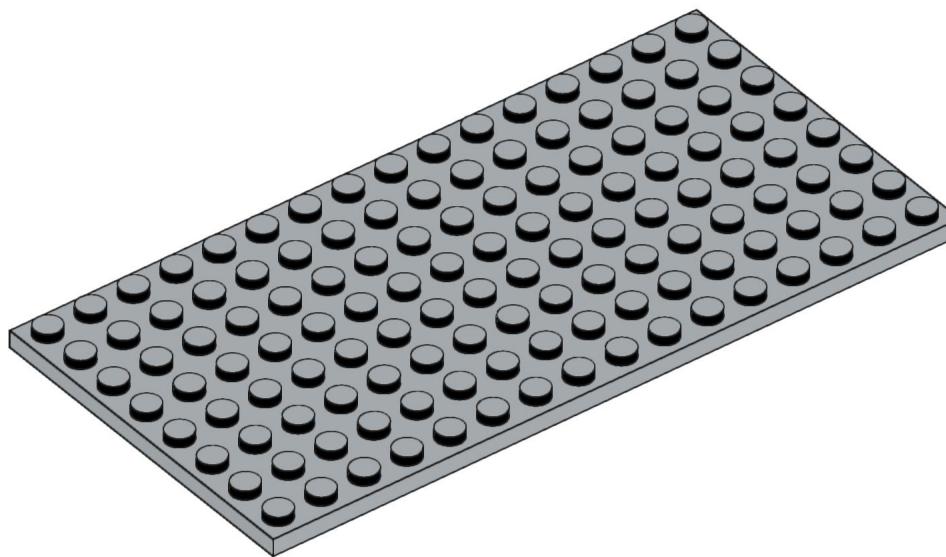


1x  
92438, 86

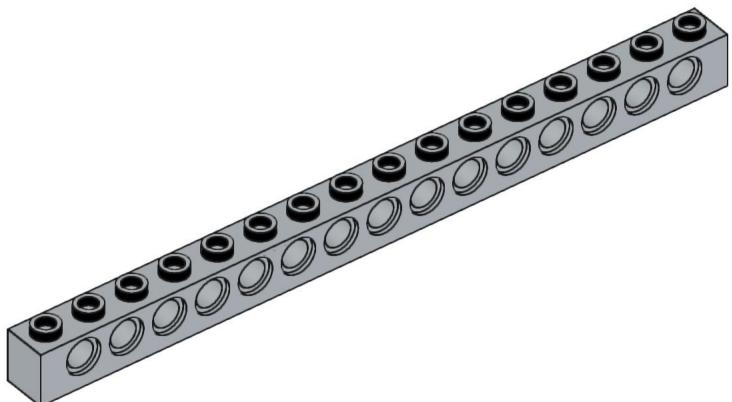

4x  
3703, 86



6x  
42003, 3

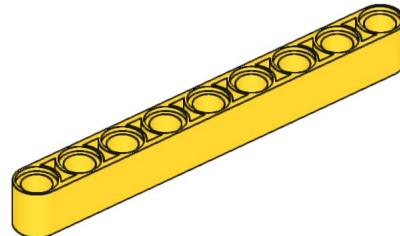


4x  
40490, 3



2x  
43093, 7



8x  
6558, 7

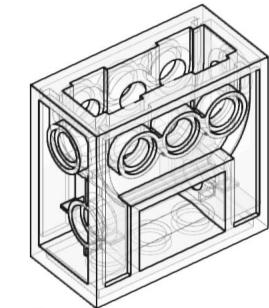

1x  
6588, 12

LEGO is a registered trademark of the LEGO group, which does not sponsor, endorse, or authorize these instructions or the model they depict.

Worm Mill (WM02) v1.1  
Copyright (c) 2020  
<http://www.greatballpit.com>  
[contact@greatballpit.com](mailto:contact@greatballpit.com)