



MFCam-P4_A0






- 01 CATALOGUE
- 02 CHANGE LIST
- 03 BLOCK DIAGRAM
- 04 POWER TREE
- 05 Connect/LCD/TP
- 06 I/O Expander/MOTOR
- 07 CODEC/SPK
- 08 ESP32-P4
- 09 Camera/TF/RTC

infinix. TEC		
Title		
MFCam-P4_A0		
Size	Document Number	
	01 CATALOGUE	
		Rev
		V1R0
Date:	Wednesday, February 19, 2025	Sheet 1 of 9



VERSION	WHO	DATE	DESCRIPTION
V1R0	YANXIAOLONG	2024.11.06	INITIAL
V1R1	YANXIAOLONG	2024.11.06	INITIAL 1. 充电时间电阻更新为100K 2. 充电时间电阻更新为100K

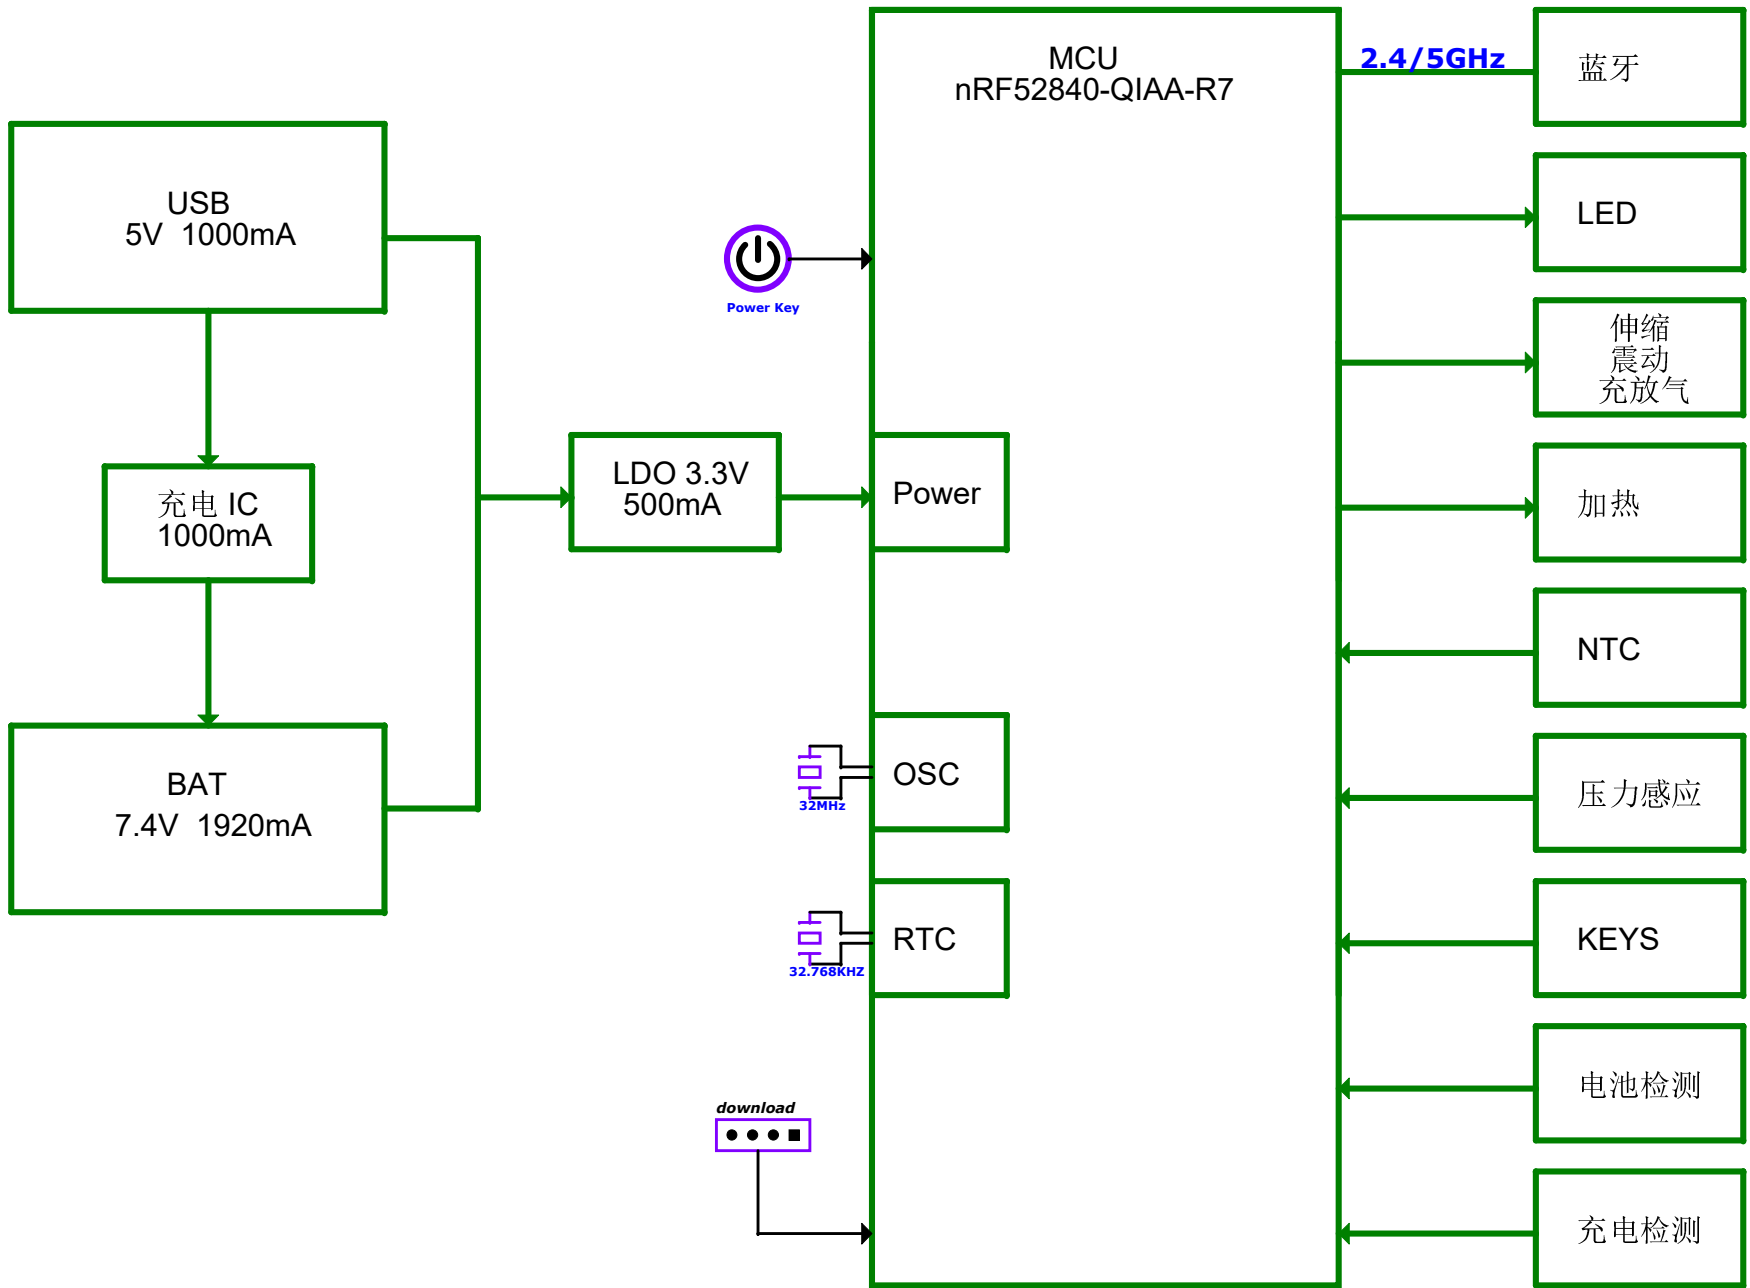

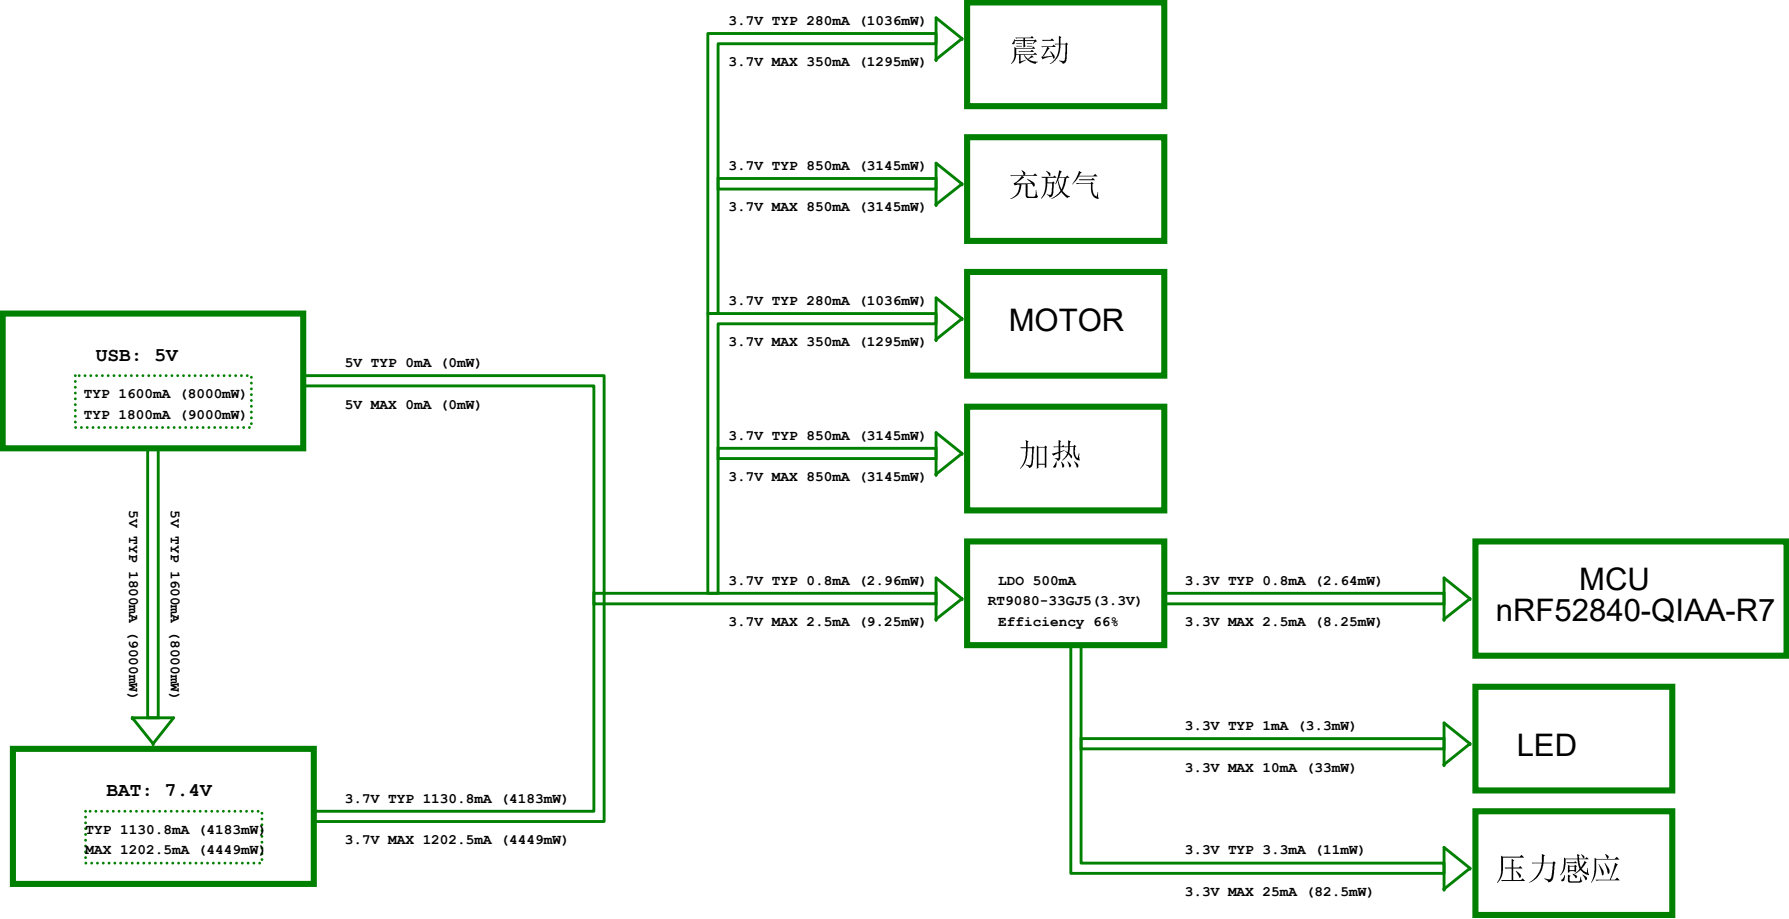


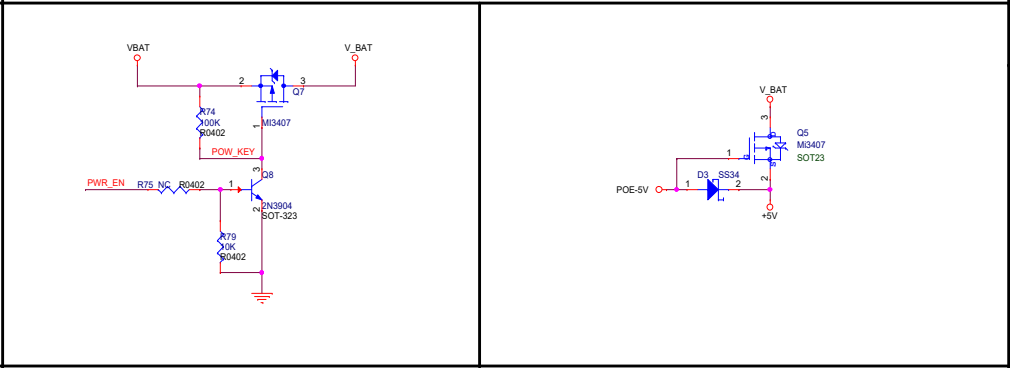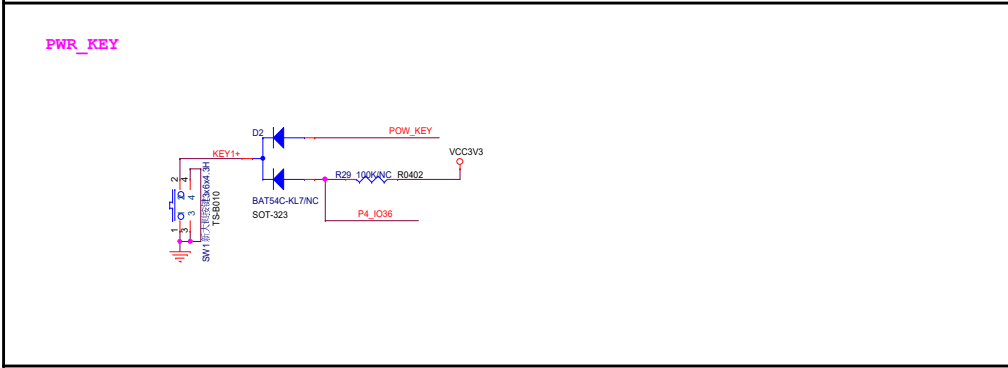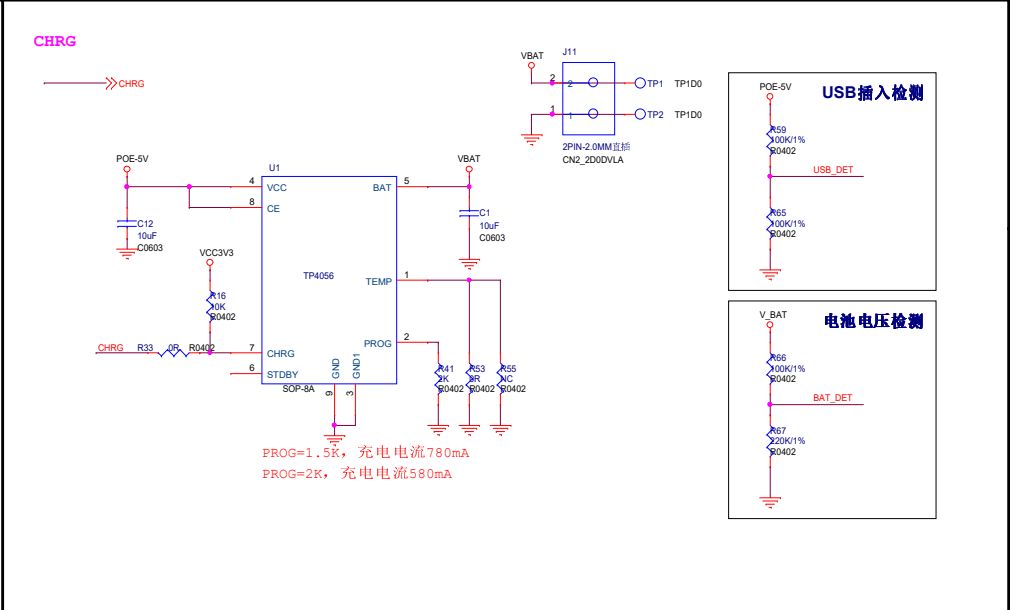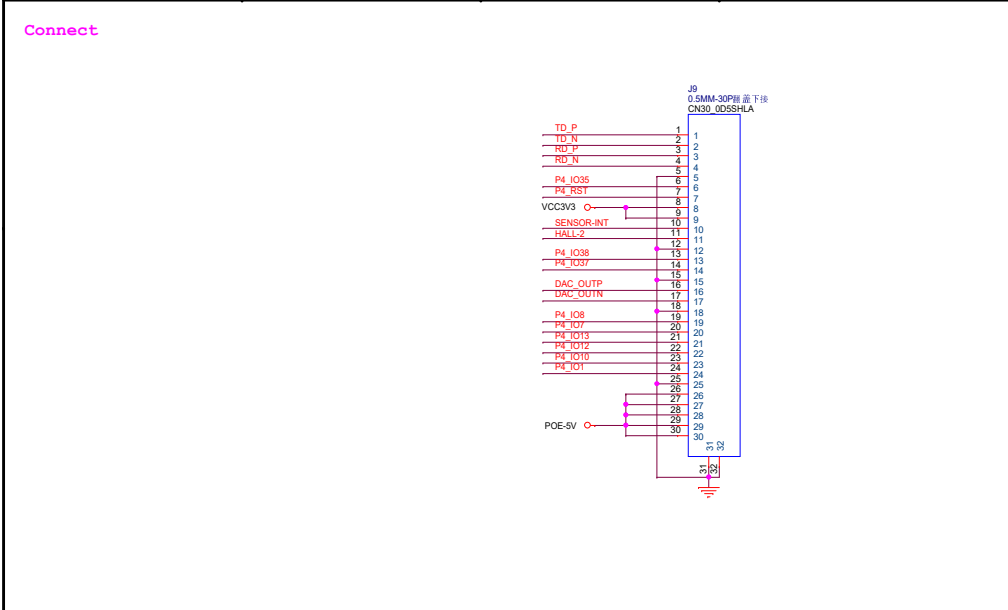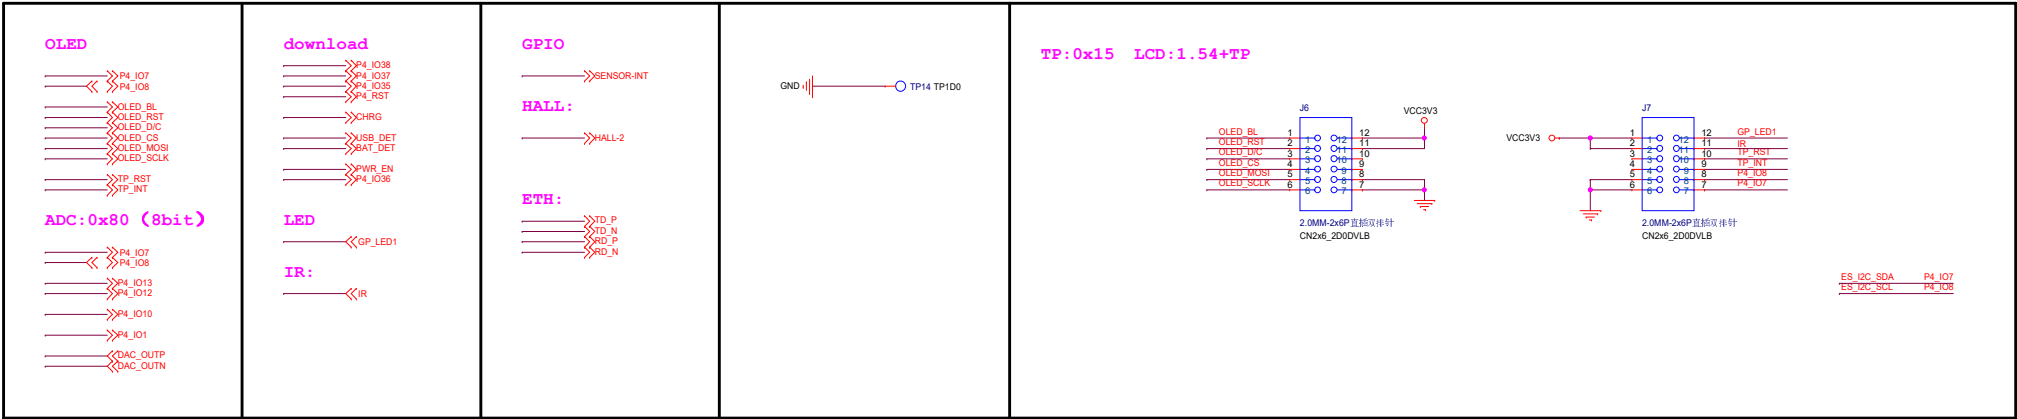

I/O Expander: 0x27

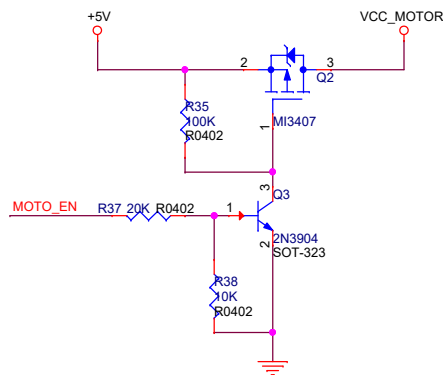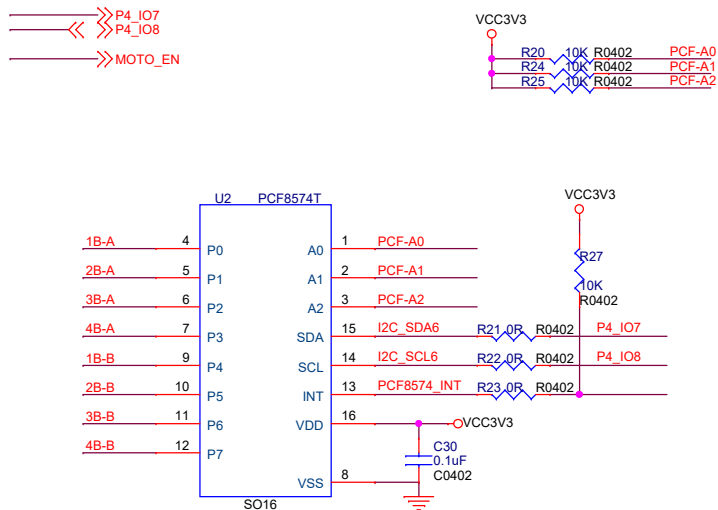

MOTOR:

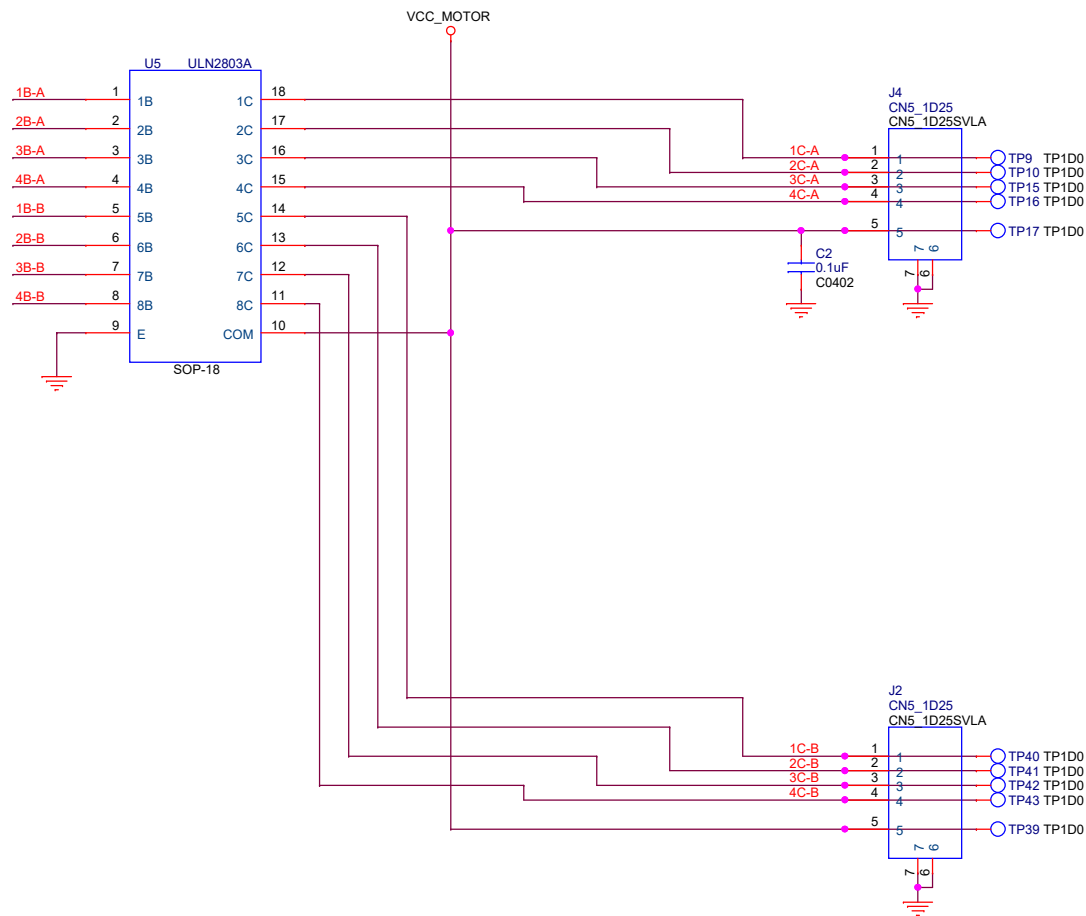

Title		
MFCam-P4_A0		
Size	Document Number	Rev
	06.I/O Expander/MOTOR	V1R0
Date:	Wednesday, February 19, 2025	Sheet 6 of 9

I2C_CAM

>>>P4_IO7
>>>P4_IO8

Camera

>>>CAM0_D0_N
>>>CAM0_D0_P
>>>CAM0_D1_N
>>>CAM0_D1_P
>>>CAM0_CLK_N
>>>CAM0_CLK_P

SD

>>>P4_IO41
>>>P4_IO42
>>>P4_IO44
>>>P4_IO43
>>>P4_IO38
>>>P4_IO40
>>>P4_IO45

CODEC:0x18

>>>P4_IO7
>>>P4_IO8
>>>P4_IO13
>>>P4_IO12
>>>P4_IO11
>>>P4_IO10
>>>P4_IO9
>>>P4_IO53
>>>P4_IO1

OLED

>>>P4_IO7
>>>P4_IO8
>>>OLED_BL
>>>OLED_RST
>>>OLED_DIC
>>>OLED_CS
>>>OLED_MOSI
>>>OLED_SCLK
>>>TP_RST
>>>TP_INT

LED:

>>>OP_LED1

download

>>>P4_IO38
>>>P4_IO37
>>>P4_IO35
>>>P4_RST
>>>CHRG
>>>USB_DET
>>>BAT_DET
>>>PWR_EN
>>>P4_IO36

GPIO

>>>SENSOR-INT

ETH

>>>P4_IO49
>>>P4_IO35
>>>P4_IO34
>>>P4_IO50
>>>P4_IO30
>>>P4_IO29
>>>P4_IO18
>>>P4_IO28
>>>P4_IO31
>>>P4_IO52
>>>P4_IO51

I/O Expander:

>>>P4_IO7
>>>P4_IO8
>>>MOTO_EN

RTC:0x51

>>>P4_IO7
>>>P4_IO8

HALL:


>>>HALL-2

IR:

>>>IR

WT0132P4: ESP32-P4

I035下拉，进入下载模式
(默认I035、36上拉，进入SPI Boot模式)

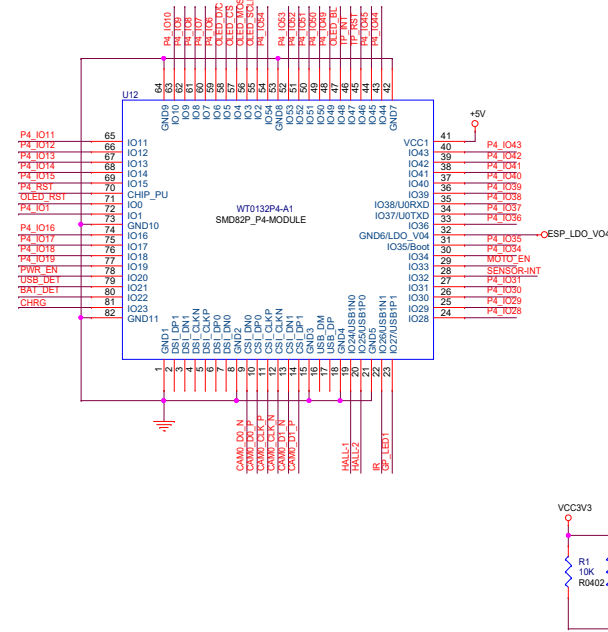

ETH: 0b (0xx1)

