



## Smart<sup>™</sup> Regular

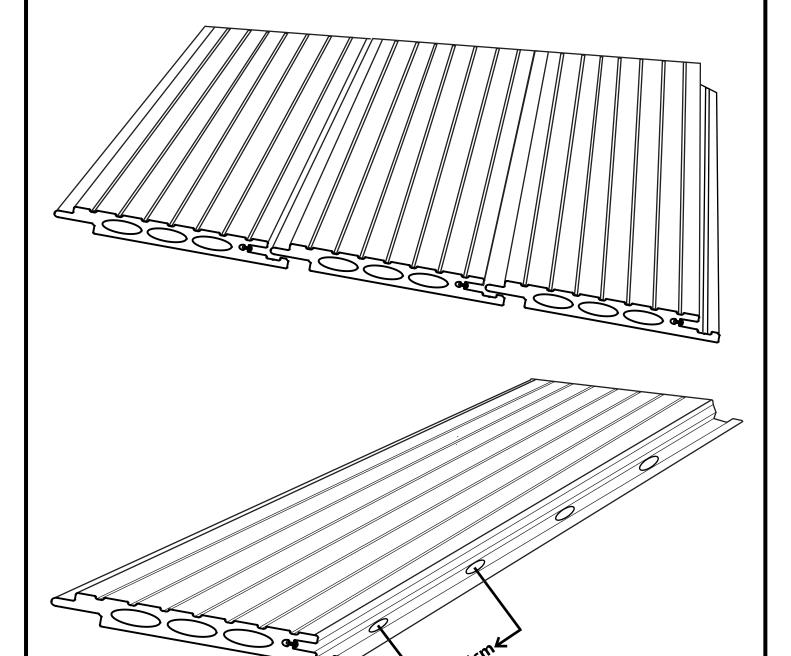


Pre-drilled holes every 25 cm

\*Please inspect the product and quantity before starting the construction of your deck.



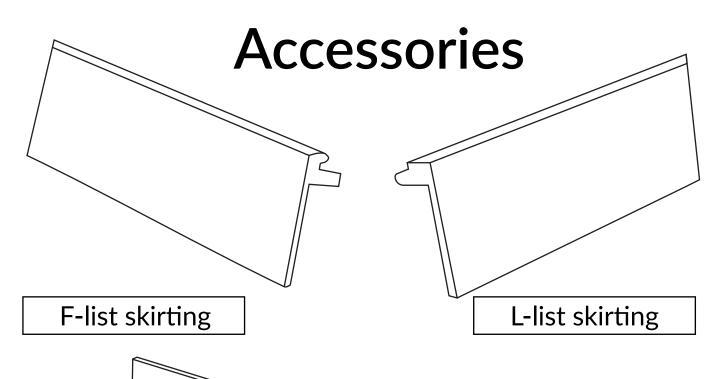

GP 709 skirting

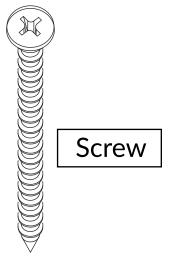





Rubberpad


## **Tools**




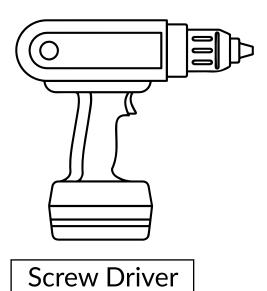

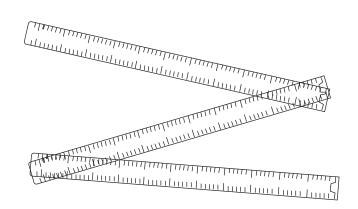


Ruler/Tape Measure

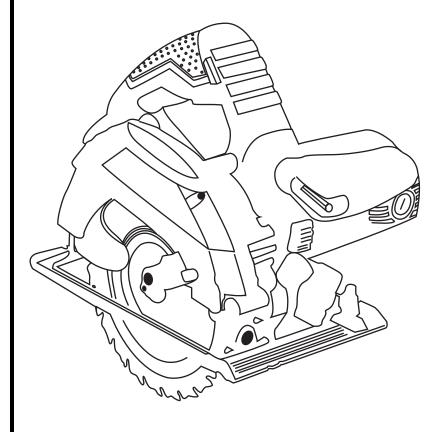

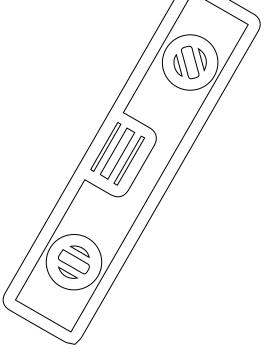


Saw

Bubble Level

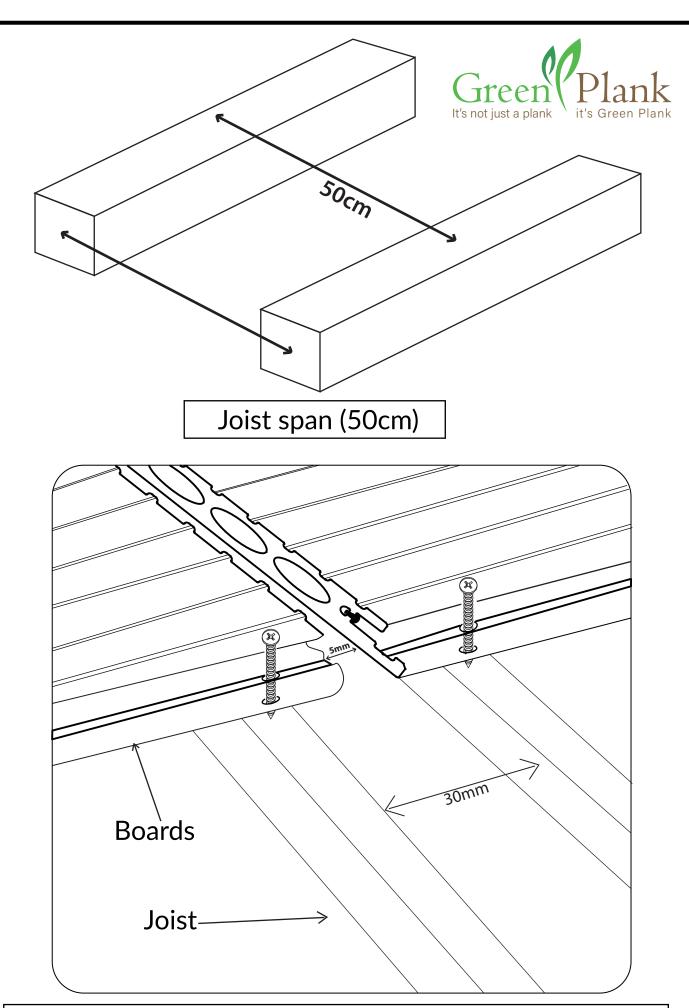

Atleast 5 mm distance between the ends of the boards




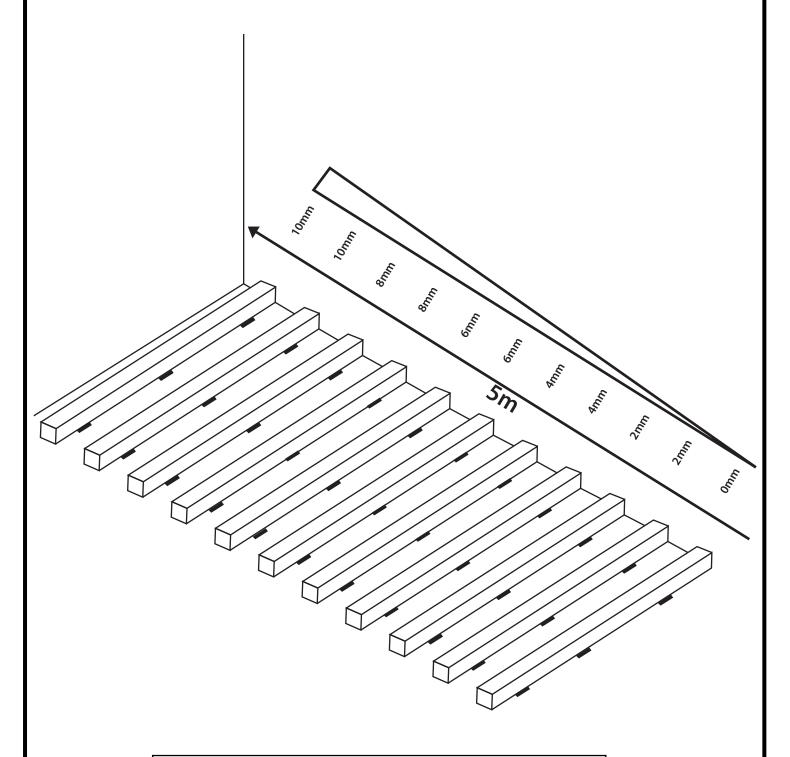



## Make slope with Rubber Pads for water drainage


<sup>\*</sup>Construct the deck with a 2mm slope per 1 meter for water drainage.

<sup>\*\*</sup>You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

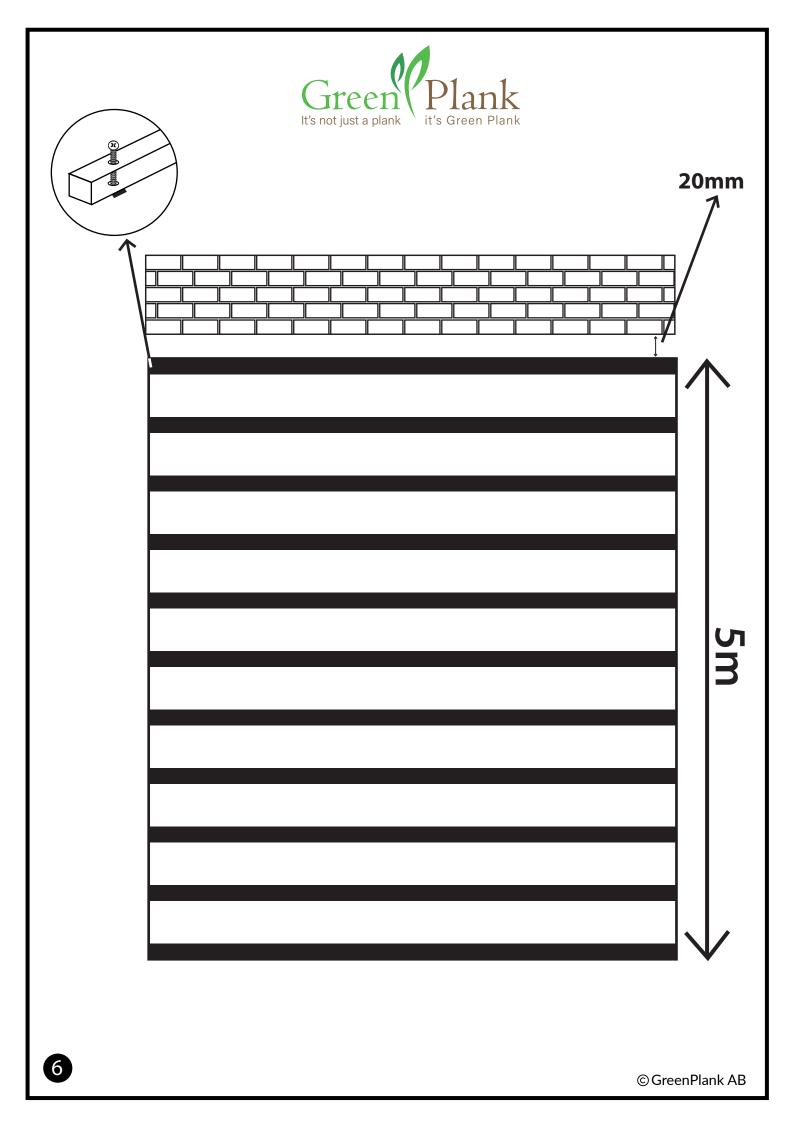

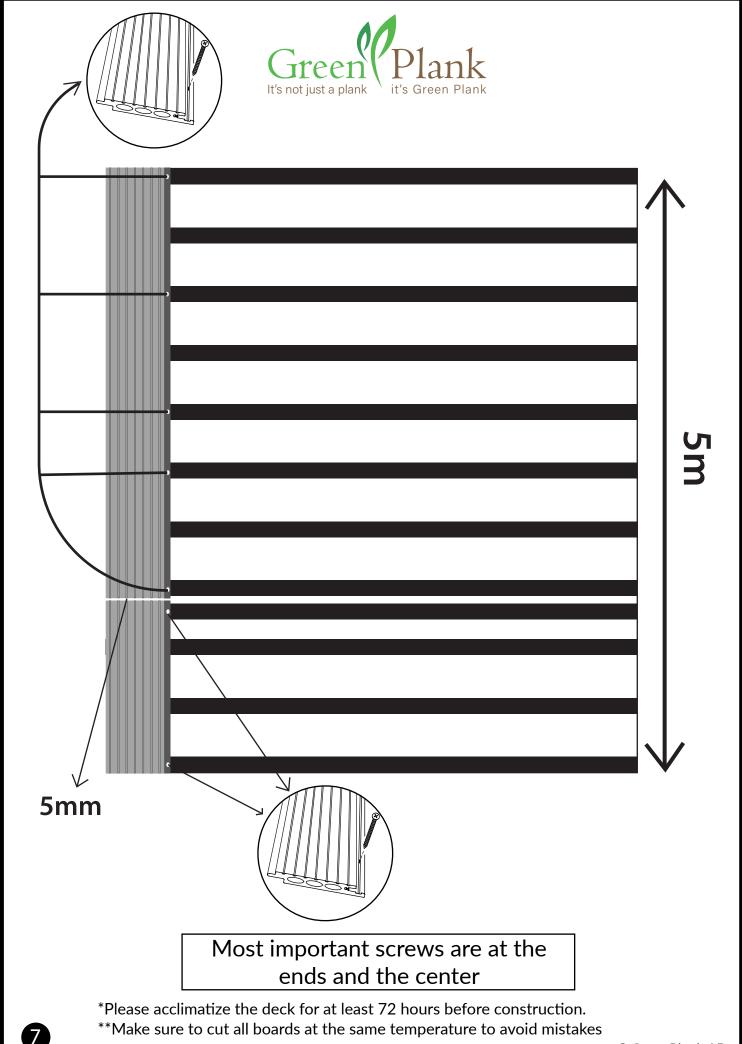


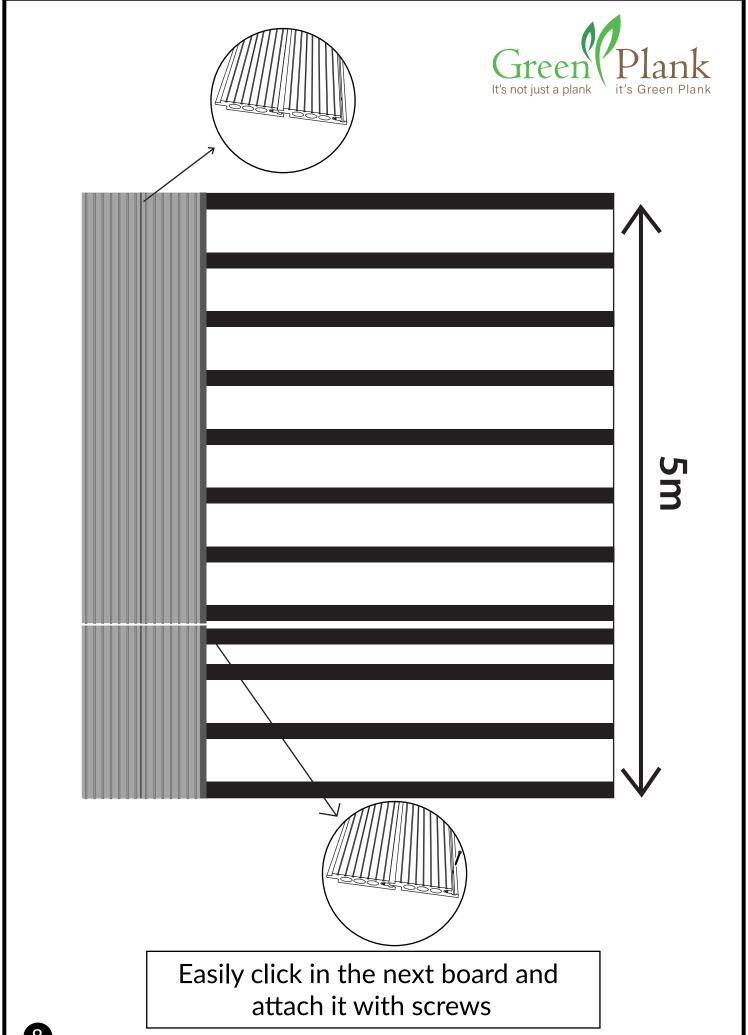


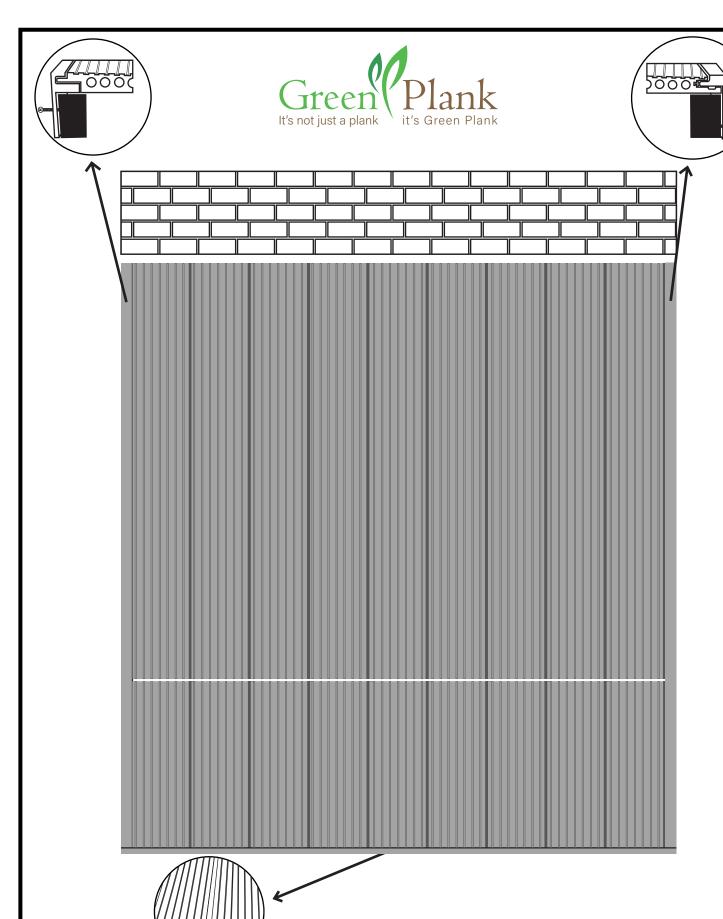



Pre-Drilled holes to attach the skirtings with screws



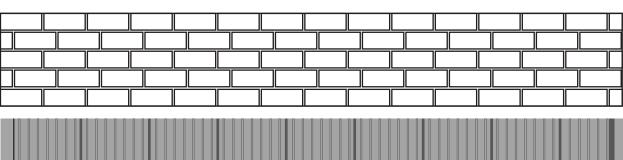

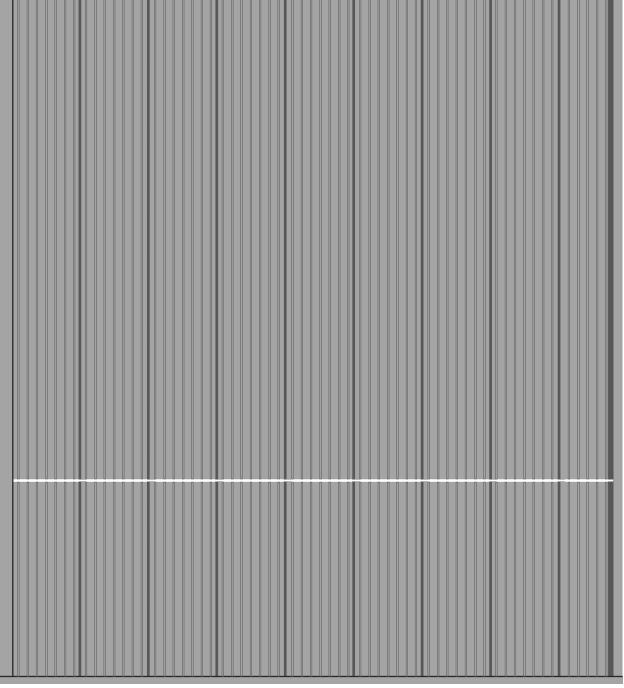

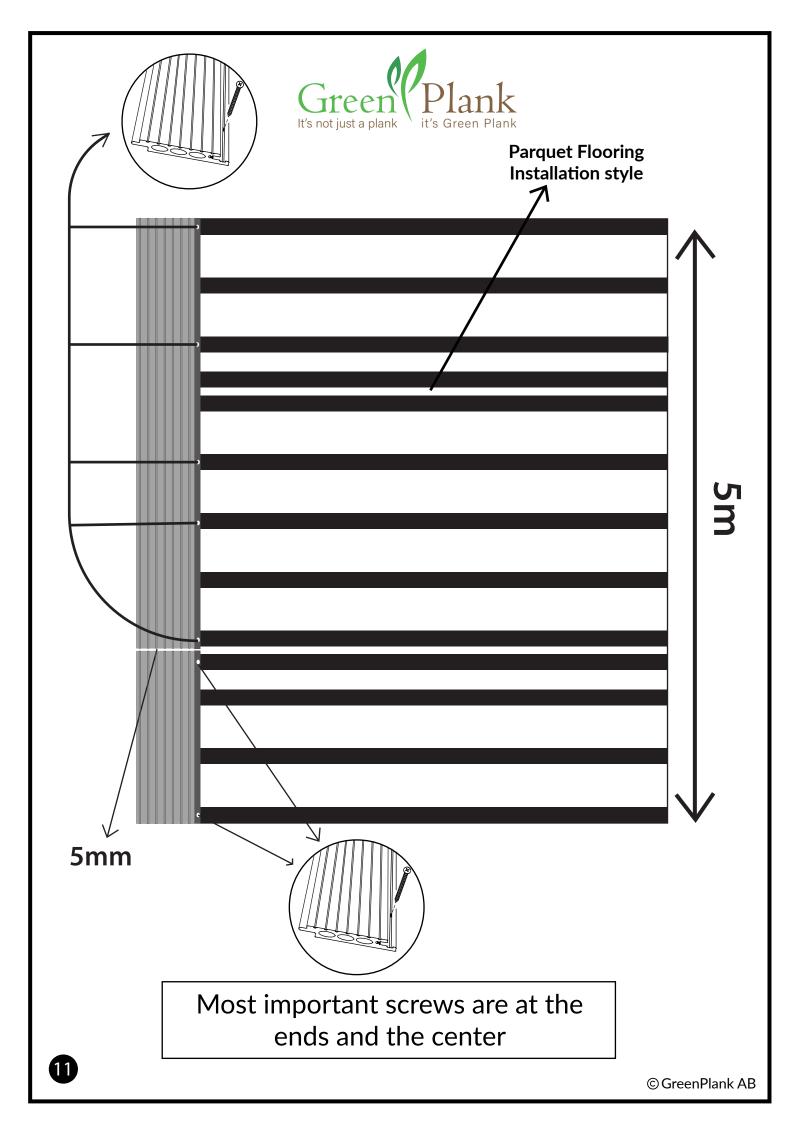

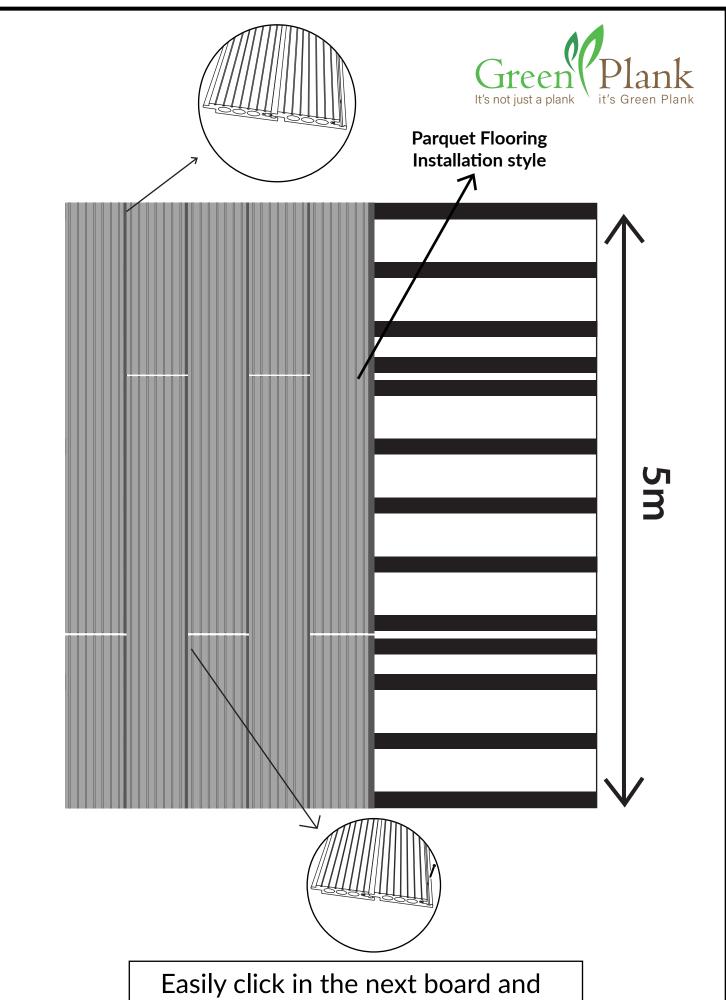

attach it with screws



