



MARINE 60™

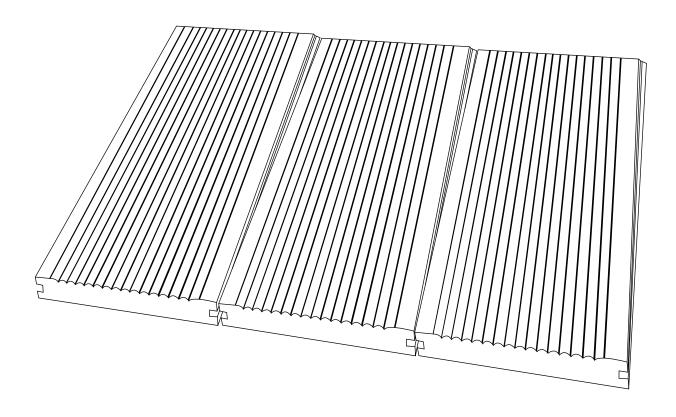


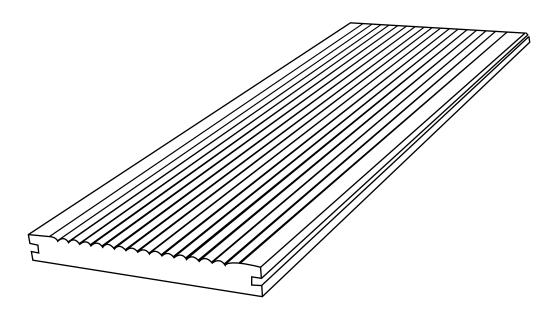

*Please inspect the product and quantity before starting the construction of your deck.




Accessories

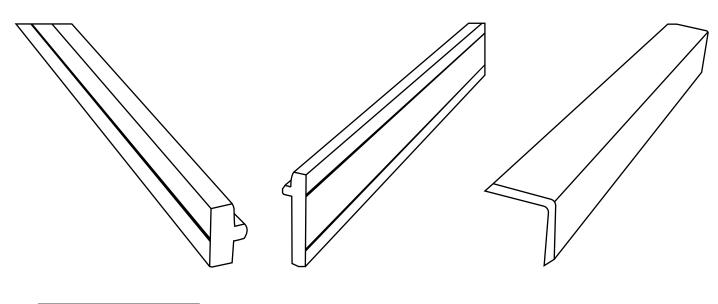

GP 7151 T-List

GP 7152 Stair-List

GP 719 L-List

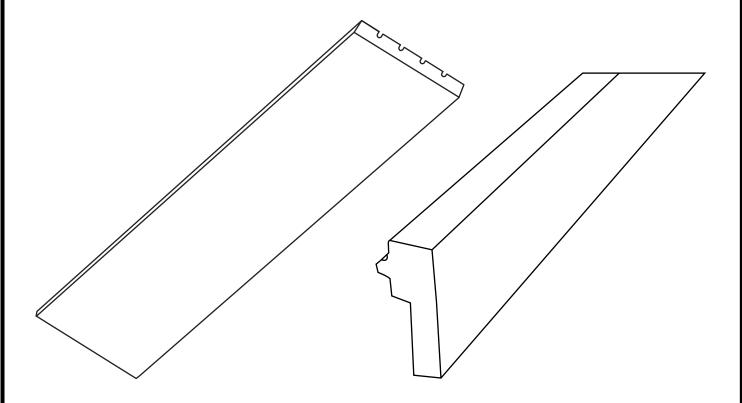


GP 709 skirting


GP 7177 Stairnose List




Accessories

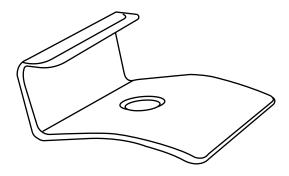




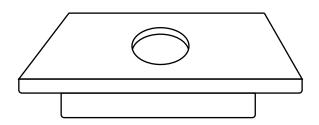

Plastic Mounting Clip

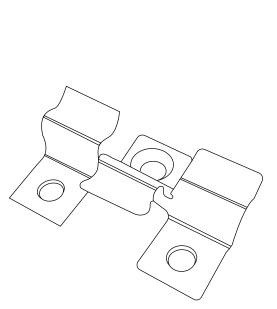

Metal Mounting Clip

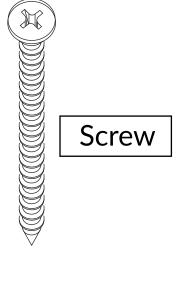





Rubberpad


Tools




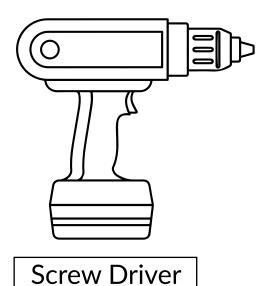

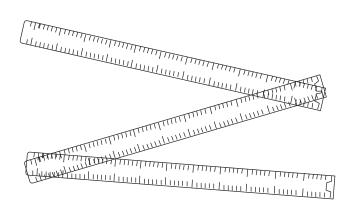


Ruler/Tape Measure

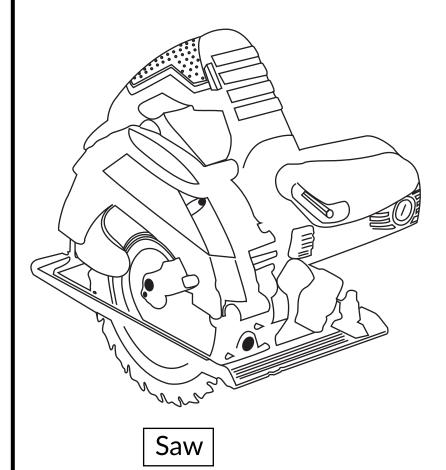

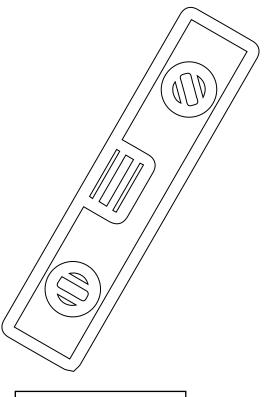

Bubble Level

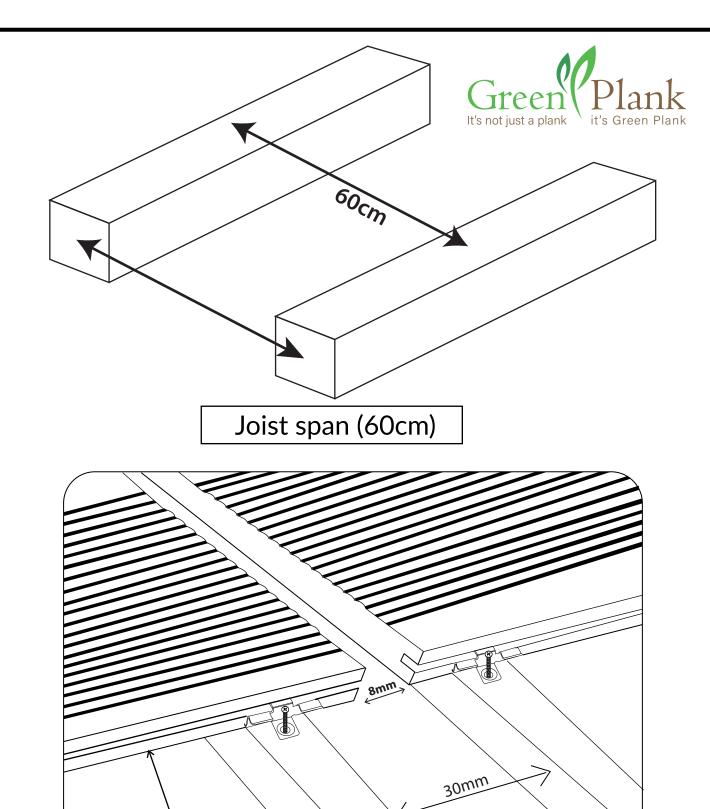


Atleast 8 mm distance between the ends of the boards


Boards

Joist-




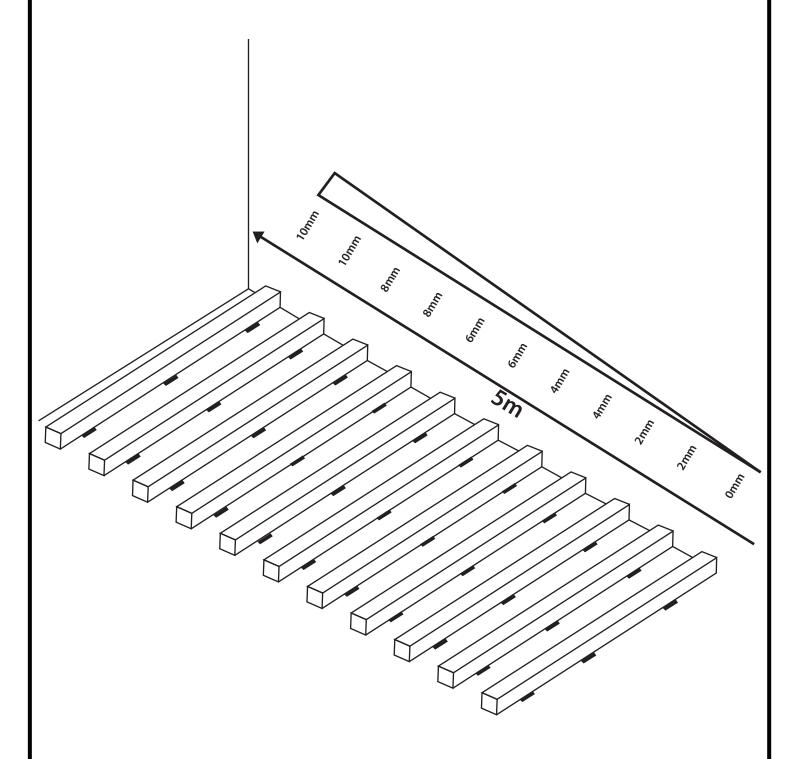

- *Construct the deck with a 2mm slope per 1 meter for water drainage.
- **You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

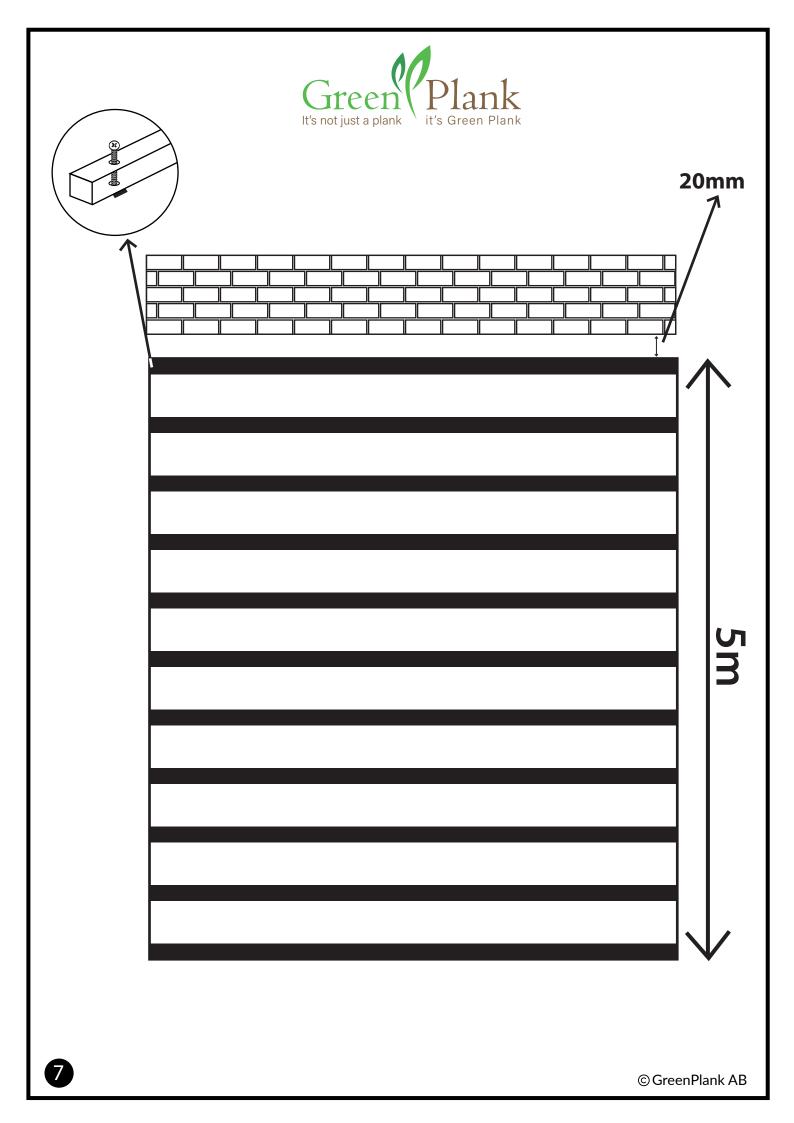



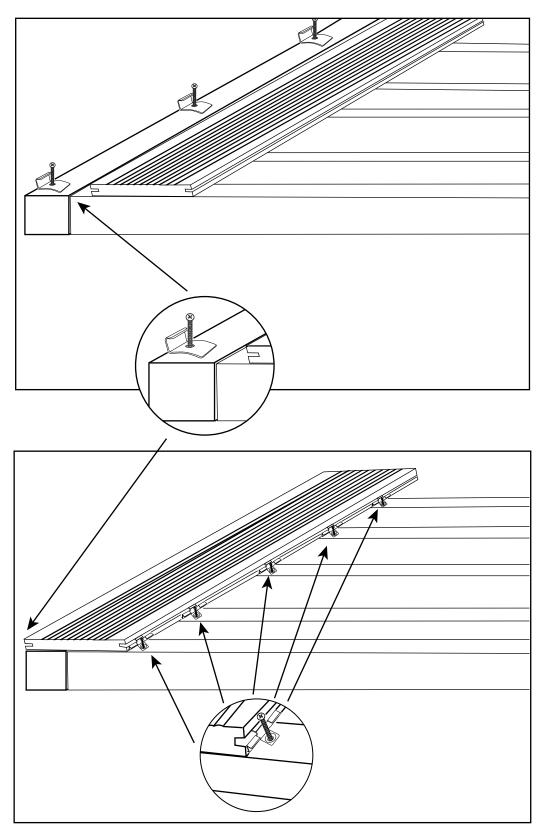

^{*}Please acclimatize the deck for at least 72 hours before construction.

^{**}Make sure to cut all boards at the same temperature to avoid mistakes

