


Smart[™] Marine with Aluminium Trims

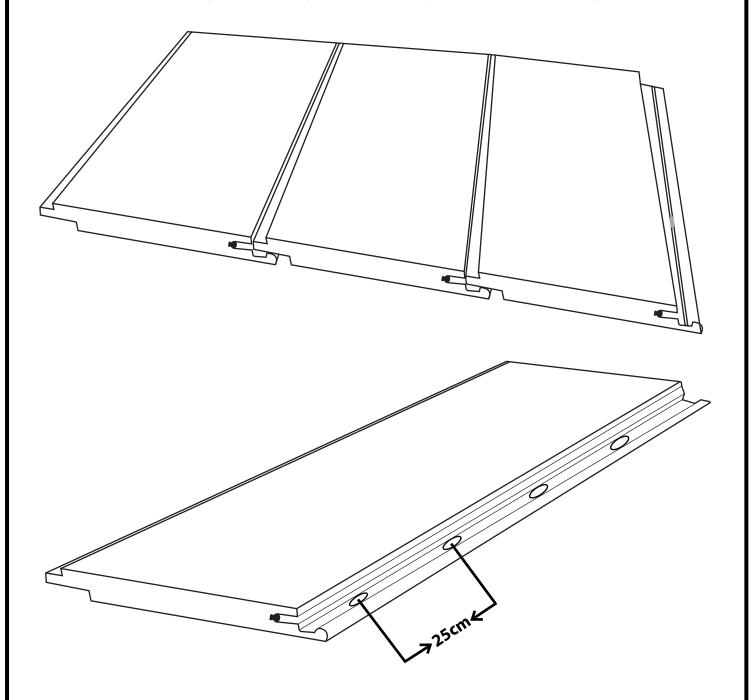


Pre-drilled holes every 25 cm


*Please inspect the product and quantity before starting the construction of your deck.





Accessories

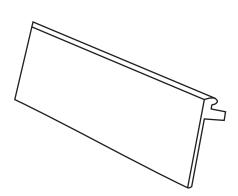


Composite F Skirting/Trim 33 * 80

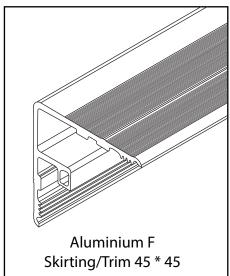

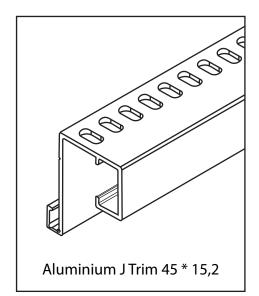


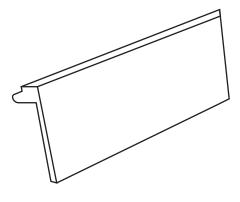


Composite L Skirting/Trim 33 * 80

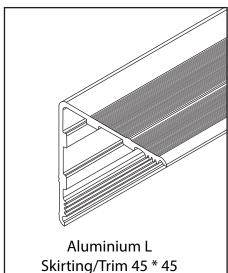


Skirting/Trim 45 * 45

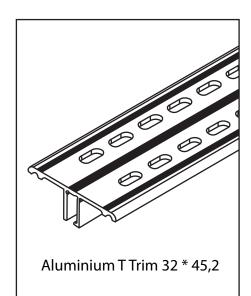

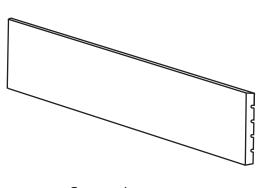

Composite Skirting/Trim 10 * 80

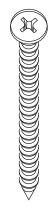


Screw 3,5 * 35




Rubber pad 2mm til 20mm




Tools

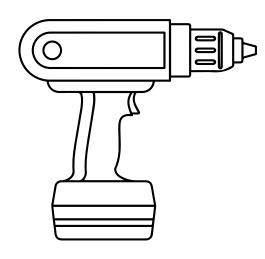


Screw Driver

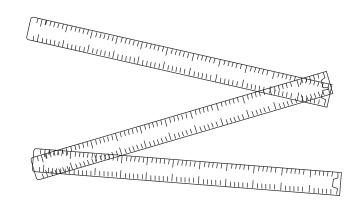


Ruler/Tape Measure

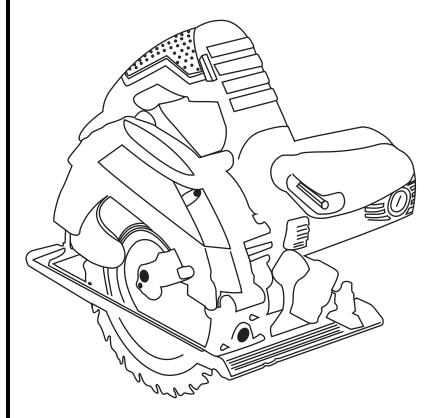


Saw

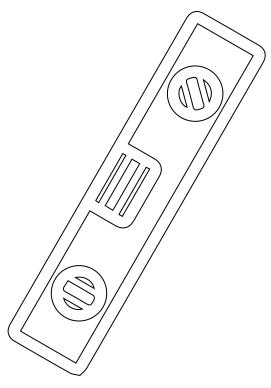

Bubble Level

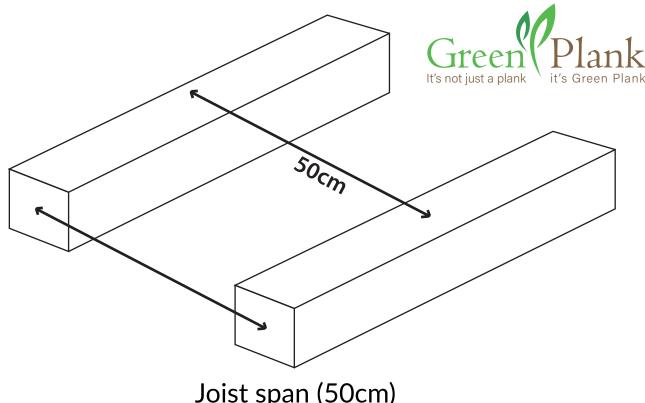


Joist span (50cm)

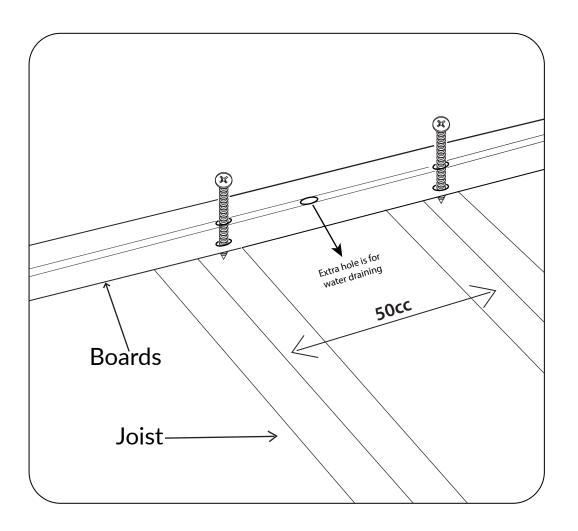

Every profile have pre drill hole on every 25cm joist space 50 cm from center to center




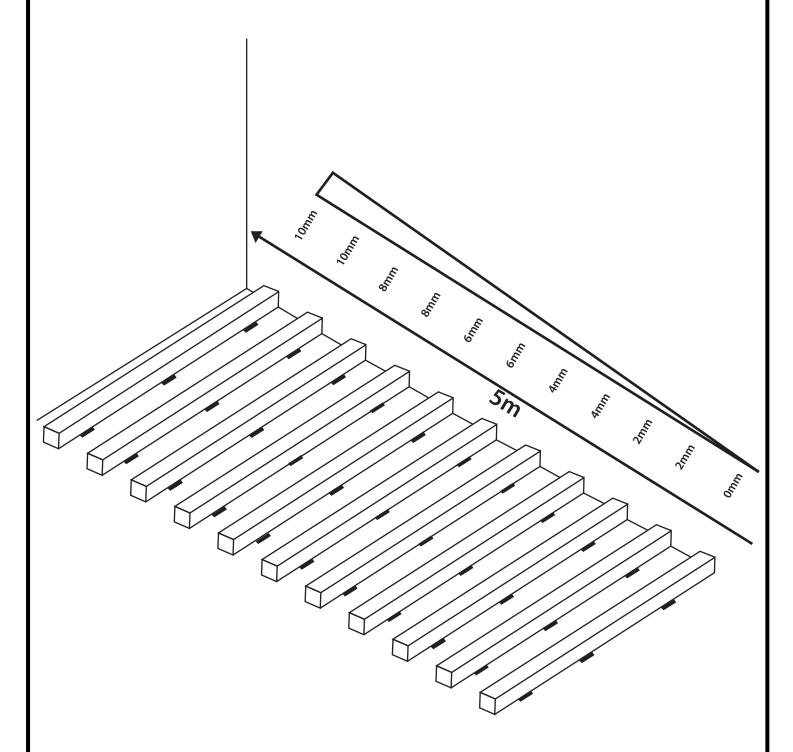


Make slope with Rubber Pads for water drainage

*Construct the deck with a 2mm slope per 1 meter for water drainage.

**You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

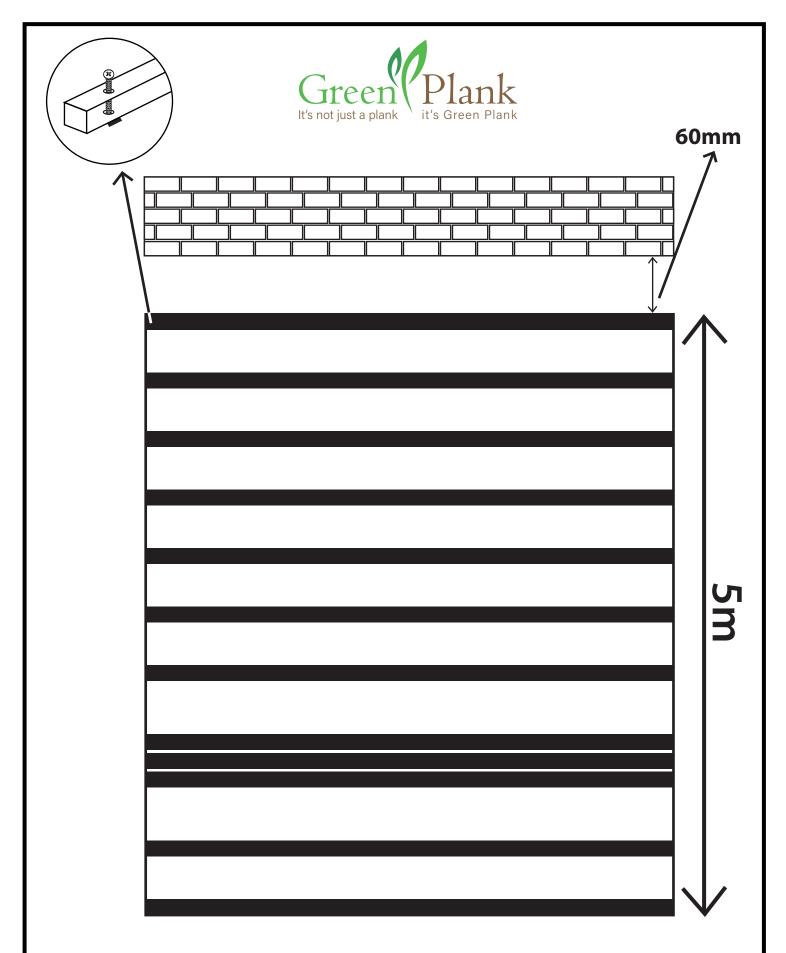


To use J trim you must start the deck 60 mm away form wall Please make predrill hole in J trim and fix with the wall

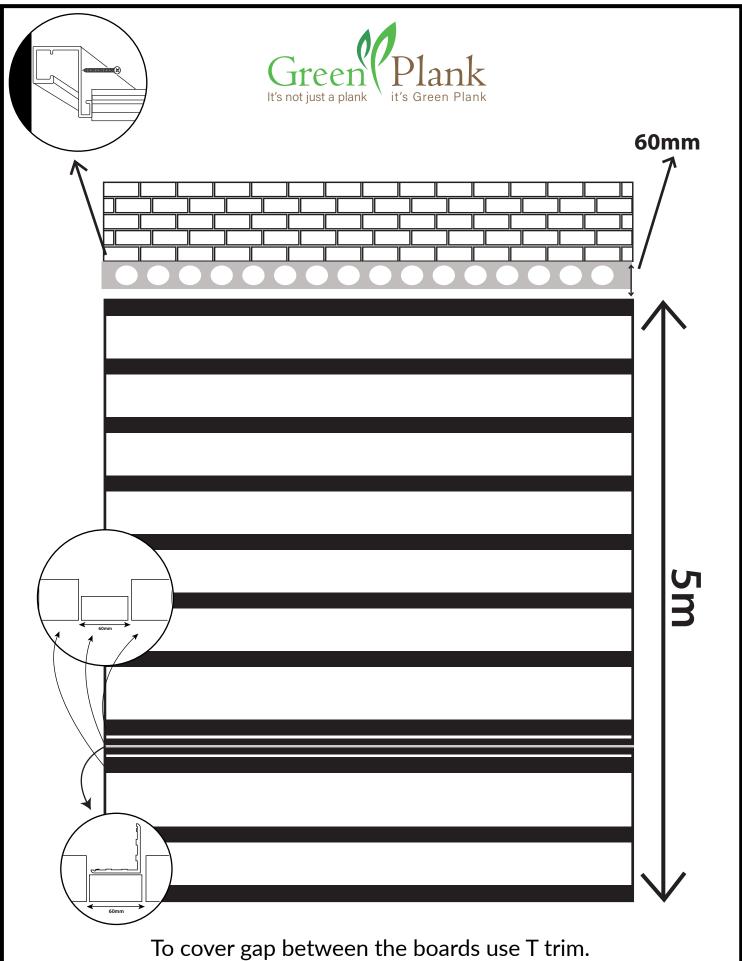


To cover gap between the boards use T trim.


To install T trim can be fixed with long screws, either it can be clicked with L trim, fixed with middle joist underneath.

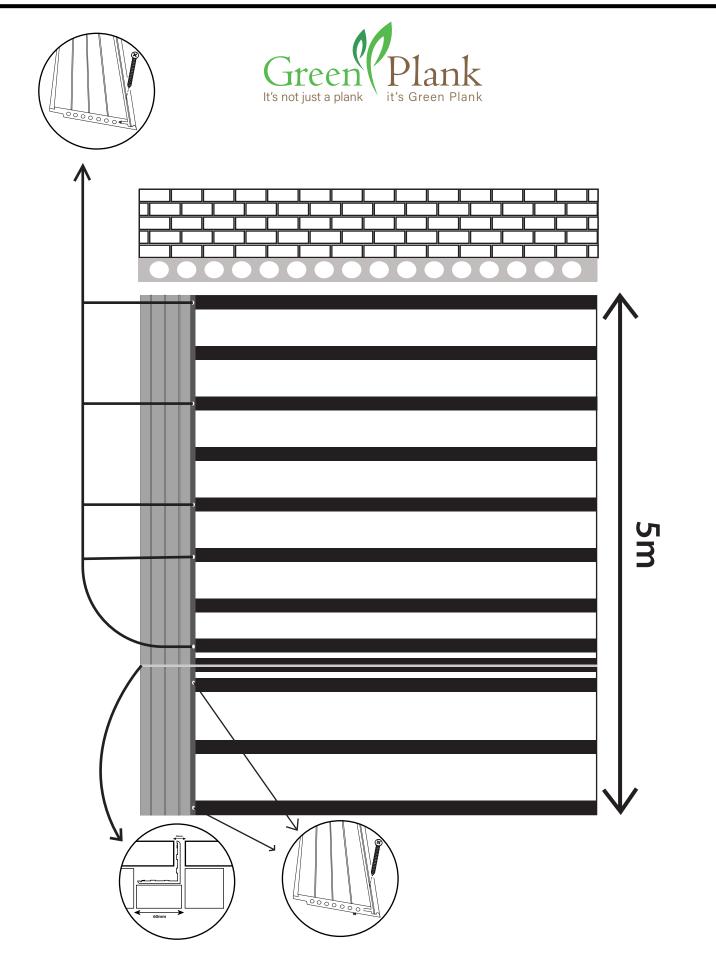


To extend the deck the boards must have at least 20 mm gap to manage the T trim holes

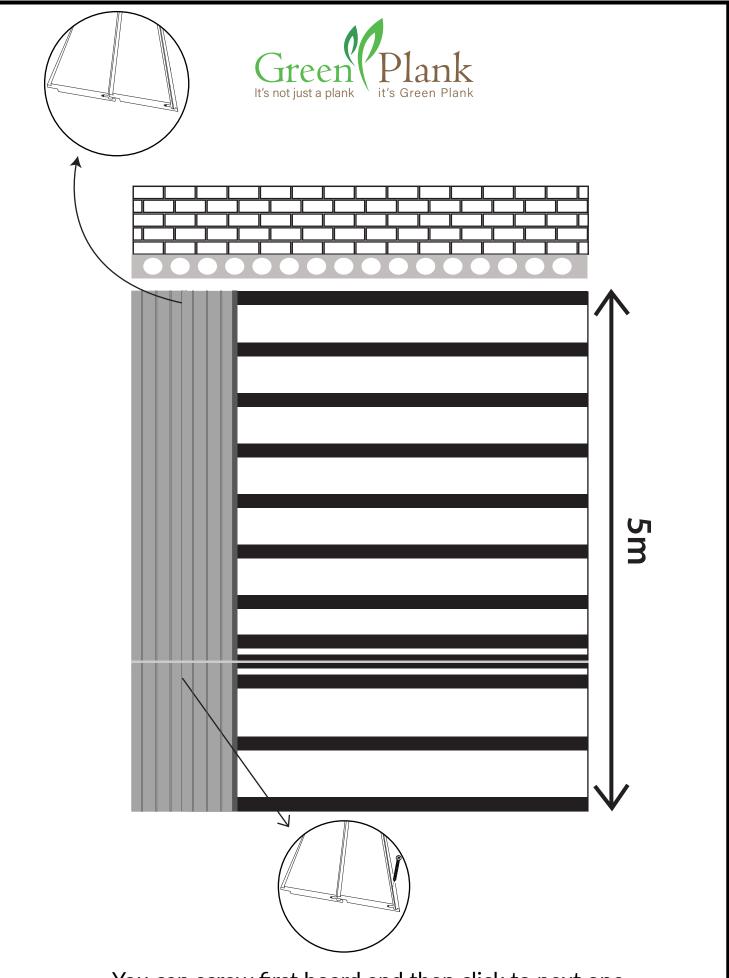

You can screw first board and then click to next one and screw the next board

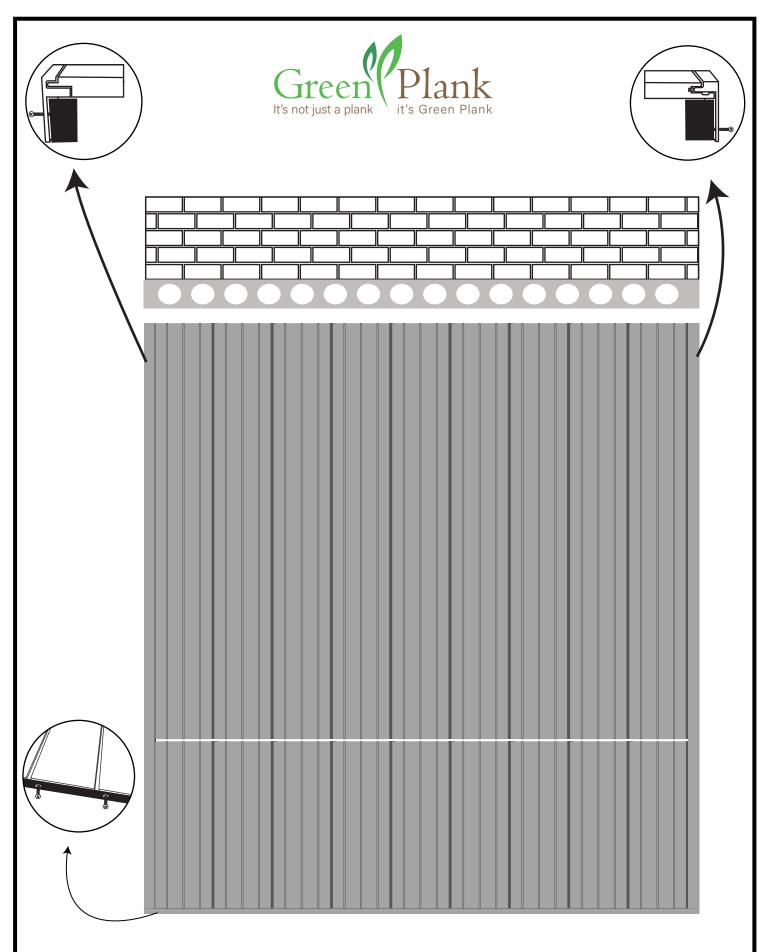

Either you can use composite L trim and F trim in same color or you can use Aluminum L trim or F trim Make predrill holes before screws in composite or Aluminium trims

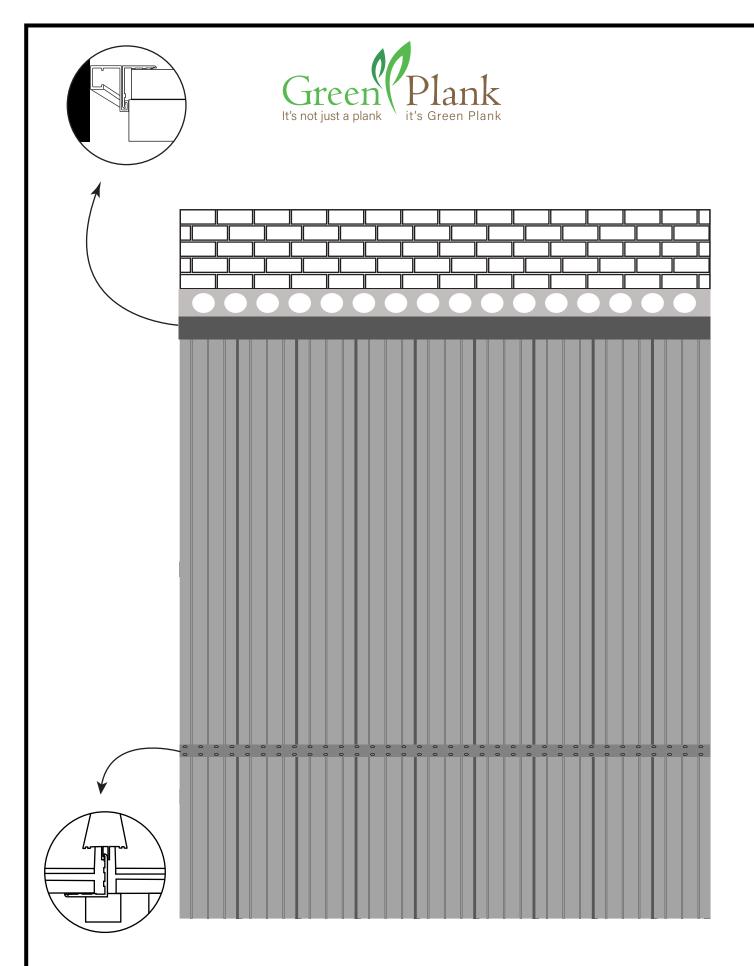

Click the L with J trim to cover the gap between deck boards and J trim Click the T profile with L profile in the extension of deck



