



Smart[™] Marine

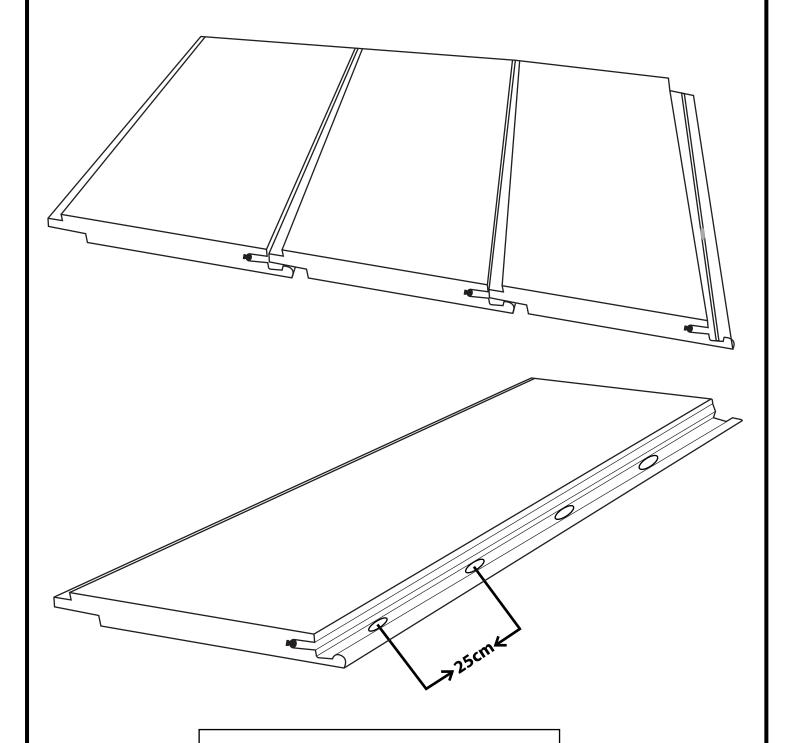



Pre-drilled holes every 25 cm

*Please inspect the product and quantity before starting the construction of your deck.



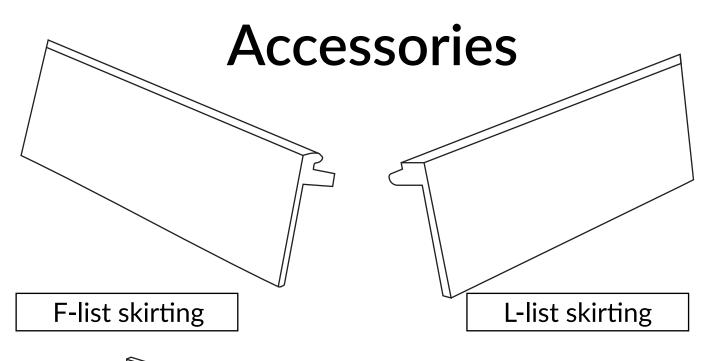

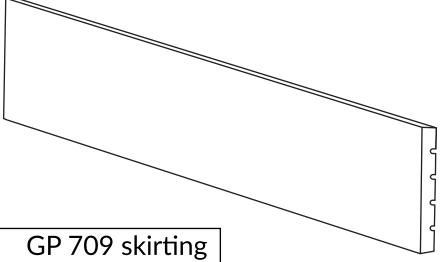

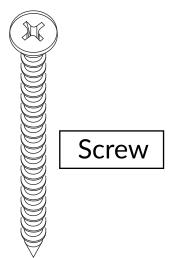





Rubberpad


Tools



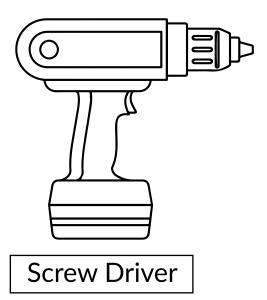


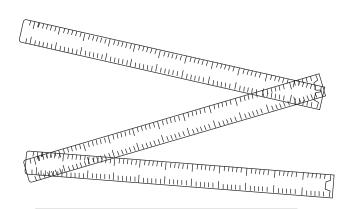


Ruler/Tape Measure

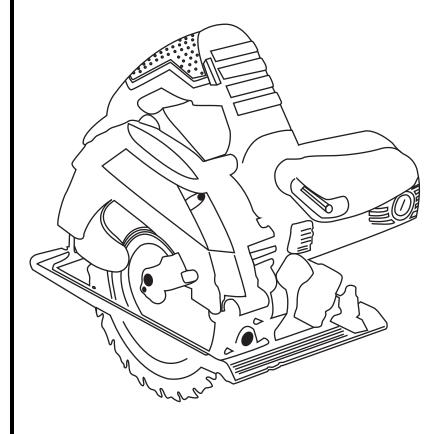




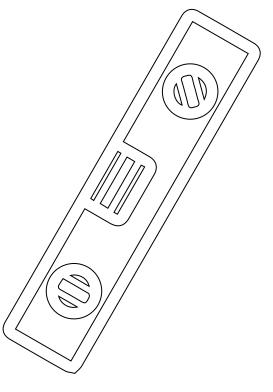


Bubble Level

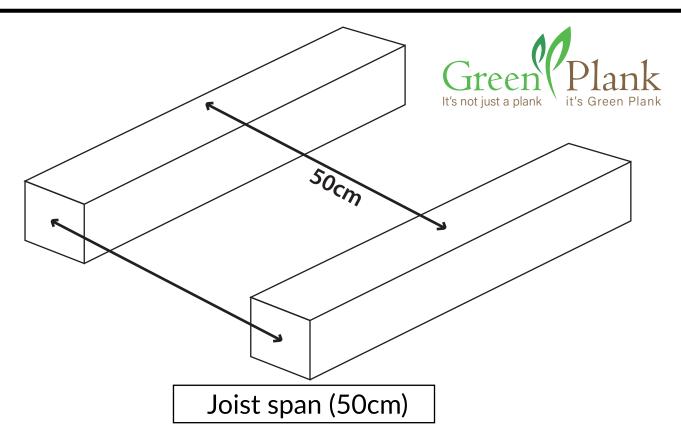

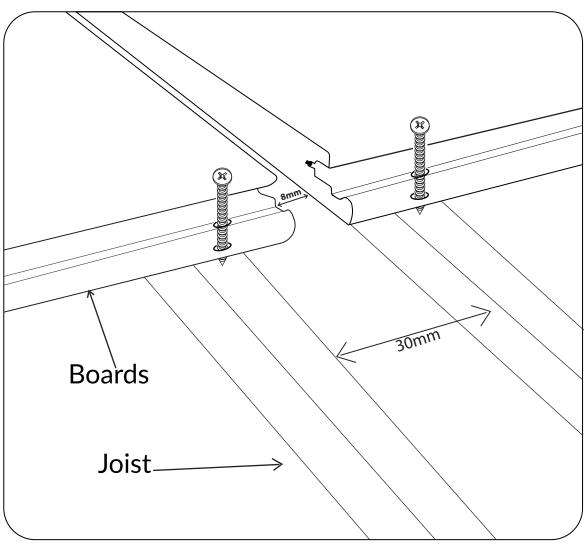

Atleast 8 mm distance between the ends of the boards




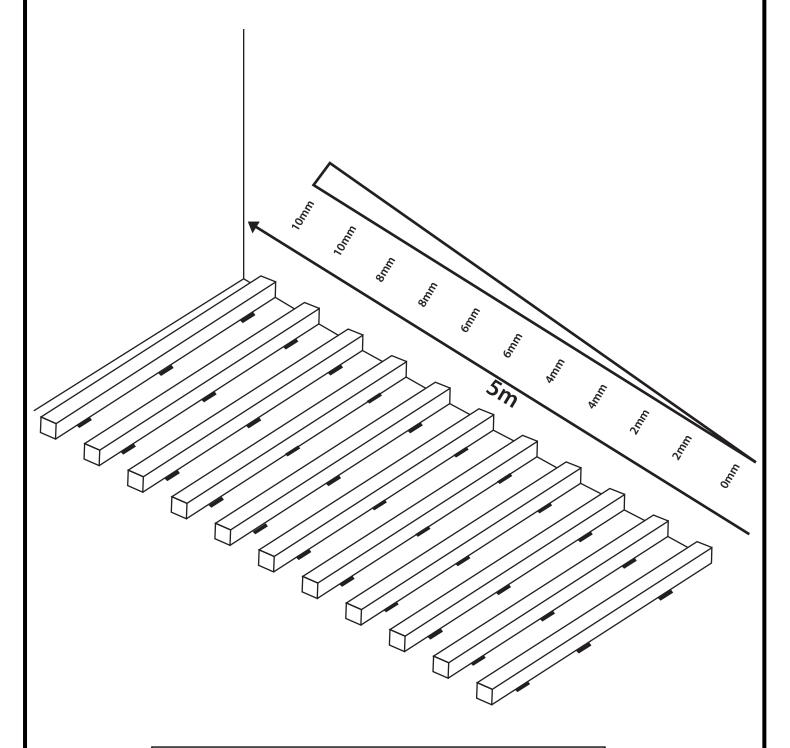



Make slope with Rubber Pads for water drainage


^{*}Construct the deck with a 2mm slope per 1 meter for water drainage.

^{**}You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

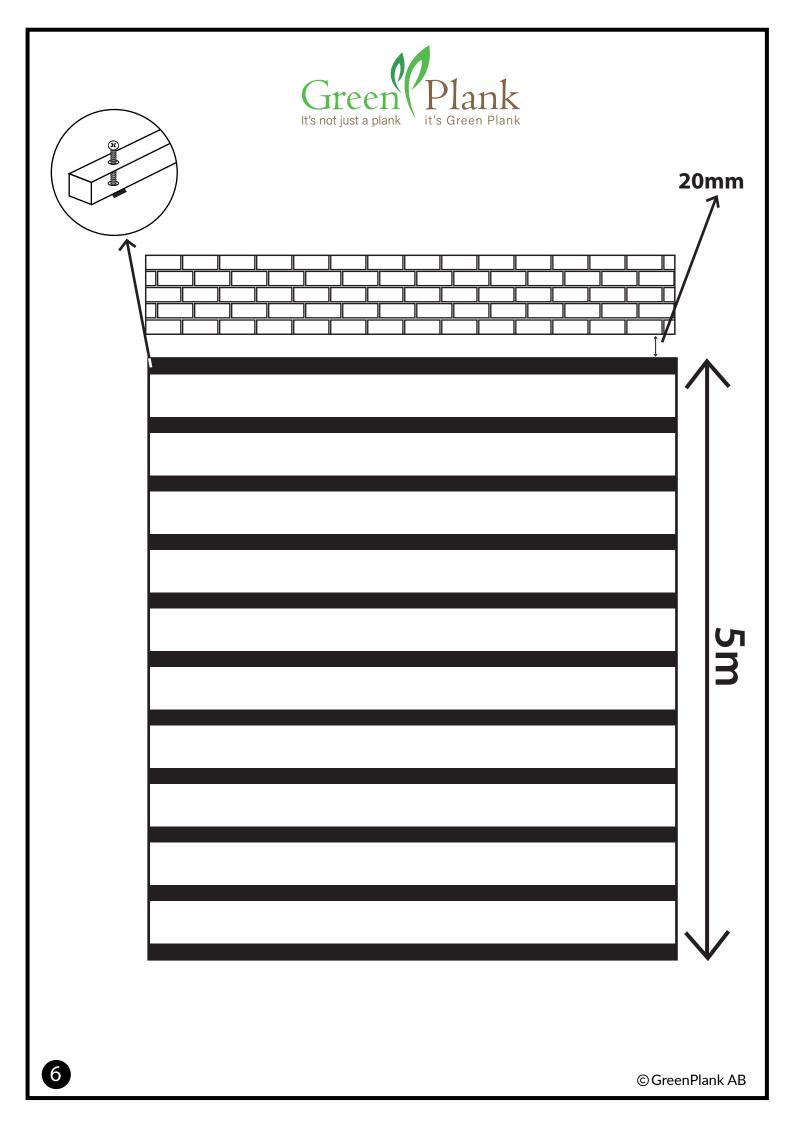

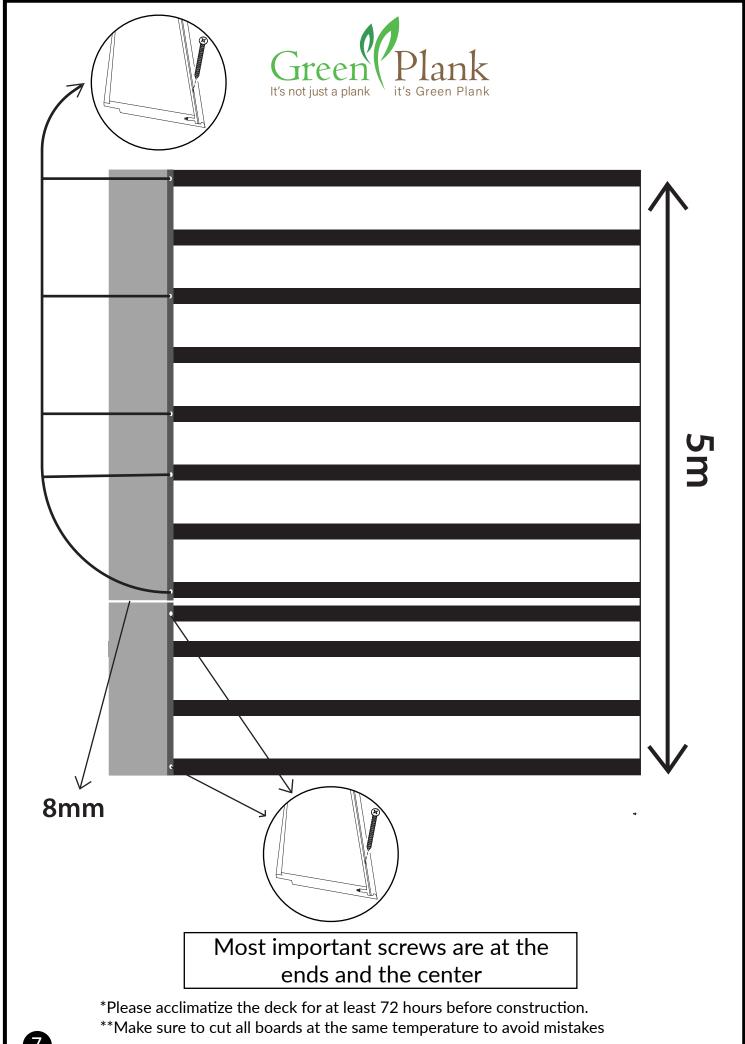

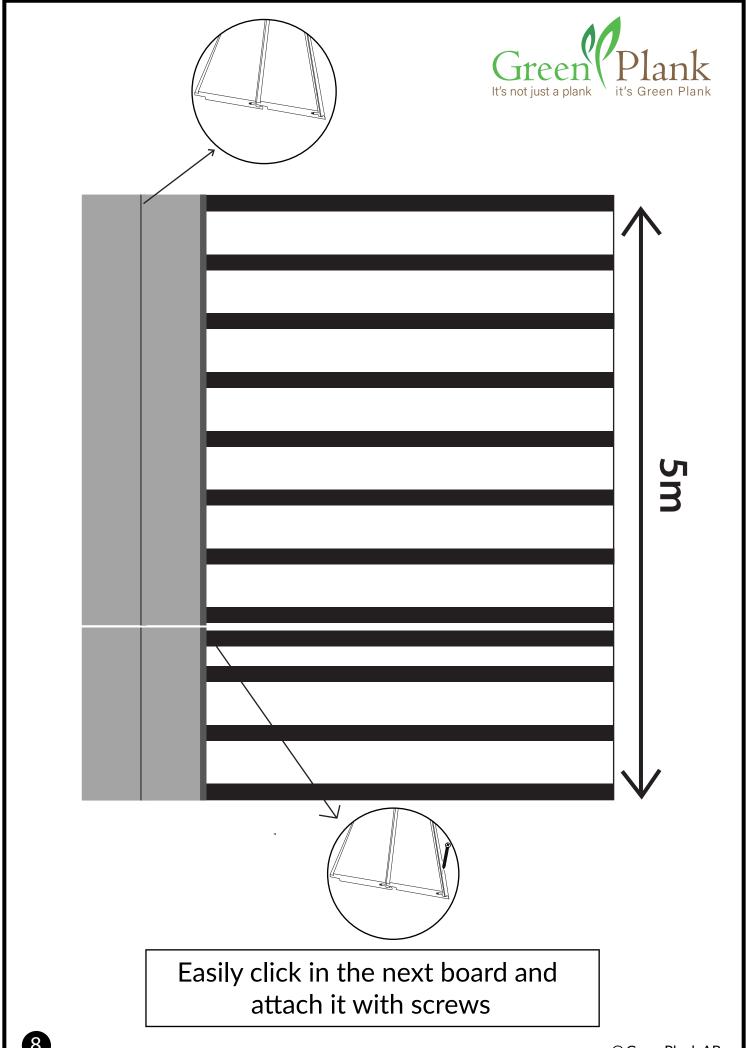

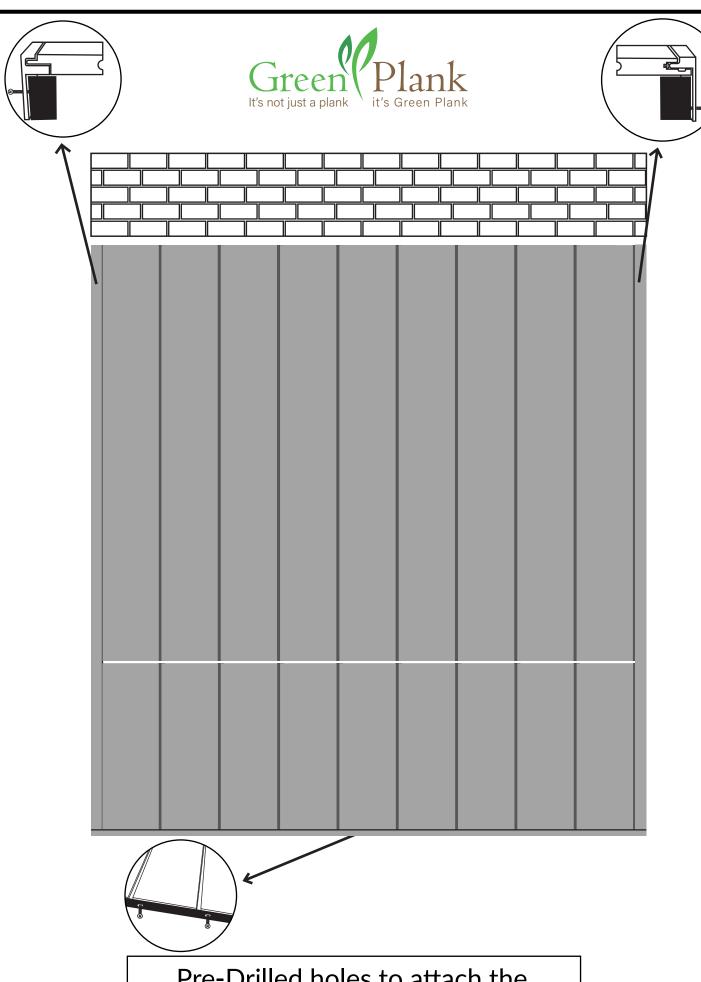

Pre-Drilled holes to attach the skirtings with screws



