



MARINE 40™

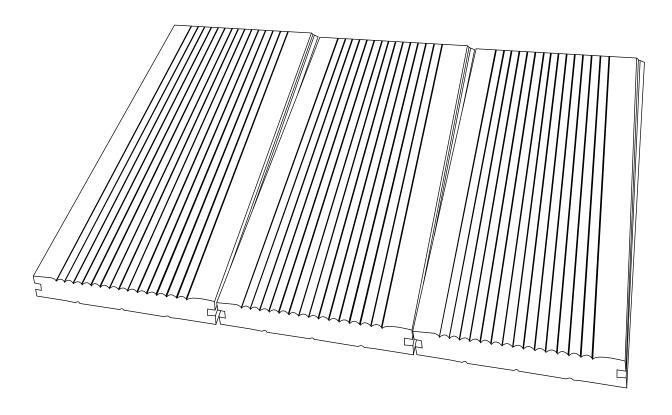


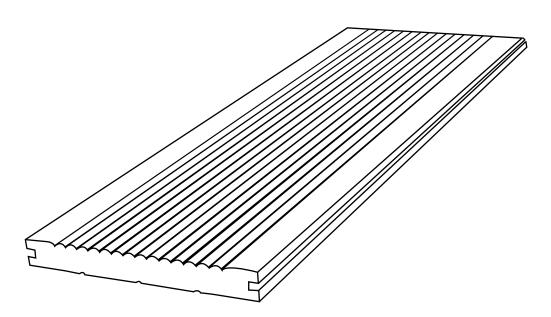

*Please inspect the product and quantity before starting the construction of your deck.




Accessories

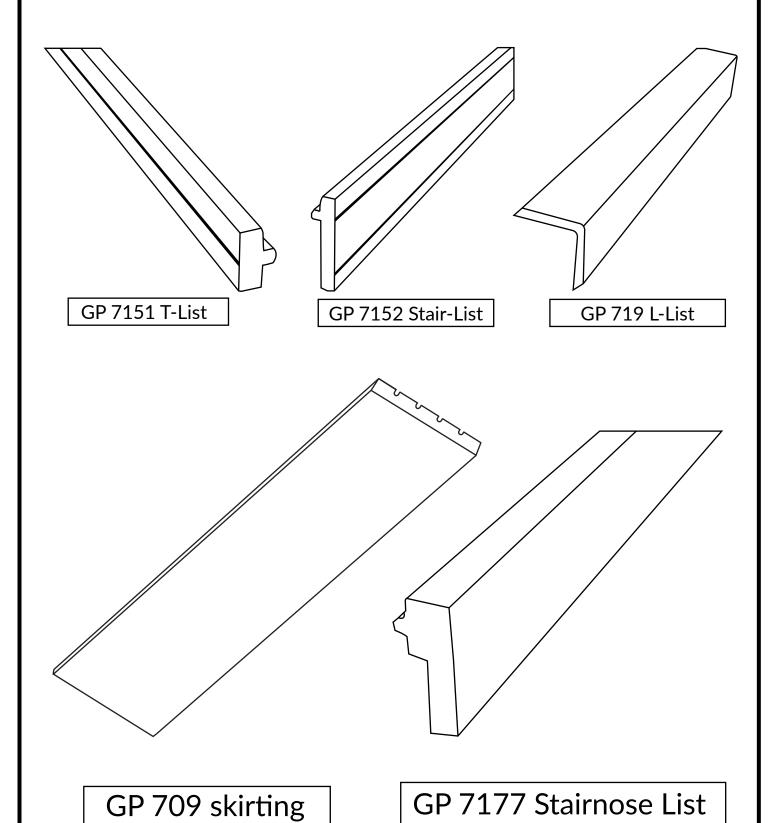


GP 7177 Stairnose List




Accessories

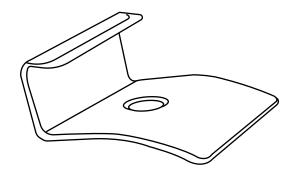

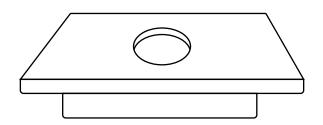


Start / End Clips

Plastic Mounting Clip

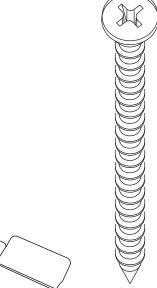

Screw

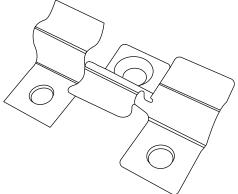


Metal Mounting Clip




Rubberpad


Tools




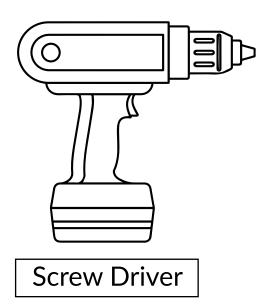

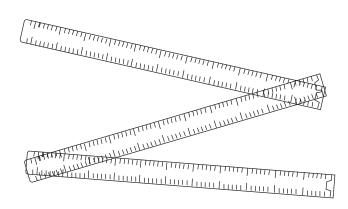


Ruler/Tape Measure

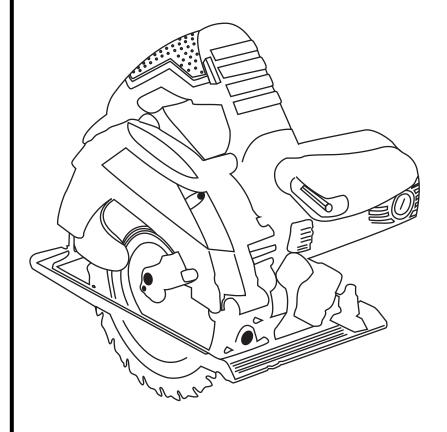


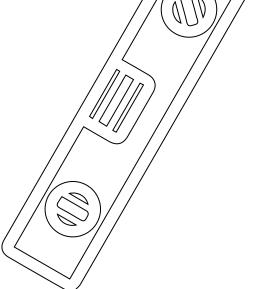

Saw


Bubble Level

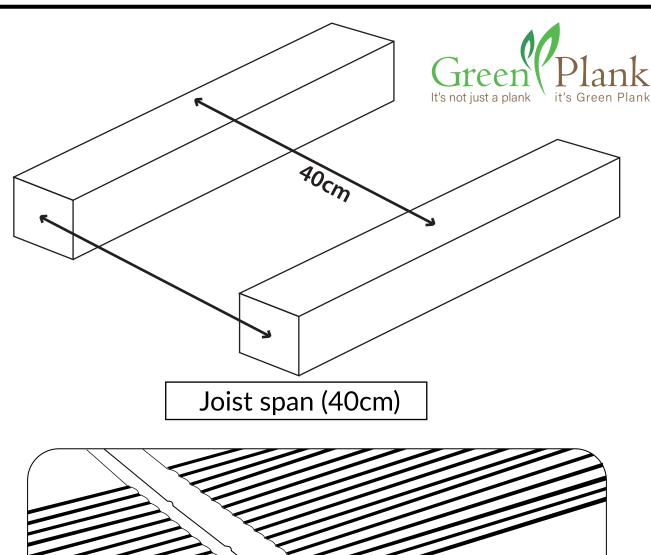

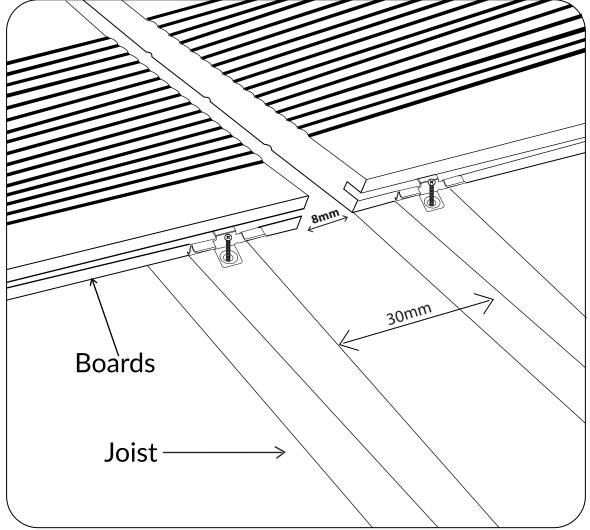


Atleast 8 mm distance between the ends of the boards




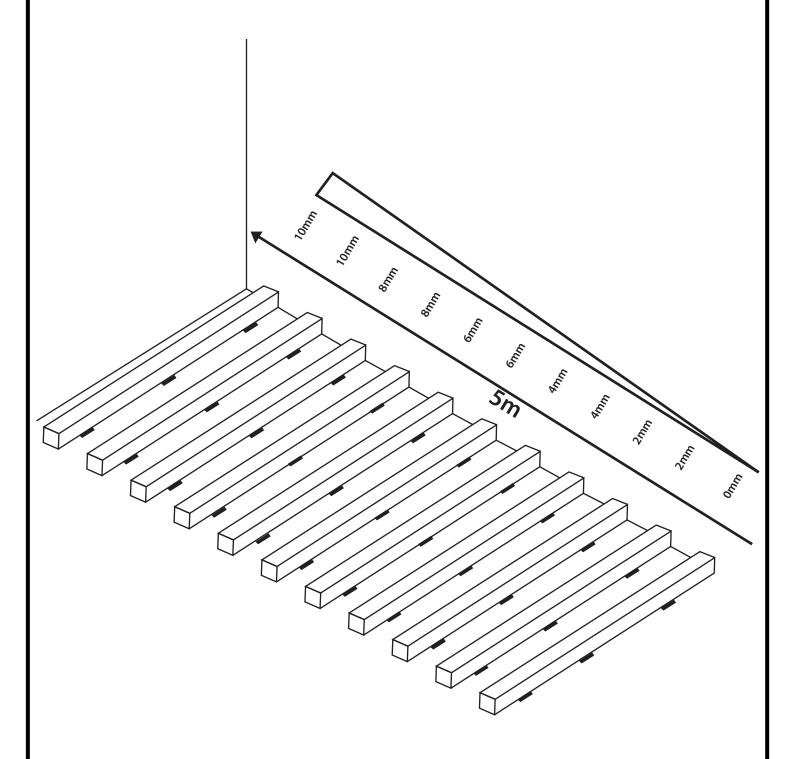


- *Construct the deck with a 2mm slope per 1 meter for water drainage.
- **You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

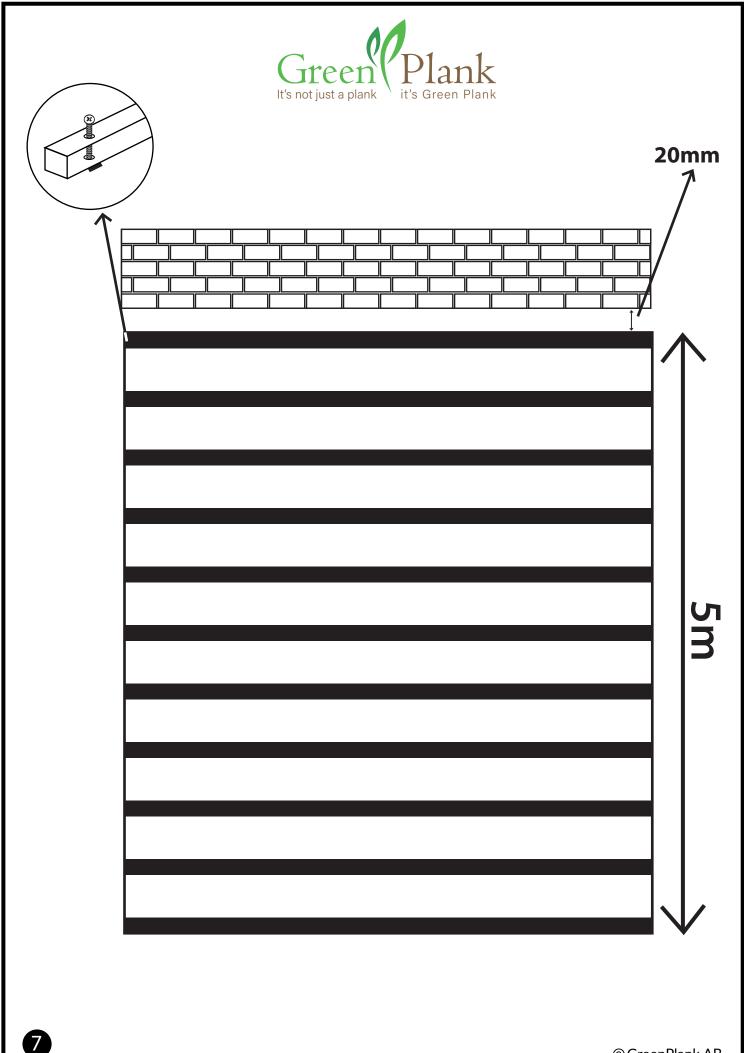




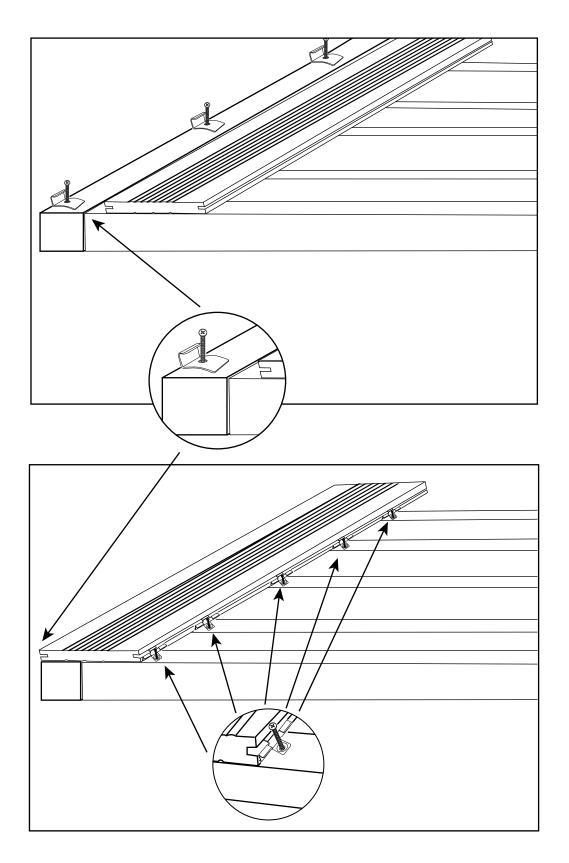


- *Please acclimatize the deck for at least 72 hours before construction.
- **Make sure to cut all boards at the same temperature to avoid mistakes

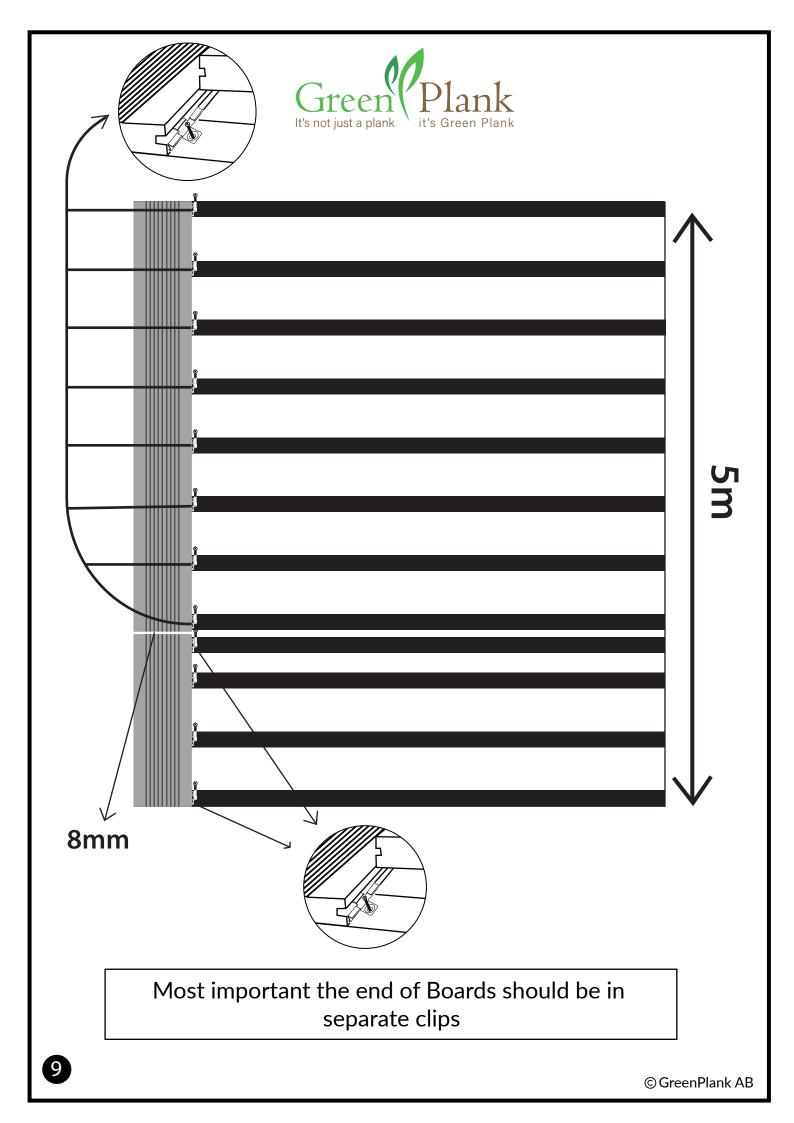



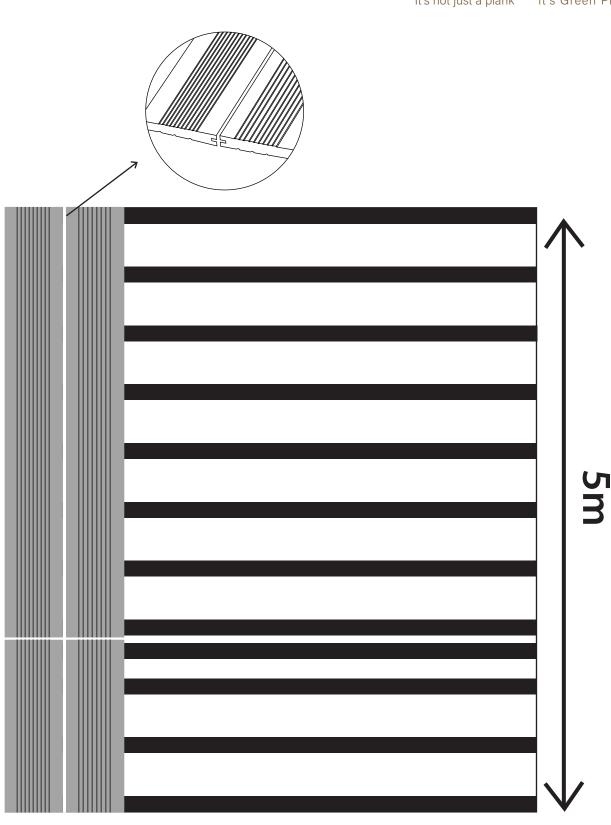

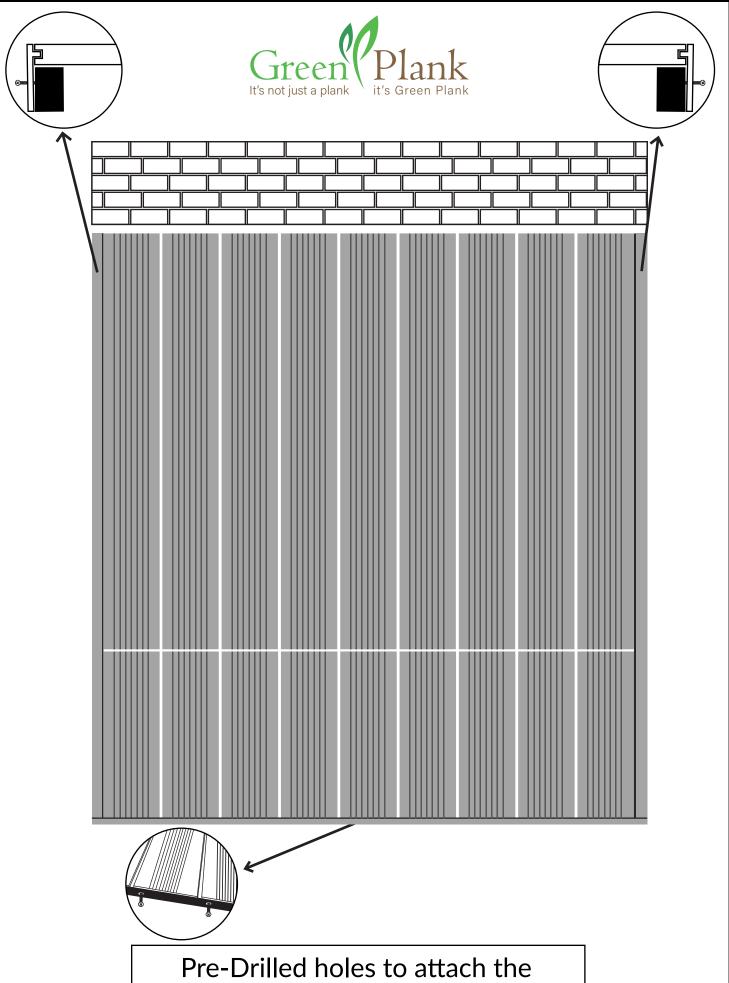

Pre-Drilled holes to attach the skirtings with screws



