


CLASSIC™ Composite Decking

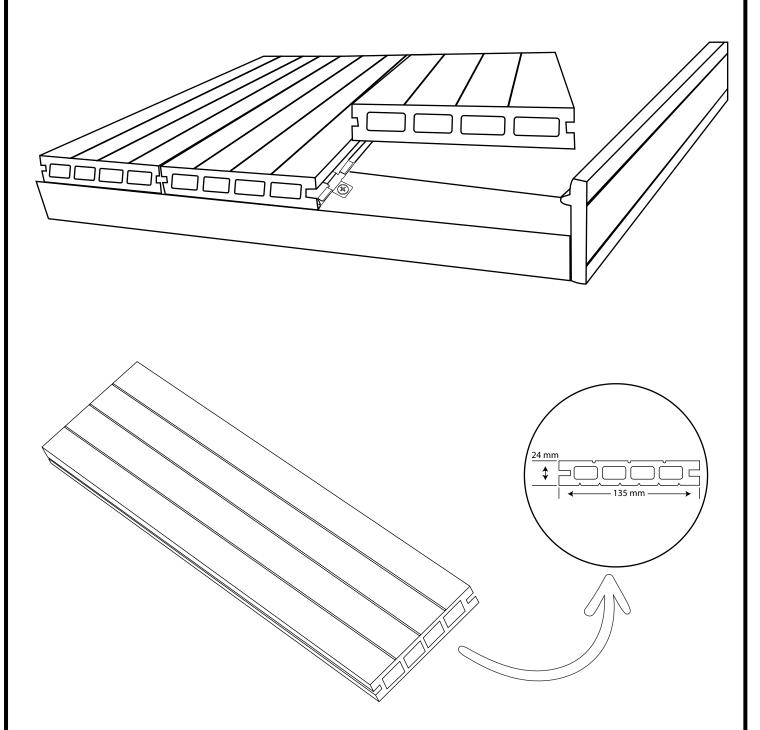



^{*}Please inspect the product and quantity before starting the construction of your deck.



Accessories

(Corner Trims)

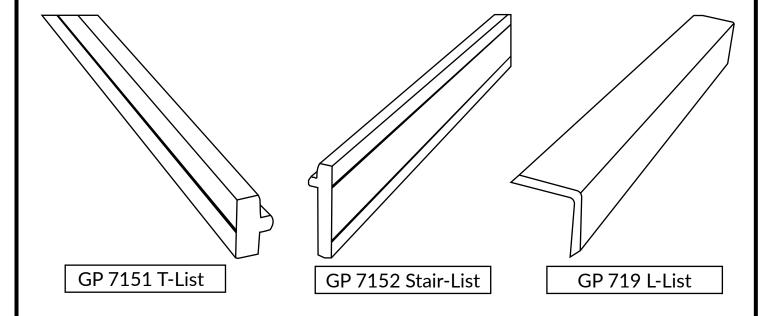

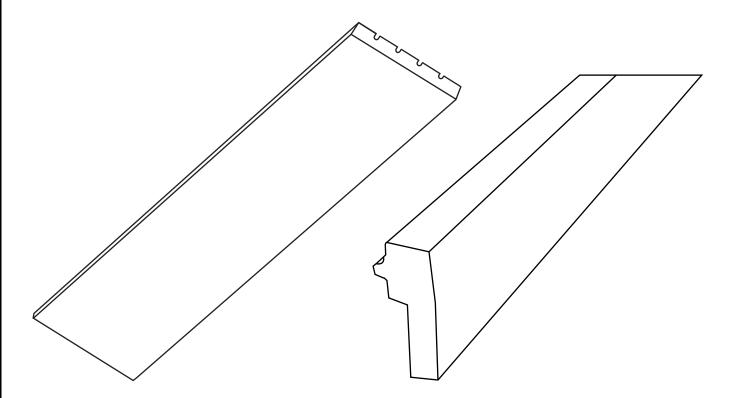



GP 709 skirting

GP 7177 Stairnose List




Accessories

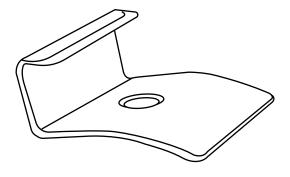




Start / End Clip

Plastic Mounting Clip

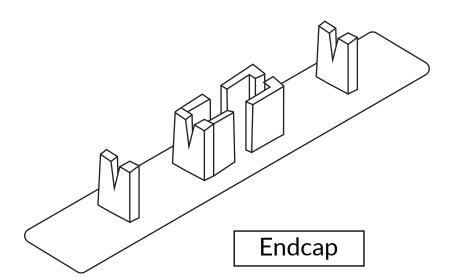

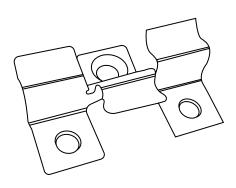

Metal Mounting Clip




Screw




Rubberpad


Tools



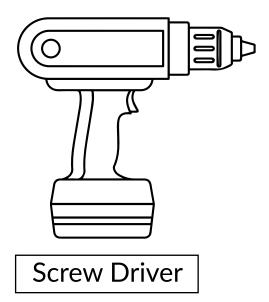

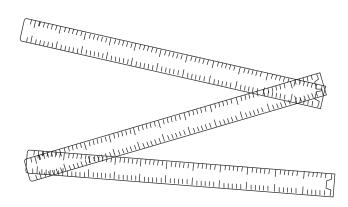


Ruler/Tape Measure

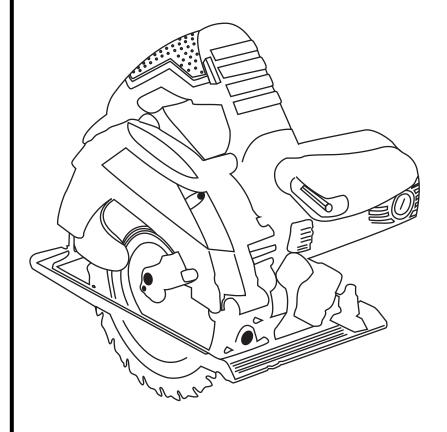




Saw

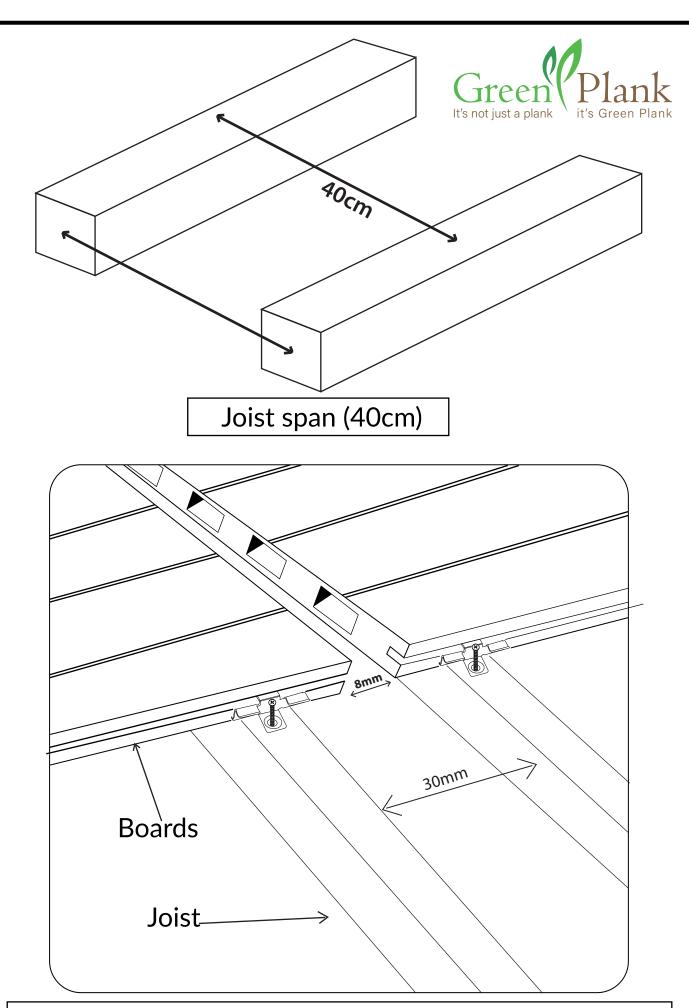


Atleast 8 mm distance between the ends of the boards




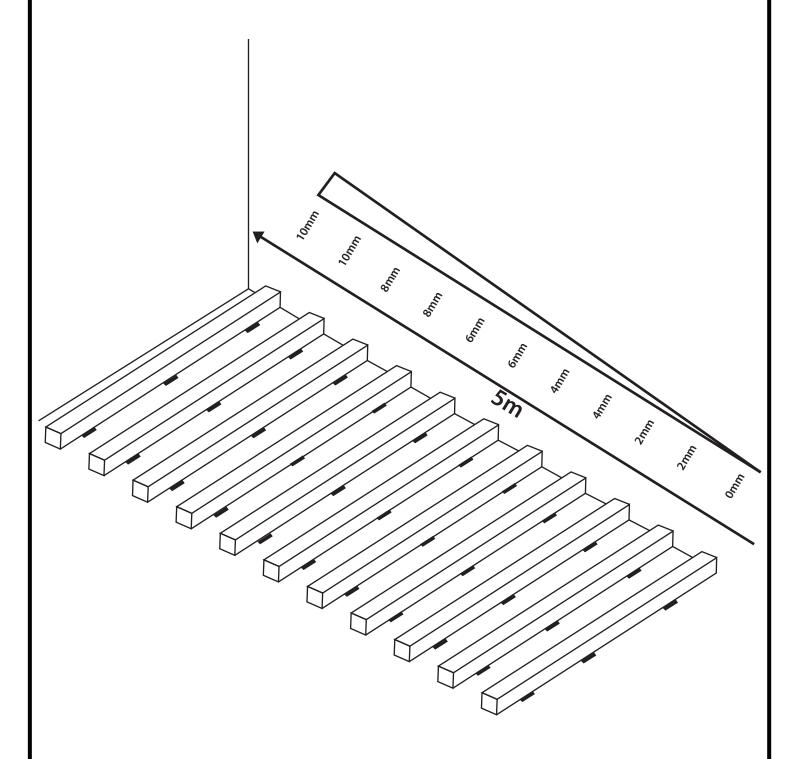

- *Construct the deck with a 2mm slope per 1 meter for water drainage.
- **You can use either rubber pads or plints to make the slope depending on the desired height of your deck.

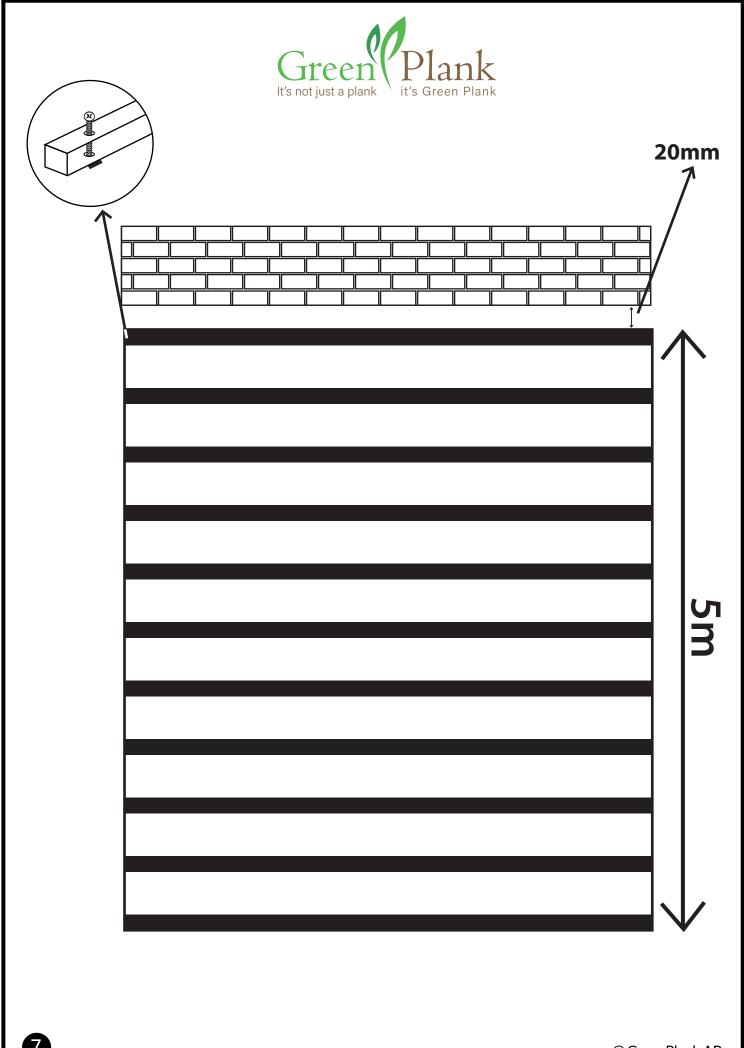




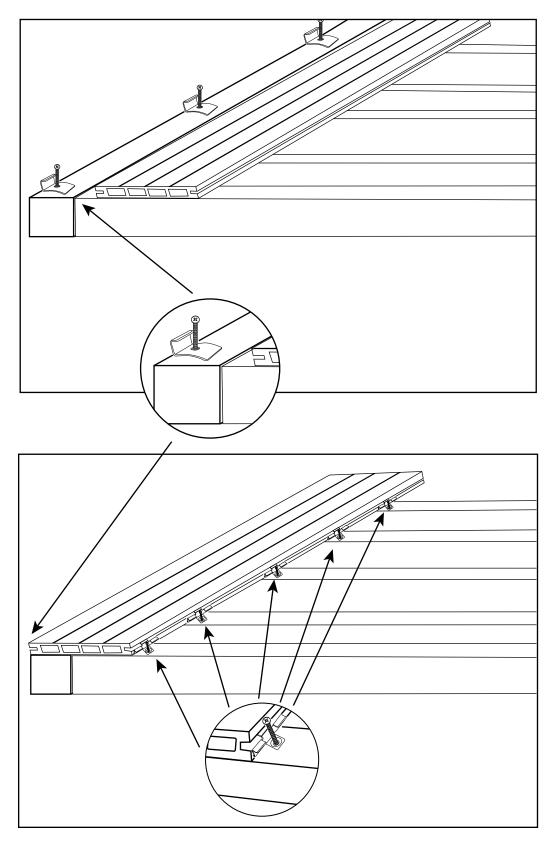



^{*}Please acclimatize the deck for at least 72 hours before construction.

^{**}Make sure to cut all boards at the same temperature to avoid mistakes

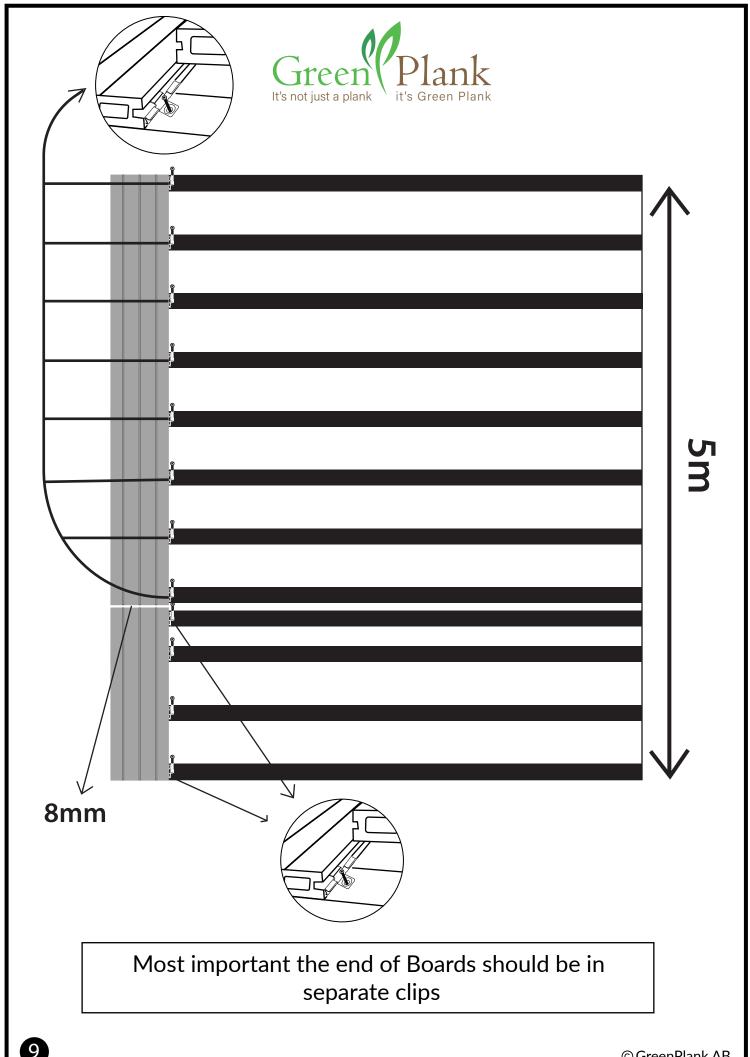



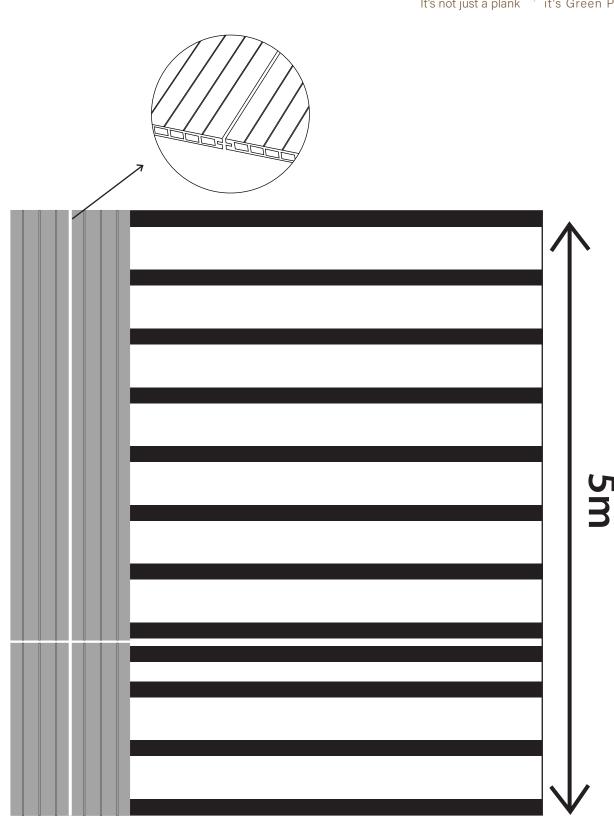

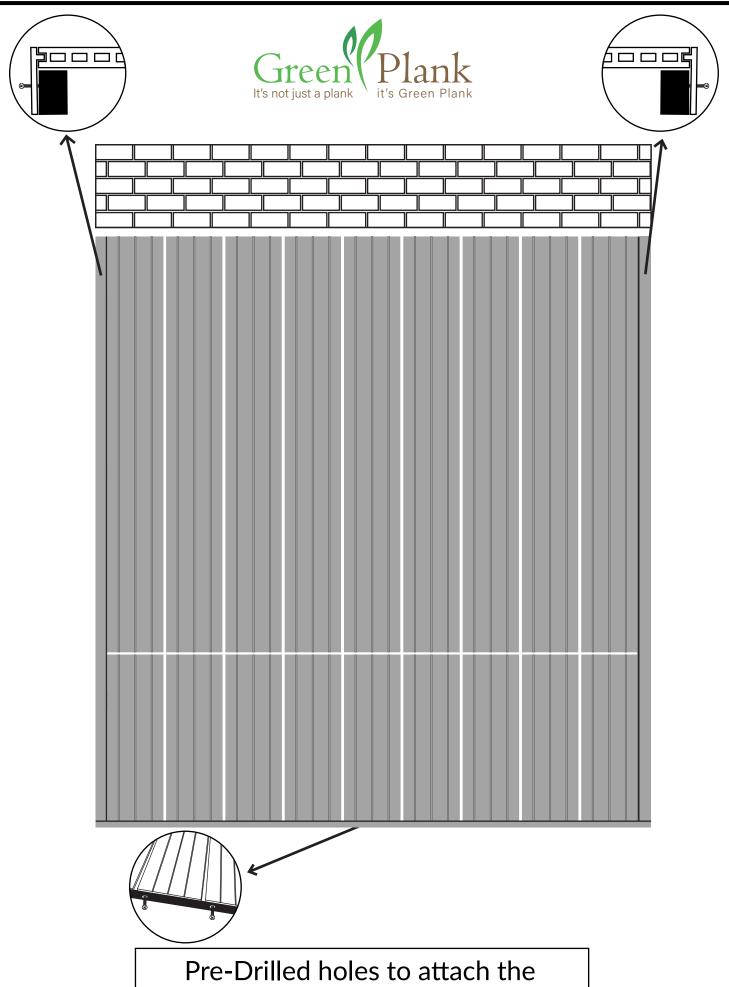

Pre-Drilled holes to attach the skirtings with screws



