

left side panel: 3/4 in softwood plywood

Measure everything from the bottom-left corner: the bottom edge and the left edge are straight and square. Grid lines are 1 in.

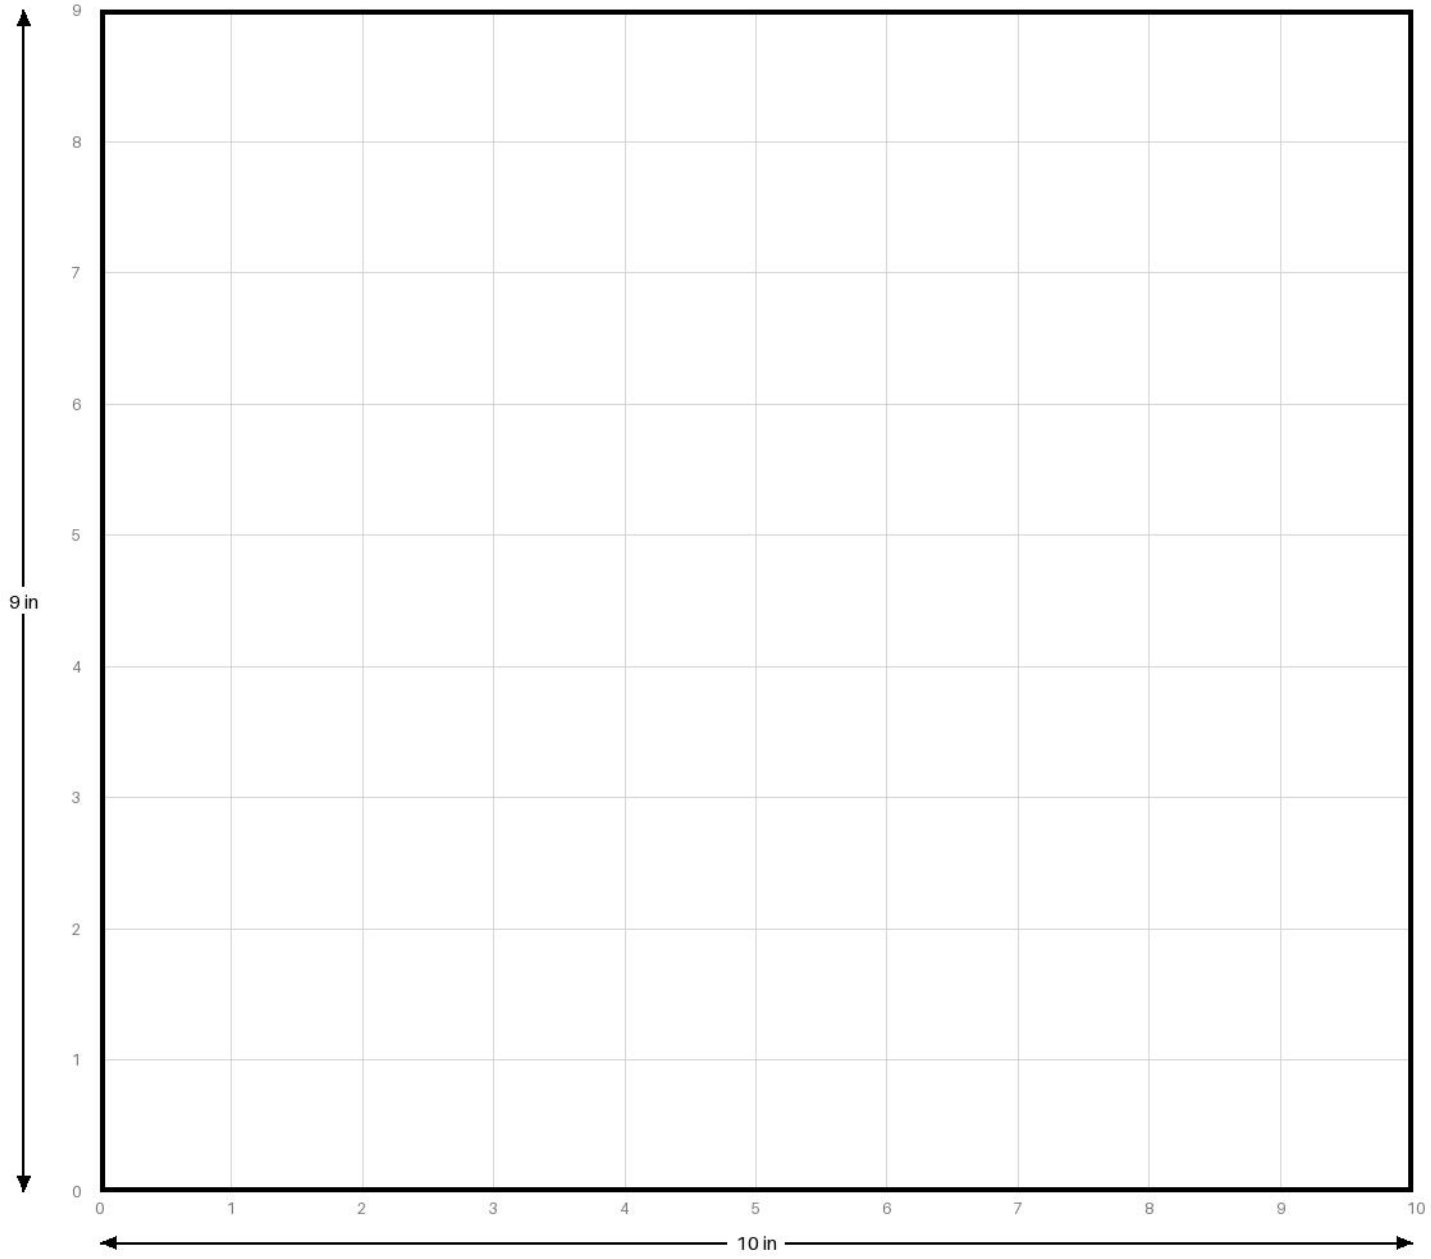


right side panel: 3/4 in softwood plywood

Measure everything from the bottom-left corner: the bottom edge and the left edge are straight and square. Grid lines are 1 in.

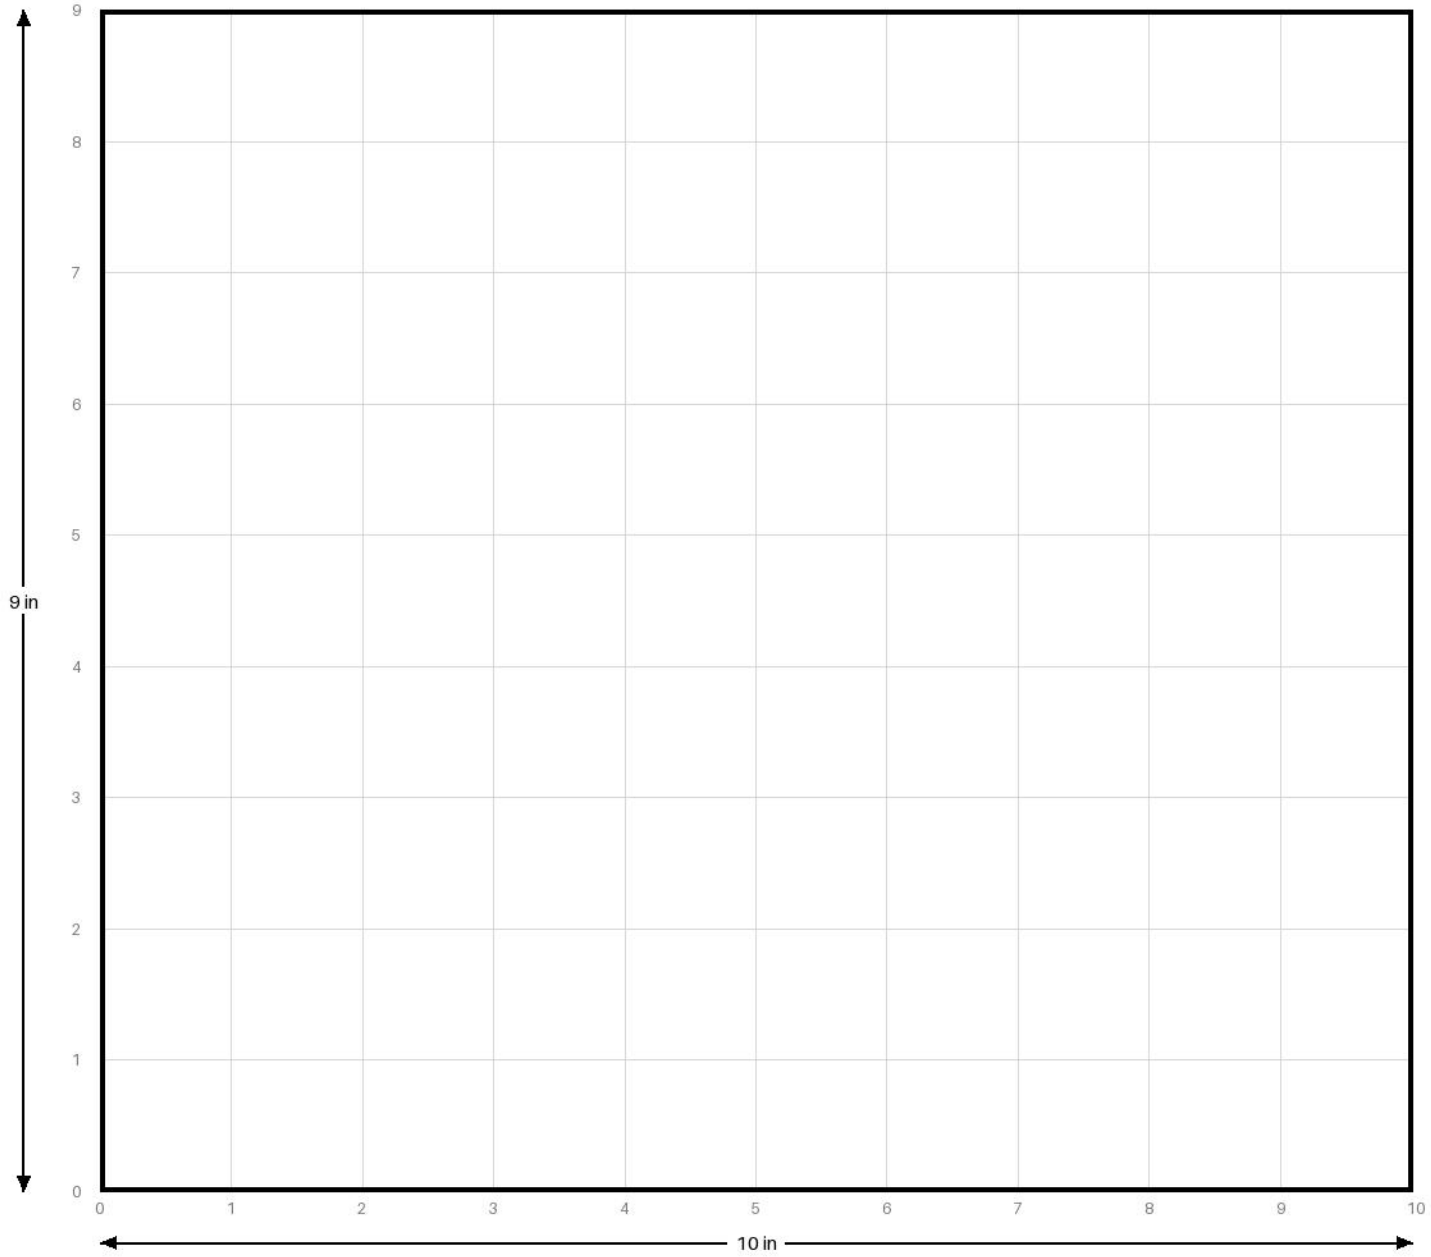


front panel: 3/4 in softwood plywood

Measure everything from the bottom-left corner: the bottom edge and the left edge are straight and square. Grid lines are 1 in.

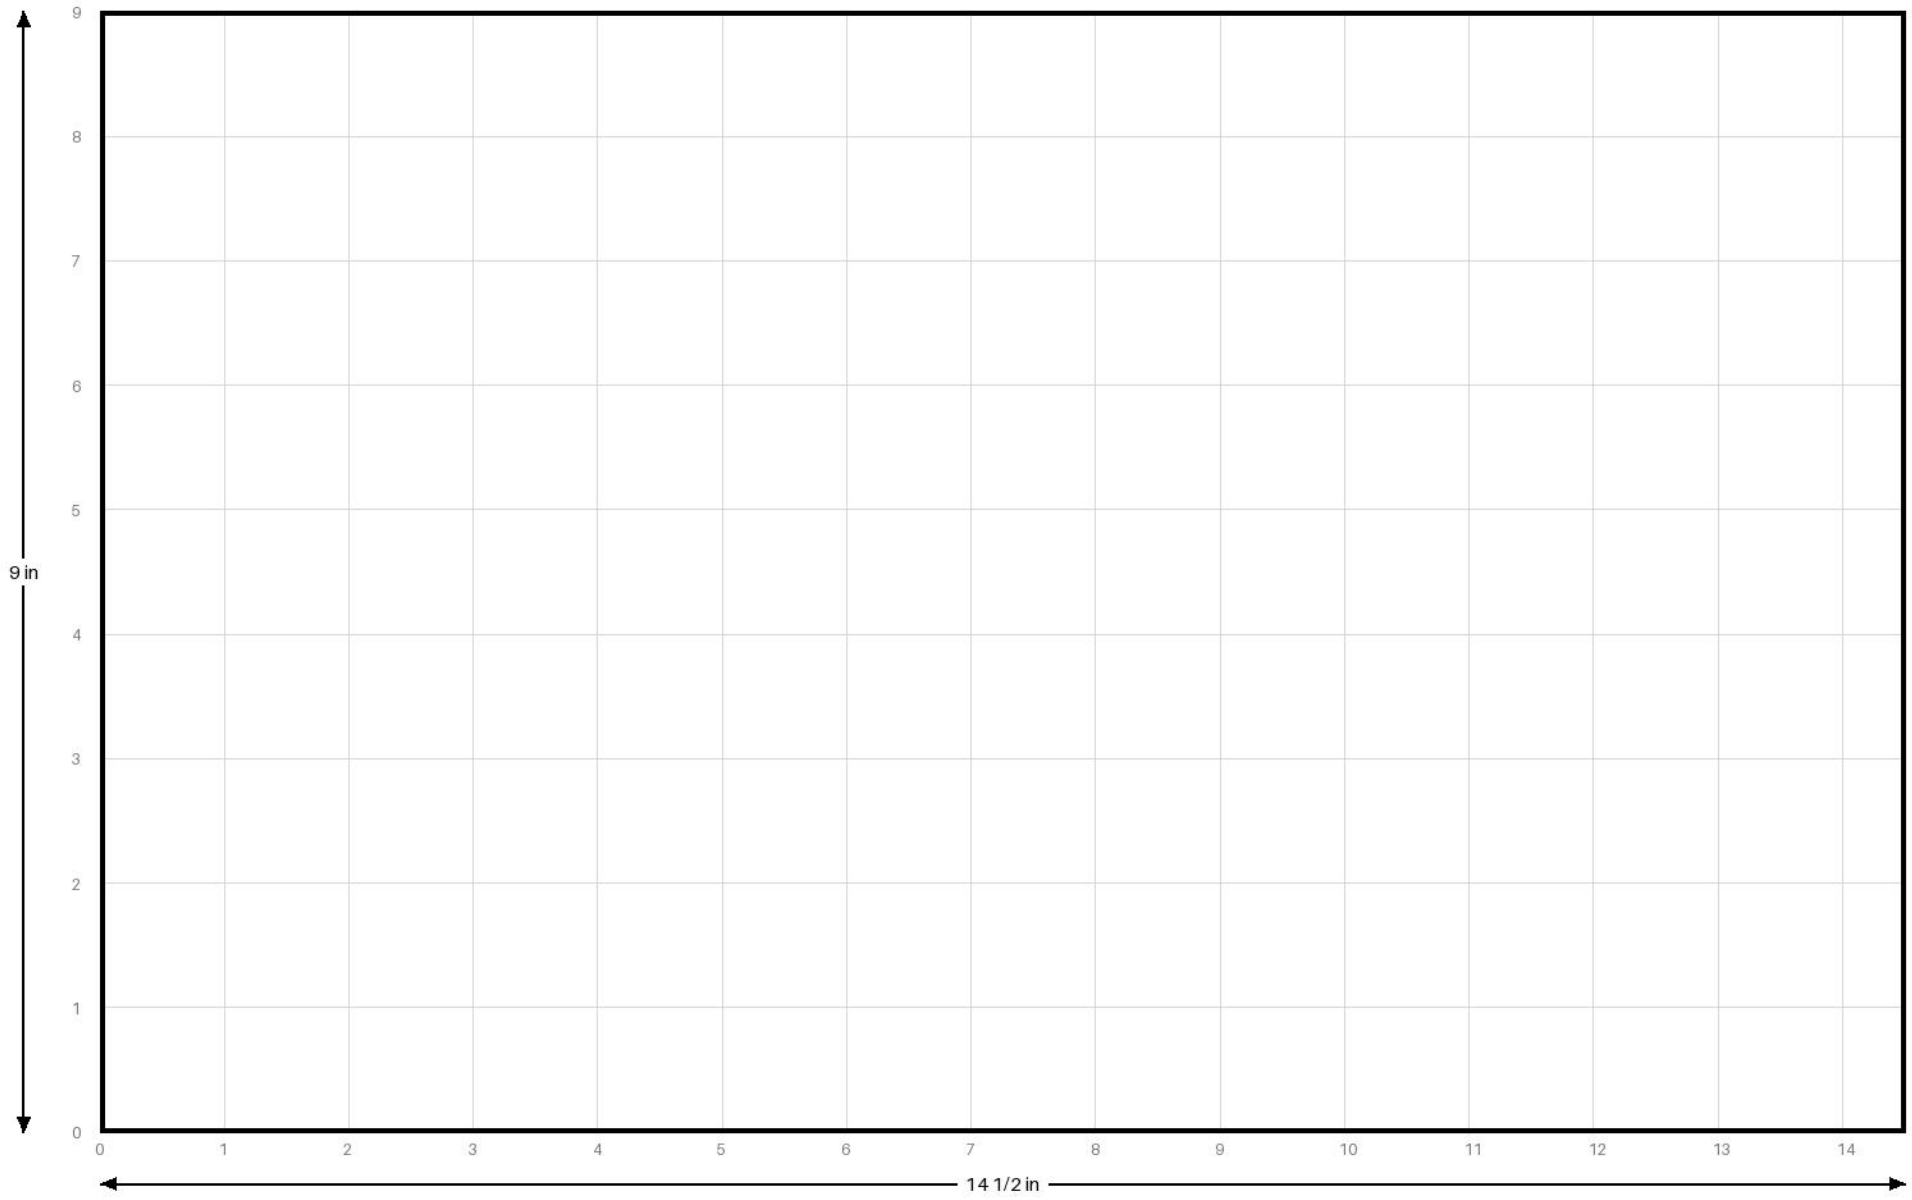

back panel: 3/4 in softwood plywood

Measure everything from the bottom-left corner: the bottom edge and the left edge are straight and square. Grid lines are 1 in.

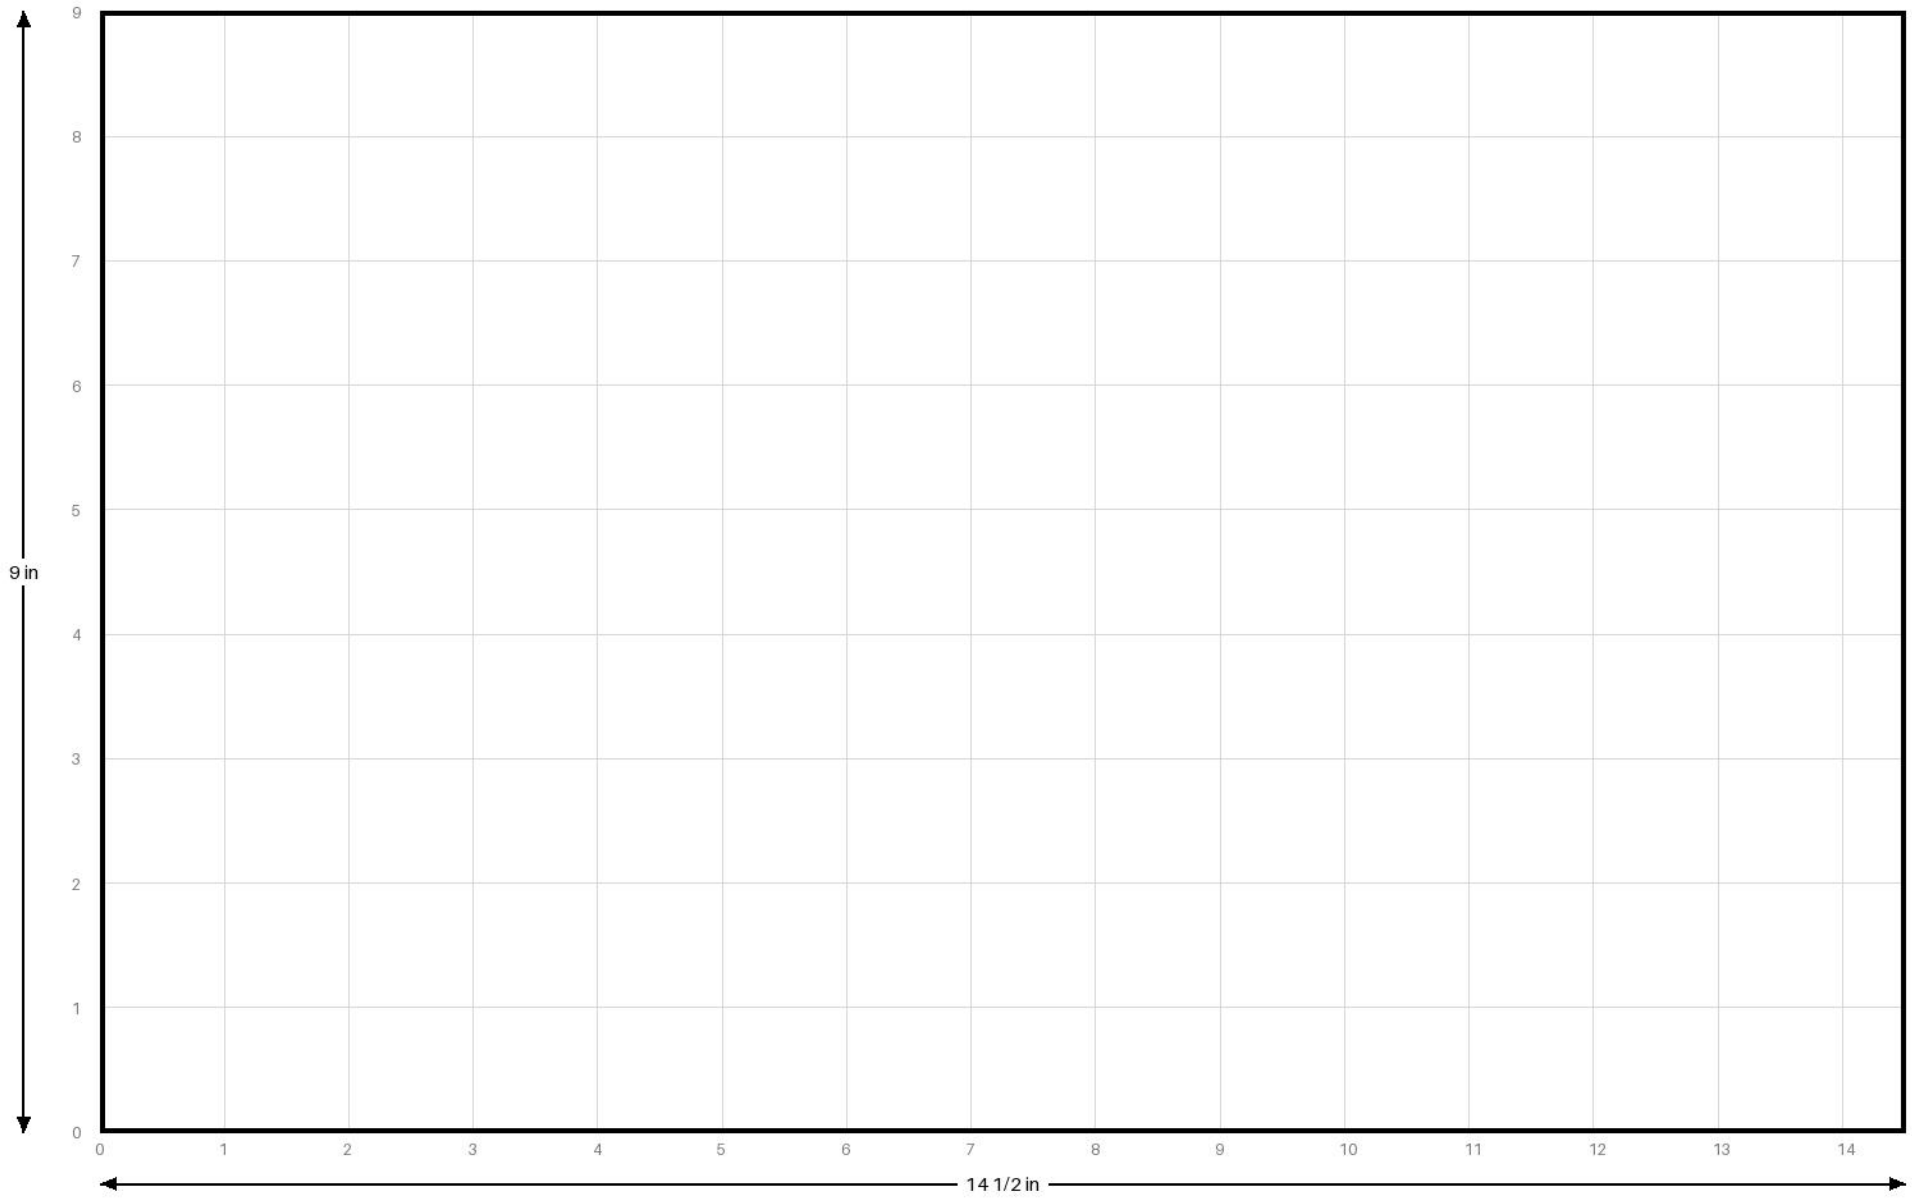

top tread: 3/4 in softwood plywood

Measure everything from the bottom-left corner: the bottom edge and the left edge are straight and square. Grid lines are 1 in.

