

A121 Breathing Reference Application User Guide

User Guide



A121 Breathing Reference Application User Guide

User Guide

Author: Acconeer AB

Version:a121-v1.4.0

Acconeer AB November 20, 2023



# Contents

1	Acconeer SDK Documentation Overview	4
2	Breathing	5
	2.1 Determine distance to person	
	2.2 Form time series	
	2.3 Bandpass filter	
	2.4 Estimate power spectrum	
	2.5 Application states	6
	2.6 GUI	6
	2.7 Calibration hints	7
	2.8 Practical considerations	8
	2.9 Tests	8
3	S Memory	9
_	3.1 Flash	ç
	3.2 RAM	
4	Power Consumption	g
•	. ono. oonouniphon	Ŭ
5	Disclaimer	10



# 1 Acconeer SDK Documentation Overview

To better understand what SDK document to use, a summary of the documents are shown in the table below.

Table 1: SDK document overview.

Name	Description	When to use				
RSS API documentation (html)						
rac oni	The complete C API documentation.	- RSS application implementation				
rss_api	•	- Understanding RSS API functions				
	User guides (PDF)					
A121 Assembly Test	Describes the Acconeer assembly	- Bring-up of HW/SW				
A121 Assembly Test	test functionality.	- Production test implementation				
A121 Breathing	Describes the functionality of the	- Working with the Breathing				
Reference Application	Breathing Reference Application.	Reference Application				
A121 Distance Detector	Describes usage and algorithms	- Working with the Distance Detector				
A121 Distance Detector	of the Distance Detector.	- Working with the Distance Detector				
	Describes how to implement each	- SW implementation of				
A121 SW Integration	integration function needed to use	custom HW integration				
	the Acconeer sensor.	custom II w integration				
A121 Presence Detector	Describes usage and algorithms	- Working with the Presence Detector				
	of the Presence Detector.					
A121 Smart Presence	Describes the functionality of the	- Working with the Smart Presence				
Reference Application	Smart Presence Reference Application.	Reference Application				
A121 Sparse IQ Service	Describes usage of the Sparse IQ	- Working with the Sparse IQ Service				
	Service.					
A121 Tank Level	Describes the functionality of the	- Working with the Tank Level				
Reference Application	Tank Level Reference Application.	Reference Application				
A121 Touchless Button	Describes the functionality of the	- Working with the Touchless Button				
Reference Application	Touchless Button Reference Application.	Reference Application				
	Describes the flow of taking an					
A121 STM32CubeIDE	Acconeer SDK and integrate into	- Using STM32CubeIDE				
	STM32CubeIDE.					
A121 Raspberry Pi Software	Describes how to develop for	- Working with Raspberry Pi				
A121 Raspoetty 11 Software	Raspberry Pi.					
A121 Ripple	Describes how to develop for	- Working with Ripple				
A121 Kipple	Ripple.	on Raspberry Pi				
XM125 Software	Describes how to develop for	- Working with XM125				
AWI123 Software	XM125.	- Working with AW123				
XM126 Software	Describes how to develop for	Working with VM126				
AWI120 Software	XM126.	- Working with XM126				
I2C Distance Detector	Describes the functionality of the	- Working with the				
12C Distance Detector	I2C Distance Detector Application.	I2C Distance Detector Application				
I2C Presence Detector	Describes the functionality of the	- Working with the				
12C Flesence Detector	I2C Presence Detector Application.	I2C Presence Detector Application				
	Handbook (PDF)					
	Describes different aspects of the	- To understand the Acconeer sensor				
Handbook	Acconeer offer, for example radar	- Use case evaluation				
	principles and how to configure	CSC Cuse Cvariation				
	Readme (txt)					
[README	Various target specific information	- After SDK download				
	and links	THE SER COMMON				



## 2 Breathing

This reference application shows how the breathing rate of a stationary person can be estimated using the A121 sensor.

The algorithm consists of the following key concepts:

- Determine the distance to the person using the presence algorithm.
- Form a time series, reflecting the breathing motion over time.
- Remove irrelevant signal content by applying a bandpass filter to the time series.
- Estimate the breating rate by calculating the power spectrum of the time series.

Each concept is explained in more detail in the following sections.

## 2.1 Determine distance to person

The algorithm utilize the presence algorithm to determine the distance to the person, located somewhere in the measurement range. The measurement range is defined through the reference application configuration parameters  $start_m$  and  $end_m$ .

The presence processor is run for a configurable duration of time, determined by distance\_determination\_duration. If no presence is detected during this period, a new measurement period is initiated. This procedure is repeated until a person is detected.

When presence is detected, the corresponding distance estimates (outputed by the presence algorithm) are passed through a lowpass filter. The final output of the filter, after the configured duration has elapsed, is used as the distance to the person.

Once the distance to the person has been determined, a sub-segment of the measured range is analyzed to estimate the breathing rate. The segment is centered around the estimated distance and the width is determined by the parameter  $num\_distances\_to\_analyze$ . The value of the parameter should be determined by evaluating the specific use case at hand. A larger number will yield more distances being fed through the algorithm, providing more information, but also increase processing and memory usage. Also, a too large number can potentially result in distances containing no breathing being fed to the algorithm, introducing more noise to estimation process.

The usage of the presence processor can be disabled through the user parameter  $use\_presence\_processor$ . If disabled, the full measurement range is analyzed. In this case, it is important to narrow the measured range to the interval where the breathing motion is present.

## 2.2 Form time series

Once the segment to be analyzed has been identified, a fifo buffer is used to store the time series, characterizing the breathing motion at each distance in the segment.

The concept for estimating the breathing motion utilize processing, similar to what is described in the phase tracking example. For details, see the phase tracking documentation.

The sparse IQ data service produce complex data samples where the amplitude corresponds to the amount of measured energy and the phase to the relative timing of the transmitted and returning pulse. A displacement of the reflecting object results in a change of this relative phase. The difference in phase between two consecutive measurements can therefor be converted to the corresponding relative change in distance to the reflecting object. The algorithm takes advantage of this by cumulating the relative changes in phase and thereby track the motion of the chest of the breathing person.

The result is stored in the previously mentioned fifo buffer. The length of the buffer depends on the selected time series length (time\_series\_length\_s), frame rate (frame\_rate). The number of buffers is determined by the number of distance to be analyzed (num\_distances\_to\_analyze).



## 2.3 Bandpass filter

The purpose of the bandpass filter is to remove irrelevant content in the signal before further processing. When configuring the application, the user specifies the lowest and highest anticipated breathing rates through the configuration parameters  $lowest\_breathing\_rate$  and  $highest\_breathing\_rate$ . These values are used when defining the parameters of the bandpass filter.

After filtering, low frequency components, including bias, and high frequency components are suppressed, resulting in a more easily processed time series.

## 2.4 Estimate power spectrum

The breathing rate is estimated by identifying the peak location in the Power Spectral Density (PSD) of the time series.

As the frequency bins of the PSD are discrete, peak interpolation is utilized to further improve the estimation accuracy.

The PSD is not calculated at each time step as the majority of the fifo buffer consists of the same data it did during the pervious time step. Instead, the PSD is analyzed once half of the buffer contains new data, e.g., if the time series length is 20 s, there will be 10 s between evaluations of the PSD.

## 2.5 Application states

The application utilize a state variable with the following states to track the status of the algorithm.

- NO\_PRESENCE\_DETECTED: The algorithm did not detect any presence. If no presence is found, the algorithm
  initiates a new search.
- INTRA\_PRESENCE\_DETECTED: Intra presence has been detected. Intra presence corresponds to a fast or large motion. If detected, the breathing analysis is paused. Once the intra presence is no longer detected, the distance to the person is again estimated as it might have changed due to the movement.
- DETERMINE\_DISTANCE\_ESTIMATE: Determining the distance to the person using the presence processor.
- ESTIMATE\_BREATHING\_RATE: Estimating the breathing rate in the segment where a person has been located.

The state is returned as a part of the reference application result, app\_state

#### 2.6 **GUI**

The following figure shows the Expolration tool GUI of the breathing reference application.


The upper graph shows the inter and intra presence score. The highlighted section of the traces indicates the region where the breathing rate is being analyzed.

The second graph shows the time series of the center point in the segment being analyzed. The neighbouring distances, also being analyzed, are not visualized to avoid cluttering the plot.

Next, the third plot shows the power spectrum of the time series. The breathing rate is estimated as the peak location(plus interpolation as previously mentioned) of the PSD.

Lastly, the lower plot shows the history of the estimated breathing rate. The solid blue line shows the estimated rate after each frame and the red dots show the output of the embedded implementation, outputing a new values when half of the buffer contains new data. Here, the person has an initial breathing rate of 12 bpm, transferring to a higher rate around 19 bpm.



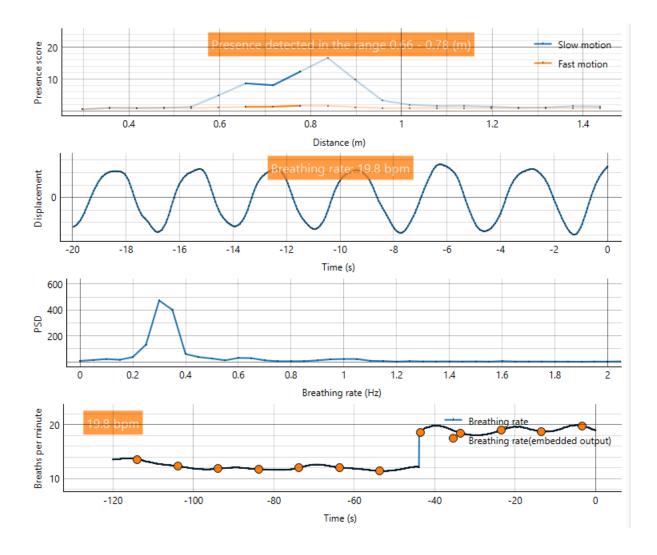

## 2.7 Calibration hints

This section outlines a number of recommendations when calibrating the reference application.

- Use the presence processor to determine the distance to the person by setting use\_presence\_processor to True.
- Set num\_distances\_to\_analyze so that the majority of the peak of the presence score is included in the breathing analysis.
- Use a duration between 5-10 s for the distance\_determination\_duration.
- Adjust the intra presence threshold to minimize false triggers when breathing normally, but detecting anticipated movements. Anticipated movements refers to motions that does not originate from regular breathing, such as a person changing position.
- Select as high profile as possible, while avoiding interference with the direct leakage. A larger starting point (start\_m) allows for a higher profile.
- Adjust sweeps\_per\_frame to get good performance of the presence processor. The default value works well in general, but might have to be increased when measuring at longer distances.
- Once the sweeps per frame has been set, increase hwaas to achieve better SNR.
- If needed, the *frame\_rate* can be lowered from the default of 20 Hz to reduce the memory and power consumption. A suitable value for an embedded application is 5-10Hz.

Use the pre-defined presets as a starting point and then tweak if necessary.



#### 2.8 Practical considerations

This section outlines a number of practical considerations when getting started with the breathing reference application.

- Start with one of the recommended presets, and then tune parameters if necessary.
- If there is a need to change the dynamics of the presence processor, do the tuning in the presence algorithm GUI as there is more visual feedback related to the presence algorithm. Once new parameter values has been determined, transfer them to the breathing reference application.
- When running the breathing reference application, aim the sensor towards the chest and stomach of the person for best performance.
- Use a lens when measuring at distances greater than 1 meter.

#### 2.9 Tests

This section presents results from testing the algorithm in various scenarios.

## **Test setup**

The tests were performed with an adult sitting, an adult lying down and an infant laying down. The data collection and processing was done with the breathing reference application, available in Exploration tool. The following pictures illustrates the setup.





## Configuration

The presets, available in the Exploration tool, were used when testing. In the case when the person is lying down at 2 meters(presented below), the end point of the sitting preset was extended to 2.5 m.

## Results

The results from the testing are reported in the following table.

Table 2: Breathing reference application test results.

Case	Distance to person (m)	Actual rate (bpm)	Estimate rate (bpm)
Adult sitting	1.0	15.9	15.0
Adult lying down	1.0	18.3	18.0
Adult lying down	2.0	8.7	9.0
Infant lying down	0.5	18.4	18.0



## 3 Memory

## 3.1 Flash

The reference application compiled from ref\_app\_breathing.c on the XM125 module requires around 90 kB.

## 3.2 RAM

The RAM can be divided into three categories, static RAM, heap, and stack. Below is a table for approximate RAM for an application compiled from ref\_app\_breathing.c.

RAM	Size (kB)		
Preset	Sitting	Infant	
Static	1	1	
Heap	16	16	
Heap Stack	4	4	
Total	21	21	

## 4 Power Consumption

Average current	Curren	Current (mA)	
Preset	Sitting	Infant	
	10	6.5	



#### 5 Disclaimer

The information herein is believed to be correct as of the date issued. Acconeer AB ("Acconeer") will not be responsible for damages of any nature resulting from the use or reliance upon the information contained herein. Acconeer makes no warranties, expressed or implied, of merchantability or fitness for a particular purpose or course of performance or usage of trade. Therefore, it is the user's responsibility to thoroughly test the product in their particular application to determine its performance, efficacy and safety. Users should obtain the latest relevant information before placing orders.

Unless Acconeer has explicitly designated an individual Acconeer product as meeting the requirement of a particular industry standard, Acconeer is not responsible for any failure to meet such industry standard requirements.

Unless explicitly stated herein this document Acconeer has not performed any regulatory conformity test. It is the user's responsibility to assure that necessary regulatory conditions are met and approvals have been obtained when using the product. Regardless of whether the product has passed any conformity test, this document does not constitute any regulatory approval of the user's product or application using Acconeer's product.

Nothing contained herein is to be considered as permission or a recommendation to infringe any patent or any other intellectual property right. No license, express or implied, to any intellectual property right is granted by Acconeer herein.

Acconeer reserves the right to at any time correct, change, amend, enhance, modify, and improve this document and/or Acconeer products without notice.

This document supersedes and replaces all information supplied prior to the publication hereof.

