



120/230V 3WIRE
SOURCE

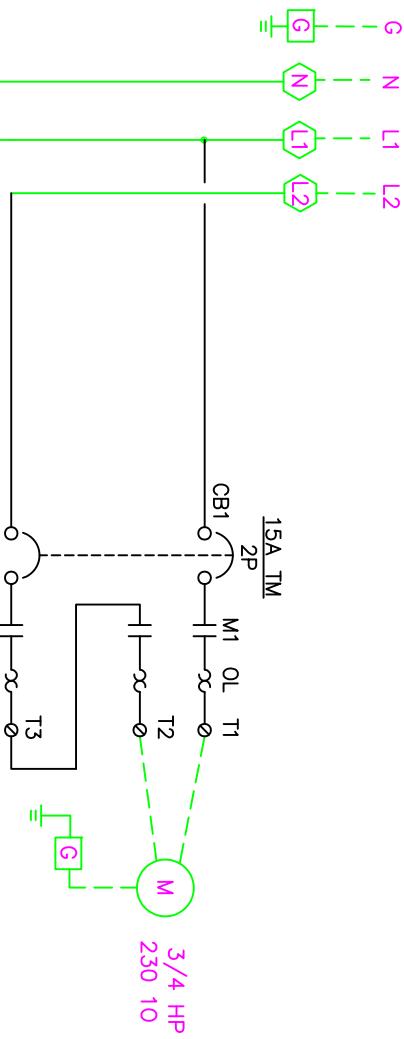

CLOCK - PINS OUT = TIME THAT COMPRESSOR WILL BE ON
PINS IN = TIME THAT COMPRESSOR WILL BE OFF
ON CLOCK MAKE SURE THAT THE MANUAL-AUTO-OFF LEAVER
IS IN THE CENTER POSITION (AUTO).

— DENOTES PANEL TERMINAL
— DENOTES FIELD WIRING

20A CB2

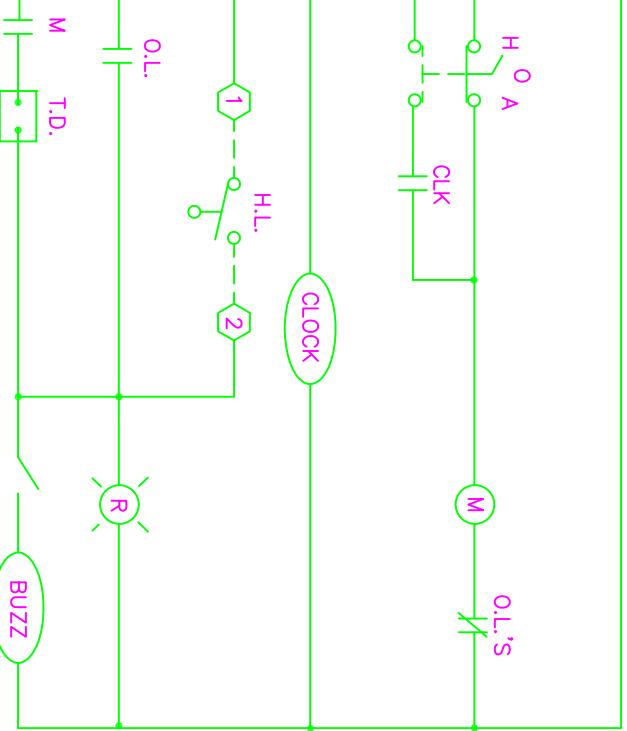

BILL OF MATERIALS

ITEM	QTY	MANUFACTURER	PART NO.	DESCRIPTION
1	1	VYNICKER	VJ210H-WPL	ENCLOSURE
2	1	VYNICKER	A1210MP	BACKPLATE
3	1	SQ D	QOU215	CB1
4	1	SQ D	QOU120	CB2
5	1	ABB	A16-30-10-84	MOTOR STARTER
6	1	ABB	TA25DU8.5	O.L. (6.0-8.5A)
7	1	ACI	JR22FR	PILOT LIGHT
8	1	ACI	JR22P3M20B	HOA
9	1	GRASSLIN	STUZH-L	TIME CLOCK
10	1	DAYTON	2A562	TIME DELAY

TREATMENT PLANT
ALARM

O.L. TRIP