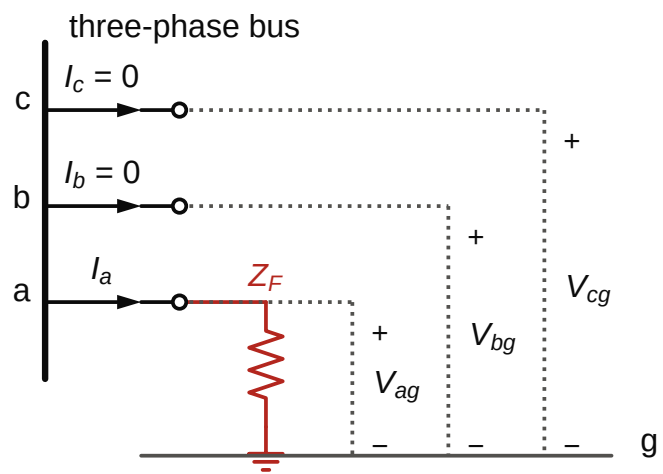

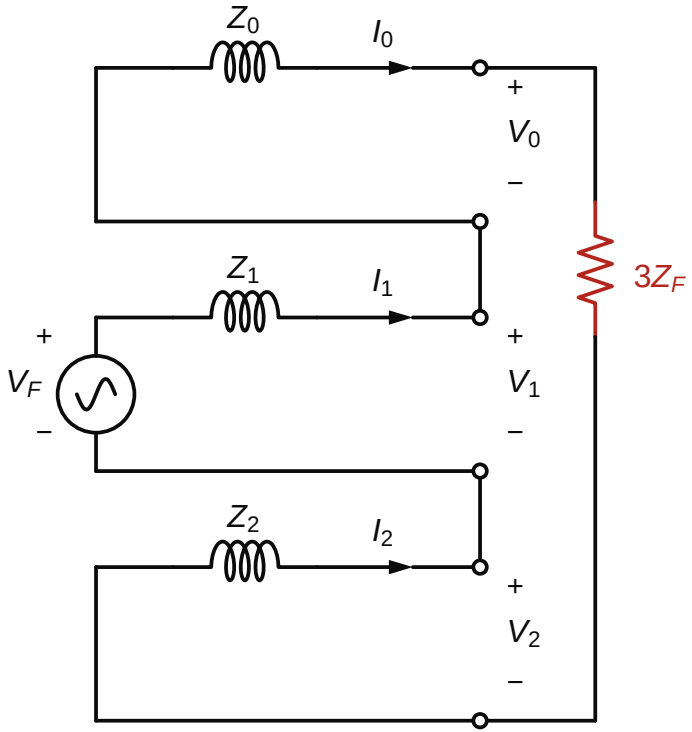

Fault conditions in the phase domain:

$V_{ag} = Z_F I_a$

$I_b = I_c = 0$

(a) Single line-to-ground fault on phase a of a three-phase bus

Fault conditions in the sequence domain:

$I_0 = I_1 = I_2$

$V_0 + V_1 + V_2 = 3Z_F I_1$

(b) Interconnected sequence networks