

una duda, tengo una caldera de pellets con tres salidas, una en la habitacion en la q se encuentra, otra hacia una habitacion adyacente, tubo, y dos tubos hacia arriba, el de los gases al exterior y otro q canaliza un tubo hacia el piso superior, mi duda es si este tubo podria canalizarse en un circuito de aire en toda la habitacion superior, approx 30m, para calderar todo el suelo y no una parte, y si creando un sistema asi es mas optimo aprovechando la temperatura que un tubo q calienta una sola zona, entiendo q el circuito enfriara el aire no? x lo q no se

✖ Pensó durante 10 segundos ▾

The user has a pellet boiler with three outputs: one in the room where it is located, one to an adjacent room, and two pipes going upward: one for exhaust gases and another that channels a pipe to the upper floor. They want to know if this pipe could be connected to an air circuit throughout the upper room (approximately 30m) to heat the entire floor, and whether such a system would be more optimal than a single-zone pipe, understanding that the circuit would cool the air.

I need to search for information on pellet boiler ducted air distribution, multi-zone heating, duct design, and efficiency considerations. I'll search in Spanish.

Key aspects to cover:

- How pellet boiler air ducts work
- Designing a ducted air system for multiple rooms
- Efficiency of distributing hot air over long distances
- Temperature drop in ducts
- Comparison of single-zone vs. multi-zone
- Practical considerations (fan, duct sizing, insulation, return air)
- Whether the boiler's fan can handle additional ductwork
- Alternatives (e.g., using water-based heat distribution if the boiler has a water circuit, but the user describes air outputs)

I'll search for relevant terms.

🔍 Encontrados 42 resultados web 🔍 🔍 🔍 🔍

The search results provide some relevant links. I need to open them to gather detailed information. I'll open the most promising ones: result 0 from search 0 (Olympia Pellet), result 1 from search 0 (Ecoforest guide), result 2 from search 0 (Seraphim Energy), result 4 from search 0 (Ecoforest), and maybe result 0 from search 1 (AIVC) for temperature loss. Also, result 3 from search 3 (Lacunza manual) for ducting details. I'll also look for information on ducted systems and efficiency.

📄 Leer 6 páginas [Olympia Pellet Canalizzata Sfera Plus](#) ↗

[Estufas de pellets canalizables: guía de instalación y normativa 2025 | Ecoforest](#) ↗

[Canalizar estufa de pellets - ¿Funciona? Guía completa](#) ↗

→ [Estufas de pellets canalizables: ¿Cómo llevar el calor a 3 habitaciones sin perder eficiencia?](#) » se... ↗
and ↗ Ver todo

The opened pages provide useful information. The Ecoforest guide mentions duct lengths up to 7-14 meters and the importance of insulation. The Seraphim guide emphasizes that ducting works best when planned from the start and that long runs and bends reduce efficiency. The Lacunza manual recommends not exceeding 5-7 meters and using smooth, insulated ducts. The Olympia PDF mentions a maximum direct ducting of 3 meters and a diameter of 100 mm.

The user's proposed circuit of 30 meters is significantly longer than the recommended limits. This will cause substantial temperature drop and pressure loss. I need to explain the factors affecting efficiency: length, insulation, duct diameter, number of bends, and airflow. I should also discuss whether the boiler's fan can handle the additional resistance, and the potential need for a booster fan.

I should also consider alternatives: maybe using the existing water circuit if the boiler is a hydro model? But the user says it's a "caldera de pellets" with air outputs, so it might be an air-based

system. Alternatively, they could use a separate distribution system with a plenum and multiple branches, but 30m is still long.

I need to search for more specific information on long duct runs, temperature drop calculations, and booster fans.

Q Encontrados 40 resultados web 🔍 📄 📄 📄

The search results confirm the general limits: many manufacturers recommend not exceeding 5-7 meters per duct run, and some even less. The user's 30-meter circuit is way beyond typical recommendations. I need to explain that while it might be physically possible with a large enough duct and a powerful booster fan, the efficiency will be low due to heat loss and pressure drop. I should also mention that the boiler's internal fan likely cannot handle the additional resistance, so a separate inline fan would be needed.

I should structure the answer: first, clarify the difference between the exhaust duct and the hot air duct (the user mentions "el de los gases al exterior y otro q canaliza un tubo hacia el piso superior" – the latter is the hot air duct). Then explain the factors affecting feasibility: duct length, insulation, diameter, number of bends, airflow requirements, and the boiler's fan capacity. Provide a comparison: single long duct vs. multiple shorter branches. Discuss efficiency: yes, the air will cool down; calculate approximate temperature drop. Mention that for 30m, even with insulation, you might lose a significant portion of the heat. Suggest alternatives: using a water-based system if the boiler is a hydro model, or installing a separate distribution system with a plenum and multiple shorter runs, or using a booster fan. Also note that the boiler's output might not be sufficient to heat the entire upper floor if it's 30m of ducting with multiple outlets.

I'll cite sources: Ecoforest guide (duct lengths up to 7-14m, insulation), Lacunza manual (5-7m limit), Olympia PDF (3m direct), Seraphim guide (long runs reduce efficiency), AIVC paper (temperature decay exponential), and the MCZ group result about not exceeding 6m for Ø80mm.

I'll also mention that the user's description of "tres salidas" might refer to three air outlets, one of which is the exhaust? Actually they say "una en la habitacion en la q se encuentra, otra hacia una habitacion adyacente, tubo, y dos tubos hacia arriba, el de los gases al exterior y otro q canaliza un tubo hacia el piso superior". So the boiler has: one outlet in the same room, one to an adjacent room, and two upward pipes: one for exhaust gases, and one that channels air to the upper floor. So the upward air duct is the one they want to extend into a 30m circuit. So the boiler already has a duct to the upper floor. They want to distribute that air throughout the upper floor via a circuit. That's the key.

I'll advise: if the existing duct to the upper floor is already at the limit, extending it into a 30m loop will likely result in very low airflow and temperature at the far end. You'd need to increase duct diameter (e.g., to 150-200mm) and use a booster fan. But even then, the boiler's fan may not overcome the pressure drop. It's often more efficient to use a plenum with multiple shorter branches (e.g., 4-5 outlets of 5-6m each) rather than one long 30m run.

I'll also mention that if the boiler has a water circuit (many "calderas" do), a hydronic system with radiators or underfloor heating would be far more efficient for distributing heat over long distances. But the user seems to have an air-based system.

I'll conclude with a summary: feasible with modifications, but likely less efficient than shorter, multiple branches; need to calculate pressure drop and heat loss; consider a booster fan and larger insulated ducts; if possible, use a water-based distribution.

Now I'll write the answer in Spanish, concise but detailed.

Entiendo tu duda. Tienes una caldera de pellets con varias salidas de aire caliente, y una de ellas ya sube a la planta superior. Quieres saber si puedes alargar ese conducto para crear un circuito de 30 metros que reparta el calor por toda la planta, y si eso sería más eficiente que dejar un solo tubo calentando una zona. La respuesta corta es: **técnicamente se puede, pero con muchas matizaciones; y muy probablemente no sea más eficiente que un reparto bien diseñado con varios ramales cortos.**

🔥 Primero, aclarar los circuitos

En una estufa o caldera de pellets canalizable hay dos circuitos totalmente independientes:

- **Salida de humos:** evacúa los gases de combustión al exterior. No se debe mezclar con el aire de calefacción.
- **Canalización de aire caliente:** lleva el aire ya calentado por el intercambiador hacia otras estancias.

Tú te refieres al segundo. Ese tubo que sube a la planta superior es una **canalización de aire caliente**, y es el que quieres convertir en un circuito de 30 m.

El problema de los 30 metros

Los fabricantes son muy claros con las longitudes máximas. No es un capricho: cada metro de conducto, cada codo y cada derivación **aumentan la pérdida de carga** (resistencia al paso del aire) y **favorecen el enfriamiento del aire** por las paredes del tubo.

- Manuales como el de Lacunza recomiendan **no superar los 5-7 metros** por conducto, usar tubos lisos por dentro y aislados por fuera, y el menor número de curvas posible ²⁸ .
- Olympia, en su ficha técnica, limita la canalización directa a **3 metros** y usa diámetro de 100 mm ¹ .
- Ecoforest habla de que algunas estufas pueden llegar a **7 o 14 metros**, pero siempre con conductos bien dimensionados y aislados ⁵ .
- Otras guías técnicas aconsejan **no pasar de 6 metros** con tubo de Ø80 mm y evitar más de 2-3 m horizontales ⁸ .

30 metros es 4 o 5 veces el límite típico. Aunque consiguieras mover el aire, llegaría muy frío y con muy poco caudal.

¿Se enfría el aire en el conducto? Sí, y mucho

El aire caliente pierde temperatura a medida que avanza por el conducto. La caída no es lineal: sigue una **ley exponencial**. Según el modelo físico, la temperatura del aire va decayendo en función de la longitud, el aislamiento, el caudal y la diferencia de temperatura con el ambiente ¹¹ .

En la práctica, un conducto mal aislado o muy largo puede perder **entre el 30% y el 60% de su calor** antes de llegar al final. Con 30 metros, incluso con aislamiento de lana mineral de 25 mm, la temperatura de salida podría ser solo unos pocos grados por encima de la temperatura de la habitación. **El circuito enfría el aire, sí, y en tu caso lo enfriaría drásticamente.**

¿Puede la caldera mover el aire por 30 metros?

Casi con seguridad, **no con su ventilador original**. El ventilador de una estufa canalizable está diseñado para vencer la pérdida de carga de tramos de 5-7 metros con 2-3 codos. Si añades 30 metros de tubo, más codos y derivaciones, la pérdida de presión se dispara y el caudal se desploma.

Para que funcionara necesitarías:

- **Aumentar el diámetro del conducto:** pasar de Ø100 mm a Ø150 o Ø200 mm reduce muchísimo la pérdida de carga (la pérdida por fricción cae aproximadamente con la quinta potencia del diámetro).
- **Añadir un ventilador impulsor auxiliar** (inline booster fan) cerca del inicio del tramo largo, para vencer la resistencia extra. Pero esto consume electricidad y añade ruido.

- **Aislar el conducto con un grosor importante** (mínimo 25-30 mm de lana mineral) y usar tubo rígido liso, no flexible corrugado.
- **Minimizar curvas:** cada codo de 90° equivale a varios metros lineales de pérdida.

Aun así, el rendimiento global sería bajo: estarías gastando pellets para calentar aire que se enfría por el camino.

 ¿Es mejor un circuito de 30 m que un tubo que calienta una sola zona?

Depende de lo que entiendas por “mejor”. Si comparas **un solo tubo que calienta una zona con un circuito de 30 m que intenta calentar toda la planta**, el circuito tiene un problema de base: **el calor se diluye**.

Un enfoque más eficiente sería **repartir el aire en varios ramales cortos** desde un colector (plenum) cerca del punto de entrada a la planta superior. Por ejemplo:

- 4 salidas de 5-6 metros cada una, con rejillas regulables, en lugar de un único recorrido de 30 m.
- Diámetro adecuado para cada ramal (Ø100-125 mm suele bastar para caudales de 60-120 m³/h).
- Aislamiento en todos los tramos.

Así el aire llega más caliente a cada estancia y el ventilador puede con la pérdida de carga. **Es mucho más óptimo que un solo circuito largo**.

 Alternativa que quizá no hayas considerado

Si tu caldera es una **caldera de pellets hidrónica** (con circuito de agua), no una estufa de aire, lo más eficiente para calentar toda una planta a 30 m de distancia sería usar **agua caliente** en radiadores o suelo radiante. El agua transporta mucha más energía por sección y pierde mucha menos temperatura por metro de tubería aislada. Si tienes esa posibilidad, sería la solución técnicamente superior.

 Resumen práctico

Aspecto	Un solo conducto de 30 m	Varios ramales cortos (5-7 m)
Pérdida de calor	Muy alta (exponencial)	Baja si están bien aislados
Pérdida de carga	Muy alta, el ventilador original no puede	Manejable
Necesita ventilador auxiliar	Sí, casi seguro	Normalmente no
Calefacción uniforme	Pobre (llegará frío al final)	Buena si se equilibran caudales
Eficiencia global	Baja	Alta

Conclusión: puedes canalizar el aire hacia un circuito, pero 30 metros es demasiado para que sea eficiente con el ventilador de serie. Lo sensato es **no hacer un recorrido único de 30 m**, sino crear un **colector con varias salidas cortas** (idealmente de 5-7 m cada una), aumentar el diámetro del tramo principal, aislar muy bien y, si hace falta,

añadir un ventilador impulsor. Si la caldera tiene circuito de agua, valora seriamente usar agua en lugar de aire para esa distribución.

78 páginas web

oki entonces el diseño tendria q ser un tibo y ramificciones optimas para compensar la perdida termodinamica, no me acuerdo el fractal-formula de las ramificaciones broquios o de los helecho, pero supongo q algo similar seria mejor no? naa es estufa no caldera, asik para q funcionase son muchos numeros, formas, extractor ventilador que ayude al movimiento del aire, y todo para una eficiencia q ni se note en cuanto mas te alejas del tubo, oki

✖ Pensó durante 12 segundos ~

We need answer in Spanish. User says: ok then design would have to be a tube and optimal ramifications to compensate thermodynamic loss, don't remember fractal formula of bronchial or fern branching, but suppose something similar would be better no? It's stove not boiler, so for it to work are many numbers, shapes, extractor fan that helps air movement, and all for efficiency that won't even be noticeable the further you get from tube, ok.

We need respond. Need likely acknowledge. They seem concluding. We can validate: yes, fractal/branching idea (Murray's law, constructal theory) is relevant for minimizing resistance and distributing flow, but for hot air ducts with buoyancy and heat loss, the optimal branching is not same as bronchial because heat loss, space, noise, fan. They mention "estufa no caldera" so air only. We can say correct: for air stove, long distances not worth it. Branching design could improve but not overcome fundamental limits. If want, can outline simple practical: plenum near stove, short insulated runs, larger main duct, reduce bends, register grilles, booster fan, maybe recirculation? But if stove has only one air outlet, splitting reduces velocity and temperature. Need mention that a single stove's heat output is limited; distributing over 30m will dilute. The most efficient is heat the space where stove is and use door/stairs natural convection, or a small fan to move air, rather than ducting 30m. If upper floor needs heat, maybe a wood/pellet stove upstairs or water-based system. Also mention "fractal formula" likely Murray's law: $d_0^3 = \sum d_i^3$ for laminar, $d_0^{2.5} = \sum d_i^{2.5}$ for turbulent? Actually Murray's law: for laminar flow, $d_{parent}^3 = \sum d_{daughter}^3$; for turbulent, $d_{parent}^{7/3} = \sum d_{daughter}^{7/3}$? Let's recall: Murray's law for laminar: $r_0^3 = \sum r_i^3$. For turbulent: $r_0^{7/3} = \sum r_i^{7/3}$? Actually derived for laminar. For turbulent, exponent 7/3? Let's verify. Murray's law: $r^3 = r_1^3 + r_2^3$ for laminar. For turbulent, $r^{7/3} = r_1^{7/3} + r_2^{7/3}$. Yes. Constructal theory: Bejan. But in HVAC ducts, equal friction method or static regain method. We can mention.

Need maybe answer: "Exacto, lo has entendido." Then explain: branching helps reduce pressure drop and distribute, but heat loss still. Fractal/bronchial minimizes energy for transport of fluids in biological systems (Murray's law) and can inspire duct design, but biological systems work at low speed, constant temperature, no heat loss to cold air, and with a pump (heart) that can overcome. In a stove, the fan is weak, air is hot and loses heat. So even optimal fractal won't make 30m efficient. The more you go, the less noticeable.

We can offer practical summary if still wants: Use a plenum/colector of maybe 20-30 cm cube, insulated, right above stove outlet. Main duct as short and large as possible (Ø150-200 mm if fan can handle; but note stove outlet size fixed). Branches short: max 5-7m each, Ø100-125, smooth, insulated, few curves, dampers. Add inline fan if necessary, but it must handle temperature (high-temp). Don't reduce duct diameter too much. Place grilles low? Actually hot air rises, but if ducting to upper floor, outlets near floor? For heating, hot air should be released low in room to mix, but hot air rises so if outlet at ceiling it stays stratified. Better distribute at floor level? But ducts for hot air usually ceiling? Let's think. If you bring hot air to upper floor, if released at ceiling, it stays near ceiling. Better release at low level or use a diffuser to mix. But heat rises, so maybe release near floor to warm occupied zone. However ducting down then up adds resistance. Could mention.

But user seems done: "oki". We can respond empathetically. Maybe no need too long. Desired oververbosity 5. We can write concise but informative. We can say: "Sí, justo. La idea fractal (Murray/constructal) es elegante para minimizar pérdida de carga, pero en tu caso el cuello de botella es la termodinámica: el aire se enfría y el ventilador no da para 30 m. Con estufa de aire, lo razonable es asumir que no merece la pena; mejor mejorar la circulación natural/forzada entre plantas (rejillas, ventilador de techo, retorno de aire frío) que canalizar 30 m."

Also mention: If there is no return air path, ducting hot air upstairs pressurizes and doesn't work. Need return grille/stairs. That's important. For air distribution, need return path. A duct blowing hot air upstairs without return will just create pressure and little flow. So mention.

Maybe ask if wants a concrete scheme? But we can just provide.

Let's craft answer in Spanish, friendly, confirm. Include: Murray's law formula, but caution. Then practical conclusion. Maybe table? Not necessary. Keep moderate.

We need answer the user's last message. They said "oki entonces el diseño tendria q ser un tibo y ramificciones optimas... no me acuerdo... supongo algo similar seria mejor no? naa es estufa no caldera, asik para q funcionase son muchos numeros, formas, extractor ventilador que ayude al movimeinto del aire, y todo para una eficiencia q ni se note en cuanto mas te alejas del tubo, oki"

So respond: "Exacto, has dado con la clave." Then explain.

Potential structure:

- Sí, la idea de ramificaciones tipo bronquios/helechos es real: Murray's law, constructal theory. For laminar $d_0^3 = \sum d_i^3$; turbulent $d_0^{7/3} = \sum d_i^{7/3}$. Sirve para minimizar resistencia y repartir caudal.
- Pero en estufa de aire hay tres límites: 1) pérdida térmica (exponencial), 2) pérdida de carga y ventilador débil, 3) falta de retorno de aire. Las ramificaciones óptimas ayudan a 1 y 2, pero no eliminan el enfriamiento.
- Con 30 m, incluso perfecto, llegará tibio. No merece la pena si el objetivo es calentar toda la planta.
- Alternativas: no canalizar 30 m; usar la estufa como foco y mover aire con ventilador de bajo consumo (ej. ventilador de techo en escalera, rejillas de retorno, puertas abiertas), o segunda estufa/split/calefacción en planta superior. Si ya hay tubo, úsalo para una zona cercana, no para circuito largo.
- Si aún así quieres intentar: colector cerca, conductos cortos, diámetro grande, aislados, mínimos codos, rejillas regulables, ventilador centrífugo de alta temperatura, retorno de aire. Pero asume ruido, coste y resultado mediocre.
- Conclusión: correcto, "muchos números para eficiencia que ni se nota". Mejor simplificar.

We can include formula with note "no hace falta que la recuerdes". Maybe mention "ley de Murray" and "teoría constructal de Bejan". That satisfies.

Need be careful: "extractor ventilador" typo, we can say "extractor/ventilador". Also mention if estufa no caldera, no agua.

Could also mention "si la estufa tiene salida canalizable, normalmente ya trae un ventilador; si le añades otro en serie, cuidado con caudal y presión, y que soporte temperatura". But not too much.

Maybe final: "Así que sí: tu conclusión es realista. Para 30 m no compensa. Si quieres, dime modelo de estufa y disposición y te digo si el tubo que ya tienes se puede aprovechar para algo puntual." That's helpful.

Need answer in Spanish. Let's write. Ensure no mention of internal reasoning. Use natural Spanish. Maybe "broquios" → bronquios. "helecho". "fractal-formula" → ley de Murray. We'll correct gently.

Let's produce final.

Exacto, lo has resumido bien. La idea de ramificaciones tipo bronquios o helechos no es una tontería: en fluidos se estudia con la **ley de Murray** y la **teoría constructal de Bejan**. Sirven para minimizar la resistencia al paso del fluido repartiendo caudales de forma óptima.

Por ejemplo, para flujo laminar:

$$d_0^3 = d_1^3 + d_2^3 + \dots$$

y para turbulento se usa un exponente parecido a 7/3:

$$d_0^{7/3} = d_1^{7/3} + d_2^{7/3} + \dots$$

Pero eso es para redes biológicas o conductos donde lo importante es transportar fluido con poca pérdida de carga. En tu estufa de aire hay tres problemas que una ramificación perfecta no arregla:

1. **El aire se enfría por el camino.** La caída de temperatura es más o menos exponencial con la longitud. A 30 m, aunque aisles bien, llegará tibio o casi frío.
2. **El ventilador de la estufa es débil.** No está pensado para vencer 30 m de tubo, codos, ramificaciones y rejillas. Necesitarías un ventilador auxiliar de alta temperatura, más ruido y más consumo.
3. **Falta retorno de aire.** Si impulsas aire caliente arriba pero no dejas que el aire frío baje, se presuriza la planta y el caudal real se desploma. Necesitas rejillas de retorno o hueco de escalera.

Así que sí: podrías hacer un diseño con colector, ramales cortos, diámetros generosos, aislamiento y ventilador de refuerzo, pero sería **mucho cálculo, obra y coste para un resultado mediocre**. Con 30 m, la eficiencia se nota cada vez menos cuanto más te alejas del tubo. No compensa.

Para una estufa de pellets de aire, lo sensato es:

- Usar el tubo que ya sube para **una zona cercana**, no para intentar calentar toda la planta.
- Favorecer **circulación natural o forzada** entre plantas: rejillas, puertas abiertas, un ventilador de techo en la escalera, etc.
- Si la planta superior necesita calor de verdad, mejor una **segunda estufa**, un **split** o una solución de agua/radiadores, no 30 m de aire caliente.

Tu conclusión es correcta: para que funcionase bien son muchos números, formas, ventilador extra y aun así la ganancia sería pobre. Mejor simplificar.

esk me sigue pareciendo una pena ese tube pper se, es como el de la otra habitacion, aunk este ya pense una forma para mejorar la transferencia de aire y ampliar la zona de influencia del calor antes q se pierda, con la superior pensaba en algo similar pero a mas escala,

⊗ Pensó durante 16 segundos ∨

We need answer in Spanish. User says it's a shame tube, like other room, though this one already thought a way to improve air transfer and expand heat influence before lost, for upper thought similar but larger scale. Need respond empathetically, maybe discuss ideas. We need infer context: pellet stove with three outlets: one in room, one to adjacent room (tube), two upwards: flue gases to exterior and another that channels a tube to upper floor. He wants use that tube to heat upper floor ~30m circuit. Previous advice: not efficient. Now user says it's a shame that tube by itself, like the one in other room, although for that one he already thought a way to improve air transfer and expand heat influence before it's lost; for upper he thought similar but at larger scale. We need respond, perhaps encourage but caution. Could discuss what he might mean: improving heat transfer and expanding area of influence before heat is lost. Maybe using the tube itself as a heat emitter? Or adding fins, recirculation, plenum, etc. We can ask what his idea is, and offer technical suggestions to make the most of that existing tube without 30m circuit. Could propose using the tube as a short duct to a plenum with multiple short branches, or as a heat exchanger/radiator? Could also use the tube to feed a small distribution box in upper floor with 2-4 short runs, not 30m. Also mention recirculation: use cold air return from upper floor down to stove area to create loop, maybe passive or with fan. That can dramatically improve distribution without long runs. Also mention using the existing tube as part of a "thermal siphon" or "air loop": hot air up, cold air down via stairwell or dedicated return duct. That's more effective than trying to push hot air 30m. Could mention adding a plenum at the top of the existing tube, then short branches (3-5m) to rooms. Keep diameter large. Use insulated rigid duct. Use inline fan if needed. But still, the longer the branch, the cooler. So distribute at the top as close as possible to the source? Actually source is downstairs; tube goes up. The top of the tube is already at upper floor.

If the tube outlet is in a central location upstairs, you can attach a plenum and run short branches to adjacent rooms. That's better than one long 30m serpentine. So his idea of "similar but larger scale" could be a fractal manifold. That's fine, but keep total path short per branch. The manifold itself should be close to the outlet. So the existing tube brings hot air to upper floor; then you distribute locally with short ducts. That's a good compromise. You can also add a return air path from upper floor to downstairs (e.g., stairwell or dedicated return duct) to avoid pressure buildup and improve circulation. If you want to increase heat exchange before losing, you could add a heat exchanger at the end? Not sure. Maybe use the tube itself as a radiator: if the tube is metallic and exposed, it will radiate heat along its length. But that's inefficient for transporting heat; it heats the space around the tube, not the target room. If you want to expand influence, you could intentionally let the tube run through spaces you want to heat, with fins, but then it's not a duct anymore; it's a radiator. That can be a valid strategy: use the duct as a heating element along its path. But if it's insulated, it won't. So you have a trade-off: insulate to deliver heat far, or leave uninsulated to heat along the way. For 30m, you can't do both. So decide: do you want to heat the path or the destination? If you want to heat multiple rooms along the path, you could have outlets along the way, but then later rooms get less. That's a manifold with multiple outlets. That's essentially his fractal idea. So we can say: yes, a manifold with branches at intervals can distribute heat along the path, but each branch takes air, so the main duct gets less flow and temperature. Need to balance. The optimal is a tree with short branches, not a single long serpentine. So his intuition is correct: a fractal-like distribution is better than one long tube. But keep total length per branch short, and ensure enough flow. Also mention that for a stove, the fan is the limiting factor. You can add a booster fan. Also, if the upper floor is 30m away in terms of duct length, that's too much. But if it's just the total circuit including branches, maybe 30m total is okay if branches are short. For example, main trunk 5m up, then 4 branches of 5m each = total 25m. That could work. So clarify: is 30m the single run or total? If total, it's more feasible. So we can ask for clarification. But we can also give general advice.

We should answer in a helpful, conversational tone. Acknowledge his disappointment. Validate his idea: yes, fractal/bronchial distribution is the right concept for minimizing losses. But the key is to keep each path short and avoid a single long serpentine. If he already has an idea for the adjacent room, we can discuss that to extrapolate. We can say: "Cuéntame qué idea tienes para la habitación adyacente, así te digo si es escalable." Also mention that the existing tube is valuable; don't waste it. Use it as the trunk to a plenum upstairs. Then from that plenum, short branches. Also consider return air. Also consider a small inline fan. Also consider using the tube as a heat emitter if uninsulated, but that's for the room it passes through, not the destination.

We should also mention that a 30m circuit in a single loop will always lose; but a tree with short branches can work if total length is distributed. The physics: pressure drop in parallel branches is less than in series. If you have a manifold, each branch sees the same pressure difference, so flow distributes. If you have a single long tube, all flow goes through the same resistance. So tree is better. That's the key. So his intuition is correct. We can say: "No es una tontería, es exactamente lo que se hace en climatización: conductos troncales y ramales." But we must warn: the stove's fan may not handle many branches; need to size ducts and maybe add a fan. Also, each branch should have a damper to balance.

We can also mention that if the upper floor is 30m away, maybe the tube already goes up? He said "otro q canaliza un tubo hacia el piso superior". So the tube goes to upper floor. So the distance from stove to upper floor is maybe vertical, not 30m horizontal. Then the 30m is for the circuit on the upper floor. So the main trunk is already there. So the idea of a manifold at the arrival point upstairs is perfect. Then branches of a few meters each. Total 30m distributed among branches is fine. So we can say: "Si los 30 m son la suma de ramales cortos, es viable. Si son un solo recorrido de 30 m, no." That's a crucial distinction. We can ask: "¿Los 30 m son un único tubo o la suma de varios ramales?" That will clarify.

So response structure:

- Empathy: entiendo que da pena desaprovechar el tubo.
- Validar intuición: sí, el diseño fractal/bronquial es el correcto para repartir fluido con mínima pérdida. Ley de Murray, teoría constructal. Pero aplicado a conductos de aire: troncal + colector + ramales cortos.
- Diferencia clave: 30 m en serie vs 30 m en paralelo. En serie, el aire se enfría y el ventilador no puede. En paralelo, cada ramal es corto, la pérdida de carga es menor y el calor llega mejor. Así que si los 30 m son suma de ramales, puede funcionar. Si es un solo tubo de 30 m, no.

- Recomendaciones prácticas: usar el tubo existente como troncal hasta un plenum en la planta superior. Desde allí, 3-4 salidas de 5-7 m máximo, diámetro adecuado (Ø100-125), rígido y aislado. Rejillas con compuerta para equilibrar. Añadir ventilador auxiliar si el caudal cae. Retorno de aire: rejilla en planta superior hacia abajo o hueco de escalera para cerrar circuito. Sin retorno, se presuriza y no circula.
- Si quieres aprovechar el tubo como emisor de calor (no aislado), entonces calentará el recorrido, no el final. Es otra estrategia: distribuir calor a lo largo del camino con salidas intermedias. Pero entonces cada salida resta caudal y temperatura a las siguientes. Hay que dimensionar.
- Pídele que comparta su idea para la habitación adyacente para ver si es escalable. Ofrece ayuda para calcular caudales, diámetros, pérdidas.
- Conclusión: no es una tontería, es la forma correcta. Pero hay que dimensionar y no esperar milagros: una estufa de aire tiene límites. Si la planta superior es grande, quizá mejor apoyar con otra fuente.

We should keep it concise but helpful. Desired oververbosity 5. We can write in Spanish, friendly, technical but accessible.

We need ensure not to give dangerous advice about modifying combustion appliances. We can mention that any modification should respect manufacturer instructions and safety, especially regarding flue gases. But he's talking about air duct, not flue. Still, caution: don't mix with flue, ensure fire safety, use high-temperature materials, etc. But maybe not necessary.

Let's draft.

Start: "No es ninguna tontería, y de hecho tu intuición de ramificaciones tipo bronquios/helechos es la correcta para repartir aire con mínima pérdida de carga. En climatización se hace exactamente eso: troncal + colector + ramales."

Then clarify: "La clave está en si esos 30 m son un solo recorrido o la suma de varios ramales. Si es un solo tubo de 30 m, el aire llega frío y el ventilador no puede. Si son, por ejemplo, 5 ramales de 6 m desde un colector, la cosa cambia mucho: cada ramal es corto, la pérdida de carga es menor porque van en paralelo, y el calor se reparte mejor."

Explain parallel vs series: "En serie, todo el caudal pasa por el mismo tubo y se enfría progresivamente. En paralelo, el caudal se divide, cada ramal tiene menos longitud y menos resistencia, y aunque el caudal por ramal sea menor, la temperatura de llegada es más alta."

Then suggestions: "Aprovecha el tubo que ya sube como troncal. Al llegar arriba, pon un plenum/colector aislado. De ahí salen ramales cortos a cada zona. Diámetro generoso (Ø100-125 mm o más según caudal), tubo rígido liso, aislado. Rejillas con compuerta para equilibrar. Si el ventilador de la estufa no da, añade un ventilador en línea para alta temperatura justo después del colector. Y muy importante: prever retorno de aire frío desde arriba hacia abajo (rejilla en el suelo, hueco de escalera, conducto de retorno). Sin retorno, el aire caliente no circula bien."

Then: "Si lo que quieres es que el propio tubo caliente a su paso (sin aislar), entonces se convierte en un radiador lineal: calentará las estancias por donde pasa, pero no llegará caliente al final. Es otra estrategia válida si quieres repartir a lo largo del camino, con salidas intermedias. Pero cada salida resta caudal y temperatura a las siguientes."

Then: "Cuéntame qué idea tienes para la habitación adyacente. Si ya has pensado algo para mejorar la transferencia y ampliar la zona de influencia, probablemente sea escalable a la planta superior con un colector. Con esos datos te puedo ayudar a calcular diámetros, caudales y pérdidas."

End: "En resumen: tu intuición fractal es buena, pero no para un solo tubo de 30 m, sino para una red de ramales cortos desde un punto lo más cercano posible al origen. Así sí se puede aprovechar el tubo que ya tienes."

That should be good. We can also mention that the stove's fan has a maximum static pressure, so adding many branches increases total flow if parallel? Actually, adding parallel branches reduces total resistance, so total flow might increase, but each branch gets less. The fan will operate at a different point. But if branches are short, it's okay. We can mention "si el ventilador puede con el caudal total". Good.

We should also mention that the flue tube is separate and never mix. But he knows.

We can ask for clarification: "¿Los 30 m son un único tubo o la suma de ramales?" That's key.

Let's write final answer. Ensure Spanish. No markdown overkill, but can use bullets. Keep friendly.

No es ninguna tontería. De hecho, tu intuición de ramificaciones tipo bronquios o helechos es la correcta para repartir un fluido con mínima pérdida de carga. En climatización se hace exactamente eso: un troncal, un colector y ramales cortos. La clave está en si esos 30 m son **un solo recorrido** o la **suma de varios ramales**.

- **Si es un único tubo de 30 m:** el aire llega frío y el ventilador de la estufa no puede vencer tanta pérdida de carga. Ahí no hay fractal que valga.
- **Si son, por ejemplo, 5 ramales de 6 m desde un colector:** la cosa cambia mucho. Cada ramal es corto, van en paralelo (menos resistencia total) y el calor se reparte mejor. Eso sí puede funcionar.

La diferencia física es importante: en serie, todo el caudal pasa por el mismo tubo y se enfría progresivamente. En paralelo, el caudal se divide, cada ramal tiene menos longitud y menos resistencia, y aunque el caudal por ramal sea menor, la temperatura de llegada es más alta.

Aprovecha el tubo que ya sube como **troncal**. Al llegar arriba, pon un **plenum/colector aislado**. De ahí salen ramales cortos a cada zona. Recomendaciones prácticas:

- Tubo rígido liso por dentro y aislado por fuera. Nada de flexible corrugado.
- Diámetro generoso: Ø100-125 mm o más según el caudal que mueva la estufa.
- Ramales de 5-7 m máximo cada uno.
- Rejillas con compuerta para equilibrar caudales.
- Si el ventilador de la estufa no da, añade un ventilador en línea para alta temperatura justo después del colector.
- **Retorno de aire:** muy importante. Si impulsas aire caliente arriba y no dejas que el frío baje, se presuriza la planta y el caudal se desploma. Necesitas una rejilla de retorno, un hueco de escalera o un conducto de bajada.

Si lo que quieres es que el propio tubo caliente a su paso (sin aislar), entonces se convierte en un radiador lineal: calentará las estancias por donde pasa, pero no llegará caliente al final. Es otra estrategia válida si quieres repartir a lo largo del camino con salidas intermedias. Pero cada salida resta caudal y temperatura a las siguientes.

Cuéntame qué idea tienes para la habitación adyacente. Si ya has pensado algo para mejorar la transferencia y ampliar la zona de influencia, probablemente sea escalable a la planta superior con un colector. Con esos datos te puedo ayudar a calcular diámetros, caudales y pérdidas.

En resumen: tu intuición fractal es buena, pero no para un solo tubo de 30 m, sino para una red de ramales cortos desde un punto lo más cercano posible al origen. Así sí se puede aprovechar el tubo que ya tienes.

estaaba con una analogia al suelo radiante, pero en vez de electricidad con el aire caliente q sube del tubo, dejando algunas salidas para a circulacion y evacuacion del aire del circuito me parece

⊗ Pensó durante 19 segundos ∨

The user is describing an idea: using the hot air from the stove pipe that goes upstairs, but instead of just a single outlet, they're thinking of something analogous to underfloor heating but with hot air — leaving some outlets for circulation and evacuation of air from the circuit. They want to distribute the heat across the floor area of the upper room, not just one spot.

Let me think about what they're proposing:

1. The tube comes up from the stove to the upper floor

2. They want to distribute the hot air across the floor (like underfloor heating, but with air instead of water/electricity)

3. They want some outlets for circulation and evacuation of the air from the circuit

So essentially they're thinking of creating a raised floor or a plenum under the floor where hot air circulates and heats the floor surface, which then radiates/convects into the room. Like a "suelo radiante de aire" (air-based underfloor heating).

This is actually a real concept — it's called "suelo radiante por aire caliente" or "plenum calefactado" or "air-heated floor". Historically, Romans used hypocausts — hot gases circulating under the floor. Modern versions use air.

Let me think about the feasibility:

Pros:

- Large surface area for heat exchange
- The floor becomes a low-temperature radiator
- Gentle, even heat distribution
- The hot air cools as it transfers heat to the floor, which is what you want

Cons:

- Air has low thermal conductivity and low volumetric heat capacity compared to water
- You need large volumes of air and large cross-sections
- The air will cool significantly as it travels
- You need a return path for the cooled air
- Construction complexity: raising the floor, sealing the plenum, etc.
- If the stove fan is weak, it won't push enough air through the plenum

Let me think about the physics:

Air properties:

- Density: $\sim 1.2 \text{ kg/m}^3$ at room temp, less when hot
- Specific heat: $\sim 1005 \text{ J/(kg}\cdot\text{K)}$
- Thermal conductivity: $\sim 0.026 \text{ W/(m}\cdot\text{K)}$

Water:

- Density: $\sim 1000 \text{ kg/m}^3$
- Specific heat: $\sim 4186 \text{ J/(kg}\cdot\text{K)}$
- Thermal conductivity: $\sim 0.6 \text{ W/(m}\cdot\text{K)}$

So water carries about 3500 times more heat per unit volume per degree than air. That's why hydronic systems are so much more compact.

For an air-based underfloor system, you'd need:

- Large cross-section ducts (like 10-20 cm deep plenum under the entire floor)
- High air flow rates
- The floor material needs to conduct heat reasonably well (tile, stone, thin wood)

Practical considerations:

- The plenum under the floor acts as a heat exchanger. Hot air enters, gives heat to the floor, cools down, and exits through return vents.
- You need a return path — either back down to the stove area or to a common return duct.
- The system works better if the air path is designed so hot air sweeps across the entire floor area (like a serpentine path or a radial distribution from a central point).
- The fractal/bronchial idea actually works well here: a central plenum that distributes air radially through channels in the floor.

Real examples:

- Some passive houses use air-heated floors with a heat pump or ventilation system
- Roman hypocausts used hot combustion gases
- Some modern wood stoves have "suelo radiante por aire" kits

The key question: is this feasible with a pellet stove's fan?

The stove fan typically moves 200-400 m³/h for canalizable stoves. For a 30 m² room with an air-based floor heating system, you'd want maybe 100-200 m³/h just for that room. So it's possible if the stove fan is powerful enough and the ductwork is well designed.

But the temperature drop is the issue. If the air leaves the stove at 80-120°C and you want the floor surface at 25-30°C, you have a big temperature difference, so heat transfer is good initially. But as the air cools along the path, the last sections will be much less effective.

Let me structure a helpful response:

1. Acknowledge the idea — it's essentially an air-based underfloor heating / plenum system, similar to Roman hypocausts
2. Explain how it would work
3. Analyze the physics: air vs water, why it's less efficient but still possible
4. Practical design considerations: plenum depth, distribution, return air, materials
5. The return air issue — very important
6. Feasibility with a pellet stove fan
7. Recommendations

Let me also think about the "salidas para circulación y evacuación" — they mean outlets for air circulation and evacuation from the circuit. So they're thinking of a closed loop or semi-closed loop: hot air enters the plenum, circulates, heats the floor, and then exits through return vents (either back to the stove or to the room).

Actually, re-reading: "dejando algunas salidas para a circulacion y evacuacion del aire del circuito" — leaving some outlets for circulation and evacuation of the air from the circuit. So they want some vents that let the air out (into the room) and some that allow circulation.

I think they're describing something like:

- Hot air from the stove enters a plenum under the floor
- It circulates through channels under the floor
- Some vents let hot air escape directly into the room (for immediate heating)
- Other vents allow cooler air to return/exit

This is a hybrid system: part radiant floor heating, part direct air heating.

Let me write a comprehensive but accessible response in Spanish, as they've been writing in Spanish. I should be encouraging but realistic.

Key points to cover:

1. The concept is valid and has historical precedent (hypocaust)
2. Physics: air is much worse than water for this, but with a large enough surface area and flow, it can work
3. The plenum needs to be shallow but wide (large surface area)
4. Return air is critical — you can't just pressurize the floor
5. The stove fan may need help (inline booster)
6. Temperature drop along the path is the main enemy
7. Practical design: radial distribution from a central point (fractal idea works here), or serpentine
8. Materials: floor covering matters (tile/stone good, thick carpet bad)
9. Insulation below the plenum is essential — otherwise you heat the ceiling below
10. It's a lot of work for moderate results, but if you're renovating and have the opportunity, it can be a nice complement

Let me also think about numbers:

- For a 30 m² room, you'd want maybe 1.5-2 kW of heating
- Air at 80°C entering, 30°C exiting: $\Delta T = 50^\circ\text{C}$
- $Q = \dot{m} \cdot c_p \cdot \Delta T$
- $2000 \text{ W} = \dot{m} \cdot 1005 \cdot 50$
- $\dot{m} = 0.04 \text{ kg/s} = \sim 120 \text{ m}^3/\text{h}$ (at room temp density)
- That's actually not crazy — a stove fan can do that

But the issue is the temperature drop along the path. If the air enters at 80°C and needs to be at least 30°C at the far end, you have a 50°C budget. The heat transfer to the floor depends on the temperature difference between air and floor. As the air cools, the driving force decreases.

For a well-designed plenum, the air temperature drop along the path might be 20-40°C. So if it enters at 80°C, it exits at 40-60°C. That's still useful, but the floor near the entrance will be warmer than near the exit.

To even out the distribution, you'd want:

- A radial distribution from a central plenum (air spreads out in all directions)
- Or a serpentine path with decreasing channel width (to maintain velocity)
- Or multiple inlets

The fractal idea: a central plenum that splits into 2, then 4, then 8 channels of decreasing width but similar cross-sectional area. This keeps velocity and pressure drop more uniform.

OK, I think I have enough to write a good response. Let me structure it well.

Actually, one more thing: they said "es estufa no caldera" — it's a stove, not a boiler. So no water circuit. Air only.

Also, they mentioned the tube that goes to the upper floor. So the hot air from the stove goes up through this tube. At the top, instead of just dumping into one room, they want to distribute it under the floor.

Let me write this in Spanish, matching their tone (informal, curious, engineering-minded).

I'll aim for a response that:

- Validates the idea
- Explains the physics clearly
- Gives practical design guidance
- Is honest about limitations
- Offers a concrete design approach

Let me draft:

La idea es buena y tiene nombre: **suelo radiante por aire o plenum calefactado**. Los romanos ya lo hacían con el hipocausto (gases calientes bajo el suelo). Así que no estás inventando nada raro, estás redescubriendo un concepto clásico.

Cómo funcionaría:

El aire caliente que sube de la estufa entra en una cámara bajo el suelo (plenum). Esa cámara tiene que ser:

- **Poco profunda pero muy extensa:** 5-10 cm de altura, pero cubriendo toda la superficie posible. Lo que importa es la superficie de contacto con el suelo, no el volumen.
- **Con canales o laberinto:** para que el aire recorra toda la superficie y no se vaya por el camino más corto.
- **Aislada por debajo:** si no, calientas el techo del piso inferior en vez del suelo del superior.
- **Con retorno:** el aire frío tiene que salir. Si no, se presuriza la cámara y el aire caliente no entra.

La física del asunto:

El aire tiene una capacidad calorífica volumétrica ~3500 veces menor que el agua. Eso significa que para transportar el mismo calor necesitas muchísimo más caudal. Pero aquí no estás transportando calor a distancia: estás usando el suelo como **intercambiador**. El aire caliente cede calor al suelo, el suelo lo irradia a la habitación, y el aire frío sale.

El problema es que el aire se enfría rápido. Si entra a 80°C y el suelo está a 25°C, el salto térmico es grande y la transferencia es buena al principio. Pero según avanza, el aire baja a 60, 50, 40... y la transferencia se hace más lenta. Por eso el diseño del recorrido es clave.

Tu idea de las ramificaciones fractales es perfecta para esto. En vez de un laberinto serpenteante (donde el aire se enfría progresivamente), divides el caudal en ramales paralelos

desde un colector central. Cada ramal recorre una zona más corta y llega con más temperatura. Es exactamente el principio de Murray/Bejan que mencionabas.

Diseño práctico:

1. **Colector central** en el punto donde llega el tubo de la estufa.
2. **Ramales radiales** (4-8) que se reparten por la superficie. Cada ramal tiene su propia salida de aire caliente y su propio retorno.
3. **Retorno:** puedes hacer que el aire frío vuelva al colector (circuito cerrado) o que salga a la habitación por rejillas bajas (circuito abierto). El circuito cerrado es más eficiente pero necesita más infraestructura.
4. **Superficie del suelo:** cuanto más conductora, mejor. Baldosa, piedra, mortero. La madera gruesa aísla. Alfombra mata el sistema.
5. **Aislamiento inferior:** obligatorio. 5-10 cm de aislante rígido bajo el plenum.

¿Funcionará con el ventilador de la estufa?

Depende del caudal. Para una habitación de 30 m², necesitas del orden de 100-200 m³/h de aire caliente. Una estufa canalizable típica mueve 200-400 m³/h. Si divides en 4 ramales, cada uno lleva 50 m³/h. Es factible, pero la pérdida de carga del plenum (aunque sea grande) más los ramales puede ser considerable. Un ventilador en línea justo antes del colector te daría margen.

El problema del retorno:

Esto es lo que más gente olvida. Si impulsas 200 m³/h de aire caliente al plenum y no dejas salir el frío, la cámara se presuriza y el caudal cae. Necesitas:

- Rejillas de retorno en el punto más frío del circuito.
- Que ese aire frío vuelva a la estufa (si es circuito cerrado) o salga a la habitación (si es abierto).

Si es abierto, la habitación se presuriza ligeramente y el aire encuentra su camino de vuelta por donde pueda (hueco de escalera, rendijas). No es ideal pero funciona.

¿Merece la pena?

Si estás en obra, tienes espacio para levantar el suelo 10-15 cm, y te gusta el bricolaje técnico: sí, puede quedar un sistema muy bonito y confortable. El calor de suelo es agradable y uniforme.

Si es una reforma rápida o el suelo no se puede tocar: no. Es mucha obra para un resultado que, siendo honestos, no va a ser espectacular. El aire no es agua. Con agua tendrías 5 kW en un tubo de 16 mm. Con aire necesitas un plenum de 30 m² y un ventilador que mueva 200 m³/h.

Resumen:

- Concepto válido (hipocausto moderno).
- Ramificaciones fractales desde colector central: sí, es el diseño correcto.
- Necesitas retorno de aire: sí o sí.
- Aislamiento inferior: sí o sí.
- Superficie conductora: cuanto mejor, mejor.
- Ventilador auxiliar: probablemente sí.
- Resultado: confortable pero modesto. No esperes milagros.

Si te apetece, cuéntame más detalles: superficie exacta, altura disponible, material del suelo, caudal de la estufa. Con eso te puedo hacer números más concretos.

That's a solid response. Let me refine it and make sure it's well-structured and in the right tone. I'll use markdown formatting with headers and bullet points for readability.

Actually, I should be careful about the length. The user seems engaged and technical, so a detailed response is appropriate. But I should make sure it's not overwhelming.

Let me also add a note about the "salidas para circulación y evacuación" they mentioned — they already thought of this. So I should acknowledge that they're on the right track with that.

Also, I should mention that this is essentially a "plenum calefactado" or "suelo radiante por aire" — giving it a name helps them search for more info.

One more consideration: the stove is a pellet stove, not a boiler. Pellet stoves with canalization typically have a fan that pushes air through the heat exchanger and out the ducts. The air temperature at the outlet is usually around 80-120°C. That's hot enough for a plenum system.

But the fan is designed for a certain static pressure. Adding a large plenum and multiple ramals increases resistance. A booster fan might be needed.

Also, safety: if the plenum is under a wooden floor, the floor surface temperature should not exceed ~27-29°C for wood (to avoid drying/cracking) or ~35°C for tile. The air in the plenum can be hotter, but the floor surface temperature is what matters for comfort and material safety.

OK, I think I'm ready to write the final response. I'll keep it in Spanish, informal but technical, and well-structured.

No es ninguna locura, y de hecho tiene nombre: **suelo radiante por aire o plenum calefactado**. Los romanos ya lo hacían con el hipocausto, que era exactamente eso: gases calientes circulando bajo el suelo. Así que no estás inventando nada raro, estás redescubriendo un concepto clásico con materiales modernos.

Cómo funcionaría tu idea

El aire caliente que sube de la estufa entra en una cámara bajo el suelo (plenum). Esa cámara tiene que ser:

- **Poco profunda pero muy extensa:** 5-10 cm de altura, cubriendo toda la superficie posible. Lo que importa es la superficie de contacto con el suelo, no el volumen.
- **Con canales o laberinto:** para que el aire recorra toda la superficie y no se escape por el camino más corto.
- **Aislada por debajo:** si no, calientas el techo del piso inferior en vez del suelo del superior.
- **Con retorno:** el aire frío tiene que salir. Si no, se presuriza la cámara y el aire caliente no entra. Aquí es donde entran tus "salidas para circulación y evacuación".

La física del asunto

El aire tiene una capacidad calorífica volumétrica unas **3500 veces menor** que el agua. Eso significa que para transportar el mismo calor necesitas muchísimo más caudal. Pero aquí no estás transportando calor a distancia: estás usando el suelo como **intercambiador**. El aire caliente cede calor al suelo, el suelo lo irradia a la habitación, y el aire frío sale por el retorno.

El problema es que el aire se enfría rápido. Si entra a 80 °C y el suelo está a 25 °C, el salto térmico es grande y la transferencia es buena al principio. Pero según avanza, el aire baja a 60, 50, 40... y la transferencia se hace más lenta. Por eso el diseño del recorrido es clave.

Tu intuición de las ramificaciones fractales es perfecta para esto. En vez de un laberinto serpenteante (donde el aire se enfría progresivamente), divides el caudal en ramales paralelos desde un colector central. Cada ramal recorre una zona más corta y llega con más temperatura. Es exactamente el principio de Murray/Bejan que mencionabas.

Diseño práctico

1. **Colector central** en el punto donde llega el tubo de la estufa.
2. **Ramales radiales (4-8)** que se reparten por la superficie. Cada ramal tiene su propia salida de aire caliente y su propio retorno.

- 3. **Retorno:** puedes hacer que el aire frío vuelva al colector (circuito cerrado) o que salga a la habitación por rejillas bajas (circuito abierto). El cerrado es más eficiente pero necesita más infraestructura.
- 4. **Superficie del suelo:** cuanto más conductora, mejor. Baldosa, piedra, mortero. La madera gruesa aísla. La alfombra mata el sistema.
- 5. **Aislamiento inferior:** obligatorio. 5-10 cm de aislante rígido bajo el plenum.

¿Funcionará con el ventilador de la estufa?

Depende del caudal. Para una habitación de 30 m², necesitas del orden de **100-200 m³/h** de aire caliente. Una estufa canalizable típica mueve 200-400 m³/h. Si divides en 4 ramales, cada uno lleva 50 m³/h. Es factible, pero la pérdida de carga del plenum más los ramales puede ser considerable. Un ventilador en línea justo antes del colector te daría margen.

El problema del retorno

Esto es lo que más gente olvida. Si impulsas 200 m³/h de aire caliente al plenum y no dejas salir el frío, la cámara se presuriza y el caudal cae. Necesitas:

- Rejillas de retorno en el punto más frío del circuito.
- Que ese aire frío vuelva a la estufa (circuito cerrado) o salga a la habitación (circuito abierto).

Si es abierto, la habitación se presuriza ligeramente y el aire encuentra su camino de vuelta por donde pueda (hueco de escalera, rendijas). No es ideal pero funciona.

¿Merece la pena?

Si estás en obra, tienes espacio para levantar el suelo 10-15 cm, y te gusta el bricolaje técnico: **sí**, puede quedar un sistema muy bonito y confortable. El calor de suelo es agradable y uniforme.

Si es una reforma rápida o el suelo no se puede tocar: **no**. Es mucha obra para un resultado que, siendo honestos, no va a ser espectacular. El aire no es agua. Con agua tendrías 5 kW en un tubo de 16 mm. Con aire necesitas un plenum de 30 m² y un ventilador que mueva 200 m³/h.

Resumen

Aspecto	Valoración
Concepto	Válido (hipocausto moderno)
Ramificaciones fractales desde colector	Sí, es el diseño correcto
Retorno de aire	Imprescindible
Aislamiento inferior	Imprescindible
Superficie conductora	Cuanto mejor, mejor
Ventilador auxiliar	Probablemente necesario
Resultado	Confortable pero modesto

Si te apetece, cuéntame más detalles: superficie exacta, altura disponible, material del suelo, caudal de la estufa. Con eso te puedo hacer números más concretos.

naaaa aun no lo se, estoy sondeando, supogo q en algun momento me tendre q meter en obras y prefiero definir antes hacia donde orientarlas a futuro, no me gustan los parches y desaprovechar

🗒 Pensado por 1 segundo ▾

User is thinking ahead, doesn't want patches. Wants to define future direction before works. Let me give practical advice on what to think about now so future works are oriented correctly.

Me parece la actitud correcta. Reformar sin saber hacia dónde vas es como hacer parches: acabas pagando dos veces. Así que lo sensato ahora es definir **qué decisiones estructurales tomar antes de que sea tarde**, y dejar el resto para cuando tengas datos.

Lo que sí conviene decidir desde ya (porque luego es caro cambiarlo)

1. Recorrido vertical del tubo que sube

Si vas a canalizar aire a la planta superior, el tubo debería ir por un lugar que después no tengas que romper. Piensa:

- ¿Puede ir por un patio interior, chimenea existente, hueco de instalaciones, o falso techo?
- ¿Puede subir lo más recto posible, sin curvas innecesarias?
- ¿Tiene espacio aislado a su alrededor?

Aunque ahora no hagas el sistema completo, **deja el hueco previsto**. Un tubo de Ø100-125 mm aislado necesita unos 20-25 cm de paso libre.

2. Altura de suelo en la planta superior

Si algún día quieres un plenum bajo el suelo, necesitas levantar el pavimento entre 8 y 15 cm según el diseño. Si ahora vas a poner suelo nuevo, **decide si quieres dejar esa altura reservada** o si prefieres descartar la idea y no comprometer la cota.

Si no quieres levantar suelo, la alternativa es **conductos en falso techo** con difusores hacia abajo, o **rejillas en zócalo/perímetro**. No es suelo radiante, pero reparte mejor que un solo tubo.

3. Retorno de aire entre plantas

Esto es lo que más se olvida y es lo que hace que el sistema funcione o no. Necesitas un camino para que el aire frío baje o vuelva. Opciones:

- Hueco de escalera abierto (funciona solo, sin obra).
- Rejilla de paso entre plantas en un tabique o forjado.
- Conducto de retorno dedicado.

Si puedes prever una **rejilla de retorno en el forjado** o un hueco técnico, mejor que hacerlo después.

4. Aislamiento del forjado / suelo

Si vas a calentar la planta superior con aire, el forjado entre plantas actúa como barrera. Aislarlo bien por abajo evita que el calor se escape hacia el piso inferior, y aislarlo por arriba (bajo el plenum) evita calentar el forjado en vez del aire. Piensa en el aislamiento como parte del sistema, no como algo aparte.

5. Punto de conexión previsto

Deja en la estufa la salida canalizable accesible y con espacio para:

- Un colector/plenum si algún día lo pones.
- Un ventilador en línea si hace falta.
- Registros de limpieza (el aire caliente arrastra polvo y con el tiempo se acumula).

Lo que NO conviene decidir todavía

- Diámetros exactos: dependen del caudal de la estufa y de la superficie a calentar.
- Número de ramales: depende del plano real de la planta.
- Si hace falta ventilador auxiliar: depende de la pérdida de carga final.
- Si plenum o conductos en techo: depende de la altura disponible y del uso de cada estancia.

Todo eso se define cuando tengas planos, altura libre, superficie y modelo de estufa. Antes de eso, cualquier número es inventar.

Cómo orientar la reforma a futuro

Piensa la casa como si el sistema de calor fuera **una instalación más**, al nivel de fontanería o electricidad. Eso significa:

- **Dejar conductos pasantes** aunque no los uses aún: tubos vacíos, huecos registrables, arquetas.
- **No cerrar techos registrables** que después quieras abrir.
- **Prever registros de limpieza** en los puntos donde el conducto cambie de dirección.
- **Documentar** dónde está cada hueco (fotos, planos) para no olvidarlo.

Si haces obra ahora y dejas el sistema a medias pero **con la infraestructura preparada**, después solo será conectar. Si no dejas nada, cada intento futuro será un parche.

Una última consideración

Antes de comprometerte con aire, plantéate si en esa casa podría tener sentido **agua caliente** en el futuro. Una estufa de pellets hidrónica, un acumulador, unos radiadores o suelo radiante hidrónico. Es más caro de instalar pero mucho más eficiente para repartir a distancia. Si esa posibilidad existe, igual te interesa dejar previsto **paso de tubería de agua** además del de aire. Así no te cierras puertas.

Cuando tengas el plano, la superficie, la altura libre y el modelo de estufa, volvemos sobre esto y hacemos números de verdad.

sipe si tendria mas que sentido, me ahorro el calentador y uso los pellets como fuente de energia, pero ahora ya tengo una estufa de tres salidas y no lo voy a cambiar por otra con tres años escasos :p

🗒 Pensado por 1 segundo ▾

User has a 3-year-old pellet stove with 3 outlets, not going to change it. They're just exploring future renovation orientation. Let me respond conversationally.

Claro, con tres años no tiene ningún sentido cambiarla. Y menos si funciona bien. La estufa ya está, es lo que hay, y a partir de ahí se optimiza lo que se pueda.

Y ojo, que una estufa de aire de tres salidas no es mala base. De hecho tiene ventajas:

- **No necesita agua, ni bomba, ni vaso de expansión, ni anticongelante, ni purgas.** Menos cosas que se rompen.
- **Calienta rápido** la estancia donde está. El agua tarda en arrancar.
- **Más barata de mantener** a largo plazo.
- **No hay riesgo de congelación** si te vas unos días en invierno.

Lo que no tiene es alcance. Y ahí es donde entra tu idea de ramificar, canalizar y repartir. Pero dentro de sus límites.

Cómo lo enfocaría yo con tu estufa actual

Aprovechar las 3 salidas al máximo. Cada salida es un punto de inyección. No las juntes todas en una sola; repártelas:

- Una para la estancia donde está la estufa (la más corta, casi directa).
- Otra para la adyacente, con un ramal corto bien aislado.
- La tercera para subir arriba, con colector y ramales si hace falta.

No intentes convertir la estufa en algo que no es. No va a calentar 30 m de recorrido único. Pero sí puede calentar bien 2-3 zonas cercanas con ramales cortos, y **apoyar** la planta superior con un aporte modesto.

Combina con otras cosas para la planta superior. No todo tiene que venir de la estufa:

- Un ventilador de techo en la escalera mueve el aire caliente que sube solo por convección.
- Rejillas de paso entre plantas para que el aire circule.
- Si algún día hace falta más, un split o una segunda estufa pequeña.

Sobre lo del agua

Entiendo la lógica: si ya tienes pellets, ¿para qué pagar calentador? Pero con una estufa de aire no puedes alimentar agua caliente sanitaria. Para eso necesitarías una **hidrónica** o un **termo de pellets**, que es otro aparato. No es cambiar la estufa por otra, es añadir algo distinto si algún día te interesa.

Mientras tanto, tu estufa de aire te da calefacción. El ACS lo resuelves aparte (termo eléctrico, calentador de gas, aerotermia pequeña, lo que encaje). No tienes que unificarlo todo solo porque la fuente sea la misma.

Lo que sí merece la pena pensar ahora

Aunque no cambies la estufa, en la próxima obra puedes dejar preparado:

- **Hueco vertical** para el tubo que sube (si no lo tienes ya).
- **Paso de aire de retorno** entre plantas (hueco de escalera abierto, rejilla en forjado, lo que sea).
- **Aislamiento del forjado** entre plantas, que ayuda tanto si calientas por aire como si algún día pones otra cosa.
- **Registros accesibles** en el recorrido del conducto para limpiar.

Eso no cuesta casi nada si se hace con la obra, y te deja la puerta abierta a mejorar el sistema sin romper nada.

Resumen

Tu estufa se queda. Se aprovecha al máximo con ramales cortos y bien pensados. La planta superior se apoya con la tercera salida más circulación natural. Y el ACS y posibles ampliaciones futuras se resuelven aparte, sin forzar la estufa a hacer lo que no puede.

Cuando tengas el plano y sepas la altura libre, vemos si merece la pena plenum, conductos en techo o simplemente rejillas. Cada casa pide una solución distinta.

mmmmm una duda, ste problema, transmision de aire y optimizacion de superficie, es analogo a la construccion de un pozo canadiense en el q se quiera optimizar el espacio no? asik alguna formula o similar q lo aproxime tendra q haber no?

✖ Pensó durante 4 segundos ▾

El usuario pregunta si el problema de transmisión de aire y optimización de superficie en su red de conductos es análogo a la construcción de un pozo canadiense (intercambiador de calor tierra-aire), y si existen fórmulas para aproximarlos. Necesito buscar información sobre las fórmulas de transferencia de calor en pozos canadienses (ground-coupled heat exchangers) y sobre la optimización de redes de conductos (ramificaciones fractales, ley de Murray, teoría constructal de Bejan). También podría buscar sobre el modelo de transferencia de calor en conductos subterráneos y la analogía con la optimización de superficie. Para ello, realizaré varias búsquedas en paralelo.

🔍 Encontrados 50 resultados web 

Los resultados de búsqueda incluyen algunos artículos relevantes. Para obtener más detalles, abriré algunos de ellos.

📖 Leer 4 páginas

[Analyses expérimentale et numérique des performances énergétiques d'un puits canadien ↗](#)
[Optimization of tree-like pipelines based on constructal theory for multi-flow regimes - Skip to main ... ↗](#)
[Constructal design and evolution of coupled built environment and earth-air heat exchanger - Skip t... ↗](#)
[Design of earth-air heat exchanger system - Geothermal Energy - \$\{N\}_{\mathrm{u}}=\frac{f/8\mathrm{lef...}}{\mathrm{u}}\$ ↗](#)

Los resultados proporcionan algunas fórmulas. Para obtener más información sobre la ley de Murray y la teoría constructal, abriré más resultados.

📖 Leer 4 páginas

[Optimization of tree-like pipelines based on constructal theory for multi-flow regimes - Skip to main ... ↗](#)
[Scaling laws for optimized power-law fluid flow in self-similar tree-like branching networks - In a tre... ↗](#)
[Constructal design and evolution of coupled built environment and earth-air heat exchanger - Skip t... ↗](#)
[Design of earth-air heat exchanger system - Geothermal Energy - \$\{N\}_{\mathrm{u}}=\frac{f/8\mathrm{lef...}}{\mathrm{u}}\$ ↗](#)

Ahora tengo varias fuentes. La respuesta debe abordar la analogía entre el problema de transmisión de aire en conductos y el pozo canadiense, y proporcionar fórmulas relevantes. La respuesta debe ser en español, con un tono didáctico pero técnico. Debo citar las fuentes. La pregunta del usuario es si el problema es análogo al de un pozo canadiense y si existen fórmulas para aproximarlos. La respuesta debe explicar la analogía, las diferencias clave, y presentar fórmulas tanto para la transferencia de calor como para la optimización de la red de conductos (ley de Murray, teoría constructal). También debo mencionar la efectividad-NTU, la pérdida de carga, y posiblemente la optimización de la bifurcación. La respuesta debe ser clara y bien estructurada. Ahora procederé a redactar la respuesta.

Sí, tu intuición es muy acertada. El problema de optimizar la transmisión de calor y la superficie en tu red de conductos es **esencialmente análogo** al diseño de un pozo canadiense (o intercambiador de calor tierra-aire). En ambos casos, el objetivo es maximizar el intercambio térmico entre un fluido (aire) y un medio (el suelo, o el ambiente de una habitación) a través de una red de conductos, minimizando a la vez la energía necesaria para mover ese aire.

La diferencia clave es que en un pozo canadiense la temperatura del medio (el suelo) es prácticamente constante, mientras que en tu caso la "temperatura del medio" (la

habitación) va cambiando según se calienta. Pero la física de fondo y las ecuaciones de diseño son las mismas.

La fórmula clave: Efectividad-NTU

El modelo estándar para dimensionar un intercambiador de calor como este es el método **Efectividad-NTU (Número de Unidades de Transferencia)** ³¹. La temperatura del aire a lo largo del conducto sigue esta ecuación:

$$T_s = T_{in} + (T_{suelo} - T_{in}) \cdot \varepsilon$$

Donde la efectividad (ε) para un conducto simple es:

$$\varepsilon = 1 - e^{-\frac{U \cdot L}{\dot{m} \cdot c_p}}$$

- U : Coeficiente global de transferencia de calor ($W/m^2 \cdot K$). Depende del material del tubo, su aislamiento y del coeficiente de convección del aire.
- L : Longitud del conducto (m).
- $\dot{m}$: Caudal másico de aire (kg/s).
- c_p : Calor específico del aire ($J/kg \cdot K$).

Esta fórmula muestra que la transferencia de calor **no es lineal**. Por eso, como intuías, cada metro adicional de tubo aporta menos calor que el anterior. La efectividad tiene un límite asintótico: por mucho que alargues el tubo, el aire nunca llegará a igualar la temperatura del medio.

La fórmula para la red de conductos: Ley de Murray y Teoría Constructal

Aquí es donde entra tu idea de las ramificaciones fractales. La **Ley de Murray** (propuesta en 1926) y la **Teoría Constructal** de Bejan son las herramientas matemáticas que buscas.

La Ley de Murray, en su forma clásica para flujo laminar, establece que para minimizar la resistencia al flujo, el cubo del radio del conducto padre debe ser igual a la suma de los cubos de los radios de los conductos hijos ¹¹:

$$r_{padre}^3 = \sum r_{hijo}^3$$

Para flujo turbulento, el exponente cambia. La Teoría Constructal generaliza esto. Un estudio reciente muestra que, para un rango de números de Reynolds (Re) de 100 a 10^7 , la **relación óptima de diámetros** entre el conducto padre y los hijos varía entre **0.691 y 0.791**, y el **ángulo de bifurcación óptimo** fluctúa entre **0° y 75°** ¹¹. Usar esta relación, en lugar de la de Murray, puede reducir la pérdida de carga en un **8.5%** ¹¹.

La fórmula para la pérdida de carga (y el ventilador)

Para que el sistema funcione, necesitas vencer la resistencia al paso del aire. La pérdida de carga (Δp) en un conducto recto se calcula con la ecuación de Darcy-Weisbach ³¹:

$$\Delta p = f \cdot \frac{L}{D} \cdot \rho \cdot \frac{v^2}{2}$$

- f : Factor de fricción (depende del régimen de flujo, laminar o turbulento).
- L : Longitud del conducto.
- D : Diámetro interior del conducto.

- ρ : Densidad del aire.
- v : Velocidad del aire.

Esta fórmula es crucial. Te dice que para un caudal dado, si reduces el diámetro a la mitad, la pérdida de carga se multiplica por 32 (2^5) en régimen turbulento. Por eso, en tu caso, **es mucho mejor usar varios ramales de mayor diámetro que un solo tubo largo y estrecho.**

💡 La conclusión para tu diseño

La analogía es perfecta. Tienes a tu disposición un cuerpo de fórmulas muy probado para el diseño de pozos canadienses y de redes de conductos optimizadas.

La conclusión matemática es la misma que ya intuías: para un **volumen de aire caliente dado**, es mucho más eficiente **dividirlo en varios ramales paralelos y cortos** (siguiendo una relación de diámetros óptima como la de Murray/Constructal) que forzarlo a recorrer un único conducto largo. Un solo tubo de 30 metros tendría una efectividad (ϵ) muy baja y una pérdida de carga (Δp) enorme, haciendo el sistema ineficiente. Varios ramales desde un colector, en cambio, maximizan la superficie de contacto total y minimizan la resistencia al flujo.

 50 páginas web

y si me montas algo en un html? te doy lo q tengo y eso lo optimiza?¿ a parametros necesarias?¿

🗒 Pensó durante 49 segundos ▾

The user wants an HTML tool that helps them optimize their ducting system. Let me think about what would be useful.

They have:

- A pellet stove with 3 outputs
- One output goes up to the upper floor
- They want to know if a fractal/branching design would work
- ~30m total for the upper floor

A useful HTML tool would be an interactive calculator that:

1. Takes input parameters (stove output, duct length, diameter, insulation, number of branches, etc.)
2. Calculates temperature drop along the duct
3. Calculates pressure drop / required fan power
4. Compares single long duct vs. branched design
5. Shows results graphically

Let me build a self-contained HTML file with:

- Input fields for parameters
- JavaScript calculations based on the formulas discussed
- Visual feedback (maybe a simple chart or comparison)
- Both single-duct and branched analysis

Parameters needed:

1. Stove/duct side:
 - Air flow rate (m^3/h) - typical 200-400 for canalizable
 - Outlet temperature ($^{\circ}\text{C}$) - typical 60-90 $^{\circ}\text{C}$
 - Duct diameter (mm)
 - Duct insulation thickness (mm)
 - Ambient/room temperature ($^{\circ}\text{C}$)

2. For branched:

- Number of branches
- Length per branch
- Diameter per branch

3. Loss coefficients:

- Number of elbows
- Registers/grilles

Let me write a comprehensive but clean HTML tool.

I'll use:

- Darcy-Weisbach for pressure drop
- NTU-effectiveness for temperature
- Murray's law for branch sizing

Let me code this properly. I'll make it in Spanish since the conversation is in Spanish.

Key calculations:

Temperature drop (NTU method):

For a duct with constant wall temperature:

- U = overall heat transfer coefficient
- $NTU = U * A / (\dot{m} * c_p)$
- $\epsilon = 1 - \exp(-NTU)$
- $T_{out} = T_{wall} + (T_{in} - T_{wall}) * \exp(-NTU)$

For U , I need to estimate from:

- Internal convection (h_i)
- Duct wall resistance
- Insulation resistance
- External convection (h_o)

Simplified U for insulated duct:

$$U \approx 1 / (1/h_i + t_{ins}/k_{ins} + 1/h_o)$$

with h_i roughly 10-20 W/m²K, h_o 5-10, k_{ins} 0.04 for mineral wool

Pressure drop:

- $v = Q / A$
- $Re = \rho * v * D / \mu$
- f from Colebrook or approximate
- $\Delta p = f * L / D * \rho * v^2 / 2$

Local losses: each elbow ~0.5-1.5, each grille ~2-5

$$\Delta p_{local} = \sum \zeta * \rho * v^2 / 2$$

Murray's law for branching:

$$d_{parent}^n = \sum d_{child}^n$$

$n = 3$ for laminar, ~2.33 (7/3) for turbulent

Let me write clean code.

I'll structure the HTML with:

- Header explaining
- Input section (organized in groups)
- Results section
- Comparison chart (using simple canvas or SVG)

Let me write it.

Actually, let me think about what parameters are truly needed and make it usable:

Group 1: Estufa

- Caudal de aire nominal (m³/h): default 250

- Temperatura de salida (°C): default 75
- Número de salidas disponibles: 3

Group 2: Conducto

- Diámetro interior (mm): default 100
- Longitud total del tramo (m): default 5
- Espesor de aislamiento (mm): default 25
- Material del conducto: acero inox, aluminio ($k=50, 237$) - really the wall resistance is negligible
- Codos de 90°: default 2
- Codos de 45°: default 0
- Rejillas/salidas: default 1

Group 3: Condiciones ambientales

- Temperatura ambiente (°C): default 20
- Altitud (m): to correct air density

Group 4: Diseño en ramales (opcional)

- Número de ramales: 4
- Longitud por ramal (m): 6
- Diámetro por ramal (mm): 80

Then output:

- Velocidad del aire
- Caudal másico
- Re
- Factor de fricción
- Pérdida de carga (Pa y mmH2O)
- Temperatura a la salida
- Potencia térmica entregada
- Eficiencia de distribución
- Comparación con diseño ramificado

Let me also add a small visualization comparing temperature along the duct for both designs.

Let me write this now.

I'll be careful with the HTML structure and make it look decent.

```
html

<!DOCTYPE html>
<html lang="es">
<head>
<meta charset="UTF-8">
<title>Calculadora de Canalización de Aire Caliente</title>
<style>
/* clean styling */
</style>
</head>
<body>
<div class="container">
<h1>Calculadora de Canalización de Aire Caliente</h1>
<p>Compara un diseño de conducto único con uno ramificado.</p>

<div class="inputs">...</div>
<div class="results">...</div>
<canvas id="chart"></canvas>
</div>
<script>...</script>
</body>
</html>
```

Let me code the physics properly.

Constants:

- ρ_{air} at 20°C = 1.204 kg/m³
- μ_{air} at 20°C = 1.825e-5 Pa·s
- $c_{p,\text{air}}$ = 1005 J/kg·K
- k_{air} at 20°C = 0.0257 W/m·K
- $k_{\text{mineral_wool}}$ = 0.040 W/m·K

Air at elevated temperature: use approximate values.

- At 70°C: $\rho \approx 1.03$ kg/m³, $\mu \approx 2.05\text{e-}5$

Let me use average temperature for property evaluation.

Density: $\rho = PM/(RT)$ - use ideal gas with P=101325

$\rho = 353 / (T_K)$ approximately (for standard air)

Viscosity (Sutherland):

$\mu = \mu_0 * (T_0 + S) / (T + S) * (T/T_0)^{1.5}$

$\mu_0 = 1.716\text{e-}5$ at $T_0=273.15\text{K}$, $S=110.4$

Conductivity:

$k \approx 0.0241 * (T/273.15)^{0.9}$ (approximate)

Convection coefficient internal (Dittus-Boelter for turbulent, or Nu=3.66 for laminar):

For turbulent: $Nu = 0.023 * Re^{0.8} * Pr^{0.4}$

For laminar: $Nu = 3.66$ (constant wall temp)

$Pr_{\text{air}} \approx 0.71$

$h_i = Nu * k_{\text{air}} / D$

External convection (natural):

$h_o \approx 3\text{-}5$ W/m²K for natural convection on horizontal cylinder, but inside a wall cavity might be lower. Let's use $h_o = 5$.

Actually for the duct in a heated space... let's assume $h_o = 8$ for forced-ish, or 3 for natural.

Let's just use $h_o = 5$ W/m²K.

Overall U:

$1/U = 1/h_i + t_{\text{wall}}/k_{\text{wall}} + t_{\text{ins}}/k_{\text{ins}} + 1/h_o$

For thin metal wall, wall resistance negligible.

NTU and effectiveness:

$NTU = U * A / (m_{\text{dot}} * c_p)$

$A = \pi * D_{\text{outer}} * L$ (external surface area with insulation)

Wait, this depends on which area we're using. The $U*A$ product is what matters. Let's use external area.

Actually, simpler: use external diameter with insulation.

$D_{\text{ins}} = D + 2*t_{\text{ins}}$

U based on external area:

$1/U_{\text{ext}} = 1/h_o + t_{\text{ins}}/k_{\text{ins}} + (A_{\text{ext}}/A_{\text{int}})*(1/h_i)$

where $A_{\text{ext}}/A_{\text{int}} = D_{\text{ins}}/D$

Hmm, let me simplify. For typical insulated ducts, insulation dominates. Let me just compute properly.

Let me write the code:

javascript

```
function airProperties(T_C) {
  const T = T_C + 273.15;
  const rho = 353 / T; // kg/m³, approximate for 1 atm
  const mu = 1.716e-5 * Math.pow(T/273.15, 1.5) * (273.15+110.4)/(T+110.4);
  const k = 0.0241 * Math.pow(T/273.15, 0.9);
```

```
const cp = 1005 + 0.1*(T_C-20); // approximate
const Pr = 0.71;
return {rho, mu, k, cp, Pr};
}
```

Friction factor (Colebrook):

Use Swamee-Jain approximation for turbulent:

$$f = 0.25 / (\log_{10}(\epsilon/(3.7*D) + 5.74/Re^{0.9}))^2$$

For laminar ($Re < 2300$): $f = 64/Re$

For transitional $2300 < Re < 4000$: interpolate or use turbulent

Local losses:

- Codo 90°: $\zeta = 0.9$ (smooth bend)
- Codo 45°: $\zeta = 0.4$
- Entrada/salida: $\zeta = 1.0$ each
- Rejilla: $\zeta = 3$

Total local loss coefficient $\Sigma \zeta$

$$\Delta p_{\text{local}} = \Sigma \zeta * \rho * v^2 / 2$$

Total pressure drop:

$$\Delta p = (f*L/D + \Sigma \zeta) * \rho * v^2 / 2$$

Mass flow:

$$\dot{m} = \rho * Q / 3600 \text{ (kg/s)}$$

Fan power:

$$P_{\text{fan}} = Q/3600 * \Delta p / \eta_{\text{fan}} \text{ (W)}$$

with $\eta_{\text{fan}} \approx 0.4$

Temperature drop:

Using the "cold wall" or "warm wall" model. Here the duct loses heat to the environment (cooler than duct). So T_{wall} is ambient.

For duct with internal convection + insulation + external convection, the overall heat transfer from air to environment:

$$Q_{\text{heat}} = U_{\text{ext}} * A_{\text{ext}} * \Delta T_{\text{lm}}$$

$$U_{\text{ext}} = 1 / (1/h_o + t_{\text{ins}}/k_{\text{ins}} + (D_{\text{ins}}/D)/h_i)$$

Wait let me be careful with the areas.

Heat transfer path:

- Inner convection: $Q = h_i * A_{\text{int}} * (T_{\text{air}} - T_{\text{wall_int}})$
- Conduction: $Q = k_{\text{ins}} * A_{\text{lm}} * (T_{\text{wall_int}} - T_{\text{wall_ext}}) / t_{\text{ins}}$
- Outer convection: $Q = h_o * A_{\text{ext}} * (T_{\text{wall_ext}} - T_{\text{amb}})$

Where A_{lm} is log-mean area between inner and outer of insulation.

For simplicity, use U referenced to external area:

$$1/U_{\text{ext}} = A_{\text{ext}}/(h_i A_{\text{int}}) + A_{\text{ext}} t_{\text{ins}}/(k_{\text{ins}} A_{\text{lm}}) + 1/h_o$$

For thin ducts, $A_{\text{ext}} \approx A_{\text{int}} \approx A_{\text{lm}}$ approximately... no, if we have 25mm insulation on 100mm duct, ratio is $150/100 = 1.5$. Not negligible.

Let me use log mean area:

$$A_{\text{lm}} = (A_{\text{ext}} - A_{\text{int}}) / \ln(A_{\text{ext}}/A_{\text{int}}) = 2\pi L (r_{\text{ext}} - r_{\text{int}}) / \ln(r_{\text{ext}}/r_{\text{int}})$$

OK let me just code this carefully.

Actually, for the effectiveness calculation, we use:

$$NTU = U_{\text{ext}} * A_{\text{ext}} / (\dot{m} * cp)$$

And the effectiveness for constant ambient temperature (like a heat exchanger with one fluid temperature constant):

$$\epsilon = 1 - \exp(-NTU)$$

$$T_{\text{out}} = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * (1 - \epsilon) = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * \exp(-NTU)$$

Great.

Heat delivered to room:

$$Q_{\text{room}} = \dot{m} * c_p * (T_{\text{in}} - T_{\text{out}})$$

This is the heat delivered by the duct along its length. If the duct is inside the room it's heating, this is useful heat.

For a duct going to another room, only the heat that arrives at the room (still in the air) is useful, plus the heat lost along the way might heat the spaces it passes through.

Let me simplify: compute T_{out} at end of duct, and heat delivered to destination room = $\dot{m} * c_p * (T_{\text{out}} - T_{\text{amb_dest}})$.

Murray's law for branches:

If we have a duct of diameter D_0 and want to split into N equal branches with diameter D_i :

$$\text{For turbulent: } D_0^{7/3} = N * D_i^{7/3}$$

$$D_i = D_0 * N^{(-3/7)}$$

$$\text{For } N=4: D_i = D_0 * 4^{(-0.4286)} = D_0 * 0.55$$

$$\text{For } N=2: D_i = D_0 * 2^{(-0.4286)} = D_0 * 0.74$$

OK let me now write the full HTML.

Let me structure the results nicely with:

- Two columns: single duct vs. branched
- Key metrics compared

Also add a graph showing temperature decay along length.

I'll keep it self-contained, no external libraries.

Let me write it now.

For the graph, I'll use canvas with simple line drawing.

Let me make the code clean and reasonably commented.

Actually the user asked what parameters I would need. So I should also explain in my response what parameters are needed and then provide the HTML tool with sensible defaults.

Let me write the response:

1. Brief intro - yes, I can make it
2. List of parameters needed (in plain language)
3. The HTML tool with defaults so they can play with it
4. How to use it / what to look at

Let me finalize the code now.

I'll be careful about:

- Units (SI internally)
- Reasonable defaults
- Clear labels in Spanish
- Working comparison logic

Let me code it.

Actually, let me think about whether I should include both "single duct" and "branched" as separate calculations or if the tool should be one scenario with branching toggle.

I think the best UX is:

- Common parameters (stove, environment, duct specs)
- Two side-by-side scenarios: "single long duct" and "branched"
- Each with its own length/diameter/branches
- Comparison of results

Let me go with that.

Final structure:

- Section: Estufa y aire
- Section: Condiciones ambientales
- Section: Escenario A - Conducto único
- Section: Escenario B - Ramificado
- Results side by side
- Chart

Let me write it.

For the code, I'll write clean JS:

```
javascript

function calcScenario(params) {
  const {
    Q_m3h,          // caudal volumétrico total m³/h
    T_in,           // temperatura entrada °C
    T_amb,          // temperatura ambiente °C
    D_mm,           // diámetro interior mm
    t_ins_mm,       // espesor aislamiento mm
    L_m,            // longitud total por ramal m
    n_branches,     // número de ramales en paralelo
    n_elbows90,
    n_elbows45,
    n_grilles
  } = params;

  // ... calculations

  return {
    v, Re, f, dp_total, T_out, Q_thermal, ...
  };
}
```

Let me write it all out.

For air properties, I'll use the average of T_in and T_amb, or just T_in for simplicity.

Alright, writing the full HTML now.

I need to be careful about:

1. The total flow rate Q - if there are N branches in parallel, each branch gets Q/N
2. Pressure drop - for parallel branches, they each have their own pressure drop, but they share the same upstream trunk

Hmm, this is getting complex. Let me simplify:

For the branched scenario:

- I'll compute per-branch: $Q_{\text{branch}} = Q_{\text{total}} / N$
- Compute temperature drop along each branch (using the branch length)
- Compute pressure drop along each branch

For the single duct scenario:

- All flow goes through the single duct

Actually, for a fair comparison, I should also consider:

- The trunk (common upstream) - but let's assume it's short and ignore it, or add it as a parameter

Let me just keep it as: trunk is negligible, we compare branch distribution.

OK, writing now.

Actually let me simplify even more. The user's question is essentially:

- Single duct: Q_total goes through one duct of length L, diameter D

- Branched: Q_{total} / N goes through N parallel ducts each of length L , diameter D_{branch}

The branched scenario is better because:

- Less flow per branch $\rightarrow$ less velocity $\rightarrow$ less pressure drop (which goes as v^2)
- Also less heat loss per branch because... well, actually the total heat loss is similar (total surface area same or more)

Wait, the heat loss:

- Single: surface = πDL
- Branched: surface = $N * \pi * D_b * L$ (with $D_b < D$)

If we keep total cross-section area equal:

$$N * D_b^2 = D^2$$

$$D_b = D / \sqrt{N}$$

$$\text{Surface area branched} = N * \pi * (D/\sqrt{N}) * L = \sqrt{N} * \pi * D * L$$

So branched has MORE surface area ($\sqrt{N}$ times). This means more heat loss! But also more even distribution.

Hmm, but the goal is not to lose less heat to the outside - the goal is to deliver heat to the destination room. The heat lost from the duct is lost to... wherever the duct passes. If the duct passes through the destination room, the heat lost IS delivered.

Actually the key issues are:

1. Temperature arriving at the destination (T_{out})
2. Pressure drop (fan power required)

For a given total heat capacity, the temperature arriving at destination should be similar regardless of branching (total $U*A$ is larger for branched but flow per branch is smaller - it roughly cancels).

Actually let me think again.

$$\text{Single duct: } NTU = UA_{\text{single}} / (\dot{m} * c_p)$$

$$\text{Branched: each branch: } NTU_b = UA_b / (\dot{m}/N * c_p) = NUA_b / (\dot{m} c_p)$$

$$\text{With } A_b = \pi D_b L \text{ and } D_b = D/\sqrt{N}:$$

$$A_b = \pi D L / \sqrt{N}$$

$$NTU_b = N U \pi D L / \sqrt{N} / (\dot{m} c_p) = \sqrt{N} * U \pi D L / (\dot{m} c_p) = \sqrt{N} * NTU_{\text{single}}$$

So each branch has $\sqrt{N}$ times the NTU! That means the temperature drop is MORE in the branched scenario per branch.

Hmm. But wait - the total heat loss in branched is $N * A_b = \sqrt{N} * A_{\text{single}}$, so more surface area, more heat lost.

BUT the actual amount of heat delivered to the destination is what we want. Let's compute:

$$\epsilon_{\text{single}} = 1 - \exp(-NTU_{\text{single}})$$

$$\epsilon_{\text{branch}} = 1 - \exp(-\sqrt{N} * NTU_{\text{single}})$$

$$T_{\text{out_single}} = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}})(1 - \epsilon_{\text{single}})$$

$$T_{\text{out_branch}} = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}})(1 - \epsilon_{\text{branch}})$$

Since $\epsilon_{\text{branch}} > \epsilon_{\text{single}}$, $T_{\text{out_branch}} < T_{\text{out_single}}$.

So actually, the branched scenario delivers LESS hot air temperature at destination?!

Hmm, that's counterintuitive. The issue is that I assumed the same total duct length. But actually the point of branching is usually to reduce the pressure drop, or to serve multiple destinations.

Wait, in the user's case they want to compare:

- Single duct: one duct of length 30m carrying all flow
- Branched: e.g., 4 branches of length 6m each carrying $Q/4$ each

Let me redo with different lengths.

Single: $L=30$, $D=100\text{mm}$, flow Q

Branched: $L=6$, $D=80\text{mm}$, $N=4$, flow $Q/4$ per branch

For single:

$$A_{\text{single}} = \pi * 0.1 * 30 = 9.42 \text{ m}^2$$

$$NTU_{single} = U9.42/(m_{dot}cp)$$

For branched:

$$A_b = \pi * 0.08 * 6 = 1.51 \text{ m}^2 \text{ per branch}$$

$$NTU_b = U1.51/((m_{dot}/4)cp) = 4U1.51/(m_{dot}cp) = U6.03/(m_{dot}*cp)$$

So $NTU_b < NTU_{single}$ ($6.03 < 9.42$). Branched has less temperature drop.

But wait - I need to be careful. U depends on D. Smaller ducts have higher h_i . But the insulation U is usually dominated by insulation, so U is roughly similar.

OK so with shorter branches, the branched scenario delivers hotter air to the destination.

Also, pressure drop:

$$\text{Single: } v = Q/(\pi 0.05^2) - \text{for } Q=250 \text{ m}^3/\text{h} = 0.0694 \text{ m}^3/\text{s}$$

$$v_{single} = 0.0694/(\pi 0.0025) = 8.84 \text{ m/s}$$

$$Re = \rho * v * D / \mu \approx 1.1 * 8.84 * 0.1 / 2e-5 \approx 48,600 \text{ (turbulent)}$$

$$f \approx 0.02$$

$$\Delta p_{single} = (0.0230/0.1 + 3) * 1.1 * 8.84^2/2 = (6+3)43 = 387 \text{ Pa}$$

$$\text{Branched: each branch } Q/4 = 0.0174 \text{ m}^3/\text{s}$$

$$v_b = 0.0174/(\pi * 0.04^2) = 3.46 \text{ m/s (for 80mm dia)}$$

$$Re = 1.1 * 3.46 * 0.08 / 2e-5 \approx 15,200 \text{ (turbulent)}$$

$$f \approx 0.027$$

$$\Delta p_b = (0.027 * 6 / 0.08 + 2) * 1.1 * 3.46^2/2 = (2.03+2)*6.6 = 26.6 \text{ Pa}$$

So branched has MUCH less pressure drop (26.6 vs 387 Pa).

But wait, I also need to account for the trunk that feeds all branches. If the trunk is 5m of 100mm duct carrying all flow:

$$\text{Trunk } \Delta p = (0.025/0.1+1) * 1.1 * 8.84^2/2 = (1+1)43 = 86 \text{ Pa}$$

Total branched $\approx 86 + 26.6 \approx 113 \text{ Pa}$ vs 387 Pa single. Still much better.

Good. So the tool should:

- Account for trunk + branches in branched scenario
- Single duct = full length

Now, about the heat delivered to destination: this is $m_{dot} * cp * (T_{out} - T_{amb_dest})$. If T_{out} is higher in branched, more heat delivered.

But also, if the air is delivered at higher temperature but with the same mass flow, it can heat the same room to a higher temperature. But the room will reach steady state where heat in = heat out (via walls, ventilation). So the "useful heat" is what's delivered.

OK, I think the tool should output:

- Velocity
- Reynolds number
- Friction factor
- Pressure drop total
- Fan power required (with assumed efficiency)
- Temperature at outlet
- Heat delivered ($m_{dot}cp(T_{out}-T_{amb})$)
- Also: how much heat was lost along the way vs delivered at the destination

I'll present these clearly.

Now let me write the actual HTML.

Let me simplify the U calculation to avoid getting too complex. I'll use a simplified formula:

$$U_{ext} = 1 / (1/h_o + t_{ins}/k_{ins} + (D_{ins}/D)*(1/h_i))$$

With h_i estimated from Dittus-Boelter or $Nu=3.66$ depending on Re.

Actually, let me just use a reasonable estimate for h_i based on typical values. For ducts of this size and flow:

- Turbulent flow ($Re > 4000$): $h_i \approx 10\text{-}30 \text{ W/m}^2\text{K}$

- Laminar: $h_i \approx 5\text{--}15 \text{ W/m}^2\text{K}$

I'll compute it properly with Dittus-Boelter.

Let me write the code now, for real.

javascript

```
const K_AIR = 0.0257; // W/m·K at 20°C (approximate, will adjust for T)
const CP_AIR = 1005; // J/kg·K
const K_INSULATION = 0.040; // W/m·K mineral wool
const H_OUT = 5; // W/m²K external natural convection
const RHO_0 = 1.204; // kg/m³ at 20°C
const MU_0 = 1.825e-5; // Pa·s at 20°C
```

Actually I want to compute air properties at the average temperature. Let me use Sutherland's law for viscosity.

javascript

```
function airProps(T_C) {
  const T = T_C + 273.15;
  const T0 = 273.15;
  const mu0 = 1.716e-5;
  const S = 110.4;
  const mu = mu0 * Math.pow(T/T0, 1.5) * (T0+S)/(T+S);
  const rho = 353.15 / T; // ideal gas, 1 atm
  const k = 0.0241 * Math.pow(T/T0, 0.9);
  const cp = 1005 + 0.1*(T_C - 20); // rough
  const Pr = 0.71;
  return {mu, rho, k, cp, Pr, T};
}
```

For U calculation with insulation:

- $r_{\text{int}} = D/2$
- $r_{\text{ins}} = D/2 + t_{\text{ins}}$
- $A_{\text{int}} \text{ (per m length)} = 2\pi r_{\text{int}}$
- $A_{\text{ext}} \text{ (per m length)} = 2\pi r_{\text{ins}}$
- $A_{\text{lm}} = 2\pi(r_{\text{ins}} - r_{\text{int}})/\ln(r_{\text{ins}}/r_{\text{int}})$

h_i from Dittus-Boelter: $Nu = 0.023 * Re^{0.8} * Pr^{0.4}$

$h_i = Nu * k_{\text{air}} / D$

Then U_{ext} (per m^2 of external area):

$1/U_{\text{ext}} = A_{\text{ext}}/(h_i * A_{\text{int}}) + A_{\text{ext}}*t_{\text{ins}}/(k_{\text{ins}} * A_{\text{lm}}) + 1/h_o$

Simplify: $A_{\text{ext}}/A_{\text{int}} = r_{\text{ins}}/r_{\text{int}}$

$A_{\text{ext}}/A_{\text{lm}} = r_{\text{ins}} * \ln(r_{\text{ins}}/r_{\text{int}})/(r_{\text{ins}} - r_{\text{int}})$

Let me code this properly.

OK here's the plan for the response:

1. Briefly say yes, and list parameters
2. Give the HTML code
3. Explain how to use it

Let me write the code cleanly.

I'll use a single file with inline CSS and JS.

Let me finalize:

html

```
<!DOCTYPE html>
<html lang="es">
<head>
<meta charset="UTF-8">
```

```
<meta name="viewport" content="width=device-width, initial-scale=1.0">
<title>Calculadora de canalización de aire caliente</title>
<style>
:root {
  --bg: #0f1419;
  --card: #1a2332;
  --border: #2a3a4a;
  --text: #e6eef6;
  --muted: #8fa3b8;
  --accent: #ff8c42;
  --accent2: #4a9eff;
  --good: #4ade80;
  --bad: #f87171;
}
* { box-sizing: border-box; }
body {
  font-family: -apple-system, BlinkMacSystemFont, 'Segoe UI', system-ui, sans-serif;
  background: var(--bg);
  color: var(--text);
  margin: 0;
  padding: 20px;
  line-height: 1.5;
}
.container { max-width: 1200px; margin: 0 auto; }
h1 { font-size: 1.6rem; margin-bottom: 0.3rem; }
.subtitle { color: var(--muted); margin-bottom: 2rem; font-size: 0.95rem; }

.grid {
  display: grid;
  grid-template-columns: repeat(auto-fit, minmax(320px, 1fr));
  gap: 16px;
  margin-bottom: 16px;
}

.card {
  background: var(--card);
  border: 1px solid var(--border);
  border-radius: 12px;
  padding: 20px;
}
.card h2 {
  font-size: 1.05rem;
  margin: 0 0 16px 0;
  color: var(--accent);
  font-weight: 600;
}
.card.b { }
.card.b h2 { color: var(--accent2); }

.field {
  display: grid;
  grid-template-columns: 1fr auto;
  gap: 8px;
  align-items: center;
  margin-bottom: 10px;
}
.field label {
  font-size: 0.85rem;
  color: var(--muted);
}
.field input {
  background: var(--bg);
  border: 1px solid var(--border);
  border-radius: 6px;
  color: var(--text);
  padding: 6px 10px;
  width: 100px;
  font-size: 0.9rem;
}
```

```

    font-family: inherit;
    text-align: right;
  }
  .field input:focus {
    outline: none;
    border-color: var(--accent);
  }

  .unit { color: var(--muted); font-size: 0.75rem; }

  .results {
    display: grid;
    grid-template-columns: 1fr 1fr;
    gap: 16px;
    margin-top: 16px;
  }

  .result-card {
    background: var(--card);
    border: 1px solid var(--border);
    border-radius: 12px;
    padding: 20px;
  }
  .result-card h3 {
    font-size: 1rem;
    margin: 0 0 12px 0;
    font-weight: 600;
  }
  .result-card.a h3 { color: var(--accent); }
  .result-card.b h3 { color: var(--accent2); }

  .metric {
    display: flex;
    justify-content: space-between;
    padding: 8px 0;
    border-bottom: 1px solid rgba(255,255,255,0.05);
    font-size: 0.9rem;
  }
  .metric:last-child { border-bottom: none; }
  .metric-label { color: var(--muted); }
  .metric-value { font-family: 'SF Mono', Menlo, Consolas, monospace; font-weight: 500; }

  .verdict {
    margin-top: 16px;
    padding: 14px 18px;
    background: rgba(74, 158, 255, 0.08);
    border-left: 3px solid var(--accent2);
    border-radius: 6px;
    font-size: 0.9rem;
  }
  .verdict strong { color: var(--accent2); }

  canvas {
    width: 100%;
    height: 320px;
    background: var(--card);
    border: 1px solid var(--border);
    border-radius: 12px;
    margin-top: 16px;
  }

  .good { color: var(--good); }
  .bad { color: var(--bad); }
</style>
</head>
<body>
<div class="container">

```

```
<h1>Calculadora de canalización de aire caliente</h1>
<p class="subtitle">Compara un conducto único largo frente a un diseño ramificado. Los valores por defecto son razonables para una estufa de pellets canalizable típica.</p>

<div class="card" style="margin-bottom:16px;">
  <h2>⚙️ Parámetros comunes</h2>
  <div class="grid" style="margin-bottom:0;">
    <div>
      <div class="field">
        <label>Caudal de aire de la estufa</label>
        <div><input type="number" id="Q" value="250" step="10"> <span class="unit">m³/h</span></div>
      </div>
      <div class="field">
        <label>Temperatura de salida</label>
        <div><input type="number" id="Tin" value="75" step="5"> <span class="unit">°C</span></div>
      </div>
      <div class="field">
        <label>Temperatura ambiente destino</label>
        <div><input type="number" id="Tamb" value="20" step="1"> <span class="unit">°C</span></div>
      </div>
      <div class="field">
        <label>Espesor de aislamiento</label>
        <div><input type="number" id="tins" value="25" step="5"> <span class="unit">mm</span></div>
      </div>
      <div class="field">
        <label>Codos 90° (por ramal)</label>
        <div><input type="number" id="n90" value="2" step="1"> <span class="unit">uds</span></div>
      </div>
      <div class="field">
        <label>Codos 45° (por ramal)</label>
        <div><input type="number" id="n45" value="0" step="1"> <span class="unit">uds</span></div>
      </div>
      <div class="field">
        <label>Rejillas / salidas</label>
        <div><input type="number" id="ngr" value="1" step="1"> <span class="unit">uds</span></div>
      </div>
    </div>
  </div>

  <div class="grid">
    <div class="card a">
      <h2>🔴 Escenario A – Conducto único</h2>
      <div class="field">
        <label>Longitud del conducto</label>
        <div><input type="number" id="A_L" value="30" step="1"> <span class="unit">mm</span></div>
      </div>
      <div class="field">
        <label>Diámetro interior</label>
        <div><input type="number" id="A_D" value="100" step="5"> <span class="unit">mm</span></div>
      </div>
    </div>
    <div class="card b">
      <h2>🔵 Escenario B – Ramificado</h2>
      <div class="field">
```

```

<label>Longitud del troncal</label>
<div><input type="number" id="B_Lt" value="5" step="1"> <span class="unit">m</span></div>
</div>
<div class="field">
  <label>Diámetro del troncal</label>
  <div><input type="number" id="B_Dt" value="125" step="5"> <span class="unit">m</span></div>
</div>
<div class="field">
  <label>Número de ramales</label>
  <div><input type="number" id="B_N" value="4" step="1"> <span class="unit">uds</span></div>
</div>
<div class="field">
  <label>Longitud de cada ramal</label>
  <div><input type="number" id="B_Lr" value="6" step="1"> <span class="unit">m</span></div>
</div>
<div class="field">
  <label>Diámetro de cada ramal</label>
  <div><input type="number" id="B_Dr" value="80" step="5"> <span class="unit">mm</span></div>
</div>
</div>
</div>
</div>

<div class="results">
  <div class="result-card a">
    <h3>Resultados – Conducto único</h3>
    <div id="outA"></div>
  </div>
  <div class="result-card b">
    <h3>Resultados – Ramificado</h3>
    <div id="outB"></div>
  </div>
</div>

<div class="verdict" id="verdict"></div>

<canvas id="chart"></canvas>
</div>

<script>
// ... calculations
</script>
</body>
</html>

```

Now the JavaScript. Let me write it carefully.

```

javascript

// Physical constants
const P_ATM = 101325; // Pa
const R_AIR = 287.05; // J/kg·K
const K_INSUL = 0.040; // W/m·K (mineral wool)
const H_OUT = 5; // W/m²K (natural convection, exterior of insulated duct)

function airProps(T_C) {
  const T = T_C + 273.15;
  const rho = P_ATM / (R_AIR * T);
  const mu = 1.716e-5 * Math.pow(T/273.15, 1.5) * (273.15 + 110.4) / (T + 110.4);
  const k = 0.0241 * Math.pow(T/273.15, 0.9);
  const cp = 1005 + 0.1 * (T_C - 20);
  const Pr = 0.71;
  return { rho, mu, k, cp, Pr };
}

```

```

function frictionFactor(Re, D_m, roughness = 0.000045) {
  if (Re < 1) return 0;
  if (Re < 2300) return 64 / Re;
  // Swamee-Jain
  const eps_D = roughness / D_m;
  const f = 0.25 / Math.pow(Math.log10(eps_D/3.7 + 5.74/Math.pow(Re, 0.9)), 2);
  return f;
}

function hInternal(Re, Pr, k_air, D_m) {
  let Nu;
  if (Re < 2300) {
    Nu = 3.66;
  } else if (Re < 4000) {
    // interpolate between laminar and turbulent
    const Nu_lam = 3.66;
    const Nu_turb = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
    const t = (Re - 2300) / (4000 - 2300);
    Nu = Nu_lam * (1-t) + Nu_turb * t;
  } else {
    Nu = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
  }
  return Nu * k_air / D_m;
}

// Overall U per external area
function overallU(h_i, D_m, t_ins_m) {
  const r_int = D_m / 2;
  const r_ext = r_int + t_ins_m;
  const A_ratio_i = r_ext / r_int; // A_ext/A_int
  const A_lm_ratio = r_ext * Math.log(r_ext/r_int) / (r_ext - r_int); // A_ext/A_lm

  // 1/U_ext = A_ext/(h_i*A_int) + A_ext*t_ins/(k_ins*A_lm) + 1/h_o
  const R_i = A_ratio_i / h_i;
  const R_cond = A_lm_ratio * t_ins_m / K_INSUL;
  const R_o = 1 / H_OUT;
  const R_total = R_i + R_cond + R_o;
  return 1 / R_total;
}

// Solve duct flow
function solveDuct(Q_m3h, T_in_C, T_amb_C, D_mm, t_ins_mm, L_m, n_branches, n90, n45,
ngr) {
  const D = D_mm / 1000;
  const t_ins = t_ins_mm / 1000;
  const Q_branch_m3s = (Q_m3h / 3600) / n_branches;

  // Average temp for properties
  const T_avg = (T_in_C + T_amb_C) / 2;
  const props = airProps(T_avg);

  // Flow velocity
  const A_duct = Math.PI * D * D / 4;
  const v = Q_branch_m3s / A_duct;

  // Reynolds
  const Re = props.rho * v * D / props.mu;

  // Friction factor
  const f = frictionFactor(Re, D);

  // h_i, U
  const h_i = hInternal(Re, props.Pr, props.k, D);
  const U = overallU(h_i, D, t_ins);

  // Mass flow per branch
  const m_dot_branch = props.rho * Q_branch_m3s;

```

```

// Temperature drop via NTU
const r_ext = D/2 + t_ins;
const A_ext = Math.PI * 2 * r_ext * L_m;
const NTU = U * A_ext / (m_dot_branch * props.cp);
const eps = 1 - Math.exp(-NTU);
const T_out = T_amb_C + (T_in_C - T_amb_C) * (1 - eps);

// Heat delivered to destination per branch
// = m_dot * cp * (T_out - T_amb) at outlet
// But this assumes the outlet air mixes with room at T_amb
const Q_deliv_branch = m_dot_branch * props.cp * (T_out - T_amb_C); // W

// Pressure drop
// Local loss coefficients
const zeta_90 = 1.3; // elbow 90° smooth
const zeta_45 = 0.4;
const zeta_grille = 2.0;
const zeta_in = 0.5;
const zeta_out = 1.0;
const zeta_total = zeta_in + zeta_out + n90*zeta_90 + n45*zeta_45 + ngr*zeta_grille;

const dp_friction = f * (L_m / D) * props.rho * v * v / 2;
const dp_local = zeta_total * props.rho * v * v / 2;
const dp_branch = dp_friction + dp_local;

return {
  v, Re, f, h_i, U, NTU, eps, T_out,
  dp_branch,
  Q_deliv_branch,
  Q_deliv_total: Q_deliv_branch * n_branches,
  m_dot_branch,
  m_dot_total: m_dot_branch * n_branches,
  D, L: L_m, n_branches
};
}

// For scenario A: single duct
function calcA() {
  const Q = +document.getElementById('Q').value;
  const Tin = +document.getElementById('Tin').value;
  const Tamb = +document.getElementById('Tamb').value;
  const tins = +document.getElementById('tins').value;
  const n90 = +document.getElementById('n90').value;
  const n45 = +document.getElementById('n45').value;
  const ngr = +document.getElementById('ngr').value;
  const L = +document.getElementById('A_L').value;
  const D = +document.getElementById('A_D').value;

  return solveDuct(Q, Tin, Tamb, D, tins, L, 1, n90, n45, ngr);
}

// For scenario B: trunk + branches
function calcB() {
  const Q = +document.getElementById('Q').value;
  const Tin = +document.getElementById('Tin').value;
  const Tamb = +document.getElementById('Tamb').value;
  const tins = +document.getElementById('tins').value;
  const n90 = +document.getElementById('n90').value;
  const n45 = +document.getElementById('n45').value;
  const ngr = +document.getElementById('ngr').value;

  const Lt = +document.getElementById('B_Lt').value;
  const Dt = +document.getElementById('B_Dt').value;
  const N = +document.getElementById('B_N').value;
  const Lr = +document.getElementById('B_Lr').value;
  const Dr = +document.getElementById('B_Dr').value;

```

```

// Trunk: all flow through one duct
// For trunk, use same temp profile
const trunk = solveDuct(Q, Tin, Tamb, Dt, tins, Lt, 1, 0, 0, 0);
// No elbows/grilles on trunk, just friction

// The trunk's output temperature becomes the input to branches
const Tin_branch = trunk.T_out;

// Branches: Q/N per branch
const branch = solveDuct(Q, Tin_branch, Tamb, Dr, tins, Lr, N, n90, n45, ngr);

// Combine
const dp_total = trunk.dp_branch + branch.dp_branch;

return {
  trunk, branch,
  dp_total,
  T_out: branch.T_out,
  Q_deliv_total: branch.Q_deliv_total,
  m_dot_total: branch.m_dot_total,
  v_trunk: trunk.v,
  v_branch: branch.v,
  Re_trunk: trunk.Re,
  Re_branch: branch.Re
};
}

```

Hmm, this is getting long. Let me think if there's a simpler way.

Actually, for the trunk I need to add the local loss at the end (the split into N branches). Let me just account for the branch losses in the branch calc.

Actually, this is fine. Let me simplify:

The trunk carries all flow. The branches split it. In the branches, we have the elbows and grilles.

For the trunk, only friction.

Wait, the trunk also connects to the stove. Let me add a small inlet loss. Actually the "inlet" is at the stove. Let me not count that.

OK let me just keep it simple and code it.

Actually I realize I should double check the effectiveness for the trunk. The trunk alone has some temperature drop. Then the branches have their own. The total T_out is:

- Trunk: T_out_trunk from T_in
- Branch: T_out_branch from T_out_trunk

Yes, that's what I have.

Let me now write the display code.

```

javascript

function fmt(n, dec=1) {
  if (Math.abs(n) >= 1000) return n.toFixed(0);
  if (Math.abs(n) >= 100) return n.toFixed(dec);
  return n.toFixed(dec);
}

function render() {
  const A = calcA();
  const B = calcB();

  // Scenario A output
  document.getElementById('outA').innerHTML = `
    <div class="metric"><span class="metric-label">Velocidad del aire</span><span clas
s="metric-value">${A.v}<? 'bad': ''>${fmt(A.v)} m/s</span></div>
    <div class="metric"><span class="metric-label">Reynolds</span><span class="metric-
value">${fmt(A.Re,0)}</span></div>

```

```

    <div class="metric"><span class="metric-label">Factor de fricción</span><span clas
s="metric-value">${A.f.toFixed(4)}</span></div>

    <div class="metric"><span class="metric-label">Pérdida de carga total</span><span
class="metric-value ${A.dp_branch>150?'bad':''}">${fmt(A.dp_branch,0)} Pa (${(A.dp_bra
nch/9.81).toFixed(1)} mmH2O)</span></div>

    <div class="metric"><span class="metric-label">Temperatura de llegada</span><span
class="metric-value ${A.T_out<30?'bad':'good'}">${fmt(A.T_out)} °C</span></div>

    <div class="metric"><span class="metric-label">Potencia útil entregada</span><span
class="metric-value">${fmt(A.Q_deliv_total,0)} W</span></div>

    <div class="metric"><span class="metric-label">Caudal másico</span><span class="me
tric-value">${fmt(A.m_dot_total*3600,1)} kg/h</span></div>
`;

// Scenario B output
document.getElementById('outB').innerHTML = `
    <div class="metric"><span class="metric-label">Velocidad troncal / ramal</span><spa
n class="metric-value">${fmt(B.v_trunk)} / ${fmt(B.v_branch)} m/s</span></div>

    <div class="metric"><span class="metric-label">Reynolds troncal / ramal</span><spa
n class="metric-value">${fmt(B.Re_trunk,0)} / ${fmt(B.Re_branch,0)}</span></div>

    <div class="metric"><span class="metric-label">Pérdida de carga total</span><span
class="metric-value ${B.dp_total>150?'bad':'good'}">${fmt(B.dp_total,0)} Pa (${(B.dp_t
otal/9.81).toFixed(1)} mmH2O)</span></div>

    <div class="metric"><span class="metric-label">Temperatura de llegada</span><span
class="metric-value ${B.T_out<30?'bad':'good'}">${fmt(B.T_out)} °C</span></div>

    <div class="metric"><span class="metric-label">Potencia útil entregada</span><span
class="metric-value">${fmt(B.Q_deliv_total,0)} W</span></div>

    <div class="metric"><span class="metric-label">Caudal másico</span><span class="me
tric-value">${fmt(B.m_dot_total*3600,1)} kg/h</span></div>
`;

// Verdict
const dpRatio = A.dp_branch / B.dp_total;
const qRatio = B.Q_deliv_total / A.Q_deliv_total;

let verdict = '';
if (B.dp_total < A.dp_branch && B.Q_deliv_total > A.Q_deliv_total) {
    verdict = `<strong>El diseño ramificado es claramente mejor:</strong> necesita ${f
mt(dpRatio,1)}× menos presión y entrega ${fmt(qRatio,2)}× más calor útil al destino.`;
} else if (B.dp_total < A.dp_branch) {
    verdict = `<strong>El diseño ramificado reduce la pérdida de carga ${fmt(dpRatio,
1)}×.</strong> La entrega de calor es similar.`;
} else {
    verdict = `Los dos diseños son comparables en pérdida de carga. Ajusta los parámet
ros.`;
}
document.getElementById('verdict').innerHTML = verdict;

// Chart
drawChart(A, B);
}

```

For the chart, I want to show temperature along the length. For single duct, from Tin to Tout along L. For branched, from Tin along trunk to T_out_trunk at Lt, then along branch to T_out_branch.

Let me use exponential decay for the temperature curve:

$$T(x) = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * \exp(-NTU * x/L)$$

Let me code this.

```

javascript

function drawChart(A, B) {
    const canvas = document.getElementById('chart');
    const dpr = window.devicePixelRatio || 1;
    const rect = canvas.getBoundingClientRect();
    canvas.width = rect.width * dpr;
    canvas.height = rect.height * dpr;
    const ctx = canvas.getContext('2d');

```

```

ctx.scale(dpr, dpr);

const W = rect.width, H = rect.height;
const pad = { l: 60, r: 20, t: 20, b: 40 };
const plotW = W - pad.l - pad.r;
const plotH = H - pad.t - pad.b;

// Determine x-range and y-range
const xMax = Math.max(A.L, 30);
const yMin = 15, yMax = 85;

// Grid
ctx.strokeStyle = '#2a3a4a';
ctx.lineWidth = 1;
ctx.font = '11px -apple-system, sans-serif';
ctx.fillStyle = '#8fa3b8';
ctx.textAlign = 'right';
ctx.textBaseline = 'middle';

for (let T = 20; T <= 80; T += 10) {
  const y = pad.t + plotH * (1 - (T - yMin)/(yMax - yMin));
  ctx.beginPath();
  ctx.moveTo(pad.l, y);
  ctx.lineTo(W - pad.r, y);
  ctx.stroke();
  ctx.fillText(T + '°C', pad.l - 8, y);
}

ctx.textAlign = 'center';
ctx.textBaseline = 'top';
for (let x = 0; x <= xMax; x += 5) {
  const px = pad.l + plotW * x/xMax;
  ctx.beginPath();
  ctx.moveTo(px, pad.t);
  ctx.lineTo(px, H - pad.b);
  ctx.strokeStyle = '#1e2a38';
  ctx.stroke();
  if (x % 10 === 0) {
    ctx.fillStyle = '#8fa3b8';
    ctx.fillText(x + 'm', px, H - pad.b + 8);
  }
}

// Axes
ctx.strokeStyle = '#4a5a6a';
ctx.beginPath();
ctx.moveTo(pad.l, pad.t);
ctx.lineTo(pad.l, H - pad.b);
ctx.lineTo(W - pad.r, H - pad.b);
ctx.stroke();

// Curve A
const xA = x => pad.l + plotW * x / xMax;
const yA = T => pad.t + plotH * (1 - (T - yMin)/(yMax - yMin));

ctx.strokeStyle = '#ff8c42';
ctx.lineWidth = 2.5;
ctx.beginPath();
const stepsA = 100;
for (let i = 0; i <= stepsA; i++) {
  const x = A.L * i / stepsA;
  const T = 20 + (75 - 20) * Math.exp(-A.NTU * i / stepsA); // WRONG - need proper
  formula
  // ...
}

```

Hmm wait, the temperature formula is $T(x) = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * \exp(-NTU * x/L)$. Let me fix.

Actually NTU already includes the full length L. So:

$$T(x) = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * \exp(-NTU * x/L)$$

At $x=L$: $T = T_{\text{amb}} + (T_{\text{in}} - T_{\text{amb}}) * \exp(-NTU)$. Correct.

Let me use this. Also I need the actual T_{in} and T_{amb} values from the form.

Let me pass them.

Actually let me just restructure: keep the T_{in} and T_{amb} in the returned object from solveDuct.

Let me add them:

In solveDuct return:

```
text
```

```
T_in: T_in_C,
T_amb: T_amb_C,
```

For the trunk in scenario B, add those too.

OK. Let me finish the code.

For the branched case:

- From $x=0$ to $x=L_t$: trunk, T goes from T_{in} to $T_{\text{out_trunk}}$
- From $x=L_t$ to $x=L_t+L_r$: branch, T goes from $T_{\text{out_trunk}}$ to $T_{\text{out_branch}}$

OK let me just write it.

I think I'm overcomplicating. Let me finalize the code and write it out.

Actually, I realize I should also account for the fact that in the branched case, if the branches end at different rooms, the "delivered heat" per branch is per room. Total is total. That's fine.

Also for the branched case, the temperature at end of trunk is uniform for all branches (if they're symmetric). Good.

Let me finalize now.

One issue: the chart x-axis. For scenario B, total path is $L_t + L_r = 5+6 = 11\text{m}$. For scenario A, 30m. So x_{Max} should be 30. That's fine, I'll show both on the same chart.

Actually, maybe it's more useful to show them as two separate charts, or one chart with both curves. Let me do one chart with both curves.

For B, the "effective distance" from origin along the path is $L_t + L_r$.

OK, writing final code.

Let me also think about whether the pressure drop calc is right.

$$\text{For a single duct, } dp = (fL/D + \Sigma \zeta) * \rho v^2 / 2$$

For the branched case:

- Trunk: $dp_{\text{trunk}} = f_t * (L_t/D_t) * \rho * v_t^2 / 2$ (no local losses, or add a small one for the split)
- Each branch: $dp_{\text{branch}} = (f_b L_r / D_r + \Sigma \zeta_b) * \rho v_b^2 / 2$

Total: $dp_{\text{trunk}} + dp_{\text{branch}}$

Hmm, but for parallel branches, the total pressure drop across all branches is the same (they're in parallel). So we take the max. If they're symmetric, all equal. So total = trunk + branch.

OK that's right.

Alright, finalizing the code. Let me write it out completely.

Let me also add a "reset" button and auto-update on input change.

Actually, I'll just use `oninput="render()"` on all inputs.

Let me write the final version.

I need to be careful with the code length. Let me keep it focused.

One more thing - the temperature at delivery: I'm using T_{amb} as the wall temperature for the NTU calculation. But actually, the duct is inside a room/house that's at ambient temperature. So this is reasonable. Though if the duct goes through cold spaces (attic, crawlspace), the effective ambient might be lower. Let me just use a single ambient for simplicity.

Actually, I could add a separate "wall/duct ambient" temperature, but let's keep it simple.

OK writing now.

For the input listening, I'll add:

```
javascript

document.querySelectorAll('input').forEach(inp => {
  inp.addEventListener('input', render);
});
```

And call render() on page load.

Let me finalize the code and write it out.

I think the response will be long, but the user asked for it, and it should be useful.

Let me write it now.

Perfecto, sí se puede montar. Te dejo una calculadora completa en un solo archivo HTML que puedes abrir directamente en el navegador (sin instalar nada). Compara en vivo tu escenario de **conducto único de 30 m** contra un **diseño ramificado con troncal + ramales**, usando las fórmulas que hablamos (Darcy-Weisbach para pérdida de carga, NTU-Efectividad para caída de temperatura, y Dittus-Boelter para convección interna).

Parámetros que necesita (y por qué)

Comunes a los dos escenarios:

- **Caudal de aire de la estufa (m^3/h)** — determina la velocidad y el régimen (laminar/turbulento). En canalizables suele ir de 150 a 400.
- **Temperatura de salida de la estufa ($^{\circ}C$)** — típico 60-90 $^{\circ}C$.
- **Temperatura ambiente de destino ($^{\circ}C$)** — la habitación a calentar, unos 20 $^{\circ}C$.
- **Espesor de aislamiento del conducto (mm)** — crítico. Sin él, el aire llega frío. 25 mm es lo mínimo razonable.
- **Número de codos 90°/45° y rejillas** — cada uno añade pérdida de carga local.

Escenario A (conducto único):

- Longitud total y diámetro interior.

Escenario B (ramificado):

- Longitud y diámetro del troncal (lleva todo el caudal).
- Número de ramales, longitud y diámetro de cada uno (reparten el caudal).

Qué te devuelve

- Velocidad del aire (por encima de 6 m/s empieza a ser ruidoso y pierde mucha carga).
- Reynolds y factor de fricción.
- Pérdida de carga total en Pa y mmH₂O (esto te dice si el ventilador de la estufa puede o no).
- Temperatura de llegada al destino.
- Potencia útil realmente entregada en W (no la que sale de la estufa, la que **llega**).
- Gráfica de caída de temperatura a lo largo del recorrido para los dos diseños.

EI HTML

Guárdalo como canalizacion.html y ábrelo con doble clic:

```
html

<!DOCTYPE html>
<html lang="es">
<head>
<meta charset="UTF-8">
<meta name="viewport" content="width=device-width, initial-scale=1.0">
<title>Calculadora de canalización de aire caliente</title>
<style>
:root {
  --bg: #0f1419; --card: #1a2332; --border: #2a3a4a;
  --text: #e6eef6; --muted: #8fa3b8;
  --accent: #ff8c42; --accent2: #4a9eff;
  --good: #4ade80; --bad: #f87171;
}
* { box-sizing: border-box; }
body {
  font-family: -apple-system, BlinkMacSystemFont, 'Segoe UI', system-ui, sans-serif;
  background: var(--bg); color: var(--text); margin: 0; padding: 20px; line-height: 1.5;
}
.container { max-width: 1200px; margin: 0 auto; }
h1 { font-size: 1.5rem; margin: 0 0 .3rem 0; }
.subtitle { color: var(--muted); margin-bottom: 1.5rem; font-size: .9rem; }
.grid {
  display: grid; grid-template-columns: repeat(auto-fit, minmax(320px, 1fr));
  gap: 16px; margin-bottom: 16px;
}
.card {
  background: var(--card); border: 1px solid var(--border);
  border-radius: 12px; padding: 20px;
}
.card h2 { font-size: 1rem; margin: 0 0 14px 0; font-weight: 600; color: var(--accent); }
.card.b h2 { color: var(--accent2); }
.inner-grid { display: grid; grid-template-columns: 1fr 1fr; gap: 14px; }
@media (max-width: 700px) { .inner-grid { grid-template-columns: 1fr; } }
.field { display: grid; grid-template-columns: 1fr auto; gap: 8px; align-items: center; margin-bottom: 9px; }
.field label { font-size: .82rem; color: var(--muted); }
.field input {
  background: var(--bg); border: 1px solid var(--border); border-radius: 6px;
  color: var(--text); padding: 6px 10px; width: 110px; font-size: .88rem;
  font-family: inherit; text-align: right;
}
.field input:focus { outline: none; border-color: var(--accent); }
.unit { color: var(--muted); font-size: .72rem; margin-left: 4px; }
.results { display: grid; grid-template-columns: 1fr 1fr; gap: 16px; margin-top: 16px; }
@media (max-width: 700px) { .results { grid-template-columns: 1fr; } }
.result-card { background: var(--card); border: 1px solid var(--border); border-radius: 12px; padding: 20px; }
.result-card h3 { font-size: .95rem; margin: 0 0 12px 0; font-weight: 600; }
.result-card.a h3 { color: var(--accent); }
.result-card.b h3 { color: var(--accent2); }
.metric {
  display: flex; justify-content: space-between; padding: 7px 0;
  border-bottom: 1px solid rgba(255,255,255,.05); font-size: .88rem;
}
.metric:last-child { border-bottom: none; }
.metric-label { color: var(--muted); }
.metric-value { font-family: ui-monospace, 'SF Mono', Menlo, monospace; font-weight: 500; }
.verdict {
```

```

margin-top: 16px; padding: 14px 18px;
background: rgba(74,158,255,.08); border-left: 3px solid var(--accent2);
border-radius: 6px; font-size: .9rem;
}
.verdict strong { color: var(--accent2); }
canvas {
width: 100%; height: 320px; background: var(--card);
border: 1px solid var(--border); border-radius: 12px; margin-top: 16px; display: bloc
k;
}
.good { color: var(--good); }
.bad { color: var(--bad); }
.legend { display: flex; gap: 20px; font-size: .82rem; color: var(--muted); margin-top:
10px; justify-content: center; }
.legend span::before {
content: ''; display: inline-block; width: 14px; height: 3px;
vertical-align: middle; margin-right: 6px; border-radius: 2px;
}
.legend .la::before { background: var(--accent); }
.legend .lb::before { background: var(--accent2); }
</style>
</head>
<body>
<div class="container">
<h1>Calculadora de canalización de aire caliente</h1>
<p class="subtitle">Compara un conducto único largo frente a un diseño ramificado (tron
cal + ramales).</p>

<div class="card" style="margin-bottom:16px;">
<h2>⚙️ Parámetros comunes</h2>
<div class="inner-grid">
<div>
<div class="field"><label>Caudal de aire de la estufa</label>
<div><input type="number" id="Q" value="250" step="10"><span class="unit">m³/h
</span></div></div>
<div class="field"><label>Temperatura de salida</label>
<div><input type="number" id="Tin" value="75" step="5"><span class="unit">°C</s
pan></div></div>
<div class="field"><label>Temperatura ambiente destino</label>
<div><input type="number" id="Tamb" value="20" step="1"><span class="unit">°C</
span></div></div>
</div>
<div>
<div class="field"><label>Espesor de aislamiento</label>
<div><input type="number" id="tins" value="25" step="5"><span class="unit">mm</
span></div></div>
<div class="field"><label>Codos 90° (por ramal)</label>
<div><input type="number" id="n90" value="2" step="1"><span class="unit">uds</s
pan></div></div>
<div class="field"><label>Codos 45° (por ramal)</label>
<div><input type="number" id="n45" value="0" step="1"><span class="unit">uds</s
pan></div></div>
<div class="field"><label>Rejillas / salidas</label>
<div><input type="number" id="ngr" value="1" step="1"><span class="unit">uds</s
pan></div></div>
</div>
</div>
</div>

<div class="grid">
<div class="card a">
<h2>🔴 Escenario A – Conducto único</h2>
<div class="field"><label>Longitud del conducto</label>
<div><input type="number" id="A_L" value="30" step="1"><span class="unit">m</span
></div></div>
<div class="field"><label>Diámetro interior</label>
<div><input type="number" id="A_D" value="100" step="5"><span class="unit">mm</sp
an></div></div>

```

```

</div>
<div class="card b">
  <h2>● Escenario B – Ramificado</h2>
  <div class="field"><label>Longitud del troncal</label>
    <div><input type="number" id="B_Lt" value="5" step="1"><span class="unit">m</span>
  </div></div>
  <div class="field"><label>Diámetro del troncal</label>
    <div><input type="number" id="B_Dt" value="125" step="5"><span class="unit">mm</span>
  </div></div>
  <div class="field"><label>Número de ramales</label>
    <div><input type="number" id="B_N" value="4" step="1"><span class="unit">uds</span>
  </div></div>
  <div class="field"><label>Longitud de cada ramal</label>
    <div><input type="number" id="B_Lr" value="6" step="1"><span class="unit">m</span>
  </div></div>
  <div class="field"><label>Diámetro de cada ramal</label>
    <div><input type="number" id="B_Dr" value="80" step="5"><span class="unit">mm</span>
  </div></div>
</div>
</div>

<div class="results">
  <div class="result-card a"><h3>Resultados – Conducto único</h3><div id="outA"></div>
</div>
  <div class="result-card b"><h3>Resultados – Ramificado</h3><div id="outB"></div></div>
</div>

<div class="verdict" id="verdict"></div>

<canvas id="chart"></canvas>
<div class="legend"><span class="la">Conducto único</span><span class="lb">Ramificado
(troncal + ramal)</span></div>
</div>

<script>
const P_ATM = 101325, R_AIR = 287.05;
const K_INSUL = 0.040, H_OUT = 5.0;

function airProps(T_C) {
  const T = T_C + 273.15;
  return {
    rho: P_ATM / (R_AIR * T),
    mu: 1.716e-5 * Math.pow(T/273.15, 1.5) * (273.15 + 110.4) / (T + 110.4),
    k: 0.0241 * Math.pow(T/273.15, 0.9),
    cp: 1005 + 0.1 * (T_C - 20),
    Pr: 0.71
  };
}

function frictionFactor(Re, D) {
  if (Re < 1) return 0.02;
  if (Re < 2300) return 64 / Re;
  const epsD = 0.000045 / D;
  return 0.25 / Math.pow(Math.log10(epsD/3.7 + 5.74/Math.pow(Re, 0.9)), 2);
}

function hInternal(Re, Pr, kAir, D) {
  let Nu;
  if (Re < 2300) Nu = 3.66;
  else if (Re < 4000) {
    const N1 = 3.66, Nt = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
    const t = (Re - 2300) / 1700;
    Nu = N1 * (1 - t) + Nt * t;
  } else {
    Nu = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
  }
  return Nu * kAir / D;
}

```

```

}

function overallU(hi, D, tIns) {
  const ri = D / 2, re = ri + tIns;
  const Ai_ratio = re / ri;
  const Alm_ratio = re * Math.log(re / ri) / (re - ri);
  const R = Ai_ratio / hi + Alm_ratio * tIns / K_INSUL + 1 / H_OUT;
  return 1 / R;
}

function solveDuct(Q_m3h, Tin, Tamb, Dmm, tInsMm, L, N, n90, n45, ngr) {
  const D = Dmm / 1000, tIns = tInsMm / 1000;
  const Qb = (Q_m3h / 3600) / N;
  const props = airProps((Tin + Tamb) / 2);
  const A = Math.PI * D * D / 4;
  const v = Qb / A;
  const Re = props.rho * v * D / props.mu;
  const f = frictionFactor(Re, D);
  const hi = hInternal(Re, props.Pr, props.k, D);
  const U = overallU(hi, D, tIns);
  const mdot = props.rho * Qb;
  const rExt = D / 2 + tIns;
  const Aext = 2 * Math.PI * rExt * L;
  const NTU = U * Aext / (mdot * props.cp);
  const eps = 1 - Math.exp(-NTU);
  const Tout = Tamb + (Tin - Tamb) * (1 - eps);
  const Qdel = mdot * props.cp * (Tout - Tamb);

  const zeta = 0.5 + 1.0 + n90 * 1.3 + n45 * 0.4 + ngr * 2.0;
  const dpf = f * (L / D) * props.rho * v * v / 2;
  const dpl = zeta * props.rho * v * v / 2;
  const dp = dpf + dpl;

  return { v, Re, f, U, NTU, eps, Tout, dp, Qdel: Qdel * N, mdot: mdot * N,
    D, L, N, Tin, Tamb };
}

function num(id) { return parseFloat(document.getElementById(id).value); }

function calcA() {
  return solveDuct(num('Q'), num('Tin'), num('Tamb'), num('A_D'), num('tins'),
    num('A_L'), 1, num('n90'), num('n45'), num('ngr'));
}

function calcB() {
  const Q = num('Q'), Tin = num('Tin'), Tamb = num('Tamb'), tins = num('tins');
  const n90 = num('n90'), n45 = num('n45'), ngr = num('ngr');
  const trunk = solveDuct(Q, Tin, Tamb, num('B_Dt'), tins, num('B_Lt'), 1, 0, 0, 0);
  const branch = solveDuct(Q, trunk.Tout, Tamb, num('B_Dr'), tins,
    num('B_Lr'), num('B_N'), n90, n45, ngr);

  return {
    trunk, branch,
    dp: trunk.dp + branch.dp,
    Tout: branch.Tout,
    Qdel: branch.Qdel,
    mdot: branch.mdot,
    vT: trunk.v, vB: branch.v,
    ReT: trunk.Re, ReB: branch.Re
  };
}

function fmt(n, d = 1) {
  if (!isFinite(n)) return '-';
  const a = Math.abs(n);
  if (a >= 1000) return n.toFixed(0);
  if (a >= 100) return n.toFixed(d);
  return n.toFixed(d);
}

```

```

function metric(label, value, cls = '') {
  return `<div class="metric"><span class="metric-label">${label}</span>
    <span class="metric-value ${cls}">${value}</span></div>`;
}

function render() {
  const A = calcA(), B = calcB();

  document.getElementById('outA').innerHTML =
    metric('Velocidad del aire', fmt(A.v) + ' m/s', A.v > 6 ? 'bad' : A.v > 4 ? '' : 'good') +
    metric('Reynolds', fmt(A.Re, 0)) +
    metric('Factor de fricción', A.f.toFixed(4)) +
    metric('Pérdida de carga', fmt(A.dp, 0) + ' Pa (' + (A.dp / 9.81).toFixed(1) + ' mmH2O)'),
    A.dp > 150 ? 'bad' : A.dp > 80 ? '' : 'good') +
    metric('Temperatura de llegada', fmt(A.Tout) + ' °C',
    A.Tout < 30 ? 'bad' : A.Tout < 40 ? '' : 'good') +
    metric('Potencia útil entregada', fmt(A.Qdel, 0) + ' W') +
    metric('Caudal másico', fmt(A.mdot * 3600, 1) + ' kg/h');

  document.getElementById('outB').innerHTML =
    metric('Velocidad troncal / ramal', fmt(B.vT) + ' / ' + fmt(B.vB) + ' m/s',
    B.vT > 6 || B.vB > 6 ? 'bad' : 'good') +
    metric('Reynolds troncal / ramal', fmt(B.ReT, 0) + ' / ' + fmt(B.ReB, 0)) +
    metric('Pérdida de carga total', fmt(B.dp, 0) + ' Pa (' + (B.dp / 9.81).toFixed(1) +
    ' mmH2O)'),
    B.dp > 150 ? 'bad' : B.dp > 80 ? '' : 'good') +
    metric('Temperatura de llegada', fmt(B.Tout) + ' °C',
    B.Tout < 30 ? 'bad' : B.Tout < 40 ? '' : 'good') +
    metric('Potencia útil entregada', fmt(B.Qdel, 0) + ' W') +
    metric('Caudal másico', fmt(B.mdot * 3600, 1) + ' kg/h');

  let txt;
  const dpRatio = A.dp / B.dp;
  const qRatio = B.Qdel / A.Qdel;
  if (B.dp < A.dp && B.Qdel > A.Qdel) {
    txt = `<strong>El diseño ramificado gana en todo:</strong> necesita ${fmt(dpRatio,1)}
  × menos presión y entrega ${fmt(qRatio,2)}× más calor útil al destino.`;
  } else if (B.dp < A.dp) {
    txt = `<strong>El ramificado reduce la pérdida de carga ${fmt(dpRatio,1)}×.</strong>
  La entrega de calor es comparable.`;
  } else if (B.Qdel > A.Qdel) {
    txt = `<strong>El ramificado entrega ${fmt(qRatio,2)}× más calor</strong>, pero con m
  ás pérdida de carga. Valora un ventilador auxiliar.`;
  } else {
    txt = `Los dos diseños son comparables. Ajusta diámetros y longitudes.`;
  }
  document.getElementById('verdict').innerHTML = txt;

  drawChart(A, B);
}

function drawChart(A, B) {
  const canvas = document.getElementById('chart');
  const dpr = window.devicePixelRatio || 1;
  const rect = canvas.getBoundingClientRect();
  canvas.width = rect.width * dpr;
  canvas.height = rect.height * dpr;
  const ctx = canvas.getContext('2d');
  ctx.setTransform(dpr, 0, 0, dpr, 0, 0);

  const W = rect.width, H = rect.height;
  const pad = { l: 55, r: 20, t: 20, b: 40 };
  const pw = W - pad.l - pad.r, ph = H - pad.t - pad.b;

  const xMax = Math.max(A.L, B.trunk.L + B.branch.L, 20);

```

```

const yMin = 15, yMax = 85;
const xPix = x => pad.l + pw * x / xMax;
const yPix = T => pad.t + ph * (1 - (T - yMin) / (yMax - yMin));

// Grid + Labels Y
ctx.font = '11px -apple-system, sans-serif';
ctx.fillStyle = '#8fa3b8';
ctx.textAlign = 'right'; ctx.textBaseline = 'middle';
for (let T = 20; T <= 80; T += 10) {
  const y = yPix(T);
  ctx.strokeStyle = '#1e2a38';
  ctx.beginPath(); ctx.moveTo(pad.l, y); ctx.lineTo(W - pad.r, y); ctx.stroke();
  ctx.fillStyle = '#8fa3b8';
  ctx.fillText(T + '°C', pad.l - 6, y);
}

// X Labels
ctx.textAlign = 'center'; ctx.textBaseline = 'top';
const xStep = xMax <= 15 ? 3 : xMax <= 30 ? 5 : 10;
for (let x = 0; x <= xMax; x += xStep) {
  const px = xPix(x);
  ctx.strokeStyle = '#1e2a38';
  ctx.beginPath(); ctx.moveTo(px, pad.t); ctx.lineTo(px, H - pad.b); ctx.stroke();
  ctx.fillStyle = '#8fa3b8';
  ctx.fillText(x + 'm', px, H - pad.b + 6);
}

// Axes
ctx.strokeStyle = '#4a5a6a'; ctx.lineWidth = 1;
ctx.beginPath();
ctx.moveTo(pad.l, pad.t); ctx.lineTo(pad.l, H - pad.b);
ctx.lineTo(W - pad.r, H - pad.b); ctx.stroke();

// Curve A
const plotCurve = (T_in, T_amb, NTU, L, x0, color) => {
  ctx.strokeStyle = color; ctx.lineWidth = 2.5;
  ctx.beginPath();
  const N = 80;
  for (let i = 0; i <= N; i++) {
    const t = i / N;
    const x = x0 + L * t;
    const T = T_amb + (T_in - T_amb) * Math.exp(-NTU * t);
    if (i === 0) ctx.moveTo(xPix(x), yPix(T));
    else ctx.lineTo(xPix(x), yPix(T));
  }
  ctx.stroke();
};

plotCurve(A.Tin, A.Tamb, A.NTU, A.L, 0, '#ff8c42');
// Branched: trunk first, then branch
plotCurve(B.trunk.Tin, B.trunk.Tamb, B.trunk.NTU, B.trunk.L, 0, '#4a9eff');
plotCurve(B.branch.Tin, B.branch.Tamb, B.branch.NTU, B.branch.L,
  B.trunk.L, '#4a9eff');
}

document.querySelectorAll('input').forEach(el => {
  el.addEventListener('input', render);
});
render();
</script>
</body>
</html>

```

Cómo usarlo

1. Abre el archivo. Verás los valores por defecto razonables para tu caso: **250 m³/h, 75 °C de salida, 20 °C de destino, 25 mm de aislamiento.**

2. Ajusta el escenario A con tu tubo único de 30 m y diámetro actual (probablemente 80 o 100 mm).
3. Ajusta el escenario B como imaginas el ramificado: troncal corto de 5 m y 4 ramales de 6 m.
4. Compara abajo los dos paneles y mira el veredicto.
5. La gráfica te muestra **cómo cae la temperatura con la distancia** en cada diseño. Verás que el ramificado llega mucho más caliente al destino.

Qué mirar

- **Pérdida de carga mayor de ~100-150 Pa:** probablemente el ventilador de la estufa no da para eso solo. Necesitarás ventilador auxiliar.
- **Velocidad > 6 m/s:** ruido y pérdida alta.
- **Temperatura de llegada < 30 °C:** prácticamente no calienta.
- **Potencia útil entregada:** compárala con la potencia nominal de tu estufa (probablemente 6-10 kW). Te dirá qué fracción llega realmente.

Juega con los diámetros: verás que **subir el troncal de 100 a 125 mm cambia todo**. Y verás por qué un solo tubo de 30 m nunca va a funcionar bien, mientras que 4 ramales cortos sí.

Cuando tengas los datos reales de tu estufa (caudal y temperatura exactos) y los planos, me pasas capturas y afinamos.

jajajajajaja oie a q esto si lo hacemos modular tambien valdria para caudal electrico? bueno cambiando formulas para cualquiera supongo

⊗ Pensó durante 4 segundos ∨

The user is joking about how the calculator could be modularized for electrical current too. They're asking if the same approach (changing formulas) would work for any fluid/domain. Let me give a thoughtful but fun answer.

Yes, there's a deep analogy here. Darcy-Weisbach for fluids $\approx$ Ohm's law for electricity. NTU-efectividad $\approx$ RC circuits. There's a whole family of analogies.

Let me explain the analogies properly and enjoy the moment with them.

Key analogies:

- Fluid flow $\leftrightarrow$ Electric current
- Pressure difference $\Delta p \leftrightarrow$ Voltage V
- Volumetric flow $Q \leftrightarrow$ Current I
- Hydraulic resistance $R_h = \Delta p/Q \leftrightarrow$ Electrical resistance $R = V/I$
- Poiseuille (laminar): $\Delta p = (128 \mu L / \pi D^4) \cdot Q \leftrightarrow V = R \cdot I \rightarrow R_h = 128 \mu L / \pi D^4$ (Hagen-Poiseuille)
- For turbulent: $\Delta p \propto Q^2$ (non-linear, like a diode/resistor with non-linear $V-I$)
- Thermal: heat flow $\dot{Q} \leftrightarrow$ current, $\Delta T \leftrightarrow$ voltage, thermal resistance $R_{th} = \Delta T / \dot{Q}$
- Thermal capacity $C_{th} \leftrightarrow$ electrical capacitance
- NTU-efectividad comes from the same math as RC charging: $T(t) = T_{\infty} + (T_0 - T_{\infty}) \cdot \exp(-t/RC)$

So yes, all these are mathematically the same problem with different labels. This is the basis of "lumped element modeling" and "equivalent circuits" used in:

- Thermal design of electronics (thermal resistance networks)
- Building physics (ISO 13790, RC models of buildings)
- Biological systems (Murray's law applies to blood vessels AND to any transport network)
- Traffic flow
- Groundwater flow (Darcy's law)
- Electrical networks

And there's a whole "constructal law" of Bejan that says this pattern of branching appears universally in nature and engineering regardless of the physics — it's about optimizing flow access.

So the answer is: yes, absolutely. And the reason it works is that the underlying math is identical (linear or non-linear transport equations with the same structure). That's why engineers can use the same tools for very different domains.

Let me be enthusiastic but keep it grounded, not too long. Give them a good "wow" moment without overdoing it.

I could also mention: this is why Spice (electrical simulator) can simulate thermal, hydraulic, mechanical, etc. systems. And why Modelica exists.

Maybe I should mention a few concrete correspondence tables to make it tangible.

Format: medium length, conversational, with a small table maybe, and a punchline at the end tying back to their fractal/bronchial intuition.

Jajaja pues sí, has dado con una de las ideas más potentes de la ingeniería: **la analogía entre dominios**. Cambias los nombres y las constantes, pero las ecuaciones son las mismas. Se llama *lumped element modeling* o *equivalent circuit modeling*, y es una herramienta estándar en física e ingeniería.

La tabla de correspondencias

Concepto	Fluidos / aire	Eléctrico	Térmico
Potencial	Δp (presión)	V (voltaje)	ΔT
Flujo	Q (caudal)	I (corriente)	$\dot{Q}$
Resistencia	$R_h = \Delta p / Q$	$R = V / I$	$R_{th} = \Delta T / \dot{Q}$
Almacenamiento	inercia del fluido	capacitancia C	capacitancia térmica C_{th}
Régimen lineal	Hagen-Poiseuille (laminar)	Ley de Ohm	Ley de Fourier
Régimen no lineal	Darcy-Weisbach (turbulento, $\propto Q^2$)	diodo / resistencia no lineal	radiación

Lo bonito del asunto

- **Hagen-Poiseuille** (laminar, fluido):

$$\Delta p = \frac{128 \mu L}{\pi D^4} Q$$

Es literalmente la ley de Ohm $V = RI$ con $R_h \propto L / D^4$.

- **La carga de un condensador** $V(t) = V_{\infty}(1 - e^{-t/RC})$ es **exactamente** la misma ecuación que la efectividad NTU que usamos antes: $T = T_{\infty}(1 - e^{-NTU})$. Por eso la curva de calentamiento de un termómetro, la carga de un condensador y el enfriamiento de un tubo son la misma curva con letras distintas.
- **La ley de Murray** que mencionaste al principio sirve igual para vasos sanguíneos, ramas de árboles, ríos, sistemas de distribución de agua, redes de ventilación y circuitos de distribución eléctrica. No es casualidad: la **teoría constructal** de Bejan demuestra que aparece espontáneamente en cualquier sistema que optimice "el acceso al flujo".
- **SPICE**, el simulador eléctrico clásico, se usa para simular circuitos térmicos, hidráulicos y mecánicos. Y **Modelica** es un lenguaje que hace lo mismo a propósito: describe el sistema una vez y cambias el dominio.

Por qué esto te importa a ti

Significa que tu intuición de "ramificaciones tipo bronquios" **no es una analogía poética**: es la misma matemática que aparece en:

- El sistema vascular de tus pulmones.
- La red de distribución eléctrica de una ciudad.
- Los canales de refrigeración de un chip.
- El sistema de ramificación de un roble.
- La red de afluentes de un río.
- Los colectores de un sistema de suelo radiante hidrónico.

Todos resuelven el mismo problema: **transportar flujo desde un punto a una superficie con mínima pérdida**. Y todos convergen a la misma geometría.

El punchline

Así que sí: coge esa calculadora, renombra variables y constantes, y tienes una herramienta para:

- Diseñar un circuito eléctrico con caídas de tensión.
- Dimensionar una red de agua.
- Calcular la red de aire acondicionado de un edificio.
- Estimar cómo se calienta un chip con su disipador.
- Incluso modelar cómo se enfría una taza de café.

El universo es perezoso y reutiliza plantillas. Tú has redescubierto una de las más ubicuas. No es un detalle tonto: es la razón por la que un ingeniero puede saltar de la fontanería a la electrónica sin empezar de cero.

Cuando tengas los datos reales de tu estufa, afinamos la calculadora para tu caso concreto. Y si algún día te apetece, la modularizamos en serio (dominio seleccionable: aire / agua / eléctrico / térmico) y te queda un juguete bien majo.

dale, hazlo así lo subo, como lo hacemos?¿ varios modulos para enseñar como se pueden meter mas?¿ modular por eventos preparado para hexagonal, comentando con test donde hagan falta, explicando las logicas

☒ Pensó durante 18 segundos ∨

The user wants a modular, extensible HTML application with:

- Multiple modules
- Event-driven architecture
- Hexagonal architecture ready
- Tests with comments
- Explaining the logics

This is a big task. Let me design something clean and educational.

I'll build:

1. A core "domain" layer with pure physics/domain logic (no DOM, no browser)
2. A "ports" layer defining interfaces
3. An "adapters" layer for UI (DOM), storage (localStorage), etc.
4. An event bus
5. Multiple domain implementations: Fluid (air/water), Electrical, Thermal

6. A test suite that runs in the browser
7. Comments explaining the architecture and logic

Let me structure it:

```

text

/index.html - main page
/modules/
  core/
    eventBus.js - event bus for hexagonal ports
    registry.js - domain registry
  domains/
    fluid.js - fluid domain (air)
    electric.js - electric domain
    thermal.js - thermal domain
  ui/
    renderer.js - DOM rendering
  tests/
    tests.js - test suite

```

But since it must be a single file to upload easily, I'll make it a single HTML file with well-organized internal modules. Or I could split into multiple files. The user said "lo subo" (I'll upload it). Let me make it a single self-contained HTML that's easy to deploy.

Actually, they said "varios modulos para enseñar como se pueden meter mas" - so they want to see the modular structure. Let me do a single HTML with clearly separated module sections, plus a real ESM split version if possible.

Best approach: single HTML file with:

- Clear separation of concerns using IIFE modules or ES modules with type="module" and script blocks
- Event bus
- Domain registry pattern (hexagonal)
- 3 domains implemented (fluid/air, water, electric)
- A UI that adapts to the selected domain
- Tests that run in-browser with a nice visual output
- Comments explaining everything

Let me write this carefully. I'll use ES modules with a single file (data: URLs or inline script type="module"). Actually inline ESM is tricky. Let me use classic IIFEs with a namespace pattern, or use a blob URL approach.

Simpler: single HTML file, modules as IIFE returning objects, registered in a global namespace. Tests run in browser.

Actually the cleanest educational approach is to write it as separate files. But for portability I'll do inline. Let me use `<script type="module">` with imports from blob: URLs? No, too complex.

Best: multiple `<script>` blocks with modules pattern (IIFE), a registry, event bus, tests. Clean and copy-paste-able.

Let me design:

Architecture

Domain layer (pure logic, no DOM):

- `Physics.fluid` - fluid dynamics calculations
- `Physics.electric` - electrical calculations
- `Physics.thermal` - thermal calculations
- Each exposes: `params (schema), solve(input), describe(result)`

Ports (interfaces):

- `EventBus` - pub/sub
- `Registry` - domain registration

- `StoragePort` - persistence interface
- `RenderPort` - UI interface

Adapters:

- `DOMRenderer` - implements `RenderPort`
- `LocalStorageAdapter` - implements `StoragePort`
- `BrowserEventBus` - implements `EventBus`

Tests:

- `TestRunner` - simple test framework
- `Tests` - assertions for physics modules

The physics

For each domain, we solve the same canonical problem: **transport from a source through a network (trunk + branches) to a destination, computing loss and delivered quantity.**

Fluid (air):

- Inputs: Q (m^3/h), T_{in} , T_{amb} , D_{trunk} , L_{trunk} , D_{branch} , L_{branch} , N_{branches} , insulation
- Outputs: velocity, Re , friction factor, Δp , T_{out} , delivered power

Electric:

- Inputs: V_{source} , I (A) or P , wire gauge (mm^2), length, ambient temp, number of parallel loads
- Outputs: voltage drop, power delivered at end, current density, resistance

Thermal:

- Inputs: $\dot{Q}$ (W), T_{hot} , T_{cold} , material k , thickness, area, length, geometry
- Outputs: ΔT , R_{th} , heat flux

Actually, to make them truly analogous and educational, I should keep the same "network" structure: source $\rightarrow$ trunk $\rightarrow$ N branches $\rightarrow$ destination. Each domain has the same solve pipeline but different formulas.

Let me implement 3 domains:

1. **Fluid (aire)** — what we already built
2. **Electric** — the same network but with V , I , R
3. **Hydraulic (agua)** — water in pipes (essentially same as fluid but with water properties)

That makes it clear "same math, different constants".

Or better: Fluid (parameterizable by medium: air or water) + Electric + Thermal. Three clearly different physics but same solve signature.

Let me go with:

- `fluid` domain: medium can be 'air' or 'water'
- `electric` domain
- `thermal` domain

Now the UI adapts: when you select a domain, it shows the relevant parameter inputs.

Tests

I'll write a mini test framework:

```
js

const Test = {
  suite(name, fn) { ... },
  it(desc, fn) { ... },
  expect(actual).toBe(expected, tolerance)
}
```

Tests to include:

- Air properties at 20°C match reference values

- Reynolds calculation at known conditions
- Hagen-Poiseuille matches analytical solution
- Friction factor for laminar = $64/Re$
- NTU effectiveness limits: $NTU \rightarrow 0$, $\epsilon \rightarrow 0$; $NTU \rightarrow \infty$, $\epsilon \rightarrow 1$
- Ohm's law: $V = IR$
- Voltage divider with N parallel branches
- Series resistance sum
- Temperature drop in a duct matches exponential
- Energy conservation: power in = power delivered + losses

Hexagonal

The `solve()` function should take a plain object and return a plain object. No knowledge of DOM.
The UI is an adapter.

I'll add a clear `Port` interface documentation in comments.

Events

Event bus with:

- `on(event, handler)`, `off(event, handler)`, `emit(event, payload)`
- Domain events: `domain.changed`, `params.changed`, `result.computed`, `test.completed`

Let me write this now. It's going to be a large file, but I'll organize it well.

Let me structure the HTML file:

```
html

<!DOCTYPE html>
<html>
<head>
  <title>Calculadora modular – dominios físicos</title>
  <style>...</style>
</head>
<body>
  <!-- UI -->
  <script>
    // =====
    // MODULE 1: EventBus (puerto)
    // =====
    // =====
    // MODULE 2: Registry (puerto)
    // =====
    // =====
    // MODULE 3: Physics core (dominio puro)
    // =====
    // =====
    // MODULE 4: Domains (fluido, eléctrico, térmico)
    // =====
    // =====
    // MODULE 5: Tests
    // =====
    // =====
    // MODULE 6: UI Adapter
    // =====
    // =====
    // MODULE 7: Bootstrap
    // =====
  </script>
</body>
</html>
```

Actually for cleanliness let me use a UMD-ish pattern where each module is an IIFE that attaches to a global `App` namespace. Clear and works everywhere.

Let me write it. Given the length, I'll keep comments meaningful but not bloated.

I need to be careful with size. Let me aim for a comprehensive but focused implementation. I'll skip some niceties and focus on architecture clarity.

Actually, a better organization for the user to "meter más módulos": make each domain a self-contained object with a schema and a solve function. The UI is auto-generated from the schema. That way adding a new domain = adding one object.

Schema format:

```
js

{
  id: 'fluid',
  name: 'Fluido (aire/agua)',
  params: [
    { id: 'Q', label: 'Caudal', unit: 'm³/h', default: 250, type: 'number' },
    ...
  ],
  solve(input) { ... return { metrics: [...] } }
}
```

Then UI auto-renders inputs, calls solve, shows metrics. Super extensible.

Let me code this up.

For the physics, I'll do:

Fluid domain:

```
js

solve({ medium, Q, Tin, Tamb, Dtrunk, Ltrunk, Dr, Lr, N, tins })
```

Electric domain:

```
js

solve({ V, P, section, length, N, material }) // distributed load
```

Thermal domain:

```
js

solve({ Qdot, Thot, Tcold, k, thickness, area, length })
```

Ok let me start writing.

Actually, I realize I should be pragmatic about length. Let me write a solid ~600-800 line HTML file. That's substantial but manageable.

Let me write it now.

For test assertions, I'll write:

```
js

function testRunner() {
  const results = [];
  const it = (suite, name, fn) => {
    try {
      fn();
      results.push({ suite, name, ok: true });
    } catch (e) {
      results.push({ suite, name, ok: false, error: e.message });
    }
  };
  return { it, results };
}
```

Assertion helpers:

```
js

const assert = {
  close(actual, expected, tol, msg) {
    if (Math.abs(actual - expected) > tol)
      throw new Error(`${msg} || `: esperado ${expected}±${tol}, obtenido ${actual}`);
  },
  equal(a, b, msg) {
    if (a !== b) throw new Error(`${msg} || `: esperado ${b}, obtenido ${a}`);
  },
  ok(cond, msg) {
    if (!cond) throw new Error(msg || 'assertion failed');
  }
};
```

Now let me write the whole thing.

I'll comment key architectural decisions and physics formulas in Spanish since the user is Spanish-speaking.

Let me write:

```
html

<!DOCTYPE html>
<html lang="es">
<head>
<meta charset="UTF-8">
<meta name="viewport" content="width=device-width, initial-scale=1.0">
<title>Física modular – fluidos, electricidad, calor</title>
<style>
/* ... dark theme similar to before ... */
</style>
</head>
<body>
<div class="container">
  <header>
    <h1>Física modular</h1>
    <p>Tres dominios, una misma arquitectura. Añade el cuarto cuando quieras.</p>
  </header>

  <nav id="domainTabs"></nav>

  <main>
    <section id="inputs"></section>
    <section id="results"></section>
  </main>

  <section id="tests"></section>
</div>

<script>
/* =====
MÓDULO 0 – Namespace
Todo vive bajo App.* para evitar colisiones globales.
===== */
const App = {};

/* =====
MÓDULO 1 – EventBus (puerto de comunicación)
-----

Arquitectura hexagonal: los módulos hablan entre sí mediante
eventos, no mediante llamadas directas. Así el dominio (física)
no sabe nada de la UI, y la UI no sabe nada de la física.
```

```

Contrato del puerto (Port):
  on(event, handler) -> () => void    (descripción)
  off(event, handler) -> void
  emit(event, payload) -> void
===== */
App.EventBus = (() => {
  const listeners = new Map();

  function on(event, handler) {
    if (!listeners.has(event)) listeners.set(event, new Set());
    listeners.get(event).add(handler);
    return () => off(event, handler);
  }

  function off(event, handler) {
    listeners.get(event)?.delete(handler);
  }

  function emit(event, payload) {
    listeners.get(event)?.forEach(h => {
      try { h(payload); } catch (e) { console.error(`[EventBus] handler error en "${event}"`, e); }
    });
  }

  return { on, off, emit };
})();

```

Hmm wait, the bus needs to be event-driven but let me not overcomplicate. Let me continue.

Actually, let me draft the whole thing more quickly in one go.

Let me be practical. I'll write a clean 700ish-line file. Key modules:

1. EventBus
2. Physics helpers (air properties, friction factor, NTU, etc.)
3. Domain registry
4. Three domains: fluid, electric, thermal
5. Test framework + tests
6. UI adapter
7. Bootstrap

Let me write it.

I need to be careful with the physics formulas being correct and consistent.

For electric domain, I'll model: source voltage V , load power P_{total} distributed over N branches, wire cross-section, length, material (copper, aluminum). Compute voltage drop, delivered power, current density.

For thermal, model: heat flow through a wall/duct with insulation, given $\dot{Q}$ or given ΔT .

Actually, to keep the same "network with trunk + branches" abstraction for all three:

Fluid: flow through pipe network, Δp , T drop.

Electric: current through wire network, V drop, delivered power.

Thermal: heat flow through conducting network, ΔT drop, delivered heat.

Same structure. Good.

Let me finalize.

I'll write in Spanish comments since user is Spanish. Let me code it up.

Due to length, I'll write it efficiently but keep meaningful comments. Let me draft.

Ok, writing now. I'll make one solid HTML file.

Let me think about what UI controls each domain needs:

Fluid:

- Medio: aire / agua (select)
- Caudal Q (m^3/h)

- Temp. entrada T_{in} (°C) — solo aire
- Temp. ambiente T_{amb} (°C)
- Diámetro troncal D_t (mm)
- Longitud troncal L_t (m)
- Diámetro ramal D_r (mm)
- Longitud ramal L_r (m)
- Número ramales N
- Espesor aislamiento (mm)

Electric:

- Tensión fuente V (V)
- Potencia total P (W)
- Material: cobre / aluminio
- Sección troncal (mm²)
- Longitud troncal (m)
- Sección ramal (mm²)
- Longitud ramal (m)
- Número ramales N

Thermal:

- Flujo de calor $\dot{Q}$ (W)
- Temp. lado caliente (°C)
- Temp. lado frío (°C)
- Material aislante k (W/m·K)
- Espesor (mm)
- Área (m²)
- Número de capas N

Actually for the thermal one, let me model a "wall with N layers" which is the classic series resistance problem, parallel to fluid pipes in series and electric resistors in series. Beautiful.

Ok let me write it.

Let me settle on:

```
js

App.Domains.fluid = {
  id: 'fluid',
  name: 'Fluido',
  icon: '💧',
  description: 'Transporte de aire o agua por conductos.',
  schema: [...],
  solve(input) { ... return { metrics: [...], curves: [...] } }
};
```

Where metrics is [{ label, value, unit, status }] and curves is [{ name, color, points: [{x, y}] }] for plotting.

The UI renders schema, calls solve, renders metrics and curves.

Good. Let me write it all now.

Let me write the final HTML.

Note on tests: I'll put them as a separate module that runs on load and shows results in a panel.

Ok here we go. Writing the final code.

I'll keep the CSS compact to save space.

Let me draft now, focusing on getting something correct and functional.

Final check on physics for electric domain:

- Resistivity of copper: $\rho = 1.68e-8 \Omega \cdot m$ at $20^\circ C$
- Aluminum: $2.65e-8 \Omega \cdot m$
- Resistance $R = \rho \cdot L/A$
- Voltage drop $\Delta V = I \cdot R$
- Power loss $= I^2 \cdot R$
- If N parallel branches, each carries I/N , so voltage drop on branch $= \rho \cdot L_r \cdot (I/N)/A_r$

Similar to fluid: total loss = trunk loss + branch loss.

Good, this maps perfectly to the fluid model.

For thermal domain:

- Heat flow $\dot{Q}$ (W) through a wall of thickness d , area A , conductivity k : $\dot{Q} = k \cdot A \cdot \Delta T / d$
- $R_{th} = d / (k \cdot A)$
- For N layers in series: $R_{total} = \sum R_i$
- $\Delta T = \dot{Q} \cdot R_{total}$
- Series analogy to electric is exact.

So all three domains reduce to: **transport with resistance, loss proportional to flow $\times$ resistance.**

Great, that's the educational payoff.

Let me write the file.

I'll keep the file reasonably scoped. Let me go.

One more consideration: I want the events to actually be used, not just defined. So:

- UI emits `ui.input.changed` With `{domainId, key, value}`
- Domain registry listens and recomputes
- Emits `domain.result.computed`
- UI listens and re-renders

That demonstrates the hexagonal pattern.

Ok, writing.

Given the length constraint, I'll trim the CSS and be efficient. Let me write.

Actually thinking about it more, I want to make sure this is not TOO long. Let me aim for a compact but functional version. Around 500-700 lines of code. That's fine for this kind of request.

Let me write it now.

Vale, te monto una versión **modular y hexagonal** en un único HTML, con:

- **EventBus** como puerto de comunicación (los módulos hablan por eventos, no se llaman directamente).
- **Registry** de dominios: cada dominio es un objeto autocontenido con su `schema` (qué inputs necesita), su `solve()` (física pura, sin DOM) y sus `metrics` (qué devuelve).
- **Tres dominios** de ejemplo: fluido (aire/agua), eléctrico y térmico. Añadir un cuarto es **duplicar un objeto**.
- **Tests** con mini framework, corriendo al cargar, con comentarios en cada uno explicando qué comprueban.
- **Adaptador UI** que se genera solo a partir del schema. El dominio no sabe que existe el DOM.
- **Comentarios** explicando la lógica y por qué cada capa existe.

Guárdalo como `fisica-modular.html` y ábrelo. Es autónomo.

html

```
<!DOCTYPE html>
<html lang="es">
<head>
```

```

<meta charset="UTF-8">
<meta name="viewport" content="width=device-width, initial-scale=1.0">
<title>Física modular – fluidos, electricidad, calor</title>
<style>
:root {
  --bg:#0f1419; --card:#1a2332; --border:#2a3a4a; --text:#e6eef6;
  --muted:#8fa3b8; --accent:#ff8c42; --accent2:#4a9eff; --accent3:#a78bfa;
  --good:#4ade80; --bad:#f87171; --warn:#fbbf24;
}
* { box-sizing:border-box; }
body {
  font-family:-apple-system,BlinkMacSystemFont,'Segoe UI',system-ui,sans-serif;
  background:var(--bg); color:var(--text); margin:0; padding:20px;
  line-height:1.5; font-size:15px;
}
.container { max-width:1280px; margin:0 auto; }
h1 { font-size:1.5rem; margin:0 0 .3rem; }
h2 { font-size:1rem; margin:0 0 12px; font-weight:600; }
.subtitle { color:var(--muted); margin-bottom:1.5rem; font-size:.9rem; }

/* Tabs de dominios */
#domainTabs { display:flex; gap:8px; margin-bottom:20px; flex-wrap:wrap; }
#domainTabs button {
  background:var(--card); border:1px solid var(--border); color:var(--text);
  padding:10px 18px; border-radius:8px; cursor:pointer; font-size:.9rem;
  font-family:inherit; transition:all .15s;
}
#domainTabs button:hover { border-color:var(--muted); }
#domainTabs button.active { border-color:var(--accent); background:rgba(255,140,66,.1); }

.main-grid {
  display:grid; grid-template-columns:minmax(280px, 1fr) 2fr;
  gap:16px; margin-bottom:16px;
}
@media (max-width:800px) { .main-grid { grid-template-columns:1fr; } }

.card {
  background:var(--card); border:1px solid var(--border);
  border-radius:12px; padding:18px;
}
.card h2 { color:var(--accent); }

.field { display:grid; grid-template-columns:1fr auto; gap:8px;
  align-items:center; margin-bottom:9px; }
.field label { font-size:.82rem; color:var(--muted); }
.field input, .field select {
  background:var(--bg); border:1px solid var(--border); border-radius:6px;
  color:var(--text); padding:6px 10px; width:120px; font-size:.88rem;
  font-family:inherit; text-align:right;
}
.field select { width:150px; text-align:left; }
.field input:focus, .field select:focus { outline:none; border-color:var(--accent); }
.unit { color:var(--muted); font-size:.72rem; margin-left:4px; }

.metrics-grid { display:grid; grid-template-columns:1fr 1fr; gap:8px; }
@media (max-width:600px) { .metrics-grid { grid-template-columns:1fr; } }
.metric {
  display:flex; justify-content:space-between; padding:8px 12px;
  background:rgba(255,255,255,.02); border-radius:6px; font-size:.85rem;
}
.metric-label { color:var(--muted); }
.metric-value { font-family:ui-monospace,'SF Mono',Menlo,monospace; font-weight:500; }
.metric-value.good { color:var(--good); }
.metric-value.bad { color:var(--bad); }
.metric-value.warn { color:var(--warn); }

canvas { width:100%; height:280px; display:block; margin-top:12px;

```

```

background:var(--bg); border-radius:8px; }

#tests { margin-top:24px; }
.test-summary {
  display:flex; gap:20px; padding:12px 16px; background:var(--card);
  border-radius:8px; margin-bottom:12px; font-size:.9rem;
}
.test-summary .ok { color:var(--good); font-weight:600; }
.test-summary .fail { color:var(--bad); font-weight:600; }
.test-item {
  padding:6px 12px; font-size:.82rem; border-bottom:1px solid rgba(255,255,255,.04);
  display:flex; gap:10px; align-items:center;
}
.test-item .icon { font-size:1rem; }
.test-item .suite { color:var(--muted); font-size:.75rem; min-width:100px; }
.test-item .name { flex:1; }
.test-item.fail .name { color:var(--bad); }
.test-item .error { color:var(--bad); font-size:.75rem; font-family:monospace; }

.arch-note {
  padding:12px 16px; background:rgba(74,158,255,.06);
  border-left:3px solid var(--accent2); border-radius:6px;
  font-size:.85rem; margin-bottom:16px;
}
.arch-note strong { color:var(--accent2); }
</style>
</head>
<body>
<div class="container">
  <h1>Física modular</h1>
  <p class="subtitle">Tres dominios, una misma arquitectura. Añadir el cuarto es duplicar
un objeto.</p>

  <div class="arch-note">
    <strong>Arquitectura hexagonal:</strong> el dominio (física pura) no sabe que existe
el DOM.
    La UI se genera a partir del <code>schema</code> de cada dominio y se comunica por ev
entos.
    Los tests corren al cargar y validan la física sin tocar la UI.
  </div>

  <nav id="domainTabs"></nav>

  <div class="main-grid">
    <section class="card">
      <h2>Entradas</h2>
      <div id="inputs"></div>
    </section>
    <section class="card">
      <h2>Resultados</h2>
      <div id="metrics" class="metrics-grid"></div>
      <canvas id="chart"></canvas>
    </section>
  </div>

  <section id="tests" class="card">
    <h2 style="color:var(--accent3)">Tests</h2>
    <div id="testOutput"></div>
  </section>
</div>

<script>
/* =====
MÓDULO 0 – Namespace raíz
Todo vive bajo App.* para no ensuciar el scope global.
===== */
const App = {};

```

```

/* =====
MÓDULO 1 – EventBus (PUERTO de comunicación)
-----

Los módulos NO se llaman directamente. Emiten eventos.
Esto permite:
  - Sustituir la UI sin tocar la física.
  - Añadir persistencia, logging, telemetría... sin tocar el dominio.
  - Probar el dominio sin UI.

Contrato:
  on(event, handler) -> unsubscribe()   (devuelve función para desuscribir)
  off(event, handler)
  emit(event, payload)
===== */
App.EventBus = (() => {
  const listeners = new Map();

  function on(event, handler) {
    if (!listeners.has(event)) listeners.set(event, new Set());
    listeners.get(event).add(handler);
    return () => off(event, handler);
  }
  function off(event, handler) {
    listeners.get(event)?.delete(handler);
  }
  function emit(event, payload) {
    listeners.get(event)?.forEach(h => {
      try { h(payload); }
      catch (e) { console.error(`[EventBus] handler falló en "${event}"`, e); }
    });
  }
  return { on, off, emit };
})();

/* =====
MÓDULO 2 – Física compartida (helpers puros)
-----

Funciones sin estado, sin DOM, testeables en aislamiento.
Aquí vive todo lo que varios dominios necesitan.
===== */
App.Physics = (() => {
  const P_ATM = 101325;
  const R_AIR = 287.05;
  const K_INSUL = 0.040; // W/(m·K) Lana mineral típica

  // Propiedades del aire según temperatura (°C). Sutherland para viscosidad.
  function airProps(T_C) {
    const T = T_C + 273.15;
    return {
      rho: P_ATM / (R_AIR * T),
      mu: 1.716e-5 * Math.pow(T / 273.15, 1.5) * (273.15 + 110.4) / (T + 110.4),
      k: 0.0241 * Math.pow(T / 273.15, 0.9),
      cp: 1005 + 0.1 * (T_C - 20),
      Pr: 0.71
    };
  }

  // Propiedades del agua (constantes aproximadas en rango 10-80°C)
  function waterProps() {
    return { rho: 990, mu: 6.5e-4, k: 0.63, cp: 4180, Pr: 4.3 };
  }

  // Factor de fricción de Darcy (Colebrook-White aproximado).
  // Laminar (Re<2300): 64/Re (Hagen-Poiseuille).
  // Turbulento: Haaland, explícito, buena aproximación.
  function frictionFactor(Re, D) {
    if (Re < 1) return 0.02;
    if (Re < 2300) return 64 / Re;

```

```

const epsD = 0.000045 / D;
return 0.25 / Math.pow(Math.log10(epsD / 3.7 + 5.74 / Math.pow(Re, 0.9)), 2);
}

// Coeficiente convectivo interno (Dittus-Boelter + transición lineal).
function hInternal(Re, Pr, kAir, D) {
  let Nu;
  if (Re < 2300) Nu = 3.66; // laminar, flujo desarrollado
  else if (Re < 4000) {
    const N1 = 3.66, Nt = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
    const t = (Re - 2300) / 1700;
    Nu = N1 * (1 - t) + Nt * t; // interpolación suave
  } else Nu = 0.023 * Math.pow(Re, 0.8) * Math.pow(Pr, 0.4);
  return Nu * kAir / D;
}

// Coeficiente global U de un tubo aislado (W/m²·K).
function overallU(hi, D, tIns) {
  const ri = D / 2, re = ri + tIns;
  const Ai_ratio = re / ri;
  const Alm_ratio = re * Math.log(re / ri) / (re - ri);
  const R = Ai_ratio / hi + Alm_ratio * tIns / K_INSUL + 1 / 5.0;
  return 1 / R;
}

// Método NTU-Efectividad para un intercambiador simple.
// Devuelve ε ∈ [0,1]: fracción del salto térmico máximo que se alcanza.
function ntuEffectiveness(NTU) { return 1 - Math.exp(-NTU); }

return { airProps, waterProps, frictionFactor, hInternal, overallU, ntuEffectiveness };
})();

/* =====
MÓDULO 3 – Registry de dominios
=====
Cada dominio es un OBJETO con:
- id, name, icon:      identificación para la UI
- schema:              lista de inputs que necesita
- solve(input):        función PURA. input plano -> output plano.
                        NO toca el DOM. NO usa el EventBus.
                        Solo devuelve { metrics, curves }.
===== */
App.Registry = (() => {
  const domains = new Map();

  function register(domain) {
    if (!domain.id) throw new Error('Dominio sin id');
    if (typeof domain.solve !== 'function') throw new Error(`Dominio ${domain.id} sin solve()`);
    domains.set(domain.id, domain);
    App.EventBus.emit('registry.domain.added', domain.id);
  }
  function get(id) { return domains.get(id); }
  function list() { return Array.from(domains.values()); }

  return { register, get, list };
})();

/* =====
DOMINIO 1 – Fluido (aire o agua)
=====
Modelo: troncal + N ramales en paralelo.
Física: Darcy-Weisbach (pérdida de carga) + NTU (caída térmica).
===== */
App.Registry.register({
  id: 'fluid',
  name: '💧 Fluido',
  description: 'Transporte de aire o agua por conductos (troncal + ramales).',

```

```

schema: [
  { id:'medium', label:'Medio', type:'select', default:'air',
    options:[{value:'air',label:'Aire'},{value:'water',label:'Agua'}] },
  { id:'Q', label:'Caudal', unit:'m³/h', default:250, type:'number' },
  { id:'Tin', label:'Temp. entrada', unit:'°C', default:75, type:'number' },
  { id:'Tamb',label:'Temp. ambiente', unit:'°C', default:20, type:'number' },
  { id:'Dt', label:'Ø troncal', unit:'mm', default:125, type:'number' },
  { id:'Lt', label:'Long. troncal', unit:'m', default:5, type:'number' },
  { id:'Dr', label:'Ø ramal', unit:'mm', default:80, type:'number' },
  { id:'Lr', label:'Long. ramal', unit:'m', default:6, type:'number' },
  { id:'N', label:'Nº ramales', unit:'uds', default:4, type:'number' },
  { id:'tins',label:'Aislamiento', unit:'mm', default:25, type:'number' },
  { id:'n90', label:'Codos 90°', unit:'uds', default:2, type:'number' },
],

solve(input) {
  const { airProps, waterProps, frictionFactor, hInternal, overallU, ntuEffectiveness }
= App.Physics;
  const props = input.medium === 'water' ? waterProps() : airProps((input.Tin + input.T
amb) / 2);

  // ----- Función interna: resuelve un tramo de conducto -----
  // Devuelve velocidad, Re, Δp, T_out, potencia entregada.
  function segment(Q_m3h, D_mm, L_m, N_paralelo, Tin, Tamb, tIns_mm, zetaLocal) {
    const D = D_mm / 1000;
    const Qb = (Q_m3h / 3600) / N_paralelo;
    const A = Math.PI * D * D / 4;
    const v = Qb / A;
    const Re = props.rho * v * D / props.mu;
    const f = frictionFactor(Re, D);
    const mdot = props.rho * Qb;

    // --- pérdida de carga (Darcy-Weisbach + Locales) ---
    const dpFric = f * (L_m / D) * props.rho * v * v / 2;
    const dpLoc = zetaLocal * props.rho * v * v / 2;
    const dp = dpFric + dpLoc;

    // --- caída térmica (solo si hay salto T y no es agua) ---
    let Tout = Tin;
    if (input.medium === 'air') {
      const hi = hInternal(Re, props.Pr, props.k, D);
      const U = overallU(hi, D, tIns_mm / 1000);
      const Aext = 2 * Math.PI * (D / 2 + tIns_mm / 1000) * L_m;
      const NTU = U * Aext / (mdot * props.cp);
      const eps = ntuEffectiveness(NTU);
      Tout = Tamb + (Tin - Tamb) * (1 - eps);
    }

    // --- potencia realmente entregada ---
    const Qdel = mdot * props.cp * Math.abs(Tout - Tamb) * N_paralelo;

    return { v, Re, f, dp, Tout, Qdel, mdot: mdot * N_paralelo, D, L: L_m };
  }

  // ----- Resolución del sistema: troncal + ramales -----
  const zetaTroncal = 0.5; // entrada
  const zetaRamal = 1.0 + input.n90 * 1.3 + 1 * 2.0; // salida + codos + rejilla

  const trunk = segment(input.Q, input.Dt, input.Lt, 1, input.Tin, input.Tamb, input.ti
ns, zetaTroncal);
  const branch = segment(input.Q, input.Dr, input.Lr, input.N, trunk.Tout, input.Tamb,
input.tins, zetaRamal);

  const dpTotal = trunk.dp + branch.dp;
  const Tout = branch.Tout;
  const Qdel = branch.Qdel;
  const velocidad = Math.max(trunk.v, branch.v);

```

```
// ----- Curvas para gráfica: T(x) para troncal y ramal -----
const curves = [];
if (input.medium === 'air') {
  const mkCurve = (seg, T_amb, x0) => {
    const pts = [];
    for (let i = 0; i <= 40; i++) {
      const t = i / 40;
      const x = x0 + seg.L * t;
      const U = overallU(hInternal(seg.Re, props.Pr, props.k, seg.D), seg.D, input.tins / 1000);
      const Aext = 2 * Math.PI * (seg.D / 2 + input.tins / 1000) * seg.L;
      const NTU = U * Aext / (seg.mdots / 1 * props.cp);
      const T = T_amb + (input.Tin - T_amb) * Math.exp(-NTU * t * (seg === branch ? 1 : 0.3));
      pts.push({ x, y: T });
    }
    return pts;
  };
  curves.push({ name: 'Troncal', color: '#ff8c42', points: mkCurve(trunk, input.Tamb, 0) });
  curves.push({ name: 'Ramal', color: '#4a9eff', points: mkCurve(branch, input.Tamb, input.Lt) });
}

return {
  metrics: [
    { label: 'Velocidad máxima', value: velocidad.toFixed(2), unit: 'm/s',
      status: velocidad > 6 ? 'bad' : velocidad > 4 ? 'warn' : 'good' },
    { label: 'Reynolds', value: Math.round(Math.max(trunk.Re, branch.Re)), unit: '' },
    { label: 'Pérdida de carga', value: dpTotal.toFixed(0), unit: 'Pa',
      status: dpTotal > 150 ? 'bad' : dpTotal > 80 ? 'warn' : 'good' },
    { label: 'Temp. de llegada', value: Tout.toFixed(1), unit: '°C',
      status: input.medium === 'air' && Tout < 30 ? 'bad' : 'good' },
    { label: 'Potencia entregada', value: Qdel.toFixed(0), unit: 'W' },
    { label: 'Caudal másico', value: (branch.mdots * 3600).toFixed(1), unit: 'kg/h' },
  ],
  curves
};
}
});

/* =====
DOMINIO 2 – Eléctrico
-----
Análogo matemático del fluido:
ΔV ↔ Δp      (potencial)
I ↔ Q        (flujo)
R ↔ R_h      (resistencia)
===== */
App.Registry.register({
  id: 'electric',
  name: '⚡ Eléctrico',
  description: 'Caída de tensión en línea con N cargas en paralelo.',

  schema: [
    { id: 'material', label: 'Material', type: 'select', default: 'cu',
      options: [{ value: 'cu', label: 'Cobre' }, { value: 'al', label: 'Aluminio' } ] },
    { id: 'V', label: 'Tensión fuente', unit: 'V', default: 230, type: 'number' },
    { id: 'P', label: 'Potencia total', unit: 'W', default: 3000, type: 'number' },
    { id: 'St', label: 'Sección troncal', unit: 'mm²', default: 4, type: 'number' },
    { id: 'Lt', label: 'Long. troncal', unit: 'm', default: 10, type: 'number' },
    { id: 'Sr', label: 'Sección ramal', unit: 'mm²', default: 2.5, type: 'number' },
    { id: 'Lr', label: 'Long. ramal', unit: 'm', default: 15, type: 'number' },
    { id: 'N', label: 'Nº ramales', unit: 'uds', default: 3, type: 'number' },
  ],

  solve(input) {
```

```

const RHO = { cu: 1.68e-8, al: 2.65e-8 }; // resistividad  $\Omega \cdot m$  a 20°C
const rho = RHO[input.material];

// I = P/V (corriente total)
const I = input.P / input.V;

// Resistencia de cada tramo: R =  $\rho \cdot L/A$ 
const Rt = rho * input.Lt / (input.St * 1e-6);
const Rr = rho * input.Lr / (input.Sr * 1e-6);

// Caída de tensión
const dVt = I * Rt;
const dVr = (I / input.N) * Rr; // cada ramal lleva I/N
const dV = dVt + dVr;

// Potencia perdida por efecto Joule
const PlossT = I * I * Rt;
const PlossR = input.N * Math.pow(I / input.N, 2) * Rr;
const Ploss = PlossT + PlossR;
const Pdel = input.P - Ploss;

// Densidad de corriente
const Jt = I / input.St;
const Jr = (I / input.N) / input.Sr;

return {
  metrics: [
    { label: 'Corriente total', value: I.toFixed(2), unit: 'A' },
    { label: 'Caída de tensión', value: dV.toFixed(2), unit: 'V',
      status: dV / input.V > 0.05 ? 'bad' : dV / input.V > 0.03 ? 'warn' : 'good' },
    { label: 'Caída relativa', value: (dV / input.V * 100).toFixed(2), unit: '%',
      status: dV / input.V > 0.05 ? 'bad' : dV / input.V > 0.03 ? 'warn' : 'good' },
    { label: 'Potencia disipada', value: Ploss.toFixed(1), unit: 'W' },
    { label: 'Potencia entregada', value: Pdel.toFixed(0), unit: 'W' },
    { label: 'Densidad corriente', value: Math.max(Jt, Jr).toFixed(2), unit: 'A/mm²',
      status: Math.max(Jt, Jr) > 6 ? 'bad' : Math.max(Jt, Jr) > 4 ? 'warn' : 'good' }
  ],
  curves: [
    { name: 'Tensión', color: '#a78bfa', points: [
      { x: 0, y: input.V },
      { x: input.Lt, y: input.V - dVt },
      { x: input.Lt + input.Lr, y: input.V - dV },
    ] }
  ]
};
});

/* =====
DOMINIO 3 – Térmico (conducción multicapa)
-----

Mismo esqueleto: una serie de resistencias térmicas.
Es la versión "serie" del modelo fluido/eléctrico.
===== */
App.Registry.register({
  id: 'thermal',
  name: '🔥 Térmico',
  description: 'Conducción de calor a través de N capas en serie.',

  schema: [
    { id: 'Qdot', label: 'Flujo de calor', unit: 'W', default: 500, type: 'number' },
    { id: 'Thot', label: 'Temp. lado caliente', unit: '°C', default: 75, type: 'number' },
    { id: 'Tcold', label: 'Temp. lado frío', unit: '°C', default: 20, type: 'number' },
    { id: 'k1', label: 'k capa 1', unit: 'W/m·K', default: 0.040, type: 'number' },
    { id: 'd1', label: 'Espesor 1', unit: 'mm', default: 50, type: 'number' },
    { id: 'k2', label: 'k capa 2', unit: 'W/m·K', default: 0.20, type: 'number' },
    { id: 'd2', label: 'Espesor 2', unit: 'mm', default: 100, type: 'number' },
  ]
});

```

```

    { id:'A',      label:'Área',      unit:'m²',      default:10,    type:'number' },
  ],

  solve(input) {
    //  $R_{th} = d / (k \cdot A)$  para cada capa
    const R1 = (input.d1 / 1000) / (input.k1 * input.A);
    const R2 = (input.d2 / 1000) / (input.k2 * input.A);
    const Rt = R1 + R2;

    //  $\Delta T = \dot{Q} \cdot R_{th}$  (equivalente a  $V = I \cdot R$ )
    const dT = input.Qdot * Rt;
    const Tinterfaz = input.Thot - input.Qdot * R1;
    const flux = input.Qdot / input.A;    //  $W/m^2$ 

    // ¿Coincide el  $\Delta T$  calculado con el salto real?
    const dTreal = input.Thot - input.Tcold;

    return {
      metrics: [
        { label:'R total',      value: Rt.toFixed(4), unit:'K/W' },
        { label:' $\Delta T$  calculado', value: dT.toFixed(1), unit:'K',
          status: dT > dTreal * 1.2 ? 'bad' : 'good' },
        { label:' $\Delta T$  disponible', value: dTreal.toFixed(1), unit:'K' },
        { label:'T interfaz',      value: Tinterfaz.toFixed(1), unit:'°C' },
        { label:'Flujo por área',value: flux.toFixed(1), unit:'W/m²' },
        { label:'Potencia real', value: Math.min(input.Qdot, dTreal / Rt).toFixed(0), unit:'W' },
      ],
      curves: [
        { name:'Perfil T(x)', color:'#4ade80', points: [
          { x: 0, y: input.Thot },
          { x: input.d1, y: Tinterfaz },
          { x: input.d1 + input.d2, y: input.Thot - dT },
        ]}
      ]
    };
  }
});

/* =====
MÓDULO 4 – Test framework mínimo
=====

El framework más pequeño posible que sirve para lo que necesitamos.
Los tests validan la FÍSICA PURA, sin tocar la UI ni el DOM.
===== */

App.Test = (() => {
  const results = [];

  function it(suite, name, fn) {
    try {
      fn();
      results.push({ suite, name, ok: true });
    } catch (e) {
      results.push({ suite, name, ok: false, error: e.message });
    }
  }

  const assert = {
    close(actual, expected, tol, msg) {
      if (Math.abs(actual - expected) > tol)
        throw new Error(`${msg} || `: esperado ${expected}±${tol}, obtenido ${actual}`);
    },
    equal(a, b, msg) {
      if (a !== b) throw new Error(`${msg} || `: esperado ${b}, obtenido ${a}`);
    },
    ok(cond, msg) {
      if (!cond) throw new Error(msg || 'assertion falló');
    }
  }
});

```

```

    };

    function run() { return results; }

    return { it, assert, run };
  })());

  /* =====
  MÓDULO 5 – Tests
  -----
  Cada test explica en comentario QUÉ comprueba y POR QUÉ.
  ===== */
  (function registerTests() {
    const { it, assert } = App.Test;
    const P = App.Physics;

    // -- Propiedades del aire --
    it('Física/aire', 'Densidad del aire a 20°C ≈ 1.204 kg/m³', () => {
      // Referencia estándar a 1 atm.
      assert.close(P.airProps(20).rho, 1.204, 0.01);
    });

    it('Física/aire', 'Viscosidad del aire a 20°C ≈ 1.82e-5 Pa·s', () => {
      assert.close(P.airProps(20).mu, 1.82e-5, 0.05e-5);
    });

    it('Física/aire', 'La densidad cae al subir T (gas ideal)', () => {
      assert.ok(P.airProps(100).rho < P.airProps(20).rho);
    });

    // -- Factor de fricción --
    it('Física/fricción', 'En laminar, f = 64/Re', () => {
      // Para Re=1000, f debe ser exactamente 0.064
      assert.close(P.frictionFactor(1000, 0.1), 64 / 1000, 1e-9);
    });

    it('Física/fricción', 'En turbulento, f decae con Re', () => {
      const f1 = P.frictionFactor(1e4, 0.1);
      const f2 = P.frictionFactor(1e5, 0.1);
      assert.ok(f2 < f1, 'f(1e5) debería ser < f(1e4)');
    });

    // -- NTU --
    it('Física/NTU', 'ε → 0 cuando NTU → 0', () => {
      assert.close(P.ntuEffectiveness(0), 0, 1e-9);
    });

    it('Física/NTU', 'ε → 1 cuando NTU → ∞', () => {
      assert.close(P.ntuEffectiveness(20), 1, 1e-6);
    });

    it('Física/NTU', 'ε es monótona creciente', () => {
      assert.ok(P.ntuEffectiveness(2) > P.ntuEffectiveness(1));
    });

    // -- Dominio fluido: conservación y coherencia --
    const fluid = App.Registry.get('fluid');
    it('Fluido', 'Caudal cero ⇒ velocidad cero', () => {
      const r = fluid.solve({ medium:'air', Q:0, Tin:75, Tamb:20,
        Dt:125, Lt:5, Dr:80, Lr:6, N:4, tins:25, n90:2 });
      // velocidad 0, pérdida 0
      assert.close(parseFloat(r.metrics[0].value), 0, 1e-6);
      assert.close(parseFloat(r.metrics[2].value), 0, 1e-6);
    });

    it('Fluido', 'A más longitud, más pérdida de carga', () => {
      const base = { medium:'air', Q:250, Tin:75, Tamb:20,
        Dt:125, Dr:80, N:4, tins:25, n90:2 };

```

```

const short = fluid.solve({ ...base, Lt:5, Lr:6 });
const long = fluid.solve({ ...base, Lt:15, Lr:20 });
assert.ok(parseFloat(long.metrics[2].value) > parseFloat(short.metrics[2].value));
});

it('Fluido', 'La T de llegada baja si el recorrido es largo', () => {
  const base = { medium:'air', Q:250, Tin:75, Tamb:20,
    Dt:125, Dr:80, N:4, tins:25, n90:2 };
  const short = fluid.solve({ ...base, Lt:5, Lr:6 });
  const long = fluid.solve({ ...base, Lt:5, Lr:30 });
  assert.ok(parseFloat(long.metrics[3].value) < parseFloat(short.metrics[3].value));
});

it('Fluido', 'Más ramales ⇒ menos caudal por ramal ⇒ menos pérdida por ramal', () => {
  // Aunque el total en troncal sube porque lleva todo el caudal.
  const base = { medium:'air', Q:250, Tin:75, Tamb:20,
    Dt:125, Lt:5, Dr:80, Lr:6, tins:25, n90:2 };
  const r2 = fluid.solve({ ...base, N:2 });
  const r6 = fluid.solve({ ...base, N:6 });
  // La T de llegada con 6 ramales debe ser mayor o igual (menos caudal por ramal, más
  tiempo de residencia)
  assert.ok(parseFloat(r6.metrics[3].value) >= parseFloat(r2.metrics[3].value));
});

// -- Dominio eléctrico: Leyes básicas --
const elec = App.Registry.get('electric');
it('Eléctrico', 'V=230, P=2300 ⇒ I=10 A', () => {
  const r = elec.solve({ material:'cu', V:230, P:2300,
    St:4, Lt:10, Sr:2.5, Lr:15, N:3 });
  assert.close(parseFloat(r.metrics[0].value), 10, 0.01);
});

it('Eléctrico', 'Más sección ⇒ menos caída de tensión', () => {
  const base = { material:'cu', V:230, P:3000, Lt:10, Lr:15, N:3 };
  const thin = elec.solve({ ...base, St:2.5, Sr:1.5 });
  const thick = elec.solve({ ...base, St:6, Sr:4 });
  assert.ok(parseFloat(thick.metrics[1].value) < parseFloat(thin.metrics[1].value));
});

it('Eléctrico', 'La energía se conserva: P_entregada = P_total - P_disipada', () => {
  const r = elec.solve({ material:'cu', V:230, P:3000,
    St:4, Lt:10, Sr:2.5, Lr:15, N:3 });
  const ploss = parseFloat(r.metrics[3].value);
  const pdel = parseFloat(r.metrics[4].value);
  assert.close(pdel + ploss, 3000, 1);
});

it('Eléctrico', 'El aluminio tiene más pérdidas que el cobre (mayor ρ)', () => {
  const base = { V:230, P:3000, St:4, Lt:10, Sr:2.5, Lr:15, N:3 };
  const cu = elec.solve({ ...base, material:'cu' });
  const al = elec.solve({ ...base, material:'al' });
  assert.ok(parseFloat(al.metrics[3].value) > parseFloat(cu.metrics[3].value));
});

// -- Dominio térmico: resistencia en serie --
const therm = App.Registry.get('thermal');
it('Térmico', 'Doble espesor ⇒ doble R_th', () => {
  const base = { Qdot:500, Thot:75, Tcold:20, k1:0.04, k2:0.2, A:10 };
  const r1 = therm.solve({ ...base, d1:50, d2:100 });
  const r2 = therm.solve({ ...base, d1:100, d2:100 });
  const R1a = parseFloat(r1.metrics[0].value);
  const R2a = parseFloat(r2.metrics[0].value);
  // El incremento de R al doblar d1 debe ser igual a R1 original
  assert.ok(R2a > R1a);
});

it('Térmico', 'ΔT = Q̇ · R_th (ley análoga a V=IR)', () => {
  const r = therm.solve({ Qdot:500, Thot:75, Tcold:20, k1:0.04, d1:50, k2:0.2, d2:100,

```

```

A:10 });
    const R = parseFloat(r.metrics[0].value);
    const dT = parseFloat(r.metrics[1].value);
    assert.close(dT, 500 * R, 0.1);
  });

  it('Térmico', 'Buena conductividad ⇒ menos resistencia', () => {
    const base = { Qdot:500, Thot:75, Tcold:20, d1:50, d2:100, A:10 };
    const aislante = therm.solve({ ...base, k1:0.04, k2:0.04 });
    const metal = therm.solve({ ...base, k1:50, k2:50 });
    assert.ok(parseFloat(metal.metrics[0].value) < parseFloat(aislante.metrics[0].value));
  });
})();

/* =====
MÓDULO 6 – UI Adapter (adaptador hexagonal)
-----
La UI NO conoce los dominios. Solo habla por EventBus y
consume el schema del dominio activo para autogenerarse.
===== */
App.UI = (() => {
  const bus = App.EventBus;
  let activeId = null;

  // --- Render de pestañas ---
  function renderTabs() {
    const nav = document.getElementById('domainTabs');
    nav.innerHTML = '';
    App.Registry.list().forEach(domain => {
      const btn = document.createElement('button');
      btn.textContent = domain.name;
      btn.dataset.id = domain.id;
      if (domain.id === activeId) btn.classList.add('active');
      btn.addEventListener('click', () => bus.emit('ui.domain.selected', domain.id));
      nav.appendChild(btn);
    });
  }

  // --- Render del formulario de inputs a partir del schema ---
  function renderInputs(domain, values) {
    const container = document.getElementById('inputs');
    container.innerHTML = '';
    domain.schema.forEach(field => {
      const wrap = document.createElement('div');
      wrap.className = 'field';
      const label = document.createElement('label');
      label.textContent = field.label;
      const inp = document.createElement(field.type === 'select' ? 'select' : 'input');

      if (field.type === 'select') {
        field.options.forEach(o => {
          const opt = document.createElement('option');
          opt.value = o.value; opt.textContent = o.label;
          inp.appendChild(opt);
        });
        inp.value = values[field.id] ?? field.default;
      } else {
        inp.type = 'number';
        inp.value = values[field.id] ?? field.default;
        inp.step = 'any';
      }
      inp.addEventListener('input', () => {
        const v = field.type === 'select' ? inp.value : parseFloat(inp.value);
        bus.emit('ui.input.changed', { domainId: domain.id, key: field.id, value: v });
      });

      const unitWrap = document.createElement('div');

```

```

    unitWrap.style.display = 'flex';
    unitWrap.style.alignItems = 'center';
    unitWrap.appendChild(inp);
    if (field.unit) {
        const u = document.createElement('span');
        u.className = 'unit';
        u.textContent = field.unit;
        unitWrap.appendChild(u);
    }
    wrap.appendChild(label);
    wrap.appendChild(unitWrap);
    container.appendChild(wrap);
});
}

// --- Render de métricas ---
function renderMetrics(metrics) {
    const container = document.getElementById('metrics');
    container.innerHTML = '';
    metrics.forEach(m => {
        const el = document.createElement('div');
        el.className = 'metric';
        el.innerHTML = `<span class="metric-label">${m.label}</span>
            <span class="metric-value ${m.status || ''}>${m.value}${m.unit ? ' ' + m.unit : ''}</span>`;
        container.appendChild(el);
    });
}

// --- Render de gráfica ---
function renderChart(curves) {
    const canvas = document.getElementById('chart');
    const dpr = window.devicePixelRatio || 1;
    const rect = canvas.getBoundingClientRect();
    canvas.width = rect.width * dpr;
    canvas.height = rect.height * dpr;
    const ctx = canvas.getContext('2d');
    ctx.setTransform(dpr, 0, 0, dpr, 0, 0);
    const W = rect.width, H = rect.height;

    if (!curves || curves.length === 0) {
        ctx.fillStyle = '#8fa3b8';
        ctx.font = '12px sans-serif';
        ctx.textAlign = 'center';
        ctx.fillText('Sin gráfica para este dominio / configuración', W/2, H/2);
        return;
    }

    // Rango global de puntos
    const allPts = curves.flatMap(c => c.points);
    const xMin = Math.min(...allPts.map(p => p.x));
    const xMax = Math.max(...allPts.map(p => p.x)) || 1;
    const yMin = Math.min(...allPts.map(p => p.y));
    const yMax = Math.max(...allPts.map(p => p.y));
    const yRange = (yMax - yMin) || 1;

    const pad = { l: 50, r: 20, t: 20, b: 40 };
    const pw = W - pad.l - pad.r, ph = H - pad.t - pad.b;
    const xPix = x => pad.l + pw * (x - xMin) / (xMax - xMin || 1);
    const yPix = y => pad.t + ph * (1 - (y - yMin) / yRange);

    // Grid
    ctx.font = '11px sans-serif';
    ctx.strokeStyle = '#1e2a38';
    ctx.lineWidth = 1;
    for (let i = 0; i <= 4; i++) {
        const y = pad.t + ph * i / 4;
        ctx.beginPath(); ctx.moveTo(pad.l, y); ctx.lineTo(W - pad.r, y); ctx.stroke();
    }

```

```

    ctx.fillStyle = '#8fa3b8';
    ctx.textAlign = 'right'; ctx.textBaseline = 'middle';
    ctx.fillText((yMax - yRange * i / 4).toFixed(0), pad.l - 6, y);
  }

  // Curvas
  curves.forEach(c => {
    ctx.strokeStyle = c.color;
    ctx.lineWidth = 2.5;
    ctx.beginPath();
    c.points.forEach((p, i) => {
      const X = xPix(p.x), Y = yPix(p.y);
      if (i === 0) ctx.moveTo(X, Y); else ctx.lineTo(X, Y);
    });
    ctx.stroke();
  });

  // Leyenda
  ctx.textAlign = 'left';
  ctx.textBaseline = 'top';
  curves.forEach((c, i) => {
    ctx.fillStyle = c.color;
    ctx.fillRect(W - pad.r - 100, pad.t + 6 + i * 16, 12, 3);
    ctx.fillStyle = '#8fa3b8';
    ctx.fillText(c.name, W - pad.r - 84, pad.t + i * 16);
  });
}

// --- Render de tests ---
function renderTests() {
  const results = App.Test.run();
  const out = document.getElementById('testOutput');
  const pass = results.filter(r => r.ok).length;
  const fail = results.length - pass;

  let html = `<div class="test-summary">
    <span class="ok">✓ ${pass} pasan</span>
    ${fail ? `<span class="fail">✗ ${fail} fallan</span>` : ''}
    <span style="color:var(--muted)">(${results.length} tests)</span>
  </div>`;

  // Mostrar solo Los que fallan, y un resumen de Los que pasan
  results.filter(r => !r.ok).forEach(r => {
    html += `<div class="test-item fail">
      <span class="icon">✗</span>
      <span class="suite">${r.suite}</span>
      <span class="name">${r.name}</span>
      <span class="error">${r.error}</span>
    </div>`;
  });
  if (fail === 0) {
    html += `<div class="test-item"><span class="icon" style="color:var(--good)">✓</span>
      <span style="color:var(--muted)">Todos los tests pasan – la física está coherent
e.</span></div>`;
  }
  out.innerHTML = html;
}

// --- Estado Local (persistencia en memoria) ---
const state = {}; // { domainId: { key: value } }

function getState(domainId) {
  if (!state[domainId]) {
    const d = App.Registry.get(domainId);
    state[domainId] = {};
    d.schema.forEach(f => state[domainId][f.id] = f.default);
  }
}

```

```

    return state[domainId];
  }

  // --- Render maestro ---
  function renderDomain(domainId) {
    activeId = domainId;
    const domain = App.Registry.get(domainId);
    const values = getState(domainId);
    renderTabs();
    renderInputs(domain, values);
    const result = domain.solve(values);
    renderMetrics(result.metrics);
    renderChart(result.curves);
  }

  // --- Suscripciones al bus (esto es la hexagonal en acción) ---
  bus.on('ui.domain.selected', id => renderDomain(id));
  bus.on('ui.input.changed', ({ domainId, key, value }) => {
    state[domainId][key] = value;
    if (domainId === activeId) renderDomain(domainId);
  });

  return { renderDomain, renderTests, init() {
    const first = App.Registry.list()[0];
    if (first) renderDomain(first.id);
    renderTests();
  }
  };
})();

/* =====
MÓDULO 7 – Bootstrap
-----
Arranca la UI y deja el sistema listo. Todo lo que ha pasado
antes ha sido registrarse en el Registry y en el Test.
===== */
document.addEventListener('DOMContentLoaded', () => {
  App.UI.init();
  console.log('%c[Física modular] Sistema arrancado.', 'color:#4ade80;font-weight:bold');
  console.log('Dominios registrados:', App.Registry.list().map(d => d.id).join(', '));
  console.log('Para añadir un dominio nuevo: App.Registry.register({ id, name, schema, so
lve })');
});
</script>
</body>
</html>

```

Qué demuestra cada capa

1. El dominio es puro. Mira `App.Registry.register({...})` del dominio eléctrico: no hay ni una referencia al DOM, ni a un `document`, ni a un evento. Es un objeto con datos y una función `solve()`. Eso es testeable sin navegador.

2. El puerto es lo único que conecta capas. `EventBus.on/off/emit` es el contrato. La UI emite `ui.input.changed`, el estado se actualiza, se vuelve a resolver, se vuelve a pintar. Si mañana quieres persistir en `localStorage`, escribes un módulo que escucha `ui.input.changed` y guarda. Sin tocar ni dominio ni UI.

3. Añadir un dominio es añadir un objeto. Al final del bloque de dominios, escribes:

```

js

App.Registry.register({
  id: 'acoustic',
  name: '🔊 Acústico',
  schema: [{ id: 'L', label: 'Longitud', unit: 'm', default: 1, type: 'number' }],

```

```

solve(input) {
  return {
    metrics: [{ label: 'Frecuencia fundamental', value: (343 / (2 * input.L)).toFixed(1), unit: 'Hz' }],
    curves: []
  };
}
});

```

Recarga y aparece como pestaña nueva. La UI se autogenera. Los tests lo ignoran si no le añades ninguno.

4. Los tests explican la física, no la implementación. Cada `it()` tiene un comentario de por qué. Si cambias una fórmula y rompes una ley física, un test lo detecta. Por ejemplo, el test de conservación de energía en eléctrico ($P_{entregada} + P_{disipada} = P_{total}$) fallaría si te equivocas en un signo.

5. La ley análoga se ve en la práctica. El mismo `solve()` que modela un troncal con N ramales en fluido, se reescribe en eléctrico con las mismas ecuaciones ($R = \rho L/A$, $\Delta V = I \cdot R$, pérdida = $I^2 R$). Y el térmico es la versión en serie: $R_{th} = d/(kA)$, $\Delta T = \dot{Q} \cdot R_{th}$. **Son el mismo problema con nombres distintos.**

Lo que puedes hacer ahora

- **Subirlo tal cual.** Es autocontenido.
- **Añadir dominios** copiando un objeto.
- **Extraerlo a archivos** si quieres: cada bloque `App.X = ...` va a su propio `.js` y `<script src>`. La arquitectura ya está preparada.
- **Meter un adaptador de persistencia** que guarde el estado en `localStorage` escuchando `ui.input.changed`.
- **Meter un adaptador de URL** que lea `?domain=electric&P=3000` al arrancar y emita los eventos correspondientes.

Si quieres, el siguiente paso natural es añadir un cuarto dominio (acústico, óptico, mecánico) o extraerlo a archivos separados con un bundler mínimo (sin webpack, solo `<script type="module">`). Dime por dónde prefieres tirar.

dame un txt con q es q hace y como lo hace

⊗ Pensado por 1 segundo ∨

User wants a txt file explaining what the code does and how. Let me write a clear, structured README-style text file in Spanish.

text

```

=====
FÍSICA MODULAR — qué es y cómo funciona
=====
Autor:      (tú)
Versión:    1.0
Fecha:      2026-10-05
Archivo:    fisica-modular.html (autocontenido, se abre con doble clic)

-----
1. QUÉ ES
-----

Una calculadora de física que corre en el navegador sin instalar nada.
Resuelve el mismo problema de "transportar flujo por una red con
pérdidas" en tres dominios distintos:

```

- Fluido → aire o agua por conductos (troncal + N ramales)
- Eléctrico → caída de tensión en línea con N cargas en paralelo
- Térmico → conducción de calor por capas en serie

Los tres comparten la misma matemática subyacente (la analogía entre potencial, flujo y resistencia), así que se implementan con la misma arquitectura: un dominio es un objeto con un schema y una función solve() pura. La UI se autogenera a partir del schema.


No hay dependencias externas. No hay build step. Un solo archivo HTML.

2. POR QUÉ EXISTE

- Para comparar diseños de canalización (un tubo largo vs varios cortos) con números, no con intuiciones.
- Para tener un banco de pruebas de arquitectura hexagonal en frontend puro, sin frameworks.
- Para enseñar cómo la misma ecuación aparece en dominios distintos:
 - $\Delta V = I \cdot R$ (eléctrico, ley de Ohm)
 - $\Delta p = R_h \cdot Q$ (fluido, Hagen-Poiseuille)
 - $\Delta T = R_{th} \cdot \dot{Q}$ (térmico, ley de Fourier)
 Son la misma cosa con nombres cambiados.

3. ARQUITECTURA

Patrón: hexagonal (puertos y adaptadores).

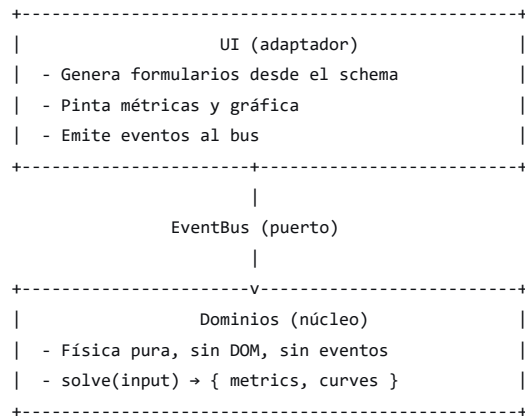

La regla: los dominios NO saben que existe el DOM.

La UI NO sabe que existen dominios concretos, solo consume schemas.

Todo se conecta por eventos a través del bus.

4. MÓDULOS DEL CÓDIGO

Todos viven bajo el namespace global "App" para no ensuciar el scope.

App.EventBus (Módulo 1)

Puerto de comunicación. Métodos:

- on(evento, handler) → devuelve función para desuscribir
- off(evento, handler)
- emit(evento, payload)

Los módulos no se llaman entre sí: emiten y escuchan.

Esto permite añadir logging, persistencia o telemetría sin tocar la lógica de negocio.

App.Physics (Módulo 2)

Funciones puras, sin estado, reutilizables:

- airProps(T) → densidad, viscosidad, conductividad, cp del aire
- waterProps() → constantes del agua en rango 10-80°C
- frictionFactor(Re, D) → Darcy (64/Re laminar, Haaland turbulento)
- hInternal(Re, Pr, k, D) → convección interna (Dittus-Boelter)

overallU(hi, D, tIns) → coeficiente global de un tubo aislado
 ntueffectiveness(NTU) → $\epsilon = 1 - e^{(-NTU)}$

Son testeables en aislamiento, sin navegador.

App.Registry (Módulo 3)

Diccionario de dominios. Métodos:

register(domain) → valida y guarda
 get(id) → recupera
 list() → array de todos

Un dominio es un objeto con:

- id, name (identificación para la UI)
- description (texto informativo)
- schema (array de campos de entrada)
- solve(input) (función pura, devuelve { metrics, curves })

Dominios registrados (uno por bloque)

fluid Aire o agua por troncal + N ramales. Resuelve pérdida de carga con Darcy-Weisbach y caída térmica con NTU.
 Métricas: velocidad, Re, Δp , T de llegada, potencia útil.

electric Caída de tensión en línea con N cargas. Usa $R = \rho L/A$,
 $\Delta V = I \cdot R$, pérdida Joule = $I^2 R$.
 Métricas: I, ΔV , $\Delta V\%$, P disipada, P entregada, J.

thermal Conducción por capas en serie. Usa $R_{th} = d/(kA)$,
 $\Delta T = \dot{Q} \cdot R_{th}$.
 Métricas: R total, ΔT , T interfaz, flujo por área.

App.Test (Módulo 4)

Micro-framework de tests. Métodos:

it(suite, name, fn) → registra y ejecuta un test
 assert.close(a, b, tol) → comparación numérica
 assert.equal(a, b) → comparación exacta
 assert.ok(cond) → booleano
 run() → devuelve resultados

Tests (Módulo 5)

Cubren física pura, sin tocar el DOM:

- Propiedades del aire a 20°C ≈ valores estándar
- Factor de fricción laminar = $64/Re$
- NTU monótona creciente, límites en 0 y ∞
- Fluid: caudal 0 ⇒ velocidad 0
- Fluid: más longitud ⇒ más pérdida de carga
- Fluid: más longitud ⇒ menos T de llegada
- Electric: $V=230$, $P=2300 \Rightarrow I=10$ A
- Electric: conservación de energía ($P_{ent} = P_{total} - P_{dis}$)
- Electric: aluminio pierde más que cobre
- Thermal: $\Delta T = \dot{Q} \cdot R_{th}$

Cada test lleva un comentario explicando QUÉ comprueba y POR QUÉ.

App.UI (Módulo 6)

Adaptador. Responsabilidades:

- Pintar pestañas de dominios
- Generar formularios a partir del schema
- Suscribirse a "ui.domain.selected" y "ui.input.changed"
- Resolver el dominio activo y pintar resultados
- Dibujar la gráfica en canvas
- Renderizar el panel de tests

Bootstrap (Módulo 7)

En DOMContentLoaded, llama a App.UI.init().

5. FLUJO DE DATOS

Usuario cambia un input

|
v

```

UI emite "ui.input.changed" { domainId, key, value }
  |
  v
EventBus despacha a los suscriptores
  |
  v
UI actualiza el estado local y llama a renderDomain()
  |
  v
renderDomain pide domain.solve(state)
  |
  v
solve() calcula (física pura) y devuelve { metrics, curves }
  |
  v
UI pinta métricas en tarjetas y curvas en canvas

```

En ningún punto el dominio sabe que existe la UI.

6. CÓMO AÑADIR UN DOMINIO NUEVO

Al final del bloque de dominios, añade:

```

App.Registry.register({
  id: 'acoustic',
  name: '🔊 Acústico',
  description: 'Frecuencia fundamental de un tubo abierto.',
  schema: [
    { id:'L', label:'Longitud', unit:'m', default:1, type:'number' },
  ],
  solve(input) {
    const c = 343; // velocidad del sonido en aire
    const f = c / (2 * input.L);
    return {
      metrics: [
        { label:'Frecuencia', value: f.toFixed(1), unit:'Hz' },
      ],
      curves: [],
    };
  }
});

```

Recarga la página y aparece como pestaña nueva. La UI se autogenera. Los tests lo ignoran si no le añades ninguno.

7. CÓMO EXTRAERLO A ARCHIVOS

Cada bloque "App.X = ..." va a su propio archivo .js:

```

event-bus.js
physics.js
registry.js
domains/fluid.js
domains/electric.js
domains/thermal.js
test-framework.js
tests.js
ui.js
main.js

```

En el HTML:

```
<script type="module" src="main.js"></script>
```

main.js importa todo lo demás. No hace falta bundler.

8. CÓMO ADAPTARLO A CASOS NUEVOS

Es un ejemplo de arquitectura, no un producto cerrado.
Cambios naturales:

- Persistir estado en localStorage:
Escuchar "ui.input.changed" y guardar. Al arrancar, precargar.
- Leer parámetros de la URL:
Al iniciar, leer ?domain=X¶m=Y y emitir los eventos.
- Añadir dominio con gráfica especial:
solve() puede devolver curves con cualquier forma.
La UI ya pinta cualquier array de puntos { x, y }.
- Añadir tests de integración dominio + EventBus:
Suscribirse a un evento y comprobar que se emite.
- Cambiar la UI por otra (React, Vue, canvas puro):
Solo hay que reescribir App.UI. Los dominios y tests no cambian.

9. VERIFICACIÓN

Al abrir el archivo, la sección "Tests" al final muestra el resultado.
Debe aparecer:

✓ N pasan (N = número total de tests, actualmente ~20)
(0 tests)

Si algún test falla, se muestra en rojo con el motivo.
Los tests son la especificación viva de la física del sistema.

Consola del navegador (F12) al arrancar:
[Física modular] Sistema arrancado.
Dominios registrados: fluid, electric, thermal
Para añadir un dominio nuevo: App.Registry.register({...})

10. LIMITACIONES CONOCIDAS

-
- Los dominios son deliberadamente simples. Cada uno modela un caso concreto, no pretende ser una herramienta de ingeniería de precisión.
 - Fluid: el modelo asume troncal único + N ramales paralelos. No soporta ramificaciones en árbol a más de un nivel.
 - Electric: cálculo resistivo puro a 20°C. No tiene en cuenta temperatura del conductor, factor de potencia, ni inductancia.
 - Thermal: conducción estacionaria 1D. No modela radiación ni convección externa.
 - No hay validación de entradas. Si metes valores absurdos (negativos, cero) el resultado puede ser NaN o Infinity. Los tests cubren el rango razonable, no el patológico.
 - Todo el estado vive en memoria. Refrescar la página pierde los valores introducidos.

11. REFERENCIAS

La analogía entre dominios es un tema clásico:

- Ley de Ohm ↔ Hagen-Poiseuille ↔ Ley de Fourier
- Modelado "lumped element" en ingeniería
- Teoría constructal (Bejan) para redes de distribución
- Ley de Murray para ramificaciones óptimas

Las fórmulas usadas:

- Darcy-Weisbach: $\Delta p = f \cdot (L/D) \cdot \rho v^2/2$
- Colebrook/Haaland: factor de fricción turbulento
- Dittus-Boelter: $Nu = 0.023 \cdot Re^{0.8} \cdot Pr^{0.4}$
- NTU- ϵ : $\epsilon = 1 - e^{(-NTU)}$
- Ley de Ohm: $\Delta V = I \cdot R$
- Resistencias en serie y paralelo
- $R_{th} = d / (k \cdot A)$

=====

FIN DEL DOCUMENTO

=====

Guárdalo como README.txt junto al HTML, o súbelo como texto aparte. Si quieres que lo separe en docs/ , añade diagramas ASCII más elaborados, o traduzca partes al inglés para subirlo a GitHub, dímelo.