


USB-C

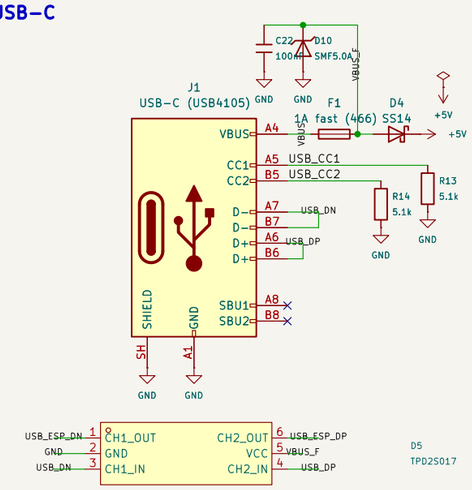


ESP32-S3 MCU

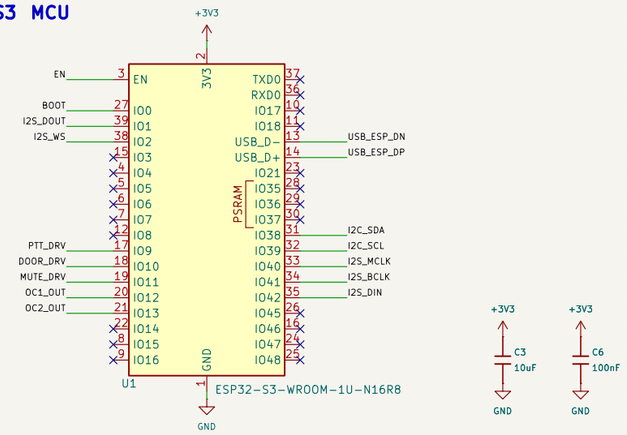


POWER

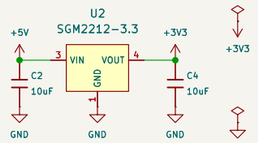


POWER LED




BUS SWITCHES (PhotoMOS SSRs)

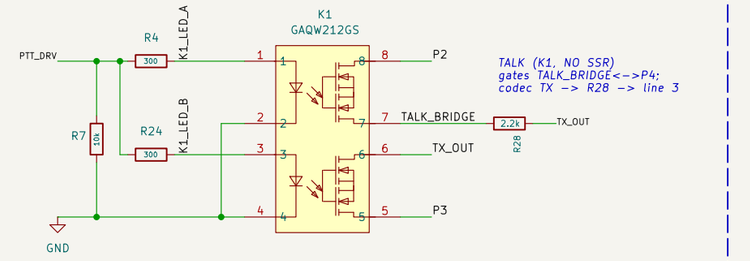


TALK (K1, NO SSR) gates TALK_BRIDGE<->P4; codec TX -> R28 -> line 3

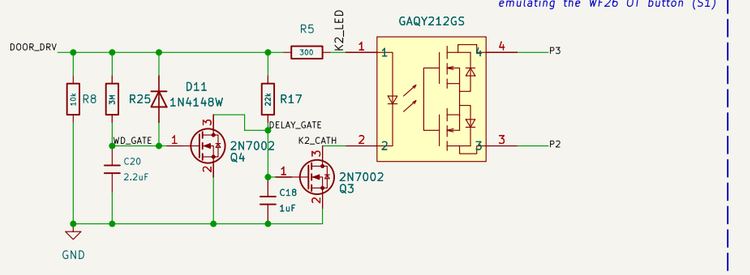

DOOR OPENER (K2, NO SSR) bridges P2<->P3 directly (dead short), emulating the WF26 OT button (S1)

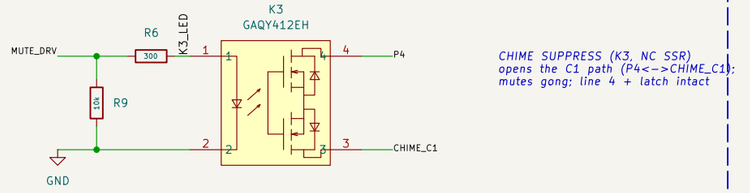


CHIME SUPPRESS (K3, NC SSR) opens the C1 path (P4<->CHIME_C1); mutes gong; line 4 + latch intact

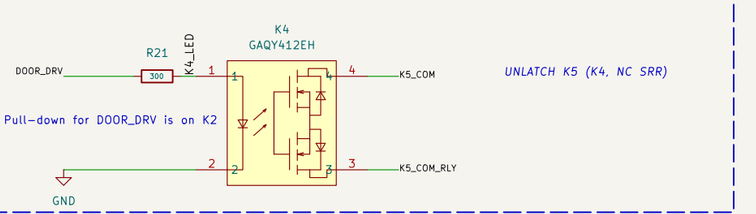


Pull-down for DOOR_DRV is on K2

UNLATCH K5 (K4, NC SRR)

BELL SENSE

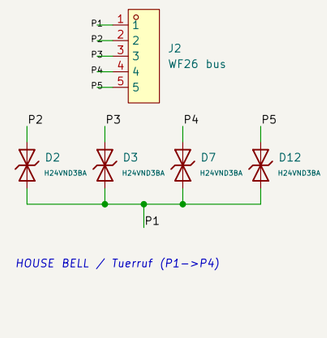


HOUSE BELL / Tuerruf (P1->P4)

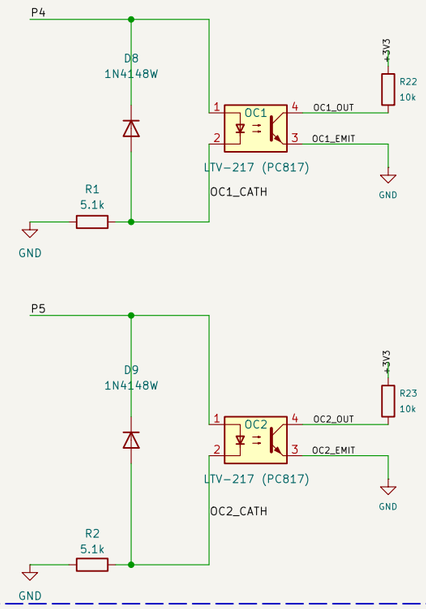


APARTMENT BELL / Etagenruf (P1->P5)


RESET / BOOT

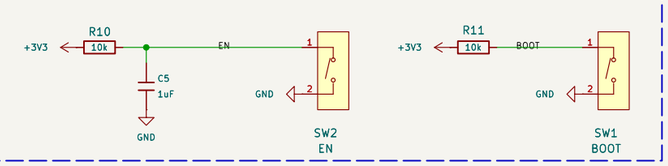


AUDIO ES8311 + LINE XFMR

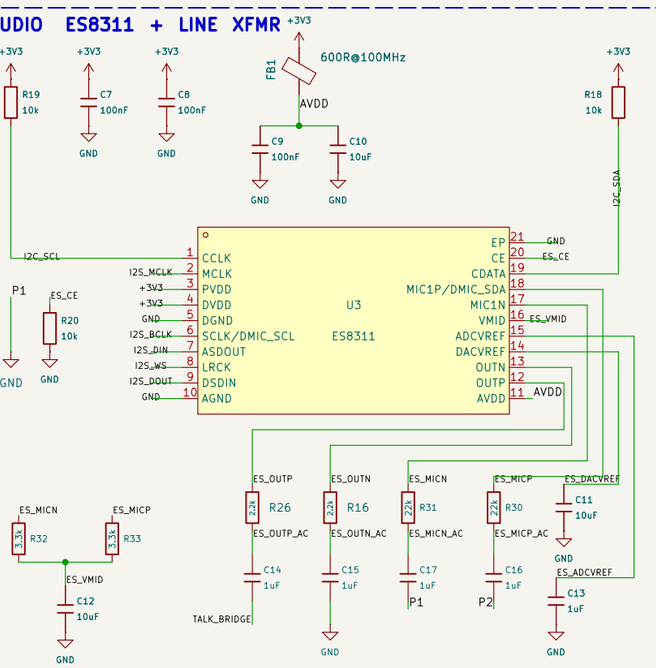

WF 26/G

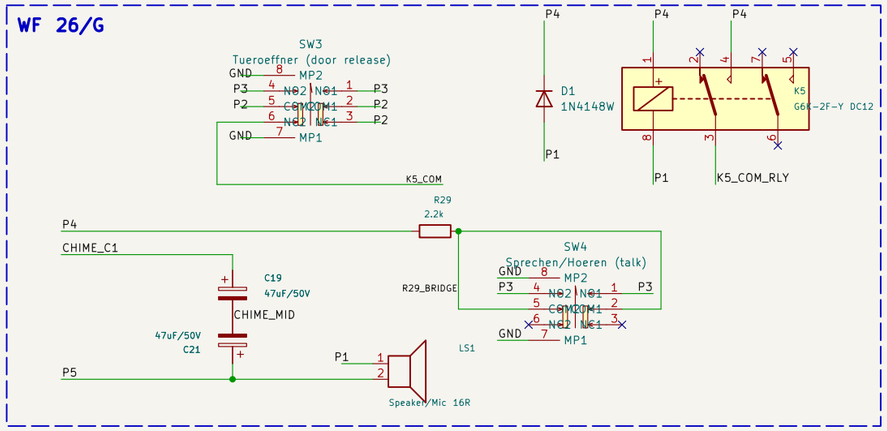

TEST POINTS

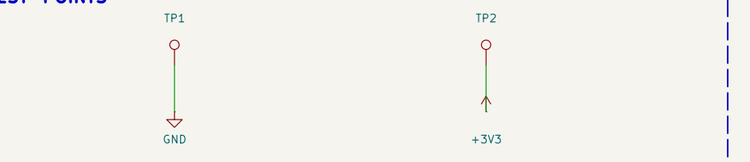

H1 MountingHole
H2 MountingHole
H3
H4
H5

Gunnar Beutner	
Sheet: /	
File: doorbell.kicad_sch	
Title: Doorbell controller (Klingel V4)	
Size: A3	Date: 2026-06-13
KiCad E.D.A. 10.0.3	Rev: V4.1
	Id: 1/1