USB-C

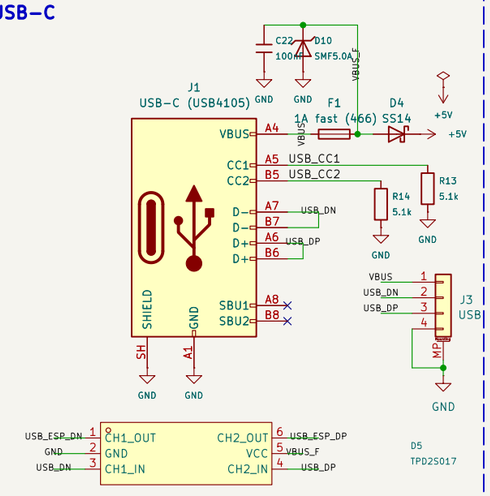

ESP32-S3 MCU

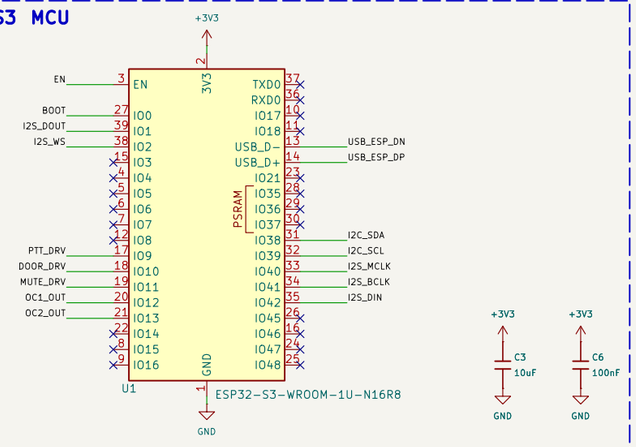

POWER

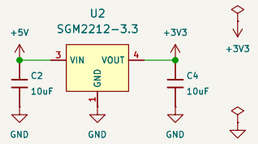

POWER LED



BUS SWITCHES (PhotoMOS SSRs)

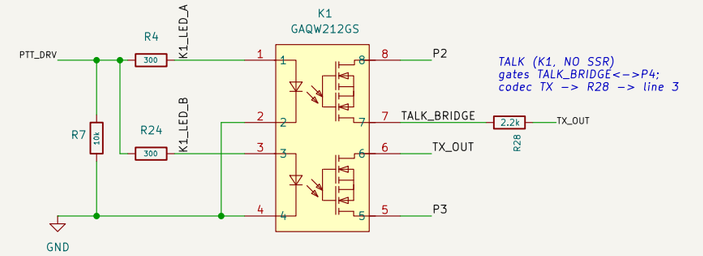

TALK (K1, NO SSR)
gates TALK_BRIDGE<->P4;
codec TX -> R28 -> line 3

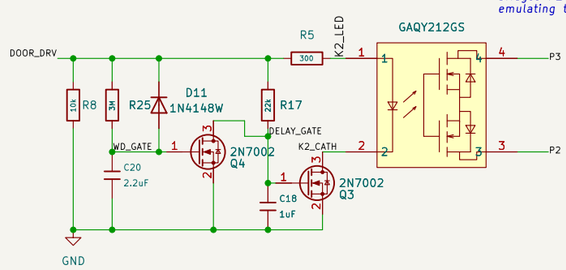

DOOR OPENER (K2, NO SSR)
bridges P2<->P3 directly (dead short),
emulating the WF26 OT button (S1)

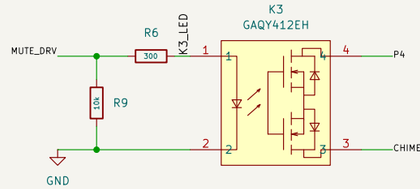

CHIME SUPPRESS (K3, NC SSR)
opens the C1 path (P4<->CHIME_C1);
mutes gong; line 4 + latch intact

Pull-down for DOOR_DRV is on K2

UNLATCH K5 (K4, NC SRR)

BELL SENSE

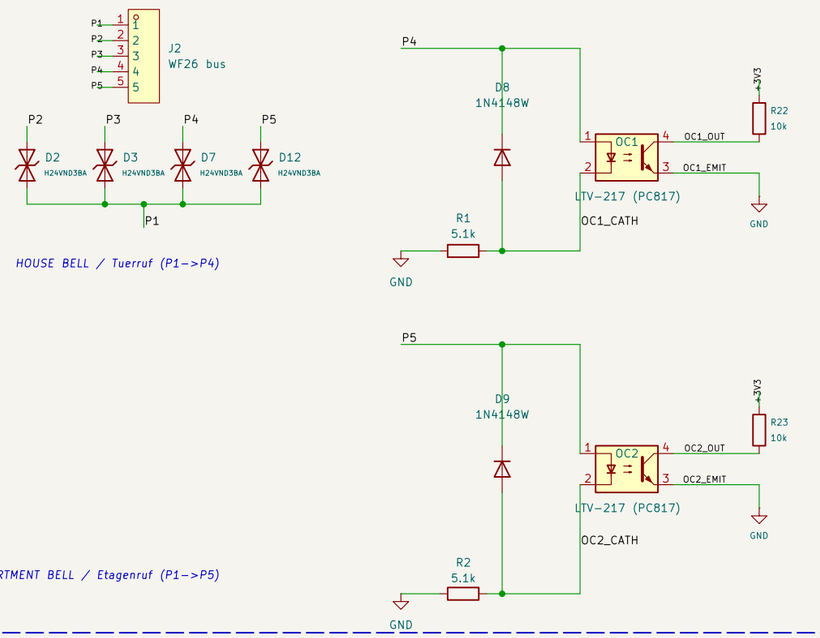

HOUSE BELL / Tuerruf (P1->P4)

APARTMENT BELL / Etagenruf (P1->P5)

RESET / BOOT

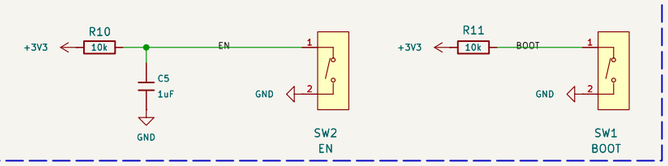

AUDIO ES8311 + LINE XFMR

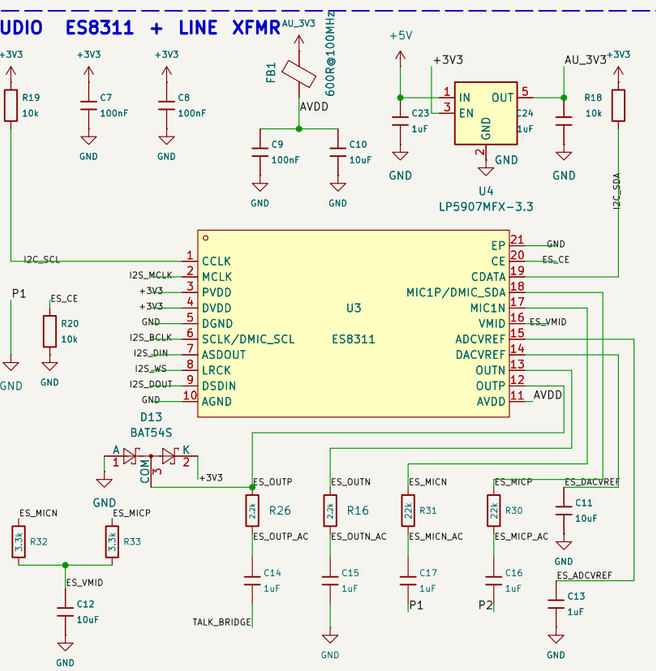

WF 26/G

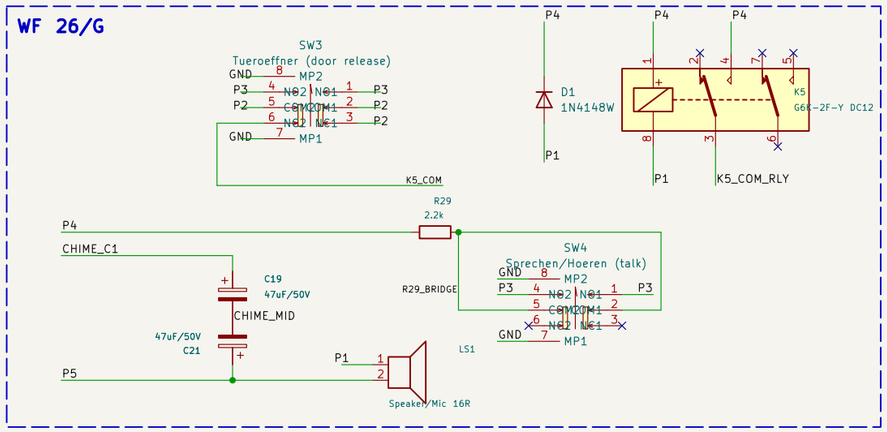

TEST POINTS

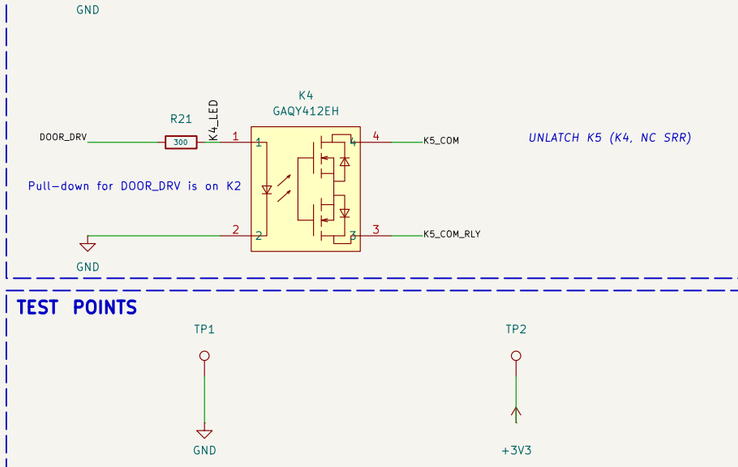

H1 MountingHole
H2 MountingHole
H3
H4
H5

Gunnar Beutner	
Sheet: /	
File: doorbell.kicad_sch	
Title: Doorbell controller (Klingel V4)	
Size: A3	Date: 2026-06-13
KiCad E.D.A. 10.0.3	**Rev: V4.1**
	Id: 1/1