


USB-C

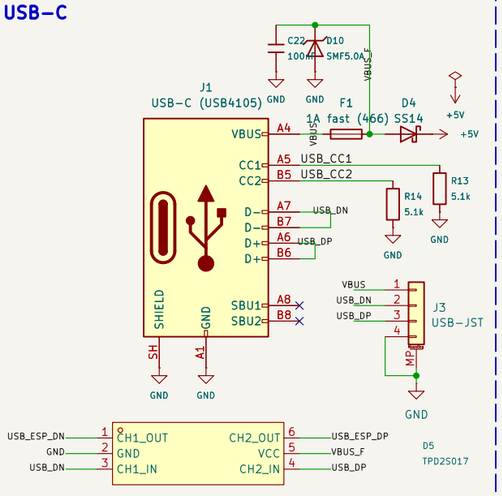


ESP32-S3 MCU

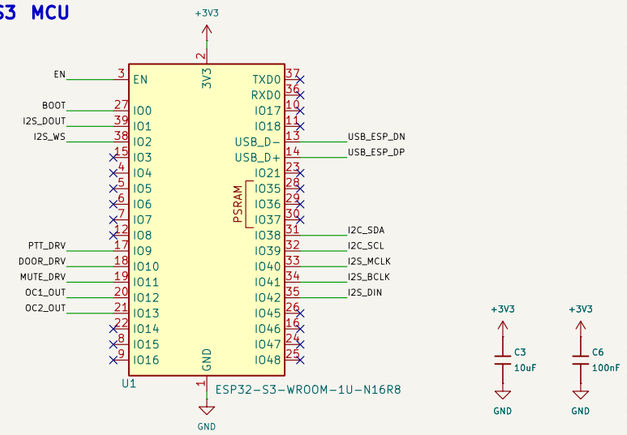


POWER

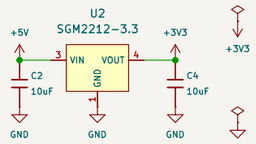


POWER LED




BUS SWITCHES (PhotoMOS SSRs)

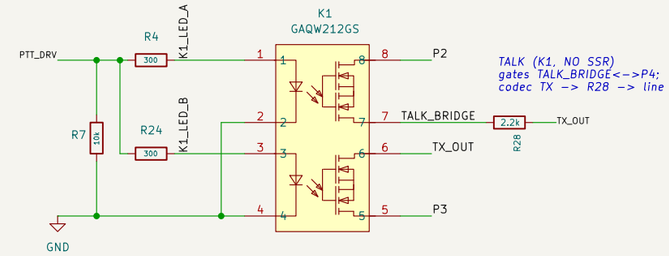


TALK (K1, NO SSR)
gates TALK_BRIDGE<->P4;
codec TX -> R28 -> line 3

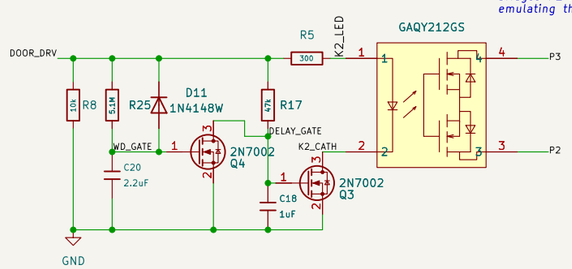

DOOR OPENER (K2, NO SSR)
bridges P2<->P3 directly (dead short),
emulating the WF26 OT button (S1)

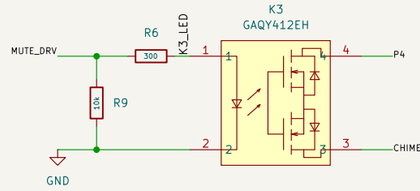


CHIME SUPPRESS (K3, NC SSR)
opens the C1 path (P4<->CHIME_C1);
mutes gong; line 4 + latch intact

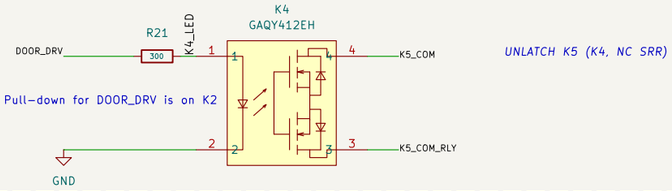

Pull-down for DOOR_DRV is on K2

UNLATCH K5 (K4, NC SRR)


BELL SENSE

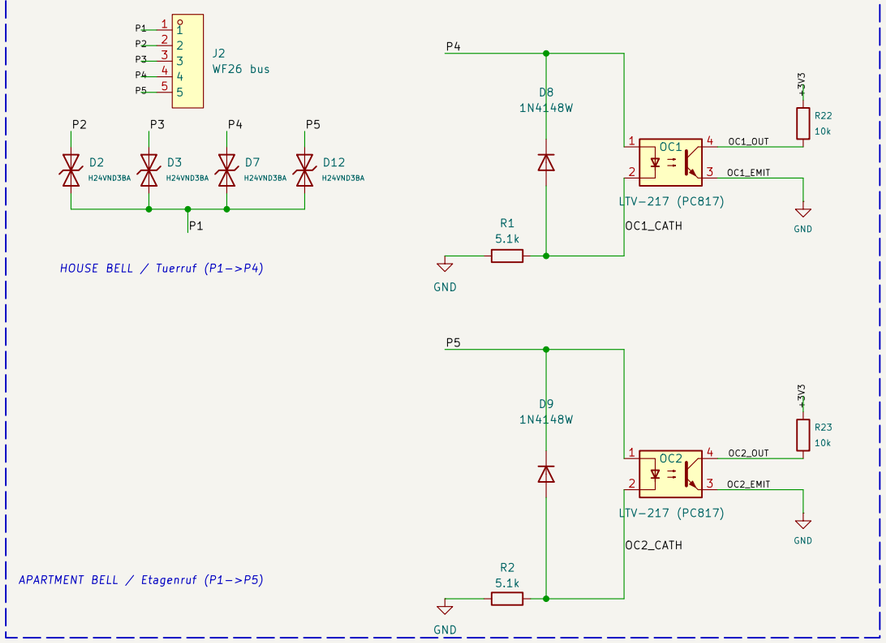


HOUSE BELL / Tuerruf (P1->P4)

APARTMENT BELL / Etagenruf (P1->P5)


RESET / BOOT

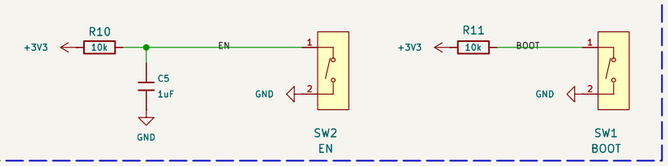


AUDIO ES8311 + LINE XFMR

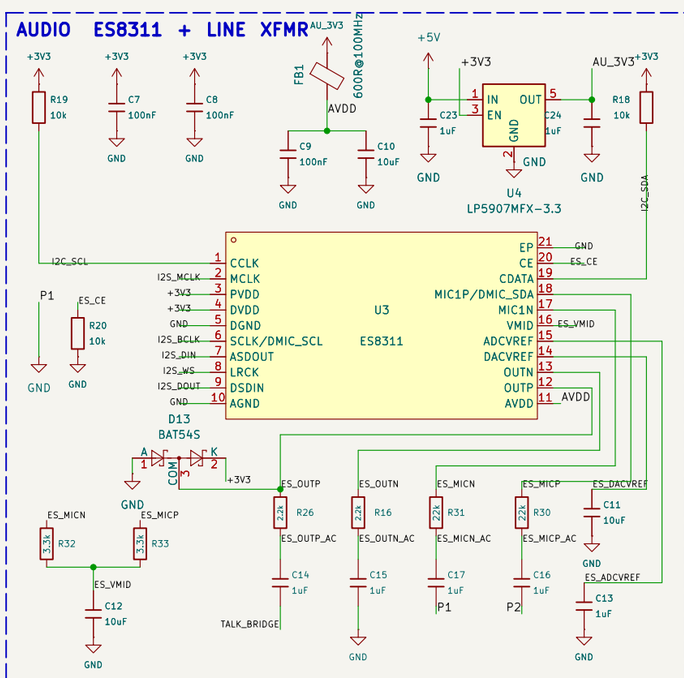

TEST POINTS

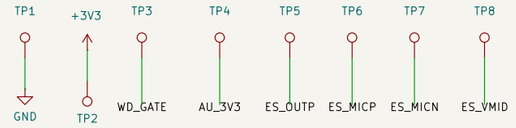

WF 26/G

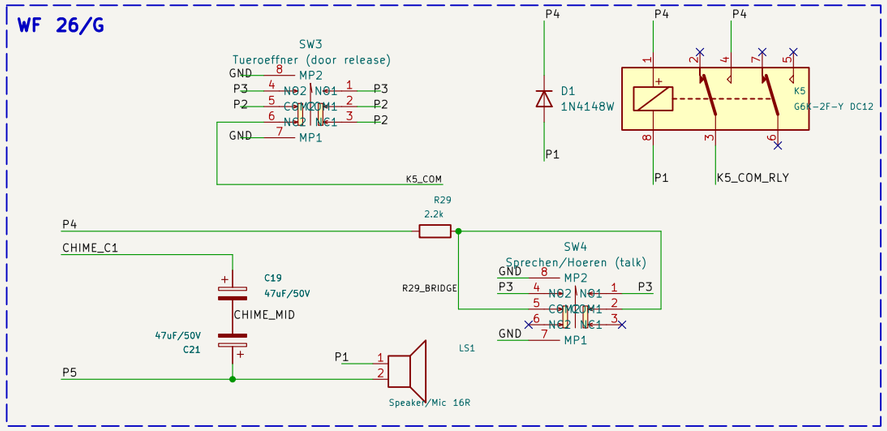

H1 MountingHole
H2 MountingHole
H3
H4
H5

Gunnar Beutner

Sheet: /
File: doorbell.kicad_sch

Title: Doorbell controller (Klingel V4)

Size: A3	Date: 2026-06-13	**Rev: V4.1**
KiCad E.D.A. 10.0.3		Id: 1/1