


USB-C

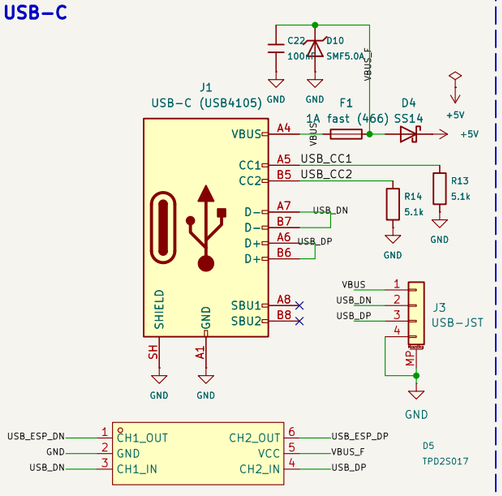


ESP32-S3 MCU

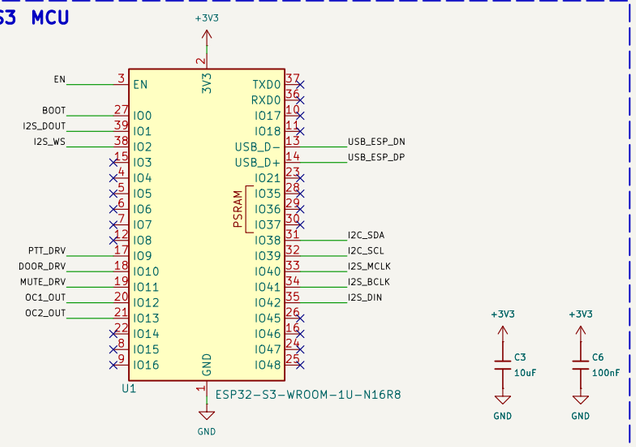


POWER

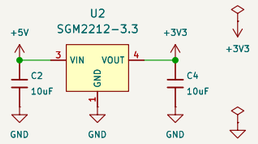


POWER LED




BUS SWITCHES (PhotoMOS SSRs)

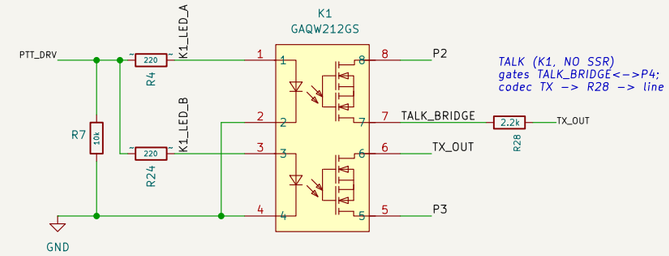


TALK (K1, NO SSR)
gates TALK_BRIDGE<->P4;
codec TX -> R28 -> line 3

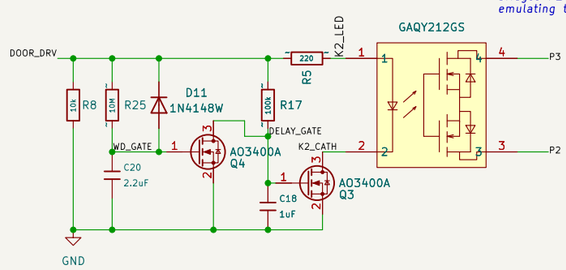

DOOR OPENER (K2, NO SSR)
bridges P2<->P3 directly (dead shot),
emulating the WF26 OT button (S1)

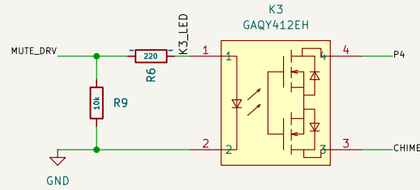


CHIME SUPPRESS (K3, NC SSR)
opens the C1 path (P4<->CHIME_C1);
mutes gong; line 4 + latch intact

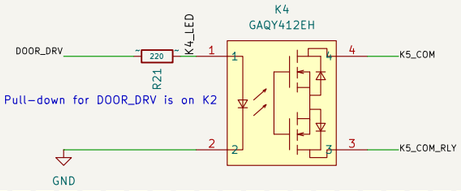


UNLATCH K5 (K4, NC SRR)

Pull-down for DOOR_DRV is on K2


BELL SENSE

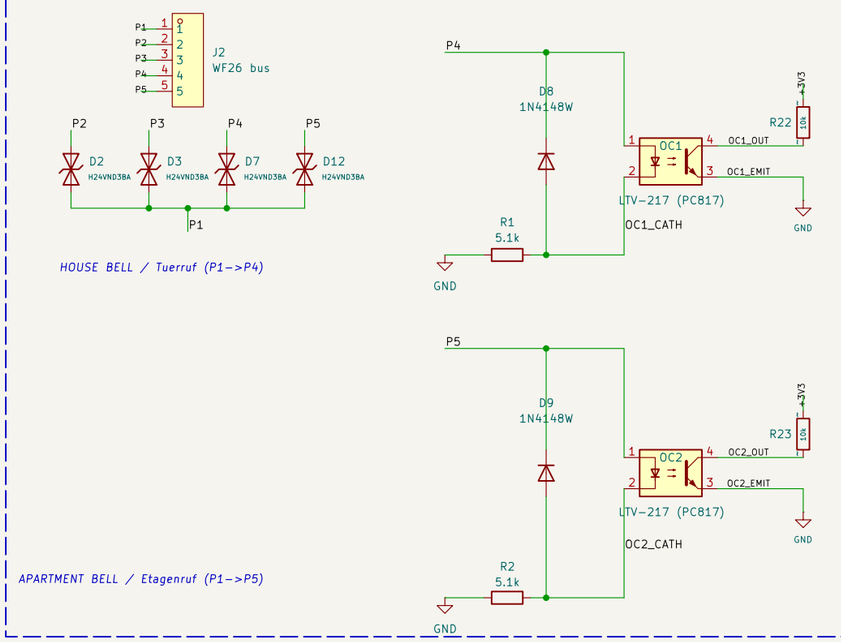


RESET / BOOT

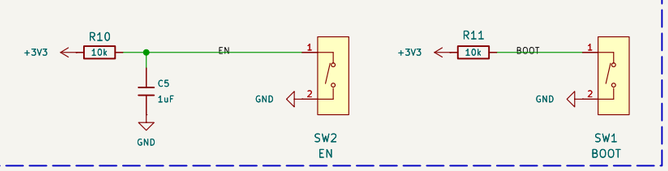


AUDIO ES8311 + LINE XFMR

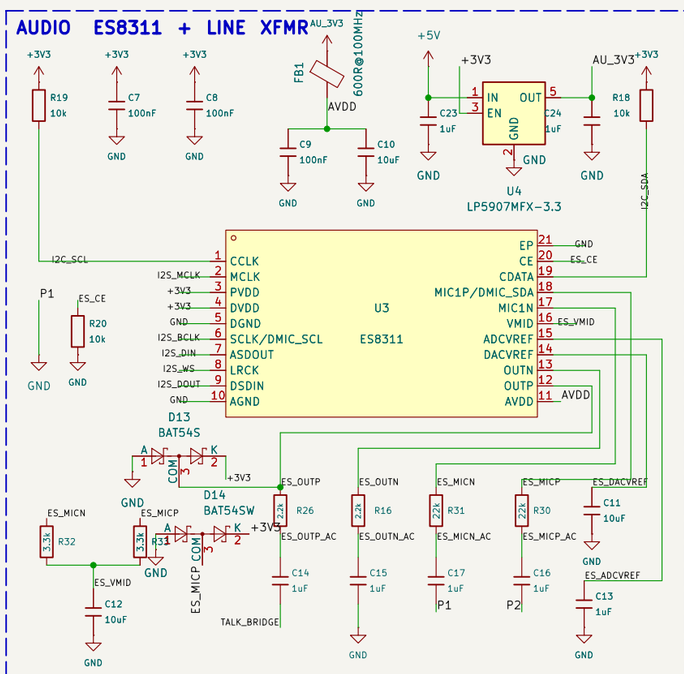

WF 26/G

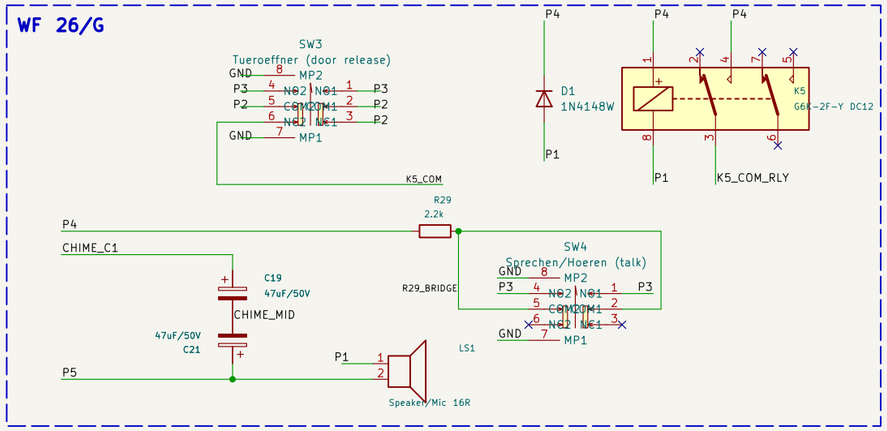

TEST POINTS

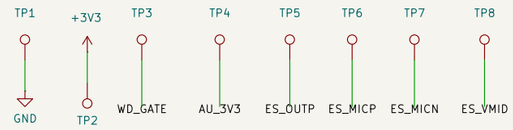

H1 MountingHole
H2 MountingHole
H3
H4
H5

Gunnar Beutner

Sheet: /
File: doorbell.kicad_sch

Title: Doorbell controller (Klingel V4)

Size: A3	Date: 2026-07-02	Rev: V4.2
KiCad E.D.A. 10.0.3		Id: 1/1