

CPR E 4890 Final Lab Experiment (Optional)

Cellular Network Emulation and Throughput Testing in ARA Wireless Living Lab

(Total Points: 100)

Introduction

- This lab is optional, and you will earn bonus points upon completion.
- You may complete this lab at any time before the due date at your convenience. There is no need to come to Room 2061 Coover to work on the lab, and attendance will not be taken.
- After completing the lab, fill out the enclosed lab report by answering all questions and submit it on Canvas.

Before starting the lab, familiarize yourself with the basics of 4G/5G network infrastructure by visiting [A Beginners Guide to Mobil Communication Infrastructure](#) and reading the sections regarding 4G/5G networks. To understand the platform that you will be using read about the ARA sandbox [ARA Sandbox Service](#). The primary hardware used for this lab will be USRP B210 Software Defined Radios (SDRs). For those new to SDRs, additional resources on SDR fundamentals can be found at [Fundamentals of SDRs](#).



In this lab we will use container images that contains **srsRAN**, an open-source software suite for 4G LTE mobile communication. **srsRAN** provides a complete 4G LTE software radio stack, including the Evolved Packet Core (EPC), eNodeB (eNB), and User Equipment (UE) components, allowing for the simulation and testing of 4G LTE networks. srsRAN is widely used in both academic and industry research for developing and experimenting with 4G and 5G technologies. More information about srsRAN can be found at [srsRAN Documentation](#).

Lab Expectations:

- 1) Get familiar with the ARA Wireless Living Lab.
- 2) Successfully set up an emulated 4G network and simulate wireless data traffic between the UE and eNB.
- 3) Conduct a throughput test on the emulated network and analyze performance.

Learning Objectives:

- 1) Gain an understanding of the key components of a 4G network and their responsibilities.
- 2) Gain an understanding of communication mechanisms in cellular networks between User Equipment (UE) and Base Station (eNB), to then further explore potential security vulnerabilities.
- 3) Define metrics that can affect the throughput of a network.


Estimated Time to Complete the Lab: 1-1.5 hours

Procedure

0. Lab Preparation


This lab must be completed in a single sitting because the containers don't save data once deleted. ARA provisions resources using Docker containers. Containers are ephemeral, meaning that once deleted, all data inside them is permanently lost unless copied externally. The lease by default is reserved for 2 hours but can be manually increased to a maximum of 5 hours.

- 0.1. Using your school credentials, log in at [ARA log-in portal](#).

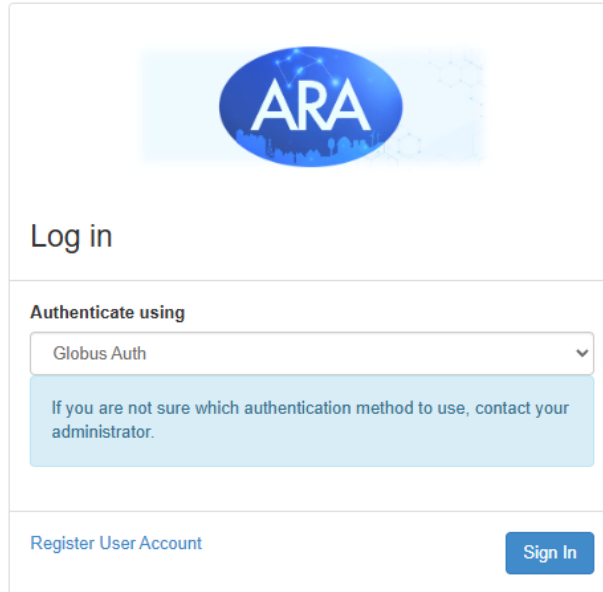

The screenshot shows the ARA Log in portal. At the top is the ARA logo, which consists of a blue oval with the letters 'ARA' in white, set against a background of a city skyline and a molecular structure. Below the logo is the text 'Log in'. Underneath is a section titled 'Authenticate using' with a dropdown menu currently showing 'Globus Auth'. A light blue box contains the text: 'If you are not sure which authentication method to use, contact your administrator.' At the bottom left is a link 'Register User Account' and at the bottom right is a blue button labeled 'Sign In'.

- 0.2. Search for "Iowa State University" in the search bar and press continue to be redirected to SSO.

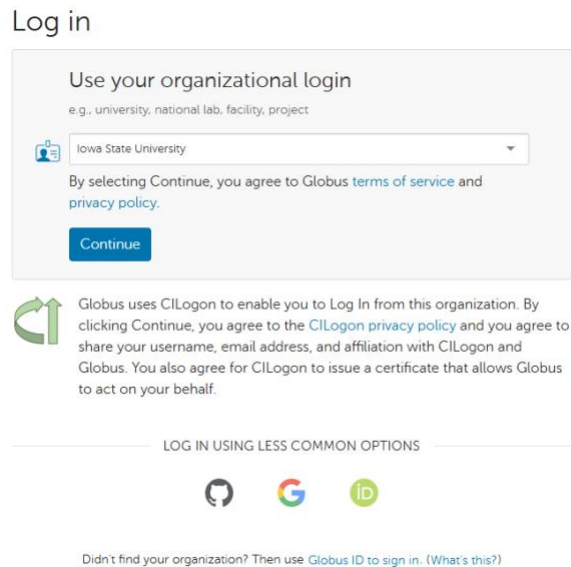

The screenshot shows a 'Log in' page. At the top is the text 'Log in'. Below it is a box titled 'Use your organizational login' with the subtitle 'e.g., university, national lab, facility, project'. Inside this box is a search bar with a dropdown menu showing 'Iowa State University'. Below the search bar is a blue button labeled 'Continue'. A paragraph of text follows: 'By selecting Continue, you agree to Globus [terms of service](#) and [privacy policy](#).' Below this is a green circular icon with a white 'C' and an upward arrow. To the right of the icon is a paragraph: 'Globus uses CILogon to enable you to Log In from this organization. By clicking Continue, you agree to the [CILogon privacy policy](#) and you agree to share your username, email address, and affiliation with CILogon and Globus. You also agree for CILogon to issue a certificate that allows Globus to act on your behalf.' Below this is a horizontal line with the text 'LOG IN USING LESS COMMON OPTIONS' in the center. Underneath the line are three icons: GitHub, Google, and ID. At the bottom is a link: 'Didn't find your organization? Then use [Globus ID to sign in](#). ([What's this?](#))'

- 0.3. After you have successfully logged in, you will be navigated to the **CPRE4890_S26** project page on the ARA wireless portal.
- 0.4. To sign up for ARA's jumpbox to SSH into the VMs, click on your username (ISU email address) at the right of the project page, and select Upload Public Key. Follow the instructions on the screen, after which you can follow the instructions in the lab manual below to SSH into the VM. Please do this as soon as possible as it may take the ARA team some time to process this. For more information on ARA's Jumpbox service you can visit [ARA Jumpbox Service](#).

ARA Iowa State University • CPRE4890_S26 jschm333@iastate.edu

Project > Settings / User Settings /

Identity >

Data >

Settings > User Settings

Change Password

Public Key File [?]

Choose File No file chosen

Upload public key

Description:

Upload your public key to access ARA jumpbox.

Jumpbox Username: **jschm333_iastate**

You can use the following command from your computer to access jumpbox.

```
ssh -i your_private_key_filename  
jschm333_iastate@ibox.arawireless.org
```

Cancel Upload Key

1 2 3

annoteit.com

- 0.5. Make sure to set your time-zone settings correctly. This can significantly impact your experience with the reservation system and help you avoid issues caused by differences between the ARA Platform time settings and your system time.

ARA Iowa State University • CPRE4890_S26 jschm333@iastate.edu

Project > Settings / User Settings

Identity >

Data >

Settings > User Settings

Change Password

User Settings

Language ^{*}

English (en)

Timezone ^{*}

UTC -05:00: United States (Chicago) Time

Items Per Page [?]

20

Log Lines Per Instance [?]

35

Description:

Modify dashboard settings for your user.

1 2 3

Save

annoteit.com

1. Reserve two sandbox hosts.

Go to [ARA Sandbox Service](#) and pick two machines. Figure 1 shows the relative positions of the machines. Choose two machines that are in general proximity to one another, since nearby hosts are more likely to have reliable RF connectivity.

Make sure to check the ARA Sandbox Service page for which Sandbox-Host pairs have connectivity. Not all host pairs have reliable RF coverage due to physical layout and interference. If `srssue` remains at *"Attaching UE..."* for more than ~30 seconds, the hosts are likely out of range; terminate the lease and try a different pair.

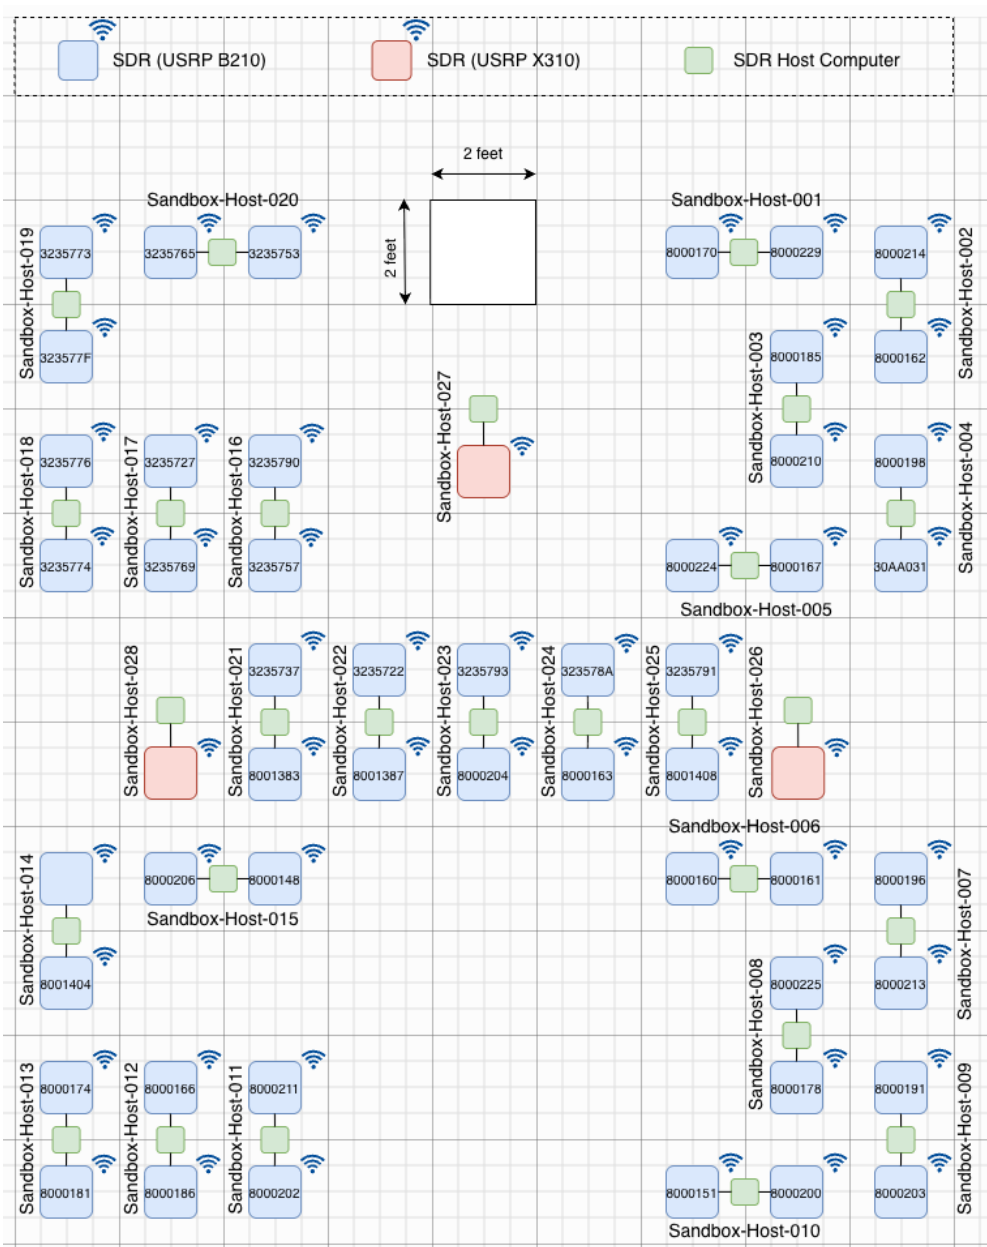


Figure 1 Sandbox-host physical locations.

Figure 2 is the snapshot from a single sweep test run with the eNB on Sandbox-Host-005: UE hosts 003, 014, 015, 017, 022, and 025 attached and passed iperf, while UE hosts 007, 016, 018, 019, 021, 026, and 027 did not see the cell at all. RF coverage shifts over time as hardware may be moved, antennas may be adjusted, and interference may change; therefore, your own pairing may differ. You may need to try a few different host pairs before finding one that works.

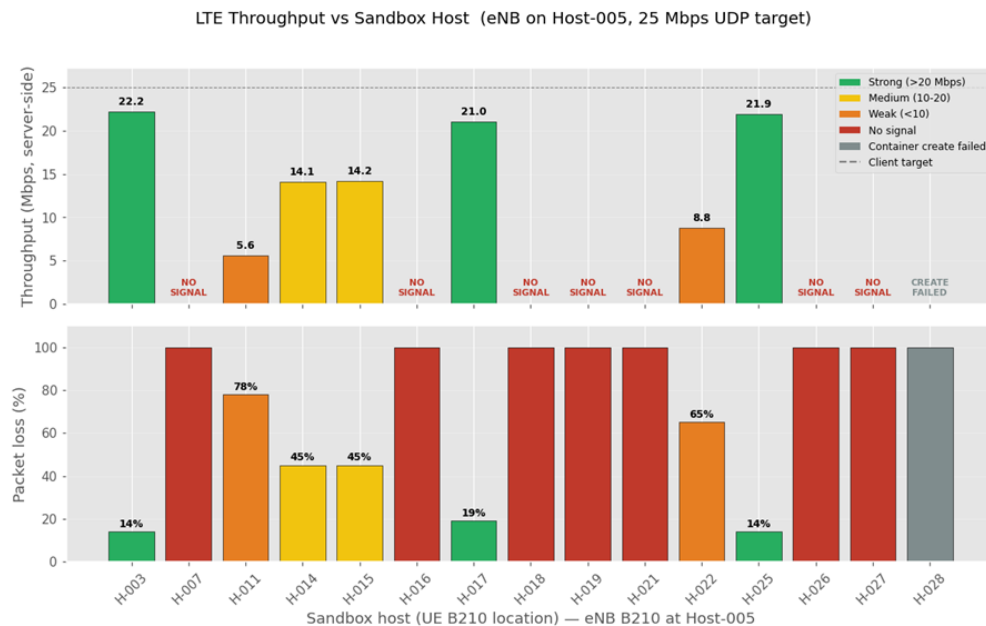



Figure 2 Snapshot from a single test run with the eNB on Sandbox-Host-005 (Completed on 04/21/2026).

Figure 3 shows the throughput measurements between different eNB-UE pairs in a recent test run. It may serve as a guideline to help you choose the right eNB-UE pair for your test. You may want to avoid the pairs with no Link Quality value, meaning that the link was empirically infeasible. Each column represents a Host chosen as eNB node starting from 003 all the way up to 025; each row represents those same hosts as UE node, and the values represent the Link Quality value. For example, if you choose Host 017 as eNB node, your best shot for UE would be Host 018, and your worst shot would be Host 025.



Figure 3 Illustrative LTE throughput per UE host and eNB (Measured on 04/23/2026).

- 1.1. On the ARA portal, navigate to Reservations → Leases → Host Calendar
(Or simply visit: <https://portal.arawireless.org/project/leases/calendar/host/>)

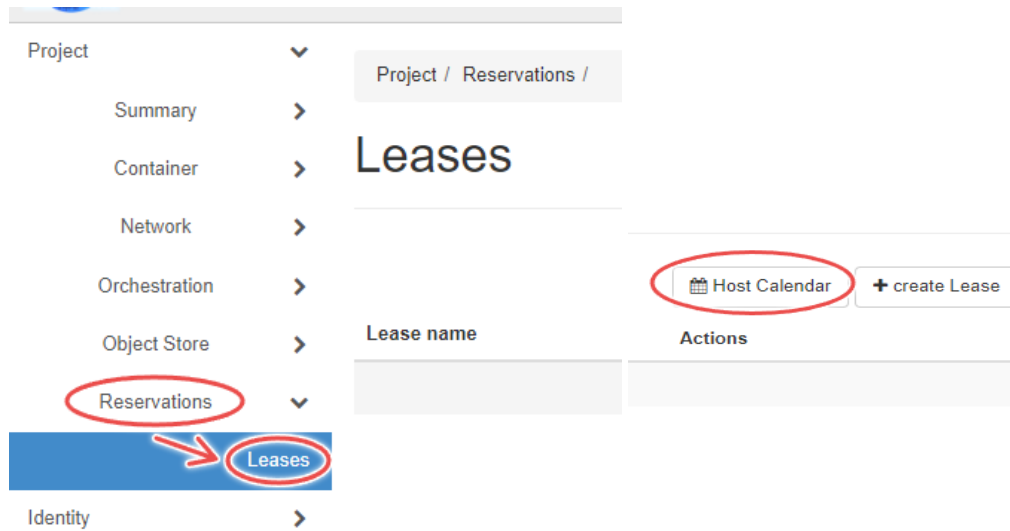


- 1.2. Ensure the hosts you choose are free to reserve. The image below shows Sandbox-Host-006 and 009 are available. Sandbox-Host 003 is currently reserved see reservation details by hovering your mouse over the colored block.

Note: You may have to scroll down until you reach the Sandbox-Host-0xx hosts.



- 1.3. Create the first lease by clicking create lease next to host calendar.

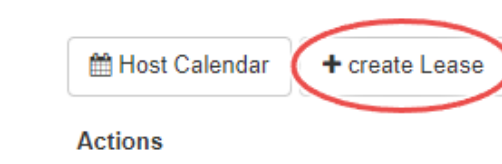

- 1.4. You can choose a lease name. However, using eNBLease as the lease name is recommended to make things less confusing moving forward. The start and end date can be left blank for a default reservation of 2 hours, which should be sufficient. If you feel like you would need additional time, you can enter in your start and end date, to request for a maximum of 5 hours of resource allocation. Make sure your time zone is set correctly.

Note: Lease names must be unique across the ARA portal. If you receive a duplicate name error, append your NetID.

Create Lease

General **Resources**

Lease Name
eNBLease

Start Date
YYYY-MM-DD HH:MM (blank for now)

End Date
YYYY-MM-DD HH:MM (blank for now)

Lease Name: The user given name of the lease.
Start Date: The starting date and time of the lease in YYYY-MM-DD HH:MM format.
End Date: The ending date and time of the lease in YYYY-MM-DD HH:MM format.
Note: The maximum lease time should not be beyond 5 hours.

Cancel « Back Next »

- 1.5. Use the Site dropdown menu and select Sandbox. Use the trailing numbers from Sandbox-Host-xxx for the device ID. For example, Sandbox-Host-006 is selected in the figure below.

Create Lease

General **Resources** **Wireless**

Site
Sandbox

Resource Type
AraRAN


Device Type
Host

Device ID
006


Site: The location of the resource.
Resource Type: The type of the resource (AraRAN, AraHaul, or Compute Node).
Device Type: The type of device (Base Station, User Equipment, Aviat, Compute, Host).
For ARA resources visit [ARA Resource Spec](#)

Cancel « Back Next »

1.6. Leave the wireless section of the lease blank and click create lease.

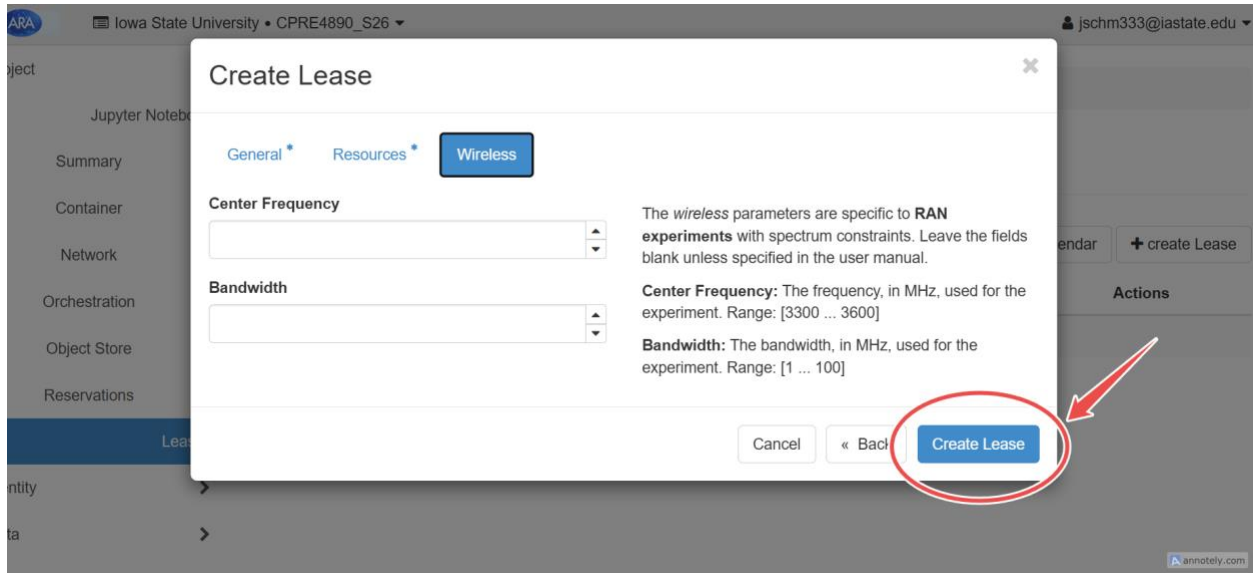

1.7. If done correctly with an available host the following messages will appear at the top right of the screen.

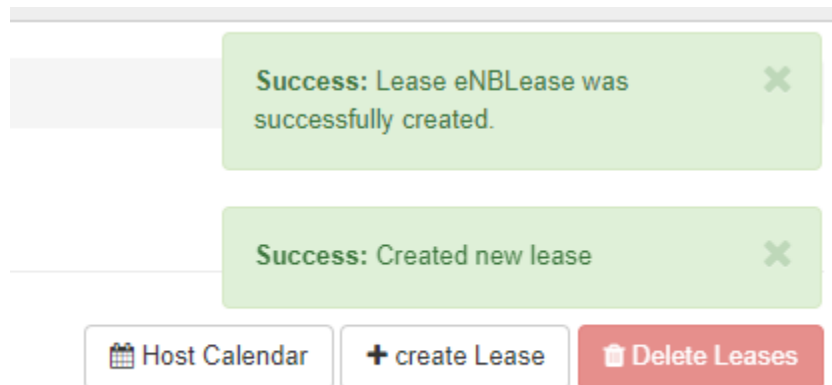

- 1.8. Do the same for the second lease using your other available host. Using the lease name UELease is recommended to avoid confusion later. Sandbox-Host-009 is used in the example below.

Create Lease

General *

Resources *

Lease Name *

UELease

Start Date ?

YYYY-MM-DD HH:MM (blank for now)

End Date ?

YYYY-MM-DD HH:MM (blank for now)

Lease Name:

The user given name of the lease.

Start Date:

The starting date and time of the lease in YYYY-MM-DD HH:MM format.

End Date:

The ending date and time of the lease in YYYY-MM-DD HH:MM format.

Note:

The maximum lease time should not be beyond 5 hours.

Cancel « Back Next »

Create Lease

General *

Resources *

Wireless

Site *

Sandbox

Resource Type *

AraRAN

Device Type *

Host

Device ID *

009

Site:

The location of the resource.

Resource Type:

The type of the resource (AraRAN, AraHaul, or Compute Node).

Device Type:

The type of device (Base Station, User Equipment, Aviat, Compute, Host).

For ARA resources visit

[ARA Resource Spec](#)

Cancel « Back Next »

Create Lease

General *

Resources *

Wireless

Center Frequency

Bandwidth

The wireless parameters are specific to RAN experiments with spectrum constraints. Leave the fields blank unless specified in the user manual.

Center Frequency:

The frequency, in MHz, used for the experiment.

Bandwidth:

The bandwidth, in MHz, used for the experiment.

Cancel « Back Create Lease

Success: Lease UELease was successfully created.

Success: Created new lease

Host Calendar

+ create Lease

Delete Leases

1.9. Provide a screenshot of both successfully created hosts' lease details in your lab report. To see lease details click on the blue lease name.

Project / Reservations /


Leases

Displaying 8 items

Lease name	Start date	End date	Status	Degraded	Actions
UELeaseSyed	2026-02-05 03:00 UTC	2026-02-05 08:00 UTC	ACTIVE	No	Delete Lease
NBLease	2026-02-05 23:10 UTC	2026-02-06 04:11 UTC	PENDING	No	Delete Lease
UELease2	2026-02-04 23:45 UTC	2026-02-05 04:44 UTC	ACTIVE	No	Delete Lease
UELease	2026-02-05 23:10 UTC	2026-02-06 04:11 UTC	PENDING	No	Delete Lease
uUELease	2026-02-05 02:34 UTC	2026-02-05 04:34 UTC	ACTIVE	No	Delete Lease
eNBLeaseSyed	2026-02-05 03:00 UTC	2026-02-05 08:00 UTC	ACTIVE	No	Delete Lease
NBLease2	2026-02-04 23:45 UTC	2026-02-05 04:44 UTC	ACTIVE	No	Delete Lease

Ensure both leases are in ACTIVE state before creating containers. If the lease is PENDING, wait or refresh until it becomes ACTIVE. Also please note that the leases will come ACTIVE only when they are within the time window you have defined for them. Before that time, they will remain PENDING.

2. Create two containers.
 - 2.1. Navigate to Container → Containers → Create Container.

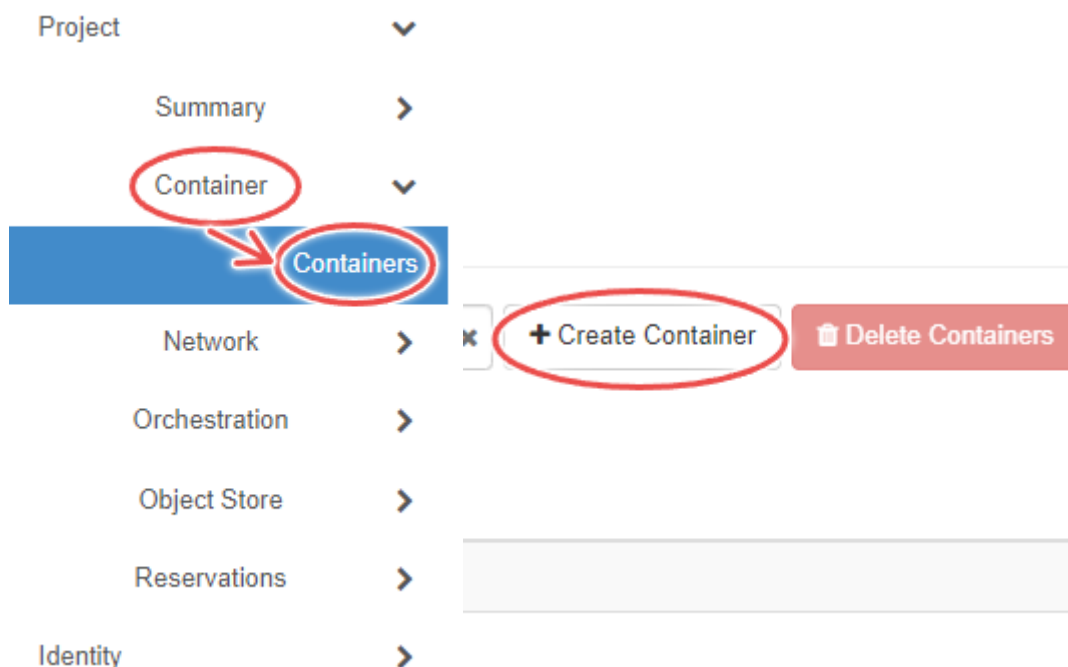

- 2.2. For the first container, choose a name. It is recommended to use “eNBContainer” for the name to avoid confusion. Use the docker image [arawirelesshub/srsran:srsenb](#)



The screenshot shows the 'Create Container' dialog box with the 'Info' tab selected. The 'Name' field contains 'eNBContainer' with a green checkmark. The 'Image' field contains 'arawirelesshub/srsran:srsenb' with a green checkmark. The 'Image Driver' is set to 'Docker Hub' and the 'Image Pull Policy' is set to 'No policy'. The 'Command' field is empty with a placeholder text 'A command that will be sent to the container.' The checkbox 'Start container after creation' is checked. At the bottom, there are buttons for 'Cancel', '< Back', 'Next >', and 'Create'.

- 2.3. Fill in the Spec tab with the following specs.

- **Hostname:** eNB (recommended, but you can choose)
- **CPU:** 6
- **Memory:** 8192
- **Lease Name:** eNBLease (or the name you chose for the first lease).

The screenshot shows the 'Create Container' dialog box with the 'Spec' tab selected. The 'Hostname' field contains 'eNB' with a green checkmark. The 'CPU' field contains '6' with a green checkmark. The 'Memory' field contains '8192' with a green checkmark. The 'Lease Name' field contains 'eNBLease' with a green checkmark. At the bottom, there are buttons for 'Cancel', '< Back', 'Next >', and 'Create'.

- 2.4. Click the up arrow for ARA_Shared_Net in Networks tab, making sure that it moves to the Allocated section, then click create. ARA_Shared_Net connects the containers to the shared virtual network, allowing communication between the eNB and UE containers and enabling Internet access via the physical network.

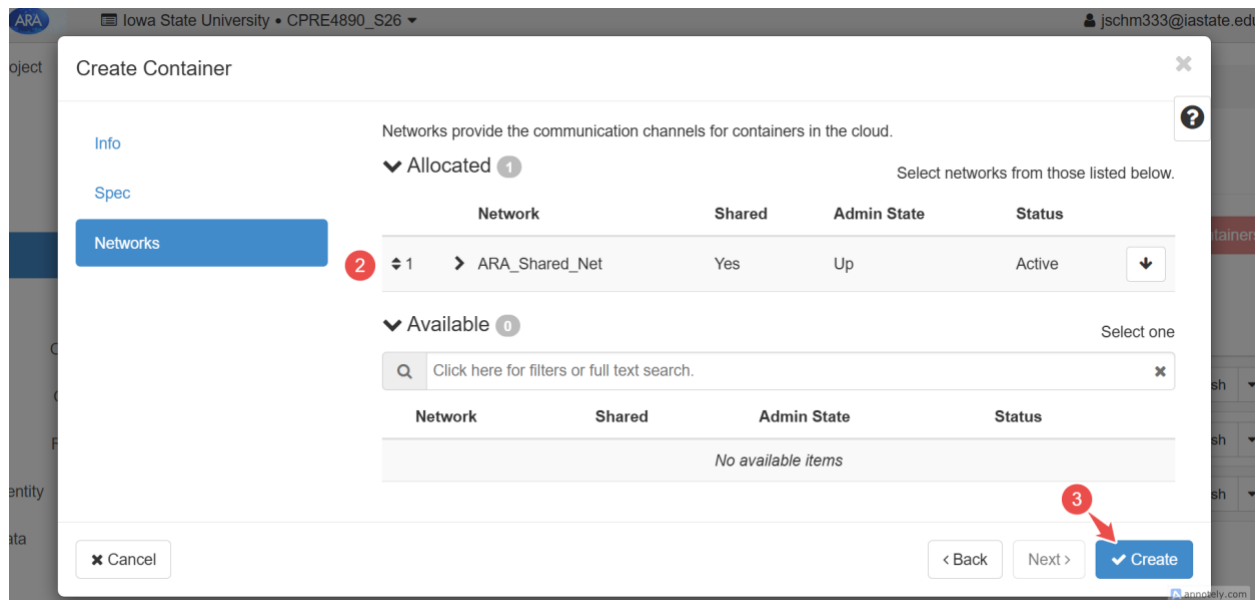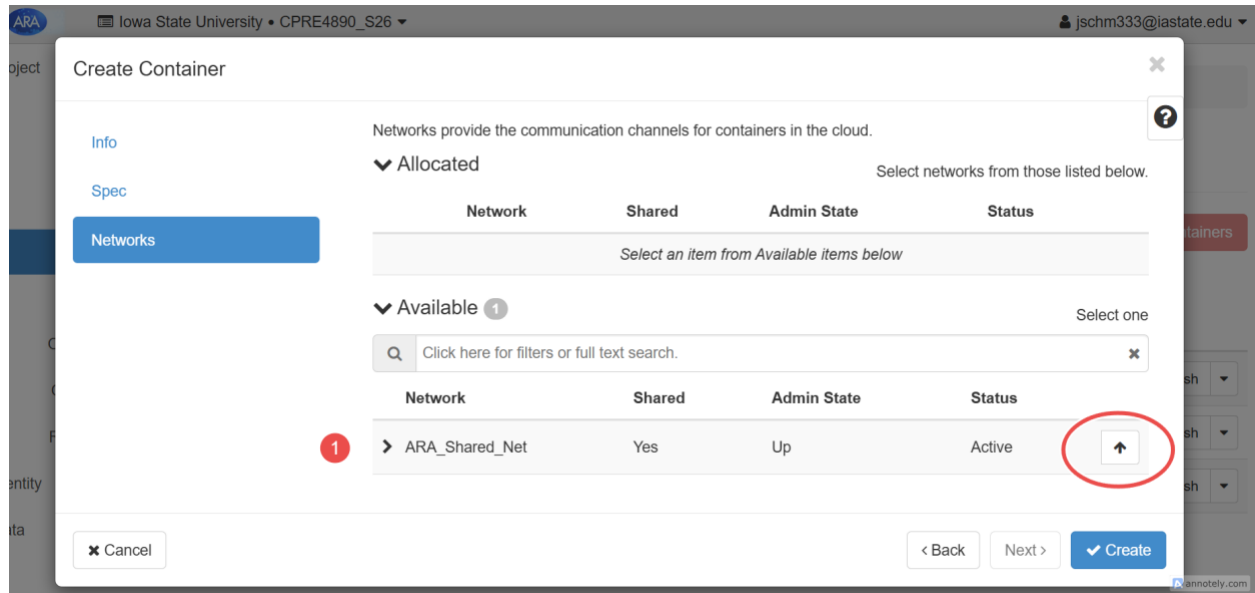

- 2.5. If done correctly, a message saying successfully created will appear at the top right. It might take a few seconds for the container to get up and running so while waiting, create the second container.

Success: Container eNBContainer was successfully created. ✕



- 2.6. For the second container, it is recommended to use the name “UEContainer” and use the image [arawirelesshub/srsran:srsue_4g](#). For the Spec tab, use all the same specs except **Hostname**: UE and **Lease Name**: UELease.

ARA Iowa State University • CPRE4890_S26 jschm333@iastate.edu

Create Container

Info

Name UEContainer ✓

Image * arawirelesshub/srsran:srsue_4g ✓

Image Driver Docker Hub Image Pull Policy No policy

Command A command that will be sent to the container.

☒ Start container after creation

✕ Cancel < Back Next > ✓ Create

ARA Iowa State University • CPRE4890_S26 jschm333@iastate.edu

Create Container

Info

Spec

Networks


Hostname UE ✓

CPU 6 ✓

Memory 8192 ✓

Lease Name * UELease ✓


✕ Cancel < Back Next > ✓ Create

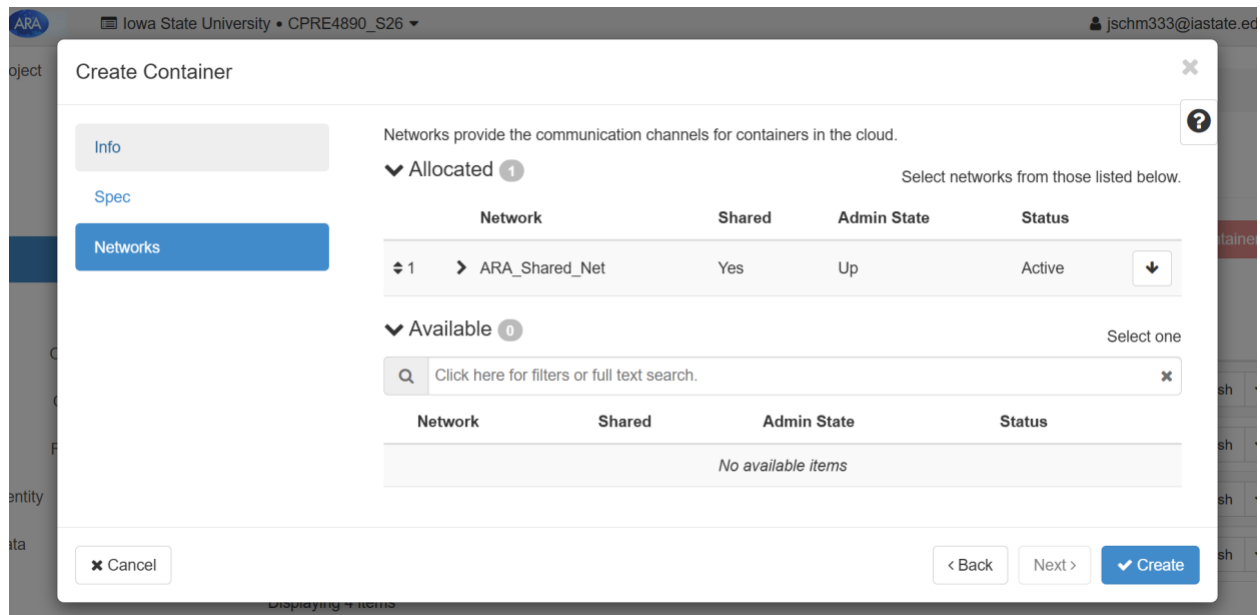

Success: Container UEContainer was successfully created.

- 2.7. Provide screenshots of both successfully created containers' overview tabs. Go to the container overview by clicking on the blue container name.

Containers

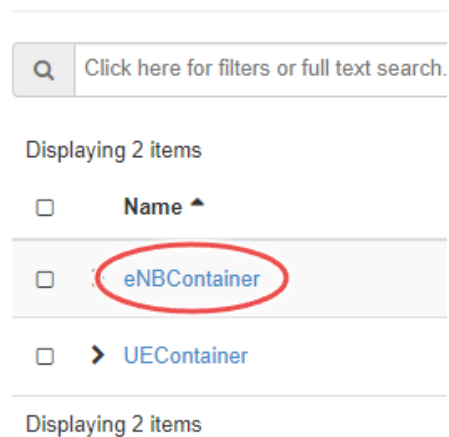

3. Connect to containers using jumpbox.
 - 3.1. Select the eNBContainer and go to the Console tab.

Containers

Click here for filters or full text search.	
Displaying 2 items	
☐	Name ▲
☐	eNBContainer
☐	> UEContainer
Displaying 2 items	

eNBContainer

Overview Logs Console

```
root@eNB: /#
```

- 3.2. Run the command `passwd` using a password you won't forget "root" is recommended, then start the ssh service using the following command: `service ssh start`

eNBContainer

Overview

Logs

Console

```
root@eNB:/# passwd
New password:
Retype new password:
passwd: password updated successfully
root@eNB:/# service ssh start
* Starting OpenBSD Secure Shell server sshd [ OK ]
root@eNB:/#
```

- 3.3. Do this for the UEContainer as well.

UEContainer

Overview

Logs

Console

```
root@UE:/# passwd
New password:
Retype new password:
passwd: password updated successfully
root@UE:/# service ssh start
* Starting OpenBSD Secure Shell server sshd [ OK ]
root@UE:/#
```

- 3.4. Open two terminals or command prompt windows and ssh into ARA's jumpbox **username@jbox.arawireless.org**. Make sure that the RSA private key you used to sign up for ARA's jumpbox is in the `.ssh` file on the machine you are using.

Note: Your username can be found on the Upload Public Key page.


```
C:\Users\user>ssh [redacted]@jbox.arawireless.org
[redacted]@ara-jbox:~$
```

jschm333@iastate.edu ▾

Settings
Help
1 Upload Public Key
Experiment Profile

Themes:
✓ Default

Sign Out

Description:
Upload your public key to access ARA jumpbox.
Jumpbox Username: jschm333_iastate 2
You can use the following command from your computer to access jumpbox.
ssh -i your_private_key_filename jschm333_iastate@jbox.arawireless.org

annotely.com

Alternatively, make sure that your private key is in the directory you are currently in, and you can run the command `ssh -i private_key username@jbox.arawireless.org`. Additional information on ARA jumpbox can be found [here](#).

```
[redacted]@MINGW64 ~
$ ssh -i [redacted] [redacted]@jbox.arawireless.org
```

- 3.5. Go back to overview of eNBContainer, under specs a floating IP address is listed. This is the Ip address you will use to ssh from ARA's jumpbox to the container using username root and the password you chose.

Note: It may take a few seconds for the floating IP to appear. If you do not see a floating IP immediately, refresh the page.

Spec

Image	arawirelesshub/srsran.srsenb
Image Driver	docker
Image Pull Policy	-
Hostname	eNB
Runtime	None
CPU	6
Memory	8192
Disk	0 GB
Restart Policy	{}
Auto Remove	No
Auto Heal	No
Addresses	[{"Port IP address": "10.0.4.22", "Floating IP address": "10.189.11.91"}]
Ports	{}
Security Groups	["061ba559-b2c3-4e45-b5b8-a011896d8ca3"]

```
[redacted]@ara-jbox:~$ ssh root@10.189.11.91
The authenticity of host '10.189.11.91 (10.189.11.91)' can't be established.
ECDSA key fingerprint is SHA256:10y/WGnCM4asfQn+oU+om4n2Pb7s8eIq3k+2AS8XAVY.
Are you sure you want to continue connecting (yes/no/[fingerprint])? yes
Warning: Permanently added '10.189.11.91' (ECDSA) to the list of known hosts.
root@10.189.11.91's password:
Welcome to Ubuntu 20.04.6 LTS (GNU/Linux 5.19.17-051917-generic x86_64)

 * Documentation:  https://help.ubuntu.com
 * Management:    https://landscape.canonical.com
 * Support:       https://ubuntu.com/advantage

This system has been minimized by removing packages and content that are
not required on a system that users do not log into.

To restore this content, you can run the 'unminimize' command.

The programs included with the Ubuntu system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/*copyright.

Ubuntu comes with ABSOLUTELY NO WARRANTY, to the extent permitted by
applicable law.

root@eNB:~#
```

3.6. Open two additional eNB terminals, and 3 UE terminals as well.

Spec

Image	arawirelesshub/srsran:srsue_4g
Image Driver	docker
Image Pull Policy	-
Hostname	UE
Runtime	None
CPU	6
Memory	8192
Disk	0 GB
Restart Policy	{}
Auto Remove	No
Auto Heal	No
Addresses	[{ "Port IP address": "10.0.4.107" "Floating IP address": "10.189.10.66" }]
Ports	[]
Security Groups	["061ba559-b2c3-4e45-b5b8-a011896d8ca3"]

```
C:\Users\user>ssh ccorcoran@jbox.arawireless.org
@ara-jbox:~$ ssh root@10.189.10.66
The authenticity of host '10.189.10.66 (10.189.10.66)' can't be established.
ECDSA key fingerprint is SHA256:pmLmne6DnI8jbHrAVIKzSwi4NJP1P06dzzrmfv5CPlo.
Are you sure you want to continue connecting (yes/no/[fingerprint])? yes
Warning: Permanently added '10.189.10.66' (ECDSA) to the list of known hosts.
root@10.189.10.66's password:
Welcome to Ubuntu 20.04.6 LTS (GNU/Linux 5.19.17-051917-generic x86_64)

 * Documentation:  https://help.ubuntu.com
 * Management:    https://landscape.canonical.com
 * Support:       https://ubuntu.com/advantage

This system has been minimized by removing packages and content that are
not required on a system that users do not log into.

To restore this content, you can run the 'unminimize' command.

The programs included with the Ubuntu system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Ubuntu comes with ABSOLUTELY NO WARRANTY, to the extent permitted by
applicable law.

root@UE:~#
```

4. Starting the EPC and eNB

- 4.1. In the terminal assigned to the eNBContainer run the command `srsepc` to start the EPC and then in the 2nd eNBContainer terminal run the command `srseNB`.

The Evolved Packet Core (EPC) is a key component of the 4G LTE network architecture, responsible for control functions such as user authentication, session management, and resource allocation.

Observe the startup messages and answer:

1. What three main components are initialized? (Hint: HSS, MME, and ___)
2. What MCC and MNC values do you see?
3. What does "SPGW" stand for and what is its role?

Leave this running - you'll see more messages when other components connect.

The 'srseNB' command starts the eNB service, that is the hardware component of the LTE network used for direct communication with mobile devices, managing radio communications, and connecting to the EPC. Once the eNB service is initiated, it will start broadcasting and connecting to User Equipment(UE).

Observe the startup messages, and comment on what you see.

5. Starting the UE

- 5.1. In one of the terminals for UEContainer run the command `srseUE`

Watch the connection process and note:

1. Cell found - What's the PCI and PRB count?
2. PLMN found - Does it match the network configured in EPC?
3. Random Access - What's your C-RNTI?
4. Final message - What IP address was assigned?

Observe Network Attachment

Look at Terminal 1 (EPC) - you'll see the authentication process:

Find and record:

- IMSI number: _____
- Allocated IP: _____
- Bearer QCI: _____ (Quality Class Identifier)

Look at Terminal 2 (eNB) - you should see:

- "RACH:" message with preamble number
- "User 0x46 connected"

- 5.2. In the other terminal for UEContainer run the command `ping 172.16.0.1`. This will check whether you are connected to the core. Provide a screenshot of your successful ping in the lab report.

6. Running the throughput test

6.1. In the terminals that are running srsenb and srsue type t and hit enter to start the console trace.

6.2. In the unused terminal for eNBContainer run the command
`iperf -s -u -i 1`

6.3. In the terminal for UEContainer used to run the ping command run the command
`iperf -c 172.16.0.1 -u -i 1 -b 25M -t 10`

6.4. Provide a screenshot of both console traces in your lab report. Typing t and hitting enter will stop the console trace. Type t and hit enter again to start it again.

6.5. In the lab report, define the options for iperf used for the UEContainer and define the brate seen in both console traces.

6.6. Run the command

```
iperf -c 172.16.0.1 -u -i 1 -b 25M -t 10
```

but change the value for the -b flag to make a noticeable difference in the brate. Try atleast 3 different values. Provide a screenshot of the console traces and the value for -b that was used. At what point does the requested bandwidth exceed the achievable throughput? What indicates saturation?

6.7. In the same terminals, now test TCP performance. First, stop the UDP iperf server (Ctrl+C in eNB terminal). In eNB terminal, start TCP server:

```
iperf -s
```

In UE terminal, run TCP test:

```
iperf -c 172.16.0.1 -t 10 -i 1
```

Document the TCP throughput and compare with your UDP results. Why might they differ?

6.8. Test uplink and downlink simultaneously. In eNB terminal (restart UDP server):

```
iperf -s -u
```

In UE terminal:

```
iperf -c 172.16.0.1 -u -b 20M -d -t 10 -i 1
```

Screenshot both directions' throughput. How does simultaneous traffic affect performance? Is the total bidirectional throughput equal to the sum of unidirectional tests? Explain.

7. Create a new UE


https://arawireless.readthedocs.io/en/latest/ara_technical_manual/sandbox_service.html

7.1. To see the effects that the distance between the UE and eNB can have on throughput, find another Sandbox-Host that is further or closer to the eNB. Delete the lease for the current UE, make a new one, and rerun the experiment. The figure above illustrates the location of the Sandbox-Host machine to aid you with your decision to pick a UE further from or closer to your current one.

7.2. Describe the changes you observed in your lab report and provide screenshots to support your claims based on change in throughput and so on. Specifically, comment on the link quality based on metrics such as RSRP, RSRQ, SNR, CFO and so on.

8. Deleting Leases

8.1. Navigate to Reservations → Leases and use the box next to Lease name to select both leases, then click Delete Leases.

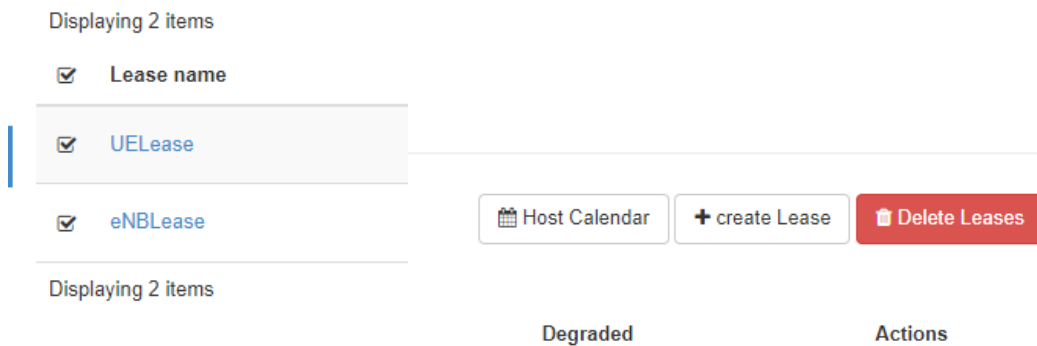

8.2. Provide a screenshot of the empty Leases page in your lab report.