Introduction to Computer Organization

with x86-64 Assembly Language & GNU/Linux

Robert G. Plantz, Ph.D. Sonoma State University bob.cs.sonoma.edu

January 2011

Copyright notice

Copyright ©2008, ©2009, ©2010, ©2011 by Robert G. Plantz. All rights reserved.

This book may be reproduced and distributed in its entirety (including this authorship, copyright, and permission notice), provided that no charge is made for the document itself (except for the cost of the printing or copying service), without the author's written consent. This includes "fair use" excerpts like reviews and advertising and derivative works like translations. You may print or copy individual pages for your own use.

Instructors are encouraged to use this book in their classes. The author would appreciate being notified of such

usage.

The author has used his best efforts in preparing this book. The author makes no warranty of any kind, expressed or implied, with regard to the programs or the documentation contained in this book. The author shall not be liable in any event from incidental or consequential damages in connection with, or arising out of, the furnishing, performance, or use of these programs.

All products or services mentioned in this book are the trademarks or service marks of their respective companies or organizations. Eclipse is a trademark of Eclipse Foundation, Inc.

Contents

Pı	Preface		xvi
1	Intr	roduction	1
	1.1	Computer Subsystems	3
	1.2	How the Subsystems Interact	4
2	Dat	a Storage Formats	6
	2.1	Bits and Groups of Bits	
	2.2	Mathematical Equivalence of Binary and Decimal	_
	2.3	Unsigned Decimal to Binary Conversion	
	$\frac{2.5}{2.4}$	Memory — A Place to Store Data (and Other Things)	
	2.5	Using C Programs to Explore Data Formats	
	2.6	Examining Memory With gdb	
	$\frac{2.0}{2.7}$	ASCII Character Code	
	2.8	write and read Functions	
	$\frac{2.6}{2.9}$		
	2.9	Exercises	24
3	Con	nputer Arithmetic	28
	3.1	Addition and Subtraction	
	3.2	Arithmetic Errors — Unsigned Integers	33
	3.3	Arithmetic Errors — Signed Integers	
	3.4	Overflow and Signed Decimal Integers	39
		3.4.1 The Meaning of CF and OF	
	3.5	C/C++ Basic Data Types	
		3.5.1 C/C++ Shift Operations	
		3.5.2 C/C++ Bit Operations	
		3.5.3 C/C++ Data Type Conversions	
	3.6	Other Codes	
	0.0	3.6.1 BCD Code	
		3.6.2 Gray Code	
	3.7	Exercises	
	0.1	Dacroises	02
4		ric Gates	55
		Boolean Algebra	
	4.2	Canonical (Standard) Forms	
	4.3	Boolean Function Minimization	
		4.3.1 Minimization Using Algebraic Manipulations	
		4.3.2 Minimization Using Graphic Tools	
	4.4	Crash Course in Electronics	69
		4.4.1 Power Supplies and Batteries	70
		4.4.2 Resistors, Capacitors, and Inductors	70
		4.4.3 CMOS Transistors	75
	4.5	NAND and NOR Gates	77
	4.6	Exercises	80

iv

5		cic Circuits 82
	5.1	Combinational Logic Circuits
		5.1.1 Adder Circuits
		5.1.2 Ripple-Carry Addition/Subtraction Circuits
		5.1.3 Decoders
		5.1.4 Multiplexers
	5.2	Programmable Logic Devices
		5.2.1 Programmable Logic Array (PLA)
		5.2.2 Read Only Memory (ROM)
		5.2.3 Programmable Array Logic (PAL)
	5.3	Sequential Logic Circuits
		5.3.1 Clock Pulses
		5.3.2 Latches
		5.3.3 Flip-Flops
	5.4	
	5.5	Memory Organization
		5.5.1 Registers
		5.5.2 Shift Registers
		5.5.3 Static Random Access Memory (SRAM)
		5.5.4 Dynamic Random Access Memory (DRAM)
	5.6	Exercises
	0.0	HACTORICO
6	Cen	ntral Processing Unit
	6.1	CPU Overview
	6.2	CPU Registers
	6.3	CPU Interaction with Memory and I/O
	6.4	Program Execution in the CPU
	6.5	Using gdb to View the CPU Registers
	6.6	TO .
	0.0	Exercises
7		
7	Pro	ogramming in Assembly Language 132
7	Pro 7.1	ogramming in Assembly Language 132 Creating a New Program
7	Pro	Gramming in Assembly Language Creating a New Program
7	Pro 7.1	ogramming in Assembly Language132Creating a New Program133Program Organization1337.2.1 First instructions143
7	Pro 7.1	Ogramming in Assembly Language132Creating a New Program133Program Organization1337.2.1 First instructions1437.2.2 A Note About Syntax143
7	Pro 7.1	Ogramming in Assembly Language132Creating a New Program133Program Organization1337.2.1 First instructions147.2.2 A Note About Syntax147.2.3 The Additional Assembly Language Generated by the Compiler143
7	Pro 7.1	Creating a New Program
7	Pro 7.1 7.2	Creating a New Program
7	Pro 7.1	Creating a New Program
7	Pro 7.1 7.2	Creating a New Program
7	Pro 7.1 7.2	Instructions 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 14 7.2.2 A Note About Syntax 14 7.2.3 The Additional Assembly Language Generated by the Compiler 145 7.2.4 Viewing Both the Assembly Language and C Source Code 146 7.2.5 Minimum Program in 32-bit Mode 146 Assemblers and Linkers 147 7.3.1 Assemblers 147 7.3.2 Linkers 149
7	Pro 7.1 7.2 7.3	Creating a New Program
7	Pro 7.1 7.2	Creating a New Program
7	Pro 7.1 7.2 7.3 7.4 7.5	Creating a New Program
7	Pro 7.1 7.2 7.3	Creating a New Program
	Pro 7.1 7.2 7.3 7.4 7.5 7.6	Instructions 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 14 7.2.2 A Note About Syntax 14 7.2.3 The Additional Assembly Language Generated by the Compiler 14 7.2.4 Viewing Both the Assembly Language and C Source Code 14 7.2.5 Minimum Program in 32-bit Mode 14 Assemblers and Linkers 14 7.3.1 Assemblers 14 7.3.2 Linkers 14 Creating a Program in Assembly Language 150 Instructions Introduced Thus Far 152 7.5.1 Instructions 152 Exercises 152
8	Pro 7.1 7.2 7.3 7.4 7.5 7.6 Pro	Ingramming in Assembly Language 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 143 7.2.2 A Note About Syntax 144 7.2.3 The Additional Assembly Language Generated by the Compiler 145 7.2.4 Viewing Both the Assembly Language and C Source Code 144 7.2.5 Minimum Program in 32-bit Mode 146 Assemblers and Linkers 147 7.3.1 Assemblers 147 7.3.2 Linkers 149 Creating a Program in Assembly Language 156 Instructions Introduced Thus Far 152 7.5.1 Instructions 152 Exercises 152 Orgram Data - Input, Store, Output 154
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1	Ingramming in Assembly Language 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 144 7.2.2 A Note About Syntax 145 7.2.3 The Additional Assembly Language Generated by the Compiler 145 7.2.4 Viewing Both the Assembly Language and C Source Code 144 7.2.5 Minimum Program in 32-bit Mode 146 Assemblers and Linkers 147 7.3.1 Assemblers 147 7.3.2 Linkers 149 Creating a Program in Assembly Language 156 Instructions Introduced Thus Far 152 7.5.1 Instructions 152 Exercises 152 Orgam Data - Input, Store, Output 154 Calling write in 64-bit Mode 154
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2	Ingramming in Assembly Language 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 14 7.2.2 A Note About Syntax 14 7.2.3 The Additional Assembly Language Generated by the Compiler 14 7.2.4 Viewing Both the Assembly Language and C Source Code 14 7.2.5 Minimum Program in 32-bit Mode 14 Assemblers and Linkers 14 7.3.1 Assemblers 14 7.3.2 Linkers 14 Creating a Program in Assembly Language 15 Instructions Introduced Thus Far 15 7.5.1 Instructions 15 Exercises 15 Ogram Data - Input, Store, Output 154 Calling write in 64-bit Mode 154 Introduction to the Call Stack 156
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2	Ingramming in Assembly Language 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 144 7.2.2 A Note About Syntax 144 7.2.3 The Additional Assembly Language Generated by the Compiler 144 7.2.4 Viewing Both the Assembly Language and C Source Code 144 7.2.5 Minimum Program in 32-bit Mode 146 Assemblers and Linkers 147 7.3.1 Assemblers 147 7.3.2 Linkers 147 Creating a Program in Assembly Language 150 Instructions Introduced Thus Far 152 7.5.1 Instructions 152 Exercises 152 Orgram Data - Input, Store, Output 154 Calling write in 64-bit Mode 154 Introduction to the Call Stack 156 Local Variables on the Call Stack 156
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3	Instructions 14 7.2.1 First instructions 14 7.2.2 A Note About Syntax 14 7.2.3 The Additional Assembly Language Generated by the Compiler 14 7.2.4 Viewing Both the Assembly Language and C Source Code 14 7.2.5 Minimum Program in 32-bit Mode 14 Assemblers and Linkers 14 7.3.1 Assemblers 14 7.3.2 Linkers 14 Creating a Program in Assembly Language 15 Instructions Introduced Thus Far 15 7.5.1 Instructions 15 Exercises 15 Ingram Data – Input, Store, Output 15 Calling write in 64-bit Mode 15 Introduction to the Call Stack 15 Local Variables on the Call Stack 16 8.3.1 Calling printf and scanf in 64-bit Mode 17
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3 8.4	Introduction of the Call Stack 132 132 132 134 135 135 136 136 137 137 138 138 139 139 130 130 132 131 132 132 132 133 132 134 132 135 142 136 136 137 138 138 142 139 144 130 145 131 145 132 146 133 147 134 147 135 148 136 149 137 149 138 149 139 149 130 149 131 149 132 149 133 149 134 149 135 149 136 149
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3 8.4 8.5	Creating a New Program
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3 8.4 8.5 8.6	Creating a New Program
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3 8.4 8.5	Igramming in Assembly Language 132 Creating a New Program 133 Program Organization 133 7.2.1 First instructions 14 7.2.2 A Note About Syntax 14 7.2.3 The Additional Assembly Language Generated by the Compiler 14 7.2.4 Viewing Both the Assembly Language and C Source Code 14 7.2.5 Minimum Program in 32-bit Mode 14 Assemblers and Linkers 14 7.3.1 Assemblers 14 7.3.2 Linkers 14 Creating a Program in Assembly Language 15 Instructions Introduced Thus Far 15 7.5.1 Instructions 15 Exercises 15 Igram Data - Input, Store, Output 15 Calling write in 64-bit Mode 15 Introduction to the Call Stack 15 Local Variables on the Call Stack 16 8.3.1 Calling printf and scanf in 64-bit Mode 17 Designing the Local Variable Portion of the Call Stack 17 Using syscall to Perform I/O 17 Calling Functions, 32-Bit Mode 17 Instructions Introduced Thus Far 18
	7.1 7.2 7.3 7.4 7.5 7.6 Pro 8.1 8.2 8.3 8.4 8.5 8.6	Creating a New Program

CONTENTS

	8.8	Exercises
9	Con	outer Operations 183
	9.1	The Assignment Operator
	9.2	Addition and Subtraction Operators
	9.3	ntroduction to Machine Code
		0.3.1 Assembler Listings
		0.3.2 General Format of Instructions
		0.3.3 REX Prefix Byte
		0.3.4 ModRM Byte
		0.3.5 SIB Byte
		0.3.6 The mov Instruction
	0.4	0.3.7 The add Instruction
	9.4	nstructions Introduced Thus Far
		0.4.1 Instructions
		0.4.2 Addressing Modes
	9.5	Exercises
10	Pro	ram Flow Constructs 208
		Repetition
	10.1	0.1.1 Comparison Instructions
		20.1.2 Conditional Jumps
		0.1.3 Unconditional Jump
		-
	100	0.1.4 while Loop
	10.2	Binary Decisions
		0.2.1 Short-Circuit Evaluation
		0.2.2 Conditional Move
	10.3	nstructions Introduced Thus Far
		0.3.1 Instructions
		.0.3.2 Addressing Modes
	10.4	Exercises
11	Wri	ng Your Own Functions 230
		Overview of Passing Arguments
		More Than Six Arguments, 64-Bit Mode
		nterface Between Functions, 32-Bit Mode
	11.4	nstructions Introduced Thus Far
		1.4.1 Instructions
		1.4.2 Addressing Modes
	11.5	Exercises
12	Bit (perations; Multiplication and Division 258
		Logical Operators
		Shifting Bits
		Multiplication
		Division
		Negating Signed ints
	12.6	instructions Introduced Thus Far
		2.6.1 Instructions
		2.6.2 Addressing Modes
	12.7	Exercises

vi CONTENTS

13 Data Structures	291
13.1 Arrays	291
13.2 structs (Records)	296
13.3 structs as Function Arguments	301
13.4 Structs as C++ Objects	306
13.5 Instructions Introduced Thus Far	315
13.5.1 Instructions	
13.5.2 Addressing Modes	317
13.6 Exercises	317
	319
14.1 Fractions in Binary	
14.2 Fixed Point ints	
14.3 Floating Point Format	
14.4 IEEE 754	
14.5 Floating Point Hardware	
14.5.1 SSE2 Floating Point	
14.5.2 x87 Floating Point Unit	
14.5.3 3DNow! Floating Point	
14.6 Comments About Numerical Accuracy	
14.7.1 Instructions	
14.7.2 Addressing Modes	
14.6 Exercises	330
15 Interrupts and Exceptions	342
15.1 Hardware Interrupts	
15.2 Exceptions	
15.3 Software Interrupts	
15.4 CPU Response to an Interrupt or Exception	
15.5 Return from Interrupt/Exception	
15.6 The syscall and sysret Instructions	
15.7 Summary	
15.8 Instructions Introduced Thus Far	349
15.8.1 Instructions	349
15.8.2 Addressing Modes	351
15.9 Exercises	351
40.7	a = a
20 224 W 0 W P W 0	352
Total statement, and the statement of th	352
8	353
16.3 Bus Timing	
	353
	355
	355
	365 366
	366
10.9 Exercises	300
A Reference Material	367
	367
<u>e</u>	368
	368
	369
	369
	372

CONTENTS vii

В	Using GNU make to Build Programs	373
\mathbf{C}	Using the gdb Debugger for Assembly Language	378
D	Embedding Assembly Code in a C Function	383
E	Exercise Solutions E.2 Data Storage Formats E.3 Computer Arithmetic E.4 Logic Gates E.5 Logic Circuits E.6 Central Processing Unit E.7 Programming in Assembly Language E.8 Program Data – Input, Store, Output E.9 Computer Operations E.10 Program Flow Constructs E.11 Writing Your Own Functions E.12 Bit Operations; Multiplication and Division	396 406 408 410 412 416 419 425 436 444
	E.13 Data Structures	480
Bi	bliography	485
In	dex	486

List of Figures

1.1	Subsystems of a computer	3
2.1	Possible contents of the first sixteen bytes of memory	11
2.2		11
2.3	A text string stored in memory	21
3.1	"Decoder Ring" for three-bit signed and unsigned integers	42
3.2		45
3.3		47
3.4		47
3.5		4 8
4.1	The AND gate acting on two variables, x and y	55
4.2		56
4.3		56
4.4		62
4.5		62
4.6		63
4.7		64
4.8		64
4.9		65
4.10		65
4.11	Comparison of one minterm (a) versus one maxterm (b) on a Karnaugh map	67
4.12	Mapping of three-variable maxterms on a Karnaugh map.	67
4.13		68
4.14	The XOR gate acting on two variables, x and y	68
4.15	A "don't care" cell on a Karnaugh map	69
		69
4.17	AC/DC power supply	70
		71
4.19	1	71
4.20		72
4.21	1 0 0	73
4.22	Inductor in series with a resistor	74
		74
		75
4.25		75
4.26		76
4.27	CMOS inverter equivalent circuit.	76
		77
		77
		78
		78
		78
4.33	An AND gate built from two NAND gates	78

LIST OF FIGURES ix

4.34 An OR gate built from three NAND gates	
4.35 The function in Equation 4.41 using two AND gates and one OR gate	9
4.36 The function in Equation 4.41 using two AND gates, one OR gate and four NOT	
gates	9
4.37 The function in Equation 4.41 using only three NAND gates	9
1 9. 7	
5.1 A half adder circuit	3
5.2 A full adder circuit	
5.3 Four-bit adder	
5.4 Four-bit adder/subtracter	
5.6 Full adder implemented with 3×8 decoder	
5.7 A 2-way multiplexer	
5.8 A 4-way multiplexer	
5.9 Symbol for a 4-way multiplexer	0
5.10 Simplified circuit for a programmable logic array	0
5.11 Programmable logic array schematic	1
5.12 Eight-byte Read Only Memory (ROM)	2
5.13 Two-function Programmable Array Logic (PAL)	4
5.14 Clock signals	
5.15 NOR gate implementation of an SR latch	
5.17 NAND gate implementation of an S'R' latch	
5.18 State table and state diagram for an S'R' latch	-
5.19 SR latch with Control input	
5.20 D latch constructed from an SR latch	0
5.21 D flip-flop, positive-edge triggering	0
5.22 D flip-flop, positive-edge triggering with asynchronous preset	1
5.23 Symbols for D flip-flops	
5.24 T flip-flop state table and state diagram	
5.25 T flip-flop	
5.26 JK flip-flop state table and state diagram	
5.27 JK flip-flop	
5.28 A 4-bit register	
5.29 A 4-bit register with load	
5.30 8-way mux to select output of register file	
5.31 Four-bit serial-to-parallel shift register	
5.32 Tri-state buffer	
5.33 Four-way multiplexer built from tri-state buffers	.2
5.34 4-bit memory cell	
5.35 Addressing 1 MB of memory with one 20×2^{20} address decoder	.3
5.36 Addressing 1 MB of memory with two 10×2^{10} address decoders	4
5.37 Bit storage in DRAM	
	_
6.1 CPU block diagram	7
6.2 Graphical representation of general purpose registers	
6.3 Condition codes portion of the rflags register	
6.4 Subsystems of a computer	
6.5 The instruction execution cycle	
0.5 The instruction execution cycle	4
7.1. Cancar abot of the avection of a nearmon in aggorably language	:1
7.1 Screen shot of the creation of a program in assembly language	Ι.
8.1 The stack in Listing 8.3 when it is first initialized	:1
8.2 The stack with one data item on it	
8.3 The stack with three data items on it	
8.4 The stack after all three data items have been popped off	
8.5 Local variables in the program from Listing 8.5 are allocated on the stack 16	7

x LIST OF FIGURES

8.6 Local variable stack area in the program from Listing 8.5	68
9.1 Assembler listing file for the function shown in Listing 9.7	98
9.2 General format of instructions	
9.3 REX prefix byte	
9.4 ModRM byte	
9.5 SIB byte	
9.6 Machine code for the mov from a register to a register instruction	
9.7 Machine code for the mov immediate data to a register instruction	
9.8 Machine code for the add immediate data to the A register	
9.9 Machine code for the add immediate data to a register	
9.10 Machine code for the add immediate data to a register instruction	
9.11 Machine code for the add register to register instruction	
10.1 Flow chart of a while loop	10
10.2 Flow chart of if-else construct	23
11.1 Arguments and local variables in the stack frame, sumInts function	11
-	
11.2 Arguments 7 – 9 are passed on the stack to the sumNine function	
11.3 Arguments and local variables in the stack frame, sumNine function	
11.4 Overall layout of the stack frame	
11.5 Calling function's stack frame, 32-bit mode	54
13.1 Memory allocation for the variables x and y from the C program in Listing 13.6 29	98
14.1 IEEE 754 bit patterns	
14.2 x87 floating point register stack	32
16.1 Typical bus controllers in a modern PC	54
TOLE EXPLORED AND COLLOW OLLOW HER A HILL AND A COLLEGE OF THE COL	<i>_</i> T

List of Tables

2.1	C/C++ syntax for specifying literal numbers.	
2.3	•	0
3.1		1
3.2	Four-bit signed integers, two's complement notation	5
3.3	Sizes of some C/C++ data types in 32-bit and 64-bit modes	3
3.4	Hexadecimal characters and corresponding int	8
3.5	E Company of the comp	0
3.6		0
3.7	Gray code for 4 bits	2
4.1		9
4.2	Maxterms for three variables	0
5.1	BCD decoder	7
5.2		7
5.3		6
5.4		9
5.5	D latch with Control state table	9
5.6	T flip-flop state table with D flip-flop inputs. $\dots \dots \dots$	
5.7	JK flip-flop state table with D flip-flop inputs)3
6.1	X86-64 operating modes	
6.2	The x86-64 registers	
6.3	Assembly language names for portions of the general-purpose CPU registers $$ 11	
6.4	General purpose registers	21
7.1	Effect on other bits in a register when less than 64 bits are changed	1
8.1	Common assembler directives for allocating memory	6
8.2	Order of passing arguments in general purpose registers	57
8.3	Register set up for using syscall instruction to read, write, or exit	7
9.1	Walking through the code in Listing 9.4)4
9.2	The mm field in the ModRM byte	
9.3	Machine code of general purpose registers)1
10.1	Conditional jump instructions	1
	Conditional jump instructions for unsigned values	
	Conditional jump instructions for signed values	
10.4	Machine code for the je instruction	.3
11.1	Argument register save area in stack frame	11

xii LIST OF TABLES

12.1 Bit patterns (in binary) of the ASCII numerals and the corresponding 32-bit ints. 27	14
12.2 Register usage for the mul instruction	75
12.3 Register usage for the div instruction	31
14.1 MXCSR status register	27
14.2 SSE scalar floating point conversion instructions	28
14.3 Some SSE floating point arithmetic and data movement instructions	28
14.4 x87 Status Word	31
14.5 A sampling of x87 floating point instructions	33
15.1 Some system call codes for the syscall instruction	17

Listings

2.1	Using printf to display numbers	13
2.2	C program showing the mathematical equivalence of the decimal and hexadeci-	
	mal number systems.	14
2.3	Displaying a single character using C	
2.4	Echoing characters entered from the keyboard	
3.1	Shifting to multiply and divide by powers of two	
3.2	Reading hexadecimal values from keyboard	
6.1	Simple program to illustrate the use of gdb to view CPU registers	
7.1	A "null" program (C)	
7.2	A "null" program (gcc assembly language)	134
7.3	A "null" program (programmer assembly language).	
7.4	A "null" program (gcc assembly language without exception handler frame)	144
7.5	The "null" program rewritten to show a label placed on its own line	144
7.6	Assembly language embedded in C source code listing	145
7.7	A "null" program (gcc assembly language in 32-bit mode)	146
7.8	A "null" program (programmer assembly language in 32-bit mode)	147
8.1	"Hello world" program using the write system call function (C)	154
8.2	"Hello world" program using the write system call function (gcc assembly lan-	
	guage)	155
8.3	A C implementation of a stack.	159
8.4	Save and restore the contents of the rbx and r12 – r15 registers	163
8.5	Echoing characters entered from the keyboard (gcc assembly language)	165
8.6	Echoing characters entered from the keyboard (programmer assembly language).	169
8.7	Calling printf and scanf to write and read formatted I/O (C)	171
8.8	Calling printf and scanf to write and read formatted I/O (gcc assembly language)	
8.9	Calling printf and scanf to write and read formatted I/O (programmer assembly	
	language)	172
8.10	Some local variables (C)	173
8.11	Some local variables (gcc assembly language)	174
8.12	Some local variables (programmer assembly language)	175
8.13	General format of a function written in assembly language	176
8.14	Echo character program using the syscall instruction	177
8.15	Displaying four characters on the screen using the write system call function in	
	assembly language	
9.1	Assignment to a register variable (C)	184
9.2	Assignment to a register variable (gcc assembly language)	184
9.3	Assignment to a register variable (programmer assembly language)	
9.4	Addition and subtraction (C)	
9.5	Addition and subtraction (gcc assembly language)	192
9.6	Addition and subtraction (programmer assembly language)	194
9.7	Some instructions for us to assemble	
10.1	Displaying a string one character at a time (C)	208
10.2	Unconditional jumps	
10.3	Displaying a string one character at a time (gcc assembly language)	215
10.4	General structure of a count-controlled while loop	217

xiv LISTINGS

10.5	Displaying a string one character at a time (programmer assembly language)	218
10.6	A do-while loop to print 10 characters	220
10.7	V 1	221
10.8	Get yes/no response from user (gcc assembly language)	223
10.9		224
	1 1 0 0 0 7	225
	Compound boolean expression in an if-else construct (C)	227
10.12	Compound boolean expression in an if-else construct (gcc assembly language).	228
10.13	Simple for loop to perform multiplication	234
11.1	Passing arguments to a function (C)	238
11.2	Accessing arguments in the sumInts function from Listing 11.1 (gcc assembly language)	239
11.3	Accessing arguments in the sumInts function from Listing 11.1 (programmer as-	
	sembly language)	241
11.4		243
11.5		244
11.6	Passing more than six arguments to a function (programmer assembly language).	
11.7	Passing more than six arguments to a function (gcc assembly language, 32-bit).	
12.1	Convert letters to upper/lower case (C)	260
12.2	Convert letters to upper/lower case (gcc assembly language)	
12.2	Convert letters to upper/lower case (get assembly language)	
12.4	Shifting bits (C)	
12.4 12.5	Shifting bits (gcc assembly language)	
12.6	Shifting bits (gcc assembly language)	
12.0 12.7		277
12.7		278
12.0 12.9		279
		282
	Convert unsigned int to decimal text string (gcc assembly language)	283
	Convert unsigned int to decimal text string (programmer assembly language).	285
13.1	Storing a value in one element of an array (C).	291
13.2	Storing a value in one element of an array (gcc assembly language)	292
13.3	Clear an array (C)	293
13.4	Clear an array (gcc assembly language).	294
13.5	V 1 8 V 8 V	295
13.6		297
13.7	.5	298
13.8	Two struct variables (programmer assembly language)	
13.9	Passing struct variables (C)	
	Passing struct variables (gcc assembly language).	
	$Passing \ struct \ variables assembly \ language \ version. \ . \ . \ . \ . \ . \ . \ . \ . \ . \$	
	Add 1 to user's' fraction (C++)	
	Add 1 to user's' fraction (C).	
13.14	Add 1 to user's' fraction (programmer assembly language)	314
14.1	Fixed point addition.	
14.2	Converting a fraction to a float	329
14.3	Converting a fraction to a float (gcc assembly language, 64-bit)	329
14.4	Converting a fraction to a float (gcc assembly language, 32-bit)	333
14.5	Use float for Loop Control Variable?	338
14.6	Are floats accurate?	
14.7	Casting integer to float in C	
14.8	Casting integer to float in assembly language	
15.1	Using syscall to cat a file	
16.1	Sketch of basic I/O functions using memory-mapped I/O — C version	
16.2	Memory-mapped I/O in assembly language	
16.3	Sketch of basic I/O functions, isolated I/O — C version	

Preface xv

16.4	Isolated I/O in assembly language	362
B.1	An example of a Makefile for an assembly language program with one source file.	374
B.2	An example of a Makefile for a program with both C and assembly language	
	source files	375
B.3	Makefile variables.	375
B.4	Incomplete Makefile	376
D.1	Embedding an assembly language instruction in a C function (C)	383
D.2	Embedding an assembly language instruction in a C function gcc assembly lan-	
	guage	384
D.3	Embedding more than one assembly language instruction in a C function and	
	specifying a register (C).	385
D.4	Embedding more than one assembly language instruction in a C function and	
	specifying a register (gcc assembly language)	386

Preface

This book introduces the concepts of how computer hardware works from a programmer's point of view. A programmer's job is to design a sequence of instructions that will cause the hardware to perform operations that solve a problem. This book looks at these instructions by exploring how C/C++ language constructs are implemented at the instruction set architecture level.

The specific architecture presented in this book is the x86-64 that has evolved over the years from the Intel 8086 processor. The GNU programming environment is used, and the operating system kernel is Linux.

The basic guidelines I followed in creating this book are:

- One should avoid writing in assembly language except when absolutely necessary.
- Learning is easier if it builds upon concepts you already know.
- "Real world" hardware and software make a more interesting platform for learning theoretical concepts.
- The tools used for teaching should be inexpensive and readily available.

It may seem strange that I would recommend against assembly language programming in a book largely devoted to the subject. Well, C was introduced in 1978 specifically for low-level programming. C code is much easier to write and to maintain than assembly language. C compilers have evolved to a point where they produce better machine code than all but the best assembly language programmers can. In addition, the hardware technology has increased such that there is seldom any significant advantage in writing the most efficient machine code. In short, it is hardly ever worth the effort to write in assembly language.

You might well ask why you should study assembly language, given that I think you should avoid writing in it. I believe very strongly that the best programmers have a good understanding of how computer hardware works. I think this principle holds in most fields: the best drivers understand how automobiles work; the best musicians understand how their instrument works; etc.

So this is *not* a book on how to write programs in assembly language. Most of the programs you will be asked to write will be in assembly language, but they are very simple programs intended to illustrate the concepts. I believe that this book will help you to become a better programmer in any programming language, even if you never write another line of assembly language.

Two issues arise immediately when studying assembly language:

- I/O interaction with a user through even the keyboard and screen is a very complex problem, well beyond the programming expertise of a beginner.
- There is an almost endless variety of instructions that can be used.

There are several ways to deal with these problems in a textbook. Some books use a simple operating system for I/O, e.g., MS-DOS. Others provide libraries of I/O functions that are specific for the examples in the book. Several textbooks deal with the instruction set issue by presenting a simplified "idealized" architecture with a small number of instructions that is intended to illustrate the concepts.

In keeping with the "real world" criterion of this book, it deals with these two issues by:

Preface xvii

1. showing you how to call the I/O functions already available in the C Standard Library, and

2. presenting only a small subset of the available instructions.

This has the additional advantage of not requiring additional software to be installed. In general, all the programming discussed in the book and be done on any of the common Linux distributions that has been set up for software development with few or no changes.

Readers who wish to write assembly language programs that do not use the C runtime environment should read Sections 8.5 (page 177) and 15.6 (page 345).

Stand-alone assembly language programs.

If you do decide to write more complex programs in assembly language there are several programs. other excellent books on that topic; see the Bibliography on page 485. And, of course, you would want the manufacturer's programming manuals; see for example [2] – [6] and [14] – [18]. The goal here is to provide you with an introductory "look under the hood" of a high-level language at the hardware that lies below.

This book also provides an introduction to computer hardware architecture. The view is from a programmer's eye. Other excellent books provide implementation details. You need to understand many of the implementation details, e.g., pipelining, caches, in order to write highly optimized programs. This book provides the introduction that prepares you for learning about more advanced architectural concepts.

This is not the place to argue about operating systems. I could rationalize my choice of GNU/Linux, but I could also rationalize using others. Therefore, I will simply state that I believe that GNU/Linux provides an excellent environment for studying programming in an academic setting. One of the more important features of the GNU programming environment with respect to the goals of this book is the close integration of C/C++ and assembly language. In addition, I like GNU/Linux.

I wish to comment on my use of "GNU/Linux" instead of the simpler "Linux." Much has been written about these names. A good source of the various arguments can be found at www.wikipedia.org. The two main points are that (a) Linux is only the kernel, and (b) all general-purpose distributions rely on many GNU components for the remaining systems software. Although "Linux" has become essentially a synomym for "GNU/Linux," this book could not exist without the GNU components, e.g., the assembler (as), the link editor (ld), the make program, etc. Therefore, I wish to acknowledge the importance of the GNU project by using the full "GNU/Linux" name.

In some ways, the x86-64 instruction set architecture is not the best choice for studying computer architecture. It maintains backwards compatibility and is thus somewhat more complicated at the instruction set level. However, it is by far the most widely deployed architecture on the desktop and one of the least expensive way to set up a system where these concepts can be studied.

Assembly language is my favorite subject in computer science, but I have taught the subject to enough students to know that, realistically, it probably will not be the same for you. However, please keep your eye on the long term. I am confident that material presented in this book will help you to become a better programmer, and if you do enjoy assembly language, you will have a good introduction to a more advanced study of it.

Assumed Background

You should have taken an introductory class in programming, preferably in C, C++, or Java. The high-level language used in this book is C, however all the C programming is simple. I am confident that the C programming examples in Chapters 2 and 3 will provide sufficient C programming concepts to make the rest of the book very usable, regardless of the language you learned in your introductory class.

I believe that more experienced programmers who wish to write for the x86-64 architecture can also benefit from reading this book. In principle, these programmers can learn everything they need to know from reading the appropriate manuals. However, I have found that it is usually helpful to have an overview of a new architecture before tackling the manuals. This book should provide that overview. In this sense, I believe that this book can provide a good "introduction" to using the manuals.

xviii Preface

Learning from this Book

This book is intended for a one-semester, four unit course. Our course format at Sonoma State University consists of three hours of lecture and a two – three hour supervised lab session per week. Many of the exercises in each chapter provide good in-lab exercises for supervised labs.

Solutions to almost all the chapter exercises are provided in Appendix E. Students should attempt to solve an exercise *before* looking at the answer for hints. But I think it helps the learning process if a student can see a solution while attempting his or her own solution.

If you have an electronic copy of this book, do *not* copy and paste code. Think about it — typing in the code forces you to read every single character. Yes, it is very tedious, but you will learn much more this way. I'm assuming here that your goal is to learn the material, not simply to get the example programs to work. They are rather silly programs, so just getting them to work is not of much use.

Additional resources related to this book, including an errata, can be found on my website, bob.cs.sonoma.edu.

Development Environment

Most developers use an Integrated Development Environment (IDE), which hides the process of building a program from source code. In this book we use the component programs individually so that you can see what is taking place.

The examples in this book were compiled or assembled on a computer running Ubuntu 9.04. The development programs used were:

- gcc version 4.3.3
- as version 2.19.1

In most cases compilation was done with no optimization (-00) because the goal is to study concepts, not create the most efficient code.

The examples should work in any x86_64 GNU development environment with gcc and as (binutils) installed. However, the machine code generated by the compiler may differ depending on its specific configuration and version. You will begin looking at compiler-generated assembly language in Chapter 7. What you see in your environment may differ from the examples in this book, but the differences should be consistent as you continue through the rest of the book.

You should also keep in mind that the programs used for development may have bugs. Yes, nobody is perfect. For example, when I upgraded my Ubuntu system from 9.04 to 9.10, the GNU assembler was upgraded from 2.19 to 2.20. The newer version had a bug that caused the line numbering in a particular listing file to start from 0 instead of 1. (It affected the C source code in Listing 7.6 on page 145; the numbers have been corrected in this listing.) Fortunately, this bug did not affect the quality of the final program, but it could cause some confusion to the programmer.

Organization of the Book

Data storage formats are covered in Chapters 2 and 3. Chapter 2 introduces the binary and hexadecimal number systems and presents the ASCII code for storing character data. Decimal integers, both signed and unsigned, are discussed in Chapter 3 along with the code used to store them. We use C programs to explore the concepts in Chapter 3. The C examples also provide an introduction to programming in C for those who have not used it yet. This introduction to C will be sufficient for the rest of the book.

Chapters 4 and 5 get down to the actual hardware level. Chapter 4 introduces the mathematics and electronic circuits used to build computers. There is a section on basic electronic circuit elements for those who are new to electronics. Then Chapter 5 moves on to some of the more common logic circuits used in computers. It ends with a discussion of memory implementations.

Do *not* copy and paste code!

Preface xix

If the book is being used for a software-only course, the instructor could consider skipping over these two chapters

Chapter 6 introduces the central processing unit (CPU) and its relationship to memory and I/O. There is a description of how to use the gdb debugger to view the registers in the CPU. The basic set of registers used by programmers in the x86-64 architecture is given in this chapter.

Assembly language programming is introduced in Chapter 7. The topic is introduced by showing how to create a file containing the assembly language generated by the gcc compiler from C code. The basic assembly language template for a function is introduced, both for 64-bit and 32-bit mode. There is an overall sketch of how assemblers and linkers work.

In Chapter 8 we see how automatic variables are allocated on the stack, how values are assigned to them, and how functions are called. Argument passing, both in registers and on the stack, is discussed. The chapter shows how to call the write, read, printf, and scanf C Standard Library functions for user I/O. There is also a section on writing standalone programs that do not use the C environment and use the syscall instruction for direct operating system I/O.

Chapter 9 gives an introduction to machine code. There is a discussion of the REX codes used in 64-bit mode. Two instructions, mov and add, are used as examples.

Program control flow, specifically repetition and binary decision, are covered in in Chapter 10. Conditional jumps are discussed in this chapter.

Chapter 11 discusses how to write your own functions and use the arguments passed to it. Both the 64-bit and 32-bit function interface techniques are described.

Bit-level logical and shift operations are covered in Chapter 12. The multiplication and division instructions are also discussed.

Arrays and structs are discussed in Chapter 13. This chapter includes a discussion of how simple C++ objects are implemented at both the C and the assembly language level.

Until this point in the book we have been using integers. In Chapter 14 we introduce formats for storing fractional values, including some IEEE 754 formats. In 64-bit mode the gcc compiler uses SSE2 instructions for floating point, but x87 instructions are used in 32-bit mode. The chapter gives an introduction to both instruction sets.

Exceptions and interrupts are discussed in Chapter 15. Chapter 16 is an introduction to hardware level I/O. Since most students will never do I/O at this level, this is another chapter that could be skipped.

A summary of the instructions used in this book is provided in Appendix A.5. At this point, there is only a list of the instructions. Eventually, there will be a description of each of them.

Appendix B is a highly simplified discussion of the fundamental concepts of the make facility. Appendix C provides a very brief tutorial on using gdb for assembly language programs.

Appendix D gives a very brief introduction to the gcc syntax for embedding assembly language in a C function.

Almost all the solutions to the chapter exercises are provided in Appendix E. These can be useful for students who wish to use the exercises for self study; if you find yourself getting stuck on a problem, peek at the solution for some hints. Instructors are encouraged to discuss these solutions with their students. There is much to be learned from looking at another person's solution and thinking about how you might do it better.

The Bibliography lists a small fraction of the many books I have consulted when learning this material. I urge you to look at this list of books. I believe that you will want at least some of them in your reference library.

Suggested Usage

- Our course at Sonoma State University covers each chapter approximately in the book's order. The programming exercises in Chapters 2 and 3 get the students used to using the lab right from the beginning of the course. Hardware simulators are used in the lab for Chapters 4 and 5.
- $\bullet\,$ A pure assembly language course could easily omit Chapters 4 and 5.
- In a curriculum where binary numbers are covered in another course Chapters 2 and 3 could be skimmed. I recommend covering the C coding examples in Chapters 2 and 3 for

xx Preface

students who have not programmed in the language. This would provide an introduction to C that should be adequate for the rest of the book.

• Experienced programmers who are using this book to learn x86-64 assembly language on their own should be able to skim the first five chapters. I believe that the remaining chapters would provide a good "primer" for reading the appropriate manuals.

Production of the Book

I used $\LaTeX 2_{\varepsilon}$ to typeset and draw the figures for this book. The main text font is New Century Schoolbook and the font for code is Bera Mono scaled by 85%.

Acknowledgements

I would like to thank the many students who have taken assembly language from me. They have asked many questions that caused me to think about the subject and how I can better explain it. They are the main reason I have written this book.

My special thanks go to David Tran, a student who used this book in a class taught by Michael Lyle at Santa Rosa Junior College in Fall 2010. David caught many of my typos and errors, and gave me many helpful suggestions for clarifying my writing. I am very grateful for his careful reading of the book and the time he spent providing me with his comments. It is definitely a better book as a result of his diligence.

I wish to thank Richard Gordon, Lynn Stauffer, Allan B. Cruse, Michael Lyle, and Suzanne Rivoire for their thorough proofreading and critique of the previous versions of this book. By teaching from this book they have caught many of my errors and provided many excellent suggestions for clarifying the presentation.

In addition, I would like to thank my partner, João Barretto, for encouraging me to write this book and putting up with my many hours spent at my computer.

Chapter 1

Introduction

My goal is to make this book available as inexpensively as possible, but I would appreciate being paid for the work I did to write and produce it. As you know, a textbook like this would ordinarily cost 50 - 100 if it were published through a mainstream publisher. The author would probably get 5 - 15 of that cost. I am trying a different way to get paid a "royalty" here.

I have made the book freely available in pdf format at bob.cs.sonoma.edu. Corrections, updates, etc. for the book will also be posted there. As you can see from my copyright notice above, you can only be charged the cost of the printing or copying service for a print copy. I am leaving it up to you to decide how much of a "royalty" this book is worth to you and how much you can afford to pay.

If you wish to pay me a "royalty" for my work please send it to my personal email account, plantz@cdsl.net, using either

- your Amazon account at payments.amazon.com or
- your PayPal account at www.paypal.com

Both systems have a "Send Money" feature.

I want to emphasize that this is entirely voluntary on your part. The most important thing is for this book to serve your needs in learning this material. I would appreciate hearing any feedback you have about how I can improve the book to meet this goal.

Unlike most assembly language books, this one does not emphasize writing programs in assembly language. Higher-level languages, e.g., C, C++, Java, are much better for that. You should avoid writing in assembly language whenever possible.

You may wonder why you should study assembly language at all. The usual reasons given are:

- 1. Assembly language is more efficient. This does not always hold. Modern compilers are excellent at optimizing the machine code that is generated. Only a very good assembly language programmer can do better, and only in some situations. Assembly language programming is very tedious, even for the best programmers. Hence, it is very expensive. The possible gains in efficiency are seldom worth the added expense.
- 2. *There are situations where it must be used*. This is more difficult to evaluate. How do you know whether assembly language is required or not?

Both these reasons presuppose that you know the assembly language equivalent of the translation that your compiler does. Otherwise, you would have no way of deciding whether you can write a more efficient program in assembly language, and you would not know the machine level limitations of your higher-level language. So this book begins with the fundamental high-level

language concepts and "looks under the hood" to see how they are implemented at the assembly language level.

There is a more important reason for reading this book. The interface to the hardware from a programmer's view is the *instruction set architecture* (ISA). This book is a description of the ISA of the x86 architecture as it is used by the C/C++ programming languages. Higher-level languages tend to hide the ISA from the programmer, but good programmers need to understand it. This understanding is bound to make you a better programmer, even if you never write a single assembly language statement after reading this book.

Some of you will enjoy assembly language programming and wish to carry on. If your interests take you into systems programming, e.g., writing parts of an operating system, writing a compiler, or even designing another higher-level language, an understanding of assembly language is required. There are many challenging opportunities in programming embedded systems, and much of the work in this area demands at least an understanding of the ISA. This book serves as an introduction to assembly language programming and prepares you to move on to the intermediate and advanced levels.

In his book *The Design and Evolution of C*++[32] Bjarne Stroustrup nicely lists the purposes of a programming language:

- a tool for instructing machines
- · a means of communicating between programmers
- a vehicle for expressing high-level designs
- a notation for algorithms
- a way of expressing relationships between concepts
- a tool for experimentation
- a means of controlling computerized devices.

It is assumed that you have had at least an introduction to programming that covered the first five items on the list. This book focuses on the first item — instructing machines — by studying assembly language programming of a 64-bit x86 architecture computer. We will use C as an example higher-level language and study how it instructs the computer at the assembly language level. Since there is a one-to-one correspondence between assembly language and machine language, this amounts to a study of how C is used to instruct a machine (computer).

You have already learned that a compiler (or interpreter) translates a program written in a higher-level language into machine language, which the computer can execute. But what does this mean? For example, you might wonder:

- How is an integer stored in memory?
- How is a computer instructed to implement an if-else construct?
- What happens when one function calls another function? How does the computer know how to return to the statement following the function call statement?
- How is a computer instructed to display a simple character string for example, "Hello, world" on the screen?

It is the goal of this book to answer these and many other questions. The specific higher-level programming language concepts that are addressed in this book include:

General concept	C/C++ implementation
Program organization	Functions, variables,
	literals
Allocation of variables for	int, char
storage of primitive data	
types — integers,	
characters	
Program flow control	while and for; if-else
constructs - loops,	
two-way decision	
Simple arithmetic and	+, -, *, /, %, &,
logical operations	
Boolean operators	!, &&,
Data organization	Arrays, structs, classes
constructs — arrays,	(C++ only)
records, objects	
Passing data to/from	Function parameter lists;
named procedures	return values
Object operations	Invoking a member
	function (C++ only)

This book assumes that you are familiar with these programming concepts in C, C++, and/or Java.

1.1 Computer Subsystems

We begin with a very brief overview of computer hardware. The presentation here is intended to provide you with a rough context of how things fit together. In subsequent chapters we will delve into more details of the hardware and how it is controlled by software.

We can think of computer hardware as consisting of three separate subsystems as shown in Fig. 1.1.

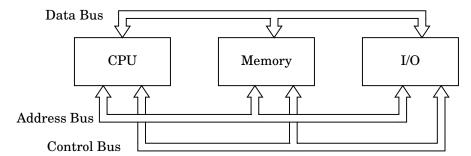


Figure 1.1: Subsystems of a computer. The CPU, Memory, and I/O subsystems communicate with one another via the three buses.

Central Processing Unit (CPU) controls most of the activities of the computer, performs the arithmetic and logical operations, and contains a small amount of very fast memory.

Memory provides storage for the instructions for the CPU and the data they manipulate.

Input/Output (I/O) communicates with the outside world and with mass storage devices (e.g., disks).

When you create a new program, you use an editor program to write your new program in a high-level language, for example, C, C++, or Java. The editor program sees the source code

for your new program as data, which is typically stored in a file on the disk. Then you use a compiler program to translate the high-level language statements into machine instructions that are stored in a disk file. Just as with the editor program, the compiler program sees both your source code and the resulting machine code as data.

When it comes time to execute the program, the instructions are read from the machine code disk file into memory. At this point, the program is a sequence of instructions stored in memory. Most programs include some constant data that are also stored in memory. The CPU executes the program by fetching each instruction from memory and executing it. The data are also fetched as needed by the program.

This computer model — both the program instructions and data are stored in a memory unit that is separate from the processing unit — is referred to as the *von Neumann architecture*. It was described in 1945 by John von Neumann [35], although other computer science pioneers of the day were working with the same concepts. This is in contrast to a fixed-program computer, e.g., a calculator. A compiler illustrates one of the benefits of the von Neumann architecture. It is a program that treats the source file as data, which it translates into an executable binary file that is also treated as data. But the executable binary file can also be run as a program.

A downside of the von Neumann architecture is that a program can be written to view itself as data, thus enabling a self-modifying program. GNU/Linux, like most modern, general purpose operating systems, prohibits applications from modifying themselves.

Most programs also access I/O devices, and each access must also be programmed. I/O devices vary widely. Some are meant to interact with humans, for example, a keyboard, a mouse, a screen. Others are meant for machine readable I/O. For example, a program can store a file on a disk or read a file from a network. These devices all have very different behavior, and their timing characteristics differ drastically from one another. Since I/O device programming is difficult, and every program makes use of them, the software to handle I/O devices is included in the operating system. GNU/Linux provides a rich set of functions that an applications programmer can use to perform I/O actions, and we will call upon these services of GNU/Linux to perform our I/O operations. Before tackling I/O programming, you need to gain a thorough understanding of how the CPU executes programs and interacts with memory.

The goal of this book is study how programs are executed by the computer. We will focus on how the program and data are stored in memory and how the CPU executes instructions. We leave I/O programming to more advanced books.

1.2 How the Subsystems Interact

The subsystems in Figure 1.1 communicate with one another via buses. You can think of a bus as a communication pathway with a protocol specifying exactly how the pathway is used. The buses shown here are logical groupings of the signals that must pass between the three subsystems. A given bus implementation may not have physically separate paths for each of the three types of signals. For example, the PCI bus standard uses the same physical pathway for the address and the data, but at different times. Control signals indicate whether there is an address or data on the lines at any given time.

A program consists of a sequence of instructions that is stored in memory. When the CPU is ready to execute the next instruction in the program, the location of that instruction in memory is placed on the *address bus*. The CPU also places a "read" signal on the *control bus*. The memory subsystem responds by placing the instruction on the *data bus*, where the CPU can then read it. If the CPU is instructed to read data from memory, the same sequence of events takes place.

If the CPU is instructed to store data in memory, it places the data on the data bus, places the location in memory where the data is to be stored on the address bus, and places a "write" signal on the control bus. The memory subsystem responds by copying the data on the data bus into the specified memory location.

If an instruction calls for reading or writing data from memory or to memory, the next instruction in the program sequence cannot be read from memory over the same bus until the current instruction has completed the data transfer. This conflict has given rise to another stored-program architecture. In the *Harvard architecture* the program and data are stored in

different memories, each with its own bus connected to the CPU. This makes it possible for the CPU to access both program instructions and data simultaneously. The issues should become clearer to you in Chapter 6.

In modern computers the bus connecting the CPU to external memory modules cannot keep up with the execution speed of the CPU. The slowdown of the bus is called the **von Neumann bottleneck**. Almost all modern CPU chips include some cache memory, which is connected to the other CPU components with much faster internal buses. The cache memory closest to the CPU commonly has a Harvard architecture configuration to achieve higher throughput of data processing.

CPU interaction with I/O devices is essentially the same as with memory. If the CPU is instructed to read a piece of data from an input device, the particular device is specified on the address bus and a "read" signal is placed on the control bus. The device responds by placing the data item on the data bus. And the CPU can send data to an output device by placing the data item on the data bus, specifying the device on the address bus, and placing a "write" signal on the control bus. Since the timing of various I/O devices varies drastically from CPU and memory timing, special programming techniques must be used. Chapter 16 provides an introduction to I/O programming techniques.

These few paragraphs are intended to provide you a very general overall view of how computer hardware works. The rest of the book will explore many of these concepts in more depth. Most of the discussion is at the ISA level, but we will also take a peek at the hardware implementation. In Chapter 4 we will even look at some transistor circuits. The goal of the book is to provide you with an introduction to computer architecture as seen from a software point of view.

Chapter 2

Data Storage Formats

In this chapter, we begin exploring how data is encoded for storage in memory and write some programs in C to explore these concepts. One way to look at a modern computer is that it is made up of:

- Millions, perhaps billions, of two-state switches. Each of the switches is always in one state or the other, and it stays in that state until the control unit changes its state or the power is turned off. and
- A control unit that can
 - detect the state of each switch and
 - possibly change the state of that switch and/or other switches.

There is also provision for communicating with the world outside the computer — input and output.

2.1 Bits and Groups of Bits

Since nearly everything that takes place in a computer, from the instructions that make up a program to the data these instructions act upon, depends upon two-state switches, we need a good notation to use when talking about the states of the switches. It is clearly very cumbersome to say something like,

"The first switch is on, the second one is also on, but the third is off, while the fourth is on."

We need a more concise notation, which leads us to use numbers. When dealing with numbers, you are most familiar with the decimal system, which is based on ten, and thus uses ten digits.

Decimal digits: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9

Two number systems are useful when talking about the states of switches — the binary system, which is based on two,

Binary digits: 0, 1

and the hexadecimal system, which is based on sixteen.

Hexadecimal digits: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, a, b, c, d, e, f

A less commonly used number system is octal, which is based on eight.

Octal digits: 0, 1, 2, 3, 4, 5, 6, 7

"Binary digit" is commonly shortened to "bit." It is common to bypass the fact that a bit represents the state of a switch, and simply call the switches "bits." Using bits (binary digits), the state of an we can greatly simplify the previous statement about switches as 1101, which you can think of on-off switch. as representing "on, on, off, on." It does not matter whether we use 1 to represent "on" and 0 as "off," or 0 as "on" and 1 as "off." We simply need to be consistent. You will see that this will occur naturally; it will not be an issue.

Hexadecimal is commonly used as a shorthand notation to specify bit patterns. Since there are sixteen hexadecimal digits, each one can be used to specify uniquely a group of four bits. Table 2.1 shows the correspondence between each possible group of four bits and one hexadecimal binary. digit. Thus, the above English statement specifying the state of four switches can be written with a single hexadecimal digit, d.

Four binary digits (bits) One hexadecimal digit

Hexadecimal is shorthand for

Memorize this table.

	9
0000	Θ
0001	1
0010	2
0011	3
0100	4
0101	5
0110	6

7 8 q h

C d е

Table 2.1: Hexadecimal representation of four bits.

When it is not clear from the context, we will indicate the base of a number in this text with a subscript. For example, 100₁₀ is written in decimal, 100₁₆ is written in hexadecimal, and 100₂ is written in binary.

Hexadecimal digits are especially convenient when we need to specify the state of a group of, say, 16 or 32 switches. In place of each group of four bits, we can write one hexadecimal digit. For example,

```
0110 1100 0010 1010_2 = 6c2a_{16}
```

0111 1000

1001

1010 1011

1100

1101 1110

1111

0000 0001 0010 0011 1010 1011 1100 1101 $_2$ = 0123 abcd $_{16}$

A single bit has limited usefulness when we want to store data. We usually need to use a group of bits to store a data item. This grouping of bits is so common that most modern computers only allow a program to access bits in groups of eight. Each of these groups is called a byte.

byte: A contiguous group of bits, usually eight.

and

Historically, the number of bits in a byte has varied depending on the hardware and the operating system. For example, the CDC 6000 series of scientific mainframe computers used a six-bit byte. Nearly everyone uses "byte" to mean eight bits today.

Another important reason to learn hexadecimal is that the programming language may not allow you to specify a value in binary. Prefixing a number with 0x (zero, lower-case ex) in C/C++ means that the number is expressed in hexadecimal. There is no C/C++ syntax for writing a number in binary. The syntax for specifying bit patterns in C/C++ is shown in Table 2.2. (The 32-bit pattern for the decimal value 123 will become clear after you read Sections 2.2 and 2.3.) Although the GNU assembler, as, includes a notation for specifying bit patterns in binary, it is usually more convenient to use the C/C++ notation.

Specifying bit patterns in your source code.

	Prefix	Example	32-bit pattern (binary)
Decimal:	none	123	0000 0000 0000 0000 0000 0000 0111 1011
Hexadecimal:	0x	0x123	0000 0000 0000 0000 0000 0001 0010 0011
Octal:	0	0123	00 000 000 000 000 000 000 000 001 010 011

Table 2.2: C/C++ syntax for specifying literal numbers. Octal bits grouped by three for readability.

2.2 Mathematical Equivalence of Binary and Decimal

We have seen in the previous section that binary digits are the natural way to show the states of switches within the computer and that hexadecimal is a convenient way to show the states of up to four switches with only one character. Now we explore some of the mathematical properties of the *binary number system* and show that it is numerically equivalent to the more familiar decimal (base 10) number system. Showing the mathematical equivalence of the hexadecimal and decimal number systems is left as exercises at the end of this chapter.

We will consider only integers at this point. The mathematical presentation here does, of course, generalize to fractional values. Simply continue the exponents of the radix, r, on to negative values, i.e., n-1, n-2, ..., 1, 0, -1, -2, This will be covered in detail in Chapter 14.

By convention, we use a *positional notation* when writing numbers. For example, in the decimal number system, the integer 123 is taken to mean

$$1 \times 100 + 2 \times 10 + 3 \times 1$$

or

$$1 \times 10^2 \times 10^1 + 3 \times 10^0$$

The right-most digit (3 in this example) is the *least significant digit* because it "counts" the least in the total value of this number. The left-most digit (1 in this example) is the *most significant digit* because it "counts" the most in the total value of this number.

The *base* or *radix* of the decimal number system is ten. There are ten symbols for representing the digits: $0, 1, \ldots, 9$. Moving a digit one place to the left increases its value by a factor of ten, and moving it one place to the right decreases its value by a factor of ten. The positional notation generalizes to any radix, r:

$$d_{n-1} \times r^{n-1} + d_{n-2} \times r^{n-2} + \dots d_1 \times r^1 + d_0 \times r^0$$
(2.1)

where there are n digits in the number and each $d_i = 0, 1, ..., r-1$. The radix in the binary number system is 2, so there are only two symbols for representing the digits: $d_i = 0, 1$. We can specialize Equation 2.1 for the binary number system as

$$d_{n-1} \times 2^{n-1} + d_{n-2} \times 2^{n-2} + \dots + d_1 \times 2^1 + d_0 \times 2^0$$
 (2.2)

where there are n digits in the number and each $d_i = 0, 1$.

For example, the eight-digit binary number 1010 0101 is interpreted as

$$1 \times 2^7 + 0 \times 2^6 + 1 \times 2^5 + 0 \times 2^4 + 0 \times 2^3 + 1 \times 2^2 + 0 \times 2^1 + 1 \times 2^0$$

If we evaluate this expression in decimal, we get

$$128 + 0 + 32 + 0 + 0 + 4 + 1 + 1 = 165_{10}$$

This example illustrates the method for converting a number from the binary number system to the decimal number system. It is stated in Algorithm 2.1.

Algorithm 2.1: Convert binary to unsigned decimal.

input: An integer expressed in binary.

output: Decimal expression of the integer.

- 1 Compute the value of each power of 2 in Equation 2.2 in decimal.
- 2 Multiply each power of two by its corresponding d_i .
- 3 Sum the terms in Equation 2.2.

Be careful to distinguish the binary number system from writing the state of a bit in binary. Each switch in the computer can be represented by a bit (binary digit), but the entity that it represents may not even be a number, much less a number in the binary number system. For example, the bit pattern 0011 0010 represents the character "2" in the ASCII code for characters. But in the binary number system 0011 $0010_2 = 50_{10}$.

See Exercises 2-8 and 2-9 for converting hexadecimal to decimal.

2.3 Unsigned Decimal to Binary Conversion

In Section 2.2 (page 8), we covered conversion of a binary number to decimal. In this section we will learn how to convert an unsigned decimal integer to binary. Unsigned numbers have no sign. Signed numbers can be either positive or negative. Say we wish to convert a unsigned decimal integer, N, to binary. We set it equal to the expression in Equation 2.2, giving us:

A positive signed number is *not* unsigned.

$$N = d_{n-1} \times 2^{n-1} + d_{n-2} \times 2^{n-2} + \dots + d_1 \times 2^1 + d_0 \times 2^0$$
(2.3)

where $d_i = 0$ or 1. Dividing both sides by 2,

$$(N/2) + \frac{r_0}{2} = d_{n-1} \times 2^{n-2} + d_{n-2} \times 2^{n-3} + \dots + d_1 \times 2^0 + d_0 \times 2^{-1}$$
 (2.4)

where / is the div operator and the remainder, r_0 , is 0 or 1. Since (N/2) is an integer and all the terms except the 2^{-1} term on the right-hand side of Equation 2.4 are integers, we can see that $d_0 = r_0$. Subtracting $r_0/2$ from both sides gives,

$$(N/2) = d_{n-1} \times 2^{n-2} + d_{n-2} \times 2^{n-3} + \dots + d_1 \times 2^0$$
(2.5)

Dividing both sides of Equation 2.5 by two:

$$(N/4) + \frac{r_1}{2} = d_{n-1} \times 2^{n-3} + d_{n-2} \times 2^{n-4} + \dots + d_1 \times 2^{-1}$$
(2.6)

From Equation 2.6 we see that $d_1 = r_1$. It follows that the binary representation of a number can be produced from right (low-order bit) to left (high-order bit) by applying the algorithm shown in Algorithm 2.2.

Algorithm 2.2: Convert unsigned decimal to binary.

input: An integer expressed in decimal.

output: Binary expression of the integer, one bit at a time, right-to-left.

- 1 quotient ← theInteger;
- **2 while** quotient $\neq 0$ **do**
- $\mathfrak{s} \mid \mathsf{nextBit} \Leftarrow \mathsf{quotient} \ \% \ 2;$
- quotient \Leftarrow quotient / 2;

Example 2-a

Convert 123₁₀ to binary.

```
123 \div 2 = 61 + 1/2
                                      \Rightarrow d_0 = 1
          61 \div 2 = 30 + 1/2 \implies d_1 = 1
          30 \div 2 = 15 + 0/2
                                      \Rightarrow d_2 = 0
            15 \div 2 = 7 + 1/2
                                      \Rightarrow d_3 = 1
             7 \div 2 = 3 + 1/2
                                      \Rightarrow d_4 = 1
             3 \div 2 = 1 + 1/2 \implies d_5 = 1
             1 \div 2 = 0 + 1/2 \implies d_6 = 1
             0 \div 2 = 0 + 0/2 \implies d_7 = 0
So
         123_{10}
                   = d_7 d_6 d_5 d_4 d_3 d_2 d_1 d_0
                    = 01111011_2
```

 $= 7b_{16}$

There are times in some programs when it is more natural to specify a bit pattern rather than a decimal number. We have seen that it is possible to easily convert between the number bases, so you could convert the bit pattern to a decimal value, then use that. It is usually much easier to think of the bits in groups of four, then convert the pattern to hexadecimal.

For example, if your algorithm required the use of zeros alternating with ones:

```
0101 0101 0101 0101 0101 0101 0101 0101
```

this can be converted to the decimal value

1431655765

or the hexadecimal value (shown here in C/C++ syntax)

Use hex to specify bit patterns.

0x5555555

Once you have memorized Table 2.1, it is clearly much easier to work with hexadecimal for bit patterns.

The discussion in these two sections has dealt only with unsigned integers. The representation of signed integers depends upon some architectural features of the CPU and will be discussed in Chapter 3 when we discuss computer arithmetic.

2.4 Memory — A Place to Store Data (and Other Things)

We now have the language necessary to begin discussing the major components of a computer. We start with the memory.

You can think of memory as a (very long) array of bytes. Each byte has a particular location (or address) within this array. That is, you could think of

Each byte in memory is numbered.

memory[123]

as specifying the 124^{th} byte in memory. (Don't forget that array indexing starts with 0.) We generally do not use array notation and simply use the index number, calling it the *address* or *location* of the byte.

address (or location): Identifies a specific byte in memory.

The address of a particular byte never changes. That is, the 957^{th} byte from the beginning of memory will always remain the 957^{th} byte. However, the state of each of the bits — either 0 or 1 — in any given byte can be changed.

Computer scientists typically express the address of each byte in memory in hexadecimal. So we would say that the 957^{th} byte is at address 0x3bc.

From the discussion of hexadecimal in Section 2.1 (page 6) we can see that the first sixteen bytes in memory have the addresses 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, a, b, c, d, e, and f. Using the notation

address: contents (bit-pattern-at-the-address)

we show the (possible) contents (the state of the bits) of each of the first sixteen bytes of memory in Figure 2.1.

Address	Contents	Address	Contents
00000000:	0110 1010	00000008:	1111 0000
0000001:	1111 0000	00000009:	0000 0010
00000002:	0101 1110	0000000a:	0011 0011
0000003:	0000 0000	0000000b:	0011 1100
00000004:	1111 1111	0000000c:	1100 0011
00000005:	0101 0001	000000d:	0011 1100
00000006:	1100 1111	0000000e:	0101 0101
00000007:	0001 1000	0000000f:	1010 1010

Figure 2.1: Possible contents of the first sixteen bytes of memory; addresses shown in hexadecimal, contents shown in binary. Note that the addresses are shown as 32-bit values. (*The contents shown here are arbitrary.*)

The state of each bit is indicated by a binary digit (bit) and is arbitrary in Figure 2.1. The bits have been grouped by four for readability. The grouping of the memory bits also shows that we can use two hexadecimal digits to indicate the state of the bits in each byte, as shown in Figure 2.2. For example, the contents of memory location 0000000b are 3c. That means the eight bits that make up the twelfth byte in memory are set to the bit pattern 0011 1100.

Address	Contents	Address	Contents
00000000:	6a	00000008:	f0
00000001:	f0	00000009:	02
00000002:	5e	0000000a:	33
00000003:	00	0000000b:	3c
00000004:	ff	0000000c:	c3
00000005:	51	000000d:	3c
00000006:	cf	0000000e:	55
00000007:	18	0000000f:	aa

Each hexadecimal digit represents four bits.

Figure 2.2: Repeat of Figure 2.1 with contents shown in hex. *Two* hexadecimal characters are required to specify *one* byte.

Once a bit (switch) in memory is set to either zero or one, it stays in that state until the control unit actively changes it or the power is turned off. There is an exception. Computers also contain memory in which the bits are permanently set. Such memory is called *Read Only Memory* or *ROM*.

Read Only Memory (ROM): Each bit is permanently set to either zero or one. The control unit can read the state of each bit but cannot change it.

You have probably heard the term "RAM" used for memory that can be changed by the control unit. RAM stands for Random Access Memory. The terminology used here is inconsistent. "Random access" means that it takes the same amount of time to access any byte in the memory. This is in contrast to memory that is sequentially accessible, e.g., tape. The length of time it takes to access a byte on tape depends upon the physical location of the byte with respect to the current tape position.

Random Access Memory (RAM): The control unit can read the state of each bit and can change it.

A bit can be used to store data. For example, we could use a single bit to indicate whether a student passes a course or not. We might use 0 for "not passed" and 1 for "passed." A single bit allows only two possible values of a data item. We cannot for example, use a single bit to store a course letter grade — A, B, C, D, or F.

How many bits would we need to store a letter grade? Consider all possible combinations of two bits:

Since there are only four possible bit combinations, we cannot represent all five letter grades with only two bits. Let's add another bit and look at all possible bit combinations:

There are eight possible bit patterns, which is more than sufficient to store any one of the five letter grades. For example, we may choose to use the code

Letter Grade	Bit Pattern
A	000
В	001
\mathbf{C}	010
D	011
${f F}$	100

This example illustrates two issues that a programmer must consider when storing data in memory in addition to its location(s):

How many bits are required to store the data? In order to answer this we need to know how many different values are allowed for the particular data item. Study the two examples above — two bits and three bits — and you can see that adding a bit doubles the number of possible values. Also, notice that we might not use all the possible bit patterns.

What is the code for storing the data? Most of the data we deal with in everyday life is not expressed in terms of zeros and ones. In order to store it in computer memory, the programmer must decide upon a code of zeros and ones to use. In the above (three bit) example we used 000 to represent a letter grade of A, 001 to represent B, etc.

Thus, in the grade example, a programmer may choose to store the letter grade at byte number bffffed0 in memory. If the grade is "A", the programmer would set the bit pattern at location bffffed0 to 00_{16} . If the grade is "C", the programmer would set the bit pattern at location bffffed0 to 02_{16} . In this example, one of the jobs of an assembly language programmer would be to determine how to set the bit pattern at byte number bffffed0 to the appropriate bit pattern.

High-level languages use *data types* to determine the number of bits and the storage code. For example, in C you may choose to store the letter grades in the above example in a char variable and use the characters 'A', 'B',...,'F' to indicate the grade. In Section 2.7 you will learn that the compiler would use the following storage formats:

Letter Grade	Bit Pa	attern
A	0100	0001
В	0100	0010
\mathbf{C}	0100	0011
D	0100	0100
म	0100	0101

And programming languages, even assembly language, allow programmers to create symbolic names for memory addresses. The compiler (or assembler) determines the correspondence between the programmer's symbolic name and the numerical address. The programmer can refer to the address by simply using the symbolic name.

2.5 Using C Programs to Explore Data Formats

Before writing any programs, I urge you to read Appendix B on writing Makefiles, even if you are familiar with them. Many of the problems I have helped students solve are due to errors in their Makefile. And many of the Makefile errors go undetected due to the default behavior of the make program.

We will use the C programming language to illustrate these concepts because it takes care of the memory allocation problem, yet still allows us to get reasonably close to the hardware. You probably learned to program in the higher-level, object-oriented paradigm using either C++ or Java. C does not support the object-oriented paradigm.

C is a *procedural programming* language. The program is divided into functions. Since there are no classes in C, there is no such thing as a member function. The programmer focuses on the algorithms used in each function, and all data items are explicitly passed to the functions.

We can see how this works by exploring the C Standard Library functions, printf and scanf, which are used to write to the screen and read from the keyboard. We will develop a program in C using printf and scanf to illustrate the concepts discussed in the previous sections. The header file required by either of these functions is:

```
#include <stdio.h>
```

which includes the prototype statements for the printf and scanf functions:

```
int printf(const char *format, ...);
int scanf(const char *format, ...);
```

printf is used to display text on the screen. The first argument, format, controls the text display. keyboard. At its simplest, format is simply an explicit text string in double quotes. For example,

```
printf("Hello, world.\n");
would display
Hello, world.
```

If there are additional arguments, the format string must specify how each of these arguments is to be converted for display. This is accomplished by inserting a conversion code within the format string at the point where the argument value is to be displayed. Each conversion code is introduced by the '%' character. For example, Listing 2.1 shows how to display both an int variable and a float variable.

```
/*
2 * intAndFloat.c
3 * Using printf to display an integer and a float.
4 * Bob Plantz - 4 June 2009
5 */
```

Use printf for formatted output to the screen and scanf for formatted input from the keyboard.

¹The text string is a null-terminated array of characters as described in Section 2.7 (page 19). This is not the C++ string class.

```
6 #include <stdio.h>
7
8 int main(void)
9 {
10    int anInt = 19088743;
11    float aFloat = 19088.743;
12
13    printf("The integer is %i and the float is %f\n", anInt, aFloat);
14
15    return 0;
16 }
```

Listing 2.1: Using printf to display numbers.

A run of the program in Listing 2.1 on my computer gave (user input is **boldface**):

```
bob$ ./intAndFloat
The integer is 19088743 and the float is 19088.742188
bob$
```

Yes, the float really is that far off. This will be explained in Chapter 14.

Some common conversion codes are d or i for integer, f for float, x for hexadecimal. The conversion codes may include other characters to specify properties like the field width of the display, whether the value is left or right justified within the field, etc. We will not cover the details here. You should read man page 3 for printf to learn more.

scanf is used to read from the keyboard. The format string typically includes only conversion codes that specify how to convert each value as it is entered from the keyboard and stored in the following arguments. Since the values will be stored in variables, it is necessary to pass the address of the variable to scanf. For example, we can store keyboard-entered values in x (an int variable) and y (a float variable) thusly

scanf needs the address of each variable.

```
scanf("%i %f", &x, &y);
```

The use of printf and scanf are illustrated in the C program in Listing 2.2, which will allow us to explore the mathematical equivalence of the decimal and hexadecimal number systems.

```
1 /*
   * echoDecHex.c
   * Asks user to enter a number in decimal and one
   * in hexadecimal then echoes both in both bases
   * Bob Plantz - 4 June 2009
 #include <stdio.h>
10 int main(void)
11 {
      int x;
12
      unsigned int y;
13
14
      while(1)
15
16
           printf("Enter a decimal integer (0 to quit): ");
17
           scanf("%i", &x);
18
           if (x == 0) break;
19
20
           printf("Enter a bit pattern in hexadecimal (0 to quit): ");
21
           scanf("%x", &y);
22
           if (y == 0) break;
23
```

```
24
           printf("%i is stored as %#010x, and\n", x, x);
25
           printf("%#010x represents the decimal integer %i\n\n", y, y);
27
28
      printf("End of program.\n");
29
30
      return 0:
31
32
 }
```

Listing 2.2: C program showing the mathematical equivalence of the decimal and hexadecimal number systems.

Here is an example run of this program (user input is **boldface**):

```
bob$ ./echoDecHex
Enter a decimal integer: 123
Enter a bit pattern in hexadecimal: 7b
123 is stored as 0x0000007b, and
0x0000007b represents the decimal integer 123
Enter a decimal integer: 0
End of program.
bob$
```

Let us walk through the program in Listing 2.2.

- The program declares two ints, x and y.
- The user is prompted to enter an integer in decimal, and the user's response is read from the keyboard and stored in the memory allocated for x. The conversion code text string passed to scanf, "%i", causes scanf to interpret the user's keystrokes as representing a decimal integer. Note that the address of x, &x, must be passed to scanf so that it can store the integer at the memory location named x.
- The program next prompts the user to enter a bit pattern in hexadecimal. In this case the conversion code text string passed to scanf is "%x", which causes scanf to interpret the user's keystrokes as representing hexadecimal digits. Note that the address of y, &y, must be passed to scanf so that it can store the integer at the memory location named y.
- Now let us examine the two printf function calls that display the results. The "%i" conversion code is straightforward. The value of the corresponding variable is displayed in decimal at that point in the text string.
- The "\#010x" conversion factor is more interesting. (If you are at a computer read section 3 of the man page for printf as you follow through this description.) The basic conversion is specified by the "x" character; it causes the value to be displayed in hexadecimal. The "#" character causes an "alternate form" to be used for the display, which is the C syntax for hexadecimal numbers; that is, the value is prefaced by 0x when it is displayed. The '0' character immediately after the '#' character causes '0' to be used as the fill character. The number "10" causes the display to occupy at least ten characters (the field width).
- Look carefully at the output from this program above. The bit patterns used to store the data input by the user, shown in hexadecimal, show that the unsigned ints are stored in the binary number system (see Section 2.2, page 8 and Section 2.3, page 9). That is, 123₁₀ is stored as $0000007b_{16}$.

The program in Listing 2.2 demonstrates a very important concept — hexadecimal is used as a human convenience for stating bit patterns. A number is not inherently binary, decimal, or hexadecimal. A particular value can be expressed in a precisely equivalent way in each of these humans. three number bases. For that matter, it can be expressed equivalently in any number base.

2.6 Examining Memory With gdb

Now that we have started writing programs, you need to learn how to use the GNU debugger, gdb. It may seem premature at this point. The programs are so simple, they hardly require debugging. Well, it is better to learn how to use the debugger on a simple example than on a complicated program that does not work. In other words, tackle one problem at a time.

There is a better reason for learning how to use gdb now. You will find that it is a very valuable tool for learning the material in this book, even when you write bug-free programs.

gdb has a large number of commands, but the following are the ones that will be used in this section:

Useful gdb commands.

- li *lineNumber* lists ten lines of the source code, centered at the specified line number.
- break *sourceFilename:lineNumber* sets a breakpoint at the specified line in the source file. Control will return to gdb when the line number is encountered.
- run begins execution of a program that has been loaded under control of gdb.
- cont continues execution of a program that has been running.
- print *expression* evaluate expression and display its value.
- printf "format", var1, var2,... displays the values of the vars, using the format specified in the format string.²
- x/nfs memoryAddress displays (examine) n values in memory in format f of size s starting at memoryAddress.

We will use the program in Listing 2.1 to see how gdb can be used to explore the concepts in more depth. Here is a screen shot of how I compiled the program then used gdb to control the execution of the program and observe the memory contents. My typing is **boldface** and the session is annotated in *italics*. Note that you will probably see different addresses if you replicate this example on your own (Exercise 2-27).

bob\$ gcc -g -o intAndFloat intAndFloat.c

The "-g" option is required. It tells the compiler to include debugger information in the executable program.

```
bob$ gdb ./intAndFloat
GNU gdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
(qdb) li
1 /*
2 * intAndFloat.c
  * Using printf to display an integer and a float.
  * Bob Plantz - 4 Jun 2009
  */
6 #include <stdio.h>
8 int main(void)
```

²Follows the same pattern as the C Standard Library printf.

```
10    int anInt = 19088743;
(gdb)
11    float aFloat = 19088.743;
12
13    printf("The integer is %i and the float is %f\n", anInt, aFloat);
14
15    return 0;
16
(gdb)
```

The li command lists ten lines of source code. The display ends with the (gdb) prompt. Pushing the return key will repeat the previous command, and li is smart enough to display the next (up to) ten lines.

```
(gdb) br 13
Breakpoint 1 at 0x400523: file intAndFloat.c, line 13.
```

I set a breakpoint at line 13. When the program is executing, if it ever gets to this statement, execution will pause before the statement is executed, and control will return to gdb.

The run command causes the program to start execution from the beginning. When it reaches our breakpoint, control returns to gdb.

```
(gdb) print anInt

$1 = 19088743

(gdb) print aFloat

$2 = 19088.7422
```

floats are *not* more accurate than ints.

The print command displays the value currently stored in the named variable. There is a round off error in the float value. As mentioned above, this will be explained in Chapter 14.

```
(gdb) printf "anInt = %i and aFloat = %f\n", anInt, aFloat anInt = 19088743 and aFloat = 19088.742188 (gdb) printf "anInt = %#010x and aFloat = %#010x\n", anInt, aFloat and in hex, anInt = 0x01234567 and aFloat = 0x00004a90
```

The printf command can be used to format the displayed values. The formatting string is essentially the same as for the printf function in the C Standard Library.

Take a moment and convert the hexadecimal values to decimal. The value of anInt is correct, but the value of aFloat is 19088_{10} . The reason for this odd behavior is that the x formatting character in the printf function first converts the value to an int, then displays that int in hexadecimal. In C/C++, conversion from float to int truncates the fractional part.

Fortunately, gdb provides another command for examining the contents of memory directly — that is, the actual bit patterns. In order to use this command, we need to determine the actual memory addresses where the anInt and aFloat variables are stored.

```
(gdb) print &anInt
$3 = (int *) 0x7fff86b6ddfc
(gdb) print &aFloat
$4 = (float *) 0x7fff86b6ddf8
```

The address-of operator (&) can be used to print the address of a variable. Notice that the addresses are very large. The system is in 64-bit mode, which uses 64-bit addresses. (gdb does not display leading zeros.)

```
(qdb) help x
```

Examine memory: x/FMT ADDRESS.

ADDRESS is an expression for the memory address to examine.

FMT is a repeat count followed by a format letter and a size letter.

Format letters are o(octal), x(hex), d(decimal), u(unsigned decimal), t(binary), f(float), a(address), i(instruction), c(char) and s(string). Size letters are b(byte), h(halfword), w(word), g(giant, 8 bytes). The specified number of objects of the specified size are printed according to the format.

Defaults for format and size letters are those previously used. Default count is 1. Default address is following last thing printed with this command or "print".

The x command is used to examine memory. Its help message is very brief, but it tells you everything you need to know.

(gdb) x/1dw 0x7fff86b6ddfc 0x7fff86b6ddfc: 19088743 (gdb) x/1fw 0x7fff86b6ddf8 0x7fff86b6ddf8: 19088.7422

The x command can be used to display the values in their stored data type.

(gdb) x/1xw 0x7fff86b6ddfc

0x7fff86b6ddfc: 0x01234567 (gdb) x/4xb 0x7fff86b6ddfc

0x7fff86b6ddfc: 0x67 0x45 0x23 0x01

This shows little endian, as explained below.

The display of the anInt variable in hexadecimal, which is located at memory address 0x7fff86b6ddfc, also looks good. However, when displaying these same four bytes as separate values, the least significant byte appears first in memory.

Notice that in the multiple byte display, the first byte (the one that contains 0x67) is located at the address shown on the left of the row. The next byte in the row is at the subsequent address (0x7fff86b6ddfd). So this row displays each of the bytes stored at the four memory addresses 0x7fff86b6ddfc, 0x7fff86b6ddfd, 0x7fff86b6ddff, and 0x7fff86b6ddff.

(adb) x/1fw 0x7fff86b6ddf8

0x7fff86b6ddf8: 19088.7422 (gdb) x/1xw 0x7fff86b6ddf8 0x7fff86b6ddf8: 0x4695217c (gdb) x/4xb 0x7fff86b6ddf8

0x7fff86b6ddf8: 0x7c 0x21 0x95 0x46

The display of the aFloat variable in hexadecimal simply looks wrong. This is due to the storage format of floats, which is very different from ints. It will be explained in Chapter 14.

The byte by byte display of the aFloat variable in hexadecimal also shows that it is stored in little endian order.

```
(gdb) cont
Continuing.
The integer is 19088743 and the float is 19088.742188
Program exited normally.
(gdb) q
bob$
```

Finally, I continue to the end of the program. Notice that gdb is still running and I have to quit the gdb program.

This example illustrates a property of the x86 processors. Data is stored in memory with the least significant byte in the lowest-numbered address. This is called *little endian* storage. Look again at the display of the four bytes beginning at 0x7fff56597b58 above. We can rearrange this display to show the bit patterns at each of the four locations:

7fff86b6ddfc: 67 7fff86b6ddfd: 45 7fff86b6ddfe: 23 7fff86b6ddff: 01

Yet when we look at the entire 32-bit value in hexadecimal the bytes seem to be arranged in the proper order:

```
7fff86b6ddfc: 01234567
```

When we examine memory one byte at a time, each byte is displayed in numerically ascending addresses. At first glance, the value appears to be stored backwards.

We should note here that many processors, e.g., the PowerPC architecture, use *big endian* storage. As the name suggests, the most significant ("biggest") byte is stored in the first (lowest-numbered) memory address. If we ran the program above on a big endian computer, we would see (assuming the variable is located at the same address):

```
(gdb) x/1xw 0x7fff86b6ddfc
0x7fff86b6ddfc: 0x01234567
(gdb) x/4xb 0x7fff86b6ddfc
0x7fff86b6ddfc: 0x01 0x23 0x45 0x67
```

Big endian computer, not ours!

Generally, you do not need to worry about endianess in a program. It becomes a concern when data is stored as one data type, then accessed as another.

2.7 ASCII Character Code

Almost all programs perform a great deal of text string manipulation. Text strings are made up of groups of characters. The first program you wrote was probably a "Hello world" program. If you wrote it in C, you used a statement like:

```
printf("Hello world\n");
and in C++:
    cout << "Hello world\n";</pre>
```

When translating either of these statements into machine code, the compiler must do two things:

- store each of the characters in a location in memory where the control unit can access them, and
- generate the machine instructions to write the characters on the screen.

bit		bit		bit		bit	
pat.	char	pat.	char	pat.	char	pat.	char
00	NUL (Null)	20	(Space)	40	@	60	•
01	SOH (Start of Hdng)	21	!	41	Α	61	a
02	STX (Start of Text)	22	II	42	В	62	b
03	ETX (End of Text)	23	#	43	С	63	С
04	EOT (End of Transmit)	24	\$	44	D	64	d
05	ENQ (Enquiry)	25	%	45	Е	65	е
06	ACK (Acknowledge)	26	&	46	F	66	f
07	BEL (Bell)	27	,	47	G	67	g
80	BS (Backspace)	28	(48	Н	68	h
09	HT (Horizontal Tab)	29)	49	I	69	i
0a	LF (Line Feed)	2a	*	4a	J	6a	j
0b	VT (Vertical Tab)	2b	+	4b	K	6b	k
0c	FF (Form Feed)	2c	,	4c	L	6c	l
0d	CR (Carriage Return)	2d	-	4d	М	6d	m
0e	S0 (Shift Out)	2e		4e	N	6e	n
0f	SI (Shift In)	2f	/	4f	0	6f	0
10	DLE (Data-Link Escape)	30	0	50	Р	70	p
11	DC1 (Device Control 1)	31	1	51	Q	71	q
12	DC2 (Device Control 2)	32	2	52	R	72	r
13	DC3 (Device Control 3)	33	3	53	S	73	S
14	DC4 (Device Control 4)	34	4	54	T	74	t
15	NAK (Negative ACK)	35	5	55	U	75	u
16	SYN (Synchronous idle)	36	6	56	V	76	V
17	ETB (End of Trans. Block)	37	7	57	W	77	W
18	CAN (Cancel)	38	8	58	Χ	78	X
19	EM (End of Medium)	39	9	59	Υ	79	у
1a	SUB (Substitute)	3a	:	5a	Z	7a	Z
1b	ESC (Escape)	3b	;	5b	[7b	{
1c	FS (File Separator)	3c	<	5c	\	7c	1
1d	GS (Group Separator)	3d	=	5d]	7d	}
1e	RS (Record Separator)	3e	>	5e	^	7e	\sim
1f	US (Unit Separator)	3f	?	5f	_	7f	DEL (Delete)

Table 2.3: ASCII code for representing characters. The bit patterns (bit pat.) are shown in hexadecimal.

We start by considering how a single character is stored in memory. There are many codes for representing characters, but the most common one is the American Standard Code for Information Interchange — *ASCII* (pronounced "ask' e"). It uses seven bits to represent each character. Table 2.3 shows the bit patterns for each character in hexadecimal.

Use the "man ascii" GNU/Linux command.

It is not the sort of table that you would memorize. However, you should become familiar with some of its general characteristics. In particular, notice that the numerical characters, '0' ... '9', are in a contiguous sequence in the code, 0x30 ... 0x39. The same is true of the lower case alphabetic characters, 'a' ... 'z', and of the upper case characters, 'A' ... 'Z'. Notice that the lower case alphabetic characters are numerically higher than the upper case.

The codes in the left-hand column of Table 2.3 (00 through 1f) define *control characters*. The ASCII code was developed in the 1960s for transmitting data from a sender to a receiver. If you read some of names of the control characters, you can imagine how they could be used to control the "dialog" between the sender and receiver. They are generated on a keyboard by holding the control key down while pressing an alphabetic key. For example, ctrl-d generates an EOT (End of Transmission) character.

ASCII codes are usually stored in the rightmost seven bits of an eight-bit byte. The eighth bit (the highest-order bit) is called the parity bit. It can be used for error detection in the following way. The sender and receiver would agree ahead of time whether to use even parity or odd parity.

Even parity means that an even number of ones is always transmitted in each characters; odd means that an odd number of ones is transmitted. Before transmitting a character in the ASCII code, the sender would adjust the eighth bit such that the total number of ones matched the even or odd agreement. When the code was received, the receiver would count the ones in each eight-bit byte. If the sum did not match the agreement, the receiver knew that one of the bits in the byte had been received incorrectly. Of course, if two bits had been incorrectly received, the error would pass undetected, but the chances of this double error are remarkably small. Modern communication systems are much more reliable, and parity is seldom used when sending individual bytes.

In some environments the high-order bit is used to provide a code for special characters. A little thought will show you that even all eight bits will not support all languages, e.g., Greek, Russian, Chinese. The Unicode character coding has recently been adopted to support documents that use other characters. Java uses Unicode, and C libraries that support Unicode are also available.

A computer system that uses an ASCII video system (most modern computers) can be programmed to send a byte to the screen. The video system interprets the bit pattern as an ASCII code (from Table 2.3) and displays the corresponding character on the screen.

Getting back to the text string, "Hello world\n", the compiler would store this as a constant char array. There must be a way to specify the length of the array. In a C-style string this is accomplished by using the sentinel character NUL at the end of the string. So the compiler must C-style strings allocate thirteen bytes for this string. An example of how this string is stored in memory is are terminated shown in Figure 2.3. Notice that C uses the LF character as a single newline character even character, not a though the C syntax requires that the programmer write two characters — '\n'. The area of newline. memory shown includes the three bytes immediately following the text string.

Address	Contents
4004a1:	48
4004a2:	65
4004a3:	6c
4004a4:	6c
4004a5:	6f
4004a6:	20
4004a7:	77
4004a8:	6f
4004a9:	72
4004aa:	6c
4004ab:	64
4004ac:	0a
4004ad:	00
4004ae:	25
4004af:	73
4004b0:	00

Figure 2.3: A text string stored in memory by a C compiler, including three "garbage" bytes after the string. Values are shown in hexadecimal. A different compilation will likely place the string in a different memory location.

In Pascal the length of the string is specified by the first byte in the string. It is taken to be an 8-bit unsigned integer. So C-style strings are typically processed by sentinel-controlled loops, and countcontrolled string processing loops are more common in Pascal.

The C++ string class has additional features, but the actual text string is stored as a C-style text string within the C++ string instance.

2.8 write and read Functions

In Section 2.5 (page 13) we used the printf and scanf functions to convert between C data types and single characters written on the screen or read from the keyboard. In this section, we introduce the two *system call* functions write and read. We will use the write function to send bytes to the screen and the read function to get bytes from the keyboard.

When these low-level functions are used, it is the programmer's responsibility to convert between the individual characters and the C/C++ data type storage formats. Although this clearly requires more programming effort, we will use them instead of printf and scanf in order to better illustrate data storage formats.

Use write to output raw bytes to the screen and read to input raw bytes from the keyboard.

The C program in Listing 2.3 shows how to display the character 'A' on the screen. This program allocates one byte of memory as a char variable and names it "aLetter." This byte is initialized to the bit pattern 41_{16} ('A' from Table 2.3). The write function is invoked to display the character on the screen. The arguments to write are:

- 1. STDOUT_FILENO is defined in the system header file, unistd.h.³ It is the GNU/Linux file descriptor for standard out (usually the screen). GNU/Linux sees all devices as files. When a program is started the operating system opens a path to standard out and assigns it as file descriptor number 1.
- 2. &aLetter is a memory address. The sequence of one-byte bit patterns starting at this address will be sent to standard out.
- 3. 1 (one) is the number of bytes that will be sent (to standard out) as a result of this call to write.

The program returns a 0 to the operating system.

```
* oneChar.c
   * Writes a single character on the screen.
   * Bob Plantz - 4 June 2009
  #include <unistd.h>
 int main(void)
9
10 {
      char aLetter = 'A';
11
      write(STDOUT_FILENO, &aLetter, 1); // STDOUT_FILENO is
12
                                             // defined in unistd.h
13
      return 0;
14
15 }
```

Listing 2.3: Displaying a single character using C.

Now let's consider a program that echoes each character entered from the keyboard. We will allocate a single char variable, read one character into the variable, and then echo the character for the user with a message. The program will repeat this sequence one character at a time until the user hits the return key. The program is shown in Listing 2.4.

A run of this program gave:

When testing
your programs,
read the screen
very carefully.

You

```
bob$ ./echoChar1
Enter one character: a
You entered: abob$
bob$
```

³It is generally better to use symbolic names instead of plain numbers. The names provide implicit documentation, and the value may be redefined in some future version.

which probably looks like the program is not working correctly to you.

Look more carefully at the program behaviour. It illustrates some important issues when using the read function. First, how many keys did the user hit? There were actually two keystrokes, the "a" key and the return key. In fact, the program waits until the user hits the return key. The user could have used the delete key to change the character before hitting the return key.

This shows that keyboard input is *line buffered*. Even though the application program is requesting only one character, the operating system does not honor this request until the user hits the return key, thus entering the entire line. Since the line is buffered, the user can edit the line before entering it.

Next, the program correctly echoes the first key hit then terminates. Upon program termination the shell prompt, bob\$, is displayed. But the return character is still in the input buffer, and the shell program reads it. The result is the same as if the user had simply pressed the return key in response to the shell prompt.

```
* echoChar1.c
   * Echoes a character entered by the user.
   * Bob Plantz - 4 June 2009
  #include <unistd.h>
  int main(void)
10 {
      char aLetter;
11
12
      write(STDOUT_FILENO, "Enter one character: ", 21); // prompt user
13
      read(STDIN_FILENO, &aLetter, 1);
                                                            // one character
14
      write(STDOUT_FILENO, "You entered: ", 13);
                                                            // message
15
      write(STDOUT_FILENO, &aLetter, 1);
16
17
18
      return 0;
19 }
```

Listing 2.4: Echoing characters entered from the keyboard.

Here is another run where I entered three characters before hitting the return key:

```
bob$ ./echoChar1
Enter one character: abc You entered: abob$ bc
bc 1.06.94
Copyright 1991-1994, 1997, 1998, 2000, 2004, 2006 Free Software Foundation, Inc.
This is free software with ABSOLUTELY NO WARRANTY. For details type 'warranty'.
```

Again, the program correctly echoes the first character, but the two characters bc remain in the input line buffer. When echoChar1 terminates the shell program reads the remaining characters from the line buffer and interprets them as a command. In this case, bc is a program, so the shell executes that program.

An important point of the program in Listing 2.4 is to illustrate the simplistic behavior of the write and read functions. They work at a very low level. It is your responsibility to design your program to interpret each byte that is written to the screen or read from the keyboard.

2.9 Exercises

2-1	($\S 2.1$) Express the following bit patterns in h	exa	adecimal.
	a) 0100 0101 0110 0111	c)	1111 1110 1101 1100
	b) 1000 1001 1010 1011	d)	0000 0010 0101 0000
9 9	(§2.1) Express the following bit patterns in b	ino	***
Z-Z	(§2.1) Express the following bit patterns in b	ma	ry.
	a) 83af	c)	aaaa
	b) 9001	d)	5555
2-3	(§2.1) How many bits are represented by each	h o	f the following?
	a) ffffffff	d)	1111 ₁₆
	b) 7fff58b7def0	e)	00000000_2
	c) 1111 ₂	f)	00000000_{16}
2-4	(§2.1) How many hexadecimal digits are req	uire	ed to represent each of the following?
	a) eight bits	d)	ten bits
	b) thirty-two bits	e)	twenty bits
	c) sixty-four bits	f)	seven bits
	(§2.2) Referring to Equation 2.1, what are the number 29458254? The hexadecimal number	294	458254?
2-6	(§2.2) Convert the following 8-bit numbers to	o de	cimal by hand:
	a) 10101010	e)	10000000
	b) 01010101	f)	01100011
	c) 11110000	g)	01111011
	d) 00001111	h)	11111111
2-7	(§2.2) Convert the following 16-bit numbers	to d	lecimal by hand:
	a) 1010101111001101	e)	1000000000000000
	b) 0001001000110100	f)	0000010000000000
	c) 11111111011011100	g)	111111111111111
	d) 0000011111010000	h)	0011000000111001
2-8	(§2.2) In Section 2.2 we developed an algor Develop a similar algorithm for converting algorithm to convert the following 8-bit num	fro	m hexadecimal to decimal. Use your new
	a) a0	e)	64
	b) 50	f)	0c
	c) ff	g)	11
	d) 89	h)	c8

2.9. EXERCISES 25

2-9 (§2.2) In Section 2.2 we developed an algorithm for converting from binary to decimal. Develop a similar algorithm for converting from hexadecimal to decimal. Use your new algorithm to convert the following 16-bit numbers to decimal by hand:

a) a000
b) ffff
c) 0400
d) 1111
e) 8888
f) 0190
g) abcd
h) 5555

2-10 (§2.3) Convert the following unsigned, decimal integers to 8-bit hexadecimal representation

a) 100
b) 123
c) 10
d) 88
e) 255
f) 16
g) 32
h) 128

2-11 (§2.3) Convert the following unsigned, decimal integers to 16-bit hexadecimal representation.

a) 1024
b) 1000
c) 32768
d) 32767
e) 256
f) 65635
g) 2005
h) 43981

- **2-12** (§2.3) Invent a code that would allow us to store letter grades with plus or minus. That is, the grades A, A-B+, B, B-, ..., D, D-, F. How many bits are required for your code?
- **2-13** (§2.3) We have shown how to write only the first sixteen addresses in hexadecimal in Figure 2.1. How would you write the address of the seventeenth byte (byte number sixteen) in hexadecimal? Hint: If we started with zero in the decimal number system we would use a '9' to represent the tenth item. How would you represent the eleventh item in the decimal system?
- **2-14** (§2.3) Redo the table in Figure 2.2 such that it shows the memory contents in decimal.
- **2-15** (§2.3) Redo the table in Figure 2.2 such that it shows each of the sixteen bytes containing its byte number. That is, byte number 0 contains zero, number 1 contains one, etc. Show the contents in binary.
- **2-16** (§2.3) Redo the table in Figure 2.2 such that it shows each of the sixteen bytes containing its byte number. That is, byte number 0 contains zero, number 1 contains one, etc. Show the contents in hexadecimal.
- **2-17** (§2.4) You want to allocate an area in memory for storing any number between 0 and 4,000,000,000. This memory area will start at location 0x2fffeb96. Give the addresses of each byte of memory that will be required.
- **2-18** (§2.4) You want to allocate an area in memory for storing an array of 30 bytes. The first byte will have the value 0x00 stored in it, the second 0x01, the third 0x02, etc. This memory area will start at location 0x001000. Show what this area of memory looks like.
- **2-19** (§2.4) In Section 2.4 we invented a binary code for representing letter grades. Referring to that code, express each of the grades as an 8-bit unsigned decimal integer.
- **2-20** (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-6. Note that printf and scanf do not have a conversion for binary. Check the answers in hexadecimal.

- **2-21** (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-7. Note that printf and scanf do not have a conversion for binary. Check the answers in hexadecimal.
- 2-22 (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-8.
- 2-23 (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-9.
- **2-24** (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-10.
- **2-25** (§2.5) Enter the program in Listing 2.2 and check your answers for Exercise 2-11.
- **2-26** (§2.5) Modify the program in Listing 2.2 so that it also displays the addresses of the x and y variables. Note that addresses are typically displayed in hexadecimal. How many bytes does the compiler allocate for each of the ints?
- **2-27** (§2.6) Enter the program in Listing 2.1. Follow through the program with gdb as in the example in Section 2.6. Using the numbers you get, explain where the variables anInt and aFloat are stored in memory and what is stored in each location.
- **2-28** (§2.7) Write a program in C that creates a display similar to Figure 2.3. Hints: use a char* variable to process the string one character at a time; use %08x to format the display of the address.
- **2-29** (§2.6) Enter the program in Listing 2.4. Explain why there seems to be an extra prompt in the program. Set breakpoints at both the read statement and at the following write statement. Examine the contents of the aLetter variable before the read and after it. Notice that the behavior of gdb seems very strange when dealing with the read statement. Explain the behavior. Hint: Both gdb and the program you are debugging use the same keyboard for input.
- **2-30** (§2.8) Modify the program in Listing 2.4 so that it prompts the user to enter an entire line, reads the line, then echoes the entire line. Read only one byte at a time from the keyboard.
- **2-31** (§2.8) This is similar to Exercise 2-30 except that when the newline character is read from the keyboard (and stored in memory), the program replaces the newline character with a NUL character. The program has now read a line from the keyboard and stored it as a C-style text string. If your algorithm is correct, you will be able to read the text string using the read low-level function and display it with the printf library function thusly (assuming the variable where the string is stored is named theString),

```
printf("%s\n", theString);
```

and have only one newline. Notice that this program discards the newline generated when the user hits the return key. This is the same behavior you would see if you used

```
scanf("\%s", theString);
in C, or
cin >> theString;
```

in C++ to read the input text from the keyboard.

- 2-32 (§2.8) Write a C program that prompts the user to enter a line of text on the keyboard then echoes the entire line. The program should continue echoing each line until the user responds to the prompt by not entering any text and hitting the return key. Your program should have two functions, writeStr and readLn, in addition to the main function. The text string itself should be stored in a char array in main. Both functions should operate on NUL-terminated text strings.
 - writeStr takes one argument, a pointer to the string to be displayed and it returns
 the number of characters actually displayed. It uses the write system call function to
 write characters to the screen.

2.9. EXERCISES 27

• readLn takes two arguments, one that points to the char array where the characters are to be stored and one that specifies the maximum number of characters to store in the char array. Additional keystrokes entered by the user should be read from the OS input buffer and discarded. readLn should return the number of characters actually stored in the char array. readLn should not store the newline character ('\n'). It uses the read system call function to read characters from the keyboard.

Chapter 3

Computer Arithmetic

We next turn our attention to a code for storing decimal integers. Since all storage in a computer is by means of on/off switches, we cannot simply store integers as decimal digits. Exercises 3-1 and 3-2 should convince you that it will take some thought to come up with a good code that uses simple on/off switches to represent decimal numbers.

Another very important issue when talking about computer arithmetic was pointed out in Section 2.3 (page 9). Namely, the programmer must decide how many bits will be used for storing the numbers before performing any arithmetic operations. This raises the possibility that some results will not fit into the allocated number of bits. As you will see in Section 9.2 (page 189), the computer hardware provides for this possibility with the Carry Flag (CF) and Overflow Flag (OF) in the rflags register located in the CPU. Depending on what you intend the bit patterns to represent, either the Carry Flag or the Overflow Flag (not both) will indicate the correctness of the result. However, most high level languages, including C and C++, do not check the CF and OF after performing arithmetic operations.

3.1 Addition and Subtraction

Computers perform addition in the binary number system.¹ The operation is really quite easy to understand if you recall all the details of performing addition in the decimal number system by hand. Since most people perform addition on a calculator these days, let us review all the steps required when doing it by hand. Consider two two-digit numbers, x = 67 and y = 79. Adding these by hand on paper would look something like:

$$\begin{array}{ccc}
1 & 1 & \longleftarrow carries \\
67 & \longleftarrow x \\
+ & 79 & \longleftarrow y \\
\hline
& 46 & \longleftarrow sum
\end{array}$$

We start by working from the right, adding the two decimal digits in the ones place. 7 + 9 exceeds 10 by 6. We show this by placing a 6 in the ones place in the sum and carrying a 1 to the tens place. Next we add the three decimal digits in the tens place, 1 (the carry into the tens place from the ones place) + 6 + 7. The sum of these three digits exceeds 10 by 4, which we show by placing a 4 in the tens place in the sum and recording the fact that there is an ultimate carry of one. Recall that we had decided to use only two digits, so there is no hundreds place. Using the notation of Equation 2.1 (page 8), we describe addition of two decimal integers in Algorithm

¹Most computer architectures provide arithmetic operations in other number systems, but these are somewhat specialized. We will not consider them in this book.

3.1.

Algorithm 3.1: Add fixed-width decimal integers.

```
\begin{array}{l} \textbf{given: N, number of digits.} \\ \textbf{Starting in the ones place:} \\ \textbf{1 for } i = 0 \textbf{ to } (N - 1) \textbf{ do} \\ \textbf{2} & \text{SUM}_i \Leftarrow (\textbf{X}_i + \textbf{y}_i) \% \textbf{ 10}; \\ \textbf{3} & \text{Carry} \Leftarrow (\textbf{X}_i + \textbf{y}_i) / \textbf{ 10}; \\ \textbf{4} & \text{i} \Leftarrow \textbf{i} + \textbf{1}; \\ \end{array} \qquad // \text{ mod operation} \\ \end{array}
```

Notice that:

- Algorithm 3.1 works because we use a positional notation when writing numbers a digit one place to the left counts ten times more.
- Carry from the current position one place to the left is always 0 or 1.
- The reason we use 10 in the / and % operations is that there are exactly ten digits in the decimal number system : 0, 1, 2, ..., 9.
- Since we are working in an N-digit system, we must restrict our result to N digits. The final carry (0 or 1) must be stated in addition to the N-digit result.

By changing "10" to "2" we get Algorithm 3.2 for addition in the binary number system. The only difference is that a digit one place to the left counts two times more.

Algorithm 3.2: Add fixed-width binary integers.

```
\begin{array}{l} \textbf{given: N, number of bits.} \\ \textbf{Starting in the ones place:} \\ \textbf{1 for } i = 0 \textbf{ to } (N - 1) \textbf{ do} \\ \textbf{2} & \text{Sum}_i \Leftarrow (\textbf{x}_i + \textbf{y}_i) \% \ 2 \ ; \\ \textbf{3} & \text{Carry} \Leftarrow (\textbf{x}_i + \textbf{y}_i) / 2 \ ; \\ \textbf{4} & \text{i} \Leftarrow \textbf{i} + \textbf{1}; \end{array} \qquad // \text{ mod operation} \\ \textbf{4} & \text{mod operation} \end{array}
```

Example 3-a

Compute the sum of x = 10101011 and y = 11001101.

This is how the algorithm was applied.

```
ones place: sum_0 = (1 + 1) \% 2 = 0
carry = (1 + 1) / 2 = 1
twos place:
sum_1 = (1 + 1 + 0) \% 2 = 0
carry = (1 + 1 + 0) / 2 = 1
fours place:
sum_2 = (1 + 0 + 1) \% 2 = 0
carry = (1 + 0 + 1) / 2 = 1
eights place:
sum_3 = (1 + 1 + 1) / 2 = 1
carry = (1 + 1 + 1) / 2 = 1
sixteens place:
sum_4 = (1 + 0 + 0) \% 2 = 1
carry = (1 + 0 + 0) / 2 = 0
```

```
thirty-twos place: sum_5 = (0 + 1 + 0) \% 2 = 1
carry = (0 + 1 + 0) / 2 = 0
sixty-fours place: sum_6 = (0 + 0 + 0) \% 2 = 1
carry = (0 + 0 + 0) / 2 = 0
one hundred twenty-eights place: sum_7 = (0 + 1 + 0) \% 2 = 1
carry = (0 + 1 + 0) / 2 = 0
```

In this eight-bit example the result is 1111 1000, and there is there is no carry beyond the eight bits. The lack of carry is recorded in the rflags register by setting the CF bit to zero.

It should not surprise you that this algorithm also works for hexadecimal. In fact, it works for any radix, as shown in Algorithm 3.3.

Algorithm 3.3: Add fixed-width integers in any radix.

```
\begin{array}{l} \textbf{given: N, number of digits.} \\ \textbf{Starting in the ones place:} \\ \textbf{1 for } i = 0 \textbf{ to } (N - 1) \textbf{ do} \\ \textbf{2} & \text{SUM}_i \Leftarrow (\textbf{X}_i + \textbf{y}_i) \% \textbf{ radix}; \\ \textbf{3} & \text{Carry} \Leftarrow (\textbf{X}_i + \textbf{y}_i) / \textbf{radix}; \\ \textbf{4} & \text{i} \neq \text{i} + \text{1}; \\ \end{array}
```

For hexadecimal:

- A digit one place to the left counts sixteen times more.
- We use 16 in the / and % operations because there are sixteen digits in the hexadecimal number system: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, a, b, c, d, e, f.

Addition in hexadecimal brings up a notational issue. For example,

```
d + 9 = ?? Oops, how do we write this?
```

Although it is certainly possible to perform all the computations using hexadecimal notation, most people find it a little awkward. After you have memorized Table 3.1 it is much easier to:

- convert the (hexadecimal) digit to its equivalent decimal value
- apply our algorithm
- · convert the results back to hexadecimal

Actually, we did this when applying the algorithm to binary addition. Since the conversion of binary digits to decimal digits is trivial, you probably did not think about it. But the conversion of hexadecimal digits to decimal is not as trivial. To see how it works, first recall that the conversion from hexadecimal to binary is straightforward. (You should have memorized Table 2.1 by now.) So we will consider conversion from binary to decimal.

As mentioned above, the relative position of each bit has significance. The rightmost bit represents the ones place, the next one to the left the fours place, then the eights place, etc. In other words, each bit represents 2^n , where n = 0, 1, 2, 3,... and we start from the right. So the binary number 1011 represents:

$$1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$$

This is easily converted to decimal by simply working out the arithmetic in decimal:

$$1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0 = 8 + 0 + 2 + 1 = 11$$

From Table 2.1 on page 7 we see that $1011_2 = b_{16}$, and we conclude that $b_{16} = 11_{10}$. We can add a "decimal" column to the table, giving Table 3.1.

Four binary digits (bits)	One hexadecimal digit	Decimal equivalent	
0000	Θ	0	
0001	1	1	
0010	2	2	
0011	3	3	
0100	4	4	
0101	5	5	
0110	6	6	Memorize this
0111	7	7	table.
1000	8	8	
1001	9	9	
1010	а	10	
1011	b	11	
1100	С	12	
1101	d	13	
1110	е	14	
1111	f	15	

Table 3.1: Correspondence between binary, hexadecimal, and unsigned decimal values for the hexadecimal digits.

Example 3-b _

Compute the sum of x = 0xabcd and y = 0x6089.

$$\begin{array}{cccc}
1 & 011 & \longleftarrow \text{ carries} \\
& \text{abcd} & \longleftarrow x \\
+ & 6089 & \longleftarrow y \\
\hline
& 0c56 & \longleftarrow \text{ sum}
\end{array}$$

Now we can see how Algorithm 3.3 with radix = 16 was applied in order to add the hexadecimal numbers, abcd and 6089. Having memorized Table 3.1, we will convert between hexadecimal and decimal "in our heads."

```
ones place: sum_0 = (d + 9) \% 16 = 6
carry = (d + 9) / 16 = 1
sixteens place: sum_1 = (1 + c + 8) \% 16 = 5
carry = (1 + c + 8) / 16 = 1
two hundred fifty-sixes place: sum_2 = (1 + b + 0) \% 16 = c
carry = (1 + b + 0) / 16 = 0
four thousand ninety-sixes place: sum_3 = (0 + a + 6) \% 16 = 0
carry = (0 + a + 6) / 16 = 1
```

This four-digit example has an ultimate carry of 1, which is recorded in the rflags register by setting the CF to one. The arithmetic was performed by first converting each digit to decimal. It is then a simple matter to convert each decimal value back to hexadecimal (see Table 3.1) to express the final answer in hexadecimal.

number system, you must sometimes *borrow* from the next higher-order digit in the minuend. This is shown in Algorithm 3.4.

Algorithm 3.4: Subtract fixed-width integers in any radix.

```
given: N, number of bits.
   Starting in the ones place, subtract Y from X:
1 for i=0 to (N-1) do
2
       if y_i < x_i then
            difference_i \Leftarrow x_i - y_i;
3
           borrow \Leftarrow 0;
4
        else
5
6
           j \Leftarrow i + 1;
            while X_i = 0 do
7
             j \Leftarrow j + 1;
8
            for j to i do
9
                X_i \Leftarrow X_i - 1;
10
                j \Leftarrow j - 1;
11
12
                X_i \Leftarrow X_i + radix;
       i \Leftarrow i + 1;
```

This algorithm is not as complicated as it first looks.

Example 3-c _

Subtract y = 10101011 from x = 11001101.

The bits have been grouped to improve readability. A 1 in the borrow row indicates that 1 was borrowed from the minuend in that place, which becomes 2 in the next place to the right. A 0 indicates that no borrow was required. This is how the algorithm was applied.

```
ones place:
   difference_0 = 1 - 1 = 0
twos place:
   Borrow from the fours place in the minuend.
   The borrow becomes 2 in the two place.
   difference_1 2 - 1 = 1
fours place:
   Since we borrowed 1 from here, the minuend has a 0 left.
   difference_2 = 0 - 0 = 0
eights place:
   difference_3 = 1 - 1 = 0
sixteens place:
   difference_4 = 0 - 0 = 0
thirty-twos place:
   Borrow from the sixty-fours place in the minuend.
   The borrow becomes 2 in the thirty-two place.
   difference_5 = 2 - 1 = 1
sixty-fours place:
   Since we borrowed 1 from here, the minuend has a 0 left.
   difference_6 = 0 - 0 = 0
one hundred twenty-eights place:
```

$$difference_7 = 1 - 1 = 0$$

This, of course, also works for hexadecimal, but remember that a digit one place to the left counts sixteen times more. For example, consider x = 0x6089 and y = 0xab5d:

$$\begin{array}{cccc}
1 & 101 & \longleftarrow borrows \\
6089 & \longleftarrow x \\
- & ab5d & \longleftarrow y \\
\hline
& b52c & \longleftarrow sum
\end{array}$$

Notice in this second example that we had to borrow from "beyond the width" of the two values. That is, the two values are each sixteen bits wide, and the result must also be sixteen bits. Whether there is borrow "from outside" to the high-order digit is recorded in the CF of the rflags register whenever a subtract operation is performed:

- no borrow from outside \rightarrow CF = 0
- borrow from outside \rightarrow CF = 1

Another way to state this is for unsigned numbers:

- if the subtrahend is equal to or less than the minuend the CF is set to zero
- if the subtrahend is larger than the minuend the CF bit is set to one

3.2 Arithmetic Errors — Unsigned Integers

The binary number system was introduced in Section 2.2 (page 8). You undoubtedly realize by now that it probably is a good system for storing unsigned integers. Don't forget that it does not matter whether we think of the integers as being in decimal, hexadecimal, or binary since they are mathematically equivalent. If we are going to store integers this way, we need to consider the arithmetic properties of addition and subtraction in the binary number system. Since a computer performs arithmetic in binary (see footnote 1 on page 28), we might ask whether addition yields arithmetically correct results when representing decimal numbers in the binary number system. We will use four-bit values to simplify the discussion. Consider addition of the two numbers:

and CF = 0.

So far, the binary number system looks reasonable. Let's try two larger four-bit numbers:

and CF = 1. The result, 2, is arithmetically incorrect. The problem here is that the addition has produced carry beyond the fourth bit. Since this is not taken into account in the result, the answer is wrong.

Now consider subtraction of the two numbers:

 \Box

and CF = 1.

The result, 6, is arithmetically incorrect. The problem in this case is that the subtraction has had to borrow from beyond the fourth bit. Since this is not taken into account in the result, the answer is wrong.

From the discussion in Section 3.1 (page 28) you should be able to convince yourself that these four-bit arithmetic examples generalize to any size arithmetic performed by the computer. After adding two numbers, the Carry Flag will always be set to zero if there is no ultimate carry, or it will be set to one if there is ultimate carry. Subtraction will set the Carry Flag to zero if no borrow from the "outside" is required, or one if borrow is required. These examples illustrate the principle:

• When adding or subtracting two unsigned integers, the result is arithmetically correct if and only if the Carry Flag (CF) is set to zero.

It is important to realize that the CF and OF bits in the rflags register are always set to the appropriate value, 0 or 1, each time an addition or subtraction is performed by the CPU. In particular, the CPU will not ignore the CF when there is no carry, it will actively set the CF to zero.

3.3 Arithmetic Errors — Signed Integers

When representing signed decimal integers we have to use one bit for the sign. We might be tempted to simply use the highest-order bit for this purpose. Let us say that 0 means + and 1 means -. We will try adding (+2) and (-2):

The result, -4, is arithmetically incorrect. We should note here that the problem is the way in which the computer does addition — it performs binary addition on the bit patterns that in themselves have no inherent meaning. There are computers that use this particular code for storing signed decimal integers. They have a special "signed add" instruction. By the way, notice that such computers have both a +0 and a -0!

Most computers, including the x86, use another code for representing signed decimal integers — the *two*'s *complement* code. To see how this code works, we start with an example using the decimal number system.

Say that you have a cassette player and wish to represent both positive and negative positions on the tape. It would make sense to somehow fast-forward the tape to its center and call that point "zero." Most cassette players have a four decimal digit counter that represents tape position. The counter, of course, does not give actual tape position, but a "coded" representation of the tape position. Since we wish to call the center of the tape "zero," we push the counter reset button to set it to 0000.

Now, moving the tape forward — the positive direction — will cause the counter to increment. And moving the tape backward — the negative direction — will cause the counter to decrement. In particular, if we start at zero and move to "+1" the "code" on the tape counter will show 0001. On the other hand, if we start at zero and move to "-1" the "code" on the tape counter will show 9999

Using our tape code system to perform the arithmetic in the previous example -(+2) + (-2):

- 1. Move the tape to (+2); the counter shows 0002.
- 2. Add (-2) by decrementing the tape counter by two.

The counter shows 0000, which is 0 according to our code.

Next we will perform the same arithmetic starting with (-2), then adding (+2):

1. Move the tape to (-2); the counter shows 9998.

2. Add (+2) by incrementing the tape counter by two.

The counter shows 0000, but there is a carry. (9998 + 2 = 0000 with carry = 1.) If we ignore the carry, the answer is correct. This example illustrates the principle:

• When adding two signed integers in the two's complement notation, carry is irrelevant.

The two's complement code uses this pattern for representing signed decimal integers in bit patterns. The correspondence between signed decimal (two's complement), hexadecimal, and binary for four-bit values is shown in Table 3.2.

Four binary digits (bits)	One hexadecimal digit	Decimal equivalent	
1000	8	-8	
1001	9	-7	
1010	а	-6	
1011	b	-5	
1100	С	-4	
1101	d	-3	Bit patterns have
1110	e	-2	no sign; your
1111	f	-1	program does that.
0000	0	0	mat.
0001	1	1	
0010	2	2	
0011	3	3	
0100	4	4	
0101	5	5	
0110	6	6	
0111	7	7	

Table 3.2: Four-bit signed integers, two's complement notation.

We make the following observations about Table 3.2:

- The high-order bit of each positive number is 0.
- The high-order bit of each negative number is 1.
- However, changing the sign of (negating) a number is more complicated than simply changing the high-order bit.
- The code allows for one more negative number than positive numbers.
- The range of integers, x, that can be represented in this code (with four bits) is

$$-8_{10} < x < +7_{10}$$

or

$$-2^{(4-1)} \le x \le +(2^{(4-1)} - 1)$$

The last observation can be generalized for n bits to:

$$-2^{(n-1)} \le x \le +(2^{(n-1)} - 1)$$

In the two's complement code, the negative of any integer, x, is defined as

$$x + (-x) = 2^n \tag{3.1}$$

Notice that 2^n written in binary is "1" followed by n zeros. That is, it requires n+1 bits to represent. Another way of saying this is, "in the n-bit two's complement code adding a number to its negative produces n zeros and carry."

We now derive a method for computing the negative of a number in the two's complement code. Solving Equation 3.1 for -x, we get:

$$-x = 2^n - x \tag{3.2}$$

For example, if we wish to compute -1 in binary (in the two's complement code) in 8 bits, we perform the arithmetic:

$$-1_{10} = 100000000_2 - 00000001_2 = 11111111_2$$

or in hexadecimal:

$$-1_{16} = 100_{16} - 01_{16} = f_{16}$$

This subtraction is error prone, so let's perform a few algebraic manipulations on Equation 3.2, which defines the negation operation. First, we subtract one from both sides:

$$-x - 1 = 2^n - x - 1 \tag{3.3}$$

Rearranging a little:

$$-x-1 = 2^{n}-1-x$$

= $(2^{n}-1)-x$ (3.4)

Now, consider the quantity $(2^n - 1)$. Since 2^n is written in binary as one (1) followed by n zeros, $(2^n - 1)$ is written as n ones. For example, for n = 8:

$$2^8 - 1 = 11111111_2 \tag{3.5}$$

Thus, we can express the right-hand side of Equation 3.4 as

$$2^n - 1 - x = 111 \dots 111_2 - x \tag{3.6}$$

where 111...1112 designates n ones.

You can see how easy the subtraction on the right-hand side of Equation 3.6 is if we consider the previous example of computing -1 in binary in eight bits. Let x = 1, giving:

$$11111111_2 - 00000001_2 = 111111110_2$$

or in hexadecimal:

$$f_{16} - 01_{16} = fe_{16}$$

Another (simpler) way to look at this is

$$2^n - 1 - x = \text{"flip all the bits in x"} \tag{3.7}$$

The value of the right-hand side of Equation 3.7 is called the *reduced radix complement* of x. Since the radix is two, it is common to call this the *one's complement* of x. From Equation 3.4 we see that this computation — the reduced radix complement of x — gives

$$-x-1$$
 = the reduced radix complement of x (3.8)

Now we can easily compute -x by adding one to both sides of Equation 3.8:

$$-x-1+1 =$$
(the reduced radix complement of x) + 1 (3.9)

$$= -x \tag{3.10}$$

This leads us to Algorithm 3.5 for negating any integer stored in the two's complement, n-bit code.

Algorithm 3.5: Negate a number in binary (compute 2's complement).

We use X' to denote the complement of X.

1 $X \Leftarrow X'$;

 $\mathbf{z} \times \mathbf{x} \leftarrow \mathbf{x} + \mathbf{1}$;

Negate in binary.

This process — computing the one's complement, then adding one — is called computing the two's complement.

Be Careful!

- "In two's complement" describes the storage code.
- "Taking the two's complement" is an active computation. If the value the computation is applied to an integer stored in the two's complement notation, this computation is mathematically equivalent to negating the number.

Combining Algorithm 3.5 with observations about Table 3.2 above, we can easily compute the decimal equivalent of any integer stored in the two's complement notation by applying Algorithm 3.6.

Algorithm 3.6: Signed binary-to-decimal conversion.

- 1 **if** the high-order bit is zero **then**
- 2 | compute the decimal equivalent of the number;
- 3 else
- 4 take the two's complement (negate the number);
- compute the decimal equivalent of this result;
- 6 place a minus sign in front of the decimal equivalent;

Example 3-d

The 16-bit integer 5678₁₆ is stored in two's complement notation. Convert it to a signed, decimal integer.

Since the high-order bit is zero, we simply compute the decimal equivalent:

$$5678_{16} = 5 \times 4096 + 6 \times 256 + 7 \times 16 + 8 \times 1$$
$$= 20480 + 1536 + 112 + 8$$
$$= +22136_{10}$$

Example 3-e ____

The 16-bit integer 8765_{16} is stored in two's complement notation. Convert it to a signed, decimal integer.

Since the high-order bit is one, we first negate the number in the two's complement format.

Take the one's complement
$$\Rightarrow$$
 789 \mathbf{a}_{16}
Add one \Rightarrow 789 \mathbf{b}_{16}

Compute the decimal equivalent.

$$789b_{16} = \times 4096 + \times 256 + 9 \times 16 + 11 \times 1$$
$$= 28672 + 2048 + 144 + 11$$
$$= +30875_{10}$$

Place a minus sign in front of the number (since we negated it in the two's complement domain).

$$8765_{16} = -30875_{10}$$

Convert binary to signed decimal.

Algorithm 3.7 shows how to convert a signed decimal number to two's complement binary.

Algorithm 3.7: Signed decimal-to-binary conversion.

- 1 **if** the number is positive **then**
- 2 simply convert it to binary;
- 3 else

Convert signed decimal to binary.

- 4 | negate the number;
- 5 | convert the result to binary;
- 6 compute the two's complement of result in the binary domain;

Example 3-f

Convert the signed, decimal integer +31693 to a 16-bit integer in two's complement notation. Give the answer in hexadecimal.

Since this is a positive number, we simply convert it. The answer is to be given in hexadecimal, so we will repetitively divide by 16 to get the answer.

 $31693 \div 16 = 1980$ with remainder 13 $1980 \div 16 = 123$ with remainder 12 $123 \div 16 = 7$ with remainder 11 $7 \div 16 = 0$ with remainder 7

So the answer is

$$31693_{10} = 7bcd_{16}$$

Example 3-g _

Convert the signed, decimal integer -250 to a 16-bit integer in two's complement notation. Give the answer in hexadecimal.

Since this is a negative number, we first negate it, giving +250. Then we convert this value. The answer is to be given in hexadecimal, so we will repetitively divide by 16 to get the answer.

 $250 \div 16 = 15$ with remainder 10 $15 \div 16 = 0$ with remainder 15

This gives us

$$250_{10} = 00 fa_{16}$$

Now we take the one's complement: $00\text{fa} \Rightarrow \text{ff}05$ and add one: $\Rightarrow \text{ff}06$ So the answer is

$$-250_{10} = ff06_{16}$$

П

3.4 Overflow and Signed Decimal Integers

The number of bits used to represent a value is determined at the time a program is written. So when performing arithmetic operations we cannot simply add more digits (bits) if the result is too large, as we can do on paper. You saw in Section 3.1 (page 28) that the CF indicates when the sum of two unsigned integers exceeds the number of bits allocated to it.

In Section 3.3 (page 34) you saw that carry is irrelevant when working with signed integers. You also saw that adding two signed numbers can produce an incorrect result. That is, the sum may exceed the range of values that can be represented in the allocated number of bits.

The flags register, rflags, provides a bit, the Overflow Flag (0F), for detecting whether the sum of two n-bit, signed numbers stored in the two's complement code has exceeded the range allocated for it. Each operation that affects the overflow flag sets the bit equal to the exclusive or of the carry into the highest-order bit of the operands and the ultimate carry. For example, when adding the two 8-bit numbers, 15_{16} and $6f_{16}$, we get:

In this example, there is a carry of zero and a *penultimate* (next to last) *carry* of one. The OF flag is equal to the exclusive or of carry and penultimate carry:

where "^" is the exclusive or operator. In the above example

$$0F = 0^1 = 1$$

There are three cases when adding two numbers:

Case 1: The two numbers are of opposite sign. We will let x be the negative number and y the positive number. Then we can express x and y in binary as:

$$x = 1 \dots$$

 $y = 0 \dots$

That is, the high-order bit of one number is 1 and the high-order bit of the other is 0, regardless of what the other bits are. Now, if we add x and y, there are two possible results with respect to carry:

1. If the penultimate carry is zero:

this addition would produce $0F = 0 \hat{0} = 0$.

2. If the penultimate carry is one:

this addition would produce $0F = 1^1 = 0$.

We conclude that adding two integers of opposite sign always yields 0 for the overflow flag. Next, notice that since y is positive and x negative:

$$0 \le y \le +(2^{(n-1)} - 1) \tag{3.11}$$

$$0 \le y \le +(2^{(n-1)} - 1)$$

$$-2^{(n-1)} \le x < 0$$
(3.11)
(3.12)

Adding inequalities (3.11) and (3.12), we get:

$$-2^{(n-1)} \le x+y \le +(2^{(n-1)}-1)$$
(3.13)

Adding two signed integers of opposite sign is always correct.

Thus, the sum of two integers of opposite sign remains within the range of signed integers, and there is no overflow (0F = 0).

Case 2: Both numbers are positive. Since both are positive, we can express x and y in binary as:

$$x = 0 \dots$$

 $y = 0 \dots$

That is, the high-order bit is 0, regardless of what the other bits are. Now, if we add x and y, there are two possible results with respect to carry:

1. If the penultimate carry is zero:

this addition would produce $0F = 0^{\circ}0 = 0$. The high-order bit of the sum is zero, so it is a positive number, and the sum is within range.

2. If the penultimate carry is one:

this addition would produce $0F = 0^1 = 1$. The high-order bit of the sum is one, so it is a negative number. Adding two positive numbers cannot yield a negative sum, so this sum has exceeded the allocated range.

Case 3: Both numbers are negative. Since both are negative, we can express x and y in binary as:

$$x = 1 \dots$$
$$y = 1 \dots$$

That is, the high-order bit is 1, regardless of what the other bits are. Now, if we add x and y, there are two possible results with respect to carry:

1. If the penultimate carry is zero:

this addition would produce $0F = 1 \hat{0} = 1$. The high-order bit of the sum is zero, so it is a positive number. Adding two negative numbers cannot yield a negative sum, so this sum has exceeded the allocated range.

2. If the penultimate carry is one:

this addition would produce $0F = 1 \hat{1} = 0$. The high-order bit of the sum is one, so it is a negative number, and the sum is within range.

3.4.1 The Meaning of CF and OF

These results, together with the results from Section 3.2 (page 33), yield the following rules when adding or subtraction two n-bit integers:

- If your algorithm treats the result as unsigned, the Carry Flag (CF) is zero if and only if the result is within the n-bit range; OF is irrelevant.
- If your algorithm treats the result as signed (using the two's complement code), the Over-flow Flag (OF) is zero if and only if the result is within the n-bit range; CF is irrelevant.

Look at CF for unsigned integers. Look at 0F for signed integers.

The CPU does not consider integers as either signed or unsigned. Both the CF and OF are set according to the rules of binary arithmetic by each arithmetic operation. The distinction between signed and unsigned is completely determined by the program. After each addition or subtraction operation the program should check the state of the CF for unsigned integers or the OF of signed integers and at least indicate when the sum is in error. Most high-level languages do not perform this check, which can lead to some obscure program bugs.

Positive numbers are signed.

Be Careful! Do not to confuse positive signed numbers with unsigned numbers. The range for unsigned 32-bit integers is 0-4294967295, and for signed 32-bit integers the range is -2147483648-2147483647.

The codes used for both unsigned integers and signed integers are circular in nature. That is, for a given number of bits, each code "wraps around." This can be seen pictorially in the "Decoder Ring" shown in Figure 3.1 for three-bit numbers.

Example 3-h _____

Using the "Decoder Ring" (Figure 3.1), add the unsigned integers 3 + 4.

Working only in the inner ring, start at the tic mark for 3, which corresponds to the bit pattern 011. The bit pattern corresponding to 4 is 100, which is four tic marks CW from zero. So move four tic marks CW from the 3 tic mark. This places us at the tic mark labeled 111, which corresponds to 7. Since we did not pass the tic mark at the top of the Decoder Ring, CF = 0. Thus, the result is correct.

Example 3-i _____

Using the "Decoder Ring" (Figure 3.1), add the unsigned integers 5 + 6.

Working only in the inner ring, start at the tic mark for 5, which corresponds to the bit pattern 101. The bit pattern corresponding to 6 is 110, which is six tic marks CW from zero. So move six tic marks CW from the 5 tic mark. This places us at the tic mark labeled 011, which corresponds to 3. Since we have crossed the tic mark at the top of the Decoder Ring, the CF becomes 1. Thus, the result is incorrect.

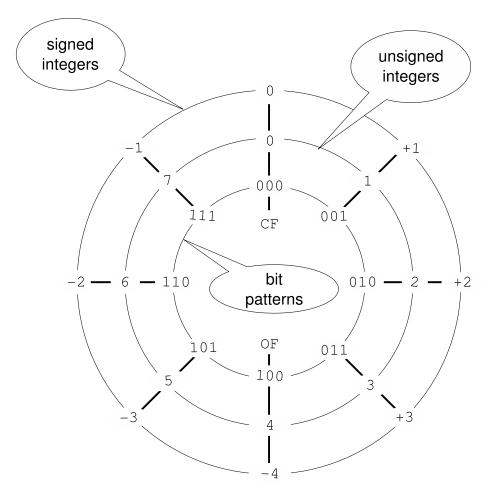


Figure 3.1: "Decoder Ring" for three-bit signed and unsigned integers. Move clockwise when adding numbers, counter-clockwise when subtracting. Crossing over 000 sets the CF to one, indicating an error for unsigned integers. Crossing over 100 sets the OF to one, indicating an error for signed integers.

Example 3-j

Using the "Decoder Ring" (Figure 3.1), add the signed integers (+1) + (+2).

Working only in the outer ring, start at the tic mark for +1, which corresponds to the bit pattern 001. The bit pattern corresponding to +2 is 010, which is two tic marks CW from zero. So move two tic marks CW from the +1 tic mark. This places us at the tic mark labeled 011, which corresponds to +3. Since we did not pass the tic mark at the bottom of the Decoder Ring, 0F = 0. Thus, the result is correct.

Example 3-k

Using the "Decoder Ring" (Figure 3.1), add the signed integers (+3) + (-4).

Working only in the outer ring, start at the tic mark for +3, which corresponds to the bit pattern 011. The bit pattern corresponding to -4 is 100, which is four tic marks CCW from zero. So move four tic marks CCW from the +3 tic mark. This places us at the tic mark labeled 111, which corresponds to -1. Since we did not pass the tic mark at the bottom of the Decoder Ring, 0F = 0. Thus, the result is correct.

Example 3-l

Using the "Decoder Ring" (Figure 3.1), add the signed integers (+3) + (+1).

Working only in the outer ring, start at the tic mark for +3, which corresponds to the bit pattern 011. The bit pattern corresponding to +1 is 001, which is one tic mark CW from zero. So move one tic mark CW from the +3 tic mark. This places us at the tic mark labeled 100, which corresponds to -4. Since we did pass the tic mark at the bottom of the Decoder Ring, 0F = 1. Thus, the result is incorrect.

3.5 C/C++ Basic Data Types

High-level languages provide some basic data types. For example, C/C++ provides int, char, float, etc. The sizes of some data types are shown in Table 3.3. The sizes given in this table

Data type	32-bit mode	64-bit mode
char	8	8
int	32	32
long	32	64
long long	64	64
float	32	32
double	64	64
*any	32	64

Table 3.3: Sizes (in bits) of some C/C++ data types in 32-bit and 64-bit modes. The size of a long depends on the mode. Pointers (addresses) are 32 bits in 32-bit mode and can be 32 or 64 bits in 64-bit mode.

are taken from the System V Application Binary Interface specifications, reference [33] for 32-bit and reference [25] for 64-bit, and are used by the gcc compiler for the x86-64 architecture. Language specifications tend to be more permissive in order to accommodate other hardware architectures. For example, see reference [10] for the specifications for C.

A given "real world" value can usually be represented in more than one data type. For example, most people would think of "123" as representing "one hundred twenty-three." This value could be stored in a computer in int format or as a text string. An int in our C/C++ environment is stored in 32 bits, and the bit pattern would be

```
0x0000007b
```

As a C-style text string, it would also require four bytes of memory, but their bit patterns would

```
0x31 0x32 0x33 0x00
```

The int format is easier to use in arithmetic and logical expressions, but the interface with the outside world through the screen and the keyboard uses the char format. If a user entered 123 from the keyboard, the operating system would read the individual characters, each in char format. The text string must be converted to int format. After the numbers are manipulated, the result must be converted from the int format to char format for display on the screen.

C programmers use functions in the stdio library and C++ programmers use functions in the iostream library to do these conversions between the int and char formats. For example, the C code sequence

```
scanf("%i", &x);
x += 100;
printf("%i", x);
```

or the C++ code sequence

```
cin >> x;
x += 100;
cout << x;</pre>
```

- reads characters from the keyboard and converts the character sequence into the corresponding int format.
- adds 100 to the int.
- converts the resulting int into a character sequence and displays it on the screen.

The C or C++ I/O library functions in the code segments above do the necessary conversions between character sequences and the int storage format. However, once the conversion is performed, they ultimately call the read *system call* function to read bytes from the keyboard and the write *system call* function to write bytes to the screen. As shown in Figure 3.2, an application program can call the read and write functions directly to transfer bytes.

When using the read and write system call functions for I/O, it is the programmer's responsibility to do the conversions between the char type used for I/O and the storage formats used within the program. We will soon be writing our own functions in assembly language to convert between the character format used for screen display and keyboard input, and the internal storage format of integers in the binary number system. The purpose of writing our own functions is to gain a thorough understanding of how data is represented internally in the computer.

Aside: If the numerical data are used primarily for display, with few arithmetic operations, it makes more sense to store numerical data in character format. Indeed, this is done in many business data processing environments. But this makes arithmetic operation more complicated.

3.5.1 C/C++ Shift Operations

Since our primary goal here is to study storage formats, we will concentrate on bit patterns. We will develop a program in C that allows a user to enter bit patterns in hexadecimal. The program will read the characters from the keyboard in ASCII code and convert them into the

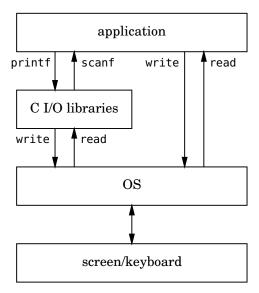


Figure 3.2: Relationship of I/O libraries to application and operating system. An application can use functions in the I/O libraries to convert between keyboard/screen chars and basic data types, or it can directly use the read /write system calls to transfer raw bytes.

corresponding int storage format as shown in Algorithm 3.8. This conversion algorithm involves manipulating data at the bit level.

Algorithm 3.8: Read hexadecimal value from keyboard.

- 1×0 ;
- 2 Read character from keyboard;
- 3 while more characters do
- 4 $X \Leftarrow X$ shifted left four bit positions;
- 5 $y \leftarrow$ new character converted to an int;
- $6 \quad X \Leftarrow X + Y;$
- 7 Read character from keyboard;
- 8 Display the integer;

Let us examine this algorithm. Each character read from the keyboard represents a hexadecimal digit. That is, each character is one of '0', ..., '9', 'a', ..., 'f'. (We assume that the user does not make mistakes.) Since a hexadecimal digit represents four bits, we need to shift the accumulated integer four bits to the left in order to make room for the new four-bit value.

You should recognize that shifting an integer four bits to the left multiplies it by 16. As you will see in Sections 12.3 and 12.4 (pages 273 and 280), multiplication and division are complicated operations, and they can take a great deal of processor time. Using left/right shifts to effect multiplication/division by powers of two is very efficient. More importantly, the four-bit shift is more natural in this application.

The C/C++ operator for shifting bits to the left is «.² For example, if x is an int, the statement

$$x = x << 4;$$

shifts the value in x four bits to the left, thus multiplying it by sixteen. Similarly, the C/C++ operator for shifting bits to the right is x. For example, if x is an int, the statement

$$x = x >> 3;$$

shifts the value in x three bits to the right, thus dividing it by eight. Note that the three rightmost bits are lost, so this is an integer div operation. The program in Listing 3.1 illustrates the use of the C shift operators to multiply and divide by powers of two.

²In C++ the » and « operators have been overloaded for use with the input and output streams.

```
1 /*
   * mulDiv.c
   * Asks user to enter an integer. Then prompts user to enter
   * a power of two to multiply the integer, then another power
   * of two to divide. Assumes that user does not request more
   * than 32 as the power of 2.
   * Bob Plantz - 4 June 2009
10 #include <stdio.h>
12 int main(void)
13 {
      int x;
14
      int leftShift, rightShift;
15
      printf("Enter an integer: ");
17
      scanf("%i", &x);
18
19
      printf("Multiply by two raised to the power: ");
20
      scanf("%i", &leftShift);
21
      printf("%i x %i = %i\n", x, 1 << leftShift, x << leftShift);</pre>
22
23
      printf("Divide by two raised to the power: ");
24
      scanf("%i", &rightShift);
      printf("%i / %i = %i\n", x, 1 << rightShift, x >> rightShift);
26
27
      return 0;
28
  }
29
```

Listing 3.1: Shifting to multiply and divide by powers of two.

3.5.2 C/C++ Bit Operations

We begin by reviewing the C/C++ bitwise logical operators,

```
and & or \mid exclusive or complement \sim
```

It is easy to see what each of these operators does by using *truth tables*. To illustrate how truth tables work, consider the algorithm for binary addition. In Section 3.1 (page 28) we saw that the ith bit in the result is the sum of the ith bit of one number plus the ith bit of the other number plus the carry produced from adding the (i-1)th bits. This sum will produce a carry of zero or one. In other words, a bit adder has three inputs — the two corresponding bits from the two numbers being added and the carry from the previous bit addition — and two outputs — the result and the carry. In a truth table we have a column for each input and each output. Then we write down all possible input bit combinations and then show the output(s) in the corresponding row. A truth table for the bit addition operation is shown in Figure 3.3. We use the notation x[i] to represent the ith bit in the variable x; x[i-j] would specify bits i-j.

x[i]	y[i]	carry[(i-1)]	z[i]	carry[i]
0	0	0	0	0
0	1	0	1	Θ
1	0	Θ	1	Θ
1	1	Θ	0	1
0	0	1	1	Θ
0	1	1	0	1
1	0	1	0	1
1	1	1	1	1

Figure 3.3: Truth table for adding two bits with carry from a previous bit addition. x[i] is the ith bit of x; carry[(i-1)] is the carry from adding the (i-1)th bits.

The bitwise logical operators act on the corresponding bits of two operands as shown in Figure 3.4.

and	x[i]	y[i]	x[i] & y[i]
anu	0	0	0
	0	1	Θ
	1	0	Θ
	1	1	1
	v[i]	v[i]	v[i] v[i]
inclusive or	x[i]	y[i]	x[i] y[i]
	0	0	0
	0	1	1
	1	0	1
	1	1	1
		!	
exclusive or	x[i]	y[i]	x[i] ^ y[i]
CACIUSIVE OI	0	0	0
	0	1	1
	1	0	1
	1	1	Θ
complement	x[i]	\sim x[i]	
complement	0	1	<u> </u>
	1	0	

Figure 3.4: Truth tables showing bitwise C/C++ operations. x[i] is the ith bit in the variable x.

Example 3-m _

Let int x = 0x1234abcd. Compute the and, or, and xor with 0xdcba4321.

- x & 0xdcba4321 = 0x10300301
- x | 0xdcba4321 = 0xdebeebed
- $x ^0xdcba4321 = 0xce8ee8ec$

Make sure that you distinguish these bitwise logical operators from the C/C++ logical operators, &&, | |, and | |. The logical operators work on groups of bits organized into integral data types rather than individual bits. For comparison, the truth tables for the C/C++ logical operators are shown in Figure 3.5

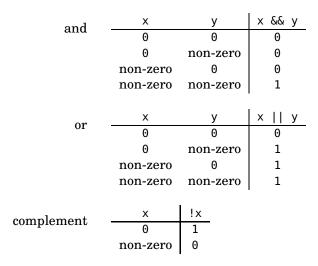


Figure 3.5: Truth tables showing C/C++ logical operations. x and y are variables of integral data type.

3.5.3 C/C++ Data Type Conversions

Now we are prepared to see how we can convert from the ASCII character code to the int format. The & operator works very nicely for the conversion. If a numeric character is stored in the char variable aChar, from Table 3.4 we see that the required operation is

aChar = aChar & 0x0f;

Hex character	ASCII code		Correspo	onding int	
0	0011 0000	0000 000	0 0000 0000	0000 0000	0000 0000
1	0011 0001	0000 000	0 0000 0000	0000 0000	0000 0001
2	0011 0010	0000 000	0 0000 0000	0000 0000	0000 0010
3	0011 0011	0000 000	0 0000 0000	0000 0000	0000 0011
4	0011 0100	0000 000	0 0000 0000	0000 0000	0000 0100
5	0011 0101	0000 000	0 0000 0000	0000 0000	0000 0101
6	0011 0110	0000 000	0 0000 0000	0000 0000	0000 0110
7	0011 0111	0000 000	0 0000 0000	0000 0000	0000 0111
8	0011 1000	0000 000	0 0000 0000	0000 0000	0000 1000
9	0011 1001	0000 000	0 0000 0000	0000 0000	0000 1001
a	0110 0001	0000 000	0 0000 0000	0000 0000	0000 1010
b	0110 0010	0000 000	0 0000 0000	0000 0000	0000 1011
С	0110 0011	0000 000	0 0000 0000	0000 0000	0000 1100
d	0110 0100	0000 000	0 0000 0000	0000 0000	0000 1101
е	0110 0101	0000 000	0 0000 0000	0000 0000	0000 1110
f	0110 0110	0000 000	0 0000 0000	0000 0000	0000 1111

Table 3.4: Hexadecimal characters and corresponding int. Note the change in pattern from '9' to 'a'.

Well, we still have an 8-bit value (with the four high-order bits zero), but we will work on this in a moment.

Next consider the alphabetic hexadecimal digits in Table 3.4. Notice that the low-order four bits are the same whether the character is upper case or lower case. We can use the same & operation to obtain these four bits, then add 9 to the result:

```
aChar = 0x09 + (aChar \& 0x0f);
```

Conversion from the 8-bit char type to the 32-bit int type is accomplished by a type cast in C.

3.6. OTHER CODES 49

The resulting program is shown in Listing 3.2. Notice that we use the printf function to display the resulting stored value, both in hexadecimal and decimal. The conversion from stored int format to hexadecimal display is left as an exercise (Exercise 3-13).

```
1 /*
  * convertHex.c
   * Asks user to enter a number in hexadecimal
   * then echoes it in hexadecimal and in decimal.
   * Assumes that user does not make mistakes.
   * Bob Plantz - 4 June 2009
9 #include <stdio.h>
10 #include <unistd.h>
12 int main(void)
13 {
      int x;
14
      unsigned char aChar;
15
16
      printf("Enter an integer in hexadecimal: ");
      fflush(stdout);
18
      x = 0;
                                          // initialize result
20
                                          // get first character
      read(STDIN_FILENO, &aChar, 1);
21
      while (aChar != '\n')
                                          // look for return key
22
      {
          x = x << 4;
                                          // make room for next four bits
24
          if (aChar <= '9')
25
26
               x = x + (int)(aChar \& 0x0f);
27
          }
          else
29
          {
30
               aChar = aChar \& 0x0f;
31
               aChar = aChar + 9;
               x = x + (int)aChar;
33
           read(STDIN_FILENO, &aChar, 1);
35
      }
36
37
      printf("You entered %#010x = %i (decimal)\n\n", x, x);
39
      return 0;
40
41 }
```

Listing 3.2: Reading hexadecimal values from keyboard.

3.6 Other Codes

Thus far in this chapter we have used the binary number system to represent numerical values. It is an efficient code in the sense that each of the 2^n bit patterns represents a value. On the other hand, there are some limitations in the code. We will explore some other codes in this section.

3.6.1 BCD Code

One limitation of using the binary number system is that a decimal number must be converted to binary before storing or performing arithmetic operations on it. And binary numbers must be converted to decimal for most real-world display purposes.

The Binary Coded Decimal (BCD) code is a code for individual decimal digits. Since there are ten decimal digits, the code must use four bits for each digit. The BCD code is shown in Table 3.5. For example, in a 16-bit storage location the decimal number 1234 would be stored in the

Decimal digit	BCD code (four bits)
0	0000
1	0001
2	0010
3	0011
4	0100
5	0101
6	0110
7	0111
8	1000
9	1001

Table 3.5: BCD code for the decimal digits.

BCD code as

```
0001 0010 0011 0100 # BCD
and in binary as
0000 0100 1101 0010 # binary
```

From Table 3.5 we can see that six bit patterns are "wasted." The effect of this inefficiency is that a 16-bit storage location has a range of 0-9999 if we use BCD, but the range is 0-65535 if we use binary.

BCD is important in specialized systems that deal primarily with numerical data. There are I/O devices that deal directly with numbers in BCD without converting to/from a character code, for example, ASCII. The COBOL programming language supports a *packed BCD* format where two BCD characters are stored in each 8-bit byte. The last (4-bit) digit is used to store the sign of the number as shown in Table 3.6. The specific codes used depend upon the particular implementation.

Sign	BCD code (four bits)
+	1010
-	1011
+	1100
-	1101
+	1110
unsigned	1111

Table 3.6: Sign codes for packed BCD.

3.6.2 Gray Code

One of the problems with both the binary and BCD codes is that the difference between two adjacent values often requires that more than one bit be changed. For example, three bits must be changed when incrementing from 3 to 4 - 0011 to 0100. If the value is read during the time when the bits are being switched there may be an error. This is more apt to occur if the bits are implemented with, say, mechanical switches instead of electronic. The Gray code is

3.6. OTHER CODES 51

one where there is only one bit that differs between any two adjacent values. As you will see in Section 4.3, this property also allows for a very useful visual tool for simplifying Boolean algebra expressions.

The Gray code is easily constructed. Start with one bit:

decimal	Gray code
0	0
1	1

To add a bit, first duplicate the existing pattern, but *reflected*:

Gray code
0
1
1
0

then add a zero to the beginning of each of the original bit patterns and a 1 to each of the reflected ones:

decimal	Gray code
0	00
1	01
2	11
3	10

Let us repeat these two steps to add another bit. Reflect the pattern:

Gray code	
00	
01	
11	
10	
10	
11	
01	
00	

then add a zero to the beginning of each of the original bit patterns and a 1 to each of the reflected ones:

decimal	Gray code
0	000
1	001
2	011
3	010
4	110
5	111
6	101
7	100

The Gray code for four bits is shown in Table 3.7. Notice that the pattern of only changing one bit between adjacent values also holds when the bit pattern "wraps around." That is, only one bit is changed when going from the highest value (15 for four bits) to the lowest (0).

Decimal	Gray code
0	0000
1	0001
2	0011
3	0010
4	0110
5	0111
6	0101
7	0100
8	1100
9	1101
10	1111
11	1110
12	1010
13	1011
14	1001
15	1000

Table 3.7: Gray code for 4 bits.

3.7 Exercises

- **3-1** (§3.1) How many bits are required to store a single decimal digit?
- **3-2** (§3.1) Using the answer from Exercise 1, invent a code for storing eight decimal digits in a thirty-two bit register. Using your new code, does binary addition produce the correct results?
- **3-3** (§3.3) Select several pairs of signed integers from Table 3.2, convert each to binary using the table, perform the binary addition, and check the results. Does this code always work?
- **3-4** (§3.3) If you did not select them in Exercise 3, add +4 and +5 using the four-bit, two's complement code (from Table 3.2). What answer do you get?
- **3-5** (§3.3) If you did not select them in Exercise 3, add -4 and -5 using the four-bit, two's complement code (from Table 3.2). What answer do you get?
- **3-6** (§3.3) Select any positive integer from Table 3.2. Add the binary representation for the positive value to the binary representation for the negative value. What is the four-bit result? What is the value of the CF? The OF? If you do the addition "on paper" (that is, you can use as many digits as you wish), how could you express, in English, the result of adding the positive representation of an integer to its negative representation in the two's complement notation? The negative representation to the positive representation? Which two integers do not have a representation of the opposite sign?
- **3-7** (§3.3) The following 8-bit hexadecimal values are stored in two's complement format. What are the equivalent signed decimal numbers?

a) 55	e) 80
b) aa	f) 63
c) f0	,
d) 0f	g) 7b

3-8 (§3.3) The following 16-bit hexadecimal values are stored in two's complement format. What are the equivalent signed decimal numbers?

a) 1234
b) edcc
c) fedc
d) 07d0
e) 8000
f) 0400
g) ffff
h) 782f

3-9 (§3.3) Show how each of the following signed, decimal integers would be stored in 8-bit two's complement format. Give your answer in hexadecimal.

a) 100
e) 127
b) -1
f) -16
c) -10
g) -32
d) 88
h) -128

3-10 (§3.3) Show how each of the following signed, decimal integers would be stored in 16-bit two's complement format. Give your answer in hexadecimal.

a) 1024 e) -256 b) -1024 f) -32768 c) -1 g) -32767 d) 32767 h) -128

3-11 (§3.4) Perform binary addition of the following pairs of 8-bit numbers (shown in hexadecimal) and indicate whether your result is "right" or "wrong." First treat them as unsigned values, then as signed values (stored in two's complement format). Thus, you will have two "right/wrong" answers for each sum. Note that the computer performs only one addition, setting both the CF and OF according to the results of the addition. It is up to the program to test the appropriate flag depending on whether the numbers are being considered as unsigned or signed in the program.

a) 55 + aa d) 63 + 7b b) 55 + f0 e) 0f + ff c) 80 + 7b f) 80 + 80

3-12 (§3.4, 3.5) Perform binary addition of the following pairs of 16-bit numbers (shown in hexadecimal) and indicate whether your result is "right" or "wrong." First treat them as unsigned values, then as signed values (stored in two's complement format). Thus, you will have two "right/wrong" answers for each sum. Note that the computer performs only one addition, setting both the CF and OF according to the results of the addition. It is up to the program to test the appropriate flag depending on whether the numbers are being considered as unsigned or signed in the program.

a) 1234 + edcc d) 0400 + ffff b) 1234 + fedc e) 07d0 + 782f c) 8000 + 8000 f) 8000 + ffff

3-13 (§3.5) Enter the program in Figure 3.1 and get it to work. Use the program to compute 1 (one) multiplied by 2 raised to the 31st power. What result do you get for 1 (one) multiplied by 2 raised to the 32nd power? Explain the results.

- **3-14** (§3.5) Write a C program that prompts the user to enter a hexadecimal value, multiplies it by ten, then displays the result in hexadecimal. Your main function should
 - a) declare a char array,
 - b) call the readLn function to read from the keyboard,
 - c) call a function to convert the input text string to an int,
 - d) multiply the int by ten,
 - e) call a function to convert the int to its corresponding hexadecimal text string,
 - f) call writeStr to display the resulting hexadecimal text string.

Use the readLn and writeStr functions from Exercise 2 -32 to read from the keyboard and display on the screen. Place the functions to perform the conversions in separate files. Hint: review Figure 3.2.

- **3-15** (§3.5) Write a C program that prompts the user to enter a binary value, multiplies it by ten, then displays the result in binary. ("Binary" here means that the user communicates with the program in ones and zeros.) Your main function should
 - a) declare a char array,
 - b) call the readLn function to read from the keyboard,
 - c) call a function to convert the input text string to an int,
 - d) multiply the int by ten,
 - e) call a function to convert the int to its corresponding binary text string,
 - f) call writeStr to display the resulting binary text string.

Use the readLn and writeStr functions from Exercise 2 -32 to read from the keyboard and display on the screen. Your functions to convert from a binary text string to an int and back should be placed in separate functions.

- **3-16** (§3.5) Write a C program that prompts the user to enter unsigned decimal integer, multiplies it by ten, then displays the result in binary. ("Binary" here means that the user communicates with the program in ones and zeros.) Your main function should
 - a) declare a char array,
 - b) call the readLn function to read from the keyboard,
 - c) call a function to convert the input text string to an int,
 - d) multiply the int by ten,
 - e) call a function to convert the int to its corresponding decimal text string,
 - f) call writeStr to display the resulting decimal text string.

Use the readLn and writeStr functions from Exercise 2 -32 to read from the keyboard and display on the screen. Your function to convert from a decimal text string to an int should be placed in a separate function. Hint: this problem cannot be solved by simply shifting bit patterns. Think carefully about the mathematical equivalence of shifting bit patterns left or right.

3-17 (§3.5) Modify the program in Exercise 3-16 so that it works with signed decimal integers.

Chapter 4

Logic Gates

This chapter provides an overview of the hardware components that are used to build a computer. We will limit the discussion to electronic computers, which use transistors to switch between two different voltages. One voltage represents 0, the other 1. The hardware devices that implement the logical operations are called *logic gates*.

4.1 Boolean Algebra

In order to understand how the components are combined to build a computer, you need to learn another algebra system — *Boolean algebra*. There are many approaches to learning about Boolean algebra. Some authors start with the postulates of Boolean algebra and develop the mathematical tools needed for working with switching circuits from them. We will take the more pragmatic approach of starting with the basic properties of Boolean algebra, then explore the properties of the algebra. For a more theoretical approach, including discussions of more general Boolean algebra concepts, search the internet, or take a look at books like [9], [20], [23], or [24].

There are only two values, 0 and 1, unlike elementary algebra that deals with an infinity of values, the real numbers. Since there are only two values, a *truth table* is a very useful tool for working with Boolean algebra. A truth table lists all possible combinations of the variables in the problem. The resulting value of the Boolean operation(s) for each variable combination is shown on the respective row.

Elementary algebra has four operations, addition, subtraction, multiplication, and division, but Boolean algebra has only three operations:

• AND — a binary operator; the result is 1 if and only if both operands are 1; otherwise the result is 0. We will use '.' to designate the AND operation. It is also common to use the ' \wedge ' symbol or simply "AND". The hardware symbol for the AND gate is shown in Figure 4.1. The inputs are x and y. The resulting output, $x \cdot y$, is shown in the truth table in this figure.

Figure 4.1: The AND gate acting on two variables, x and y.

We can see from the truth table that the AND operator follows similar rules as multiplication in elementary algebra.

• OR — a binary operator; the result is 1 if at least one of the two operands is 1; otherwise the result is 0. We will use '+' to designate the OR operation. It is also common to use the 'V' symbol or simply "OR". The hardware symbol for the OR gate is shown in Figure 4.2. The inputs are x and y. The resulting output, x + y, is shown in the truth table in this figure. From the truth table we can see that the OR operator follows the same rules as

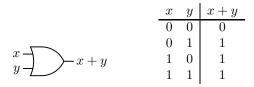


Figure 4.2: The OR gate acting on two variables, *x* and *y*.

addition in elementary algebra except that

$$1 + 1 = 1$$

in Boolean algebra. Unlike elementary algebra, there is no carry from the OR operation. Since addition of integers can produce a carry, you will see in Section 5.1 that implementing addition requires more than a simple OR gate.

 NOT — a unary operator; the result is 1 if the operand is 0, or 0 if the operand is 1. Other names for the NOT operation are *complement* and *invert*. We will use x' to designate the NOT operation. It is also common to use $\neg x$, or \overline{x} . The hardware symbol for the NOT gate is shown in Figure 4.3. The input is x. The resulting output, x', is shown in the truth table in this figure.

$$\begin{array}{c|cccc}
x & x' \\
\hline
0 & 1 \\
1 & 0
\end{array}$$

Figure 4.3: The NOT gate acting on one variable, *x*.

The NOT operation has no analog in elementary algebra. Be careful to notice that inversion of a value in elementary algebra is a division operation, which does not exist in Boolean algebra.

Two-state variables can be combined into expressions with these three operators in the same way that you would use the C/C++ operators &&, ||, and ! to create logical expressions commonly used to control if and while statements. We now examine some Boolean algebra properties for manipulating such expressions. As you read through this material, keep in mind that the same techniques can be applied to logical expressions in programming languages.

These properties are commonly presented as theorems. They are easily proved from application of truth tables.

There is a duality between the AND and OR operators. In any equality you can interchange AND and OR along with the constants 0 and 1, and the equality still holds. Thus the properties will be presented in pairs that illustrate their duality. We first consider properties that are the same as in elementary algebra.

• AND and OR are associative:

$$x \cdot (y \cdot z) = (x \cdot y) \cdot z \tag{4.1}$$

$$x \cdot (y \cdot z) = (x \cdot y) \cdot z$$

$$x + (y + z) = (x + y) + z$$

$$(4.1)$$

$$(4.2)$$

It is straightforward to prove these equations with truth tables. For example, for Equation 4.1:

\boldsymbol{x}	y	z	$(y \cdot z)$	$(x \cdot y)$	$x \cdot (y \cdot z)$	=	$(x \cdot y) \cdot z$
0	0	0	0	0	0		0
0	0	1	0	0	0		0
0	1	0	0	0	0		0
0	1	1	1	0	0		0
1	0	0	0	0	0		0
1	0	1	0	0	0		0
1	1	0	0	1	0		0
1	1	1	1	1	1		1

And for Equation 4.2:

x	y	z	(y+z)	(x+y)	x + (y + z)	=	(x+y)+z
0	0	0	0	0	0		0
0	0	1	1	0	1		1
0	1	0	1	1	1		1
0	1	1	1	1	1		1
1	0	0	0	1	1		1
1	0	1	1	1	1		1
1	1	0	1	1	1		1
1	1	1	1	1	1		1

• AND and OR have an *identity* value:

$$x \cdot 1 = x \tag{4.3}$$

$$x + 0 = x \tag{4.4}$$

Now we consider properties where Boolean algebra differs from elementary algebra.

• AND and OR are commutative:

$$x \cdot y = y \cdot x \tag{4.5}$$

$$x + y = y + x \tag{4.6}$$

This is easily proved by looking at the second and third lines of the respective truth tables. In elementary algebra, only the addition and multiplication operators are commutative.

• AND and OR have a null value:

$$x \cdot 0 = 0 \tag{4.7}$$

$$x+1 = 1$$
 (4.8)

The null value for the AND is the same as multiplication in elementary algebra. But addition in elementary algebra does not have a null constant, while OR in Boolean algebra does.

• AND and OR have a *complement* value:

$$x \cdot x' = 0 \tag{4.9}$$

$$x + x' = 1 \tag{4.10}$$

Complement does not exist in elementary algebra.

• AND and OR are idempotent:

$$x \cdot x = x \tag{4.11}$$

$$x + x = x \tag{4.12}$$

That is, repeated application of either operator to the same value does not change it. This differs considerably from elementary algebra — repeated application of addition is equivalent to multiplication and repeated application of multiplication is the power operation.

• AND and OR are distributive:

$$x \cdot (y+z) = x \cdot y + x \cdot z \tag{4.13}$$

$$x + y \cdot z = (x + y) \cdot (x + z) \tag{4.14}$$

Going from right to left in Equation 4.13 is the very familiar factoring from addition and multiplication in elementary algebra. On the other hand, the operation in Equation 4.14 has no analog in elementary algebra. It follows from the idempotency property. The NOT operator has an obvious property:

• NOT shows *involution*:

$$(x')' = x (4.15)$$

Again, since there is no complement in elementary algebra, there is no equivalent property.

• DeMorgan's Law is an important expression of the duality between the AND and OR operations.

$$(x \cdot y)' = x' + y'$$
 (4.16)
 $(x + y)' = x' \cdot y'$ (4.17)

$$(x+y)' = x' \cdot y' \tag{4.17}$$

The validity of DeMorgan's Law can be seen in the following truth tables. For Equation 4.16:

x	y	$(x \cdot y)$	$(x \cdot y)'$	x'	y'	x' + y'
0	0	0	1	1	1	1
0	1	0	1	1	0	1
1	0	0	1	0	1	1
1	1	1	0	0	0	0

And for Equation 4.17:

x	y	(x+y)	(x+y)'	x'	y'	$x' \cdot y'$
0	0	0	1	1	1	1
0	1	1	0	1	0	0
1	0	1	0	0	1	0
1	1	1	0	0	0	0

Canonical (Standard) Forms 4.2

Some terminology and definitions at this point will help our discussion. Consider two dictionary definitions of *literal*[26]:

adhering to fact or to the ordinary construction or primary literal 1b: meaning of a term or expression: ACTUAL.

of, relating to, or expressed in letters.

In programming we use the first definition of literal. For example, in the following code sequence

```
int xyz = 123;
char a = 'b';
char *greeting = "Hello";
```

the number "123", the character 'b', and the string "Hello" are all literals. They are interpreted by the compiler exactly as written. On the other hand, "xyz", "a", and "greeting" are all names

In mathematics we use the second definition of literal. That is, in the algebraic expression

$$3x + 12y - z$$

the letters x, y, and z are called literals. Furthermore, it is common to omit the "." operator to designate multiplication. Similarly, it is often dropped in Boolean algebra expressions when the AND operation is implied.

The meaning of *literal* in Boolean algebra is slightly more specific.

literal A presence of a variable or its complement in an expression. For example, the expression

$$x \cdot y + x' \cdot z + x' \cdot y' \cdot z'$$

contains seven literals.

From the context of the discussion you should be able to tell which meaning of "literal" is intended and when the "." operator is omitted.

A Boolean expression is created from the numbers 0 and 1, and literals. Literals can be combined using either the "·" or the "+" operators, which are multiplicative and additive operations, respectively. We will use the following terminology.

product term: A term in which the literals are connected with the AND operator. AND is multiplicative, hence the use of "product."

minterm or **standard product:** A product term that contains each of the variables in the problem, either in its complemented or uncomplemented form. For example, if a problem involves three variables (say, x, y, and z), $x \cdot y \cdot z$, $x' \cdot y \cdot z'$, and $x' \cdot y' \cdot z'$ are all minterms, but $x \cdot y$ is not.

sum of products (SoP): One or more product terms connected with OR operators. OR is additive, hence the use of "sum."

sum of minterms (SoM) *or* **canonical sum:** An SoP in which each product term is a minterm. Since all the variables are present in each minterm, the canonical sum is unique for a given problem.

When first defining a problem, starting with the SoM ensures that the full effect of each variable has been taken into account. This often does not lead to the best implementation. In Section 4.3 we will see some tools to simplify the expression, and hence, the implementation.

It is common to index the minterms according to the values of the variables that would cause that minterm to evaluate to 1. For example, $x' \cdot y' \cdot z' = 1$ when x = 0, y = 0, and z = 0, so this would be m_0 . The minterm $x' \cdot y \cdot z'$ evaluates to 1 when x = 0, y = 1, and z = 0, so is m_2 . Table 4.1 lists all the minterms for a three-variable expression.

minterm	x	y	z
$m_0 = x' \cdot y' \cdot z'$	0	0	0
$m_1 = x' \cdot y' \cdot z$	0	0	1
$m_2 = x' \cdot y \cdot z'$	0	1	0
$m_3 = x' \cdot y \cdot z$	0	1	1
$m_4 = x \cdot y' \cdot z'$	1	0	0
$m_5 = x \cdot y' \cdot z$	1	0	1
$m_6 = x \cdot y \cdot z'$	1	1	0
$m_7 = x \cdot y \cdot z$	1	1	1

Table 4.1: Minterms for three variables. m_i is the *ith* minterm. The x, y, and z values cause the corresponding minterm to evaluate to 1.

A convenient notation for expressing a sum of minterms is to use the \sum symbol with a numerical list of the minterm indexes. For example,

$$F(x, y, z) = x' \cdot y' \cdot z' + x' \cdot y' \cdot z + x \cdot y' \cdot z + x \cdot y \cdot z'$$

$$= m_0 + m_1 + m_5 + m_6$$

$$= \sum_{i=0}^{\infty} (0, 1, 5, 6)$$
(4.18)

As you might expect, each of the terms defined above has a dual definition.

sum term: A term in which the literals are connected with the OR operator. OR is additive, hence the use of "sum."

maxterm or **standard sum:** A sum term that contains each of the variables in the problem, either in its complemented or uncomplemented form. For example, if an expression involves three variables, x, y, and z, (x + y + z), (x' + y + z'), and (x' + y' + z') are all maxterms, but (x + y) is not.

product of sums (PoS): One or more sum terms connected with AND operators. AND is multiplicative, hence the use of "product."

product of maxterms (PoM) or **canonical product:** A PoS in which each sum term is a maxterm. Since all the variables are present in each maxterm, the canonical product is unique for a given problem.

It also follows that any Boolean function can be uniquely expressed as a product of maxterms (PoM) that evaluate to 1. Starting with the product of maxterms ensures that the full effect of each variable has been taken into account. Again, this often does not lead to the best implementation, and in Section 4.3 we will see some tools to simplify PoMs.

It is common to index the maxterms according to the values of the variables that would cause that maxterm to evaluate to 0. For example, x+y+z=0 when x=0, y=0, and z=0, so this would be M_0 . The maxterm x'+y+z' evaluates to 0 when x=1, y=0, and z=1, so is m_5 . Table 4.2 lists all the maxterms for a three-variable expression.

Maxterm	\boldsymbol{x}	y	z
$M_0 = x + y + z$	0	0	0
$M_1 = x + y + z'$	0	0	1
$M_2 = x + y' + z$	0	1	0
$M_3 = x + y' + z'$	0	1	1
$M_4 = x' + y + z$	1	0	0
$M_5 = x' + y + z'$	1	0	1
$M_6 = x' + y' + z$	1	1	0
$M_7 = x' + y' + z'$	1	1	1

Table 4.2: Maxterms for three variables. M_i is the *ith* maxterm. The x, y, and z values cause the corresponding maxterm to evaluate to 0.

The similar notation for expressing a product of maxterms is to use the \prod symbol with a numerical list of the maxterm indexes. For example (and see Exercise 4-8),

$$F(x,y,z) = (x+y'+z) \cdot (x+y'+z') \cdot (x'+y+z) \cdot (x'+y'+z')$$

$$= M_2 \cdot M_3 \cdot M_4 \cdot M_7$$

$$= \prod (2,3,4,7)$$
(4.19)

The names "minterm" and "maxterm" may seem somewhat arbitrary. But consider the two functions,

$$F_1(x, y, z) = x \cdot y \cdot z$$

$$F_2(x, y, z) = x + y + z$$

There are eight (2^3) permutations of the three variables, x, y, and z. F_1 has one minterm and evaluates to 1 for only one of the permutations, x = y = z = 1. F_2 has one maxterm and evaluates to 1 for all permutations *except* when x = y = z = 0. This is shown in the following truth table:

			minterm	maxterm
\boldsymbol{x}	y	z	$F_1 = (x \cdot y \cdot z)$	$F_2 = (x + y + z)$
0	0	0	0	0
0	0	1	0	1
0	1	0	0	1
0	1	1	0	1
1	0	0	0	1
1	0	1	0	1
1	1	0	0	1
1	1	1	1	1

ORing more minterms to an SoP expression *expands* the number of cases where it evaluates to 1, and ANDing more maxterms to a PoS expression *reduces* the number of cases where it evaluates to 1.

4.3 Boolean Function Minimization

In this section we explore some important tools for manipulating Boolean expressions in order to simplify their hardware implementation. When implementing a Boolean function in hardware, each "·" operator represents an AND gate and each "+" operator an OR gate. In general, the complexity of the hardware is related to the number of AND and OR gates. NOT gates are simple and tend not to contribute significantly to the complexity.

We begin with some definitions.

minimal sum of products (mSoP): A sum of products expression is minimal if all other mathematically equivalent SoPs

- 1. have at least as many product terms, and
- 2. those with the same number of product terms have at least as many literals.

minimal product of sums (mPoS): A product of sums expression is minimal if all other mathematically equivalent PoSs

- 1. have at least as many sum factors, and
- 2. those with the same number of sum factors have at least as many literals.

These definitions imply that there can be more than one minimal solution to a problem. Good hardware design practice involves finding all the minimal solutions, then assessing each one within the context of the available hardware. For example, judiciously placed NOT gates can actually reduce hardware complexity (Section 4.4.3, page 75).

Minimal expressions may not be unique.

4.3.1 Minimization Using Algebraic Manipulations

To illustrate the importance of reducing the complexity of a Boolean function, consider the following function:

$$F_1(x,y) = x \cdot y' + x' \cdot y + x \cdot y \tag{4.20}$$

The expression on the right-hand side is an SoM. The circuit to implement this function is shown in Figure 4.4. It requires three AND gates, one OR gate, and two NOT gates.

Now let us simplify the expression in Equation 4.20 to see if we can reduce the hardware requirements. This process will probably seem odd to a person who is not used to manipulating Boolean expressions, because there is not a single correct path to a solution. We present one way here. First we use the idempotency property (Equation 4.12) to duplicate the last term:

$$F_1(x,y) = x \cdot y' + x \cdot y + x' \cdot y + x \cdot y \tag{4.21}$$

Next we use the distributive property (Equation 4.13) to factor the expression:

$$F_1(x,y) = x \cdot (y'+y) + y \cdot (x'+x) \tag{4.22}$$

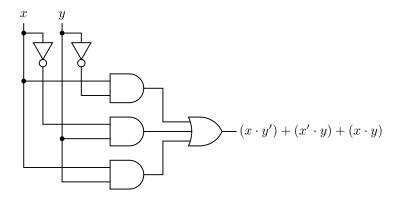


Figure 4.4: Hardware implementation of the function in Equation 4.20.

And from the complement property (Equation 4.10) we get:

$$F_1(x,y) = x \cdot 1 + y \cdot 1$$
 (4.23)

$$= x + y \tag{4.24}$$

which you recognize as the simple OR operation. It is easy to see that this is a minimal sum of products for this function. We can implement Equation 4.20 with a single OR gate — see Figure 4.2 on page 56. This is clearly a less expensive, faster circuit than the one shown in Figure 4.4. To illustrate how a product of sums expression can be minimized, consider the function:

$$F_2(x,y) = (x+y') \cdot (x'+y) \cdot (x'+y') \tag{4.25}$$

The expression on the right-hand side is a PoM. The circuit for this function is shown in Figure 4.5. It requires three OR gates, one AND gate, and two NOT gates.

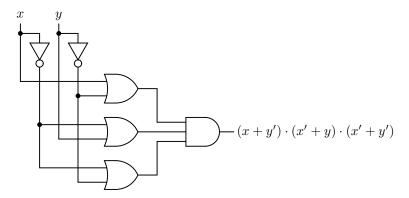


Figure 4.5: Hardware implementation of the function in Equation 4.28.

We will use the distributive property (Equation 4.14) on the right two factors and recognize the complement (Equation 4.9):

$$F_2(x, y, z) = (x + y') \cdot (x' + y \cdot y')$$

$$= (x + y') \cdot x'$$
(4.26)
(4.27)

$$= (x+y') \cdot x' \tag{4.27}$$

Now, use the distributive (Equation 4.13) and complement (Equation 4.9) properties to obtain:

$$F_2(x, y, z) = x \cdot x' + x' \cdot y'$$

$$= x' \cdot y'$$
(4.28)
(4.29)

$$= x' \cdot y' \tag{4.29}$$

Thus, the function can be implemented with two NOT gates and a single AND gate, which is clearly a minimal product of sums. Again, with a little algebraic manipulation we have arrived at a much simpler solution.

Example 4-a

Design a function that will detect the even 4-bit integers.

The even 4-bit integers are given by the function:

$$F(w, x, y, z) = w' \cdot x' \cdot y' \cdot z' + w' \cdot x' \cdot y \cdot z' + w' \cdot x \cdot y' \cdot z' + w' \cdot x \cdot y \cdot z' + w \cdot x' \cdot y' \cdot z' + w \cdot x \cdot y' \cdot z' + w \cdot x \cdot y \cdot$$

Using the distributive property repeatedly we get:

$$F(w, x, y, z) = z' \cdot (w' \cdot x' \cdot y' + w' \cdot x' \cdot y + w' \cdot x \cdot y' + w' \cdot x \cdot y + w \cdot x' \cdot y' + w \cdot x' \cdot y + w \cdot x \cdot y' + w \cdot x \cdot y)$$

$$= z' \cdot (w' \cdot (x' \cdot y' + x' \cdot y + x \cdot y' + x \cdot y) + w \cdot (x' \cdot y' + x' \cdot y + x \cdot y' + x \cdot y))$$

$$= z' \cdot (w' + w) \cdot (x' \cdot y' + x' \cdot y + x \cdot y' + x \cdot y)$$

$$= z' \cdot (w' + w) \cdot (x' \cdot (y' + y) + x \cdot (y' + y))$$

$$= z' \cdot (w' + w) \cdot (x' + x) \cdot (y' + y)$$

And from the complement property we arrive at a minimal sum of products:

$$F(x, y, z) = z'$$

4.3.2 Minimization Using Graphic Tools

The Karnaugh map was invented in 1953 by Maurice Karnaugh while working as a telecommunications engineer at Bell Labs. Also known as a K-map, it provides a graphic view of all the possible minterms for a given number of variables. The format is a rectangular grid with a cell for each minterm. There are 2^n cells for n variables.

Figure 4.6 shows how all four minterms for two variables are mapped onto a four-cell Karnaugh map. The vertical axis is used for plotting x and the horizontal for y. The value of x for

$$F(x,y) \qquad y \qquad 0 \qquad 1$$

$$x \qquad 0 \qquad m_0 \qquad m_1$$

$$x \qquad 1 \qquad m_2 \qquad m_3$$

Figure 4.6: Mapping of two-variable minterms on a Karnaugh map.

each row is shown by the number (0 or 1) immediately to the left of the row, and the value of y for each column appears at the top of the column.

The procedure for simplifying an SoP expression using a Karnaugh map is:

- 1. Place a 1 in each cell that corresponds to a minterm that evaluates to 1 in the expression.
- 2. Combine cells with 1s in them and that share edges into the largest possible groups. Larger groups result in simpler expressions. The number of cells in a group must be a power of 2. The edges of the Karnaugh map are considered to wrap around to the other side, both vertically and horizontally.
- 3. Groups may overlap. In fact, this is common. However, no group should be fully enclosed by another group.
- 4. The result is the sum of the product terms that represent each group.

The simplification comes from the fact that the number of variables needed to specify a group of cells is reduced by 2^{n_g} where n_g is the number of cells in the group. Thus the number of variables required to specify an entire group of cells in an n-variable Karnaugh map is:

number of group variables =
$$log_2 n - log_2 n_q$$

where:

n = number of variables in Karnaugh map $n_q = \text{number of variables in the group}$

Let us use a Karnaugh map to find a minimal sum of products for Equation 4.20 (repeated here):

$$F_1(x,y) = x \cdot y' + x' \cdot y + x \cdot y$$

We start by placing a 1 in each cell corresponding to a minterm that appears in the equation as shown in Figure 4.7. It is easy to see two groups of two cells each. They are circled in Figure

$$F_1(x,y)$$
 y 0 1 x 1 1 1

Figure 4.7: Karnaugh map for $F_1(x, y) = x \cdot y' + x' \cdot y + x \cdot y$.

4.8. The group in the bottom row represents the product term x, and the one in the right-hand

Figure 4.8: Two-variable Karnaugh map showing the groupings *x* and *y*.

column represents y. So the simplification is:

$$F_1(x,y) = x+y$$
 (4.30)
(4.31)

Notice that the two encircled groups overlap with the $x \cdot y$ minterm. This is the term that we added to the function in Equation 4.21 when performing the algebraic simplification. The Karnaugh map provides a graphical means to find the same simplification as the algebraic manipulations (see Equation 4.24). Many people find it easier to spot simplification patterns on a Karnaugh map.

Although it is not obvious in a two-variable Karnaugh map, the cells must be arranged such that only one variable changes between two cells that share an edge. This is called the *adjacency* property. We can see this in a three-variable Karnaugh map. Table 4.1 (page 59) lists all the minterms for three variables, x, y, and z, numbered from 0-8. A total of eight cells are needed, so we will draw it four cells wide and two high. Our Karnaugh map will be drawn with y and z on the horizontal axis, and x on the vertical. Figure 4.9 shows how the three-variable minterms map onto a Karnaugh map. Notice the order of the bit patterns along the top of the Karnaugh map. It is the same as a two-variable Gray code (Table 3.7, page 52). That is, the order of the columns is such that the yz values follow the Gray code.

F(x,y,z)	yz			
-	00	01	11	10
0	m_0	m_1	m_3	m_2
1	m_4	m_5	m_7	m_6

Figure 4.9: Mapping of three-variable minterms on a Karnaugh map.

A four-variable Karnaugh map is shown in Figure 4.10. The y and z variables are on the horizontal axis, w and x on the vertical. From this four-variable Karnaugh map we see that the order of the rows is such that the wx values also follow the Gray code.

Figure 4.10: Mapping of four-variable minterms on a Karnaugh map.

Other axis labeling schemes also work. The only requirement is that entries in adjacent cells differ by only one bit (which is a property of the Gray code). See Exercises 4-9 and 4-10. Example 4-b

Find a minimal sum of products expression for the function

$$F(x,y,z) = x' \cdot y' \cdot z' + x' \cdot y' \cdot z + x' \cdot y \cdot z' + x \cdot y' \cdot z' + x \cdot y \cdot z' + x \cdot y \cdot z$$

$$(4.32)$$

First we draw the Karnaugh map:

Several groupings are possible. Keep in mind that groupings can wrap around. We will work with

which yields a minimal sum of products:

$$F(x, y, z) = z' + x' \cdot y' + x \cdot y$$

We may wish to implement a function as a product of sums instead of a sum of products. From DeMorgan's Law, we know that the complement of an expression exchanges all ANDs and ORs, and complements each of the literals. The zeros in a Karnaugh map represent the complement of the expression. So if we

- 1. place a 0 in each cell of the Karnaugh map corresponding to a *missing* minterm in the expression,
- 2. find groupings of the cells with 0s in them,
- 3. write a sum of products expression represented by the grouping of 0s, and
- 4. complement this expression,

we will have the desired expression expressed as a product of sums. Let us use the previous example to illustrate.

Example 4-c

Find a minimal product of sums for the function in Equation 4.32.

Using the Karnaugh map zeros,

we obtain the complement of our desired function,

$$F'(x, y, z) = x' \cdot y \cdot z + x \cdot y' \cdot z$$

and from DeMorgan's Law:

$$F(x, y, z) = (x + y' + z') \cdot (x' + y + z')$$

We now work an example with four variables.


Example 4-d __

Find a minimal sum of products expression for the function

$$F(x,y,z) = w' \cdot x' \cdot y' \cdot z' + w' \cdot x' \cdot y \cdot z' + w' \cdot x \cdot y' \cdot z + w' \cdot x \cdot y \cdot z + w \cdot x \cdot y' \cdot z + w \cdot x \cdot y \cdot z + w \cdot x' \cdot y' \cdot z' + w \cdot x' \cdot y \cdot z'$$

$$(4.33)$$

Using the groupings on the Karnaugh map,

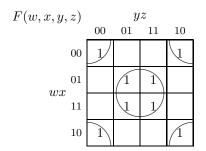

we obtain a minimal sum of products,

$$F(w, x, y, z) = x' \cdot z' + x \cdot z$$

Not only have we greatly reduced the number of AND and OR gates, we see that the two variables w and y are not needed. By the way, you have probably encountered a circuit that implements this function. A light controlled by two switches typically does this.

As you probably expect by now a Karnaugh map also works when a function is specified as a product of sums. The differences are:

- 1. maxterms are numbered 0 for uncomplemented variables and 1 for complemented, and
- 2. a 0 is placed in each cell of the Karnaugh map that corresponds to a maxterm.

To see how this works let us first compare the Karnaugh maps for two functions,

$$F_1(x, y, z) = (x' \cdot y' \cdot z')$$

$$F_2(x, y, z) = (x + y + z)$$

 F_1 is a sum of products with only one minterm, and F_2 is a product of sums with only one maxterm. Figure 4.11(a) shows how the minterm appears on a Karnaugh map, and Figure 4.11(b) shows the maxterm.

Karnaugh map
— "minterm"
versus
"maxterm."

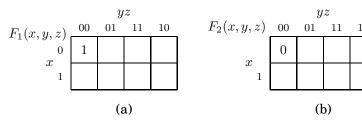


Figure 4.11: Comparison of one minterm (a) versus one maxterm (b) on a Karnaugh map.

Figure 4.12 shows how three-variable maxterms map onto a Karnaugh map. As with minterms, x is on the vertical axis, y and z on the horizontal. To use the Karnaugh map for maxterms, place a 0 is in each cell corresponding to a maxterm.

Figure 4.12: Mapping of three-variable maxterms on a Karnaugh map.

A four-variable Karnaugh map of maxterms is shown in Figure 4.13. The w and x variables are on the vertical axis, y and z on the horizontal.

$$F(w, x, y, z) = yz \\ 00 = 01 = 11 = 10 \\ 00 = M_0 = M_1 = M_3 = M_2 \\ 01 = M_4 = M_5 = M_7 = M_6 \\ wx = 11 = M_{12} = M_{13} = M_{15} = M_{14} \\ 10 = M_8 = M_9 = M_{11} = M_{10}$$

Figure 4.13: Mapping of four-variable minterms on a Karnaugh map.

Example 4-e _

Find a minimal product of sums for the function of Equation 4.25. That function is

$$F(x,y,z) = (x+y+z) \cdot (x+y+z') \cdot (x+y'+z') \cdot (x'+y+z) \cdot (x'+y'+z')$$

So this expression includes maxterms 0, 1, 3, 4, and 7. These appear in a Karnaugh map:

Next we encircle the largest adjacent blocks, where the number of cells in each block is a power of two. Notice that maxterm M_0 appears in two groups.

$$F(x,y,z) \qquad yz \\ 00 \quad 01 \quad 11 \quad 10 \\ x \\ 1 \quad 0 \quad 0 \quad 0$$

From this Karnaugh map it is very easy to write the function as a minimal product of sums:

$$F(x,y,z) = (x+y) \cdot (y+z) \cdot (y'+z')$$

which is the same as we found in Equation 4.28.

There are situations where some minterms (or maxterms) are irrelevant in a function. This might occur, say, if certain input conditions are impossible in the design. As an example, assume that you have an application where the *exclusive or* (XOR) operation is required. The symbol for the operation and its truth table are shown in Figure 4.14. The minterms required to implement

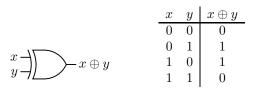


Figure 4.14: The XOR gate acting on two variables, x and y.

this operation are:

$$x \oplus y = x \cdot y' + x' \cdot y$$

This is the simplest form of the XOR operation. It requires two AND gates, two NOT gates, and an OR gate for realization.

But let us say that we have the additional information that the two inputs, x and y can never be 1 at the same time. Then we can draw a Karnaugh map with an " \times " for the minterm that cannot exist as shown in Figure 4.15. The " \times " represents a "don't care" cell — we don't care whether this cell is grouped with other cells or not.

$$\begin{array}{c|cccc}
F(x,y) & y & & \\
0 & 1 & & \\
x & & 1 & \times
\end{array}$$

Figure 4.15: A "don't care" cell on a Karnaugh map. Since x and y cannot both be 1 at the same time, we don't care if the cell xy = 11 is included in our groupings or not.

Since the cell that represents the minterm $x \cdot y$ is a "don't care", we can include it in our minimization groupings, leading to the two groupings shown in Figure 4.16. We easily recognize

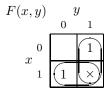


Figure 4.16: Karnaugh map for xor function if we know x = y = 1 cannot occur.

this Karnaugh map as being realizable with a single OR gate, which saves one OR gate and an AND gate.

4.4 Crash Course in Electronics

Although it is not necessary to be an electrical engineer in order to understand how logic gates work, some basic concepts will help. This section provides a very brief overview of the fundamental concepts of electronic circuits. We begin with two definitions.

Current is the movement of electrical charge. Electrical charge is measured in *coulombs*. A flow of one coulomb per second is defined as one *ampere*, often abbreviated as one *amp*. Current only flows in a closed path through an electrical circuit.

Voltage is a difference in electrical potential between two points in an electrical circuit. One *volt* is defined as the potential difference between two points on a conductor when one ampere of current flowing through the conductor dissipates one watt of power.

The electronic circuits that make up a computer are constructed from:

- A power source that provides the electrical power.
- Passive elements that control current flow and voltage levels.
- Active elements that switch between various combinations of the power source, passive elements, and other active elements.

We will look at how each of these three categories of electronic components behaves.

4.4.1 Power Supplies and Batteries

The electrical power is supplied to our homes, schools, and businesses in the form of *alternating current (AC)*. A plot of the magnitude of the voltage versus time shows a sinusoidal wave shape. Computer circuits use *direct current (DC)* power, which does not vary over time. A *power supply* is used to convert AC power to DC as shown in Figure 4.17. As you probably know, batteries

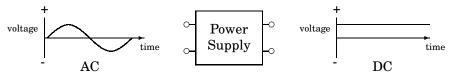


Figure 4.17: AC/DC power supply.

also provide DC power.

Computer circuits use DC power. They distinguish between two different voltage levels to provide logical 0 and 1. For example, logical 0 may be represented by 0.0 volts and logical 1 by +2.5 volts. Or the reverse may be used — +2.5 volts as logical 0 and 0.0 volts as logical 1. The only requirement is that the hardware design be consistent. Fortunately, programmers do not need to be concerned about the actual voltages used.

Electrical engineers typically think of the AC characteristics of a circuit in terms of an ongoing sinusoidal voltage. Although DC power is used, computer circuits are constantly switching between the two voltage levels. Computer hardware engineers need to consider circuit element time characteristics when the voltage is suddenly switched from one level to another. It is this *transient* behavior that will be described in the following sections.

4.4.2 Resistors, Capacitors, and Inductors

All electrical circuits have resistance, capacitance, and inductance.

- *Resistance* dissipates power. The electric energy is transformed into heat.
- Capacitance stores energy in an electric field. Voltage across a capacitance cannot change instantaneously.
- *Inductance* stores energy in a magnetic field. Current through an inductance cannot change instantaneously.

All three of these electro-magnetic properties are distributed throughout any electronic circuit. In computer circuits they tend to limit the speed at which the circuit can operate and to consume power, collectively known as *impedance*. Analyzing their effects can be quite complicated and is beyond the scope of this book. Instead, to get a feel for the effects of each of these properties, we will consider the electronic devices that are used to add one of these properties to a specific location in a circuit; namely, resistors, capacitors, and inductors. Each of these circuit devices has a different relationship between the voltage difference across the device and the current flowing through it.

A *resistor* irreversibly transforms electrical energy into heat. It does not store energy. The relationship between voltage and current for a resistor is given by the equation

$$v = i R (4.34)$$

where v is the voltage difference across the resistor at time t, i is the current flowing through it at time t, and R is the value of the resistor. Resistor values are specified in ohms. The circuit shown in Figure 4.18 shows two resistors connected in series through a switch to a battery. The battery supplies 2.5 volts. The Greek letter Ω is used to indicate ohms, and $k\Omega$ indicates 10^3 ohms. Since current can only flow in a closed path, none flows until the switch is closed.

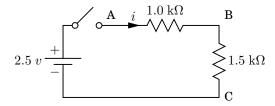


Figure 4.18: Two resistors in series.

Both resistors are in the same path, so when the switch is closed the same current flows through each of them. The resistors are said to be connected in *series*. The total resistance in the path is their sum:

$$R = 1.0 \text{ k}\Omega + 1.5 \text{ k}\Omega$$
$$= 2.5 \times 10^3 \text{ohms}$$

The amount of current can be determined from the application of Equation 4.34. Solving for i,

$$i = \frac{v}{R}$$

$$= \frac{2.5 \text{ volts}}{2.5 \times 10^3 \text{ ohms}}$$

$$= 1.0 \times 10^{-3} \text{ amps}$$

$$= 1.0 \text{ ma}$$

where "ma" means "milliamps."

We can now use Equation 4.34 to determine the voltage difference between points A and B.

$$v_{AB} = i R$$

= 1.0 × 10⁻³ amps × 1.0 × 10³ ohms
= 1.0 volts

Similarly, the voltage difference between points B and C is

$$v_{BC} = i R$$

= $1.0 \times 10^{-3} \text{ amps} \times 1.5 \times 10^{3} \text{ ohms}$
= 1.5 volts

Figure 4.19 shows the same two resistors connected in parallel. In this case, the voltage

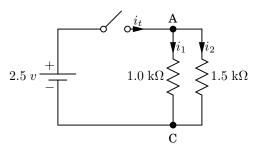


Figure 4.19: Two resistors in parallel.

across the two resistors is the same: 2.5 volts when the switch is closed. The current in each one depends upon its resistance. Thus,

$$i_1 = \frac{v}{R_1}$$

$$= \frac{2.5 \text{ volts}}{1.0 \times 10^3 \text{ ohms}}$$

$$= 2.5 \times 10^{-3} \text{ amps}$$

$$= 2.5 \text{ ma}$$

and

$$i_2 = \frac{v}{R_2}$$

$$= \frac{2.5 \text{ volts}}{1.5 \times 10^3 \text{ ohms}}$$

$$= 1.67 \times 10^{-3} \text{ amps}$$

$$= 1.67 \text{ ma}$$

The total current, i_t , supplied by the battery when the switch is closed is divided at point A to supply both the resistors. It must equal the sum of the two currents through the resistors,

$$i_t = i_1 + i_2$$

= 2.5 ma + 1.67 ma
= 4.17 ma

A *capacitor* stores energy in the form of an electric field. It reacts slowly to voltage changes, requiring time for the electric field to build. The voltage across a capacitor changes with time according to the equation

$$v = \frac{1}{C} \int_0^t i \, \mathrm{d}t \tag{4.35}$$

where C is the value of the capacitor in farads.

Figure 4.20 shows a 1.0 microfarad capacitor being charged through a 1.0 kiloohm resistor. This circuit is a rough approximation of the output of one transistor connected to the input of

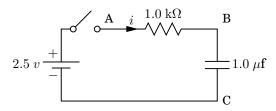


Figure 4.20: Capacitor in series with a resistor; v_{AB} is the voltage across the resistor and v_{BC} is the voltage across the capacitor.

another. (See Section 4.4.3.) The output of the first transistor has resistance, and the input to the second transistor has capacitance. The switching behavior of the second transistor depends upon the voltage across the (equivalent) capacitor, v_{BC} .

Assuming the voltage across the capacitor, v_{BC} , is 0.0 volts when the switch is first closed, current flows through the resistor and capacitor. The voltage across the resistor plus the voltage across the capacitor must be equal to the voltage available from the battery. That is,

$$2.5 = i R + v_{BC} (4.36)$$

If we assume that the voltage across the capacitor, v_{BC} , is 0.0 volts when the switch is first closed, the full voltage of the battery, 2.5 volts, will appear across the resistor. Thus, the initial current flow in the circuit will be

$$i_{\text{initial}} = \frac{2.5 \text{ volts}}{1.0 \text{ k}\Omega}$$

= 2.5 ma

As the voltage across the capacitor increases, according to Equation 4.35, the voltage across the resistor, v_{AB} , decreases. This results in an exponentially decreasing build up of voltage across the capacitor. When it finally equals the voltage of the battery, the voltage across the resistor is 0.0 volts and current flow in the circuit becomes zero. The rate of the exponential decrease is given by the product RC, called the *time constant*.

Using the values of R and C in Figure 4.20 we get

$$R C = 1.0 \times 10^{3} \text{ ohms} \times 1.0 \times 10^{-6} \text{ farads}$$

= $1.0 \times 10^{-3} \text{ seconds}$
= 1.0 msec.

Thus, assuming the capacitor in Figure 4.20 has 0.0 volts across it when the switch is closed, the voltage that develops over time is given by

$$v_{BC} = 2.5 \left(1 - e^{-t/10^{-3}}\right) \tag{4.37}$$

This is shown in Figure 4.21. At the time t = 1.0 millisecond (one time constant), the voltage

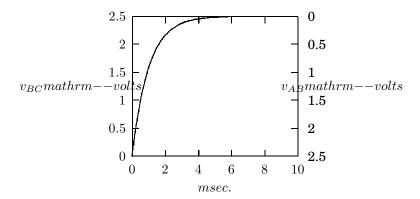


Figure 4.21: Capacitor charging over time in the circuit in Figure 4.20. The left-hand y-axis shows voltage across the capacitor, the right-hand voltage across the resistor.

across the capacitor is

$$v_{BC} = 2.5 (1 - e^{-10^{-3}/10^{-3}})$$

= $2.5 (1 - e^{-1})$
= 2.5×0.63
= 1.58 volts

After 6 time constants of time have passed, the voltage across the capacitor has reached

$$v_{BC} = 2.5 (1 - e^{-6 \times 10^{-3}/10^{-3}})$$

= $2.5 (1 - e^{-6})$
= 2.5×0.9975
= 2.49 volts

At this time the voltage across the resistor is essentially 0.0 volts and current flow is very low.

Inductors are not used in logic circuits. In the typical PC, they are found as part of the CPU power supply circuitry. If you have access to the inside of a PC, you can probably see a small (\sim 1 cm. in diameter) donut-shaped device with wire wrapped around it on the motherboard near the CPU. This is an inductor used to smooth the power supplied to the CPU.

An inductor stores energy in the form of a magnetic field. It reacts slowly to current changes, requiring time for the magnetic field to build. The relationship between voltage at time t across an inductor and current flow through it is given by the equation

$$v = L \frac{\mathrm{d}i}{\mathrm{d}t} \tag{4.38}$$

where L is the value of the inductor in henrys.

Figure 4.22 shows an inductor connected in series with a resistor. When the switch is open

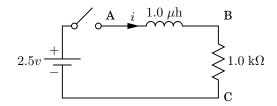


Figure 4.22: Inductor in series with a resistor.

no current flows through this circuit. Upon closing the switch, the inductor initially impedes the flow of current, taking time for a magnetic field to be built up in the inductor.

At this initial point no current is flowing through the resistor, so the voltage across it, v_{BC} , is 0.0 volts. The full voltage of the battery, 2.5 volts, appears across the inductor, v_{AB} . As current begins to flow through the inductor the voltage across the resistor, v_{BC} , grows. This results in an exponentially decreasing voltage across the inductor. When it finally reaches 0.0 volts, the voltage across the resistor is 2.5 volts and current flow in the circuit is 2.5 ma.

The rate of the exponential voltage decrease is given by the time constant L/R. Using the values of R and L in Figure 4.22 we get

$$\frac{L}{R} = \frac{1.0 \times 10^{-6} \text{ henrys}}{1.0 \times 10^{3} \text{ ohms}}$$
$$= 1.0 \times 10^{-9} \text{ seconds}$$
$$= 1.0 \text{nanoseconds}$$

When the switch is closed, the voltage that develops across the inductor over time is given by

$$v_{AB} = 2.5 \times e^{-t/10^{-9}} (4.39)$$

This is shown in Figure 4.23. Note that after about 6 nanoseconds (6 time constants) the voltage

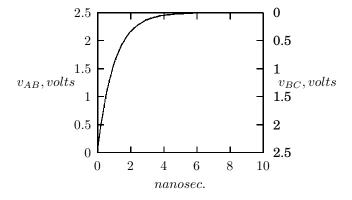


Figure 4.23: Inductor building a magnetic field over time in the circuit in Figure 4.22. The left-hand y-axis shows voltage across the inductor, the right-hand voltage across the resistor.

across the inductor is essentially equal to 0.0 volts. At this time the full voltage of the battery is across the resistor and a steady current of 2.5 ma flows.

This circuit in Figure 4.22 illustrates how inductors are used in a CPU power supply. The battery in this circuit represents the computer power supply, and the resistor represents the load provided by the CPU. The voltage produced by a power supply includes noise, which consists of small, high-frequency fluctuations added to the DC level. As can be seen in Figure 4.23, the voltage supplied to the CPU, v_{BC} , changes little over short periods of time.

4.4.3 CMOS Transistors

The general idea is to use two different voltages to represent 1 and 0. For example, we might use a high voltage, say +2.5 volts, to represent 1 and a low voltage, say 0.0 volts, to represent 0. Logic circuits are constructed from components that can switch between these the high and low voltages.

The basic switching device in today's computer logic circuits is the metal-oxide-semiconductor field-effect transistor (MOSFET). Figure 4.24 shows a NOT gate implemented with a single MOSFET. The MOSFET in this circuit is an n-type. You can think of it as a three-terminal

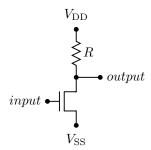


Figure 4.24: A single n-type MOSFET transistor switch.

device. The input terminal is called the *gate*. The terminal connected to the output is the *drain*, and the terminal connected to V_{SS} is the *source*. In this circuit the drain is connected to positive (high) voltage of a DC power supply, V_{DD} , through a resistor, R. The source is connected to the zero voltage, V_{SS} .

When the input voltage to the transistor is high, the gate acquires an electrical charge, thus turning the transistor on. The path between the drain and the source of the transistor essentially become a closed switch. This causes the output to be at the low voltage. The transistor acts as a *pull down* device.

The resulting circuit is equivalent to Figure 4.25(a). In this circuit current flows from V_{DD} to

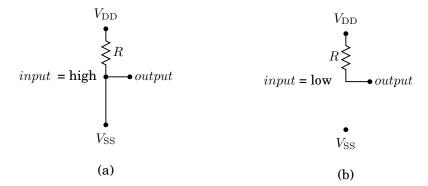


Figure 4.25: Single transistor switch equivalent circuit; (a) switch closed; (b) switch open.

 V_{SS} through the resistor R. The output is connected to V_{SS} , that is, 0.0 volts. The current flow through the resistor and transistor is

$$i = \frac{V_{DD} - V_{SS}}{R} \tag{4.40}$$

The problem with this current flow is that it uses power just to keep the output low.

If the input is switched to the low voltage, the transistor turns off, resulting in the equivalent circuit shown in Figure 4.25(b). The output is typically connected to another transistor's input (its gate), which draws essentially no current, *except* during the time it is switching from one state to the other. In the steady state condition the output connection does not draw current. Since no current flows through the resistor, R, there is no voltage change across it. So the output connection will be at V_{DD} volts, the high voltage. The resistor is acting as the *pull up* device.

These two states can be expressed in the truth table

input	output
low	high
high	low

which is the logic required of a NOT gate.

There is another problem with this hardware design. Although the gate of a MOSFET transistor draws essentially no current in order to remain in either an on or off state, current is required to cause it to change state. The gate of the transistor that is connected to the output must be charged. The gate behaves like a capacitor during the switching time. This charging requires a flow of current over a period of time. The problem here is that the resistor, R, reduces the amount of current that can flow, thus taking larger to charge the transistor gate. (See Section 4.4.2.)

From Equation 4.40, the larger the resistor, the lower the current flow. So we have a dilemma — the resistor should be large to reduce power consumption, but it should be small to increase switching speed.

This problem is solved with Complementary Metal Oxide Semiconductor (CMOS) technology. This technology packages a p-type MOSFET together with each n-type. The p-type works in the opposite way — a high value on the gate turns it off, and a low value turns it on. The circuit in Figure 4.26 shows a NOT gate using a p-type MOSFET as the pull up device.

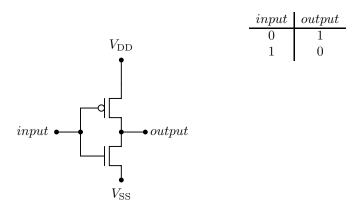


Figure 4.26: CMOS inverter (NOT) circuit.

Figure 4.27(a) shows the equivalent circuit with a high voltage input. The pull up transistor (a p-type) is off, and the pull down transistor (an n-type) is on. This results in the output being pulled down to the low voltage. In Figure 4.27(b) a low voltage input turns the pull up transistor

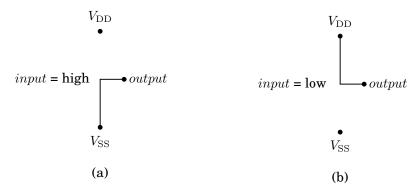


Figure 4.27: CMOS inverter equivalent circuit; (a) pull up open and pull down closed; (b) pull up closed and pull down open.

on and the pull down transistor off. The result is the output is pulled up to the high voltage.

Figure 4.28 shows an AND gate implemented with CMOS transistors. (See Exercise 4-12.) Notice that the signal at point A is NOT(x AND y). The circuit from point A to the output is

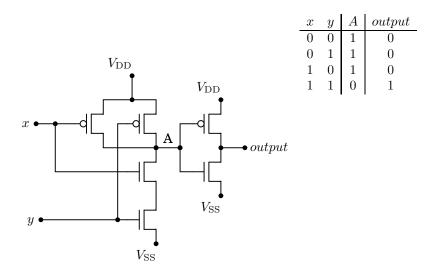


Figure 4.28: CMOS AND circuit.

a NOT gate. It requires two fewer transistors than the AND operation. We will examine the implications of this result in Section 4.5.

4.5 NAND and NOR Gates

The discussion of transistor circuits in Section 4.4.3 illustrates a common characteristic. Because of the inherent way that transistors work, most circuits invert the signal. That is, a high voltage at the input produces a low voltage at the output and vice versa. As a result, an AND gate typically requires a NOT gate at the output in order to achieve a true AND operation.

We saw in that discussion that it takes fewer transistors to produce AND NOT than a pure AND. The combination is so common, it has been given the name NAND gate. And, of course, the same is true for OR gates, giving us a NOR gate.

• NAND — a binary operator; the result is 0 if and only if both operands are 1; otherwise the result is 1. We will use $(x \cdot y)'$ to designate the NAND operation. It is also common to use the ' \uparrow ' symbol or simply "NAND". The hardware symbol for the NAND gate is shown in Figure 4.29. The inputs are x and y. The resulting output, $(x \cdot y)'$, is shown in the truth table in this figure.

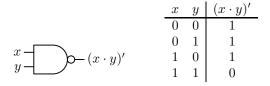


Figure 4.29: The NAND gate acting on two variables, x and y.

• NOR — a binary operator; the result is 0 if at least one of the two operands is 1; otherwise the result is 1. We will use (x+y)' to designate the NOR operation. It is also common to use the ' \downarrow ' symbol or simply "NOR". The hardware symbol for the NOR gate is shown in Figure 4.30. The inputs are x and y. The resulting output, (x+y)', is shown in the truth table in this figure.

The small circle at the output of the NAND and NOR gates signifies "NOT", just as with the NOT gate (see Figure 4.3). Although we have explicitly shown NOT gates when inputs to gates

$$\begin{array}{c|ccccc}
x & y & (x+y)' \\
\hline
0 & 0 & 1 \\
0 & 1 & 0 \\
1 & 0 & 0 \\
1 & 1 & 0
\end{array}$$

Figure 4.30: The NOR gate acting on two variables, *x* and *y*.

are complemented, it is common to simply use these small circles at the input. For example, Figure 4.31 shows an OR gate with both inputs complemented. As the truth table in this figure

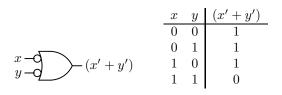


Figure 4.31: An alternate way to draw a NAND gate.

shows, this is an alternate way to draw a NAND gate. See Exercise 4-14 for an alternate way to draw a NOR gate.

One of the interesting properties about NAND gates is that it is possible to build AND, OR, and NOT gates from them. That is, the NAND gate is sufficient to implement any Boolean function. In this sense, it can be though of as a universal gate.

First, we construct a NOT gate. To do this, simply connect the signal to both inputs of a NAND gate, as shown in Figure 4.32.

$$x - (x \cdot x)' = x'$$

Figure 4.32: A NOT gate built from a NAND gate.

Next, we can use deMorgan's Law to derive an AND gate.

$$(x \cdot y)' = x' + y'$$

$$(x' + y')' = (x')' \cdot (y')'$$

$$= x \cdot y$$

So we need two NAND gates connected as shown in Figure 4.33.

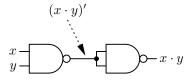


Figure 4.33: An AND gate built from two NAND gates.

Again, using deMorgan's Law

$$(x' \cdot y')' = (x')' + (y')'$$
$$= x + y$$

we use three NAND gates connected as shown in Figure 4.34 to create an OR gate.

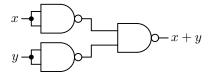


Figure 4.34: An OR gate built from three NAND gates.

It may seem like we are creating more complexity in order to build circuits from NAND gates. But consider the function

$$F(w, x, y, z) = (w \cdot x) + (y \cdot z)$$
 (4.41)

Without knowing how logic gates are constructed, it would be reasonable to implement this function with the circuit shown in Figure 4.35. Using the involution property (Equation 4.15) it

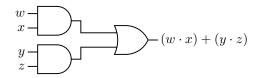


Figure 4.35: The function in Equation 4.41 using two AND gates and one OR gate.

is clear that the circuit in Figure 4.36 is equivalent to the one in Figure 4.35.

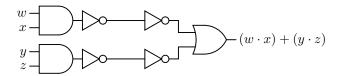


Figure 4.36: The function in Equation 4.41 using two AND gates, one OR gate and four NOT gates.

Next, comparing the AND-gate/NOT-gate combination with Figure 4.29, we see that each is simply a NAND gate. Similarly, comparing the NOT-gates/OR-gate combination with Figure 4.31, it is also a NAND gate. Thus we can also implement the function in Equation 4.41 with three NAND gates as shown in Figure 4.37.

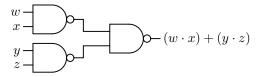


Figure 4.37: The function in Equation 4.41 using only three NAND gates.

From simply viewing the circuit diagrams, it may seem that we have not gained anything in this circuit transformation. But we saw in Section 4.4.3 that a NAND gate requires fewer transistors than an AND gate or OR gate due to the signal inversion properties of transistors. Thus, the NAND gate implementation is a less expensive and faster implementation.

The conversion from an AND/OR/NOT gate design to one that uses only NAND gates is straightforward:

- 1. Express the function as a minimal SoP.
- 2. Convert the products (AND terms) and the final sum (OR) to NANDs.
- 3. Add a NAND gate for any product with only a single literal.

As with software, hardware design is an iterative process. Since there usually is not a unique solution, you often need to develop several designs and analyze each one within the context of the available hardware. The example above shows that two solutions that look the same on paper may be dissimilar in hardware.

In Chapter 6 we will see how these concepts can be used to construct the heart of a computer — the CPU.

4.6 Exercises

- **4-1** (§4.1) Prove the *identity* property expressed by Equations 4.3 and 4.4.
- **4-2** (§4.1) Prove the *commutative* property expressed by Equations 4.5 and 4.6.
- **4-3** (§4.1) Prove the *null* property expressed by Equations 4.7 and 4.8.
- **4-4** (§4.1) Prove the *complement* property expressed by Equations 4.9 and 4.10.
- **4-5** (§4.1) Prove the *idempotent* property expressed by Equations 4.11 and 4.12.
- **4-6** (§4.1) Prove the *distributive* property expressed by Equations 4.13 and 4.14.
- **4-7** (§4.1) Prove the *involution* property expressed by Equation 4.15.
- **4-8** (§4.2) Show that Equations 4.18 and 4.19 represent the same function. This shows that the sum of minterms and product of maxterms are complementary.
- **4-9** (§4.3.2) Show where each minterm is located with this Karnaugh map axis labeling using the notation of Figure 4.9.

4-10 (§4.3.2) Show where each minterm is located with this Karnaugh map axis labeling using the notation of Figure 4.9.

F(x, y, z)	xz			
	00	01	11	10
y = 0				
1				

- **4-11** (§4.3.2) Design a logic function that detects the prime single-digit numbers. Assume that the numbers are coded in 4-bit BCD (see Section 3.6.1, page 50). The function is 1 for each prime number.
- **4-12** (§4.4.3) Using drawings similar to those in Figure 4.27, verfy that the logic circuit in Figure 4.28 is an AND gate.
- **4-13** (§4.5) Show that the gate in Figure 4.31 is a NAND gate.
- **4-14** (§4.5) Give an alternate way to draw a NOR gate, similar to the alternate NAND gate in Figure 4.31.

4.6. EXERCISES 81

4-15 (§4.5) Design a circuit using NAND gates that detects the "below" condition for two 2-bit values. That is, given two 2-bit variables x and y, F(x,y)=1 when the unsigned integer value of x is less than the unsigned integer value of y.

- a) Give a truth table for the output of the circuit, F.
- b) Find a minimal sum of products for F.
- c) Implement F using NAND gates.

Chapter 5

Logic Circuits

In this chapter we examine how the concepts in Chapter 4 can be used to build some of the logic circuits that make up a CPU, Memory, and other devices. We will not describe an entire unit, only a few small parts. The goal is to provide an introductory overview of the concepts. There are many excellent books that cover the details. For example, see [20], [23], or [24] for circuit design details and [28], [31], [34] for CPU architecture design concepts.

Logic circuits can be classified as either

- **Combinational Logic Circuits** the output(s) depend only on the input(s) at any specific time and not on any previous input(s).
- **Sequential Logic Circuits** the output(s) depend both on previous and current input(s).

An example of the two concepts is a television remote control. You can enter a number and the output (a particular television channel) depends only on the number entered. It does not matter what channels been viewed previously. So the relationship between the input (a number) and the output is *combinational*.

The remote control also has inputs for stepping either up or down one channel. When using this input method, the channel selected depends on what channel has been previously selected and the sequence of up/down button pushes. The channel up/down buttons illustrate a *sequential* input/output relationship.

Although a more formal definition will be given in Section 5.3, this television example also illustrates the concept of *state*. My television remote control has a button I can push that will show the current channel setting. If I make a note of the beginning channel setting, and keep track of the sequence of channel up and down button pushes, I will know the ending channel setting. It does not matter how I originally got to the beginning channel setting. The channel setting is the state of the channel selection mechanism because it tells me everything I need to know in order to select a new channel by using a sequence of channel up and down button pushes.

5.1 Combinational Logic Circuits

Combinational logic circuits have no memory. The output at any given time depends completely upon the circuit configuration and the input(s).

5.1.1 Adder Circuits

One of the most fundamental operations the ALU must do is to add two bits. The possible results are:

$$0+0 = 00$$

 $0+1 = 01$

$$1+0 = 01$$

 $1+1 = 10$

As you have seen in Section 3.1 (page 28), the 1 in the last sum (1 + 1 = 10) is carried to the next higher-order bit when performing multi-bit addition. This implies that addition of the next higher-order bits must be able to add three bits:

$$\begin{array}{rcl} 0+0+0 & = & 00 \\ 0+0+1 & = & 01 \\ 0+1+0 & = & 01 \\ 0+1+1 & = & 10 \\ 1+0+0 & = & 01 \\ 1+0+1 & = & 10 \\ 1+1+0 & = & 10 \\ 1+1+1 & = & 11 \end{array}$$

We will construct two adders:

half adder: A combinational logic device that has two 1-bit inputs, x_i and y_i , and two outputs that are related as shown in the truth table (where x_i is the i^{th} bit of the multiple bit value, x):

x_i	y_i	$Carry_{i+1}$	Sum_i
0	0	0	0
0	1	0	1
1	0	0	1
1	1	1	0

full adder: A combinational logic device that has three 1-bit inputs, $Carry_i$, x_i , and y_i , and two outputs that are related:

$Carry_i$	x_i	y_i	$Carry_{i+1}$	Sum_i
0	0	0	0	0
0	0	1	0	1
0	1	0	0	1
0	1	1	1	0
1	0	0	0	1
1	0	1	1	0
1	1	0	1	0
1	1	1	1	1

 $Carry_{i+1}$ is the carry from adding the next-lower significant bits, x_i , y_i , and $Carry_i$.

The terms *half adder* and *full adder* come from the fact that a full adder can be constructed from two half adders, with the addition of a carry input.

We begin with a half adder. Looking at the sum in the definition of half adder, it is easy to see that this is simply the XOR of the two inputs. The carry is the AND of the two inputs. This leads to the circuit in Figure 5.1.

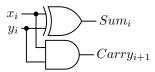


Figure 5.1: A half adder circuit.

The full adder is not as obvious. First, let us look at the Karnaugh map for the sum:

Sum_i	x_iy_i							
	00	01	11	10				
$Carry_i^0$		1		1				
1	1		1					

The diagonal pattern suggests that the XOR operation can be used in our solution, and the half adder used an XOR operation. But the pattern is difficult to see, because we have a map that shows minterms and there are no obvious groupings.

So let us try an algebraic approach. We can write the function as a sum of product terms from the Karnaugh map.

$$Sum_{i}(Carry_{i}, x_{i}, y_{i}) = Carry'_{i} \cdot x'_{i} \cdot y_{i} + Carry'_{i} \cdot x_{i} \cdot y'_{i} + Carry_{i} \cdot x'_{i} \cdot y'_{i} + Carry_{i} \cdot x_{i} \cdot y_{i}$$

$$(5.1)$$

Using the distribution rule, we can rearrange:

$$Sum_{i}(Carry_{i}, x_{i}, y_{i}) = Carry'_{i} \cdot (x'_{i} \cdot y_{i} + x \cdot y'_{i}) + Carry_{i} \cdot (x'_{i} \cdot y'_{i} + x_{i} \cdot y_{i})$$

$$= Carry'_{i} \cdot (x_{i} \oplus y_{i}) + Carry_{i} \cdot (x'_{i} \cdot y'_{i} + x_{i} \cdot y_{i})$$
(5.2)

Let us manipulate the last product term in Equation 5.2.

$$x'_{i} \cdot y'_{i} + x_{i} \cdot y_{i} = x_{i} \cdot x'_{i} + x_{i} \cdot y_{i} + x'_{i} \cdot y'_{i} + y_{i} \cdot y'_{i}$$

$$= x_{i} \cdot (x'_{i} + y_{i}) + y'_{i} \cdot (x'_{i} + y_{i})$$

$$= (x_{i} + y'_{i}) \cdot (x'_{i} + y_{i})'$$

$$= (x_{i} \oplus y_{i})'$$

So the right side of Equation 5.2 is in the form

$$a' \cdot b + a \cdot b'$$

where

$$\begin{array}{rcl} a & = & Carry_i \\ b & = & x_i \oplus y_i \end{array}$$

Thus, we conclude:

$$Sum_i(Carry_i, x_i, y_i) = Carry_i \oplus (x_i \oplus y_i)$$
 (5.3)

Now for the carry:

Let us first group the two minterms:

You should be able to see two other possible groupings on this Karnaugh map and may wonder why they are not circled here. The two ungrouped minterms, $Carry_i \cdot x_i' \cdot y_i$ and $Carry_i \cdot x_i \cdot y_i'$, form a pattern that suggests an *exclusive or* operation.

This grouping yields a three-term function that defines when $Carry_{i+1} = 1$:

$$Carry_{i+1} = x_i \cdot y_i + Carry_i \cdot x'_i \cdot y_i + Carry_i \cdot x_i \cdot y'_i$$

$$= x_i \cdot y_i + Carry_i \cdot (x'_i \cdot y_i + x_i \cdot y'_i)$$

$$= x_i \cdot y_i + Carry_i \cdot (x_i \oplus y_i)$$
(5.4)

Notice that the first product term in Equation 5.4, $x_i \cdot y_i$, is generated by the Carry portion of a half-adder, and that the exclusive or portion, $x_i \oplus y_i$, of the second product term is generated by the Sum portion. A logic gate implementation of a full adder is shown in Figure 5.2. You can

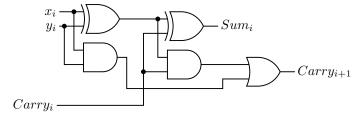


Figure 5.2: A full adder circuit.

see that it is implemented using two half-adders and an OR gate.

5.1.2 Ripple-Carry Addition/Subtraction Circuits

An *n*-bit adder can be implemented with *n* full adders. Figure 5.3 shows a 4-bit adder. Addition

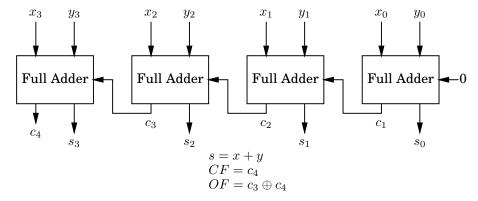


Figure 5.3: Four-bit adder.

begins with the full adder on the right receiving the two lowest-order bits, x_0 and y_0 . Since this is the lowest-order bit there is no carry and $c_0 = 0$. The bit sum is s_0 , and the carry from this addition, c_1 , is connected to the carry input of the next full adder to the left, where it is added to x_1 and y_1 .

So the i^{th} full adder adds the two i^{th} bits of the operands, plus the carry (which is either 0 or 1) from the $(i-1)^{th}$ full adder. Thus, each full adder handles one bit (often referred to as a "slice") of the total width of the values being added, and the carry "ripples" from the lowest-order place to the highest-order.

The final carry from the highest-order full adder, c_4 in the 4-bit adder of Figure 5.3, is stored in the CF bit of the Flags register (see Section 6.2). And the exclusive or of the final carry and penultimate carry, $c_4 \oplus c_3$ in the 4-bit adder of Figure 5.3, is stored in the OF bit.

Recall that in the 2's complement code for storing integers a number is negated by taking its 2's complement. So we can subtract y from x by doing:

```
x - y = x + (2's complement of y)
= x + [(y's bits flipped) + 1]
```

Thus, subtraction can be performed with our adder in Figure 5.3 if we complement each y_i and set the initial carry in to 1 instead of 0. Each y_i can be complemented by XOR-ing it with 1. This leads to the 4-bit circuit in Figure 5.4 that will add two 4-bit numbers when func = 0 and subtract them when func = 1.

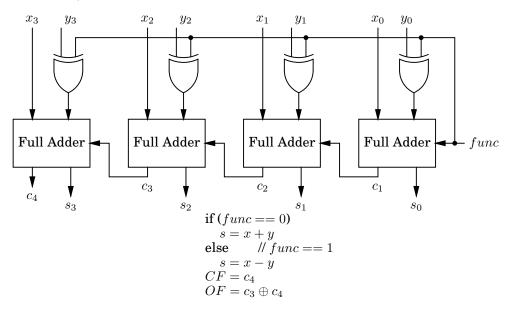


Figure 5.4: Four-bit adder/subtracter.

There is, of course, a time delay as the sum is computed from right to left. The computation time can be significantly reduced through more complex circuit designs that pre-compute the carry.

5.1.3 Decoders

Each instruction must be decoded by the CPU before the instruction can be carried out. In the x86-64 architecture the instruction for copying the 64 bits of one register to another register is

```
0100 0s0d 1000 1001 11ss sddd
```

where "ssss" specifies the source register and "dddd" specifies the destination register. (Yes, the bits that specify the registers are distributed through the instruction in this manner. You will learn more about this seemingly odd coding pattern in Chapter 9.) For example,

```
0100 0001 1000 1001 1100 0101
```

causes the ALU to copy the 64-bit value in register 0000 to register 1101. You will see in Chapter 9 that this instruction is written in assembly language as:

```
movq %rax, %r13
```

The Control Unit must select the correct two registers based on these two 4-bit patterns in the instruction. It uses a *decoder* circuit to perform this selection.

decoder: A device with n binary inputs and 2^n binary outputs. Each bit pattern at the input causes exactly one of the 2^n to equal 1.

A decoder can be thought of as converting an n-bit input to a 2^n output. But while the input can be an arbitrary bit pattern, each corresponding output value has only one bit set to 1.

In some applications not all the 2^n outputs are used. For example, Table 5.1 is a truth table that shows how a decoder can be used to convert a BCD value to its corresponding decimal numeral display. A 1 in a "display" column means that is the numeral that is selected by the

	inj	out		display									
x_3	x_2	x_1	x_0	'9'	'8'	'7'	'6'	'5'	'4'	′3′	'2'	′1′	′0′
0	0	0	0	0	0	0	0	0	0	0	0	0	1
0	0	0	1	0	0	0	0	0	0	0	0	1	0
0	0	1	0	0	0	0	0	0	0	0	1	0	0
0	0	1	1	0	0	0	0	0	0	1	0	0	0
0	1	0	0	0	0	0	0	0	1	0	0	0	0
0	1	0	1	0	0	0	0	1	0	0	0	0	0
0	1	1	0	0	0	0	1	0	0	0	0	0	0
0	1	1	1	0	0	1	0	0	0	0	0	0	0
1	0	0	0	0	1	0	0	0	0	0	0	0	0
1	0	0	1	1	0	0	0	0	0	0	0	0	0

Table 5.1: BCD decoder. The 4-bit input causes the numeral with a 1 in its column to be displayed.

corresponding 4-bit input value. There are six other possible outputs corresponding to the input values 1010 - 1111. But these input values are illegal in BCD, so these outputs are simply ignored.

It is common for decoders to have an additional input that is used to enable the output. The truth table in Table 5.2 shows a decoder with a 3-bit input, an enable line, and an 8-bit (2^3) output. The output is 0 whenever enable = 0. When enable = 1, the i^{th} output bit is 1 if and

enable	x_2	x_1	x_0	y_7	y_6	y_5	y_4	y_3	y_2	y_1	y_0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0
1	0	0	0	0	0	0	0	0	0	0	1
1	0	0	1	0	0	0	0	0	0	1	0
1	0	1	0	0	0	0	0	0	1	0	0
1	0	1	1	0	0	0	0	1	0	0	0
1	1	0	0	0	0	0	1	0	0	0	0
1	1	0	1	0	0	1	0	0	0	0	0
1	1	1	0	0	1	0	0	0	0	0	0
1	1	1	1	1	0	0	0	0	0	0	0

Table 5.2: Truth table for a 3×8 decoder with *enable*. If *enable* = 0, y = 0. If *enable* = 1, $x = i \Rightarrow y_i = 1$ and $y_i = 0$ for all $j \neq i$.

only if the binary value of the input is equal to *i*. For example, when enable = 1 and $x = 011_2$, $y = 00001000_2$. That is,

$$y_3 = x_2' \cdot x_1 \cdot x_0$$
$$= m_2$$

This clearly generalizes such that we can give the following description of a decoder:

1. For n input bits (excluding an enable bit) there are 2^n output bits.

2. The i^{th} output bit is equal to the i^{th} minterm for the n input bits.

The 3×8 decoder specified in Table 5.2 can be implemented with 4-input AND gates as shown in Figure 5.5.

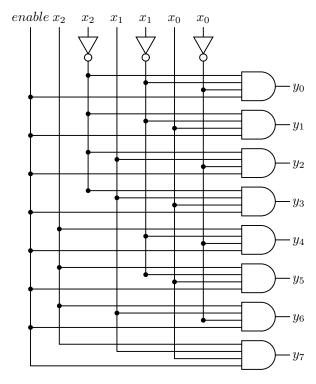


Figure 5.5: Circuit for a 3×8 decoder with enable.

Decoders are more versatile than it might seem at first glance. Each possible input can be seen as a minterm. Since each output is one only when a particular minterm evaluates to one, a decoder can be viewed as a "minterm generator." We know that any logical expression can be represented as the OR of minterms, so it follows that we can implement any logical expression by ORing the output(s) of a decoder.

For example, let us rewrite Equation 5.1 for the Sum expression of a full adder using minterm notation (see Section 4.3.2):

$$Sum_i(Carry_i, x_i, y_i) = m_1 + m_2 + m_4 + m_7$$
 (5.5)

And for the Carry expression:

$$Carry_{i+1}(Carry_i, x_i, y_i) = m_3 + m_5 + m_6 + m_7$$
 (5.6)

where the subscripts on x, y, and Carry refer to the bit slice and the subscripts on m are part of the minterm notation. We can implement a full adder with a 3×8 decoder and two 4-input OR gates, as shown in Figure 5.6.

5.1.4 Multiplexers

There are many places in the CPU where one of several signals must be selected to pass onward. For example, as you will see in Chapter 9, a value to be added by the ALU may come from a CPU register, come from memory, or actually be stored as part of the instruction itself. The device that allows this selection is essentially a switch.

multiplexer: A device that selects one of multiple inputs to be passed on as the output based on one or more selection lines. Up to 2^n inputs can be selected by n selection lines. Also called a mux.

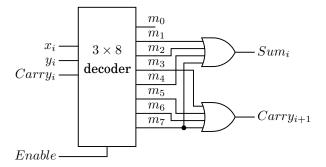


Figure 5.6: Full adder implemented with 3×8 decoder. This is for one bit slice. An n-bit adder would require n of these circuits.

Figure 5.7 shows a multiplexer that can switch between two different inputs, x and y. The select input, s, determines which of the sources, either x or y, is passed on to the output. The action of this 2-way multiplexer is most easily seen in a truth table:

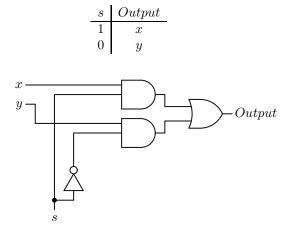


Figure 5.7: A 2-way multiplexer.

Here is a truth table for a multiplexer that can switch between four inputs, w, x, y, and z:

s_1	s_0	Output
0	0	w
0	1	x
1	0	y
1	1	z

That is,

$$Output = s'_0 \cdot s'_1 \cdot w + s'_0 \cdot s_1 \cdot x + s_0 \cdot S'_1 \cdot y + s_0 \cdot s_1 \cdot z$$
 (5.7)

which is implemented as shown in Figure 5.8. The symbol for this multiplexer is shown in Figure 5.9. Notice that the selection input, s, must be 2 bits in order to select between four inputs. In general, a 2^n -way multiplexer requires an n-bit selection input.

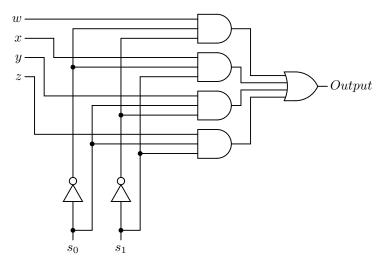


Figure 5.8: A 4-way multiplexer.

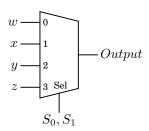


Figure 5.9: Symbol for a 4-way multiplexer.

5.2 Programmable Logic Devices

Combinational logic circuits can be constructed from *programmable logic devices (PLDs)*. The general idea is illustrated in Figure 5.10 for two input variables and two output functions of these variables. Each of the input variables, both in its uncomplemented and complemented

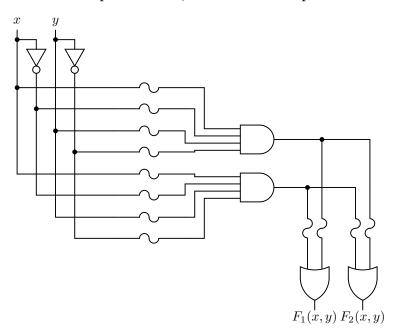


Figure 5.10: Simplified circuit for a programmable logic array. The "S" shaped line at the inputs to each gate represent fuses. The fuses are "blown" to remove that input.

form, are inputs to AND gates through fuses. (The "S" shaped lines in the circuit diagram represent fuses.) The fuses can be "blown" or left in place in order to program each AND gate to output a product. Since every input, plus its complement, is input to each AND gate, any of the AND gates can be programmed to output a minterm.

The products produced by the array of AND gates are all connected to OR gates, also through fuses. Thus, depending on which OR-gate fuses are left in place, the output of each OR gate is a sum of products. There may be additional logic circuitry to select between the different outputs. We have already seen that any Boolean function can be expressed as a sum of products, so this logic device can be programmed by "blowing" the fuses to implement any Boolean function.

PLDs come in many configurations. Some are pre-programmed at the time of manufacture. Others are programmed by the manufacturer. And there are types that can be programmed by a user. Some can even be erased and reprogrammed. Programming technologies range from specifying the manufacturing mask (for the pre-programmed devices) to inexpensive electronic programming systems. Some devices use "antifuses" instead of fuses. They are normally open. Programming such devices consists of completing the connection instead of removing it.

There are three general categories of PLDs:

Programmable Logic Array (PLA): Both the AND gate plane and the OR gate plane are programmable.

Read Only Memory (ROM): Only the OR gate plane is programmable.

Programmable Array Logic (PAL): Only the AND gate plane is programmable.

We will now look at each category in more detail.

5.2.1 Programmable Logic Array (PLA)

Programmable logic arrays are typically larger than the one shown in Figure 5.10, which is already complicated to draw. Figure 5.11 shows how PLAs are typically diagrammed. This

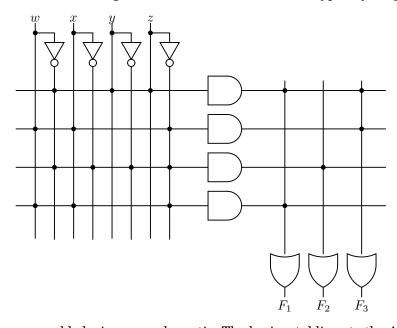


Figure 5.11: Programmable logic array schematic. The horizontal lines to the AND gate inputs represent multiple wires — one for each input variable and its complement. The vertical lines to the OR gate inputs also represent multiple wires — one for each AND gate output. The dots represent connections.

diagram deserves some explanation. Note in Figure 5.10 that each input variable and its complement is connected to the inputs of all the AND gates through a fuse. The AND gates have multiple inputs — one for each variable and its complement. Thus, the horizontal line leading

to the inputs of the AND gates represent multiple wires. The diagram of Figure 5.11 has four input variables. So each AND gate has eight inputs, and the horizontal lines each represent the eight wires coming from the inputs and their complements.

The dots at the intersections of the vertical and horizontal line represent places where the fuses have been left intact. For example, the three dots on the topmost horizontal line indicate that there are three inputs to that AND gate The output of the topmost AND gate is

$$w' \cdot y \cdot z$$

Referring again to Figure 5.10, we see that the output from each AND gate is connected to each of the OR gates. Therefore, the OR gates also have multiple inputs — one for each AND gate — and the vertical lines leading to the OR gate inputs represent multiple wires. The PLA in Figure 5.11 has been programmed to provide the three functions:

$$F_1(w, x, y, z) = w' \cdot y \cdot z + w \cdot x \cdot z'$$

$$F_2(w, x, y, z) = w' \cdot x' \cdot y' \cdot z'$$

$$F_3(w, x, y, z) = w' \cdot y \cdot z + w \cdot x \cdot z'$$

5.2.2 Read Only Memory (ROM)

Read only memory can be implemented as a programmable logic device where only the OR plane can be programmed. The AND gate plane is wired to provide all the minterms. Thus, the inputs to the ROM can be thought of as addresses. Then the OR gate plane is programmed to provide the bit pattern at each address.

For example, the ROM diagrammed in Figure 5.12 has two inputs, a_1 and a_0 . The AND gates

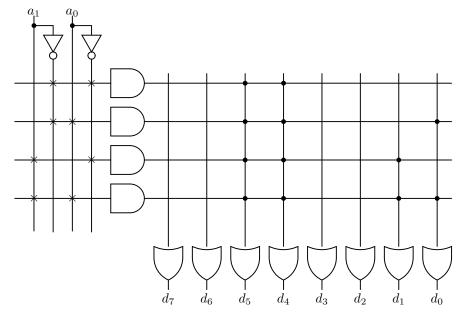


Figure 5.12: Eight-byte Read Only Memory (ROM). The "×" connections represent permanent connections. Each AND gate can be thought of as producing an address. The eight OR gates produce one byte. The connections (dots) in the OR plane represent the bit pattern stored at the address.

are wired to give the minterms:

minterm	address
$a'_{1}a'_{0}$	00
a'_1a_0	01
a_1a_0'	10
$a_1 a_0$	11

And the OR gate plane has been programmed to store the four characters (in ASCII code):

minterm	address	contents
$a_1'a_0'$	00	′0′
$a_1'a_0$	01	'1'
a_1a_0'	10	'2'
$a_1 a_0$	11	′3′

You can see from this that the terminology "Read Only *Memory*" is perhaps a bit misleading. It is actually a *combinational* logic circuit. Strictly speaking, memory has a state that can be changed by inputs. (See Section 5.3.)

5.2.3 Programmable Array Logic (PAL)

In a Programmable Array Logic (PAL) device, each OR gate is permanently wired to a group of AND gates. Only the AND gate plane is programmable. The PAL diagrammed in Figure 5.13 has four inputs. It provides two outputs, each of which can be the sum of up to four products. The "×" connections in the OR gate plane show that the top four AND gates are summed to produce F_1 and the lower four to produce F_2 . The AND gate plane in this figure has been programmed to produce the two functions:

$$F_1(w, x, y, z) = w \cdot x' \cdot z + w' \cdot x + w \cdot x \cdot y' + w' \cdot x' \cdot y' \cdot z'$$

$$F_2(w, x, y, z) = w' \cdot y \cdot z + w \cdot x \cdot z' + w \cdot x \cdot y \cdot z + w \cdot x \cdot y' \cdot z'$$

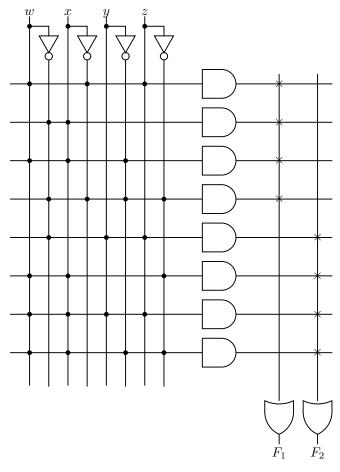


Figure 5.13: Two-function Programmable Array Logic (PAL). The "×" connections represent permanent connections. Each AND gate can be thought of as producing an address. The eight OR gates produce one byte. The connections (dots) in the OR plane represent the bit pattern stored at the address.

5.3 Sequential Logic Circuits

Combinational circuits (Section 5.1) are instantaneous (except for the time required for the electronics to settle). Their output depends only on the input at the time the output is observed. Sequential logic circuits, on the other hand, have a time history. That history is summarized by the current *state* of the circuit.

state: The state of a system is the description of the system such that knowing

- (a) the state at time t_0 , and
- (b) the input(s) from time t_0 through time t_1 ,

uniquely determines

- (c) the state at time t_1 , and
- (d) the output(s) from time t_0 through time t_1 .

This definition means that knowing the state of a system at a given time tells you everything you need to know in order to specify its behavior from that time on. How it got into this state is irrelevant.

This definition implies that the system has memory in which the state is stored. Since there are a finite number of states, the term *finite state machine*(*FSM*) is commonly used. Inputs to the system can cause the state to change.

If the output(s) depend only on the state of the FSM, it is called a *Moore machine*. And if the output(s) depend on both the state and the current input(s), it is called a *Mealy machine*.

The most commonly used sequential circuits are *synchronous* — their action is controlled by a sequence of *clock pulses*. The clock pulses are created by a *clock generator* circuit. The clock pulses are applied to all the sequential elements, thus causing them to operate in synchrony.

Asynchronous sequential circuits are not based on a clock. They depend upon a timing delay built into the individual elements. Their behavior depends upon the order in which inputs are applied. Hence, they are difficult to analyze and will not be discussed in this book.

5.3.1 Clock Pulses

A clock signal is typically a square wave that alternates between the 0 and 1 levels as shown in Figure 5.14 The amount of time spent at each level may be unequal. Although not a requirement, the timing pattern is usually uniform.

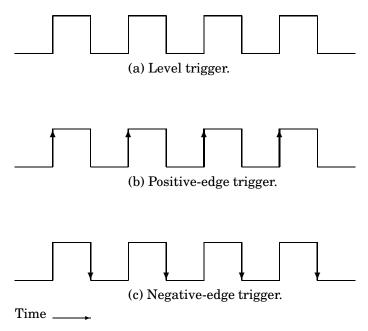


Figure 5.14: Clock signals. (a) For level-triggered circuits. (b) For positive-edge triggering. (c) For negative-edge triggering.

In Figure 5.14(a), the circuit operations take place during the entire time the clock is at the 1 level. As will be explained below, this can lead to unreliable circuit behavior. In order to achieve more reliable behavior, most circuits are designed such that a *transition* of the clock signal triggers the circuit elements to start their respective operations. Either a positive-going (Figure 5.14(b)) or negative-going (Figure 5.14(c)) transition may be used. The clock frequency must be slow enough such that all the circuit elements have time to complete their operations before the next clock transition (in the same direction) occurs.

5.3.2 Latches

A latch is a storage device that can be in one of two states. That is, it stores one bit. It can be constructed from two or more gates connected such that feedback maintains the state as long as power is applied. The most fundamental latch is the SR (Set-Reset).

A simple implementation using NOR gates is shown in Figure 5.15. When $Q=1 \ (\Leftrightarrow Q'=0)$ it is in the *Set* state. When $Q=0 \ (\Leftrightarrow Q'=1)$ it is in the *Reset* state.

There are four possible input combinations.

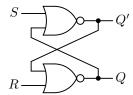


Figure 5.15: NOR gate implementation of an SR latch.

S = 0, R = 0: Keep current state. If Q = 0 and Q' = 1, the output of the upper NOR gate is (0+0)' = 1, and the output of the lower NOR gate is (1+0)' = 0.

If Q = 1 and Q' = 0, the output of the upper NOR gate is (0+1)' = 0, and the output of the lower NOR gate is (0+0)' = 1.

Thus, the cross feedback between the two NOR gates maintains the state — Set or Reset — of the latch.

S = 1, R = 0: Set. If Q = 1 and Q' = 0, the output of the upper NOR gate is (1+1)' = 0, and the output of the lower NOR gate is (0+0)' = 1. The latch remains in the Set state.

If Q=0 and Q'=1, the output of the upper NOR gate is (1+0)'=0. This is fed back to the input of the lower NOR gate to give (0+0)'=1. The feedback from the output of the lower NOR gate to the input of the upper keeps the output of the upper NOR gate at (1+1)'=0. The latch has moved into the *Set* state.

S = 0, R = 1: Reset. If Q = 1 and Q' = 0, the output of the lower NOR gate is (0 + 1)' = 0. This causes the output of the upper NOR gate to become (0 + 0)' = 1. The feedback from the output of the upper NOR gate to the input of the lower keeps the output of the lower NOR gate at (1 + 1)' = 0. The latch has moved into the Reset state.

If Q = 0 and Q' = 1, the output of the lower NOR gate is (1+1)' = 0, and the output of the upper NOR gate is (0+0)' = 1. The latch remains in the *Reset* state.

S = 1, R = 1: Not allowed. If Q = 0 and Q' = 1, the output of the upper NOR gate is (1+0)' = 0. This is fed back to the input of the lower NOR gate to give (0+1)' = 0 as its output. The feedback from the output of the lower NOR gate to the input of the upper maintains its output as (1+0)' = 0. Thus, Q = Q' = 0, which is not allowed.

If Q=1 and Q'=0, the output of the lower NOR gate is (0+1)'=0. This is fed back to the input of the upper NOR gate to give (1+0)'=0 as its output. The feedback from the output of the upper NOR gate to the input of the lower maintains its output as (0+1)'=0. Thus, Q=Q'=0, which is not allowed.

The state table in Table 5.3 summarizes the behavior of a NOR-based SR latch. The inputs

		Current	Next
S	R	State	State
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	\mathbf{X}
1	1	1	X

Table 5.3: SR latch state table. "X" indicates an indeterminate state. A circuit using this latch must be designed to prevent this input combination.

to a NOR-based SR latches are normally held at 0, which maintains the current state, Q. Its

current state is available at the output. Momentarily changing S or R to 1 causes the state to change to Set or Reset, respectively, as shown in the Q_{next} column.

Notice that placing 1 on both the Set and Reset inputs at the same time causes a problem. Then the outputs of both NOR gates would become 0. In other words, Q = Q' = 0, which is logically impossible. The circuit design must be such to prevent this input combination.

The behavior of an SR latch can also be shown by the state diagram in Figure 5.16 A state

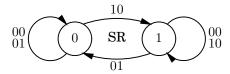


Figure 5.16: State diagram for an SR latch. There are two possible inputs, 00 or 01, that cause the latch to remain in state 0. Similarly, 00 or 10 cause it to remain in state 1. Since the output is simply the state, it is not shown in this state diagram. Notice that the input 11 is not allowed, so it is not shown on the diagram.

diagram is a directed graph. The circles show the possible states. Lines with arrows show the possible transitions between the states and are labeled with the input that causes the transition.

The two circles in Figure 5.16 show the two possible states of the SR latch — 0 or 1. The labels on the lines show the two-bit inputs, SR, that cause each state transition. Notice that when the latch is in state 0 there are two possible inputs, SR=00 and SR=01, that cause it to remain in that state. Similarly, when it is in state 1 either of the two inputs, SR=00 or SR=10, cause it to remain in that state.

The output of the SR latch is simply the state so is not shown separately on this state diagram. In general, if the output of a circuit is dependent on the input, it is often shown on the directed lines of the state diagram in the format "input/output." If the output is dependent on the state, it is more common to show it in the corresponding state circle in "state/output" format.

NAND gates are more commonly used than NOR gates, and it is possible to build an SR latch from NAND gates. Recalling that NAND and NOR have complementary properties, we will think ahead and use S' and R' as the inputs, as shown in Figure 5.17. Consider the four

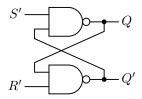


Figure 5.17: NAND gate implementation of an S'R' latch.

possible input combinations.

S' = 1, R' = 1: Keep current state. If Q = 0 and Q' = 1, the output of the upper NAND gate is $(1 \cdot 1)' = 0$, and the output of the lower NAND gate is $(0 \cdot 1)' = 1$.

If Q = 1 and Q' = 0, the output of the upper NAND gate is $(1 \cdot 0)' = 1$, and the output of the lower NAND gate is $(1 \cdot 1)' = 0$.

Thus, the cross feedback between the two NAND gates maintains the state — Set or Reset — of the latch.

S' = 0, R' = 1: Set. If Q = 1 and Q' = 0, the output of the upper NAND gate is $(0 \cdot 0)' = 1$, and the output of the lower NAND gate is $(1 \cdot 1)' = 0$. The latch remains in the Set state.

If Q=0 and Q'=1, the output of the upper NAND gate is $(0\cdot 1)'=1$. This causes the output of the lower NAND gate to become $(1\cdot 1)'=0$. The feedback from the output of the lower NAND gate to the input of the upper keeps the output of the upper NAND gate at $(0\cdot 0)'=1$. The latch has moved into the *Set* state.


S' = 1, R' = 0: *Reset.* If Q = 0 and Q' = 1, the output of the lower NAND gate is $(0 \cdot 0)' = 1$, and the output of the upper NAND gate is $(1 \cdot 1)' = 0$. The latch remains in the *Reset* state.

If Q=1 and Q'=0, the output of the lower NAND gate is $(1\cdot 0)'=1$. This is fed back to the input of the upper NAND gate to give $(1\cdot 1)'=0$. The feedback from the output of the upper NAND gate to the input of the lower keeps the output of the lower NAND gate at $(0\cdot 0)'=1$. The latch has moved into the *Reset* state.

S' = 0, R' = 0: Not allowed. If Q = 0 and Q' = 1, the output of the upper NAND gate is $(0 \cdot 1)' = 1$. This is fed back to the input of the lower NAND gate to give $(1 \cdot 0)' = 1$ as its output. The feedback from the output of the lower NAND gate to the input of the upper maintains its output as $(0 \cdot 0)' = 1$. Thus, Q = Q' = 1, which is not allowed.

If Q=1 and Q'=0, the output of the lower NAND gate is $(1\cdot 0)'=1$. This is fed back to the input of the upper NAND gate to give $(0\cdot 1)'=1$ as its output. The feedback from the output of the upper NAND gate to the input of the lower maintains its output as $(1\cdot 1)'=0$. Thus, Q=Q'=1, which is not allowed.

Figure 5.18 shows the behavior of a NAND-based S'R' latch. The inputs to a NAND-based S'R' latch are normally held at 1, which maintains the current state, Q. Its current state is available at the output. Momentarily changing S' or R' to 0 causes the state to change to Set or Reset, respectively, as shown in the "Next State" column.

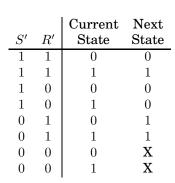

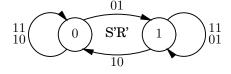


Figure 5.18: State table and state diagram for an S'R' latch. There are two possible inputs, 11 or 10, that cause the latch to remain in state 0. Similarly, 11 or 01 cause it to remain in state 1. Since the output is simply the state, it is not shown in this state diagram. Notice that the input 00 is not allowed, so it is not shown on the diagram.

Notice that placing 0 on both the Set and Reset inputs at the same time causes a problem. Then the outputs of both NOR gates would become 0. In other words, Q = Q' = 0, which is logically impossible. The circuit design must be such to prevent this input combination.

So the S'R' latch implemented with two NAND gates can be thought of as the complement of the NOR gate SR latch. The state is maintained by holding both S' and ' at 1. S'=0 causes the state to be 1 (Set), and R'=0 causes the state to be 0 (Reset). Using S' and R' as the activating signals are usually called *active-low* signals.

You have already seen that ones and zeros are represented by either a high or low voltage in electronic logic circuits. A given logic device may be activated by combinations of the two voltages. To show which is used to cause activation at any given input, the following definitions are used:

active-high signal: The *higher* voltage represents 1. **active-low signal:** The *lower* voltage represents 1.

Warning! The definitions of active-high versus active-low signals vary in the literature. Make sure that you and the people you are working with have a clear agreement on the definitions you are using.

An active-high signal can be connected to an active-low input, but the hardware designer must take the difference into account. For example, say that the required logical input is 1 to an active-low input. Since it is active-low, that means the required voltage is the lower of the two. If the signal to be connected to this input is active-high, then a logical 1 is the higher of the two voltages. So this signal must first be complemented in order to be interpreted as a 1 at the active-low input.

We can get better control over the SR latch by adding two NAND gates to provide a *Control* input, as shown in Figure 5.19. In this circuit the outputs of both the control NAND gates

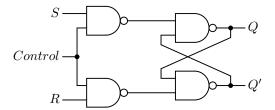


Figure 5.19: SR latch with Control input.

remain at 1 as long as Control=0. Table 5.4 shows the state behavior of the SR latch with control.

			Current	Next
Control	S	R	State	State
0	_	1	0	0
0	_	_	1	1
1	0	0	0	0
1	0	0	1	1
1	0	1	0	0
1	0	1	1	0
1	1	0	0	1
1	1	0	1	1
1	1	1	0	X
1	1	1	1	X

Table 5.4: SR latch with Control state table. "-" indicates that the value does not matter. "X" indicates an indeterminate state. A circuit using this latch must be designed to prevent this input combination.

It is clearly better if we could find a design that eliminates the possibility of the "not allowed" inputs. Table 5.5 is a state table for a D latch. It has two inputs, one for control, the other for data, D. D = 1 sets the latch to 1, and D = 0 resets it to 0.

	Current	Next
D	State	State
_	0	0
_	1	1
0	0	0
0	1	0
1	0	1
1	1	1
	D 0 0 1 1	

Table 5.5: D latch with Control state table. "-" indicates that the value does not matter.

The D latch can be implemented as shown in Figure 5.20. The one data input, D, is fed to the "S" side of the SR latch; the complement of the data value is fed to the "R" side.

Now we have a circuit that can store one bit of data, using the *D* input, and can be synchronized with a clock signal, using the *Control* input. Although this circuit is reliable by itself,

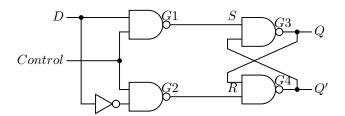


Figure 5.20: D latch constructed from an SR latch.

the issue is whether it is reliable when connected with other circuit elements. The *D* signal almost certainly comes from an interconnection of combinational and sequential logic circuits. If it changes while the *Control* is still 1, the state of the latch will be changed.

Each electronic element in a circuit takes time to activate. It is a very short period of time, but it can vary slightly depending upon precisely how the other logic elements are interconnected and the state of each of them when they are activated. The problem here is that the *Control* input is being used to control the circuit based on the clock signal *level*. The clock level must be maintained for a time long enough to allow all the circuit elements to complete their activity, which can vary depending on what actions are being performed. In essence, the circuit timing is determined by the circuit elements and their actions instead of the clock. This makes it very difficult to achieve a reliable design.

It is much easier to design reliable circuits if the time when an activity can be triggered is made very short. The solution is to use edge-triggered logic elements. The inputs are applied and enough time is allowed for the electronics to settle. Then the next clock *transition* activates the circuit element. This scheme provides concise timing under control of the clock instead of timing determined more of less by the particular circuit design.

5.3.3 Flip-Flops

Although the terminology varies somewhat in the literature, it is generally agreed that (see Figure 5.14.):

- A latch uses a level based clock signal.
- A flip-flop is triggered by a clock signal edge.

At each "tick" of the clock, there are four possible actions that might be taken on a single bit — store 0, store 1, complement the bit (also called *toggle*), or leave it as is.

A *D flip-flop* is a common device for storing a single bit. We can turn the D latch into a D flip-flop by using two D latches connected in a *master/slave* configuration as shown in Figure 5.21. Let us walk through the operation of this circuit.

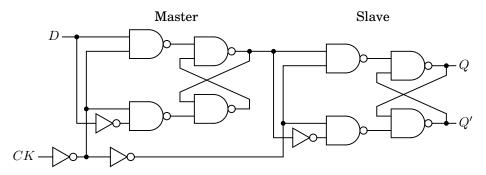


Figure 5.21: D flip-flop, positive-edge triggering.

The bit to be stored, 0 or 1, is applied to the D input of the Master D latch. The clock signal is applied to the CK input. It is normally 0. When the clock signal makes a transition from 0 to 1, the Master D latch will either Reset or Set, following the D input of 0 or 1, respectively.

While the CK input is at the 1 level, the control signal to the Slave D latch is 1, which deactivates this latch. Meanwhile, the output of this flip-flop, the output of the Slave D latch, is probably connected to the input of another circuit, which is activated by the same CK. Since the state of the Slave does not change during this clock half-cycle, the second circuit has enough time to read the current state of the flip-flop connected to its input. Also during this clock half-cycle, the state of the Master D latch has ample time to settle.

When the CK input transitions back to the 0 level, the control signal to the Master D latch becomes 1, deactivating it. At the same time, the control input to the Slave D latch goes to 0, thus activating the Slave D latch to store the appropriate value, 0 or 1. The new input will be applied to the Slave D latch during the second clock half-cycle, after the circuit connected to its output has had sufficient time to read its previous state. Thus, signals travel along a path of logic circuits in lock step with a clock signal.

There are applications where a flip-flop must be set to a known value before the clocking begins. Figure 5.22 shows a D flip-flop with an asynchronous preset input added to it. When a 1

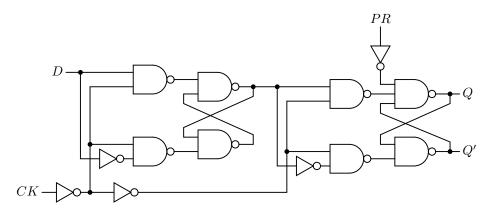


Figure 5.22: D flip-flop, positive-edge triggering with asynchronous preset.

is applied to the PR input, Q becomes 1 and Q' 0, regardless of what the other inputs are, even CLK. It is also common to have an asynchronous clear input that sets the state (and output) to 0.

There are more efficient circuits for implementing edge-triggered D flip-flops, but this discussion serves to show that they can be constructed from ordinary logic gates. They are economical and efficient, so are widely used in very large scale integration circuits. Rather than draw the details for each D flip-flop, circuit designers use the symbols shown in Figure 5.23. The various

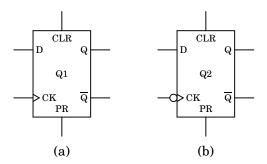
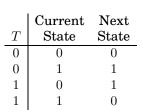


Figure 5.23: Symbols for D flip-flops. Includes asynchronous clear (CLR) and preset (PR). (a) Positive-edge triggering; (b) Negative-edge triggering.

inputs and outputs are labeled in this figure. Hardware designers typically use \overline{Q} instead of Q'. It is common to label the circuit as "Qn," with $n=1,2,\ldots$ for identification. The small circle at the clock input in Figure 5.23(b) means that this D flip-flop is triggered by a negative-going clock transition. The D flip-flop circuit in Figure 5.21 can be changed to a negative-going trigger by simply removing the first NOT gate at the CK input.

The flip-flop that simply complements its state, a *T flip-flop*, is easily constructed from a D flip-flop. The state table and state diagram for a T flip-flop are shown in Figure 5.24.



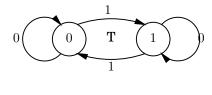


Figure 5.24: T flip-flop state table and state diagram. Each clock tick causes a state transition, with the next state depending on the current state and the value of the input, T.

To determine the value that must be presented to the D flip-flop in order to implement a T flip-flop, we add a column for D to the state table as shown in Table 5.6. By simply looking in

	Current	Next	
T	State	State	D
0	0	0	0
0	1	1	1
1	0	1	1
1	1	0	0

Table 5.6: T flip-flop state table showing the D flip-flop input required to place the T flip-flop in the next state.

the "Next State" column we can see what the input to the D flip-flop must be in order to obtain the correct state. These values are entered in the D column. (We will generalize this design procedure in Section 5.4.)

From Table 5.6 it is easy to write the equation for D:

$$D = T' \cdot Q + T \cdot Q'$$

= $T \oplus Q$ (5.8)

The resulting design for the T flip-flop is shown in Figure 5.25.

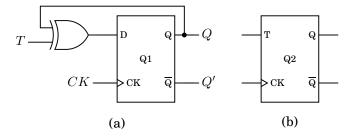


Figure 5.25: T flip-flop. (a) Circuit using a D flip-flop. (b) Symbol for a T flip-flop.

Implementing all four possible actions — set, reset, keep, toggle — requires two inputs, J and K, which leads us to the JK flip-flop. The state table and state diagram for a JK flip-flop are shown in Figure 5.26.

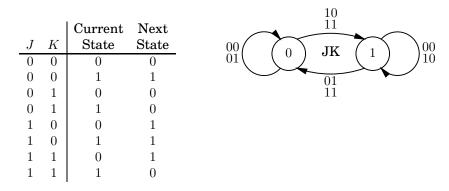


Figure 5.26: JK flip-flop state table and state diagram.

In order to determine the value that must be presented to the D flip-flop we add a column for D to the state table as shown in Table 5.7. shows what values must be input to the D flip-flop.

		Current	Next	
J	K	State	State	D
0	0	0	0	0
0	0	1	1	1
0	1	0	0	0
0	1	1	0	0
1	0	0	1	1
1	0	1	1	1
1	1	0	1	1
1	1	1	0	0

Table 5.7: JK flip-flop state table showing the D flip-flop input required to place the JK flip-flop in the next state.

From this it is easy to write the equation for D:

$$D = J' \cdot K' \cdot Q + J \cdot K' \cdot Q' + J \cdot K' \cdot Q + J \cdot K \cdot Q'$$

$$= J \cdot Q' \cdot (K' + K) + K' \cdot Q \cdot (J + J')$$

$$= J \cdot Q' + K' \cdot Q$$
(5.9)

Thus, a JK flip-flop can be constructed from a D flip-flop as shown in Figure 5.27.

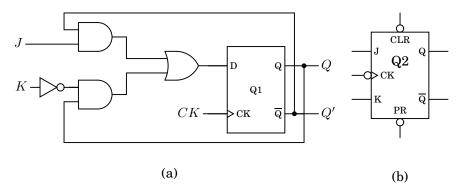


Figure 5.27: JK flip-flop. (a) Circuit using a D flip-flop. (b) Symbol for a JK flip-flop with asynchronous CLR and PR inputs.

5.4 Designing Sequential Circuits

We will now consider a more general set of steps for designing sequential circuits.¹ Design in any field is usually an iterative process, as you have no doubt learned from your programming experience. You start with a design, analyze it, then refine the design to make it faster, less expensive, etc. After gaining some experience, the design process usually requires fewer iterations.

The following steps form a good method for a first working design:

- From the word description of the problem, create a state table and/or state diagram showing what the circuit must do. These form the basic technical specifications for the circuit you will be designing.
- 2. Choose a binary code for the states, and create a binary-coded version of the state table and/or state diagram. For N states, the code will need log₂ bits. Any code will work, but some codes may lead to simpler combinational logic in the circuit.
- 3. Choose a particular type of flip-flop. This choice is often dictated by the components you have on hand.
- 4. Add columns to the state table that show the input required to each flip-flop in order to effect each transition that is required.
- 5. Simplify the input(s) to each flip-flop. Karnaugh maps or algebraic methods are good tools for the simplification process.
- 6. Draw the circuit.

Example 5-a _

Design a counter that has an Enable input. When Enable=1 it increments through the sequence 0, 1, 2, 3, 0, 1,... with each clock tick. Enable=0 causes the counter to remain in its current state.

1. First we create a state table and state diagram:

Current	Enable = 0 Next	Enable = 1 Next	
n	n	n	1
0	0	1	1
1	1	2	
2	2	3	$0 \left(\begin{array}{c} 0 \\ \end{array} \right) $
3	3	0	

At each clock tick the counter increments by one if Enable = 1. If Enable = 0 it remains in the current state. We have only shown the inputs because the output is equal to the state.

2. A reasonable choice is to use the binary numbering system for each state. With four states we need two bits. We will let $n = n_1 n_0$, giving the state table:

		Ena	ble = 0	Enable = 1		
Current		N	J ext	Next		
n_1	n_0	n_1 n_0		n_1	n_0	
0	0	0	0	0	1	
0	1	0	1	1	0	
1	0	1	0	1	1	
1	1	1	1	0	0	


¹I wish to thank Dr. Lynn Stauffer for her valuable suggestions for this section.

- 3. Since JK flip-flops are very general we will use those.
- 4. We need two flip-flops, one for each bit. So we add columns to the state table showing the input required to each JK flip-flop to cause the correct state transition. Referring to Figure 5.26 (page 103), we see that JK = 00 keeps the current state, JK = 01 resets it (to 0), JK = 10 sets it (to 1), and JK = 11 complements the state. We use X when the input can be either 0 or 1.


			Enable = 0						Enable = 1				
Cur	rent	No	ext					Ne	ext				
n_1	n_0	n_1	n_0	J_1	K_1	J_0	K_0	n_1	n_0	J_1	K_1	J_0	K_0
0	0						X						
0	1	0					0						
1	0	1	0	X	0	0	X	1	1	X	0	1	X
1	1	1	1	X	0	X	0	0	0	X	1	X	1

Notice the "don't care" entries in the state table. Since the JK flip-flop is so versatile, including the "don't cares" helps find simpler circuit realizations. (See Exercise 5-3.)


5. We use Karnaugh maps, using E for Enable.

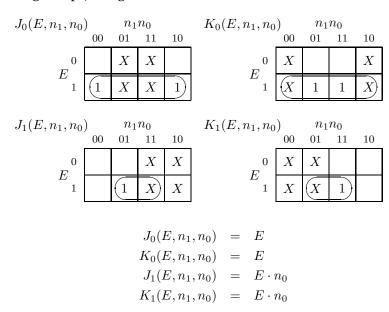

6. The circuit to implement this counter is:

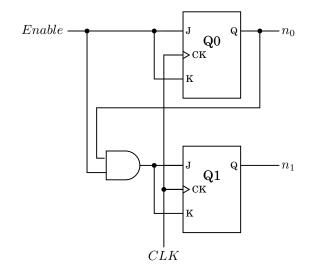

The timing of the binary counter is shown here when counting through the sequence 3, 0, 1, 2, 3(11,00,01,10,11).

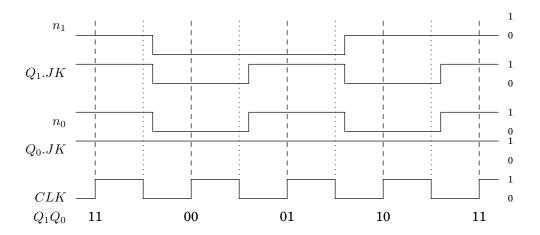

 $Q_i.JK$ is the input to the i^{th} JK flip-flop, and n_i is its output. (Recall that J=K in this design.) When the i^{th} input, $Q_i.JK$, is applied to its JK flip-flop, remember that the state of the flip-flop does not change until the second half of the clock cycle. This can be seen when comparing the trace for the corresponding output, n_i , in the figure.

Note the short delay after a clock transition before the value of each n_i actually changes. This represents the time required for the electronics to completely settle to the new values.

Except for very inexpensive microcontrollers, most modern CPUs execute instructions in stages. An instruction passes through each stage in an assembly-line fashion, called a *pipeline*. The action of the first stage is to fetch the instruction from memory, as will be explained in Chapter 6.

After an instruction is fetched from memory, it passes onto the next stage. Simultaneously, the first stage of the CPU fetches the next instruction from memory. The result is that the CPU is working on several instructions at the same time. This provides some parallelism, thus improving execution speed.


Almost all programs contain conditional branch points — places where the next instruction to be fetched can be in one of two different memory locations. Unfortunately, the decision of which of the two instructions to fetch is not known until the decision-making instruction has moved several stages into the pipeline. In order to maintain execution speed, as soon as a conditional branch instruction has passed on from the fetch stage, the CPU needs to predict where to fetch the next instruction from.

In this next example we will design a circuit to implement a prediction circuit.

Example 5-b _____

Design a circuit that predicts whether a conditional branch is taken or not. The predictor continues to predict the same outcome, take the branch or do not take the branch, until it makes two mistakes in a row.

1. We use "Yes" to indicate when the branch is taken and "No" to indicate when it is not. The state diagram shows four states:

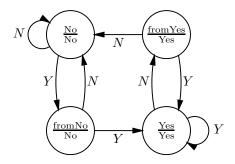

Let us begin in the "No" state. The prediction is that the next branch will also not be taken. The notation in the state bubbles is $\frac{\text{state}}{\text{output}}$, showing that the output in this state is also "No."

The input to the circuit is whether or not the branch was actually taken. The arc labeled "N" shows the transition when the branch was not taken. It loops back to the "No" state, with the prediction (the output) that the branch will not be taken the next time. If the branch is taken, the "Y" arc shows that the circuit moves into the "fromNo" state, but still predicting no branch the next time.

From the "fromNo" state, if the branch is not taken (the prediction is correct), the circuit returns to the "No" state. However, if the branch is taken, the "Y" shows that the circuit moves into the "Yes" state. This means that the circuit predicted incorrectly twice in a row, so the prediction is changed to "Yes."

You should be able to follow this state diagram for the other cases and convince yourself that both the "fromNo" and "fromYes" states are required.

Next we look at the state table:

		Actu	al = No	Actu	al = Yes	
Cu	rrent	N	lext	Next		
State	Prediction	State	Prediction	State	Prediction	
No	No	No	No	fromNo	No	
fromNo	No	No	No	Yes	Yes	
fromYes	Yes	No	No	Yes	Yes	
Yes	Yes	fromYes	Yes	Yes	Yes	

2. Since there are four states, we need two bits. We will let 0 represent "No" and 1 represent "Yes." The input is whether the branch is actually taken (1) or not (0). And the output is the prediction of whether it will be taken (1) or not (0).

We choose a binary code for the state, s_1s_0 , such that the high-order bit represents the prediction, and the low-order bit what the last input was. That is:

State	Prediction	s_1	s_0
No	No	0	0
from No	No	0	1
from Yes	Yes	1	0
Yes	Yes	1	1


This leads to the state table in binary:


Cur	rrent	-	ut = 0 $text$	-	ut = 1 ext
s_1	s_0	s_1	s_0	s_1	s_0
0	0	0	0	0	1
0	1	0	0	1	1
1	0	0	0	1	1
1	1	1	0	1	1

- 3. We will use JK flip-flops for the circuit.
- 4. Next we add columns to the binary state table showing the JK inputs required in order to cause the correct state transitions.

		Input = 0						Input = 1					
Cur	rrent	$N\epsilon$	ext					$N\epsilon$	ext				
s_1	s_0						K_0						
0	0	0	0	0	X	0	X	0	1	0	X	1	X
0	1	0	0	0	X	X	1	1	1	1	X		
1	0	0	0	X	1	0	X	1	1	X	0	1	X
1	1	1	0	X	0	X	1	1	1	X	0	X	0


5. We use Karnaugh maps to derive equations for the JK flip-flop inputs.

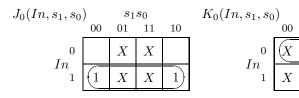

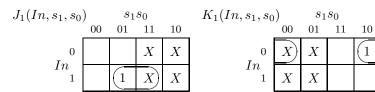

$$\begin{array}{rcl} J_0(In,s_1,s_0) & = & In \\ K_0(In,s_1,s_0) & = & In' \\ J_1(In,s_1,s_0) & = & In \cdot s_0 \\ K_1(In,s_1,s_0) & = & In' \cdot s_0' \end{array}$$

6. The circuit to implement this predictor is:

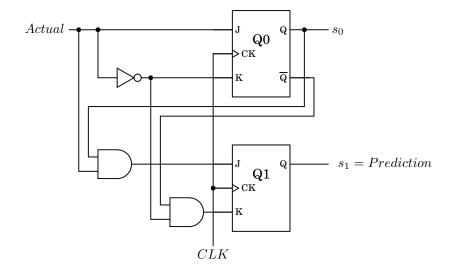

5.5 Memory Organization

In this section we will discuss how registers, SRAM, and DRAM are organized and constructed. Keeping with the intent of this book, the discussion will be introductory only.

5.5.1 Registers

Registers are used in places where small amounts of very fast memory is required. Many are found in the CPU where they are used for numerical computations, temporary data storage, etc. They are also used in the hardware that serves to interface between the CPU and other devices in the computer system.

We begin with a simple 4-bit register, which allows us to store four bits. Figure 5.28 shows a design for implementing a 4-bit register using D flip-flops. As described above, each time the

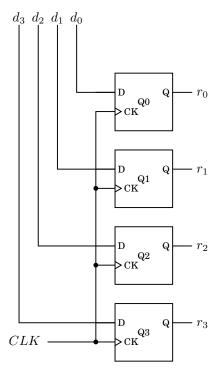


Figure 5.28: A 4-bit register. A D flip-flop is used to hold each bit. The state of the i^{th} bit is set by the value of d_i at each clock tick. The 4-bit value stored in the register is $r = r_3 r_2 r_1 r_0$.

clock cycles the state of each of the D flip-flops is set according to the value of $d = d_3 d_2 d_1 d_0$. The problem with this circuit is that any changes in any of the d_i s will change the state of the corresponding bit in the next clock cycle, so the contents of the register are essentially valid for only one clock cycle.

One-cycle buffering of a bit pattern is sufficient for some applications, but there is also a need for registers that will store a value until it is explicitly changed, perhaps billions of clock cycles later. The circuit in Figure 5.29 uses adds a load signal and feedback from the output of each bit. When load = 1 each bit is set according to its corresponding input, d_i . When load = 0 the output of each bit, r_i , is used as the input, giving no change. So this register can be used to store a value for as many clock cycles as desired. The value will not be changed until load is set to 1.

Most computers need many general purpose registers. When two or more registers are grouped together, the unit is called a *register file*. A mechanism must be provided for addressing one of the registers in the register file.

Consider a register file composed of eight 4-bit registers, r0 - r7. We could build eight copies of the circuit shown in Figure 5.29. Let the 4-bit data input, d, be connected in parallel to all of

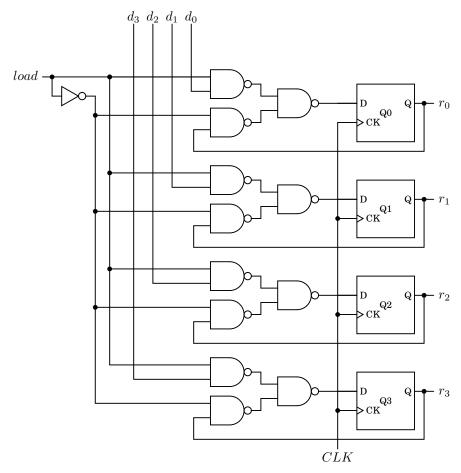


Figure 5.29: A 4-bit register with load. The storage portion is the same as in Figure 5.28. When load = 1 each bit is set according to its corresponding input, d_i . When load = 0 the output of each bit, r_i , is used as the input, giving no change.

the corresponding data pins, $d_3d_2d_1d_0$, of each of the eight registers. Three bits are required to address one of the registers ($2^3=8$). If the 8-bit output from a 3×8 decoder is connected to the eight load inputs of each of the registers, d will be loaded into one, and only one, of the registers during the next clock cycle. All the other registers will have load=0, and they will simply maintain their current state. Selecting the output from one of the eight registers can be done with four 8-input multiplexers. One such multiplexer is shown in Figure 5.30. The inputs $r0_i$ are the i^{th} bits from each of eight registers, r0-r7. One of the eight registers is selected

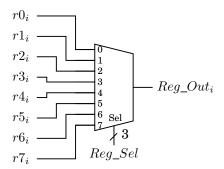


Figure 5.30: 8-way mux to select output of register file. This only shows the output of the i^{th} bit. n are required for n-bit registers. Reg_Sel is a 3-bit signal that selects on of the eight inputs.

for the 1-bit output, Reg_Out_i , by the 3-bit input Reg_Sel . Keep in mind that four of these output circuits would be required for 4-bit registers. The same Reg_Sel would be applied to all four multiplexers simultaneously in order to output all four bits of the same register. Larger registers would, of course, require correspondingly more multiplexers.

There is another important feature of this design that follows from the master/slave property of the D flip-flops. The state of the slave portion does not change until the second half of the clock cycle. So the circuit connected to the output of this register can read the current state during the first half of the clock cycle, while the master portion is preparing to change the state to the new contents.

5.5.2 Shift Registers

There are many situations where it is desirable to shift a group of bits. A *shift register* is a common device for doing this. Common applications include:

- Inserting a time delay in a bit stream.
- Converting a serial bit stream to a parallel group of bits.
- Converting a parallel group of bits into a serial bit stream.
- Shifting a parallel group of bits left or right to perform multiplication or division by powers
 of 2.

Serial-to-parallel and parallel-to-serial conversion is required in I/O controllers because most I/O communication is serial bit streams, while data processing in the CPU is performed on groups of bits in parallel.

A simple 4-bit serial-to-parallel shift register is shown in Figure 5.31. A serial stream of bits

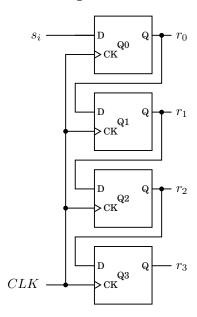


Figure 5.31: Four-bit serial-to-parallel shift register. A D flip-flop is used to hold each bit. Bits arrive at the input, s_i , one at a time. The last four input bits are available in parallel at $r_3 - r_0$.

is input at s_i . At each clock tick, the output of Q_0 is applied to the input of Q_1 , thus copying the previous value of r_0 to the new r_1 . The state of Q_0 changes to the value of the new s_i , thus copying this to be the new value of r_0 . The serial stream of bits continues to ripple through the four bits of the shift register. At any time, the last four bits in the serial stream are available in parallel at the four outputs, r_3, \ldots, r_0 .

The same circuit could be used to provide a time delay of four clock ticks in a serial bit stream. Simply use r_3 as the serial output.

5.5.3 Static Random Access Memory (SRAM)

There are several problems with trying to extend this design to large memory systems. First, although a multiplexer works for selecting the output from several registers, one that selects from a many million memory cells is simply too large. From Figure 5.8 (page 90), we see that such a multiplexer would need an AND gate for each memory cell, plus an OR gate with an input for each of these millions of AND gate outputs.

We need another logic element called a *tri-state buffer*. The tri-state buffer has three possible outputs — 0, 1, and "high Z." "High Z" describes a very high impedance connection (see Section 4.4.2, page 70.) It can be thought of as essentially "no connection" or "open."

It takes two inputs — data input and enable. The truth table describing a tri-state buffer is:

Enable	In	Out
0	0	highZ
0	1	highZ
1	0	0
1	1	1

and its circuit symbol is shown in Figure 5.32. When Enable = 1 the output, which is equal

$$Enable\\In-Out$$

Figure 5.32: Tri-state buffer.

to the input, is connected to whatever circuit element follows the tri-state buffer. But when Enable = 0, the output is essentially disconnected. Be careful to realize that this is different from 0; being disconnected means it has no effect on the circuit element to which it is connected.

A 4-way multiplexer using a 2×4 decoder and four tri-state buffers is illustrated in Figure 5.33. Compare this design with the 4-way multiplexer shown in Figure 5.8, page 90. The tri-

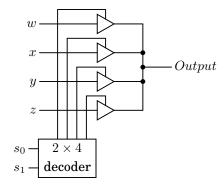


Figure 5.33: Four way multiplexer built from tri-state buffers. Output = w, x, y, or z, depending on which one is selected by s_1s_0 fed into the decoder. Compare with Figure 5.8, page 90.

state buffer design may not be an advantage for small multiplexers. But an n-way multiplexer without tri-state buffers requires an n-input OR gate, which presents some technical electronic problems.

Figure 5.34 shows how tri-state buffers can be used to implement a single memory cell. This circuit shows only one 4-bit memory cell so you can compare it with the register design in Figure 5.28, but it scales to much larger memories. Write is asserted to store data in the D flip-flops. Read enables the output tri-state buffer in order to connect the single output line to Mem_data_out . The address decoder is also used to enable the tri-state buffers to connect a memory cell to the output, $r_3r_2r_1r_0$.

This type of memory is called *Static Random Access Memory (SRAM)*. "Static" because the memory retains its stored values as long as power to the circuit is maintained. "Random access" because it takes the same length of time to access the memory at any address.

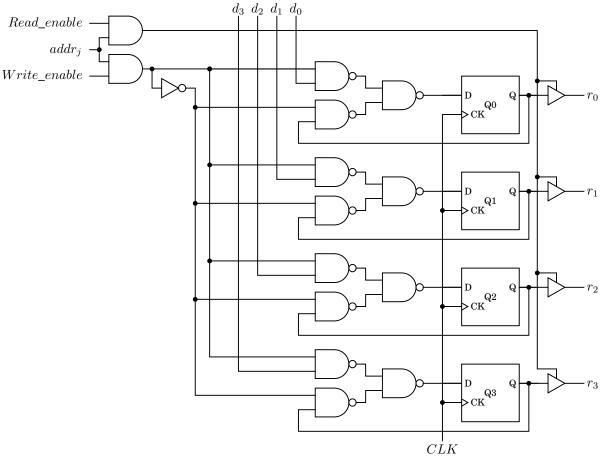


Figure 5.34: 4-bit memory cell. Each is output through a tri-state buffer. $addr_i$ is one output from a decoder corresponding to an address.

A 1 MB memory requires a 20 bit address. This requires a 20×2^{20} address decoder as shown in Figure 5.35. Recall from Section 5.1.3 (page 86) that an $n \times 2^n$ decoder requires 2^n AND

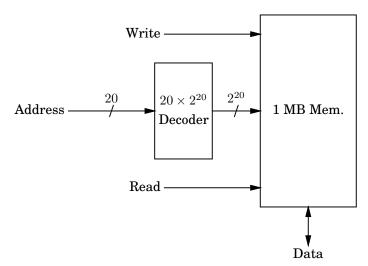


Figure 5.35: Addressing 1 MB of memory with one 20×2^{20} address decoder. The short line through the connector lines indicates the number of bits traveling in parallel in that connection.

gates. We can simplify the circuitry by organizing memory into a grid of rows and columns as

Data

Address 20Note that the second representation of the second represent

shown in Figure 5.36. Although two decoders are required, each requires $2^{n/2}$ AND gates, for a

Figure 5.36: Addressing 1 MB of memory with two 10×2^{10} address decoders.

total of $2 \times 2^{n/2} = 2^{(n/2)+1}$ AND gates for the decoders. Of course, memory cell access is slightly more complex, and some complexity is added in order to split the 20-bit address into two 10-bit portions.

5.5.4 Dynamic Random Access Memory (DRAM)

Each bit in SRAM requires about six transistors for its implementation. A less expensive solution is found in *Dynamic Random Access Memory (DRAM)*. In DRAM each bit value is stored by a charging a capacitor to one of two voltages. The circuit requires only one transistor to charge the capacitor, as shown in Figure 5.37. This Figure shows only four bits in a single row.

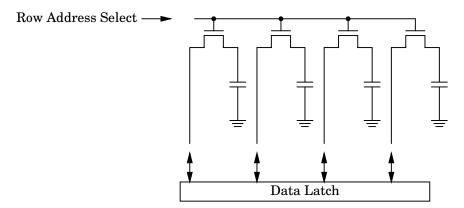


Figure 5.37: Bit storage in DRAM.

When the "Row Address Select" line is asserted all the transistors in that row are turned on, thus connecting the respective capacitor to the Data Latch. The value stored in the capacitor, high voltage or low voltage, is stored in the Data Latch. There, it is available to be read from the memory. Since this action tends to discharge the capacitors, they must be refreshed from the values stored in the Data Latch.

5.6. EXERCISES 115

When new data is to be stored in DRAM, the current values are first stored in the Data Latch, just as in a read operation. Then the appropriate changes are made in the Data Latch before the capacitors are refreshed.

These operations take more time than simply switching flip-flops, so DRAM is appreciably slower than SRAM. In addition, capacitors lose their charge over time. So each row of capacitors must be read and refreshed in the order of every 60 msec. This requires additional circuitry and further slows memory access. But the much lower cost of DRAM compared to SRAM warrants the slower access time.

This has been only an introduction to how switching transistors can be connected into circuits to create a CPU. We leave the details to more advanced books, e.g., [20], [23], [24], [28], [31], [34].

5.6 Exercises

The greatest benefit will be derived from these exercises if you either build the circuits with hardware or using a simulation program. Several free circuit simulation applications are available that run under GNU/Linux.

- 5-1 (§5.1) Build a four-bit adder.
- **5-2** (§5.1) Build a four-bit adder/subtractor.
- **5-3** (§5.4) Redesign the 2-bit counter of Example 5-a using only the "set" and "reset" inputs of the JK flip-flops. So your state table will not have any "don't cares."
- **5-4** (§5.4) Design a 4-bit up counter 0, 1, 2, ..., 15, 0, ...
- **5-5** (§5.4) Design a 4-bit down counter 15, 14, 13,...,0, 15,...
- **5-6** (§5.4) Design a decimal counter 0, 1, 2, ..., 9, 0, ...
- **5-7** (§5.5) Build the register file described in Section 5.5.1. It has eight 4-bit registers. A 3×8 decoder is used to select a register to be loaded. Four 8-way multiplexers are used to select the four bits from one register to be output.

Chapter 6

Central Processing Unit

In this chapter we move on to consider a programmer's view of the *Central Processing Unit* (*CPU*) and how it interacts with memory. X86-64 CPUs can be used with either a 32-bit or a 64-bit operating system. The CPU features available to the programmer depend on the operating mode of the CPU. The modes of interest to the applications programmer are summarized in Table 6.1. With a 32-bit operating system, the CPU behaves essentially the same as an x86-32 CPU.

Mode	Submode	Operating	Default	Default
		System	Address (bits)	int (bits)
IA-32e or	64-bit		64	32
Long	Compatibility	64-bit	32	32
Dong	Companismity		16	16
	Protected		32	32
Legacy	11000000	32-bit		
Legacy	Virtual-8086		16	16
	Real	16-bit		

Table 6.1: X86-64 operating modes. Intel manuals use the term "IA-32e" and AMD manuals use "Long" when running a 64-bit operating system. Both manuals use the same terminology for the two sub-modes. Adapted from Table 1-1 in [2].

In this book we describe the view of the CPU when running a 64-bit operating system. Intel manuals call this the *IA-32e mode* and the AMD manuals call it the *long mode*. The CPU can run in one of two sub-modes under a 64-bit operating system. Both manuals use the same terminology for the two sub-modes.

- *Compatibility mode* Most programs compiled for a 32-bit or 16-bit environment can be run without re-compiling.
- 64-bit mode The program must be compiled for 64-bit execution.

The two modes cannot be mixed in the same program.

The discussion in this chapter focuses on the 64-bit mode. We will also point out the differences of the compatibility mode, which we will refer to as the *32-bit mode*.

6.1 CPU Overview

An overall block diagram of a typical CPU is shown in Figure 6.1. The subsystems are connected together through internal buses. Keep in mind that this is a highly simplified diagram. Actual CPUs are much more complicated, but the general concepts discussed in this chapter apply to all of them.

6.1. CPU OVERVIEW 117

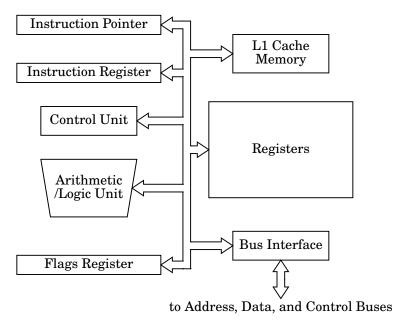


Figure 6.1: CPU block diagram. The CPU communicates with the Memory and I/O subsystems via the Address, Data, and Control buses. See Figure 1.1 (page 3).

We will now describe briefly each of the subsystems in Figure 6.1. The descriptions provided here are generic and apply to most CPUs. Components that are of particular interest to a programmer are described within the context of the x86 ISA later in this chapter.

- **Bus Interface:** This is the means for the CPU to communicate with the rest of the computer system Memory and I/O Devices. It contains circuitry to place addresses on the address bus, read and write data on the data bus, and read and write signals on the control bus. The bus interface on many CPUs interfaces with external bus control units that in turn interface with memory and with different types of I/O buses, e.g., SATA, PCI-E, etc. The external control units are transparent to the programmer.
- L1 Cache Memory: Although it could be argued that this is not a part of the CPU, most modern CPUs include very fast cache memory on the CPU chip. As you will see in Section 6.4, each instruction must be fetched from memory. The CPU can execute instructions much faster than they can be fetched. The interface with memory makes it more efficient to fetch several instructions at one time, storing them in L1 cache where the CPU has very fast access to them. Many modern CPUs use two L1 cache memories organized in a Harvard architecture one for instructions, the other for data. (See Section 1.2, page 4.) It's use is generally transparent to an applications programmer.
- **Registers:** A register is a group of bits that is intended to be used as a variable in a program. Compilers and assemblers have names for each register. Almost all arithmetic and logic operations and data movement operations involve at least one register. See Section 6.2 for more details.
- **Instruction Pointer:** This is a 64-bit register that always contains the address of the next instruction to be executed. See Section 6.2 for more details.
- **Instruction Register:** This register contains the instruction that is currently being executed. Its bit pattern determines what the Control Unit is causing the CPU to do. Once that action has been completed, the bit pattern in the instruction register can be changed, and the CPU will perform the operation specified by this next bit pattern.

Most modern CPUs use an instruction queue that is built into the chip. Several instructions are waiting in the queue, ready to be executed. Separate electronic circuitry keeps the instruction queue full while the regular control unit is executing the instructions. But this is simply an implementation detail that allows the control unit to run faster. The essence of how the control unit executes a program is represented by the single instruction register model.

Control Unit: The bits in the Instruction Register are decoded in the Control Unit. It generates the signals that control the other subsystems in the CPU to carry out the action(s) specified by the instruction. It is typically implemented as a finite-state machine and contains Decoders (Section 5.1.3), Multiplexers (Section 5.1.4), and other logic components.

Arithmetic Logic Unit (ALU): A device that performs arithmetic and logic operations on groups of bits. The logic circuitry to perform addition is discussed in Section 5.1.1.

Flags Register: Each operation performed by the ALU results in various conditions that must be recorded. For example, addition can produce a carry. One bit in the Flags Register will be set to either zero (no carry) or one (carry) after the ALU has completed any operation that may produce a carry.

We will now look at how the logic circuits discussed in Chapter 4 can be used to implement some of these subsystems.

6.2 CPU Registers

A portion of the memory in the CPU is organized into registers. Machine instructions access CPU registers by their addresses, just as memory contents are accessed. Of course, the register addresses are not placed on the address bus since the registers are in the CPU. The difference from a programmer's point of view is that the assembler has predefined names for the registers, whereas the programmer creates symbolic names for memory addresses. Thus in each program that you write in assembly language:

- CPU registers are accessed by using the names that are predefined in the assembler.
- Memory is accessed by the programmer providing a name for the memory location and using that name in the user program.

The x86-64 architecture registers are shown in Table 6.2. Each bit in each register is numbered from right to left, beginning with zero. So the right-most bit is number 0, the next one to the left number 1, etc. Since there are 64 bits in each register, the left-most bit is number 63.

The *general purpose registers* can be accessed in the following ways:

- Quadword all 64 bits [63 0].
- Doubleword the low-order 32 bits [31-0].
- Word the low-order 16 bits [15-0].
- Byte the low-order 8 bits [7-0] (and in four registers bits [15-8]).

The assembler uses a different name for each group of bits in a register. The assembler names for the groups of the bits are given in Table 6.3. In 64-bit mode, writing to an 8-bit or 16-bit portion of a register does not affect the other 56 or 48 bits in the register. However, when writing to the low-order 32 bits, the high-order 32 bits are set to zero.

Storing 32 bits sets top half of register to zero.

6.2. CPU REGISTERS 119

Basic Programming Registers

16 64-bit General purpose (GPRs)

1 64-bit Flags

1 64-bit Instruction pointer

6 16-bit Segment

Floating Point Registers

8 80-bit Floating point data

1 16-bit Control

1 16-bit Status

1 16-bit Tag

1 11-bit Opcode

1 64-bit FPU Instruction Pointer

1 64-bit FPU Data Pointer

MMX Registers

8 64-bit MMX

XMM Registers

16 128-bit XMM

1 32-bit MXCSR

Model-Specific Registers (MSRs)

These vary depending on the specific hardware implementation. They are only accessible to the operating system.

Table 6.2: The x86-64 registers. Not all the registers shown here are discussed in this chapter. Some are discussed in subsequent chapters that deal with the related topic.

bits 63- 0	bits 31- 0	bits 15- 0	bits 15- 8	bits 7-0
rax	eax	ax	ah	al
rbx	ebx	bx	bh	bl
rcx	ecx	cx	ch	cl
rdx	edx	dx	dh	dl
rsi	esi	si		sil
rdi	edi	di		dil
rbp	ebp	bp		bpl
rsp	esp	sp		spl
r8	r8d	r8w		r8b
r9	r9d	r9w		r9b
r10	r10d	r10w		r10b
r11	r11d	r11w		r11b
r12	r12d	r12w		r12b
r13	r13d	r13w		r13b
r14	r14d	r14w		r14b
r15	r15d	r15w		r15b

Table 6.3: Assembly language names for portions of the general-purpose CPU registers. Programs running in 32-bit mode can only use the registers above the line in this table. 64-bit mode allows the use of all the registers. The ah, bh, ch, and dh registers cannot be used with any of the (8-bit) registers below the line.

A pictorial representation of the naming of each portion of the general-purpose registers is shown in Figure 6.2.

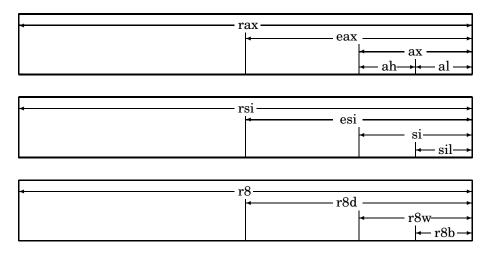


Figure 6.2: Graphical representation of general purpose registers. The three shown here are representative of the pattern of all the general purpose registers.

The 8-bit register portions ah, bh, ch, and dh are a holdover from the Intel® 8086/8088 architecture. It had four 16-bit registers, ax, bx, cx, and dx. The low-order bytes were named al, bl, cl, and dl and the high-order bytes named ah, bh, ch, and dh. Access to these registers has been maintained in 32-bit mode for backward compatibility but is limited in 64-bit mode. Access to the 8-bit low-order portions of the rsi, rdi, rsp, and rbp registers was added along with the move to 64 bits in the x86-64 architecture but cannot be used in the same instruction with the 8-bit register portions of the xh registers.

When using less than the entire 64 bits in a register, it is generally bad to write code that assumes the remaining portion is in any particular state. Such code is difficult to read and leads to errors during its maintenance phase.

Although these are called "general purpose," the descriptions in Table 6.4 show that some of them have some special significance, depending upon how they are used. (Some of the descriptions may not make sense to you at this point.) In this book, we will use the rax, rdx, rdi, esi, and r8 – r15 registers for general-purpose storage. They will be used just like variables in a high-level language. Usage of the rsp and rbp registers follows a very strict discipline. You should not use either of them for your assembly language programs until you understand how to use them.

The *instruction pointer* register, rip¹, always points to the next instruction to be executed. As explained in Section 6.4 (page 123), every time an instruction is fetched, the rip register is automatically incremented by the control unit to contain the address of the next instruction. Thus, the rip register is never directly accessed by the programmer. On the other hand, every instruction that is executed affects the contents of the rip register. Thus, the rip register is not a general-purpose register, but it guides the flow of the entire program.

¹In many other environments, the equivalent register is called the *program counter*.

6.2. CPU REGISTERS 121

Register	Special usage	Called function preserves contents
rax	1st function return value.	No
rbx	Optional base pointer.	Yes
rcx	Pass 4th argument to function.	No
rdx	Pass 3rd argument to function; 2nd function return value.	No
rsp	Stack pointer.	Yes
rbp	Optional frame pointer.	Yes
rdi	Pass 1st argument to function.	No
rsi	Pass 2nd argument to function.	No
r8	Pass 5th argument to function.	No
r9	Pass 6th argument to function.	No
r10	Pass function's static chain pointer.	No
r11		No
r12		Yes
r13		Yes
r14		Yes
r15		Yes

Table 6.4: General purpose registers.

Most arithmetic and logical operations affect the *condition codes* in the rflags register. The bits that are affected are shown in Figure 6.3.

11	10	9	8	7	6	5	4	3	2	1	0
OF				SF	ZF		AF		PF		CF

Figure 6.3: Condition codes portion of the rflags register. The high-order 32 bits (32-63) are reserved for other use and are not shown here. Neither are bits 12-31, which are for system flags (see [3]).

The names of the condition codes are:

0F	Overflow Flag
SF	Sign Flag
ZF	Zero Flag
AF	Auxiliary carry or Adjust Flag
PF	Parity Flag
CF	Carry Flag

The OF, SF, ZF, and CF are described at appropriate places in this book. See [3] and [14] for descriptions of the other flags.

Two other registers are very important in a program. The rsp register is used as a *stack pointer*, as will be discussed in Section 8.2 (page 158). The rsp register is typically used as a *base pointer*; it will be discussed in Section 8.3 (page 164).

The "e" prefix on the 32-bit portion of each register name comes from the history of the x86 architecture. The introduction of the 80386 in 1986 brought an increase of register size from 16 bits to 32 bits. There were no new registers. The old ones were simply "extended."

6.3 CPU Interaction with Memory and I/O

The connections between the CPU and Memory are shown in Figure 6.4. This figure also includes the I/O (input and output) subsystem. The I/O system will be discussed in subsequent chapters. The control unit is connected to memory by three buses:

- · address bus
- · data bus
- · control bus

Bus: a communication path between two or more devices.

Several devices can be connected to one bus, but only two devices can be communicating over the bus at one time.

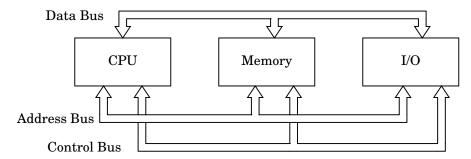


Figure 6.4: Subsystems of a computer. The CPU, Memory, and I/O subsystems communicate with one another via the three bussed. (Repeat of Figure 1.1.)

As an example of how data can be stored in memory, let us imagine that we have some data in one of the CPU registers. Storing this data in memory is effected by setting the states of a group of bits in memory to match those in the CPU register. The control unit can be programmed to do this by

- 1. sending the memory address on the address bus,
- 2. sending a copy of the register bit states on the data bus, then
- 3. sending a "write" signal on the control bus.

For example, if the eight bits in memory at address 0x7fffd9a43cef are in the state:

0x7fffd9a43cef: b7

the al register in the CPU is in the state:

%al: e2

and the control unit is programmed to store this value at location 0x7fffd9a43cef, the control unit then

Store data in memory by writing it there.

- 1. places 0x7fffd9a43cef on the address bus,
- 2. places the bit pattern e2 on the data bus, and
- 3. places a "write" signal on the control bus.

Then the bits at memory location 0x7fffd9a43cef will be changed to the state:

0x7fffd9a43cef: e2

Important. When the state of any bit in memory or in a register is changed any previous states are lost forever. There is no way to "undo" this state change nor to determine how the bit got in its current state.

6.4 Program Execution in the CPU

You may be wondering how the CPU is programmed. It contains a special register — the *instruction register* — whose bit pattern determines what the CPU will do. Once that action has been completed, the bit pattern in the instruction register can be changed, and the CPU will perform the operation specified by this next bit pattern.

Most modern CPUs use an instruction queue. Several instructions are waiting in the queue, ready to be executed. Separate electronic circuitry keeps the instruction queue full while the regular control unit is executing the instructions. But this is simply an implementation detail that allows the control unit to run faster. The essence of how the control unit executes a program is represented by the single instruction register model.

Since instructions are simply bit patterns, they can be stored in memory. The instruction pointer register always has the memory address of (points to) the next instruction to be executed. In order for the control unit to execute this instruction, it is copied into the instruction register.

The situation is as follows:

- **1.** A sequence of instructions is stored in memory.
- **2.** The memory address where the first instruction is located is copied to the instruction pointer.
- 3. The CPU sends the address in the instruction pointer to memory on the address bus.
- **4.** The CPU sends a "read" signal on the control bus.
- **5.** Memory responds by sending a copy of the state of the bits at that memory location on the data bus, which the CPU then copies into its instruction register.
- **6.** The instruction pointer is automatically incremented to contain the address of the next instruction in memory.
- **7.** The CPU executes the instruction in the instruction register.
- **8.** Go to step 3.

Steps 3, 4, and 5 are called an *instruction fetch*. Notice that steps 3 – 8 constitute a cycle, the *instruction execution cycle*. It is shown graphically in Figure 6.5.

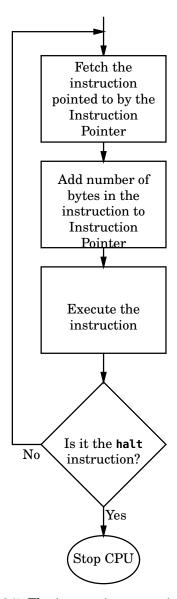


Figure 6.5: The instruction execution cycle.

This raises a couple of questions:

How do we get the instructions into memory? The instructions for a program are stored in a file on a storage device, usually a disk. The computer system is controlled by an operating system. When you indicate to the operating system that you wish to execute a program, e.g., by double-clicking on its icon, the operating system locates a region of memory large enough to hold the instructions in the program then copies them from the file to memory. The contents in the file remain unchanged. ²

How do we create a file on the disk that contains the instructions? This is a multi-step process using several programs that are provided for you. The programs and the files that each create are:

• An *editor* is used to create source files.

The source file is written in a programming language, e.g., C++. This is very similar to creating a file with a word processor. The main differences are that an editor is much simpler than a word processor, and the contents of the source file are written in the programming language instead of, say, English.

• A compiler/assembler is used to create object files.

The compiler translates the programming language in a source file into the bit patterns that can be used by a CPU (machine language). The source file contents remains unchanged.

• A *linker* is used to create executable files.

Most programs are made up of several object files. For example, a GNU/Linux installation includes many object files that contain the machine instructions to perform common tasks. These are programs that have already been written and compiled. Related tasks are commonly grouped together into a single file called a library.

Whenever possible, you should use the short programs in these libraries to perform the computations your program needs rather that write it yourself. The linker program will merge the machine code from these several object files into one file.

You may have used an integrated development environment (IDE), e.g., Microsoft®Visual Studio®, Eclipse™, which combines all of these three programs into one package where each of the intermediate steps is performed automatically. You use the editor program to create the source file and then give the run command to the IDE. The IDE will compile the program in your source files, link the resulting object files with the necessary libraries, load the resulting executable file into memory, then start your program. In general, the intermediate object files resulting from the compilation of each source file are automatically deleted from the disk.

In this book we will explicitly perform each of these steps separately so we can learn the role of each program — editor, assembler, linker — used in preparing the application program.

6.5 Using gdb to View the CPU Registers

We will use the program in Listing 6.1 to illustrate the use of gdb to view the contents of the CPU registers. I have used the register storage class modifier to request that the compiler use a CPU register for the int* ptr variable. The register modifier is "advisory" only. See Exercise 6-3 for an example when the compiler may not be able to honor our request.

```
1 /*
2 * gdbExample1.c
3 * Subtracts one from user integer.
4 * Demonstrate use of gdb to examine registers, etc.
5 * Bob Plantz - 5 June 2009
```

²This is a highly simplified description. The details depend upon the overall system.

```
*/
  #include <stdio.h>
int main(void)
11 {
       register int wye;
12
       int *ptr;
13
       int ex;
15
       ptr = &ex;
16
       ex = 305441741;
17
      wye = -1;
18
       printf("Enter an integer: ");
19
20
       scanf("%i", ptr);
      wye += *ptr;
21
       printf("The result is %i\n", wye);
22
23
       return 0;
24
25
  }
```

Listing 6.1: Simple program to illustrate the use of gdb to view CPU registers.

We introduced some gdb commands in Chapter 2. Here are some additional ones that will be used in this section:

• n — execute current source code statement of a program that has been running; if it's a call to a function, the entire function is executed.

• s — execute current source code statement of a program that has been running; if it's a call to a function, step into the function.

- si execute current (machine) instruction of a program that has been running; if it's a call to a function, step into the function.
- i r info registers displays the contents of the registers, except floating point and vector.

Here is a screen shot of how I compiled the program then used gdb to control the execution of the program and observe the register contents. My typing is **boldface** and the session is annotated in *italics*. Note that you will probably see different addresses if you replicate this example on your own (Exercise 6-1).

```
bob$ gcc -g -00 -Wall -fno-asynchronous-unwind-tables \
> -fno-stack-protector -o gdbExample1 gdbExample1.c
```

The "-g" option is required. It tells the compiler to include debugger information in the executable program.

```
bob$ gdb gdbExample1
GNU gdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying" and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
(qdb) li
```

Useful gdb

```
7
8 #include <stdio.h>
10 int main(void)
11
12
       register int wye;
13
       int *ptr;
14
       int ex;
15
16
       ptr = &ex;
(gdb)
17
       ex = 305441741;
18
       wye = -1;
19
       printf("Enter an integer: ");
       scanf("%i", ptr);
20
21
       wye += *ptr;
22
       printf("The result is %i\n", wye);
23
24
       return 0;
25
(ddb)
```

The li command lists ten lines of source code. The display is centered around the current line. Since I have not started execution of this program, the display is centered around the beginning of main. The display ends with the (gdb) prompt. Pushing the return key repeats the previous command, and li is smart enough to display the next ten lines.

I set a breakpoint at line 19 then run the program. When line 19 is reached, the program is paused before the statement is executed, and control returns to gdb.

```
(gdb) print ex

$1 = 305441741

(gdb) print &ex

$2 = (int *) 0x7fff504c473c
```

I use the print command to view the value assigned to the ex variable and learn its memory address.

```
(gdb) help x
Examine memory: x/FMT ADDRESS.
ADDRESS is an expression for the memory address to examine.
FMT is a repeat count followed by a format letter and a size letter.
Format letters are o(octal), x(hex), d(decimal), u(unsigned decimal),
    t(binary), f(float), a(address), i(instruction), c(char) and s(string).
Size letters are b(byte), h(halfword), w(word), g(giant, 8 bytes).
The specified number of objects of the specified size are printed according to the format.
```

Defaults for format and size letters are those previously used.

Default count is 1. Default address is following last thing printed with this command or "print".

The help command will provide very brief instructions on using a command. We want to display values stored in specific memory locations in various formats, and the help command provides a reminder of how to use the command.

(gdb) x/1dw 0x7fff504c473c 0x7fff504c473c: 305441741

I verify that the value assigned to the ex variable is stored at location 0x7fff504c473c.

(gdb) **x/1xw 0x7fff504c473c** 0x7fff504c473c: 0x1234abcd

I examine the same integer in hexadecimal format.

(gdb) x/4xb 0x7fff504c473c

0x7fff504c473c: 0xcd 0xab 0x34 0x12

Next, I examine all four bytes of the word, one byte at a time. In this display,

- Oxcd is stored in the byte at address 0x7fff504c473c,
- Oxab is stored in the byte at address 0x7fff504c473d,
- 0x34 is stored in the byte at address 0x7fff504c473e, and
- 0x12 is stored in the byte at address 0x7fff504c473f.

In other words, the byte-wise display appears to be backwards. This is due to the values being stored in the little endian storage scheme as explained on page 19 in Chapter 2.

(gdb) x/2xh 0x7fff504c473c 0x7fff504c473c: 0xabcd 0x1234

I also examine all four bytes of the word, two bytes at a time. In this display,

- Oxabcd is stored in the two bytes starting at address 0x7fff504c473c, and
- 0x1234 is stored in the two bytes starting at address 0x7fff504c473e.

This shows how gdb displays these four bytes as though they represent two 16-bit ints stored in little endian format. (You can now see why I entered such a strange integer in this demonstration run.)

(gdb) **print ptr** \$3 = (int *) 0x7fff504c473c (gdb) **print &ptr** \$4 = (int **) 0x7fff504c4740

Memory addresses can be stored in memory. Look carefully at the ptr variable. It is located at address 0x7fff504c4740 and it contains another address, 0x7fff504c473c, that is, the address of the variable ex. It is important that you learn to distinguish between a memory address and the value that is stored there, which can be another memory address. Perhaps a good way to think about this is a group of numbered mailboxes, each containing a single piece of paper that you can write a single number on. You could write a number that represents a "data" value on the paper. Or you can write the address of a mailbox on the paper. One of the jobs of a programmer is to write the program such that it interprets the number appropriately — either a data value or an address.

```
(gdb) print wye
$5 = -1
(gdb) print &wye
Address requested for identifier "wye" which is in register $rbx
```

The compiler has honored our request and allocated a register for the wye variable. Registers are located in the CPU and do not have memory addresses, so gdb cannot print the address. We will need to use the i r command to view the register contents.

```
(gdb) i r
rax
                0x7fff504c473c 140734540564284
                0xfffffff 4294967295
rbx
                0x0 0
rcx
                0x7fff504c4838 140734540564536
rdx
                0x7fff504c4828 140734540564520
rsi
rdi
               0x1 1
rbn
                0x7fff504c4750 0x7fff504c4750
                0x7fff504c4730 0x7fff504c4730
rsp
                0x7ff0482a22e0 140669979599584
r8
r9
                0x7ff0482b6160 140669979681120
                0x7fff504c4590 140734540563856
r10
r11
                0x7ff047f534c0 140669976130752
                0x400460 4195424
r12
r13
                0x7fff504c4820 140734540564512
                0x0 0
r14
r15
                0x0 0
                0x400569 0x400569 <main+29>
rip
                0x206 [ PF IF ]
eflags
                0x33 51
cs
                0x2b 43
SS
                0x0 0
ds
                0x0 0
es
fs
                0x0 0
                0x0 0
as
                0x37f 895
fctrl
fstat
                0x0 0
                0xffff 65535
ftag
fiseq
                0x0 0
fioff
               0x0 0
               0x0 0
foseq
---Type <return> to continue, or q <return> to quit---
fooff
               0x0 0
fop
                0x0 0
               0x1f80 [ IM DM ZM OM UM PM ]
mxcsr
```

The i r command displays the current contents of the CPU registers. The first column is the name of the register. The second shows the current bit pattern in the register, in hexadecimal. Notice that leading zeros are not displayed. The third column shows some the register contents in 64-bit signed decimal. The registers that always hold addresses are also shown in hexadecimal in the third column. The columns are often not aligned due to the tabbing of the display.

We see that the value in the ebx general purpose register is the same as that stored in the wye variable, 0xffffffff.³ (Recall that ints are 32 bits, even in 64-bit mode.) We conclude that the compiler chose to allocate ebx as the wye variable.

³If this is not clear, you need to review Section 3.3.

Notice the value in the rip register, 0x400569. Refer back to where I set the breakpoint on source line 19. This shows that the program stopped at the correct memory location.

It is only coincidental that the address of the ex variable is currently stored in the rax register. If a general purpose register is not allocated as a variable within a function, it is often used to store results of intermediate computations. You will learn how to use registers this way in subsequent chapters of this book.

```
(gdb) br 21
Breakpoint 2 at 0x40058b: file gdbExample1.c, line 21.
(gdb) br 22
Breakpoint 3 at 0x400593: file gdbExample1.c, line 22.
```

These two breakpoints will allow us to examine the value stored in the wye variable just before and after it is modified.

This verifies that the user's input value is stored correctly and that the wye variable has not yet been changed.

```
(gdb) cont
Continuing.

Breakpoint 3, main () at gdbExample1.c:22
22     printf("The result is %i\n", wye);
(gdb) print ex
$8 = 123
(gdb) print wye
$9 = 122
```

And this verifies that our (rather simple) algorithm works correctly.

We can specify which registers to display with the i r command. This verifies that the rbx register is being used as the wye variable.

And we see that the rip has incremented from 0x400569 to 0x400593. Don't forget that the rip register always points to the next instruction to be executed.

```
(gdb) cont
Continuing.
The result is 122
Program exited normally.
(gdb) q
bob$
```

Finally, I continue to the end of the program. Notice that gdb is still running and I have to quit the gdb program.

6.6. EXERCISES 131

6.6 Exercises

6-1 (§6.2, §6.5) Enter the program in Listing 6.1 and trace through the program one line at a time using gdb. Use the n command, not s or si. Keep a written record of the rip register at the beginning of each line. Hint: use the i r command. How many bytes of machine code are in each of the C statements in this program? Note that the addresses you see in the rip register may differ from the example given in this chapter.

6-2 (§6.2, §6.4) As you trace through the program in Exercise 6-1 stop on line 22:

```
wye += *ptr;
```

We determined in the example above that the %rbx register is used for the variable wye. Inspect the registers.

- a) What is the address of the first instruction that will be executed when you enter the n command?
- b) How will %rbx change when this statement is executed?
- **6-3** (§6.5) Modify the program in Listing 6.1 so that a register is also requested for the ex variable. Were you able to convince the compiler to do this for you? Did the compiler produce any error or warning messages? Why do you think the compiler would not use a register for this variable.
- **6-4** (§6.2, §6.5) Use the gdb debugger to observe the contents of memory in the program from Exercise 2-31. Verify that your algorithm creates a null-terminated string without the newline character.
- **6-5** (§6.2, §6.5) Write a program in C that allows you to determine the endianess of your computer. Hint: use unsigned char* ptr.
- **6-6** (§6.2, §6.5) Modify the program in Exercise 6-5 so that you can demonstrate, using gdb, that endianess is a property of the CPU. That is, even though a 32-bit int is stored little endian in memory, it will be read into a register in the "proper" order. Hint: declare a second int that is a register variable; examine memory one byte at a time.

Chapter 7

Programming in Assembly Language

While reading this chapter, you should also consult the info resources available in most GNU/Linux installations for both the make and the as programs. Appendix B provides a general tutorial for writing Makefiles, but you need to get the details from info. info is especially important for learning about as's assembler directives.

You should also reread the Development Environment section on page xviii.

Creating a program in assembly language is essentially the same as creating one in a high-level compiled language like C, C++, Java, FORTRAN, etc. We will begin the chapter by looking in detail at the steps involved in creating a C program. Then we will look at which of these steps apply to assembly language programming.

7.1 Creating a New Program

You have probably learned how to program using an Integrated Development Environment (IDE), which incorporates several programs within a single user interface:

- 1. A text editor is used to write the source code and save it in a file.
- 2. A compiler translates the source code into machine language that can be executed by the CPU.
- 3. A *linker* is used to integrate all the functions in your program, including externally accessed libraries of functions, and to determine where each component will be loaded into memory when the program is executed.
- 4. A *loader* is used to load the machine code version of the program into memory where the CPU can execute it.
- 5. A *debugger* is used to help the programmer locate errors that may have crept into the the program. (Yes, none of us is perfect!)

You enter your source code in the text editor part, click on a "build" button to compile and link your program, then click on a "run" button to load and execute the program. There is typically a "debug" button that loads and executes the program under control of the debugger program if you need to debug it. The individual steps of program preparation are obscured by the IDE user interface. In this book we use the GNU programming environment in which each step is performed explicitly.

Several excellent text editors exist for GNU/Linux, each with its own "personality." My "favorite" changes from time to time. I recommend trying several that are available to you and deciding which one you prefer. You should avoid using a word processor to create source files

because it will add formatting to the text (unless you explicitly specify text-only). Text editors I have used include:

- gedit is probably installed if you are using the gnome desktop.
- kate is probably installed if you are using the kde desktop.
- vi is supposed to be installed on all Linux (and Unix) systems. It provides a command line user interface that is mode oriented. Text is manipulated through keyboard commands. Several commands place vi in "text insert" mode. The 'esc' key is used to return to command mode. Most installations include vim (Vi IMproved) which has additional features helpful in editing program source code.
- emacs also has a command line user interface. Text is inserted directly. The 'ctrl' and "meta" keys are used to specify keyboard sequences for manipulating text.

GUI interfaces are available for both vi and emacs. Any of these, and many other, text editors would be an excellent choice for the programming covered in this book. Don't spend too much time trying to pick the "best" one.

The GNU programming tools are executed from the command line instead of a graphical user interface (GUI). (IDEs for Linux and Unix are typically GUI frontends that execute GNU programming tools behind the scenes.) The GNU compiler, gcc, creates an executable program by performing several distinct steps [22]. The description here assumes a single C source file, filename.c.

- 1. *Preprocessing*. This resolves compiler directives such as #include (file inclusion), #define (macro definition), and #if (conditional compilation) by invoking the program cpp. Compilation can be stopped at the end of the preprocessing phase with the -E option, which writes the resulting C source code to standard out.
- 2. *Compilation itself.* The source code that results from preprocessing is translated into assembly language. Compilation can be stopped at the end of the compilation phase with the -S option, which writes the assembly language source code to *filename*.s.
- 3. Assembly. The assembly language source code that results from compilation is translated into machine code by invoking the as program. Compilation can be stopped at the end of the assembly phase with the -c option, which writes the machine code to <code>filename.o.</code>
- 4. Linking. The machine code that results from assembly is linked with other machine code from standard C libraries and other machine code modules, and addresses are resolved. This is accomplished by invoking the ld program. The default is to write the executable file, a.out. A different executable file name can be specified with the -o option.

7.2 Program Organization

Programs written in C are organized into functions. Each function has a name that is unique within the program. Program execution begins with the function named "main."

I recommend that you create a separate directory for each program you write. Place all the source files, plus the Makefile (see Appendix B) for the program in this directory. This will help you keep your program files organized.

Let us consider the minimum C program, Listing 7.1.

```
1 /*
2 * doNothingProg1.c
3 * The minimum components of a C program.
4 * Bob Plantz - 6 June 2009
5 */
6
```

```
7 int main(void)
8 {
9     return 0;
10 }
```

Listing 7.1: A "null" program (C).

The only thing this program does is return a zero.

Despite the fact that this program accomplishes very little, some instructions need to be executed just to return zero. In order to see what takes place, we first translate this program from C to assembly language with the GNU/Linux command:

```
gcc -S -00 doNothingProg1.c
```

This creates the file doNothingProg1.s (see Listing 7.2), which contains the assembly language generated by the gcc compiler. The two compiler options used here have the following meanings:

- -S Causes the compiler to create the .s file, which contains the assembly language equivalent of the source code. The machine code (.o file) is not created.
- **-00** Do not do any optimization. For instructional purposes, we want to see every step of the assembly language. (This is upper-case "oh" followed by the numeral zero.)

```
.file
                      "doNothingProg1.c"
            .text
   .globl main
                     main, @function
            .type
5 main:
  .LFB2:
6
            pushq
                     %rbp
  .LCFI0:
                      %rsp, %rbp
            movq
   .LCFI1:
10
            movl
                      $0, %eax
11
            leave
12
            ret
13
  .LFE2:
14
            .size
                     main, .-main
15
            .section
                               .eh_frame, "a",@progbits
16
   .Lframe1:
17
                      .LECIE1-.LSCIE1
            .long
18
  .LSCIE1:
19
20
            .long
                     0 \times 0
            .byte
                     0x1
21
            .string "zR"
22
            .uleb128 0x1
23
            .sleb128 -8
            .byte
                     0x10
25
            .uleb128 0x1
            .byte
                     0x3
27
            .byte
                     0xc
28
            .uleb128 0x7
29
            .uleb128 0x8
30
            .byte
                     0x90
31
            .uleb128 0x1
            .align 8
33
  .LECIE1:
34
35 .LSFDE1:
36
            .long
                      .LEFDE1 - .LASFDE1
```

```
.LASFDE1:
            .long
                     .LASFDE1-.Lframe1
38
            .long
                     .LFB2
            .long
                     .LFE2-.LFB2
40
            .uleb128 0x0
41
            .byte
                     0x4
42
                     .LCFI0-.LFB2
            .long
            .bvte
                     0xe
44
            .uleb128 0x10
            .byte
                     0x86
46
            .uleb128 0x2
47
            .byte
                     0x4
            .long
                     .LCFI1-.LCFI0
49
            .byte
50
                     0xd
            .uleb128 0x6
51
            .align 8
52
  .LEFDE1:
53
                     "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
            .ident
54
            .section
                               .note.GNU-stack, "", @progbits
55
```

Listing 7.2: A "null" program (gcc assembly language). Much of the code the compiler generates (lines 16-53) is meant to improve the efficiency of the program or for debugging and is not relevant to the concepts discussed in this book.

Unlike the relationship between assembly language and machine language, there is not a one-to-one relationship between higher-level languages and assembly language. The assembly language generated by a compiler may differ across different releases of the compiler, and different optimization levels will generally affect the code that is generated by the compiler. The code in Listing 7.2 was generated by release 4.2.3 of gcc and the optimization level was -00 (no optimization). If you attempt to replicate this example, your results may vary.

This is not easy to read, even for an experienced assembly language programmer. So we will start with the program in Listing 7.3, which was written in assembly language by a programmer (rather than by a compiler). Naturally, the programmer has added comments to improve readability.

```
1 # doNothingProg2.s
  # Minimum components of a C program, in assembly language.
  # Bob Plantz - 6 June 2009
           .text
           .globl
                   main
           .type
                   main, @function
  main:
          pushq
                                # save caller's frame pointer
                   %rsp, %rbp # establish our frame pointer
          movq
10
11
          movl
                   $0, %eax
                                # return 0 to caller
          movq
                   %rbp, %rsp
                                # restore stack pointer
12
                                # restore caller's frame pointer
          popq
                   %rbp
          ret
                                # back to caller
14
```

Listing 7.3: A "null" program (programmer assembly language).

After examining what the assembly language programmer did we will return to Listing 7.2 and look at the assembly language generated by the compiler.

Assembly language provides of a set of mnemonics that have a one-to-one correspondence to the machine language. A *mnemonic* is a short, English-like group of characters that suggests the action of the instruction. For example, "mov" is used to represent the instruction that copies ("moves") a value from one place to another. Thus, the machine instruction

4889E5

copies the entire 64-bit value in the rsp register to the rsp register. Even if you have never seen assembly language before, the mnemonic representation of this instruction in Listing 7.2,

movq %rsp, %rbp # establish our frame pointer

probably makes much more sense to you than the machine code. (The 'q' suffix on "mov" means a quadword (64 bits) is being moved.)

Strictly speaking, the mnemonics are completely arbitrary, as long as you have an assembler program that will translate them into the desired machine instructions. However, most assembler programs more or less use the mnemonics used in the manuals provided by CPU vendors.

The first thing to notice is that assembly language is line-oriented. That is, there is only one assembly language statement on each line, and none of the statements spans more than one line. A statement can continue onto subsequent lines, but this requires a special line-continuation character. This differs from the "free form" nature of C/C++ where the line structure is irrelevant. In fact, good C/C++ programmers take advantage of this to improve the readability of their code.

Next, notice that the pattern of each line falls into one of three categories:

- Lines 1 3 begin with the "#" character. The rest of the line is written in English and is easily read. The "#" character in the first column designates a *comment line*. Just as with a high-level language, comments are intended solely for the human reader and have no effect on the program.
- Lines 4 and 10 have been left blank in order to improve readability. (Well, they will improve readability once you learn how to read assembly language.)
- The remaining nine lines are organized into columns. They probably do not make much sense to you at this point because they are written in assembly language, but if you look carefully, each of the assembly language lines is organized into four possible fields:

label: operation operand(s) #comment

The assembler requires at least one space or tab character to separate the fields. When writing assembly language, your program will be much easier to read if you use the tab key to move from one field to the next.

Let us consider each field:

- 1. The *label field* allows us to give a symbolic name to any line in the program. Since each line corresponds to a memory location in the program, other parts of the program can then refer to the memory location by name.
 - (a) A label consists of an *identifier* immediately followed by the ":" character. You, as the programmer, must make up these identifiers. The rules for creating an identifier are given below.
 - (b) Notice that most lines are not labeled.
- 2. The *operation field* provides the basic purpose of the line. There are two types of operations:
 - (a) assembly language mnemonic The assembler translates these into actual machine instructions, which are copied into memory when the program is to be executed. Each machine instruction will occupy from one to five bytes of memory.
 - (b) assembler directive(pseudo op) Each of these operations begins with the period (".") character. They are used to direct the way in which the assembler translates the file. They do not translate directly into machine instructions, although some do cause memory to be allocated.

Use the tab key for readability.

Assembler directives are called Pseudo Ops in info as. Read about Pseudo Ops.

- 3. The operand field specifies the arguments to be used by the operation. The arguments are specified in several different ways:
 - (a) an explicit or literal value, e.g., the integer 75.
 - (b) a name that has meaning to the assembler, e.g., the name of a register.
 - (c) a name that is made up by the programmer, e.g., the name of a variable or a constant.

Different operations require differing numbers of operands — zero, one, two, or three.

4. The comment field is just like a comment line, except it takes up only the remainder of the line. Since assembly language is not as easy to read as higher-level languages, good programmers will place a comment on almost every line.

The rules for creating an identifier are very similar to those for C/C++. Each identifier consists of a sequence of alphanumeric characters and may include other printable characters such as ".", "_", and "\$". The first character must not be a numeral. An identifier may be any length, and all characters are significant. Case is also significant. For example, "myLabel" and "MyLabel" are different. Compiler-generated labels begin with the "." character, and many system related names begin with the "_" character. It is a good idea to avoid beginning your own labels with the "." or the "_" character so that you do not inadvertently create one that is about symbol already in use by the system.

Identifiers are called symbols in info as. Read names.

Integers can be used as labels, but they have a special meaning. They are used as local labels, which are sometimes useful in advanced assembly language programming techniques. They will not be used in this book.

The assembler program, as, will translate the file doNothingProg2.s (see Listing 7.3) into machine code and provide the memory allocation information for the operating system to use when the program is executed. We will first describe the contents of this file, then look at the GNU commands to convert it into an executable program.

Now we turn attention to the specific file in Listing 7.3, doNothingProg2.s. On line 5 you recognize

.text

as an assembler directive because it starts with a period character. It directs the assembler to place whatever follows in the text section.

What does "text section" mean? When a source code file is translated into machine code, an object file is produced. The object file organization follows the Executable and Linking Format (ELF). ELF files can be seen from two different points of view. Programs that store information in ELF files store it in sections. The ELF standard specifies many different types of sections, each depending on the type of information stored in it.

The .text directive specifies that when the following assembly language statements are translated into machine instructions, they should stored in a text section in the object file. Text sections are used to store program instructions in machine code format.

GNU/Linux divides memory into different segments for specific purposes when a program is loaded from the disk. The four general categories are:

Memory segments.

- text (also called code) is where program instructions and constant data are stored. It is read-only memory. The operating system prevents a program from changing anything stored in the text segment.
- data is where global variables and static local variables are stored. It is read-write memory and remains in place for the duration of the program.
- stack is where automatic local variables and the data that links functions are stored. It is read-write memory that is allocated and deallocated dynamically as the program executes.
- heap is the pool of memory available when a C program calls the malloc function (or C++ calls new). It is read-write memory that is allocated and deallocated by the program.

The operating system needs to view an ELF file as a set of segments. One of the functions of the ld program is to group sections together into segments so that they can be loaded into memory. Each segment contains one or more sections. This grouping is generally accomplished by arrays of pointers to the file, not necessarily by physically moving the sections. That is, there is still a section view of the ELF file remaining. So the information stored in an ELF file is grouped into sections, but it may or may not also be grouped into segments.

All ELF files have sections, but only some have segments.

When the operating system loads the program into memory, it uses the segment view of the ELF file. Thus the contents of all the text sections will be loaded into the text segment of the program process.

This has been a very simplistic overview of ELF sections and segments. We will touch on the subject again briefly in Section 8.1. Further details can be found by reading the man page for elf and sources like [13] and [21]. The readelf program is also useful for learning about ELF files. It is included in the binutils collection of the GNU binary tools so is installed along with as and ld.

The assembler directive on line 6

.globl main

has one operand, the identifier "main." As you know, all C/C++ programs start with the function named "main." In this book, we also start our assembly language programs with a main function and execute them within the C/C++ runtime environment. The .globl directive makes the name globally known, analogous to defining an identifier outside a function body in C/C++.¹ That is, code outside this file can refer to this name. When a program is executed, the operating system does some preliminary set up of system resources. It then starts program execution by calling a function named "main," so the name must be global in scope.

One can write stand-alone assembly language programs. In GNU/Linux this is accomplished by using the __start label on the first instruction in the program. The object (.o) files are then linked using the ld command directly rather than use gcc. See Section 8.5.

The assembler directive on line 7

.type main, @function

has two operands, a name and a type. The name is entered into the symbol table (see Section 7.3). In addition to the machine code, the object file contains the symbol table along with information about each symbol. The ELF format recognizes two types of symbols, data and function. The .type directive is used here to specify that the symbol main is the name of a function.

None of these three directives get translated into actual machine instructions, and none of them occupy any memory in the finished program. Rather, they are used to describe the characteristics of the statements that follow.

IMPORTANT! You need to distinguish

assembler directives — instructions to the assembler (the program that translates assembly language into machine code).

from

assembly language instructions — the code that gets translated into machine code.

What follows next in Listing 7.3 are the actual assembly language instructions. They will occupy memory when they are translated. The first instruction is on line 8:

main: pushq %rbp # save caller's frame pointer

¹Function names are defined outside the function body (outside the {...} block) in C/C++. Hence, the names are global, and a function can call functions defined in other files. Variables can also be declared outside functions. Functions in other files can reference such variables using the extern storage class specifier.

It illustrates the use of all four fields on a line of assembly language.

- 1. First, there is a label on this line, main. Since this name has been declared as a global name (with the assembler directive .globl main), functions defined in other files can call this function by name. In particular, after the operating system has loaded this function into memory, it can call main, and execution will start with this line.
- 2. The operation is a pushq instruction, which stands for "push quadword." It "pushes" a value onto the call stack. This will be explained in Section 8.2 (page 158). For now, this is a technique for temporarily saving the value stored in the operand.

The "quadword" part of this instruction means that 64 bits are moved. As you will see in more detail later, as requires that a single letter be appended to most instructions:

"b"	\Rightarrow	"byte"	\Rightarrow	operand is 8 bits
"w"	\Rightarrow	"word"	\Rightarrow	operand is 16 bits
"l"	\Rightarrow	"long"	\Rightarrow	operand is 32 bits
"a"	\Rightarrow	"quadword"	\Rightarrow	operand is 64 bits

to specify the size of the operand(s).

- 3. There is one operand, %rbp. The GNU assembler requires the "%" prefix on the operand to indicate that this is the name of a register in the cpu. This instruction saves the 64-bit value in the rbp register on the call stack.
 - The value in the rbp register is an address. In 64-bit mode addresses can be 64 bits long, $_{\rm Addresses\ can\ be}$ and we have to save the entire address.

64 bits.

4. Finally, we have added a comment to this line. The comment shows that the purpose of this instruction is to save the value that the calling function was using as a frame pointer. (The reasons for doing this will be explained in Chapter 8.)

The next line

```
%rsp, %rbp # establish our frame pointer
movq
```

uses only three of the fields.

- 1. First, there is no label on this line. Notice that the label field is left blank by using the tab key to indent into the second field, the operation field. It is important for readability that you use the tab key to keep the beginning of each field lined up in a column.
- 2. The operation is a move instruction, which stands for "move quadword." It "moves" a bit pattern from one location to another. Actually, "copy" is probably a better term than "move," because is does not change the bit pattern in the place copied from. But "move" has become the accepted terminology for this operation.
- 3. There are two operands, %rsp and %rbp. Again, the "%" prefix to each operand means that it is the name of a register in the cpu.

(a) The order of the operands in as is: source, destination.

- (b) Thus this instruction copies the 64-bit value in the rsp register to the rsp register in the cpu.
- 4. Finally, I have added a comment to this line. The comment shows that the purpose of this instruction is to establish a new frame pointer in this function. (Again, the reasons for doing this will be explained in Chapter 8.)

As the name of this "program" implies, it does not do anything, but it still must return to the operating system. GNU/Linux expects the main function to return an integer to it, and the return value is placed in the eax register. Zero means that the program executed with no errors. value goes in eax This may not make a lot of sense to you at this point, but it should become clearer later in the register. book. Returning the integer zero to the operating system is accomplished on line 12:

Function return

This is an ell (for "long"), not a one.11

ints are 32 hits

```
movl $0, %eax # return 0 to caller
```

- 1. This line also has no label. After indenting, it begins with a movl instruction.
- 2. The first operand is prefixed with a "\$" character, which indicates that the operand is to be taken as a literal value. That is, the source operand is the integer zero. You recognize that the second operand is the eax register in the cpu. This instruction places a copy of the 32-bit integer zero in the eax register.

Even though the CPU is in 64-bit mode, 64-bit integers are seldom needed. So the default behavior of environment is to use 32 bits for ints. 64-bit ints can be specified in C/C++ with either the long or the long long modifier. In assembly language the programmer would use quadwords for integers. (As pointed out on page 118 this instruction also zeros the high-order 32 bits of the rax register. But you should not write code that depends upon this behavior.)

3. The comment on this line shows that the purpose of this instruction is to return a zero to the calling function (the operating system).

The first two instructions in this function,

```
main: pushq %rbp # save caller's frame pointer
movq %rsp, %rbp # establish our frame pointer
```

form a *prologue* to the actual processing that is performed by the function. They changed some values in registers and used the call stack. Before returning to the operating system, it is essential that an *epilogue* be executed to restore the values. The compiler uses the leave instruction (see Listing 7.2) to accomplish this. The leave instruction is equivalent to the following two instructions:

```
movq %rbp, %rsp # restore stack pointer
popq %rbp # restore caller's frame pointer
```

- 1. No labels are used on these lines. The movq instruction ensures that the stack pointer is moved back to the location where the rbp register was saved. Since the stack pointer was not used in this function, this instruction is not necessary here. But your program will crash if the stack pointer is not in the correct location when the next instruction is executed, so it is a good idea to get into the habit of always using both these instructions at the end of a function.
- 2. The popq instruction copies the 64-bit value on the top of the call stack into the operand and moves the stack pointer accordingly. (You will learn about using the stack pointer in Section 8.2.) The operand in this case is the rbp register.
- 3. The comment states that the reason for the popq instruction is to restore the frame pointer value for the calling function (the operating system since this is main).
- 4. Although the leave instruction is slightly more efficient, we will use the movq and popq instructions in this book to emphasize the two operations that must be performed.

Finally, this function must return to the function that called it, which is back in the operating system.

```
ret # back to caller
```

- 1. This line has no label. And the instruction does not specify any operands. This is the instruction for returning program control back to the function that called this one. In this particular case, since this is the main function, control is passed back to the operating system.
- 2. Here is an example of an instruction that changes the value in the instruction pointer register (rip) in order to alter the linear flow of the program. We will see later the mechanism that is used to implement this.
- 3. The comment on this line briefly describes the reason for the instruction.

First instructions

As you can see from this example, even a function that does nothing requires several instructions. The most commonly used assembly language instruction is

movs source, destination

	<u>s</u>	meaning	number of bits
	b	byte	8
where <i>s</i> denotes the size of the operand:	W	word	16
	ι	longword	32
	q	quadword	64

In the Intel syntax, the size of the data is determined by the operand, so the size character (b, w, l, or q) is not appended to the instruction, and the order of the operands is reversed:

destination, source

The mov instruction copies the bit pattern from the source operand to the destination operand. The bit pattern of the source operand is not changed. If the destination operand is a register and its size is less than 64 bits, the effect on the other bits in the register is shown in Table 7.1.

size	destination bits	remaining bits
8	7 - 0	63 – 8 are unchanged
8	15 - 8	63 - 16, 7 - 0 are unchanged
16	15 - 0	63 – 16 are unchanged
32	31 - 0	63 - 32 are set to 0

Table 7.1: Effect on other bits in a register when less than 64 bits are changed.

The mov instruction does not affect the rflags register. In particular, neither the CF nor the OF flags are affected. No more than one of the two operands may be a memory location. Thus, in order to move a value from one memory location to another, it must be moved from the first memory location into a register, then from that register into the second memory location. You have to use a (Accessing data in memory will be covered in Sections 8.1 and 8.3.)

register to move

The other instructions used in this "do nothing" program — pushq, popq, and ret — use the call stack. The call stack will be discussed in Section 8.2, which will then allow us to discuss these instructions. For now, you should memorize how to use them as "boilerplate" for the prologue and epilogue of each function.

A Note About Syntax

If you have any experience with x86 assembly language, the syntax used by the GNU assembler, as, will look a little strange to you. In principle, the syntax is arbitrary. A programmer could invent any sort of assembly language and write a program that would translate it into the appropriate machine code. But most cpu manufacturers publish a manual with a suggested assembly language syntax for their cpu.

Most assemblers for the x86 cpus follow the syntax suggested by Intel®, but as uses the AT&T syntax. It is not radically different from Intel's. Some of the more striking differences are:

Pay attention to operand order.

AT&T Intel®operand order: source, destination destination, source register names: prefixed with the "%" charjust the name, e.g., eax acter, e.g., %eax literal values: just the value, e.g., 123 prefixed with the "\$" character, e.g., \$123 use the b, w, l, or q suffix determined by the register operand size: specification (more complion opcode to denote byte, word, long, or quadruple cated if operand is stored in memory) \mathbf{word}

The GNU assembler, as, does not require the size suffix on instructions in all cases. From the info documentation for as:

```
9.13.4 Instruction Naming
```

Instruction mnemonics are suffixed with one character modifiers which specify the size of operands. The letters 'b', 'w', 'l' and 'q' specify byte, word, long and quadruple word operands. If no suffix is specified by an instruction then 'as' tries to fill in the missing suffix based on the destination register operand (the last one by convention). Thus, 'mov %ax, %bx' is equivalent to 'movw %ax, %bx'; also, 'mov \$1, %bx' is equivalent to 'movw \$1, bx'. Note that this is incompatible with the AT&T Unix assembler which assumes that a missing mnemonic suffix implies long operand size. (This incompatibility does not affect compiler output since compilers always explicitly specify the mnemonic suffix.)

It is recommended that you get in the habit of using the size suffix letters when you begin writing your own assembly language. This will help you to avoid introducing obscure bugs in your code.

The assembler directives are typically not specified by the cpu manufacturer, so you will see a much wider variety of syntax, depending on the particular assembler program. We will not try to list any differences here.

The GNU assembler, as, also supports the Intel® syntax. The assembler directive .intel_syntax says that following assembly language is written in the Intel® syntax; .att_syntax says it is written in AT&T syntax. Using Intel® syntax, the assembly language code in Listing 7.3 would be written

```
Intel® Syntax

main: push rbp mov rbp, rsp

mov eax, 0 mov rsp, rbp pop rbp ret
```

Keep in mind that gcc produces assembly language in AT&T syntax, so you will undoubtedly find it easier to use that when you write your own code. The .intel_syntax directive might be useful if somebody gives you and entire function written in Intel® syntax assembly language.

The syntax rules for our particular assembler, as, are described in an on-line manual that is in the GNU info format. as supports some two dozen computer architectures, so it is a challenge to wade through the info manual to find what you need. On the other hand, it provides the most up to date information. And it is especially important for learning how to use assembler directives because they are specific to the assembler.

Now would be a good time to start learning how to use info for as. As you encounter new assembly language concepts in this book, also look them up in info for as. If you are unfamiliar with info, at the GNU/Linux prompt, simply type

for a nice tutorial.

7.2.3 The Additional Assembly Language Generated by the Compiler

First, notice that the compiler-generated labels (e.g., .LFB2, .LCFI0,...) each begin with a period character, just like assembler directives. You can tell that they are labels because of the ":" immediately following.

If you compare the assembly language program in Listing 7.3 with that generated by the compiler in Listing 7.2, you can see that the compiler includes much more information in the file. Most of this information will not be used elsewhere in this book. We explain it here for completeness.

The first line,

```
.file "doNothingProg1.c"
```

identifies the name of the C source file. When you write in assembly language this information clearly does not apply.

The five lines

```
main:
LFB2:
pushq %rbp
LCFI0:
movq %rsp, %rbp
```

set up the call stack for this function. The use of the call stack will be explained in more detail in Section 8.2 on page 158 and in subsequent Sections.

The additional labels generated by the compiler, .LFB2 and .LCF10 are used for entries in the unwind table, which is briefly described below. Our programs will not include unwind tables, so we will not need such labels.

Notice that the lines after the two labels main, and .LFB2 are blank. The assembler does not generate any machine code for either of these two lines, so they do not take up any memory. The next thing that comes in memory is the

```
pushq %rbp
```

instruction. Thus, both labels apply to the address where this instruction is located.

The instruction

leave

12

accomplishes the same thing as the two instructions

```
movq %rbp, %rsp # restore stack pointer
popq %rbp # restore caller's frame pointer
```

in the assembly language written by a programmer (Figure 7.3). We use the two individual instructions because they explicitly show the operations that must be performed at the end of each function. They undo the set up of the call stack that took place at the very beginning of the function. (The goal of this book is to show what the computer is doing.)

Lines 16 – 53 make up what is called an *unwind table*. The -fasynchronous-unwind-tables option causes the compiler to generate an unwind table in dwarf2 format for the function. In my version of the compiler, the default is to generate the table in 64-bit mode and not generate it in 32-bit mode. This may vary depending on different versions of the compiler. We will not use the table so will use the -fno-asynchronous-unwind-tables option to turn off the feature, as shown in Listing 7.4. The GNU/Linux command is:

```
gcc -S -00 -fno-asynchronous-unwind-tables doNothingProg1.c
```

which gives the compiler-generated assembly language in Listing 7.4.

```
.file
                    "doNothingProg1.c"
           .text
  .globl main
                    main, @function
           .type
5 main:
           pushq
                    %rbp
                    %rsp, %rbp
           movq
           movl
                    $0, %eax
           leave
           ret
10
                    main, .-main
11
           .size
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
12
           .section
                             .note.GNU-stack, "",@progbits
13
```

Listing 7.4: A "null" program (gcc assembly language). We have used the -fno-asynchronous-unwind-tables compiler option to remove the exception handler frame.

Lines 15, 54, and 55 in Listing 7.2 are the same as lines 11 - 13 in Listing 7.4. They also use directives that do not apply to the programs we will be writing in this book.

Finally, you may have noticed that the main label is on a line by itself in Listing 7.2 but not in Listing 7.3. When there is only a label on a line, no machine instructions are generated, and no memory is allocated. Thus, the label really applies to the next line. It is common to place labels on their own line so that longer, easier to read labels can be used while still keeping the operations visually lined up in a column. This technique is illustrated in Listing 7.5.

```
1 # doNothingProg3.s
2 # The minimum components of a C program, written in assembly
 # language. Same as doNothingProg2.s, except with the main
   label on its own line.
  # Bob Plantz - 7 June 2009
          .text
          .globl
                  main
          .type
                   main, @function
10 main:
          pushq
                                # save caller's frame pointer
11
                               # establish our frame pointer
          movq
                   %rsp, %rbp
12
13
                                # return 0 to caller
          movl
                   $0, %eax
14
          movq
                   %rbp, %rsp
                               # restore stack pointer
15
                                # restore caller's frame pointer
          popq
                   %rbp
          ret
                                # back to caller
17
```

Listing 7.5: The "null" program rewritten to show a label placed on its own line.

7.2.4 Viewing Both the Assembly Language and C Source Code

The gcc compiler provides a set of options that will allow you to generate a listing that shows both the assembly language and the corresponding C statement(s). This will allow you to more easily see the assembly language that the compiler generates to implement a C statement in assembly language. Compiling the program in Listing 7.1 with the command:

```
$ gcc -00 -g -Wa,-adhls doNothingProg1.c > doNothingProg1.lst
```

generates the assembly language code in Listing 7.6.

```
1 GAS LISTING /tmp/cczPwhLl.s
                                                      page 1
                                              "doNothingProg1.c"
     1
                                     .file
     9
                            .Ltext0:
    10
                            .globl main
    12
                            main:
    13
                            .LFB0:
                                     .file 1 "doNothingProg1.c"
    14
     1:doNothingProg1.c **** /*
10
     2:doNothingProg1.c **** * doNothingProg1.c
11
     3:doNothingProg1.c **** * The minimum components of a C program.
12
     4:doNothingProg1.c **** * Bob Plantz - 6 June 2009
13
     5:doNothingProg1.c **** */
     6:doNothingProg1.c ****
     7:doNothingProgl.c **** int main(void)
     8:doNothingProg1.c **** {
17
    15
                                     .loc 1 8 0
    16
                                     .cfi_startproc
19
    17 0000 55
                                     pushq
                                             %rbp
    18
                            .LCFI0:
21
    19
                                     .cfi_def_cfa_offset 16
22
    20 0001 4889E5
                                             %rsp, %rbp
                                     movq
23
    21
                                     .cfi_offset 6, -16
24
    22
                            .LCFI1:
25
    23
                                     .cfi_def_cfa_register 6
26
     9:doNothingProg1.c ****
                                    return 0;
27
    24
                                     .loc 1 9 0
28
    25 0004 B8000000
                                     movl
                                             $0, %eax
29
30
    10:doNothingProg1.c **** }
31
    26
                                     .loc 1 10 0
32
    27 0009 C9
                                     leave
33
    28 000a C3
                                     ret
34
    29
                                     .cfi_endproc
                            .LFE0:
    30
36
    32
                            .Letext0:
  GAS LISTING /tmp/cczPwhLl.s
                                                      page 2
39
40
41 DEFINED SYMBOLS
                                *ABS*:0000000000000000 doNothingProgl.c
       /tmp/cczPwhLl.s:12
                                .text:0000000000000000 main
43
45 NO UNDEFINED SYMBOLS
```

Listing 7.6: Assembly language embedded in C source code listing. The line number in the C source file is also indicated with the .loc assembler directive. Note that the C source code line numbering begins with 0; this can vary with different versions of as.

The "-g" option tells the compiler to include symbols for debugging. "-Wa," passes the immediately following options to the assembly phase of the compilation process. Thus, the options passed to the assembler are "-adhls", which cause the assembler to generate a listing with the following characteristics:

• -ad: omit debugging directives

- · -ah: include-high level source
- -al: include assembly
- -as: include symbols

As you can see above the secondary letters can be combined with one "-a." The "d" has the same effect as the "-fno-asynchronous-unwind-tables" option. The listing is written to standard out, which can be redirected to a file. We gave this file the ".lst" file extension because it cannot be assembled.

7.2.5 Minimum Program in 32-bit Mode

The x86-64 processors can also run in 32-bit mode. Most GNU/Linux distributions also provide a 32-bit version. Some distributions are only available in 32-bit.

The gcc option to compile a program for 32-bit mode is -m32. Listing 7.7 shows the assembly language generated by the GNU/Linux command:

```
gcc -S -00 -m32 doNothingProg1.c
```

```
"doNothingProg1.c"
           .file
           .text
  .globl main
3
           .type
                    main, @function
5 main:
           leal
                    4(%esp), %ecx
           andl
                    $-16, %esp
7
           pushl
                    -4(%ecx)
           pushl
                    %ebp
           movl
                    %esp, %ebp
10
           pushl
                    %ecx
11
                    $0, %eax
           movl
12
13
           popl
                    %ecx
           Jaoa
                    %ebp
14
                    -4(%ecx), %esp
           leal
15
           ret
16
           .size
                    main, .-main
17
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
18
                              .note.GNU-stack, "",@progbits
           .section
```

Listing 7.7: A "null" program (gcc assembly language in 32-bit mode).

The first thing to notice is that all the instructions use the "l" suffix to indicate "longword" because addresses are 32 bits. And only the 32-bit portion of the registers is used. That is, esp instead of rsp, etc.

The prologue in the 32-bit main function,

```
6 leal 4(%esp), %ecx
7 andl $-16, %esp
8 pushl -4(%ecx)
9 pushl %ebp
10 movl %esp, %ebp
11 pushl %ecx
```

is much more complex that the 64-bit version. This has to do with the use of 32-bit addresses and other performance issues that are beyond the scope of this book. Similarly, the epilogue,

```
popl %ecx
popl %ebp
leal -4(%ecx), %esp
```

needs to be more complex in order to match the prologue.

Although the prologue/epilogue generated by the compiler make a more robust program for a production environment, the essence of the "do nothing" program in 32-bit mode can be written as shown in Listing 7.8.

```
1 # doNothingProg4.s
2 # The minimum components of a C program, written in assembly
3 # language. A 32-bit version of doNothingProgl.s.
  # Bob Plantz - 7 June 2009
          .text
          .globl
                  main
          .type
                  main, @function
9 main:
          pushl
                               # save caller's frame pointer
10
          movl
                   %esp, %ebp # establish our frame pointer
11
          movl
                   $0, %eax
                               # return 0 to caller
12
                   %ebp, %esp # restore stack pointer
          movl
13
          popl
                   %ebp
                               # restore caller's frame pointer
14
                               # back to caller
          ret
```

Listing 7.8: A "null" program (programmer assembly language in 32-bit mode).

7.3 Assemblers and Linkers

We present a highly simplified view of how assemblers and linkers work here. The goal of this presentation is to introduce the concepts. Most assemblers and linkers have capabilities that go far beyond the concepts described here (e.g., macro expansion, dynamic load/link). We leave a more thorough discussion of assemblers and linkers to a book on systems programming.

7.3.1 Assemblers

An assembler must perform the following tasks:

- Translate assembly language mnemonics into machine language.
- Translate symbolic names for addresses into numeric addresses.

Since the numeric value of an address may be required before an instruction can be translated into machine language, there is a problem with forward references to memory locations. For example, a code sequence like:

```
1 # if (response == 'y')
          cmpb
                   $'y', response # was it 'y'?
                                    # no, there is no change
          jne
                   noChange
  # then print the "save" message
          movq
                   $saveMsg, %rbx # point to first char
  saveLoop:
                   $0, (%rbx)
                                    # at null character?
          cmpb
                   saveEnd
                                    # yes, exit loop
          jе
10
                   $1, %edx
          movl
                                    # no, send one byte
11
          movq
                   %rbx, %rsi
                                         at this location
12
          movl
                   $STDOUT, %edi
                                              to screen.
13
          call
                   write
14
                                    # increment char pointer
          incq
                   %rbx
15
          jmp
                   saveLoop
                                    # check at top of loop
16
```

```
17 saveEnd:
18 jmp allDone # skip over false block
19
20 # else print the "discard" message
21 noChange:
22 movq $discardMsg, %rbx # point to first char
```

creates a problem for the assembler when it needs to translate the

```
jne noChange # no, there is no change
```

instruction on line 3. (Don't forget that assembly language is line oriented; translation is done one line at a time.) When this code sequence is executed, the immediately previous instruction (cmpb \$'y', response) compares the byte stored at location response with the character 'y'. If they are not equal, i.e., a 'y' is not stored at location response, the jne instruction causes program flow to jump to location noChange. In order to accomplish this action, the translation of this instruction (the machine code) must include a numerical value that specifies how far to jump. That is, it must include the distance, in number of bytes, between the jne instruction and the memory location labeled noChange on line 23. In order to compute this distance, the assembler must determine the address that corresponds to the label noChange when it translates this instruction, but the assembler has not even encountered the noChange label, much less determined its corresponding address.

The simplest solution is to use a two-pass assembler:

- 1. The first pass builds a symbol table, which provides an address for each memory label.
- 2. The second pass performs the actual translation into machine language, consulting the symbol table for numeric values of the symbols.

Algorithm 7.1 is a highly simplified description of how the first pass of an assembler works.

Algorithm 7.1: First pass of a two-pass assembler.

```
Data: SymbolTable with each entry a Symbol/Number pair
Data: LocationCounter

1 LocationCounter ← 0;

2 get first line of source code;

3 while more lines do

4 | if line has label then

5 | SymbolTable.Symbol ← label;

6 | SymbolTable.Number ← LocationCounter;

7 | determine number of bytes required by line when assembled;

8 | LocationCounter ← LocationCounter + number of bytes;

9 | get next line of source code;
```

The symbol table is carried from the first pass to the second. The second pass also consults a table of operation codes, which provides the machine code corresponding to each instruction

mnemonic. A highly simplified description of the second pass is given in Algorithm 7.2.

```
Algorithm 7.2: Second pass of a two-pass assembler.
  given: Symbol Table from Pass One
  given: Op - CodeTable
  Data: LocationCounter
1 LocationCounter \leftarrow 0;
2 get first line of source code:
  while more lines do
      if line is instruction then
         find machine code from Op-Code Table;
5
         find symbol value from SymbolTable;
6
         assemble instruction into machine code;
7
      else
8
       carry out directive;
9
      write machine code to object file;
10
11
      determine number of bytes used;
      LocationCounter ← LocationCounter + number of bytes;
12
     get next line of source code;
```

7.3.2 Linkers

Look again at the code sequence above. On line 14 there is the instruction:

```
call write
```

This call to the write function is a reference to a memory label outside the file being assembled. Thus, the assembler has no way to determine the address of write for the symbol table during the first pass. The only thing the assembler can do during the second pass is to leave enough memory space for the address of write when it assembles this instruction. The actual address will have to be filled in later in order to create the entire program. Filling in these references to external memory locations is the job of the linker program.

The algorithm for linking functions together is very similar to that of the assembler. The same forward reference problem exists. Again, the simplest solution is to use a two-pass linker program.

The highly simplified algorithm in Algorithms Algorithms 7.3 and 7.4 also provide for loading the entire program into memory. The functions are linked together as they are loaded. In practice, this is seldom done. For example, the GNU linker, ld, does not load the program into memory. Instead, it creates another machine language file — the executable program. The executable program file contains all the functions of the program with all the cross-function memory references resolved. Thus ld is a *link editor* program.

Getting even more realistic, many of the functions used by a program are not even included in the executable program file. They are loaded as required when the program is executing. The link editor program must provide dynamic links for the executable program file.

However, you can get the general idea of linking separately assembled (or compiled) functions together by studying the algorithms in Algorithms 7.3 and 7.4. In particular, notice that the assembler (or compiler) must include other information in addition to machine code in the object file. The additional information includes:

- 1. The name of the function.
- 2. The name of each external memory reference.
- 3. The location relative to the beginning of the function where the external memory reference is made.

Algorithm 7.3: First pass of a two-pass linker.

```
Data: GlobalSymbolTable with each entry a Symbol/Number pair
Data: LocationCounter

1 LocationCounter ← 0;
2 open first object file;
3 while more object files do
4 GlobalSymbolTable.Symbol ← function name;
5 GlobalSymbolTable.Number ← LocationCounter;
6 determine number of bytes required by the function;
7 LocationCounter ← LocationCounter + number of bytes;
8 open next object file;
```

Algorithm 7.4: Second pass of a two-pass linker.

```
Data: MemoryPointer
  given: GlobalSymbolTable from Pass One
1 MemoryPointer ← address from OS;
2 open first object file;
3 while more object files do
     while more machine code do
4
5
         CodeByte Leftarrow read byte of code from object file;
         *MemoryPointer ← CodeByte;
6
         MemoryPointer Leftarrow MemoryPointer + 1;
7
      while more external memory references do
8
         get value corresponding to reference from GlobalSymbolTable;
         determine where value should be stored;
10
         store value in code that was just loaded;
11
     open next object file;
12
```

7.4 Creating a Program in Assembly Language

Since we are concerned with assembly language in this book, let us go through the steps of creating a program for the assembly language source code in Listing 7.5.

First, Figure 7.1 is a screen shot of what I did with my typing in **boldface**. The notation I use here assumes that I am doing this for a class named CS 252, and my instructor has specified that each project should be submitted in a directory named CS252*lastNameNN*, where *lastName* is the student's surname and *NN* is the project number. I have appended .0 to the project folder name for my own use. As I develop my project, subsequent versions will be numbered .1, .2,

Let us go through the steps in Figure 7.1 one line at a time, explaining each line. bob\$ mkdir CS252plantz01.0

I create a directory named "CS252plantz01.0." All the files that you create for each program should be kept in a separate directory only for that program.

```
bob$ cd CS252plantz01.0/
```

I make the newly created subdirectory the current working directory.

```
bob$ ls
bob$ pwd /home/bob/CS252/CS252plantz01.0
```

These two commands show that the new subdirectory is empty and where my current working directory is located within the file hierarchy.

```
bob$ emacs doNothingProg.s
```

```
bob$ mkdir CS252plantz01.0
bob$ cd CS252plantz01.0/
bob$ ls
bob$ pwd /home/bob/CS252/CS252plantz01.0
bob$ emacs doNothingProg.s

This is where I used emacs to enter the program from Listing 7.5.

bob$ ls
doNothingProg.s
bob$ as -gstabs -o doNothingProg.o doNothingProg.o
bob$ ls
doNothingProg.o doNothingProg.s
bob$ gcc -o doNothingProg.s
bob$ sycc -o doNothingProg.o doNothingProg.s
bob$ ls
doNothingProg doNothingProg.o doNothingProg.s
bob$ ls
doNothingProg doNothingProg.o doNothingProg.s
bob$ ./doNothingProg
bob$
```

Figure 7.1: Screen shot of the creation of a program in assembly language.

This starts up the emacs program and creates a new file named "doNothingProg.s." You may use any text editor. I am now ready to use the emacs editor to enter my program. emacs is an extremely powerful and versatile editor. We could easily spend the rest of the book simply learning about emacs, but the following very small subset of emacs commands will be enough to get you started. These are all keyboard commands, which will allow you to use emacs from a remote system that does not support X-window.

- To enter text, simply type.
- Use the arrow keys to move around in existing text.
- The "Backspace" or the "Delete" key will delete the character immediately to the left of the cursor.
- Typing ctrl-x then ctrl-s will save your current work, writing over the previous contents in the file.
- Typing ctrl-x then ctrl-c will exit emacs giving you the option of first saving unsaved changes.
- If you wish to learn more about emacs, ctrl-h will start the emacs tutorial.

```
bob$ ls
doNothingProg.s
```

This shows that I have created the file, doNothingProg.s.

```
bob$ as -gstabs doNothingProg.s -o doNothingProg.o
bob$ ls
doNothingProg.o doNothingProg.s
```

On the first line, I invoke the assembler, as. The –gstabs option directs the assembler to include debugging information with the output file. We will very definitely make use of the debugger! The -o option is followed by the name of the output (object) file. You should always use the same name as the source file, but with the .o extension. The second command simply shows the new file that has been created in my directory.

```
bob$ gcc doNothingProg.o -o doNothingProg
bob$ ls
doNothingProg doNothingProg.o doNothingProg.s
```

Next I link the object file. Even though there is only one object file, this step is required in order to bring in the GNU/Linux libraries needed to create an executable program. As in as, the -o option is used to specify the name of a file. In the linking case, this will be the name of the final product of our efforts.

Note: The linker program is actually 1d. The problem with using it directly, for example,

ld doNothingProg.o -o doNothingProg *** DOES NOT WORK ***

is that you must also explicitly specify all the libraries that are used. By using gcc for the linking, the appropriate libraries are automatically included in the linking.

bob\$./doNothingProg
bob\$

Finally, I execute the program (which does nothing).

7.5 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. It should be sufficient for doing the exercises in the current chapter. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. The summary will be repeated and updated, as appropriate, at the end of each succeeding chapter in the book. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

7.5.1 Instructions

data movement:

opcode	source	destination	action	see page:
movs	\$imm/%reg	%reg/mem	move	141
pop w		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q

arithmetic/logic:

opcode	source	destination	action	see page:
cmps	\$imm/%reg	%reg/mem	compare	209
incs	%reg/mem		increment	220

s = b, w, l, q

program flow control:

opcode	location	action	see page:
call	label	call function	156
je	label	jump equal	211
jmp	label	jump	213
jne	label	jump not equal	211
ret		return from function	168

7.6 Exercises

The functions you are asked to write in these exercises are not complete programs. You can check that you have written a valid function by writing a main function in C that calls the function you have written in assembly language. Compile the main function with the -c option so that you get the corresponding object (.o) file. Assemble your assembly language file. Make

7.6. EXERCISES 153

sure that you specify the debugging options when compiling/assembling. Use the linking phase of gcc to link the .o files together. Run your program under gdb and set a breakpoint in your assembly language function. (Hint: you can specify the source file name in gdb commands.) Now you can verify that your assembly language function is being called. If the function returns a value, you can print that value in the main function using printf.

7-1 (§7.2) Write the C function:

```
/* f.c */
int f(void) {
    return 0;
}
```

in assembly language. Make sure that it assembles with no errors. Use the -S option to compile f.c and compare gcc's assembly language with yours.

7-2 (§7.2) Write the C function:

```
/* g.c */
void g(void) {
}
```

in assembly language. Make sure that it assembles with no errors. Use the -S option to compile g.c and compare gcc's assembly language with yours.

7-3 (§7.2) Write the C function:

```
/* h.c */
int h(void) {
    return 123;
}
```

in assembly language. Make sure that it assembles with no errors. Use the -S option to compile h.c and compare gcc's assembly language with yours.

- **7-4** (§7.2) Write three assembly language functions that do nothing but return an integer. They should each return different, non-zero, integers. Write a C main function to test your assembly language functions. The main function should capture each of the return values and display them using printf.
- **7-5** (§7.2) Write three assembly language functions that do nothing but return a character. They should each return different characters. Write a C main function to test your assembly language functions. The main function should capture each of the return values and display them using printf.
- **7-6** (§7.2, §6.5) Write an assembly language function that returns four characters. The return value is **always** in the eax register in our environment, so you can store four characters in it. The easiest way to do this is to determine the hexadecimal value for each character, then combine them so you can store one 32-bit hexadecimal value in eax.

Write a C main function to test your assembly language function. The main function should capture the return values and display them using the write system call.

Explain the order in which they are displayed.

Chapter 8

Program Data – Input, Store, Output

Most programs follow a similar pattern:

- Read data from an input device, such as the keyboard, a disk file, the internet, etc., into main memory.
- 2. Load data from main memory into CPU registers.
- 3. Perform arithmetic/logic operations on the data.
- 4. Store the results in main memory.
- 5. Write the results to an output device, such as the screen, a disk file, audio speakers, etc.

In this chapter you will learn how to call functions that can read input from the keyboard, allocate memory for storing data, and write output to the screen.

8.1 Calling write in 64-bit Mode

We start with a program that has no input. It simply writes constant data to the screen — the "Hello World" program.

We will use the *C system call function* write to display the text on the screen and show how to call it in assembly language. As we saw in Section 2.8 (page 22) the write function requires three arguments. Reading the argument list from left to right in Listing 8.1:

- 1. STDOUT_FILENO is the file descriptor of standard out, normally the screen. This symbolic name is defined in the unistd.h header file.
- 2. Although the C syntax allows a programmer to place the text string here, only its address is passed to write, not the entire string.
- 3. The programmer has counted the number of characters in the text string to write to STDOUT_FILENO.

```
1 /*
2 * helloWorld2.c
3 *
4 * "hello world" program using the write() system call.
5 * Bob Plantz - 8 June 2009
6 */
7 #include <unistd.h>
```

Listing 8.1: "Hello world" program using the write system call function (C).

This program uses only constant data — the text string "Hello world." Constant data used by a program is part of the program itself and is not changed by the program.

Looking at the compiler-generated assembly language in Listing 8.2, the constant data appears on line 4, as indicated by the comment added on that line. Comments have also been added on lines 11 - 14 to explain the argument set up for the call to write.

```
"helloWorld2.c"
           .file
           .section
                            .rodata
  .LC0:
           .string "Hello world.\n" # constant data
           .text
  .globl main
           .type
                   main, @function
8 main:
           pushq
                    %rbp
           movq
                    %rsp, %rbp
           movl
                    $13, %edx
                                   # third argument
11
                    $.LC0, %esi
                                   # second argument
           movl
12
           movl
                   $1, %edi
                                   # first argument
13
                   write
           call
           movl
                    $0. %eax
15
           leave
16
           ret
17
           .size
                   main, .-main
18
           .ident
                   "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
19
                            .note.GNU-stack, "",@progbits
           .section
20
```

Listing 8.2: "Hello world" program using the write system call function (gcc assembly language).

Data can only be located in one of two places in a computer:

- in memory, or
- in a CPU register.

(We are ignoring the case of reading from an input device or writing to an output device here.) Recall from the discussion of memory segments on page 137 that the Linux kernel uses different memory segments for the various parts of a program. The directive on line 2,

```
.section .rodata
```

uses the .section assembler directive to direct the assembler to store the data that follows in a "read-only data" section in the object file. Even though it begins with a '.' character .rodata is not an assembler directive but the name of a section in an ELF file.

Your first thought is probably that the .rodata section should be loaded into a data segment in memory, but recall that data memory segments are read/write. Thus .rodata sections are mapped into a text segment, which is a read-only memory segment.

The .string directive on line 4,

```
3 .LCO:
4 .string "Hello world.\n" # constant data
```

allocates enough bytes in memory to hold each of the characters in the text string, plus one for the NUL character at the end. The first byte contains the ASCII code for the character 'H', the second the ASCII code for 'e', etc. Notice that the last character in this string is '\n', the newline character; it occupies only one byte of memory. So fourteen bytes of memory are allocated in the .rodata section in this program, and each byte is set to the corresponding ASCII code for each character in the text string. The label on line 3 provides a symbolic name for the beginning address of the text string so that the program can refer to this memory location.

The most common directives for allocating memory for data are shown in Table 8.1. If these

[label]	.space	expression	evaluates expression and allocates that many
			bytes; memory is not initialized
[label]	.string	"text"	initializes memory to null-terminated string
[label]	.asciz	"text"	same as .string
[label]	.ascii	"text"	initializes memory to the string without null
[label]	.byte	expression	allocates one byte and initializes it to the value
			${ m of}\ expression$
[label]	.word	expression	allocates two bytes and initializes them to the
			value of <i>expression</i>
[label]	.long	expression	allocates four bytes and initializes them to the
			value of <i>expression</i>
[label]	.quad	expression	allocates eight bytes and initializes them to the
			value of <i>expression</i>

Table 8.1: Common assembler directives for allocating memory. The label is optional.

are used in the .rodata section, the values can only be used as constants in the program. The assembly language instruction used to call a function is

call functionName

where *functionName* is the name of the function being called. The call instruction does two things:

- call pushes the return address onto the call stack.
- 1. The address in the rip register is pushed onto the call stack. (The call stack is described in Section 8.2.) Recall that the rip register is incremented immediately after the instruction is fetched. Thus, when the call instruction is executed, the value that gets pushed onto the stack is the address of the instruction immediately following the call instruction. That is, the return address gets pushed onto the stack in this first step.
- 2. The address that *functionName* resolves to is placed in the rip register. This is the address of the function that is being called, so the next instruction to be fetched is the first instruction in the called function.

The call of the write function is made on line 14.

call write

Before the call is made, any arguments to a function must be stored in their proper locations, as specified in the ABI [25]. Up to six arguments are passed in the general purpose registers. Reading the argument list from left to right in the C code, the order of using the registers is given in Table 8.2. If there are more than six arguments, the additional ones are pushed onto the call stack, but in right-to-left order. This will be described in Section 11.2.

Each of the three arguments to write in this program — the file descriptor, the address of the text string, and the number of bytes in the text string — is also a constant whose value is known when the program is first loaded into memory and is not changed by the program. The locations of these constants on lines 11 - 13,

Argument	Register
first	rdi
second	rsi
third	rdx
fourth	rcx
fifth	r8
sixth	r9

Table 8.2: Order of passing arguments in general purpose registers.

```
movl $13, %edx # third argument

movl $.LCO, %esi # second argument

movl $1, %edi # first argument
```

are not as obvious. The location of the data that an instruction operates on must be specified in the instruction and its operands. The manner in which the instruction uses an operand to locate the data is called the *addressing mode*. Assembly language includes a syntax that the programmer uses to specify the addressing mode for each operand. When the assembler translates the assembly language into machine code it sets the bit pattern in the instruction to the corresponding addressing mode for each operand. Then when the CPU decodes the instruction during program execution it knows where to locate the data represented by that operand.

The simplest addressing mode is *register direct*. The syntax is to simply use the name of a register, and the data is located in the register itself.

Register direct: The data value is located in a CPU register.

```
syntax: \ the \ name \ of \ the \ register \ with \ a \ "\%" prefix example: \ movl \qquad \text{$*eax}\,, \ \text{$$*ebx} The instructions on lines 9-10,
```

```
pushq %rbp
movq %rsp, %rbp
```

use the register direct addressing mode for their operands. The pushq instruction has only one operand, and the movq has two.

Each of the instructions on lines 11-13 use the register direct addressing mode for the destination, but the source operand is the data itself. So all three instructions employ the *immediate data* addressing mode for the source.

Immediate data: The data value is located in memory immediately after the instruction. This addressing mode can only be used for a source operand.

```
syntax: the data value with a "$" prefix example: movq $0x123456789abcd, %rbx
```

Although the register direct addressing mode can be used to specify either a source or destination operand, or both, the immediate data addressing mode is valid only for a source operand.

Let us consider the mechanism by which the control unit accesses the data in the immediate data addressing mode. First, we should say a few words about how a control unit executes an instruction. Although a programmer thinks of each instruction as being executed atomically, it is actually done in discrete steps by the control unit. In addition to the registers used by a programmer, the CPU contains many registers that cannot be used directly. The control unit uses these registers as "scratch paper" for temporary storage of intermediate values as it progresses through the steps of executing an instruction.

Now, recall that when the control unit fetches an instruction from memory, it automatically increments the instruction pointer (rip) to the next memory location immediately following the instruction it just fetched. Usually, the instruction pointer would now be pointing to the next instruction in the program. But in the case of the immediate data addressing mode, the "\$" symbol tells the assembler to store the operand at this location.

As the control unit decodes the just fetched instruction, it detects that the immediate data addressing mode has been used for the source operand. Since the instruction pointer is currently pointing to the data, it is a simple matter for the control unit to fetch it. Of course, when it does this fetch, the control unit increments the instruction pointer by the size of the data it just fetched.

Now the control unit has the source data, so it can continue executing the instruction. And when it has completed the current instruction, the instruction pointer is already pointing to the next instruction in the program.

The constants in the instructions on lines 11 and 13 are obvious. (The symbolic name "STDOUT_FILENO" is defined in unistd.h as 1.) The constant on line 12 is the label .LCO, which resolves to the address of this memory location. As explained above, this address will be in the .rodata section when the program is loaded into memory. The address is not known within the .text segment when the file is first compiled. The compiler leaves space for it immediately after the instruction (immediate addressing mode). Then when the address is determined during the linking phase, it is plugged in to the space left for it. The net result is that the address becomes immediate data when the program is executed.

So the following code sequence:

```
mov1
                   $13, %edx
                                  # third argument
11
                   $.LC0, %esi
                                  # second argument
12
          movl
          movl
                   $1, %edi
                                  # first argument
13
          call
14
  implements the C statement
     write(STDOUT_FILENO, "Hello world.\n", 13);
```

in the original C program (Listing 8.1, page 154).

Some notes about the write function call:

- The characters written to the screen must be stored in memory.
- The number of bytes actually written to the screen is returned in the eax register. So if the current function is using eax, the value will be changed by the call to write.
- The write function is a C wrapper that sets up the registers for the syscall instruction. Unfortunately, there is no guarantee that it restores the values that were in the registers when it was called.

8.2 Introduction to the Call Stack

Most variables are stored on the *call stack*. Before describing how this is done, we need to understand what stacks are and how they are used.

A stack is an area of memory for storing data items together with a pointer to the "top" of the stack. Informally, you can think of a stack as being organized very much like a stack of dinner plates on a shelf. We can only access the one item at the top of the stack. There are only two fundamental operations on a stack:

- **push** *data-item* causes a the *data-item* to be placed on the top of the stack and moves the stack pointer to point to this latest item.
- **pop** *location* causes the data item on the top of the stack to be removed and placed at *location* and moves the stack pointer to point to the next item left on the stack.

Notice that a stack is a "last in, first out" (LIFO) data structure. That is, the last thing to be pushed onto the stack is the first thing to be popped off.

To illustrate the stack concept let us use our dinner plate example. Say we have three differently colored dinner plates, a red one on the dining table, a green one on the kitchen counter, and a blue one on the bedside table. Now we will stack them on the shelf in the following way:

- 1. push dining-table-plate
- 2. push kitchen-counter-plate
- 3. push bedside-table-plate

At this point, our stack looks like:

blue plate
green plate
red plate

There is no way to tell where the dinner plates came from.

Now if we perform the operation:

1. pop kitchen-counter

We will have a blue dinner plate on our kitchen counter, and our stack will look like:

green plate red plate

A stack must be used according to a very strict discipline:

- 1. Always push an item onto the stack before popping anything off.
- 2. Never pop more things off than you have pushed on.
- 3. Always pop everything off the stack.

If you have no use for the item(s) to be popped off, you may simply adjust the stack pointer. This is equivalent to discarding the items that are popped off. (Our dinner plate analogy breaks down here.)

A good way to maintain this discipline is to think of the use of parentheses in an algebraic expression. A push is analogous to a left parenthesis, and a pop is analogous to a right parenthesis. An attempt to push too many items onto a stack causes *stack overflow*. And an attempt to pop items off the stack beyond the "bottom" causes *stack underflow*.

Next we will explore how we might implement a stack in C. Our program will allocate space in memory for storing data elements and provide both a push operation and a pop operation. A simple program is shown in Listing 8.3.

```
1 /*
2 * stack.c
3 * implementation of push and pop stack operations in C
4 * Bob Plantz - 9 June 2009
5 *
6 */
7
8 #include <stdio.h>
9
10 int theStack[500];
11 int *stackPointer = &theStack[500];
```

```
12
13 /*
   * precondition:
         stackPointer points to data element at top of stack
15
   * postcondtion:
         address in stackPointer is decremented by four
         dataValue is stored at top of stack
  */
20 void push(int dataValue)
21 {
      stackPointer--;
      *stackPointer = dataValue;
23
24 }
25
26 /*
   * precondition:
         stackPointer points to data element at top of stack
   * postcondtion:
         data element at top of stack is copied to *dataLocation
         address in stackPointer is incremented by four
   */
void pop(int *dataLocation)
34 {
      *dataLocation = *stackPointer;
      stackPointer++;
36
37 }
39 int main(void)
40 {
      int x = 12;
41
      int y = 34;
42
      int z = 56;
43
      printf("Start with the stack pointer at %p",
44
               (void *)stackPointer);
45
      printf(", and x = \%i, y = \%i, and z = \%i \setminus n", x, y, z);
47
      push(x);
      push(y);
49
      push(z);
      x = 100;
51
      y = 200;
52
      z = 300;
53
      printf("Now the stack pointer is at %p",
               (void *)stackPointer);
55
      printf(", and x = \%i, y = \%i, and z = \%i \n", x, y, z);
56
      pop(&z);
57
      pop(\&y);
      pop(&x);
59
60
      printf("And we end with the stack pointer at %p",
               (void *)stackPointer);
62
      printf(", and x = \%i, y = \%i, and z = \%i \n", x, y, z);
63
64
      return 0;
66 }
```

Listing 8.3: A C implementation of a stack.

Read the code in Listing 8.3 and note the following:

- The program uses a pointer, stackPointer, to keep track of the data value that is currently at the top of the stack.
- The stack pointer is initialized to point to one beyond the highest array element in the array that is allocated for the stack. Thus the stack must "grow" from high-numbered elements to low-numbered elements as items are pushed onto the stack.
- A push operation pre-decrements the stack pointer before storing an item on the stack.
- A pop operation post-increments the stack pointer after retrieving an item from the stack.

The states of the variables from the program in Listing 8.3 are shown just after the stack is initialized in Figure 8.1. Notice that the stack pointer is pointing beyond the end of the array as a result of the C statement,

```
int *stackPointer = &theStack[500];
```

The stack is "empty" at this point.

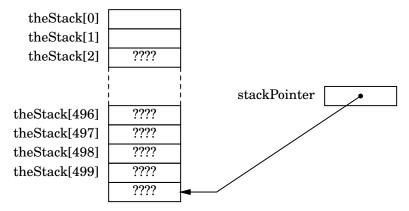


Figure 8.1: The stack in Listing 8.3 when it is first initialized. "????" means that the value in the array element is undefined.

After pushing one value onto the stack

```
push(x);
```

the stack appears as shown in Figure 8.2. Here you can see that since the push operation predecrements the stack pointer, the first data item to be placed on the stack is stored in a valid portion of the array.

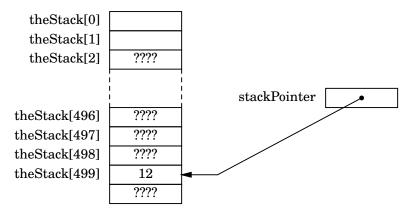


Figure 8.2: The stack with one data item on it.

After all three data items — x, y, and z — are pushed onto the stack, it appears as shown in Figure 8.3. The stack pointer always points to the data item that is at the top of the stack. Notice that this stack is "growing" toward lower numbered elements in the array.

Most stacks grow toward lower addresses. We tend to draw them "upside down."

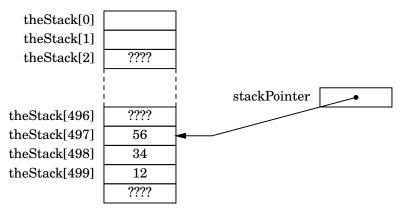


Figure 8.3: The stack with three data items on it.

After changing the values in the variables, the program in Listing 8.3 restores the original values by popping from the stack in reverse order. The state of the stack after all three pops are shown in Figure 8.4. Even though we know that the values are still stored in the array, the permissible stack operations — push and pop — will not allow us to access these values. Thus, from a programming point of view, the values are gone.

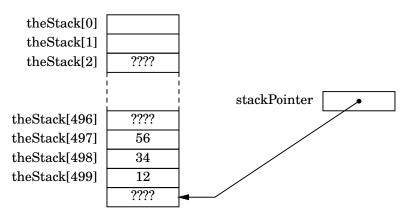


Figure 8.4: The stack after all three data items have been popped off. Even though the values are still stored in the array, it is considered a programming error to access them. The stack must be considered as "empty" when it is in this state.

Our very simple stack in this program does not protect against stack overflow or stack underflow. Most software stack implementations also include operations to check for an empty stack and for a full stack. And many implementations include an operation for looking at, but not removing, the top element. But these are not the main features of a stack data structure, so we will not be concerned with them here.

In GNU/Linux, as with most operating systems, the call stack has already been set up for us. We do not need to worry about allocating the memory or initializing a stack pointer. When the operating system transfers control to our program, the stack is ready for us to use.

The x86-64 architecture uses the rsp register for the *call stack pointer*. Although you could create your own stack and stack pointer, several instructions use the rsp register implicitly. And all these instructions cause the stack to grow from high memory addresses to low (see Exercise 8-2). Although this may seem a bit odd at first, there are some good reasons for doing it this way.

In particular, think about how you might organize things in memory. Recall that the instruction pointer (the rip register) is automatically incremented by the control unit as your program

is executed. Programs come in vastly different sizes, so it makes sense to store the program instructions at low memory addresses. This allows maximum flexibility with respect to program size.

The stack is a dynamic structure. You do not know ahead of time how much stack space will be required by any given program as it executes. It is impossible to know how much space to allocate for the stack. So you would like to allocate as much space as possible, and to keep it as far away from the programs as possible. The solution is to start the stack at the highest address and have it grow toward lower addresses.

This is a highly simplified rationalization for implementing stacks such that they grow "downward" in memory. The organization of various program elements in memory is much more complex than the simple description given here. But this may help you to understand that there are some good reasons for what may seem to be a rather odd implementation.

The assembly language push instruction is:

pushq source

The push instruction causes two actions:

- 1. The value in the rsp register is decremented by eight. That is, eight is subtracted from the stack pointer.
- 2. The eight bytes of the *source* operand are copied into memory at the new location pointed to by the (now decremented) stack pointer. The state of the operand is not changed.

A push changes rsp *before* putting value on the stack.

The assembly language pop instruction is:

popq destination

The popp instruction causes two actions:

- The eight bytes in the memory location pointed to by the stack pointer are copied to the
 destination operand. The previous state of the operand is replaced by the value from
 memory.
- 2. The value in the rsp register is incremented by eight. That is, eight is added to the stack pointer.

A pop changes rsp *after* getting value from the stack.

In the Intel syntax the "q" is not appended to the instruction.

 $\begin{array}{ccc} & & \text{push} & \textit{source} \\ & & \text{Syntax} & & \text{pop} & \textit{destination} \end{array}$

The size of the operand, eight bytes, is determined by the operating system. When executing in 64-bit mode, all pushes and pops operate on 64-bit values. Unlike the mov instruction, you cannot push or pop 8-, 16-, or 32-bit values. This means that the address in the stack pointer (rsp register) will always be an integral multiple of eight.

A good example of using a stack is saving registers within a function. Recall that there is only one set of registers in the CPU. When one function calls another, the called function has no way of knowing which registers are being used by the calling function. The ABI [25] specifies that the values in registers rbx, rbp, rsp, and r12 - r15 be preserved by the called function (see Table 6.4 on page 121).

The program in Listing 8.4 shows how to save and restore the values in these registers. Notice that since a stack is a LIFO structure, it is necessary to pop the values off the top of the stack in the *reverse order* from how they were pushed on.

[#] saveRegisters1.s

^{2 #} The rbx and r12 - r15 registers must be preserved by called function.

^{3 #} Sets a bit pattern in these registers, but restores original values

```
4 # in the registers before returning to the OS.
  # Bob Plantz - 8 June 2009
           .text
           .globl
                    main
                    main, @function
           .type
10 main:
                                  # save caller's frame pointer
           pushq
                    %rbp
11
           movq
                    %rsp, %rbp
                                 # establish our frame pointer
12
13
           pushq
                    %rbx
                                  # "must-save" registers
14
           pushq
                    %r12
15
           pushq
                    %r13
16
                    %r14
17
           pushq
           pushq
                    %r15
18
19
                    $0x12, %bl # "use" the registers
           movb
20
                    $0xabcd, %r12w
           movw
21
                    $0x1234abcd, %r13d
           movl
22
                    $0xdcba, %r14
           movq
           mova
                    $0x9876, %r15
24
25
                                  # restore registers
                   %r15
           papa
26
                   %r14
           popq
                   %r13
28
           popq
           popq
                   %r12
                   %rbx
           popq
30
31
                                  # return 0
           movl
                   $0, %eax
32
                   %rbp
                                  # restore caller's frame pointer
33
           popq
                                  # back to caller
34
           ret
```

Listing 8.4: Save and restore the contents of the rbx and r12 - r15 registers. See Table 6.4, page 121, for the registers that should be saved/restored in a function if they are used in the function.

The problem with this technique is maintaining the address in the stack pointer at a 16-byte boundary. Another way to save/restore the registers will be given in Section 11.2.

8.3 Local Variables on the Call Stack

Now we see that we can store values on the stack by pushing them, and that the push operation *decreases* the value in the stack pointer register, rsp. In other words, allocating variables on the call stack involves *subtracting* a value from the stack pointer. Similarly, *deallocating* variables from the call stack involves *adding* a value to the stack pointer.

From this it follows that we can create local variables on the call stack by simply *subtracting* the number of bytes required by each variable from the stack pointer. This does not store any data in the variables, it simply sets aside memory that we can use. (Perhaps you have experienced the error of forgetting to initialize a local variable in C!)

Next, we have to figure out a way to access this reserved data area on the call stack. Notice that there are no labels in this area of memory. So we cannot directly use a name like we did when accessing memory in the .data segment.

We could use the popl and pushl instructions to store data in this area. For example,

```
popl %eax
movl $0, %eax
pushl %eax
```

could be used to store zero in a variable. But this technique would obviously be very tedious, and any changes made to your code would almost certainly lead to a great deal of debugging. For example, can you figure out the reason I had to do a pop before pushing the value onto the stack? (Recall that the four bytes have already been reserved on the stack.)

At first, it may seem tempting to use the stack pointer, rsp, as the reference pointer. But this creates complications if we wish to use the stack within the function.

A better technique would be to maintain another pointer to the local variable area on the stack. If we do not change this pointer throughout the function, we can always use the *base register plus offset* addressing mode to directly access any of the local variables. The syntax is:

```
offset(register\_name)
Intel @ Syntax | [register\_name + offset]
```

When it is zero, the offset is not required.

base register plus offset: The data value is located in memory. The address of the memory location is the sum of a value in a register plus an offset value, which can be an 8-, 16- or 32-bit signed integer.

syntax: place parentheses around the register name with the offset value immediately before the left parenthesis.

```
examples: -8(%rbp); (%rsi); 12(%rax)

Intel® Syntax | [rbp - 8]; [rsi]; [rax + 12]
```

The appropriate register for implementing this is the frame pointer, rbp.

When a function is called, the calling function begins the process of creating an area on the stack, called the *stack frame*. Any arguments that need to be passed on the call stack are first pushed onto it, as described in Section 11.2. Then the call instruction pushes the return address onto the call stack (page 156).

The first thing that the called function must do is to complete the creation of the stack frame. The function prologue, first introduced in Section 7.2 (page 133), performs the following actions at the very beginning of each function:

- 1. Save the caller's value in the frame pointer on the stack.
- 2. Copy the current value in the stack pointer to the frame pointer.
- 3. Subtract a value from the stack pointer to allow for the local variables.

Once the function prologue has completed the stack frame, we observe that:

- The local variables are located in an area of the call stack between the addresses in the rsp and rbp registers.
- The rbp register is a pointer to the bottom (the numerically highest address) of the local variable area.
- The remaining area of the stack can be accessed using the stack pointer (rsp) as always.

Notice that each local variable is located at some fixed offset from the base register, rbp. In fact, it's a negative offset.

Listing 8.5 is the compiler-generated assembly language for the program in Listing 2.4 (page 23). Comments have been added to explain the parts of the code being discussed here.

```
.file "echoChar1.c"
.section .rodata
.LCO:
```

```
.string "Enter one character: "
  .LC1:
5
           .string "You entered: "
           .text
  .globl main
                    main, @function
           .type
10 main:
                                     # save caller's frame pointer
           pusha
                    %rbp
                                     # establish our frame pointer
                                     # space for local variable
           suba
                    $16, %rsp
                    $21, %edx
                                     # 21 characters
           movl
14
                    $.LC0, %esi
                                     # address of "Enter ...
           movl
15
           movl
                    $1, %edi
                                     # STDOUT_FILENO
16
           call
                   write
17
           leaq
                    -16(%rbp), %rsi # address of aLetter var.
18
           movl
                    $1, %edx
                                     # 1 character
19
                    $0, %edi
                                     # STDIN_FILENO
           movl
20
           call
                    read
21
                                     # 13 characters
           movl
                    $13, %edx
22
                                     # address of "You ... "
           movl
                    $.LC1, %esi
           movl
                    $1, %edi
                                     # STDOUT_FILENO
24
           call
                   write
25
                    -16(%rbp), %rsi # address of aLetter var.
           leag
26
                    $1, %edx
                                     # 1 character
           movl
                                     # STDOUT_FILENO
           movl
                    $1. %edi
28
           call
                   write
           movl
                    $0, %eax
                                     # return 0:
30
           leave
                                     # undo stack frame
31
                                     # back to caller
           ret
32
33
           .size
                    main, .-main
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
34
           .section
                             .note.GNU-stack, "",@progbits
```

Listing 8.5: Echoing characters entered from the keyboard (gcc assembly language). Comments added. Refer to Listing 2.4 for the original C version.

The function begins by pushing a copy of the caller's frame pointer (in the rbp register) onto the call stack, thus saving it. Next it sets the frame pointer for this register at the current top of the stack. These two actions establish a reference point to the stack frame for this function.

Next the program allocates sixteen bytes on the stack for the local variable, thus growing the stack frame by sixteen bytes. It may seem wasteful to set aside so much memory since the only variable in this program requires only one byte of memory, but the ABI [25] specifies that the stack pointer (rsp) should be on a sixteen-byte address boundary before calling another function. The easiest way to comply with this specification is to allocate memory for local variables in multiples of sixteen.

Figure 8.5 shows the state of the stack just after the prologue has been executed. The return address to the calling function is safely stored on the stack, followed by the caller's frame pointer value. The stack pointer (rsp) has been moved up the stack to allow memory for the local variable. If this function needs to push data onto the stack, such activity will not interfere with the local variable, the caller's frame pointer value, nor the return address. The frame pointer (rbp) provides a reference point for accessing the local variable.

IMPORTANT: The space for the local variables must be allocated *immediately after establishing the frame pointer.* Any other use of the stack within the function, e.g., saving registers, must be done *after* allocating space for local variables.

Most of the code in the body of the function is already familiar to you, but the instruction

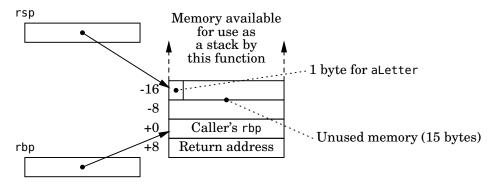


Figure 8.5: Local variables in the program from Listing 8.5 are allocated on the stack. Numbers on the left are offsets from the address in the frame pointer (rbp register).

that loads the address of the local variable, aString into the rsi register:

leaq -16(%rbp), %rsi # address of aLetter var.

is new. It uses the base register plus offset addressing mode for the source.

We can see from the instruction on line 18 that the aString variable is located negative sixteen bytes away from the address in the rbp register.

As with the write function, the second argument to the read function must be the address of a variable. However, the address of aString cannot be known when the program is compiled and linked because it is the address of a variable that exists in the stack frame. There is no way for the compiler or linker to know where this function's stack frame will be in memory when it is called. The address of the variable must be computed at run time.

Each instruction that accesses a stack frame variable must compute the variable's address, which is called the *effective address*. The instruction for computing addresses is *load effective address* — leal for 32-bit and leaq for 64-bit addresses. The syntax of the lea instruction is

leaw source, %register

where w = 1 for 32-bit, q for 64-bit.

Intel® Syntax lea *register*, source

Use lea to get a memory address; use mov to access what is *stored* at the address.

The source operand must be a memory location. The lea instruction computes the effective address of the source operand and stores that address in the destination register. So the instruction

leaq -16(%rbp), %rsi

takes the value in rbp (the base address of this function's stack frame), adds -16 to it, and stores this sum in rsi. Now rsi contains the address of the variable aLetter.

So the following code sequence:

```
        18
        leaq
        -16(%rbp), %rsi # address of aLetter var.

        19
        movl
        $1, %edx
        # 1 character

        20
        movl
        $0, %edi
        # STDIN_FILENO

        21
        call
        read
```

implements the C statement

```
read(STDIN_FILENO, &aLetter, 1); // one character
```

in the original C program (Listing 2.4, page 23).

Some notes about the read function call:

 The characters read from the keyboard must be stored in memory. You cannot pass the name of a cpu register to the read function.

- The number of bytes actually read from the keyboard is returned in the eax register. So if the current function is using eax, the value will be changed by the call to read.
- The read function is a C wrapper that sets up the registers for the syscall instruction.
 Unfortunately, there is no guarantee that it restores the values that were in the registers when it was called.

IMPORTANT: Since neither the write nor the read system call functions are guaranteed to restore the values in the registers, your program must save any required register values before calling either of these functions.

There is also a new instruction on line 31:

31 **leave** # undo stack frame

Just before this function exits the portion of the stack frame allocated by this function must be released and the value in the rbp register restored. The leave instruction performs the actions:

which effectively

- 1. deletes the local variables
- 2. restores the caller's frame pointer value

After the epilogue has been executed, the stack is in the state shown in Figure 8.6. The

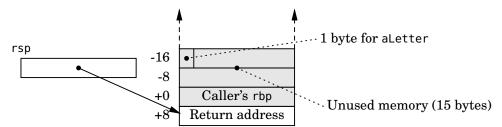


Figure 8.6: Local variable stack area in the program from Listing 8.5. Although the values in the gray area may remain they are invalid; using them at this point is a programming error.

stack pointer (rsp) points to the address that will return program flow back to the instruction immediately after the call instruction that called this function. Although the data that was stored in the memory which is now above the stack pointer is still there, it is a violation of stack protocol to access it.

One more step remains in completing execution of this function — returning to the calling function. Since the return address is at the top of the call stack, this is a simple matter of popping the address from the top of the stack into the rip register. This requires a special instruction.

ret

which does not require any arguments.

Recall that there are two classes of local variables in C:

Automatic variables are created when the function is first entered. They are deleted upon exit from the function, so any value stored in them during execution of the function is lost.

Static variables are created when the program is first started. Any values stored in them persist throughout the lifetime of the program.

Most local variables in a function are automatic variables. General purpose registers are used for local variables whenever possible. Since there is only one set of general purpose registers, a function that is using one for a variable must be careful to save the value in the register before calling another function. Register usage is specified by the ABI [25] as shown in Table 6.4 on page 121. But you should not write code that depends upon everyone else following these recommendations, and there are only a small number of registers available for use as variables. In C/C++, most of the automatic variables are typically allocated on the call stack. As you have seen in the discussion above, they are created (automatically) in the prologue when the function first starts and are deleted in the epilogue just as it ends. Static variables must be stored in the data segment.

We are now in a position to write the echoChar program in assembly language. The program is shown in Listing 8.6.

```
1 # echoChar2.s
2 # Prompts user to enter a character, then echoes the response
3 # Bob Plantz - 8 June 2009
  # Useful constants
                   STDIN, 0
           .equ
                   STDOUT, 1
           .equ
8 # Stack frame
                   aLetter, -16
           .equ
                   localSize, -16
           .equ
10
11 # Read only data
           .section
                     .rodata
12
  prompt:
           .string "Enter one character: "
14
                   promptSz,.-prompt-1
           .equ
16 MSQ:
           .string "You entered: "
17
           .equ
                   msgSz,.-msg-1
18
  # Code
19
           .text
                                   # switch to text section
20
           .globl
                   main
21
22
           .type
                   main, @function
  main:
23
          pushq
                   %rbp
                                   # save caller's frame pointer
24
          movq
                   %rsp, %rbp
                                   # establish our frame pointer
25
                   $localSize, %rsp # for local variable
          addq
26
27
          movl
                   $promptSz, %edx # prompt size
28
          movl
                   $prompt, %esi # address of prompt text string
29
                   $STDOUT, %edi # standard out
          movl
          call
                   write
                                   # invoke write function
31
          movl
                   $2, %edx
                                   # 1 character, plus newline
33
          leaq
                   aLetter(%rbp), %rsi # place to store character
          movl
                   $STDIN, %edi
                                   # standard in
35
          call
                                   # invoke read function
                   read
36
37
          movl
                   $msgSz, %edx
                                   # message size
38
                                   # address of message text string
                   $msg, %esi
          movl
39
          movl
                   $STDOUT, %edi # standard out
          call
                                   # invoke write function
                   write
41
42
          movl
                   $2, %edx
                                   # 1 character, plus newline
43
          leag
                   aLetter(%rbp), %rsi # place where character stored
44
```

```
movl
                   $STDOUT, %edi # standard out
45
          call
                                   # invoke write function
                   write
46
47
          movl
                   $0, %eax
                                   # return 0
48
                                   # delete local variables
          movq
                   %rbp, %rsp
                   %rbp
                                   # restore caller's frame pointer
          popq
50
                                   # back to calling function
          ret
```

Listing 8.6: Echoing characters entered from the keyboard (programmer assembly language).

This program introduces another assembler directive (lines 6,7,9,10,15,18):

```
.equ name, expression
```

The .equ directive evaluates the *expression* and sets the *name* equivalent to it. Note that the *expression* is evaluated during assembly, not during program execution. In essence, the *name* and its value are placed on the symbol table during the first pass of the assembler. During the second pass, wherever the programmer has used "name" the assembler substitutes the number that the *expression* evaluated to during the first pass.

You see an example on line 9 of Listing 8.6:

```
• .equ aLetter,-16
```

In this case the expression is simply -16. Then when the symbol is used on line 34:

```
leaq aLetter(%rbp), %rsi # place to store character
```

the assembler substitutes -16 during the second pass, and it is exactly the same as if the programmer had written:

```
leaq -16(%rbp), %rsi # place to store character
```

Of course, using .equ to provide a symbolic name makes the code much easier to read.

An example of a more complex expression is shown on lines 13 - 15:

The "." means "this address". Recall that the .string directive allocates one byte for each character in the text string, plus one for the NUL character. So it has allocated 22 bytes here. The expression computes the difference between the beginning and the end of the memory allocated by .string, minus 1. Thus, promptSz is entered on the symbol table as being equivalent to 21. And on line 28 the programmer can use this symbolic name,

which is much easier than counting each of the characters by hand and writing:

```
movl $21, %edx # prompt size
```

More importantly, the programmer can change the text string and the assembler will compute the new length and change the number in the instruction automatically. This is obviously much less prone to error.

Be careful not to mistake the .equ directive as creating a variable. It does not allocate any memory. It simply gives a symbolic name to a number you wish to use in your program, thus making your code easier to read.

A comment about programming style when using the .equ directive is appropriate here. Notice that the programmer has used it to give the same numerical value to two different symbols:

Each symbol is used differently in the code. It would be confusing to a reader if only one symbol were used in both places.

8.3.1 Calling printf and scanf in 64-bit Mode

The printf function can be used to format data and write it to the screen, and the scanf function can be used to read formatted input from the keyboard. In order to see how to call these two functions in assembly language we begin with the C program in Listing 8.7.

```
1 /*
   * echoInt1.c
   * Reads an integer from the keyboard and echos it.
   * Bob Plantz - 11 June 2009
7 #include <stdio.h>
9 int main(void)
10 {
      int anInt;
11
12
      printf("Enter an integer number: ");
13
      scanf("%i", &anInt);
      printf("You entered: %i\n", anInt);
15
16
      return 0;
17
18 }
```

Listing 8.7: Calling printf and scanf to write and read formatted I/O (C).

The assembly language generated by the gcc compiler is shown in Listing 8.8. Comments have been added to explain the printf and scanf calls.

```
.file
                   "echoInt1.c"
           .section
                            .rodata
  .LC0:
           .string "Enter an integer number: "
5 .LC1:
           .string "%i"
7 .LC2:
           .string "You entered: %i\n"
           .text
  .globl main
                   main, @function
           .type
11
12 main:
13
          pushq
                   %rbp
          movq
                   %rsp, %rbp
14
                   $16, %rsp
          subq
                   $.LC0, %edi
                                     # address of message
          movl
16
                   $0, %eax
                                     # no floats
          movl
          call
                   printf
18
          leaq
                   -4(%rbp), %rsi # address of anInt
          movl
                   $.LC1, %edi
                                     # address of format string
20
                   $0, %eax
                                     # no floats
          movl
21
          call
                   scanf
22
          movl
                   -4(%rbp), %esi # copy of anInt value
23
          movl
                   $.LC2, %edi
                                     # address of format string
          movl
                   $0, %eax
                                     # no floats
          call
                   printf
26
          movl
                   $0, %eax
27
          leave
          ret
29
```

```
.size main, .-main
.ident "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
.section .note.GNU-stack,"",@progbits
```

Listing 8.8: Calling printf and scanf to write and read formatted I/O (gcc assembly language).

The first call to printf passes only one argument. However, on line 17 in Listing 8.8 0 is passed in eax:

```
movl $.LC0, %edi # address of message
movl $0, %eax # no floats
call printf
```

The eax register is not listed as being used for passing arguments (see Section 8.1).

Both printf and scanf can take a variable number of arguments. The ABI [25] specifies that the total number of arguments passed in SSE registers must be passed in rax. As you will learn in Section 14.5, the SSE registers are used for passing floats in 64-bit mode. Since no float arguments are being passed in this call, rax must be set to 0. Recall that setting eax to 0 also sets the high-order bits of rax to 0 (Table 7.1, page 141).

The call to scanf on line 14 in the C version passes two arguments:

```
scanf("%i", &anInt);
```

That call is implemented in assembly language on lines 19 - 22 in Listing 8.8:

```
leaq -4(%rbp), %rsi # address of anInt
movl $.LC1, %edi # address of format string
movl $0, %eax # no floats
call scanf
```

Again, we see that the eax register must be set to 0 because there are no float arguments.

The program written in assembly language (Listing 8.9) is easier to read because the programmer has used symbolic names for the constants and the stack variable.

```
1 # echoInt2.s
 # Prompts user to enter an integer, then echoes the response
  # Bob Plantz -- 11 June 2009
5 # Stack frame
           .equ
                   anInt,-4
6
           .equ
                   localSize, -16
  # Read only data
8
           .section
                     .rodata
10 prompt:
11
           .string "Enter an integer number: "
12 scanFormat:
           .string "%i"
14 printFormat:
           .string "You entered: %i\n"
16 # Code
           .text
                                   # switch to text section
17
           .globl
                   main
18
                   main, @function
           .type
19
20 main:
           pushq
                   %rbp
                                   # save caller's frame pointer
21
           movq
                   %rsp, %rbp
                                   # establish our frame pointer
22
           addq
                   $localSize, %rsp # for local variable
23
24
           movl
                   $prompt, %edi # address of prompt text string
25
                                   # no floating point args.
           movq
                   $0, %rax
26
           call
                   printf
                                   # invoke printf function
27
```

```
anInt(%rbp), %rsi # place to store integer
          leag
29
                   $scanFormat, %edi # address of scanf format string
          movl
          movq
                                  # no floating point args.
31
          call
                   scanf
                                  # invoke scanf function
32
33
                                       # the integer
          movl
                   anInt(%rbp), %esi
                   $printFormat, %edi # address of printf text string
          movl
35
          movq
                   $0, %rax
                                  # no floating point args.
36
          call
                   printf
                                  # invoke printf function
37
38
                   $0, %eax
                                  # return 0
          movl
          movq
                   %rbp, %rsp
                                  # delete local variables
40
                                  # restore caller's frame pointer
                   %rbp
41
          popq
42
          ret
                                  # back to calling function
```

Listing 8.9: Calling printf and scanf to write and read formatted I/O (programmer assembly language).

8.4 Designing the Local Variable Portion of the Call Stack

When designing a function in assembly language, you need to determine where each local variable will be located in the memory that is allocated on the call stack. The ABI [25] specifies that:

- 1. Each variable should be aligned on an address that is a multiple of its size.
- 2. The address in the stack pointer (rsp) should be a multiple of 16 immediately before another function is called.

These rules are best illustrated by considering the program in Listing 8.10.

```
1 /*
  * varAlign1.c
  * Allocates some local variables to illustrate their
  * alignment on the call stack.
   * Bob Plantz - 11 June 2009
8 #include <stdio.h>
int main(void)
11 {
      char alpha, beta, gamma;
12
      char *letterPtr;
      int number;
14
      int *numPtr;
16
      alpha = 'A';
17
      beta = 'B';
18
      gamma = 'C';
19
      number = 123;
20
      letterPtr = α
21
      numPtr = &number;
22
23
      printf("%c %c %c %i\n", *letterPtr,
24
25
              beta, gamma, *numPtr);
```

```
26
27 return 0;
28 }
```

Listing 8.10: Some local variables (C).

The assembly language generated by the compiler is shown in Listing 8.11 with comments added for explanation.

```
.file
                    "varAlign1.c"
           .section
                             .rodata
2
3
  .LC0:
           .string "%c %c %c %i\n"
           .text
  .globl main
                    main, @function
           .type
  main:
           pushq
                    %rbp
                    %rsp, %rbp
           movq
10
           subq
                                       # 2 * 16
                    $32, %rsp
11
                                       # alpha = 'A';
           movb
                    $65, -1(%rbp)
12
                                       # beta = 'B';
                    $66, -2(%rbp)
           movb
13
           movb
                    $67, -3(%rbp)
                                       \# gamma = 'C';
14
                    $123, -8(%rbp)
                                       # number = 123;
           movl
15
                    -1(%rbp), %rax
           leaq
16
                    %rax, -16(%rbp)
                                       # letterPtr = α
           movq
17
           leaq
                    -8(%rbp), %rax
18
                    %rax, -24(%rbp)
                                       # numPtr = &number;
           movq
19
                    -24(%rbp), %rax
20
           movq
           movl
                    (%rax), %edx
21
                    -3(%rbp),%ecx
           movsbl
22
           movsbl
                    -2(%rbp),%edi
23
           movq
                    -16(%rbp), %rax
24
                    (%rax), %eax
           movzbl
                    %al,%esi
           movsbl
26
                    %edx, %r8d
           movl
27
           movl
                    %edi, %edx
28
                    $.LC0, %edi
           movl
29
           movl
                    $0, %eax
30
           call
                    printf
31
                    $0, %eax
           movl
32
           leave
33
           ret
34
35
           .size
                    main, .-main
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
36
                             .note.GNU-stack,"",@progbits
           .section
```

Listing 8.11: Some local variables (gcc assembly language).

The char variables take one byte, so they can be aligned on each byte:

```
movb $65, -1(%rbp) # alpha = 'A';

movb $66, -2(%rbp) # beta = 'B';

movb $67, -3(%rbp) # gamma = 'C';
```

The next available byte is at -4, but the int requires four bytes. However, it cannot be allocated at -7 because it must be aligned on a byte address that is a multiple of four. So it is placed at -8:

```
movl $123, -8(%rbp) # number = 123;
```

The two pointer variables each require eight bytes. So placing letterPtr at -16 and numPtr at -24 allows enough memory for each and places each on an address that is a multiple of eight.

```
leaq -1(%rbp), %rax
movq %rax, -16(%rbp) # letterPtr = α
leaq -8(%rbp), %rax
movq %rax, -24(%rbp) # numPtr = &number;
```

Placing each variable such that the alignment rules are met requires 24 bytes on the stack for local variables. However, the ABI also states that the stack pointer must be on a 16-byte address boundary. So we need to allocate 32 bytes for the local variables:

```
11 subq $32, %rsp # 2 * 16
```

Listing 8.12 shows how an assembly language programmer uses symbolic names to write code that is easier to read.

```
1 # varAlign2.s
2 # Allocates some local variables to illustrate their
3 # alignment on the call stack.
4 # Bob Plantz - 11 June 2009
5 # Stack frame
           .equ
                   numPtr, -24
                   letterPtr,-16
           .equ
                   number, -8
           .equ
           .equ
                   gamma,-3
                   beta,-2
           .equ
10
                   alpha,-1
11
           .equ
                   localSize, -32
           .equ
12
13 # Read only data
           .section .rodata
14
  format:
           .string "%c %c %c %i\n"
16
  # Code
17
           .text
18
           .globl
                   main
19
20
           .type
                   main, @function
21 main:
           pushq
                   %rbp
                                    # save caller's frame pointer
22
           movq
                   %rsp, %rbp
                                    # establish our frame pointer
23
           addq
                    $localSize, %rsp
                                         # for local vars
24
25
                   $'A', alpha(%rbp)
                                         # intialize variables
26
           movb
           movb
                    $'B', beta(%rbp)
27
           movb
                    $'C', gamma(%rbp)
                    $123, number(%rbp)
           movl
29
                                         # initialize pointers
           leag
                   alpha(%rbp), %rax
31
           movq
                   %rax, letterPtr(%rbp)
           leaq
                   number(%rbp), %rax
33
           movq
                   %rax, numPtr(%rbp)
34
35
                   numPtr(%rbp), %rax # load pointer
           movq
36
           movl
                    (%rax), %r8d
                                          # for dereference
37
           movb
                    gamma(%rbp), %cl
38
                    beta(%rbp), %dl
           movb
39
           movq
                   letterPtr(%rbp), %rax
40
                    (%rax), %sil
           movb
41
           movl
                    $format, %edi
42
```

```
$0, %rax
           movq
43
           call
                    printf
44
45
                                     # return 0 to OS
           movl
                    $0, %eax
46
           movq
                    %rbp, %rsp
                                     # restore stack pointer
                    %rbp
                                     # restore caller's frame pointer
           popq
48
           ret
```

Listing 8.12: Some local variables (programmer assembly language).

Notice the assembly language syntax for single character constants on lines 26 - 28:

```
movb $'A', alpha(%rbp) # initialize variables
movb $'B', beta(%rbp)
movb $'C', gamma(%rbp)
```

The GNU assembly language info documentation specifies that only the first single quote, 'A, is required. But the C syntax, 'A', also works, so we have used that because it is generally easier to read. 1

We can summarize the proper sequence of instructions for establishing a local variable environment in a function:

- 1. Push the calling function's frame pointer onto the stack.
- 2. Copy the value in the stack pointer register (rsp) into the frame pointer register (rbp) to establish the frame pointer for the current function.
- 3. Allocate space for the local variables by moving the stack pointer to a lower address.

Just before ending this function, these three steps need to be undone. Since the frame pointer is pointing to where the top of the stack was before we allocated memory for local variables, the local variable memory can be deleted by simply copying the value in the frame pointer to the stack pointer. Now the calling function's frame pointer value is at the top of the stack. The ending sequence is:

- 1. Copy the value in the frame pointer register (rbp) to the stack pointer register (rsp).
- 2. Pop the value at the top of the stack into the frame pointer register (rbp).

Listing 8.13 shows the general format that must be followed when writing a function. If you follow this format and do everything in the order that is given for all your functions, you will have many fewer problems getting them to work properly. If you do not, I guarantee that you will have many problems.

```
These two operations MUST be performed EXACTLY in this order at the END of each function.
```

These three operations

EXACTLY in this

MUST be performed

order at the BEGINNING of

each function.

```
1 # general.s
          .text
          .globl
                  general
                  general, @function
          .type
 general:
5
                             # save calling function's frame pointer
          pushq
                  %rbp
                  %rsp, %rbp  # establish our frame pointer
 # Allocate memory for local variables and saving registers here.
 # Ensure that the address in rsp is a multiple of 16.
   Save the contents of general purpose registers that must be
        preserved and are used in this function here.
13
14 # The code that implements the function goes here.
 # Restore the contents of the general purpose registers that
```

Also, the LATEX macro used to pretty print listings in this book does not process the single-quote syntax correctly.

Listing 8.13: General format of a function written in assembly language.

8.5 Using syscall to Perform I/O

The printf and scanf functions discussed in Section 2.5 (page 13) are C library functions that convert program data to and from text formats for interacting with users via the screen and keyboard. The write and read functions discussed in Section 2.8 (page 22) are C wrapper functions that only pass bytes to output and from input devices, relying on the program to perform the conversions so that the bytes are meaningful to the I/O device. Ultimately, each of these functions call upon the services of the operating system to perform the actual byte transfers to and from I/O devices.

In assembly language, you do not need to use the C environment. The convention is to begin program execution at the __start label. (Note that there are two underscore characters.) The assembler is used as before, but instead of using gcc to link in the C libraries, use 1d directly. You need to specify the entry point of your program. For example, the command for the program in Listing 8.14 is:

```
bob$ ld -e __start -o echoChar3 echoChar3.o
```

When performing I/O you invoke the Linux operations yourself. The technique involves moving the arguments to specific registers, placing a special code in the eax register, and then using the syscall instruction to call a function in the operating system. (The way this works is described in Section 15.6 on page 345.) The operating system will perform the action specified by the code in the eax register, using the arguments passed in the other registers. The values required for reading from and writing to files are given in Table 8.3.

system call	eax	edi	rsi	edx
read	0	file descriptor	pointer to place	number of bytes
			to store bytes	to read
write	1	file descriptor	pointer to first	number of bytes
			byte to write	to write
exit	60			

Table 8.3: Register set up for using syscall instruction to read, write, or exit.

In Listing 8.14 we have rewritten the program of Listing 8.6 without using the C environment.

```
1 # echoChar3.s
2 # Prompts user to enter a character, then echoes the response
3 # Does not use C libraries
  # Bob Plantz -- 11 June 2009
6 # Useful constants
           .equ
                   STDIN, 0
                   STDOUT, 1
           .equ
           .equ
                   READ, 0
                   WRITE, 1
           .equ
10
           .equ
                   EXIT,60
```

```
12 # Stack frame
           .equ
                    aLetter,-16
13
           .equ
                   localSize, -16
  # Read only data
15
           .section .rodata
                                    # the read-only data section
16
17 prompt:
           .string "Enter one character: "
                   promptSz,.-prompt-1
           .equ
19
  msg:
           .string "You entered: "
21
           . equ
                   msgSz,.-msg-1
22
23 # Code
           .text
                                    # switch to text section
24
           .globl __start
25
26
   _start:
27
                    %rbp
                                    # save caller's frame pointer
           pushq
28
          movq
                                    # establish our frame pointer
                    %rsp, %rbp
29
                    $localSize, %rsp # for local variable
           addq
30
           movl
                    $promptSz, %edx # prompt size
32
                    $prompt, %esi # address of prompt text string
           movl
33
                    $STDOUT, %edi # standard out
           movl
34
                    $WRITE, %eax
           movl
           svscall
                                    # request kernel service
36
37
           movl
                    $2, %edx
                                    # 1 character, plus newline
38
           leag
                    aLetter(%rbp), %rsi # place to store character
39
           movl
                                    # standard in
                    $STDIN, %edi
40
           movl
                    $READ, %eax
41
42
           syscall
                                    # request kernel service
43
           mov1
                    $msgSz, %edx
                                    # message size
44
           movl
                    $msg, %esi
                                    # address of message text string
45
                    $STDOUT, %edi
                                    # standard out
           movl
                    $WRITE, %eax
           movl
47
           syscall
                                    # request kernel service
49
                    $2, %edx
                                    # 1 character, plus newline
           movl
50
                    aLetter(%rbp), %rsi # place where character stored
           leag
51
                    $STDOUT, %edi # standard out
           movl
52
           movl
                    $WRITE, %eax
53
                                    # request kernel service
           syscall
55
                                    # delete local variables
           movq
                   %rbp, %rsp
56
                                    # restore caller's frame pointer
                   %rbp
57
           popq
           movl
                    $EXIT, %eax
                                    # exit from this process
58
           syscall
```

Listing 8.14: Echo character program using the syscall instruction.

Comparing this program with the one in Listing 8.6, the program arguments are the same and are passed in the same registers. The only difference with using the syscall function is that you have to provide a code for the operation to be performed in the eax register. The complete list of system operations that can be performed are in the system file /usr/include/asm-x86_64/unistd.h. (The path on your system may be different.)

To determine the arguments that must be passed to each system operation read section 2 of

the man page for that operation. For example, the arguments for the write system call can be seen by using

bob\$ man 2 write

Then follow the rules in Section 8.1 for placing the arguments in the proper registers.


8.6 Calling Functions, 32-Bit Mode

In 32-bit mode all the arguments are pushed onto the call stack in right-to-left order. Listing 8.15 shows how to call the write() system call function.

```
1 # fourChars_32.s
2 # displays four characters on the screen using the write() system call.
3 # (32-bit version.)
4 # Bob Plantz - 19 March 2008
  # Read only data
           .section
                    .rodata
8 Chars:
                   'A'
           .byte
                   ' _ '
           .byte
10
           .byte
                   'Z'
11
           .byte
                   '\n'
12
13 # Code
           .text
14
           .globl
                   main
           .type
                   main, @function
17 main:
          pushl
                                   # save frame pointer
                   %ebp
18
                                   # set new frame pointer
          movl
                   %esp, %ebp
19
20
21
          pushl
                                   # send four bytes
          pushl
                   $Chars
                                         at this location
          pushl
                   $1
                                             to screen.
23
          call
                   write
          addl
                   $12, %esp
25
27
          movl
                   $0, %eax
                                   # return 0;
          movl
                   %ebp, %esp
                                   # restore stack pointer
          popl
                                   # restore frame pointer
29
          ret
```


Listing 8.15: Displaying four characters on the screen using the write system call function in assembly language.

After all three arguments have been pushed onto the call stack, it looks like:

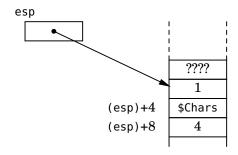

where the notation (esp) + n means "the address in the esp register plus n." The stack pointer, the esp register, points to the last item pushed onto the call stack. The other two arguments are stored on the stack below the top item. Don't forget that "below" on the call stack is at numerically higher addresses because the stack grows toward lower addresses.

When the call instruction is executed, the return address is pushed onto the call stack as shown here:

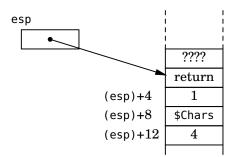

where "return" is the address where the called function is supposed to return to at the end of its execution. So the arguments are readily available inside the called function; you will learn how to access them in Chapter 8. And as long as the called function does not change the return address, and restores the stack pointer to the position it was in when the function was called, it can easily return to the calling function.

Now, let's look at what happens to the stack memory area in the assembly language program in Listing 8.15. Assume that the value in the esp register when the main function is called is 0xbffffc5c and that the value in the ebp register is 0xbffffc6a. Immediately after the subl \$8, %esp instruction is executed, the stack looks like:

address	contents
bffffc50:	???????
bffffc54:	???????
bffffc58:	bffffc6a
bffffc5c:	important information

the value in the esp register is 0xbffffc50, and the value in the ebp register is 0xbffffc58. The "?" indicates that the states of the bits in the indicated memory locations are irrelevant to us. That is, the memory between locations 0xbffffc50 and 0xbffffc57 is "garbage."

We have to assume that the values in bytes number <code>0xbffffc5c</code>, <code>5d</code>, <code>5e</code>, and <code>5f</code> were placed there by the function that called this function and have some meaning to that function. So we have to be careful to preserve the value there.

Since the esp register contains 0xbffffc50, we can continue using the stack — pushing and popping — without disturbing the eight bytes between locations 0xbffffc50 and 0xbffffc57. These eight bytes are the ones we will use for storing the local variables. And if we take care not to change the value in the ebp register throughout the function, we can easily access the local variables.

8.7 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

8.8. EXERCISES 181

8.7.1 Instructions

data movement:

opcode	source	destination	action	see page:
movs	\$imm/%reg	%reg/mem	move	141
movsss	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
pop w		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q

arithmetic/logic:

opcode	source	destination	action	see page:
cmps	\$imm/%reg	%reg/mem	compare	209
inc <i>s</i>	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
sub <i>s</i>	\$imm/%reg	%reg/mem	subtract	190

s = b, w, l, q; w = l, q

program flow control:

opcode	location	action	see page:
call	label	call function	156
je	label	jump equal	211
jmp	label	jump	213
jne	label	jump not equal	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

8.7.2 Addressing Modes

8.8 Exercises

8-1 (§8.1) Enter the C program in Listing 8.1 and get it to work correctly. Run the program under gdb, setting a break point at the call to write. When the program breaks, use the si (Step one instruction exactly) command to execute the instructions that load registers with the arguments. As you do this, keep track of the contents in the appropriate argument registers and the rip register. What is the address where the text string is stored? If you single step into the write function, use the cont command to continue through it.

- **8-2** (§8.2) Modify the program in Listing 8.3 so that the stack grows from lower numbered array elements to higher numbered ones.
- **8-3** (§8.2) Enter the the assembly language program in Listing 8.4 and show that the rbp and rsp registers are also saved and restored by this function.
- 8-4 (§8.3) Enter the C program in Listing Listing 2.4 (page 23) and compile it with the debugging option, -g. Run the program under gdb, setting a break point at each of the calls to write and read. Each time the program breaks, use the si (Step one instruction exactly) command to execute the instructions that load registers with the arguments. As you do this, keep track of the contents in the appropriate argument registers and the rip register. What are the addresses where the text strings are stored? What is the address of the aletter variable? If you single step into either the write or read functions, use the cont command to continue through it.
- **8-5** (§8.3) Modify the assembly language program in Listing 8.6 such that it also reads the newline character when the user enters a single character. Run the program with gdb. Set a breakpoint at the first instruction, then run the program. When it breaks, write down the values in the rsp and rbp registers. Write down the changes in these two registers as you single step (si command) through the first three instructions.

Set breakpoints at the instruction that calls the read function and at the next instruction immediately after that one. Examine the values in the argument-passing registers.

From the addresses you wrote down above, determine where the two characters (user's character plus newline) that are read from the keyboard will be stored, and examine that area of memory.

Use the cont command to continue execution through the read function. Enter a character. When the program breaks back into gdb, examine the area of memory again to make sure the two characters got stored there.

- **8-6** (§8.3) Write a program in assembly language that prompts the user to enter an integer, then displays its hexadecimal equivalent.
- **8-7** (§8.3) Write a program in assembly language that "declares" four char variables and four int variables, and initializes all eight variables with appropriate values. Then call printf to display the values of all eight variables with only one call.

Chapter 9

Computer Operations

We are now ready to look more closely at the instructions that control the CPU. This will only be an introduction to the topic. We will examine the most common operations — assignment, addition, and subtraction. Additional operations will be described in subsequent chapters.

Each assembly language instruction must be translated into its corresponding machine code, including the locations of any data it manipulates. It is the bit pattern of the machine code that directs the activities of the control unit.

The goal here is to show you that a computer performs its operations based on bit patterns. As you read through this material, keep in mind that even though this material is quite tedious, the operations are very simple. Fortunately, instruction execution is very fast, so lots of meaningful work can be done by the computer.

9.1 The Assignment Operator

The C/C++ assignment operator, "=", causes the expression on the right-hand side of the operator to be evaluated and the result to be associated with the variable that is named on the left-hand side. Subsequent uses of the variable name in the program will evaluate to this same value. For example,

```
int x;
.....
x = 123;
```

will assign the integer 123 to the variable x. If x is later used in an expression, the value assigned to x will be used in evaluating the expression. For example, the expression

```
2 * x;
```

would evaluate to 246.

This assumes that the expression on the right-hand side evaluates to the same data type as the variable on the left-hand side. If not, some automatic type casting may occur, or the compiler may indicate an error. We ignore the issue of data type for now and will discuss it at several points when appropriate. For now, we are working with arbitrary bit patterns that have no meaning as "data."

We now explore what assignment means at the assembly language level. The variable declaration,

```
int x;
```

causes memory to be allocated and the location of that memory to be given the name "x." That is, other parts of the program can refer to the memory location where the value of x is stored by using the name "x." The type name in the declaration, int, tells the compiler how many bytes to allocate and the code used to represent the data stored at this location. The int type uses the two's complement code. The assignment statement,

```
x = 123;
```

sets the bit pattern in the location named x to 0x00000007b, the two's complement code for the integer 123. The assignment statement

```
x = -123;
```

sets the bit pattern in the location named, x to 0xfffffff85, the two's complement code for the integer -123.

Let us consider the simplest case where

- the allocated memory is within the CPU (i.e., a register).
- the bit pattern has no "real world" meaning.

That is, we will consider a program that simply sets a bit pattern in a CPU register. A C program to do this is shown in Listing 9.1.

```
* assignment1.c
   * Assign a 32-bit pattern to a register
   * Bob Plantz - 11 June 2009
   */
  #include <stdio.h>
 int main(void)
11 {
      register int x;
13
      x = 0xabcd1234;
14
15
      printf("x = %i\n", x);
16
17
      return 0;
18
19
 }
```

Listing 9.1: Assignment to a register variable (C).

The register modifier "advises" the compiler to use a CPU register for the integer variable named "x." And the notation 0xabcd1234 means that abcd1234 is written in hexadecimal. (Recall that hexadecimal is used as a compact notation for representing bit patterns.) When the C program in Listing 9.1 is compiled into its assembly language equivalent with no optimization:

```
bob$ gcc -S -00 -fno-asynchronous-unwind-tables assignment1.c
```

the gcc compiler generates the assembly language program shown in Listing 9.2, with a comment added to show where the assignment operation takes place.

```
.file
                    "assignment1.c"
           .section
                             .rodata
2
  .LC0:
           .string "x = %i\n"
           .text
  .globl main
           .type
                    main, @function
 main:
8
           pushq
                    %rbp
           movq
                    %rsp, %rbp
10
           movl
                    $-1412623820, %esi
                                            \# x = 0xabcd1234;
11
                    $.LC0, %edi
           movl
12
           movl
                    $0, %eax
13
```

```
call
                    printf
14
           movl
                    $0, %eax
15
           leave
           ret
17
            .size
                    main, .-main
18
            .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
19
           .section
                             .note.GNU-stack, "", @progbits
```

Listing 9.2: Assignment to a register variable (gcc assembly language). Comment added to show the assignment operation.

The C assignment operation is implemented with the mov instruction. For example, in Listing 9.1,

```
x = 0xabcd1234;
is implemented with
movl $-1412623820, %esi # x = 0xabcd1234;
```

on line 11 in Listing 9.2. We can see that the compiler chose to use the esi register as the x variable.

The instructions on lines 12-14 implement the call to the printf function. One reason for the call to the printf function is to prevent the compiler from eliminating the assignment statement during its optimization of this function. Yes, even with the -00 option the compiler does some optimization.

Compare this to Listing 7.4 on page 144. Notice that the prologue

main:

```
pushq %rbp
movq %rsp, %rbp
and epilogue
leave
ret
```

of this function are the same.

The mov instruction has an "l" ("ell", not "one") appended to it to indicate that the operand size is 32 bits. This is redundant because the register named as an operand, esi, is 32 bits, but it is the required syntax. The Intel syntax does not include this redundancy. If we consider the Intel syntax:

```
Intel® | mov esi, -1412623820
```

we see the three other differences noted in Section 7.2.2 (page 141):

- the operand order is opposite,
- the AT&T syntax requires a "%" prefix to the name of a register, and
- the AT&T syntax requires a "\$" prefix to the immediate data.

These differences are specific to the assembler program being used and are not relevant to the behavior of the CPU. The assembler program will translate the assembly language instruction into the correct machine language code.

You may wonder why the gcc compiler assigns the constant -1412623820 to the variable, while the C version of the program assigns 0xabcd1234. The answer is that they are the same values. The first is expressed in decimal and the second in hexadecimal. We discussed the equivalence of decimal and hexadecimal in Section 2.2 (page 8), and we discussed signed decimal integers in Section 3.3 (page 34).

In Listing 9.3 we show the essential assembly language required to implement the C program from Listing 9.1.

```
1 # assignment2.s
2 # Assigns a 32-bit pattern to the esi register.
  # Bob Plantz - 11 June 2009
           .text
          .globl
                  main
          .type
                   main, @function
 main:
          pushq
                   %rbp
                                # save caller's base pointer
9
          movq
                   %rsp, %rbp # establish our base pointer
10
11
          movl
                   $0xabcd1234, %esi # store a bit pattern in esi
12
13
                                # return 0 to caller
          movl
                   $0, %eax
          movq
                   %rbp, %rsp
                               # restore stack pointer
15
                                # restore caller's base pointer
          popq
                   %rbp
                                # back to caller
          ret
17
```

Listing 9.3: Assignment to a register variable (programmer assembly language).

Compare Listing 9.3 to Listing 7.5 on page 144. Note that

```
movl $0xabcd1234, %esi # set a bit pattern in esi
```

is the only assembly language statement that was added to the program. From this comparison, you can see that this assembly language statement implements the two C statements:

```
register int x;
x = 0xabcd1234;
```

Like the compiler (Listing 9.2), we are using the esi register as our variable. We can use the registers in Table 6.4 (page 121) as variables, except the stack pointer, %rsp, which has special uses. The "%" prefix tells the assembler that these are names of registers, hence in the CPU and not labels on memory locations.

Let us look more closely at the program in Listing 9.3. I used an editor to enter the code then assembled and linked it. Since it does not produce a display on the screen, I used gdb to observe the changes in the registers. My typing is **boldface**.

\$ gdb assignment2

```
GNU qdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
(qdb) li
1
        # assignment2.s
2
        # Assigns a 32-bit pattern to the esi register.
        # Bob Plantz - 11 Jun 2009
3
4
5
                 .text
6
                  .globl
                         main
7
                          main, @function
                 .type
8
        main:
9
                                       # save caller's frame pointer
                          %rbp
                 pushq
10
                 movq
                          %rsp, %rbp # establish our frame pointer
```

I use the li command to list part of the program. This allows us to see where I should set the first breakpoint.

(gdb) br 9

```
Breakpoint 1 at 0x4004ac: file assignment2.s, line 9.
```

I set it on the first instruction of the program.

(gdb) run

Starting program: /home/bob/my_book_64_size/progs/chap09/assignment2

I run the program, it breaks at the first breakpoint, and I can display the registers.

(gdb) i r rax rsi rsp rbp rip

```
rax 0x7fa31ab73ac0 140338504612544
rsi 0x7fff22d950f8 140733778055416
rsp 0x7fff22d95028 0x7fff22d95028
rbp 0x0 0x0
rip 0x4004ac 0x4004ac <main>
```

The irrax rsi rsp rbp rip (info registers) command displays the contents of the registers that are used in this program. Note that the value in the rip register (the instruction pointer) is 0x4004ac. If you replicate this example (a good thing to do) you will probably get a different values in your registers.

(gdb) si

```
10 movq %rsp, %rbp # establish our frame pointer
```

Next I use the single instruction (si) command to execute one instruction.

(gdb) i r rax rsi rsp rbp rip

```
rax 0x7fa31ab73ac0 140338504612544
rsi 0x7fff22d950f8 140733778055416
rsp 0x7fff22d95020 0x7fff22d95020
rbp 0x0 0x0
rip 0x4004ad 0x4004ad <main+1>
```

I display the new state of the registers. Notice that the rip register has changed from 0x4004ac to 0x4004ad. This tells us that the instruction that was just executed, pushl %rbp, is 0x4004ad - 0x4004ac = 1 byte long. The numbers in the right-hand column show the decimal equivalent of the bit patterns for some of the registers. The instruction that is about to be executed will copy the value in the rsp register to the rbp register and the next one will set the thirty-two bits of the esi register to 0xabcd1234.

```
(gdb) si
```

I execute two instructions by using the si command twice.

(gdb) i r rax rsi rsp rbp rip

```
rax 0x7fa31ab73ac0 140338504612544
rsi 0xabcd1234 2882343476
rsp 0x7fff22d95020 0x7fff22d95020
rbp 0x7fff22d95020 0x7fff22d95020
rip 0x4004b5 0x4004b5 <main+9>
```

The i r command shows us that the rbp register has been changed to equal the rsp register and the esi register has been set to the bit pattern 0xabcd1234. The rsi register actually contains the bit pattern 0x000000000bcd1234; gdb does not display leading zeros. The rip register has changed from 0x4004ad to 0x4004b5. This tells us that the total number of bytes in the two instructions that were just executed, movq %rsp, %rbp and movl \$0xabcd1234, %edi is 0x4004b5 - 0x4004ad = 8 bytes.

Don't forget that these are in hex.

Executing another single instruction shows that the movl \$0, %eax instruction does, indeed, store all zeros in the eax register. The program is now poised at the instruction that will begin undoing the stack frame in preparation for the return to the calling function.

```
(gdb) si
main () at assignment2.s:16
                                     # restore caller's frame pointer
                popq
(gdb) si
main () at assignment2.s:16
17
                                     # back to caller
                ret
(gdb) i r rax rsi rsp rbp rip
               0x0 0
rax
rsi
               0xabcd1234 2882343476
               0x7fff22d95028 0x7fff22d95028
rsp
               0x0 0x0
rbp
rip
               0x4004be 0x4004be <main+18>
```

Executing two more instruction and displaying the registers shows that the frame pointer register, rbp, has been restored to its original value and the return value (in eax) is correct.

(gdb) cont

Continuing.

Program exited normally.

Finally, I use the continue command (cont) to run the program out to its end. Note: If you use the si command to single step beyond the ret instruction at the end of the main function, gdb will dutifully take you through the system libraries. At best, this is a waste of time.

```
(gdb) q
```

And, of course, I have to tell gdb to quit.

9.2 Addition and Subtraction Operators

The assembly language instruction to perform binary addition is quite simple:

adds source, destination

where s denotes the size of the operand: $\begin{bmatrix} \underline{s} \\ b \end{bmatrix}$ $\begin{bmatrix} \underline{meaning} \\ b \end{bmatrix}$ $\underbrace{number of bits} \\ w \\ w \\ word \\ 16 \\ l \\ longword \\ q \\ quadword \end{bmatrix}$ 32 $\\ q \\ quadword \\ 64$

The add instruction adds the source operand to the destination operand using the rules of binary addition, leaving the result in the destination operand. As with the mov instruction, no more than one operand can be a memory location. The source operand is not changed. In C/C++ the operation could be expressed as:

You need to use at least one register to add or subtract.

destination += source

For example, the instruction

adds the 64-bit value in the rax register to the 64-bit value in the rdx register, leaving the rax register intact. The instruction

adds the 32-bit value in the dx register to the 32-bit value in the r10w register.

In the Intel syntax, the size of the data is determined by the operand, so the size character (b, w, l, or q) is not appended to the instruction. (And the order of the operands is reversed.)

```
Intel® Syntax add destination, source
```

We saw in Chapter 3 that addition may cause carry or overflow. Carry and overflow are recorded in the 64-bit rflags register. The CF is bit number zero, and the OF is bit number eleven (numbering from right to left). Whenever an add instruction is executed both bits are set as shown in Algorithm 9.1.

Algorithm 9.1: Carry Flag and Overflow Flag after add.

If the values being added represent unsigned ints, CF indicates whether the result fits within the operand size or not. If the values represent signed ints, OF indicates whether the result fits within the operand size or not. If the size of the operands is less than 64 bits and the operation produces a carry and/or an overflow, this is *not* propagated up through the next bits in the destination operand. The carry and overflow conditions are simply recorded in the corresponding bits in the rflags register.

For example, if we consider the initial conditions

```
register contents
```

rax: ffff eeee dddd cccc r8: 2222 4444 6666 8888

CF: ? OF: ?

the instruction

addl %eax, %r8w

would produce

register contents

rax: ffff eeee dddd cccc r8: 2222 4444 4444 5554

CF: 1 OF: 0

Whereas (starting from the same initial conditions) the instruction

would produce

register contents

rax: ffff eeee dddd cccc r8: 2222 4444 6666 8854

CF: 1 OF: 1

The assembly language instruction to perform binary subtraction is

subs source, destination

	<u>s</u>	meaning	number of bits
	b	byte	8
where <i>s</i> denotes the size of the operand:	W	word	16
	ι	longword	32
	q	quadword	64

The sub instruction subtracts the source operand from the destination operand using the rules of binary subtraction, leaving the result in the destination operand. As with the mov instruction, no more than one operand can be a memory location. The source operand is not changed. In C/C++ the operation could be expressed as:

destination -= source

For example, the instruction

```
subl %eax, %edx
```

subtracts the 32-bit value in the eax register from the 32-bit value in the edx register. The instruction

```
subb %dh, %ah
```

subtracts the 8-bit value in the dh register from the 8-bit value in the ah register.

In the Intel syntax, the size of the data is determined by the operand, so the size character (b, w, or l) is not appended to the instruction. (And the order of the operands is reversed.)

```
Intel® Syntax sub destination, source
```

Subtraction also affects the CF and the OF. Whenever a sub instruction is executed both bits are set as shown in Algorithm 9.2.

Algorithm 9.2: Carry Flag and Overflow Flag after subtraction.

Just as with addition, if the values being subtracted represent unsigned ints, CF indicates whether there was a borrow from beyond the operand size or not. If the values represent signed ints, OF indicates whether the result fits within the operand size or not. If the size of the operands is less than 64 bits and the operation produces a carry and/or an overflow, this is not propagated up through the next bits in the destination operand. The carry and overflow conditions are simply recorded in the corresponding bits in the rflags register.

For example, if we consider the initial conditions

```
contents
    register
       rax:
                ffff eeee dddd cccc
        r8:
                2222 4444 6666 8888
        CF:
        0F:
the instruction
        subl
                 %eax, %r8w
would produce
    register contents
       rax:
                ffff eeee dddd cccc
        r8:
                2222 4444 8888 bbbc
        CF:
                1
```

0F:

0F:

Whereas (starting from the same initial conditions) the instruction

```
subb %al, %r8b
would produce

register contents
   rax:   ffff eeee dddd cccc
   r8:   2222 4444 6666 88bc
   CF:  1
```

A simple program given in Listing 9.4 illustrates both addition and subtraction in C.

```
1 /*
  * addAndSubtract1.c
   * Reads two integers from user, then
   * performs addition and subtraction
   * Bob Plantz - 11 June 2009
 #include <stdio.h>
int main(void)
11 {
      int w, x, y, z;
12
13
      printf("Enter two integers: ");
      scanf("%i %i", &w, &x);
15
      y = w + x;
      z = w - x;
17
      printf("sum = %i, difference = %i\n", y, z);
19
      return 0;
20
21 }
```

Listing 9.4: Addition and subtraction (C).

Unfortunately, this program can give incorrect results:

```
$ ./addAndSubtract1
Enter two integers: 1000000000 20000000000
sum = -1294967296, difference = -10000000000
$ ./addAndSubtract1
Enter two integers: -1000000000 20000000000
sum = 1000000000, difference = 1294967296
```

Worse, there is no message even warning that these are incorrect results. You know (see Section 3.4, page 39) that the results have overflowed. C does not check for overflow, so you would have to write code that explicitly checks for it.

The assembly language generated by gcc is shown in Listing 9.5 with comments added.

```
.file
                   "addAndSubtract1.c"
           .section
                            .rodata
2
3 .LC0:
           .string "Enter two integers: "
5 .LC1:
           .string "%i %i"
7 .LC2:
           .string "sum = %i, difference = %i\n"
  .globl main
           .type
                   main, @function
11
12 main:
                   %rbp
           pushq
13
           movq
                   %rsp, %rbp
14
           subq
                   $16, %rsp
15
           movl
                   $.LC0, %edi
16
           movl
                   $0, %eax
17
           call
                   printf
18
                   -8(%rbp), %rdx
                                       # load address of x
           leaq
19
           leag
                    -4(%rbp), %rsi
                                       # load address of w
20
```

```
movl
                    $.LC1, %edi
                                         # load address of format string
21
           movl
                    $0, %eax
                                         # no float arguments
22
           call
                    scanf
           movl
                    -4(%rbp), %edx
                                         # load w
24
           movl
                    -8(%rbp), %eax
                                         # load x
25
           leal
                    (\rdx, \rdx, \rdx), \rdx # eax <- w + x
26
           movl
                    %eax, -12(%rbp)
                                         # y = w + x;
27
           movl
                    -4(%rbp), %edx
                                         # load w
28
           movl
                    -8(%rbp), %eax
                                         # load x
29
           movl
                    %edx, %ecx
                                         # ecx <- w
30
           subl
                    %eax, %ecx
                                         # eax <- w - x
31
                    %ecx, %eax
           movl
32
           movl
                    %eax, -16(%rbp)
                                         \# z = w - x:
33
           movl
                    -16(%rbp), %edx
34
35
           movl
                    -12(%rbp), %esi
                    $.LC2, %edi
           mov1
36
           movl
                    $0, %eax
37
           call
                    printf
38
                    $0, %eax
           movl
39
           leave
           ret
41
                    main, .-main
           .size
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
43
                             .note.GNU-stack,"",@progbits
           .section
```

Listing 9.5: Addition and subtraction (gcc assembly language).

We see that a rather simple C statement:

```
y = w + x;
```

must be broken down into distinct steps at the assembly language level:

```
movl -4(%rbp), %edx # load w
-8(%rbp), %eax # load x
leal (%rdx,%rax), %eax # eax <- w + x
movl %eax, -12(%rbp) # y = w + x;
```

It probably seems very odd that there is no add instruction in this code sequence. The compiler has used the leal instruction with the *indexed* addressing mode, which will be discussed in more detail in Section 13.1 when we discuss arrays. Basically, it is intended to compute an address by adding the values in the two registers that are in the parentheses. In this example, it adds the two values in rdx and rax. This sum is intended to be used as an address, so the leal instruction is used to load the sum into eax.

An important difference between leal and addl is that leal does not affect the condition codes in the eflags register. It might seem that this would "disqualify" this construct from being used to add two integers, but C does not check for carry or overflow. So this meets the specifications of the C language.

Similarly, the C statement:

```
z = w - x;
```

is broken down into the distinct steps:

```
movl
                    -4(%rbp), %edx
                                         # load w
28
           movl
                    -8(%rbp), %eax
                                         # load x
29
           movl
                    %edx, %ecx
                                         # ecx <- w
30
           subl
                    %eax, %ecx
                                         # eax <- w - x
31
                    %ecx, %eax
           movl
32
           movl
                    %eax, -16(%rbp)
                                         \# z = w - x:
33
```

It is easy to see that the compiler did not generate the most efficient code. (This was compiled with no optimization.)

We have seen that the computations performed by both these C statements can produce overflow. Table 9.1 shows how the variables (and CF and OF) change as we walk through the code in the program of Listing 9.4. There are two runs of the program using the input values above.

statement	W	X	У	Z	CF	0F
scanf();	0x3b9aca00	0x77359400	????????	????????	?	?
y = w + x;	0x3b9aca00	0x77359400	0xb2d05e00	????????	0	0
z = w - x;	0x3b9aca00	0x77359400	0xb2d05e00	0xc4653600	1	0
scanf();	0xc4653600	0x77359400	????????	????????	?	?
y = w + x;	0xc4653600	0x77359400	0x3b9aca00	????????	0	0
z = w - x;	0xc4653600	0x77359400	0x3b9aca00	0x4d2fa200	0	1

Table 9.1: Walking through the code in Listing 9.4. There are two runs of the program here.

Listing 9.6 shows an assembly language program that performs the same operations as the C program in Listing 9.4 but uses the jno (jump if no overflow) instruction to check for overflow. These checks are easy in assembly language. They add very little to the execution time of the program, because most of the time only the conditional jumps are executed, and the jumps do not take place.

```
1 # addAndSubtract2.s
2 # Gets two integers from user, then
  # performs addition and subtraction
4 # Bob Plantz - 11 June 2009
5 # Stack frame
           .equ
                   w,-8
                   x,-4
           .equ
           . equ
                   localSize, -16
  # Read only data
           .section .rodata
10
11 prompt:
           .string "Enter two integers: "
12
13 getData:
           .string "%i %i"
15 display:
           .string "sum = %i, difference = %i\n"
17 warning:
           .string "Overflow has occurred.\n"
19 # Code
           .text
20
           .globl main
21
           .type main, @function
23 main:
           pushq
                   %rbp
                                # save caller's base pointer
24
           movq
                   %rsp, %rbp # establish our base pointer
25
                   $localSize, %rsp # for local vars
           addq
26
27
           movl
                   $prompt, %edi # prompt user
28
           movl
                   $0, %eax
                                   # no floats
           call
                   printf
30
31
           leaq
                   x(%rbp), %rdx # &x
32
                   w(%rbp), %rsi # &w
           leaq
33
           movl
                   $getData, %edi # get user data
34
```

```
movl
                    $0, %eax
                                     # no floats
35
           call
                    scanf
36
           movl
                    w(%rbp), %esi
                                     \# v = w
38
           addl
                    x(%rbp),
                              %esi
                                     \# y += x
39
           jno
                    n0ver1
                                     # skip warning if no OF
40
           movl
                    $warning, %edi
41
           movl
                    $0. %eax
42
           call
                    printf
43
44 n0ver1:
           movl
                    w(%rbp), %edx
                                     \# z = w
45
           subl
                    x(%rbp), %edx # z -= x
46
           jno
                    n0ver2
                                     # skip warning if no OF
47
           movl
                    $warning, %edi
48
49
           movl
                    $0, %eax
           call
                    printf
50
  n0ver2:
51
                    $display, %edi # display results
           movl
52
                                     # no floats
           movl
                    $0, %eax
53
54
           call
                    printf
55
                                      # return 0 to OS
           movl
                    $0, %eax
56
                                     # restore stack pointer
           movq
                    %rbp, %rsp
57
                                     # restore caller's base pointer
           popq
                    %rbp
58
           ret
59
```

Listing 9.6: Addition and subtraction (programmer assembly language).

9.3 Introduction to Machine Code

This section provides only a very brief glimpse of the machine code for the x86 architecture. The goal here is to provide you with a taste of what machine code looks like and thus emphasize that the computer is really controlled by groups of bit settings. The vast majority of computer professionals never need to know the machine code for the computer they are working with. For a complete description you will need to consult the manufacturer's documentation.

Let us consider for a moment how we might design a set of machine instructions for a simple four-function computer. Our proposed computer can add, subtract, multiply, and divide. And we will suppose that it has 1 MB of memory. Each instruction must encode the following information for the control unit:

- 1. the operation to be performed, and
- 2. the location of the operand(s), if any, to operate on.

We will ignore the problem of getting data into the computer for this example, but we will certainly want to be able to move data from location to location in our computer. So we will have five operations:

```
move
add
subtract
multiply
divide
```

Our design will need to allow three bits for encoding each of these operations. For example, we could use the following code:

```
move 000 add 001 subtract 010 multiply 100 divide 111
```

Recall that N bits can be used to encode 2^N different values. We want 1 MB of memory. From $2^{10} = 1024 = 1K$, and $1M = 1K \times 1K = 2^{10} \times 2^{10} = 2^{20}$, we see that we need to allow 20 bits for memory addressing.

Thus, if we want our computer to be able to add a value stored in one memory location to the value at another we need 3 + 20 + 20 = 43 bits to encode the instruction. Question: how many bits would be required if we wanted a design that would allow us to add two values stored in memory and store the sum at a third location?

Our silly design falls far short of practicality. The instructions themselves take too much memory, and we have allowed for only a very limited number of operations on the data. This was a more serious problem in the early days of computer design because memory was very expensive. The result was that computer designers came up with some clever ways to encode the necessary information into very few bits.

The design of the x86 processors is a very good example of this cleverness. Intel has paid particular attention to backwards compatibility as their designs have evolved. Thus, we see the remnants of the earlier designs — when memory was very expensive — in the latest Intel processors. The more common instructions generally take fewer bytes of memory. As newer, more complex features have been added, they generally take more bytes.

Computer design took a different turn in the 1980s. Memory had become much cheaper and CPUs had become much faster. This led to designs where all the instructions are the same size — 32 bits being very common these days.

We now turn our attention to the machine code that is produced by the assembler. Recall that it is the machine code that is actually executed by the control unit in the CPU. That is, the computer is controlled by bit patterns that are loaded into the instruction register in the CPU.

Programmers seldom need to know what the machine code is for any given assembly language instruction. The actual instruction depends upon the operation to be performed, the location(s) of the data to operate on, and the size of the data. Even when writing in assembly language, the programmer uses mnemonic names to specify each of these, and the assembler program translates them into the proper machine code instruction. So you do not need to memorize machine code. However, learning how assembly language instructions translate to machine code is important for learning how a computer actually works. And knowing how to "hand assemble" an instruction using a manual can help you find obscure bugs.

9.3.1 Assembler Listings

Most assemblers can provide the programmer with a listing file, which shows the machine code for each instruction. The assembly listing option for the gnu assembler is -al. For example, the "program" in Listing 9.7 contains some instructions that we will assemble and study to illustrate how to read machine language from a listing file.

```
# someMachineCode.s
  # Some instructions to illustrate machine code.
   Bob Plantz - 11 June 2009
          .text
          .globl
                  main
          .type
                  main, @function
  main:
                               # save caller's base pointer
          pushq
                   %rbp
          movq
                   %rsp, %rbp # establish our base pointer
10
11
          movq
                   $0x1234567890abcdef, %r10 # 64-bit immediate
12
```

```
movl
                   $0x12345678, %r11d
                                         # 32-bit immediate
13
                   $0x1234, %r12w
                                          # 16-bit immediate
           movw
14
                   $0x12, %r13b
                                          # 8-bit immediate
           movb
16
           movq
                   %rax, %r10
                                      # 64-bit operands
17
                   %ecx, %r11d
                                      # 32-bit operands
           movl
18
                                      # 16-bit operands
                   %dx, %r12w
           movw
                   %bl. %r13b
           movb
                                      # 8-bit operands
20
21
           addq
                   %r10, %rax
                                      # add 64-bit operands
22
23
                   %al, (%rdi)
                                      # register indirect
           movb
24
                   %r12, 24(%rsi)
                                      # register indirect with offset
           movq
25
26
                   $0, %eax
27
           movl
                                      # return 0 to caller
                                      # restore stack pointer
           mova
                   %rbp, %rsp
28
                   %rbp
                                      # restore caller's base pointer
           popq
29
                                      # back to caller
           ret
```

Listing 9.7: Some instructions for us to assemble. (This is not a program, just some instructions.)

The command to assemble the source file in Listing 9.7 and create a listing file is

```
as --gstabs -al -o someMachineCode.o someMachineCode.s
```

The -al option sends the listing file to the standard output file, which defaults to the screen. You can capture this output by redirecting the standard output to a disk file. A good extension for the file name is ".lst." The complete command is

Notice the line continuation character, '\'.

which produces the file shown in Figure 9.1.

The first column is the line number of the original source. You should recognize the right-hand two-thirds of the listing as the assembly language source. We will focus our attention on the second and third columns on the left-hand side.

The values in the first column are displayed in decimal, while the values in the second and third columns are in hexadecimal.

The function itself starts on line 8 with the label "main." Since there is nothing else on this line in the source file, it does not occupy any memory in the program.

The first entry in the second column — 0000 — occurs at line 9. It shows the memory location relative to the beginning of the function. Since the source code on line 8 has only a label, the instruction on line 9 is the first one in this function. Furthermore, the label on line 8 applies to (relative) memory location 0000. The label allows other parts of the program to refer to this memory location by name. In particular, since the label, main, is declared as a .globl, functions in other files linked to this one can refer to this memory location. It effectively names this function as the main function.

The entry in the third column on line 9 is 55. It is the machine code at relative location 0000. That is, byte number 0000 in this function is set to the bit pattern 55_{16} . Following the line across, we can see that this is the machine code corresponding to the instruction

```
pushq %rbp
```

Since the first instruction occupies one byte of memory, the second instruction will start in byte number 0001 (the second byte from the beginning). From the assembly listing file (Figure 9.1) we see that the machine code for

```
movq %rsp, %rbp
```

GAS LISTING someMachineCode.s page 1

```
1
                 # someMachineCode.s
 2
                  # Some instructions to illustrate machine code.
 3
                  # Bob Plantz - 11 June 2009
 4
 5
                          .text
                          .globl
 6
                                  main
 7
                          .type
                                  main, @function
8
                 main:
9 0000 55
                           pushq
                                    %rbp
                                                # save caller's base pointer
10 0001 4889E5
                           movq
                                   %rsp, %rbp # establish our base pointer
11
12 0004 49BAEFCD
                                    $0x1234567890abcdef, %r10 # 64-bit immediate
                           movq
12
        AB907856
12
        3412
13 000e 41BB7856
                           movl
                                    $0x12345678, %r11d # 32-bit immediate
13
        3412
14 0014 6641BC34
                                                         # 16-bit immediate
                           movw
                                    $0x1234, %r12w
14
        12
15 0019 41B512
                           movb
                                    $0x12, %r13b
                                                         # 8-bit immediate
16
17 001c 4989C2
                           movq
                                   %rax, %r10
                                                     # 64-bit operands
18 001f 4189CB
                                                     # 32-bit operands
                           movl
                                   %ecx, %r11d
19 0022 664189D4
                           movw
                                    %dx, %r12w
                                                     # 16-bit operands
                                   %bl, %r13b
20 0026 4188DD
                           movb
                                                     # 8-bit operands
21
22 0029 4C01D0
                           addq
                                   %r10, %rax
                                                     # add 64-bit operands
23
24 002c 8807
                           movb
                                    %al, (%rdi)
                                                     # register indirect
25 002e 4C896618
                           movq
                                   %r12, 24(%rsi)
                                                     # register indirect with offset
26
27 0032 B8000000
                           movl
                                                     # return 0 to caller
                                    $0, %eax
27
        00
28 0037 4889EC
                           movq
                                    %rbp, %rsp
                                                     # restore stack pointer
29 003a 5D
                                                     # restore caller's base pointer
                           popq
                                    %rbp
30 003b C3
                                                     # back to caller
                           ret
```

Figure 9.1: Assembler listing file for the function shown in Listing 9.7.

is the bit pattern

```
4889e5_{16} = 0100 \ 1000 \ 1000 \ 1001 \ 1110 \ 0101_2
```

This instruction occupies three bytes. Thus, the third instruction in this function begins at the fifth byte — relative location 0004. Continuing to line 30, the last instruction in the program

ret

is a one-byte instruction. It is the sixtieth byte in the function and is located at relative location 003b with the bit pattern,

```
c3_{16} = 1100 0011_2
```

So you can use the -al option for the as assembler to produce an assembler listing, which will show you exactly what the bit patterns are for each instruction and which bytes, relative to the beginning of the function, are set to these patterns.

9.3.2 General Format of Instructions

Instructions in the X86-64 architecture can be from one to fifteen bytes in length. Each byte falls into one of several categories:

- Opcode This is the first byte in the instruction and specifies the basic operation performed by executing the instruction. It can also include operand location.
- ModRM The mode/register/memory byte specifies operand locations and how they are accessed.
- SIB The scale/index/base byte specifies operand locations and how they are accessed.
- Data These bytes are used to encode constants, either those that are part of the program, or those that are relative address offsets to operand locations in memory.
- Prefix If placed in before the opcode, these modify the behavior of the instruction, typically the size of the operands.

The general placement of these bytes is shown in Figure 9.2.

```
-prefix -- opcode -- modrm -- [-- sib -- -- -- data --
```

Figure 9.2: General format of instructions. There can be more than one prefix byte. The number of data bytes depends on the size of the data.

9.3.3 REX Prefix Byte

In order for an instruction to use the 64-bit features the x86-64 architecture uses a prefix byte, a *REX prefix*, placed immediately before the primary instruction. The assembler recognizes when a REX prefix is required and inserts it automatically; the programmer does not need to explicitly specify it. However, the assembler may give an error message that implies it is the responsibility of the programmer to insert a REX prefix. For example, when attempting to use

```
subb %ah, %dil # subtract bytes
```

the assembler gave the error message:

```
addAndSubtract2.s:23: Error: can't encode register '%ah' in an instruction requiring REX prefix.
```

The reason for this error is explained in Section 6.2 (page 118). Accessing the %dil register requires that the assembler insert a REX prefix, but the %ah register cannot be accessed by an instruction that has a REX prefix.

REX prefixes are a byproduct of maintaining backward compatibility. The x86-32 architecture has only 8 general purpose registers, so it is sufficient to have only three bits in an instruction to specify any register. There are 16 general purpose registers in the x86-64 architecture, so four bits are required to specify a register. Some instructions involve up to three registers, thus there must be a place for three more bits to specify all the registers. Rather than change the register-specifying patterns in the Opcode, ModRM, and SIB bytes, the CPU designers decided to use the REX.R, REX.X, and REX.B bits in the REX prefix byte as the high-order bits for specifying registers. This provides the necessary three bits for register specification. A fourth bit in the REX prefix, the REX.W bit, is set to 1 when the operand is 64 bits. For all other operand sizes — 8, 16, or 32 bits — REX.W is set to 0. The format of the REX prefix byte is shown in Figure 9.3.

0 1 0 0 W R X B

Figure 9.3: REX prefix byte. The four lettered bits are named REX.W, REX.R, REX.X, and REX.B.

mmrrrbbb

Figure 9.4: ModRM byte. The mode is specified by the mm bits, register by the rrr bits, and address base register by the bbb bits.

9.3.4 ModRM Byte

The format of a ModRM byte is shown in Figure 9.4. When one operand uses the base register plus offset addressing mode, that register is specified by the 3-bit bbb register field, and the other register is specified by the rrr register field. Table 9.2 shows the meaning of the 2-bit mm field. If mm = 11 both operands are register direct and are specified by the two register fields,

mm	meaning
00	memory operand; address in register specified by bbb
01	memory operand; address in register specified by bbb plus 8-bit offset
10	memory operand; address in register specified by bbb plus 16-bit offset
11	register operand; register specified by bbb

Table 9.2: The mm field in the ModRM byte. Shows how to interpret the bbb register field.

bbb and rrr. If mm = 00 the bbb register contains the memory address of one of the operands. The bbb register contains a base address for the other two values of mm. 01 means that an 8-bit offset, and 10 a 16-bit offset, is added to the base address to obtain the memory address. The offset is stored as part of the instruction.

The meaning of the register fields is shown in Table 9.3. For 64-bit mode, the REX bit column is explained in Section 9.3.3.

9.3.5 SIB Byte

The format of an SIB byte is shown in Figure 9.5. An SIB byte is required to implement the

ssiiibbb

Figure 9.5: SIB byte. The ss bits specify a scale factor, the iii bits the index register, and the bbb bits the address base register.

indexed addressing mode (see Section 13.1, page 291). The memory address is given by multiplying the value in the index register by the scale factor and adding this to the address in the base register. There can also be a offset, which is added to this sum.

REX bit	register field			register names
0	0	0	0	rax, eax, ax, al
0	0	0	1	rcx, ecx, cx, cl
0	0	1	0	rdx, edx, dx, dl
0	0	1	1	rbx, ebx, bx, bl
0	1	0	0	rsp, esp, sp, spl, ah
0	1	0	1	rbp, ebp, bp, bpl, ch
0	1	1	0	rsi, esi, si, sil, dh
0	1	1	1	rdi, edi, di, dil, bh
1	0	0	0	r8, r8d, r8w, r8b
1	0	0	1	r9, r9d, r9w, r9b
1	0	1	0	r10, r10d, r10w, r10b
1	0	1	1	r11, r11d, r11w, r11b
1	1	0	0	r12, r12d, r12w, r12b
1	1	0	1	r13, r13d, r13w, r13b
1	1	1	0	r14, r14d, r14w, r14b
1	1	1	1	r15, r15d, r15w, r15b

Notes:

- 1. A 3-bit register field can be in an opcode, ModRM, or SIB byte, depending upon the instruction.
- 2. The REX bit is the REX.R, REX.X, or REX.B bit in the REX prefix (Section 9.3.3), depending on the location of the register field.
- 3. If a REX prefix is required, the REX.W bit is set to 1 for 64-bit operands.
- 4. The ah, bh, ch, and dh registers cannot be used in an instruction that requires a REX prefix; the spl, bpl, sil, and dil registers require a REX prefix.

Table 9.3: Machine code of general purpose registers. The register name specified by the programmer determines other bit patterns in the instruction in addition to those shown here.

9.3.6 The mov Instruction

We next consider the instruction on line 10 of Figure 9.1:

This instruction copies all eight bytes from the rsp register to the rbp register. It starts with a REX Prefix, followed by two bytes for the instruction itself. The general format of the instruction for moving data from one register to another is shown in Figure 9.6. The REX Prefix is followed

Figure 9.6: Machine code for the mov from a register to a register instruction. The source register is coded in the src bits and the destination in the dst bits. See Table 9.3 for the bit patterns in each of these fields.

by the opcode, then an ModRM byte.

The opcode includes a "w" bit. This bit is 0 for 8-bit moves and 1 for all other sizes. The instruction operates on a 64-bit value, so w = 1 in the opcode (89₁₆).

The 11_2 in the mod field of the ModRM byte shows that both the source and destination register numbers are encoded in this byte. The src field shows the source and the dst field shows the destination.

From Table 9.3 we see that the source register is either rsp, esp, or sp, and the destination register is either rsp, esp, or bp. (w = 1 rules out the 8-bit registers.) Since the REX.W bit in the

REX Prefix is 1, the operand size is 64 bits. Thus, the instruction makes a copy of all 64 bits in the rsp register into the ebp register.

The second mov format covered here is moving immediate data to a register. Examples are given on lines 11-14 of Figure 9.1. The first operand (the source) is a literal — the value itself is stated. This value will be stored immediately after the instruction. Of course, the instruction must encode the fact that this operand is located at the address immediately following the instruction — the immediate data addressing mode. The destination operand is a register — the register direct addressing mode. The general format for the move immediate data to a register instruction is shown in Figure 9.7 in binary.

Figure 9.7: Machine code for the mov immediate data to a register instruction. The number of data bytes depends on the size of the data.

Consider the

11 0004 49BAEFCD **movq** \$0x1234567890abcdef, %**r10**11 AB907856
11 3412

instruction, the assembler determines that this is a mov instruction and the source operand is immediate data (due to the "\$" character), so the first four bits of the opcode are 1011 (see Figure 9.7). Since the operand is not 8 bits, the "w" bit is 1. Next, the assembler figures out that the destination register is the r10 register. Looking this up on Table 9.3 (which is built into the assembler) shows that the remaining three bits are 010. Thus, the assembler generates the first byte of the instruction:

$$1011 \ 1010_2 = ba_{16}$$

Since the operand size is 64 bits, the data value, 0x1234567890abcdef, is stored immediately (immediate addressing mode) after the instruction. Notice that the bytes seem to be stored backwards. That is, it looks like the assembler stored the 64-bit value 0xefcdab9078563412! Recall that the x86-64 architecture uses the little endian order for storing data in memory, so when the movl instruction copies four bytes from memory into a register, the byte at the lowest memory address is loaded into the least significant byte of the register, the byte at the next memory address is loaded into the next higher order byte of the register, etc. The assembler takes this into account for us and stores the immediate data in memory in little endian format.

The endian issue is irrelevant if you are always consistent with the size of the data item. However, if your algorithm changes data size, you need to be very aware of the endianess of the processor. For example, if you use a movl to store four bytes in memory, then four movbs to read them back into registers, you need to be aware of how they are physically stored in memory.

Finally, since this instruction operates on a 64-bit value, the instruction requires a REX Prefix. Referring to Figure 9.3 we see that the REX.W bit is 1, indicating the 64-bit size of the operands. And the REX.B bit is 1, which is used with the dst field to give the 4-bit number of the r10 register, 1010₂.

BE CAREFUL! Notice that the instruction is ten bytes long (Figure 9.1), but the operand size is four bytes. Do not confuse the size of the instruction with the size of the operand(s).

9.3.7 The add Instruction

The add instruction has three different general formats. We present only a partial description here.

The format for adding an immediate value to a value in the rax, eax, ax, or al register is shown in Figure 9.8. The w bit is 0 for al and 1 for all others. The immediate data value must be

the same size as the register to which it is added, except when adding to the rax register. Then the immediate data is 32 bits and is sign-extended to 64 bits before adding it to the value in the rax register. Note that this instruction is *not* used for the ah portion of the a register. For adding an immediate value to a value to the ah register or any of the other registers, the assembler program must use the instruction shown in Figure 9.9.

```
0000010w--data----data----data----data--
```

Figure 9.8: Machine code for the add immediate data to the A register (except ah) instruction. The number of data bytes depends on the size of the data.

```
1000000w11000dst--data----data----data----data---
```

Figure 9.9: Machine code for the add immediate data to register (not al, ax, nor eax registers) instruction. The number of data bytes depends on the size of the data.

Notice that the instruction for adding to the a register (except the ah portion) is one byte shorter than when adding to the other registers (compare Figures 9.8 and 9.9). There is an historical reason for this. Early CPU designs had only one general purpose register. It was used as the "accumulator" for performing arithmetic. (Perhaps naming it the "a" register makes a little more sense.) As more general purpose registers were added to the designs, assembly language programmers tended to continue using the "accumulator" register more frequently than the others. And compiler writers continued this same pattern of register usage. Hence, the "a" register is used much more for addition in a program than the other registers, and making it a shorter instruction reduces memory usage and increases execution speed. The differences are generally irrelevant these days, but the x86 architecture has evolved in such a way to maintain backward compatibility.

The add instruction shown in Figure 9.10 is used when the data value is small enough to fit into one byte, but it is being added to a two-, four-, or eight-byte register. The value is sign-extended to a full 16-bit, 32-bit, or 64-bit value, respectively, inside the CPU before it is added to the register. Sign-extension consists of copying the high-order bit into each bit to the left until the full width is reached. For example, sign-extending 0x7f to 32 bits would give 0x00000007f; sign-extending 0x80 to 32 bits would give 0xffffff80. Notice that sign-extension preserves the signed decimal value of the bit pattern. (Review Section 3.3.)

Adding small 32-bit values.

```
1000001111000dst - - data--
```

Figure 9.10: Machine code for the add immediate data to a register instruction. Used when the data will fit into one byte, but the register is two, four, or eight bytes. Value is sign-extended.

An example of this is the instruction

```
addl $5, %ecx
```

Even though the value can be coded in only eight bits, the full 32 bits of the register may be affected by the addition. That is, the machine code is 83c105 (the data is coded in only one byte), but the CPU adds 0x000000005 to the rcx register. (Recall that this may produce different results than simply adding 0x05 to the cl portion of the ecx register.)

The format for adding a value in a register to a value in a register is shown in Figure 9.11. Again, the registers and size of data are specified by the bits w, src, and dst are given in Table 9.3, and "src" means "source" and "dst" means "destination."

0 0 0 0 0 0 0 w 1 1 s r c d s t

Figure 9.11: Machine code for the add register to register instruction.

Let us look at the add instruction on line 17 in Figure 9.1:

This instruction adds the 32 bits from the ecx register to the 32 bits in the edx register, leaving the result in the edx register. From Table Table 9.3, w = 1, src = 001, and dst = 010. Thus the instruction is

 $\mathtt{00000001}\ \mathtt{11001010}_2 = \mathtt{01ca8}_{16}$

9.4 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

9.4.1 Instructions

data movement:

opcode	source	destination	action	see page:
movs	\$imm/%reg	%reg/mem	move	141
movs <i>ss</i>	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q

arithmetic/logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
adds	mem	%reg	add	189
cmps	\$imm/%reg	%reg/mem	compare	209
incs	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
subs	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190

s = b, w, l, q; w = l, q

program flow control:

opcode	location	action	see page:
call	label	call function	156
je	label	jump equal	211
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

9.5. EXERCISES 205

9.4.2 Addressing Modes

register direct:	The data value is located in a CPU register.
	syntax: name of the register with a "%" prefix.
	example: movl %eax, %ebx
immediate	The data value is located immediately after the instruc-
data:	tion. Source operand only.
	syntax: data value with a "\$" prefix.
	example: movl \$0xabcd1234, %ebx
base register	The data value is located in memory. The address of the
plus offset:	memory location is the sum of a value in a base register
	plus an offset value.
	syntax: use the name of the register with parentheses
	around the name and the offset value immediately be-
	fore the left parenthesis.
	example: movl \$0xaabbccdd, 12(%eax)

9.5 Exercises

- **9-1** (§9.1) Enter the assembly language program in Listing 9.3. Use gdb to single step through the program as shown in the book. Before executing each instruction, predict how the rax, rbp, and rsp registers will change. Also record the values in the rip and eflags registers as you single step through the program. How many bytes are there in each instruction?
- **9-2** (§9.2) Enter the C program in Listing 9.4. Using gdb, verify that the program works correctly, as shown in Table 9.1.
- **9-3** (§9.2) Enter the assembly language program in Listing 9.6 and run it. Notice that it gives different results than the C version if there is overflow. Why is this? Modify the program so that it gives the same results as the C version but still gives an overflow warning.
- **9-4** (§9.3) Assemble each of the mov instructions in Listings 9.7 by hand. Check your answers with the assembly listing.
- **9-5** (§9.3) Assemble each of the add instructions in Listing 9.7 by hand. Check your answers with the assembly listing.
- **9-6** (§9.3) Assemble each of the following instructions by hand (on paper).

```
a) movl $0x89abcdef, %ecx e) movq %r8, %r15
b) movw $0xabcd, %ax f) movb %r9b, %r10b
c) movb $0x30, %al g) movl %r11d, %r12d
d) movb $0x31, %ah h) movq $0x7fffec9b2cf4, %rsi
```

Check your work by entering the code into a source file of the form

```
.text
         .globl
                 main
                 main, @function
         .type
main:
        pushq
                 %rbp
        movq
                 %rsp, %rbp
        # Your code sequence goes here.
                 $0, %eax
        movl
                 %rbp
        popq
        ret
```

and creating a listing file.

9-7 (§9.3) Assemble each of the following instructions by hand (on paper).

```
a) addl
         $0x89abcdef, %ecx
                                          e) addq
                                                   %r12, %r15
b) addw
                                          f) addw
         $0xabcd, %ax
                                                   %r8w, %r10w
c) addb
         $0x30, %al
                                         g) addb
                                                  %r9b, %sil
                                         h) addl
d) addb
         $0x31, %ah
                                                  %esi, %edi
```

Check your work by entering the code into a source file of the form

```
.text
.globl main
.type main, @function
main:

pushq %rbp
movq %rsp, %rbp
# Your code sequence goes here.
movl $0, %eax
popq %rbp
ret
```

and creating a listing file.

9-8 (§9.3) Design an experiment that will allow you to determine what the machine code is for the

```
pushq 64-bit_register
```

instruction, where "64-bit_register" is any of the general purpose registers. What is the general format of the instruction? Show your answer as a drawing similar to Figure 9.7. Which ones use a REX prefix? Hint: assemble with the -al option.

9-9 (§9.3) Design an experiment that will allow you to determine what the machine code is for the

```
popq 64-bit_register
```

instruction, where "64-bit_register" is any of the general purpose registers. What is the general format of the instruction? Show your answer as a drawing similar to Figure 9.7. Which ones use a REX prefix? Hint: assemble with the -al option.

9-10 (§9.3) Disassemble each of the machine instruction sequences by hand (on paper). (Find the corresponding assembly language instruction for each machine code instruction.) Notice that this is a much more difficult problem, because it is difficult to tell where one instruction ends and the next one begins. We have placed one machine instruction on each line to help you. Enter each of your assembly language programs into a source file and use the assembler to check your work.

a)	b0ab	c)	b83412cdab
	b4cd		bbabcd1234
	41b0ef		41b900000000
	41b701		41be7b000000
		d)	66b8cdab
b)	40b723	,	66bbbacd
	40b634		66b93412
	b256		66ba2143
	b678		

9.5. EXERCISES 207

e)	88c4 8808 88480a 8a08 8a480a	j)	5ab00000000 83c301 83c100 81c2ff000000
f)	89c3 6689d8 4889ca 4589c6	k)	6605cdab 6681c3bace 6681c13412 6681c22143
g)	04ab 80c4cd 80c3ef 80c701	1)	6605ab00 6683c301 6683c100 6681c2ff00
h)	80c123 80c534 80c256 80c678	m)	00c4 4100c2 00ca 4500c1
i)	053412cdab 81c3abcd1234 81c1d4c3b2a1 81c2a1b2c3d4	n)	01c3 6600d8 4801ca 4501c6

Chapter 10

Program Flow Constructs

The assembly language we have studied thus far is executed in sequence. In this chapter we will learn how to organize assembly language instructions to implement the other two required program flow constructs — repetition and binary decision.

Text string manipulations provide many examples of using program flow constructs, so we will use them to illustrate many of the concepts. Almost any program displays many text string messages on the screen, which are simply arrays of characters.

10.1 Repetition

The algorithms we choose when programming interact closely with the data storage structure. As you probably know, a string of characters is stored in an array. Each element of the array is of type char, and in C the end of the data is signified with a sentinel value, the NUL character (see Table 2.3 on page 20).

The other technique for specifying the length of the string is to store the number of characters in the string together with the string. This is implemented in Pascal by storing the number of characters in the first byte of the array, and the actual characters are stored immediately following.

Array processing is usually a repetitive task. The processing of a character string is a good example of repetition. Consider the C program in Listing 10.1.

```
* helloWorld1.c
   * "hello world" program using the write() system call
   * one character at a time.
   * Bob Plantz - 12 June 2009
7 #include <unistd.h>
9 int main(void)
      char *aString = "Hello World.\n";
11
12
      while (*aString != '\0')
13
14
          write(STDOUT_FILENO, aString, 1);
15
           aString++;
      }
17
      return 0;
19
20 }
```

10.1. REPETITION 209

Listing 10.1: Displaying a string one character at a time (C).

The while statement on lines 13 - 17,

controls the execution of the statements within the {...} block.

- 1. It evaluates the boolean expression *aString != '\0'.
- 2. If the boolean expression evaluates to false, program flow jumps to the statement immediately following the {...} block.
- 3. If the boolean expression evaluates to true, program flow enters the {...} block and executes the statements there in sequence.
- 4. At the end of the {...} block program flow jumps back up to the evaluation of the boolean expression.

The pointer variable is incremented with the

```
aString++;
```

statement. Notice that this variable must be changed inside the {...} block. Otherwise, the boolean expression will always evaluate to true, giving an "infinite" loop.

It is important that you identify the variable that the while construct uses to control program flow — the Loop Control Variable (LCV). Make sure that the value of the LCV is changed within the {...} block. Note that there may be more than one LCV.

The way that the while construct controls program flow can be seen in the flow chart in Figure 10.1. This flow chart shows that we need the following assembly language tools to construct a while loop:

- Instruction(s) to evaluate boolean expressions.
- An instruction that conditionally transfers control (jumps) to another location in the program. This is represented by the large diamond, which shows two possible paths.
- An instruction that unconditionally transfers control to another location in the program.
 This is represented by the line that leads from "Execute body of while loop" back to the top.

We will explore instructions that provide these tools in the next three subsections.

10.1.1 Comparison Instructions

Most arithmetic and logic instructions affect the condition code bits in the rflags register. (See page 121.) In this section we will look at two instructions that are used to set the condition codes to show the relationship between two values without changing either of them.

One is cmp (compare). The syntax is

cmps source, destination

	<u>s</u>	meaning	number of bits
	b	byte	8
where <i>s</i> denotes the size of the operand:	W	word	16
	l	longword	32
	q	quadword	64

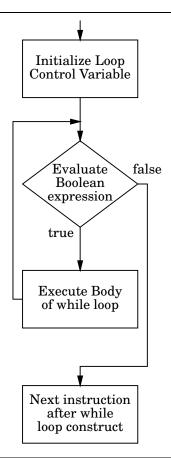


Figure 10.1: Flow chart of a while loop. The large diamond represents a binary decision that leads to two possible paths, "true" or "false." Notice the path that leads back to the top of the while loop after the body has been executed.

Intel® Syntax Cmp destination, source

The cmp operation consists of subtracting the source operand from the destination operand and setting the condition code bits in the rflags register accordingly. Neither of the operand values is changed. The subtraction is done internally simply to get the result and set the OF, SF, ZF, AF, PF, CF condition codes according to the result.

The other instruction is test. The syntax is

tests source, destination

	<u>s</u>	meaning	number of bits
	b	byte	8
where <i>s</i> denotes the size of the operand:	W	word	16
	l	longword	32
	q	quadword	64

Intel® Syntax test destination, source

The test operation consists of performing a bit-wise and between the two operands and setting the condition codes in the rflags register accordingly. Neither of the operand values is changed. The and operation is done internally simply to get the result and set the SF, ZF, and PF condition codes according to the result. The OF and CF are set to 0, and the AF value is undefined.

10.1. REPETITION 211

10.1.2 Conditional Jumps

These instructions are used to alter the flow of the program depending on the settings of the condition code bits in the rflags register. The general format is

```
jcc label
```

where cc is a 1-4 letter sequence specifying the condition codes, and label is a memory location. Program flow is transferred to label if cc is true. Otherwise, the instruction immediately following the conditional jump is executed. The conditional jump instructions are listed in Table 10.1.

instruction	action	condition codes
ja	jump if above	$(CF = 0) \cdot (ZF = 0)$
jae	jump if above or equal	CF = 0
jb	jump if below	CF = 1
jbe	jump if below or equal	(CF = 1) + (ZF = 1)
jс	jump if carry	CF = 1
jcxz	jump if cx register zero	
jecxz	jump if ecx register zero	
jrcxz	jump if rcx register zero	
je	jump if equal	ZF=1
jg	jump if greater	$(ZF = 0) \cdot (SF = OF)$
jge	jump if greater or equal	SF = OF
jl	jump if less	SF eq OF
jle	jump if less or equal	$\overline{(ZF=1)} + (SF \neq OF)$
jna	jump if not above	(CF=1) + (ZF=1)
jnae	jump if not above or equal	CF = 1
jnb	jump if not below	CF = 0
jnbe	jump if not below or equal	$(CF = 0) \cdot (ZF = 0)$
jnc	jump if not carry	CF = 0
jne	jump if not equal	ZF = 0
jng	jump if not greater	$(ZF = 1) + (SF \neq OF)$
jnge	jump if not greater or equal	SF eq OF
jnl	jump if not less	SF = OF
jnle	jump if not less or equal	$(ZF=0) \cdot (SF=OF)$
jno	jump if not overflow	OF = 0
jnp	jump if not parity or equal	PF = 0
jns	jump if not sign	SF = 0
jnz	jump if not zero	ZF = 0
jo	jump if overflow	OF = 1
jр	jump if parity	PF = 1
jpe	jump if parity even	PF = 1
jpo	jump if parity odd	PF = 0
js	jump if sign	SF = 1
jz	jump if zero	ZF = 1

Table 10.1: Conditional jump instructions.

A good way to appreciate the meaning of the cc sequences in this table is to consider a very common application of a conditional jump:

```
cmpb %al, %bl
jae somePlace
movb $0x123, %ah
```

If the value in the bl register is numerically above the value in the al register, or if they are equal, then program control transfers to the address labeled "somePlace." Otherwise, program control continues with the movb instruction.

The differences between "greater" versus "above", and "less" versus "below", are a little subtle. "Above" and "below" refer to a sequence of unsigned numbers. For example, characters would probably be considered to be unsigned in most applications. "Greater" and "less" refer to signed values. Integers are commonly considered to be signed.

Table 10.2 lists four conditional jumps that are commonly used when processing unsigned values. And Table 10.3 lists four commonly used with signed values.

instruction	meaning	immediately after a cmp
ja	jump above	jump if destination is above source
		in sequence
jae	jump above or	jump if destination is above or in
	equal	same place as source in sequence
jb	jump below	jump if destination is below source
		in sequence
jbe	jump below or	jump if destination is below or in
	equal	same place as source in sequence

Table 10.2: Conditional jump instructions for unsigned values.

instruction	meaning	immediately after a cmp
jg	jump greater	jump if destination is greater than
		source
jge	jump greater or	jump if destination is greater than
	equal	or equal to source
jl	jump less	jump if destination is less than
		source
jle	jump less or	jump if destination is less than or
	equal	equal to source

Table 10.3: Conditional jump instructions for signed values.

Since most instructions affect the settings of the condition codes in the rflags register, each must be used immediately after the instruction that determines the conditions that the programmer intends to cause the jump.

HINT: It is easy to forget how the order of the source and destination controls the conditional jump in this construct. Here is a place where the debugger can save you time. Simply put a breakpoint at the conditional jump instruction. When the program stops there, look at the values in the source and destination. Then use the si debugger command to execute one instruction and see where it goes.

The jump instructions bring up another addressing mode — rip-relative. ¹

rip-relative: The target is a memory address determined by adding an offset to the current address in the rip register.

syntax: a programmer-defined label

example: je somePlace

The offset, which can be positive or negative, is stored immediately following the opcode for the instruction in two's complement format. Thus, the offset becomes a part of the instruction, similar to the immediate data addressing mode. Just like the immediate addressing mode, the offset is stored in little endian order in memory.

The following steps occur during program execution of a jcc instruction (recall Figure 6.5):

1. The jump instruction, including the offset value, is fetched.

¹In an environment where the instruction pointer is called the "program counter" this would be called "pc-relative."

10.1. REPETITION 213

2. As always, the rip register is incremented by the number of bytes in the jump instruction, including the offset value that is stored as part of the jump instruction.

- 3. If the conditions to cause a jump are true, the offset is added to the rip register.
- 4. If they are not true, the instruction has no effect.

When a conditional jump instruction is assembled, the assembler computes the number of bytes from the jump instruction to the specified label. The assembler then subtracts the number of bytes in the jump instruction from the distance to the label to yield the offset. This computed offset is stored as part of the jump instruction. Each jump instruction has several forms, depending on the number of bytes that must be used to store the offset. Note that the offset is stored in two's complement format to allow for negative jumps.

For example, if the offset will fit into eight bits the opcode for the je instruction is 74₁₆, and it is 0f84₁₆ if more than eight bits are required to store the offset (in which case the offset is stored in as a thirty-two bit value). The machine code is shown in Table 10.4 for four different target address offsets. Notice that the 32-bit offsets are stored in little endian order in memory.

distance to target address \sim bytes, decimal	$\begin{array}{ll} \textbf{machine code} \; \sim \; \textbf{hexadecimal} \\ \end{array}$
+100	7462
- 100	749a
+300	0f8426010000
-300	0f84cefeffff

Table 10.4: Machine code for the je instruction. Four different distances to the jump target address. Notice that the 32-bit offsets are stored in little endian order.

10.1.3 Unconditional Jump

We also need an instruction that unconditionally transfers control to another location in the program. The instruction has three forms:

jmp label
jmp *register
jmp *memory

Program flow is transferred to the location specified by the operand.

The first form is limited to those situations where the distance, in number of bytes, to the target location will fit within a 32-bit signed integer. The addressing mode is rip-relative. That is, the 32-bit signed integer is added to the current value in the rip register. This is sufficient for most cases.

In the other two forms, the target address is stored in the specified register or memory location, and the operand is accessed indirectly. The address is an unsigned 64-bit value. The jmp instruction moves this stored address directly into the rip register, replacing the address that was in there. The "*" character is used to indicate "indirection."

BE CAREFUL: The unconditional jump uses "*" for indirection, while all other instructions use "(register)." It might be tempting to use something like "*(%rax)." Although the (...) are not an error here, they are superfluous. They have essentially the same effect as something like (x) in an algebraic expression.

The three ways to use an unconditional jump are shown in Listing 10.2.

```
1 # jumps.s
```

^{2 #} demonstrates unconditional jumps

^{3 #} Bob Plantz - 12 June 2009

^{4 #} global variable

```
.data
6 pointer:
           .quad
                    0
  format:
           .string "The jump pattern is %x.\n"
10 # code
           .text
11
           .globl
                    main
12
           .type
                    main, @function
13
14 main:
           pushq
                                 # save frame pointer
15
                                 # set new frame pointer
           movq
                    %rsp, %rbp
16
17
                    $7, %esi
                                 # assume all three jumps
18
           movl
19
           jmp
                    here1
                    $0xfffffffe, %esi # no jump, turn off bit 0
           andl
20
21 here1:
                    here2, %rax
22
           leaq
           jmp
                    *%rax
23
           andl
                    $0xfffffffd, %esi # no jump, turn off bit 1
25 here2:
           leaq
                    here3, %rax
26
           movq
                    %rax, pointer
27
           jmp
                    *pointer
                    $0xfffffffb, %esi # no jump, turn off bit 2
           andl
29
30 here3:
           movl
                    $format, %edi
31
           movl
                    $0, %eax
                                 # no floats
32
                    printf
                                 # show pattern
           call
33
34
                    $0, %eax
                                 # return 0;
35
           movl
           movq
                    %rbp, %rsp
                                 # restore stack pointer
36
                    %rbp
                                 # restore frame pointer
37
           popq
           ret
```

Listing 10.2: Unconditional jumps.

The most commonly used form is rip-relative as shown on line 19:

```
jmp here1
```

On lines 22 - 23 an address is loaded into a register, then the jump is made indirectly via the register to that address.

```
leaq here2, %rax jmp *%rax
```

Lines 26 - 28 show how an address can be stored in memory, then the memory used indirectly for the jump.

```
leaq here3, %rax movq %rax, pointer jmp *pointer
```

Of course, the indirect techniques are not required in this simple example, but they might be needed for some programs.

10.1.4 while Loop

We are now prepared to look at how a while loop is constructed at the assembly language level. As usual, we begin with the assembly language generated by the gcc compiler for the program

10.1. REPETITION 215

in Listing 10.1, which is shown in Listing 10.3 with comments added.

```
"helloWorld1.c"
           .file
                            .rodata
           .section
  .LC0:
           .string "Hello World.\n"
           .text
  .globl main
           .type
                   main, @function
  main:
          pushq
                   %rbp
          movq
                   %rsp, %rbp
          subq
                   $16, %rsp
11
          movq
                   $.LCO, -8(%rbp) # pointer to string
                                    # go to bottom of loop
          jmp
                   .L2
13
  .L3:
14
                   -8(%rbp), %rsi # 2nd arg. - pointer
          movq
15
          movl
                   $1, %edx
                                    # 3rd arg. - 1 character
                   $1, %edi
                                    # 1st arg. - standard out
          movl
17
          call
                   write
18
          addq
                   $1, -8(%rbp)
                                    # aString++;
19
20
  .L2:
          movq
                   -8(%rbp), %rax # load pointer
21
          movzbl
                   (%rax), %eax
                                    # get current character
22
                                    # is it NUL?
          testb
                   %al, %al
23
          jne
                   .L3
                                    # no, go to top of loop
24
                   $0, %eax
          movl
25
          leave
26
          ret
                   main, .-main
           .size
28
                   "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
           .section
                            .note.GNU-stack,"",@progbits
```

Listing 10.3: Displaying a string one character at a time (gcc assembly language). Comments added.

Let us consider the loop:

```
$.LCO, -8(%rbp) # pointer to string
          movq
12
          jmp
                                    # go to bottom of loop
13
  .L3:
14
                   -8(%rbp), %rsi # 2nd arg. - pointer
          movq
15
          movl
                   $1, %edx
                                    # 3rd arg. - 1 character
16
                   $1, %edi
17
          movl
                                    # 1st arg. - standard out
          call
                   write
          addq
                   $1, -8(%rbp)
                                    # aString++;
19
  .L2:
20
          movq
                   -8(%rbp), %rax # load pointer
21
                                    # get current character
          movzbl
                   (%rax), %eax
22
23
          testb
                   %al, %al
                                    # is it NUL?
          jne
                   .L3
                                    # no, go to top of loop
```

Notice that after initializing the loop control variable it jumps to the condition test,

```
movq $.LCO, -8(%rbp) # pointer to string
jmp .L2 # go to bottom of loop
```

which is at the *bottom* of the loop:

```
-8(%rbp), %rax
                                     # load pointer
           movq
21
                                     # get current character
           movzbl
                   (%rax), %eax
22
                   %al, %al
                                     # is it NUL?
           testh
23
           ine
                   .L3
                                     # no, go to top of loop
24
```

Let us rearrange the instructions so that this is a true while loop — the condition test is at the *top* of the loop. The exit condition has been changed from jne to je for correctness. The original is on the left, the rearranged on the right:

```
$.LC0, -8(%rbp)
                                                                          $.LC0, -8(%rbp)
            movq
                                                                mova
12
            jmp
                      .L2
                                                    13 .L2:
13
  .L3:
                                                                          -8(%rbp), %rax
14
                                                    14
                                                                movq
                      -8(%rbp), %rsi
                                                                movzbl
                                                                          (%rax), %eax
            movq
15
                                                    15
                                                                          %al, %al
                     $1, %edx
                                                                testb
16
            movl
                                                    16
                     $1, %edi
                                                                          .L3
            movl
                                                                 jе
17
                                                    17
                     write
            call
                                                                          -8(%rbp), %rsi
18
                                                                movq
            addq
                     $1, -8(%rbp)
                                                                          $1, %edx
                                                                 movl
19
                                                    19
                                                                          $1, %edi
   .L2:
                                                                 movl
20
                                                    20
            movq
                      -8(%rbp), %rax
                                                                 call
                                                                          write
                                                    21
21
            movzbl
                      (%rax), %eax
                                                                 addq
                                                                          $1, -8(%rbp)
22
            testb
                      %al, %al
                                                                          .L2
                                                                 jmp
23
                                                    23
                      .L3
                                                    24 .L3:
24
            jne
```

Both versions have exactly the same number of instructions. However, the unconditional jump instruction, jmp, is executed every time through the "true" while loop, but is executed only once in the compiler's version. Thus, the compiler's version is more efficient. The savings is probably insignificant in the vast majority of applications. However, if a loop is nested within another loop or two, the difference could be important.

We also see another version of the mov instruction on line 22:

```
movzbl (%rax), %eax
```

This instruction converts the data size from 8-bit to 32-bit, placing zeros in the high-order 24 bits, as it copies the byte from memory to the eax register. The memory address of the copied byte is in the rax register. (Yes, this instruction writes over the address in the register as it executes.)

The x86-64 architecture includes instructions for extending the size of a value by adding more bits to the left. There are two ways to do this:

- **Sign extend** copy the sign bit to each of the new high-order bits. For example, when sign extending an 8-bit value to 16 bits, 85 would become ff85, but 75 would become 0075.
- **Zero extend** make each of the new high-order bits zero. When zero extending 85 to sixteen bits, it becomes 0085.

Sign extension can be accomplished with the movs instruction:

```
movssd source, destination
```

where s denotes the size of the source operand and d the size of the destination operand. (Use

	<u>s</u>	meaning	number of bits
	b	byte	8
the s column for d .)	W	word	16
	ι	longword	32
	q	quadword	64

It can be used to move an 8-bit value from memory or a register into a 16-, 32-, or 64-bit register; move a 16-bit value from memory or a register into a 32-bit register; or move a 32-bit value from memory or a register into a 64-bit register. The "s" causes the rest of the high-order bits in

10.1. REPETITION 217

the destination register to be a copy of the sign bit in the source value. It does not affect the condition codes in the rflags register.

In the Intel syntax the instruction is movsx. The size of the data is determined by the operands, so the size characters (b, w, l, or q) are not appended to the instruction, and the order of the operands is reversed.

Syntax movsx destination, source

In some cases the Intel syntax is ambiguous. Intel-syntax assemblers use keywords to specify the data size in such cases. For example, the nasm assembler uses

movsx destination, BYTE [source]

to move one byte and zero extend, and uses

movsx destination, WORD [source]

to move two bytes and sign extend.

Zero extension can be accomplished with the movz instruction:

movzsd source, destination

where s denotes the size of the source operand and d the size of the destination operand. (Use

It can be used to move an 8-bit value from memory or a register into a 16-, 32-, or 64-bit register; or move a 16-bit value from memory or a register into a 32-bit register. The "z" causes the rest of the high-order bits in the destination register to be set to zero. It does not affect the condition codes in the rflags register. Recall that moving a 32-bit value from memory or a register into a 64-bit register sets the high-order 32 bits to zero, so there is no movzlq instruction.

There is no movzlq

In the Intel syntax the instruction is movzx The size of the data is determined by the operands, instruction, so the size characters (b, w, l, or q) are not appended to the instruction, and the order of the operands is reversed.

Intel® Syntax movzx destination, source

There is also a set of instructions that double the size of data in portions of the rax register, sign extending as they do so. The instructions are:

AT&T syntax	Intel® syntax	start	result
cbtw	cbw	byte in al	word in ax
cwtl	cwde	word in ax	long in eax
cwtd	cwd	word in ax	long in dx:ax
cltd	cdq	lonq in eax	quad in edx:eax
cltq	cdqe	lonq in eax	quad in rax
cqto	cqo	quad in rax	octuple in rdx:rax

where the notation "long in dx:ax" means a 32-bit value with the high-order 16 bits in dx and the low-order 16 bits in ax. Notice that these instructions do not explicitly specify any operands, but they change the rax and possibly the rdx registers. They do not affect the condition codes in the rflags register.

Returning to while loops, the general structure of a count-controlled while loop is shown in Listing 10.4.

^{1 #} generalWhile.s

 $_{2}$ # general structure of a while loop (not a program)

```
4 #
       count = 10;
       while (count > 0)
5 #
7 #
           // loop body
           count - -;
  #
       }
11 # Bob Plantz - 10 June 2009
          movl
                   $10, count(%rbp) # initialize loop control variable
13
  whileLoop:
14
                   $0, count(%rbp) # check continuation conditions
          cmpb
15
                                      # if false, leave loop
          jle
                   whileDone
16
     # ----
17
18
     # loop body processing
19
          subl
                   $1, count(%rbp)
                                      # change loop control variable
20
                                      # back to top
                   whileLoop
          jmp
21
22 whileDone:
     # next programming construct
```

Listing 10.4: General structure of a count-controlled while loop.

This is not a complete program or even a function. It simply shows the key elements of a while loop.

Loops, of course, take the most execution time in a program. However, in almost all cases code readability is more important than efficiency. You should determine that a loop is an efficiency bottleneck before sacrificing its structure for efficiency. And then you should generously comment what you have done.

Our assembly language version of a "Hello world" program in Listing 10.5 uses a sentinel-controlled while loop.

```
1 # helloWorld3.s
  # "hello world" program using the write() system call
 # one character at a time.
  # Bob Plantz - 12 June 2009
 # Useful constants
                   STDOUT, 1
           .equ
  # Stack frame
           . equ
                   aString,-8
           . equ
                   localSize, -16
10
11 # Read only data
           .section
                     .rodata
12
  theString:
13
           .string "Hello world.\n"
14
15 # Code
           .text
16
           .globl
                   main
17
                   main, @function
           .type
18
19
 main:
           pushq
                   %rbp
                                 # save base pointer
20
           movq
                   %rsp, %rbp # set new base pointer
21
           addq
                   $localSize, %rsp # for local var.
22
23
           movl
                   $theString, %esi
24
           movl
                   %esi, aString(%rbp) # *aString = "Hello World.\n";
25
```

10.1. REPETITION 219

```
26 whileLoop:
                   aString(%rbp), %esi # current char in string
27
          cmpb
                   $0, (%esi) # null character?
          jе
                   allDone
                                # yes, all done
29
          movl
                   $1, %edx
                                # one character
31
                   $STDOUT, %edi # standard out
          movl
                                # invoke write function
          call
                   write
33
34
          incl
                   aString(%rbp) # aString++;
35
          jmp
                   whileLoop
                                # back to top
37 allDone:
          movl
                   $0, %eax
                                # return 0:
38
                   %rbp, %rsp # restore stack pointer
39
          mova
                                # restore base pointer
40
          popq
                   %rbp
          ret
41
```

Listing 10.5: Displaying a string one character at a time (programmer assembly language).

Consider the sequence on lines 26 - 28:

```
whileLoop:
movl aString(%rbp), %esi # current char in string
cmpb $0, (%esi) # null character?
```

We had to move the pointer value into a register in order to dereference the pointer. These two instruction implement the C expression:

```
(*aString != '\0')
```

In particular, you have to move the address into a register, then dereference it with the "(register)" syntax.

You have to get an address (a pointer) into a register before you can dereference it.

Be careful not to confuse this with the *indirection* operator, "*", used with the jmp instruction that you saw in Section 10.1.3, especially since the assembly language indirection operator is the same as the dereference operator in C/C++.

There are two common errors when using the assembly language syntax.

• The assembly language dereference operator does not work on variable names. For example, you cannot use

to dereference the variable, ptr.

Neither do

```
cmpb $0, (theString) # *** DOES NOT WORK ***
nor
cmpb $0, (\$theString) # *** DOES NOT WORK ***
```

work to dereference the theString location. Unfortunately, the assembler may not consider any of these to be syntax errors, just an unnecessary set of parentheses. Therefore, you probably will not get an assembler error message, just incorrect program behavior.

• Another common error is to forget to dereference the register once you get the address stored in it:

Read the warning messages when you assemble and link your programs.

This would compare a byte in the eax register itself with the value zero. Since there are four bytes in the eax register, this code will generate an assembler warning message because it does not specify which byte.

BE CAREFUL: The C/C++ syntax for the NUL character, '\0', is not recognized by the gnu assembler, as. From Table 2.3 we see that the bit pattern for the NUL character is 0x00, and this value must be used in the gnu assembly language.

We also need to add one to the pointer variable so as to move it to the next character in the string. Adding one is a common operation, so there is an operator that simply adds one,

> ${\sf inc}s$ source

where *s* denotes the size of the operand:

8	meaning	<u>number of bits</u>
b	byte	8
W	word	16
ι	longword	32
q	quadword	64

The inc instruction adds one to the source operand. The operand can be a register or a memory location.

On line 34 of the program in Listing 10.5, incl is used to add one to the address stored in memory minus four bytes relative to the frame pointer:

incl aString(%rbp) # aString++;

BE CAREFUL: It is easy to think that the instruction ought to be incb since each character is only one byte. The address in this program is 32 bits, so we have to use incl. And, of course, when we use a 64-bit address, we need to use incq. Don't forget that the value we are adding one to is an address, not the value stored at that address.

Subtracting one from a counter is also a common operation. The dec instruction subtracts one from an operand and sets the rflags register accordingly. The operand can be a register or a memory location.

> decs source

where *s* denotes the size of the operand:

8	meaning	number of bits
b	byte	8
W	word	16
ι	longword	32
q	quadword	64

A decl instruction is used on line 27 in Listing 10.6 to both subtract one from the counter variable and to set the condition codes in the rflags register for the jg instruction.

```
# printStars.s
 # prints 10 * characters on a line
  # Bob Plantz - 12 June 2009
  # Useful constants
                    STDOUT, 1
           .equ
  # Stack frame
           .equ
                    theChar, -1
           . equ
                    counter, -16
                    localSize, -16
           . equ
10
11 # Code
           .text
12
           .globl main
13
```

Increment the entire 32- or 64-bit address, not just one byte.

```
main, @function
           .type
15 main:
          pushq
                   %rbp
                                # save base pointer
          movq
                   %rsp, %rbp # set new base pointer
17
          addq
                   $localSize, %rsp # for local var.
18
19
                   $'*', theChar(%rbp) # character to print
          movb
                   $10, counter(%rbp)
          movl
                                          # ten times
21
  doWhileLoop:
          leag
                   theChar(%rbp), %rsi # address of char
23
          movl
                   $1, %edx
                                # one character
24
          movl
                   $STDOUT, %edi # standard out
25
          call
                   write
                                # invoke write function
26
                   counter(%rbp) # counter--;
          decl
27
28
          jg
                   doWhileLoop # repeat if > 0
29
          movl
                   $0, %eax
                                # return 0;
30
                   %rbp, %rsp
          movq
                                # restore stack pointer
31
                                # restore base pointer
          popq
32
          ret
```

Listing 10.6: A do-while loop to print 10 characters.

This is clearly better than using

```
subl $1, counter(%rbp) # counter--;
cmpl $0, counter(%rbp)
jg doWhileLoop # repeat if > 0
```

This program also demonstrates how to implement a do-while loop.

10.2 Binary Decisions

We now know how to implement two of the primary program flow constructs — sequence and repetition. We continue on with the third — binary decision. You know this construct from C/C++ as the if-else.

We start the discussion with a common example — a simple program that asks the user whether changes should be saved or not (Listing 10.7). This example program does not do anything, so there really is nothing to change, but you have certainly seen this construct. (As usual, this program is meant to illustrate concepts, not good C/C++ programming practices.)

```
while (*ptr != '\0')
17
           write(STDOUT_FILENO, ptr, 1);
19
20
       }
21
22
       read (STDIN_FILENO, &response, 1);
23
       if (response == 'y')
25
26
           ptr = "Changes saved.\n";
27
           while (*ptr != '\0')
29
                write(STDOUT_FILENO, ptr, 1);
30
                ptr++;
32
       }
33
       else
34
           ptr = "Changes discarded.\n";
36
           while (*ptr != '\0')
37
                write(STDOUT_FILENO, ptr, 1);
                ptr++;
40
41
           }
       }
42
       return 0;
43
44 }
```

Listing 10.7: Get yes/no response from user (C).

Let's look at the flow of the program that the if-else controls.

- 1. The boolean expression (response == 'y') is evaluated.
- 2. If the evaluation is true, the first block, the one that displays "Changes saved.", is executed.
- 3. If the evaluation is false, the second block, the one that displays "Changes discarded.", is executed.
- 4. In both cases the next statement to be executed is the return 0;

The program control flow of the if-else construct is illustrated in Figure 10.2.

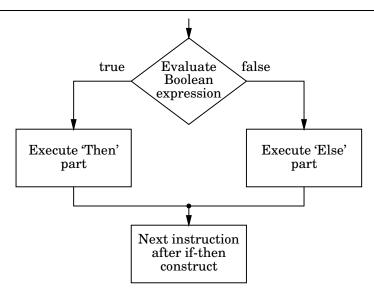


Figure 10.2: Flow chart of if-else construct. The large diamond represents a binary decision that leads to two possible paths, "true" or "false." Notice that either the "then" block or the "else" block is executed, but not both. Each leads to the end of the if-else construct.

We already know all the assembly language instructions needed to implement the if-else in Listing 10.7. The important thing to note is that there must be an unconditional jump at the end of the "then" block to transfer program flow around the "else" block. The assembly language generated for this program is shown in Listing 10.8.

```
.file
                    "yesNo1.c"
           .section
                              .rodata
  .LC0:
           .string "Save changes? "
  .LC1:
           .string "Changes saved.\n"
  .LC2:
           .string "Changes discarded.\n"
           .text
  .globl main
10
11
           .type
                    main, @function
12 main:
           pushq
                    %rbp
           movq
                    %rsp, %rbp
14
           subq
                    $16, %rsp
                    $.LC0, -16(%rbp)
           movq
16
           jmp
                    .L2
17
  .L3:
18
                    -16(%rbp), %rsi
           movq
19
           movl
                    $1, %edx
20
                    $1, %edi
           movl
21
                    write
           call
22
           addq
                    $1, -16(%rbp)
23
  .L2:
24
           movq
                    -16(%rbp), %rax
25
                    (%rax), %eax
           movzbl
26
27
           testb
                    %al, %al
```

```
jne
                    .L3
28
           leag
                    -1(%rbp), %rsi
                                       # place to store user response
29
                    $1, %edx
           movl
           movl
                    $0, %edi
31
           call
                    read
32
           movzbl
                    -1(%rbp), %eax
                                       # get user response
33
                                       \# response == 'y' ?
           cmpb
                    $121, %al
34
                                       # no, go to else part
           jne
                    . L4
35
           movq
                    $.LC1, -16(%rbp) # yes, write "Changes saved.\n"
                    .L5
           jmp
37
  .L6:
38
                    -16(%rbp), %rsi
           movq
39
           movl
                    $1, %edx
40
           movl
                    $1, %edi
41
42
           call
                    write
           addq
                    $1, -16(%rbp)
43
  .L5:
44
                    -16(%rbp), %rax
           movq
45
           movzbl
                    (%rax), %eax
46
                    %al, %al
47
           testb
           ine
                    .L6
48
                    .L7
                                       # jump around else part
           jmp
49
  .L4:
                                       # else part,
50
                    $.LC2, -16(%rbp) # write "Changes discarded.\n"
           movq
51
                    .L8
           jmp
52
  .L9:
           movq
                    -16(%rbp), %rsi
54
                    $1, %edx
           movl
55
                    $1, %edi
           movl
56
           call
                    write
57
           addq
                    $1, -16(%rbp)
  .L8:
59
           movq
                    -16(%rbp), %rax
60
           movzbl
                    (%rax), %eax
61
           testb
                    %al, %al
           ine
                    .L9
63
                                       # after if-else statement
  .L7:
64
           movl
                    $0, %eax
65
           leave
           ret
67
           .size
                    main, .-main
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
69
           .section
                             .note.GNU-stack,"",@progbits
```

Listing 10.8: Get yes/no response from user (gcc assembly language).

The general structure of an if-else construct is shown in Listing 10.9.

```
1 # generalIf-else.s
    general structure of an if-else (not a program)
3 #
4 #
       if (response == 'y')
5 #
       {
6 #
            then part
7 #
       }
       else
8 #
9 #
       {
10 #
            else part
```

```
11 #
       }
12 #
  # Bob Plantz - 10 June 2009
14
                   $'y', response(%rbp) # check conditions
15
           jne
                   noChange
                                     # false, go to else part
16
17
     # "then" part processing
18
           jmp
                   allDone
                                     # go to end of if-else
20
21 noChange:
     # "else" part processing
25 allDone:
     # next programming construct
```

Listing 10.9: General structure of an if-else construct. Don't forget the "jmp" at the end of the "then" block (line 20).

This is not a complete program or even a function. It simply shows the key elements of an if-else construct.

Our assembly language version of the yes/no program in Listing 10.10 follows this general pattern. It, of course, uses more meaningful labels than what the compiler generated.

```
1 # yesNo2.s
2 # Prompts user to enter a y/n response.
3 # Bob Plantz - 12 June 2009
5 # Useful constants
                   STDIN, 0
           .equ
                   STDOUT, 1
           .equ
  # Stack frame
           .equ
                   response, -1
           .equ
                   ptr, -16
10
                   localSize,-16
11
           .equ
  # Read only data
12
           .section
                     .rodata
  queryMsg:
14
           .string "Save changes? "
16 saveMsq:
           .string "Changes saved.\n"
18 discardMsq:
           .string "Changes discarded.\n"
20 # Code
           .text
21
           .globl
                   main
22
           .type
                   main, @function
24 main:
                                     # save base pointer
          pushq
                   %rbp
          movq
                                     # establish our base pointer
                   %rsp, %rbp
26
          addq
                   $localSize, %rsp # for local vars.
          pushq
                   %rbx
                                     # save for caller
          movl
                   $queryMsg, %esi
30
          movl
                   %esi, ptr(%rbp) # point to query message
31
32 queryLoop:
                   ptr(%rbp), %esi # current char in string
```

```
cmpb
                   $0, (%esi)
                                # null character?
34
                   qetResp
                                # yes, get user response
           jе
35
           movl
                   $1, %edx
                                # one character
37
           movl
                   $STDOUT, %edi # standard out
           call
                   write
                                # invoke write function
39
           incl
                   ptr(%rbp)
                                # ptr++;
41
           jmp
                   queryLoop
                                # back to top
43
  getResp:
44
                   $1, %edx
                                     # read one byte
           movl
45
           leag
                   response(%rbp), %rsi # into this location
46
                   $STDIN, %edi
                                     # from keyboard
           movl
47
48
           call
                   read
49 # if (response == 'y')
           cmpb
                   $'y', response(%rbp) # was it 'y'?
50
           jne
                                     # no, there is no change
                   noChange
51
52
  # then print the "save" message
           movl
                   $saveMsg, %esi
54
                   %esi, ptr(%rbp) # point to message
           movl
55
56 saveLoop:
                   ptr(%rbp), %esi # current char in string
           movl
57
                                # null character?
           damo
                   $0, (%esi)
58
          jе
                   saveEnd
                                # yes, leave while loop
60
           movl
                   $1, %edx
                                # one character
61
           movl
                   $STDOUT, %edi # standard out
62
           call
                   write
                                # invoke write function
63
           incl
                   ptr(%rbp) # ptr++;
65
           jmp
                   saveLoop
                               # back to top
66
68 saveEnd:
                   allDone
                                     # go to end of if-else
           jmp
69
71 # else print the "discard" message
72 noChange:
                   $discardMsg, %esi
           movl
73
           movl
                   %esi, ptr(%rbp) # point to message
74
75 discardLoop:
                   ptr(%rbp), %esi # current char in string
76
           movl
           cmpb
                   $0, (%esi) # null character?
77
           jе
                   allDone
                                # yes, leave while loop
78
79
                                # one character
           movl
                   $1, %edx
80
           movl
                   $STDOUT, %edi # standard out
81
           call
                   write
                                 # invoke write function
82
           incl
                   ptr(%rbp)
                                # ptr++;
84
                   discardLoop
85
           jmp
                                 # back to top
87 allDone:
           movl
                   $0, %eax
                                     # return 0;
88
                                     # restore reg.
                   %rbx
89
           popq
```

```
movq %rbp, %rsp # restore stack pointer
popq %rbp # restore for caller
ret
```

Listing 10.10: Get yes/no response from user (programmer assembly language).

The exit from the while loop on line 59

```
je saveEnd # yes, leave while loop
```

jumps to the end of the "then" block of the if-else statement, which then jumps to the end of the entire if-else statement:

```
68 saveEnd:
69 jmp allDone # go to end of if-else
```

In this particular program we could gain some efficiency by using

```
je allDone # yes, program done
```

on line 59. But this very slight efficiency gain comes at the expense of good software engineering. In general, there could be more processing to do after the while loop in the "then" block of the if-else statement. The real danger here is that additional processing will be added during the program's maintenance phase and the programmer will forget to change the structure. Good, easy to read structure is almost always better than execution efficiency.

Another common programming problem is to check to see if a variable is within a certain range. This requires a compound boolean expression, as shown in the C program in Listing 10.11.

```
1 /*
   * range1.c
   * Checks to see if a character entered by user is a numeral.
   * Bob Plantz - 12 June 2009
  #include <unistd.h>
  int main()
10
  {
11
      char response; // For user's response
      char* ptr;
                       // For text messages
12
13
      ptr = "Enter single character: ";
14
      while (*ptr != '\0')
15
16
           write(STDOUT_FILENO, ptr, 1);
17
           ptr++;
18
      }
19
20
      read(STDIN_FILENO, &response, 1);
21
22
      if ((response <= '9') && (response >= '0'))
23
24
           ptr = "You entered a numeral.\n";
25
           while (*ptr != '\0')
26
27
               write(STDOUT_FILENO, ptr, 1);
28
               ptr++;
29
           }
30
      }
31
      else
```

```
{
33
           ptr = "You entered some other character.\n";
34
           while (*ptr != '\0')
35
           {
36
                write(STDOUT_FILENO, ptr, 1);
37
                ptr++;
38
           }
39
       }
40
       return 0;
41
42 }
```

Listing 10.11: Compound boolean expression in an if-else construct (C).

Each condition of the boolean expression generally requires a separate comparison/conditional jump pair. The best way to see this is to study the compiler-generated assembly language code of the numeral checking program in Listing 10.12.

```
.file
                    "range1.c"
           .section
                             .rodata
  .LC0:
3
           .string "Enter single character: "
  .LC1:
5
           .string "You entered a numeral.\n"
           .align 8
7
  .LC2:
           .string "You entered some other character.\n"
           .text
  .globl main
11
                    main, @function
           .type
13 main:
                    %rbp
14
           pushq
           movq
                    %rsp, %rbp
15
           subq
                    $16, %rsp
16
           movq
                    $.LCO, -16(%rbp)
17
           jmp
                    .L2
18
  .L3:
19
           movq
                    -16(%rbp), %rsi
20
           movl
                    $1, %edx
21
                    $1, %edi
           movl
22
           call
                    write
23
           addq
                    $1, -16(%rbp)
24
25
  .L2:
           movq
                    -16(%rbp), %rax
26
                    (%rax), %eax
           movzbl
27
           testb
                    %al, %al
28
                    .L3
           jne
                    -1(%rbp), %rsi
           leag
30
           movl
                    $1, %edx
31
           movl
                    $0, %edi
32
           call
                    read
33
           movzbl
                    -1(%rbp), %eax
                                       # load numeral character
34
                                       # is numeral > '9'?
           cmpb
                    $57, %al
35
                    .L4
           jg
                                       # yes, go to else part
36
           movzbl
                    -1(%rbp), %eax
                                       # load numeral character
37
           cmpb
                    $47, %al
                                       # is numeral <= '/'?
38
           jle
                    .L4
                                       # yes, go to else part
39
                    $.LC1, -16(%rbp) # "then" part
           movq
40
41
           jmp
                    .L5
```

```
.L6:
                     -16(%rbp), %rsi
           movq
43
           movl
                     $1, %edx
           movl
                     $1, %edi
45
           call
                    write
           addq
                     $1, -16(%rbp)
47
  .L5:
                     -16(%rbp), %rax
           movq
49
           movzbl
                     (%rax), %eax
50
           testb
                     %al, %al
51
           jne
                     .L6
52
                     .L7
                                        # skip over "else" part
           jmp
53
  .L4:
                                        # "else" part
54
                     $.LC2, -16(%rbp)
55
           movq
56
           jmp
                     .L8
  .L9:
57
                     -16(%rbp), %rsi
           movq
58
                     $1, %edx
           movl
59
                     $1, %edi
           movl
60
61
           call
                    write
           addq
                     $1, -16(%rbp)
62
  .L8:
63
           movq
                     -16(%rbp), %rax
64
                     (%rax), %eax
           movzbl
           testb
                     %al. %al
66
67
           jne
                     .L9
  .L7:
                                        # end of if-else construct
68
           movl
                     $0, %eax
69
           leave
70
           ret
71
            .size
72
                    main, .-main
73
            .ident
                     "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
            .section
                              .note.GNU-stack, "",@progbits
```

Listing 10.12: Compound boolean expression in an if-else construct (gcc assembly language).

In particular, notice that the decision regarding whether the character entered by the user is a numeral or not is made on the lines:

```
movzbl
                   -9(%rbp), %eax
                                     # load numeral character
          cmpb
                   $57, %al
                                     # is numeral > '9'?
35
                   . L5
                                     # yes, go to else part
36
          jg
                   -9(%rbp), %eax
                                     # load numeral character
          movzbl
37
          cmpb
                   $47, %al
                                     # is numeral <= '/'?
38
                   .L5
          jle
                                     # yes, go to else part
39
                   $.LC1, -8(%rbp) # "then" part
```

Consulting Table 2.3 on page 20 we see that the program first compares the character entered by the user with the ascii code for the numeral "9" ($57_{10}=39_{16}$). If the character is numerically greater, the program jumps to .L5, which is the beginning of the "else" part. Then the character is compared to the ASCII code for the character "/", which is numerically one less that the ascii code for the numeral "0" ($48_{10}=30_{16}$). If the character is numerically equal to or less than, the program also jumps to .L5.

If neither of these conditions causes a jump to the "else" part, the program simply continues on to execute the "then" part. At the end of the "then" part, the program skips over the "else" part to the end of the program:

```
jmp .L11 # skip over "else" part .L5: # "else" part
```

10.2.1 Short-Circuit Evaluation

Consider the boolean expression use for the if-else conditional:

```
if ((response <= '9') && (response >= '0')) {
On lines 35 and 36 in the assembly language,

cmpb $57, %al # is numeral > '9'?

jg .L5 # yes, go to else part
```

we see that the test for '0' is never made if (response <= '9') is false.

This is called *short-circuit evaluation* in C/C++. When connecting boolean tests with the && and || operators, each the boolean tests is each performed. If the overall result of the expression — true or false — is known before all the tests are made, the remaining tests are not executed. This is one of the most important reasons for not writing boolean expressions that include side effects; the operation that produces a needed side effect may never get executed.

10.2.2 Conditional Move

Many binary decisions are very simple. For example, the decision in Listing 10.7 could be written:

```
ptr = "Changes discarded.\n";
if (response == 'y')
{
    ptr = "Changes saved.\n";
}
while (*ptr != '\0')
{
    write(STDOUT_FILENO, ptr, 1);
    ptr++;
}
```

This code segment assigns an address to the ptr variable. If the condition, response == 'y', is true, then the address in the ptr variable is written over with another address. This could be written in assembly language (see Listing 10.10) as:

```
$discardMsg, %esi
        movl
# if (response == 'y')
                $'y', response(%rbp) # was it 'y'?
        cmpb
                noChange
                                # no, there is no change
        jne
                $saveMsq, %esi # yes, get other message
        movl
noChange:
        movl
                %esi, ptr(%rbp) # point to message
msgLoop:
                ptr(%rbp), %esi # current char in string
        movl
        damo
                $0, (%esi)
                            # null character?
                            # yes, leave while loop
        jе
                allDone
                            # one character
        mov1
                $1, %edx
        movl
                $STDOUT, %edi # standard out
                            # invoke write function
        call
                write
        incl
                ptr(%rbp)
                             # ptr++;
        imp
                msgLoop
                            # back to top
```

The x86-64 architecture provides a *conditional move* instruction, cmov*cc*, for simple if constructs like this. The general format is

where cc is a 1-4 letter sequence specifying the settings of the condition codes. Similar to the conditional jump instructions, the conditional data move takes place if the status flag settings are true, and does not if they are false.

Possible letter sequences are the same as for the conditional jump instructions listed in Table 10.1 on page 211. The source operand can be either a register or a memory location, and the destination must be a register. Unlike other data movement instructions, the cmovcc instruction does not use the operand size suffix; the size is implicitly specified by the size of the destination register.

The conditional move instruction would allow the above assembly language to be written with a cmove instruction, where the "e" means "equal" (see Table 10.1).

```
$discardMsq, %esi # load addresses of
        movl
        movl
                $saveMsq, %edi
                                       both messages
# if (response == 'y')
                $'y', response(%rbp) # was it 'y'?
        cmpb
                                 # yes, "save" message
        cmove
                %edi, %esi
        movl
                %esi, ptr(%rbp) # point to message
msgLoop:
        movl
                ptr(%rbp), %esi # current char in string
                $0, (%esi) # null character?
        cmpb
        jе
                allDone
                             # yes, leave while loop
        movl
                $1, %edx
                             # one character
        movl
                $STDOUT, %edi # standard out
        call
                write
                             # invoke write function
        incl
                ptr(%rbp)
                             # ptr++;
        jmp
                msqLoop
                             # back to top
```

Although this actually increases the average number of instructions executed, it allows the CPU to make more efficient use of the pipeline. So a conditional move may provide faster program execution by eliminating possible pipeline inefficiencies caused by a conditional jump. See for example [28], [31], and [34].

10.3 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

10.3.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmovcc	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movs <i>ss</i>	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic/logic:

opcode	source	destination	action	see page:
add s	\$imm/%reg	%reg/mem	add	189
adds	mem	%reg	add	189
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
dec <i>s</i>	%reg/mem		decrement	220
incs	%reg/mem		increment	220
lea w	mem	%reg	load effective address	167
subs	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210

s = b, w, l, q; w = l, q

$program\ flow\ control:$

opcode	location	action	see page:
call	label	call function	156
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
j <i>cc</i>	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

cc =condition codes

10.4. EXERCISES 233

10.3.2 Addressing Modes

1	mi 1 · 1 · 1 · 1 · ODII · ·		
register direct:	S S		
	<i>syntax</i> : name of the register with a "%" prefix.		
	example: movl %eax, %ebx		
immediate	The data value is located immediately after the instruc-		
data:	tion. Source operand only.		
	syntax: data value with a "\$" prefix.		
	example: movl \$0xabcd1234, %ebx		
base register	The data value is located in memory. The address of the		
plus offset:	memory location is the sum of a value in a base register		
	plus an offset value.		
	<i>syntax</i> : use the name of the register with parentheses		
	around the name and the offset value immediately be-		
	fore the left parenthesis.		
	example: movl \$0xaabbccdd, 12(%eax)		
rip-relative:	The target is a memory address determined by adding		
	an offset to the current address in the rip register.		
	syntax: a programmer-defined label		
	example: je somePlace		

10.4 Exercises

- **10-1** (§10.1) Verify on paper that the machine instructions in Table 10.4 actually cause a jump of the number of bytes shown (in decimal) when the jump is taken.
- **10-2** (§10.1) Enter the program in Listing 10.2 and verify that the jump to here1 uses the riprelative addressing mode, and the other two jumps use the direct address. Hint: Produce a listing file for the program and use qdb to examine register and memory contents.
- 10-3 (§10.1) Enter the program in Listing 10.5, changing the while loop to use eax as a pointer:

```
movl
                $theString, %eax
whileLoop:
        cmpb
                $0, (%eax) # null character?
        jе
                allDone
                             # ves. all done
        movl
                $1, %edx
                             # one character
                %eax, %esi # current pointer
        movl
        movl
                $STDOUT, %edi # standard out
        call
                write
                             # invoke write function
        incl
                            # aString++;
                %eax
                whileLoop
                             # back to top
        jmp
```

This would seem to be more efficient than reading the pointer from memory each time through the loop. Use gdb to debug the program. Set a break point at the call instruction and another break point at the incl instruction. Inspect the registers each time the program breaks into gdb. What is happening to the value in eax? Hint: Read what the "man 2 write" shell command has to say about the write system call function. This exercise points out the necessity of understanding what happens to registers when calling another function. In general, it is safer to use local variables in the stack frame.

10-4 (§10.1) Assume that you do not know how many numerals there are, only that the first one is '0' and the last one is '9' (the character "0" and character "9"). Write a program in assembly language that displays all the numerals, 0 – 9, on the screen, one character at a time. Use only one byte in the .data segment for storing a character; do not allocate a separate byte for each numeral.

- 10-5 ($\S10.1$) Assume that you do not know how many upper case letters there are, only that the first one is 'A' and the last one is 'Z'. Write a program in assembly language that displays all the upper case letters, A-Z, on the screen, one character at a time. Use only one byte in the .data segment for storing a character; do not allocate a separate byte for each numeral.
- **10-6** (§10.1) Assume that you do not know how many lower case letters there are, only that the first one is 'a' and the last one is 'z'. Write a program in assembly language that displays all the lower case letters, a z, on the screen, one character at a time. Use only one byte in the .data segment for storing a character; do not allocate a separate byte for each numeral.
- **10-7** (§10.1) Enter the following C program and use the "-S" option to generate the assembly language:

```
1 /*
   * forLoop.c
   * For loop multiplication.
   * Bob Plantz - 21 June 2009
  #include<stdio.h>
10 int main ()
  {
11
      int x, y, z;
12
13
      int 1;
14
      printf("Enter two integers: ");
15
      scanf("%i %i", &x, &y);
16
      z = x;
17
      for (i = 1; i < y; i++)
18
           z += x;
19
20
      printf("%i * %i = %i\n", x, y, z);
21
      return 0;
22
23 }
```

Listing 10.13: Simple for loop to perform multiplication.

Identify the loop that performs the actual multiplication. Write an equivalent C program that uses a while loop instead of the for loop, and also generate the assembly language for it. Do the loops differ? If so, how?

- **10-8** (§10.2) Enter the C program in Listing 10.7 and get it to work. Do you see any odd behavior when the program terminates? Can you fix it? Hint: When the program prompts the user, how many keys did you press? What was the second key press?
- **10-9** (§10.2) Enter the program in Listing 10.10 and get it to work.
- **10-10** (§10.2) Write a program in assembly language that displays all the printable characters that are neither numerals nor letters on the screen, one character at a time. Don't forget that the space character, '', is printable. Do not display the DEL character. Use only one byte for storing a character; do not allocate a separate byte for each character.

Use only one while loop in this program. You will need an if-else construct with a compound boolean conditional statement.

10.4. EXERCISES 235

10-11 (§10.2) Write a program in assembly language that

- a) prompts the user to enter a text string,
- b) reads the user's input into a char array,
- c) echoes the user's input string,
- d) increments each character in the string to the next character in the ASCII sequence, with the last printable character "wrapping around" to the first printable character, and
- e) displays the modified string.

10-12 (§10.2) Write a program in assembly language that

- a) prompts the user to enter a text string,
- b) reads the user's input into a char array,
- c) echoes the user's input string,
- d) decrements each character in the string to the previous character in the ASCII sequence, with the first printable character "wrapping around" to the last printable character, and
- e) displays the modified string.

10-13 (§10.2) Write a program in assembly language that

- a) instructs the user,
- b) prompts the user to enter a character,
- c) reads the user's input into a char variable,
- d) if the user enters a 'q', the program terminates,
- e) if the user enters a numeral, the program echoes the numeral the number of times represented by the numeral plus one, and
- f) any other printable character is echoed just once.

The program continues to run until the user enters a 'q'.

For example, a run of the program might look like (user input is **boldface**):

```
A single numeral, N, is echoed N+1 times, other characters are echoed once.
'q' ends program.
Enter a single character: a
You entered: a
Enter a single character: Z
You entered: Z
Enter a single character: 5
You entered: 5
Enter a single character: %
You entered: %
Enter a single character: q
End of program.
```

Chapter 11

Writing Your Own Functions

Good software engineering practice generally includes breaking problems down into functionally distinct subproblems. This leads to software solutions with many functions, each of which solves a subproblem. This "divide and conquer" approach has some distinct advantages:

- It is easier to solve a small subproblem.
- Previous solutions to subproblems are often reusable.
- Several people can be working on different parts of the overall problems simultaneously.

The main disadvantage of breaking a problem down like this is coordinating the many subsolutions so that they work together correctly to provide a correct overall solution. In software, this translates to making sure that the interface between a calling function and a called function works correctly. In order to ensure correct operation of the interface, it must be specified in a very explicit way.

In Chapter 8 you learned how to pass arguments into a function and call it. In this chapter you will learn how to use these arguments inside the called function.

11.1 Overview of Passing Arguments

Be careful to distinguish data input/output to/from a called function from user input/output. User input typically comes from an input device (keyboard, mouse, etc.) and user output is typically sent to an output device (screen, printer, speaker, etc.).

Functions can interact with the data in other parts of the program in three ways:

- 1. **Input**. The data comes from another part of the program and is used by the function, but is not modified by it.
- 2. **Output**. The function provides new data to another part of the program.
- 3. **Update**. The function modifies a data item that is held by another part of the program. The new value is based on the value before the function was called.

All three interactions can be performed if the called function also knows the location of the data item. This can be done by the calling function passing the address to the called function or by making the address globally known to both functions. Updates require that the address be known by the called function.

Outputs can also be implemented by placing the new data item in a location that is accessible to both the called and the calling function. In C/C++ this is done by placing the return value from a function in the eax register. And inputs can be implemented by passing a copy of the data item to the called function. In both of these cases the called function does not know the location of the original data item, and thus does not have access to it.

In addition to global data, C syntax allows three ways for functions to exchange data:

- **Pass by value** an input value is passed by making a copy of it available to the function.
- **Return value** an output value can be returned to the calling function.
- Pass by pointer an output value can be stored for the calling function by passing the
 address where the output value should be stored to the called function. This can also be
 used to update a data item.

The last method, pass by pointer, can also be used to pass large inputs, or to pass inputs that should be changed — also called updates. It is also the method by which C++ implements pass by reference.

When one function calls another, the information that is required to provide the interface between the two is called an *activation record*. Since both the registers and the call stack are common to all the functions within a program, both the calling function and the called function have access to them. So arguments can be passed either in registers or on the call stack. Of course, the called function must know *exactly* where each of the arguments is located when program flow transfers to it.

In principle, the locations of arguments need only be consistent within a program. As long as all the programmers working on the program observe the same rules, everything should work. However, designing a good set of rules for any real-world project is a very time-consuming process. Fortunately, the ABI [25] for the x86-64 architecture specifies a good set of rules. They rules are very tedious because they are meant to cover all possible situations. In this book we will consider only the simpler rules in order to get an overall picture of how this works.

In 64-bit mode six of the general purpose registers and a portion of the call stack are used for the activation record. The area of the stack used for the activation record is called a *stack frame*. Within any function, the stack frame contains the following information:

- Arguments (in excess of six) passed from the calling function.
- The return address back to the calling function.
- The calling function's frame pointer.
- Local variables for the current function.

and often includes:

- Copies of arguments passed in registers.
- Copies of values in the registers that must be preserved by a function rbx, r12 r15.

Some general memory usage rules (64-bit mode) are:

- Each argument is passed within an 8-byte unit. For example, passing three char values requires three registers. This 8-byte rule also applies to arguments passed on the stack.
- Local variables can be allocated to take up only the amount of memory they require. For example, three char values can be accommodated in a three-byte memory area.
- The address in the frame pointer (rbp register) must always be a multiple of sixteen. It should never be changed within a function, except during the prologue and epilogue.
- The address in the stack pointer (rsp register) must always be a multiple of sixteen before transferring program flow to another function.

We can see how this works by studying the program in Listing 11.1.

```
1 /*
2 * addProg.c
3 * Adds two integers
4 * Bob Plantz - 13 June 2009
5 */
```

```
7 #include <stdio.h>
8 #include "sumInts1.h"
int main(void)
      int x, y, z;
12
      int overflow;
13
14
      printf("Enter two integers: ");
      scanf("%i %i", &x, &y);
16
      overflow = sumInts(x, y, \&z);
17
      printf("%i + %i = %i\n", x, y, z);
      if (overflow)
19
          printf("*** Overflow occurred ***\n");
20
21
      return 0;
22
23 }
1 /*
  * sumInts1.h
  * Returns N + (N-1) + ... + 1
   * Bob Plantz - 4 Junee 2008
   */
7 #ifndef SUMINTS1_H
8 #define SUMINTS1_H
9 int sumInts(int, int, int *);
10 #endif
1 /*
2 * sumInts1.c
  * Adds two integers and outputs their sum.
  * Returns 0 if no overflow, else returns 1.
   * Bob Plantz - 13 June 2009
8 #include "sumInts1.h"
int sumInts(int a, int b, int *sum)
11 {
      int overflow = 0; // assume no overflow
12
13
      *sum = a + b;
14
15
      if (((a > 0) \&\& (b > 0) \&\& (*sum < 0)) ||
16
               ((a < 0) \&\& (b < 0) \&\& (*sum > 0)))
17
18
           overflow = 1;
19
      return overflow;
21
22 }
```

Listing 11.1: Passing arguments to a function (C). (There are three files here.)

The compiler-generated assembly language for the sumInts function is shown in Listing 11.2 with comments added.

```
.file
                    "sumInts1.c"
           .text
  .globl sumInts
           .type
                    sumInts, @function
5 sumInts:
           pushq
                    %rbp
           movq
                    %rsp, %rbp
                    %edi, -20(%rbp)
           movl
                                        # save a
                    %esi, -24(%rbp)
                                        # save b
           movl
                    %rdx, -32(%rbp)
                                        # save pointer to sum
           movq
                    $0, -4(%rbp)
           movl
                                        # overflow = 0;
11
                    -24(%rbp), %edx
                                        # load b
           movl
12
           movl
                    -20(%rbp), %eax
                                        # load a
13
14
           leal
                    (\$rax,\$rdx), \$edx # b += a
           movq
                    -32(%rbp), %rax
                                        # load address of sum
15
           movl
                    %edx, (%rax)
                                        \# *sum = b
16
           cmpl
                    $0, -20(%rbp)
17
           jle
                    .L2
18
                    $0, -24(%rbp)
           cmpl
           jle
                    .L2
20
           movq
                    -32(%rbp), %rax
21
                    (%rax), %eax
           movl
22
           testl
                    %eax, %eax
23
                    .L3
           js
24
  .L2:
25
           cmpl
                    $0, -20(%rbp)
26
           jns
                    .L4
27
                    $0, -24(%rbp)
           cmpl
28
           jns
                    .L4
29
                    -32(%rbp), %rax
           movq
30
           movl
                    (%rax), %eax
31
                    %eax, %eax
           testl
32
           jle
                    .L4
33
  .L3:
34
           movl
                    $1, -4(%rbp)
35
  .L4:
36
           movl
                    -4(%rbp), %eax
                                       # return overflow;
37
           leave
38
           ret
39
                    sumInts, .-sumInts
           .size
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
41
                             .note.GNU-stack,"",@progbits
           .section
```

Listing 11.2: Accessing arguments in the sumInts function from Listing 11.1 (gcc assembly language).

As we go through this description, it is very easy to confuse the *frame pointer* (rbp register) and the *stack pointer* (rsp register). They each are used to access different areas of the stack.

- The *frame pointer* (rbp register) remains unchanged. It is used to access the area of the stack that *belongs to the current function*, including local variables and arguments passed into the current function.
- The *stack pointer* (rsp register) can be changed. It is used to *create a new stack frame* for a function about to be called, including storing the return address and passing arguments beyond the first six.

After saving the caller's frame pointer and establishing its own frame pointer, this function stores the argument values in the local variable area:

```
5 sumInts:
                   %rbp
          pushq
          movq
                   %rsp, %rbp
          movl
                   %edi, -20(%rbp) # save a
          movl
                   %esi, -24(%rbp) # save b
                   %rdx, -32(%rbp) # save pointer to sum
          mova
10
                   $0, -4(%rbp)
                                     # overflow = 0;
          movl
11
```

The arguments are in the following registers (see Table 8.2, page 157):

- a is in edi.
- b is in esi.
- The pointer to sum is in rdx.

Storing them in the local variable area frees up the registers so they can be used in this function. Although this is not very efficient, the compiler does not need to work very hard to optimize register usage within the function. The only local variable, overflow, is initialized on line 11.

The observant reader will note that no memory has been allocated on the stack for local variables or saving the arguments. The ABI [25] defines the 128 bytes beyond the stack pointer—that is, the 128 bytes at addresses lower than the one in the rsp register—as a red zone. The operating system is not allowed to use this area, so the function can use it for temporary storage of values that do not need to be saved when another function is called. In particular, leaf functions can store local variables in this area without moving the stack pointer because they do not call other functions.

Notice that both the argument save area and the local variable area are aligned on 16-byte address boundaries. Figure 11.1 provides a pictorial view of where the three arguments and the local variable are in the red zone.

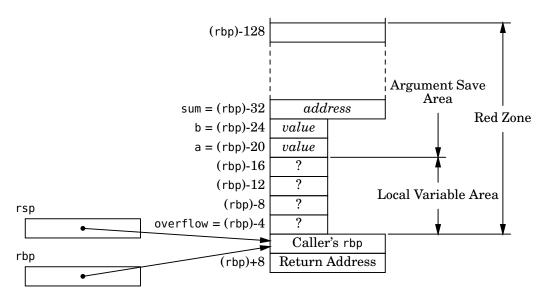


Figure 11.1: Arguments and local variables in the stack frame, sumInts function. The two input values and the address for the output are passed in registers, then stored in the Argument Save Area by the called function. Since this is a leaf function, the Red Zone is used for this function's stack frame.

As you know, some functions take a variable number of arguments. In these functions, the ABI [25] specifies the relative offsets of the register save area. The offsets are shown in Table 11.1.

Register	\mathbf{Offset}
rdi	0
rsi	8
rdx	16
rcx	24
r8	$\bf 32$
r9	40
×mm0	48
×mm1	64
×mm15	288

Table 11.1: Argument register save area in stack frame. These relative offsets should be used in functions with a variable number of arguments.

One of the problems with the C version of sumInts is that it requires a separate check for overflow:

```
16 sumInts:

17 if (((a > 0) \&\& (b > 0) \&\& (*sum < 0)) ||

18 ((a < 0) \&\& (b < 0) \&\& (*sum > 0)))

19 {

20 overflow = 1;

21 }
```

Writing the function in assembly language allows us to directly check the overflow flag, as shown in Listing 11.3.

```
1 # sumInts.s
2 # Adds two 32-bit integers. Returns 0 if no overflow
3 # else returns 1
```

```
4 # Bob Plantz - 13 June 2009
    Calling sequence:
           rdx <- address of output
           esi <- 1st int to be added
           edi <- 2nd int to be added
           call
                   sumInts
           returns 0 if no overflow, else returns 1
11 # Read only data
           .section
                    .rodata
13 overflow:
           .word
                   1
15 # Code
           .text
16
           .globl sumInts
17
                  sumInts, @function
           .type
18
  sumInts:
19
                                 # save caller's frame pointer
           pushq
                   %rbp
20
                                 # establish our frame pointer
           movq
                   %rsp, %rbp
21
22
           movl
                   $0. %eax
                                 # assume no overflow
           addl
                   %edi, %esi
                                 # add values
24
                   overflow, %eax # overflow occurred
           cmovo
25
           movl
                   %esi, (%rdx) # output sum
26
                                 # restore stack pointer
28
           mova
                   %rbp. %rsp
           popq
                   %rbp
                                 # restore caller's frame pointer
           ret
```

Listing 11.3: Accessing arguments in the sumInts function from Listing 11.1 (programmer assembly language)

The code to perform the addition and overflow check is much simpler.

```
movl $0, %eax # assume no overflow
addl %edi, %esi # add values
cmovo overflow, %eax # overflow occurred
movl %esi, (%rdx) # output sum
```

The body of the function begins by assuming there will not be overflow, so 0 is stored in eax, ready to be the return value. The value of the first argument is added to the second, because the programmer realizes that the values in the argument registers do not need to be saved. If this addition produces overflow, the cmovo instruction changes the return value to 1. Finally, in either case the sum is stored at the memory location whose address was passed to the function as the third argument.

11.2 More Than Six Arguments, 64-Bit Mode

When a calling function needs to pass more than six arguments to another function, the additional arguments beyond the first six are passed on the call stack. They are effectively pushed onto the stack in eight-byte chunks before the call. The order of pushing is from right to left in the C argument list. (As you will see shortly the compiler actually uses a more efficient method than pushes.) Since these arguments are on the call stack, they are within the called function's stack frame, so the called function can access them.

Consider the program in Listing 11.4.

```
1 /*
2 * nineInts1.c
3 * Declares and adds nine integers.
```

```
* Bob Plantz - 13 June 2009
  */
6 #include <stdio.h>
7 #include "sumNine1.h"
9 int main(void)
      int total;
11
      int a = 1;
      int b = 2;
      int c = 3;
      int d = 4;
      int e = 5;
      int f = 6;
17
18
      int g = 7;
      int h = 8;
19
      int i = 9;
20
21
      total = sumNine(a, b, c, d, e, f, g, h, i);
22
      printf("The sum is %i\n", total);
      return 0;
24
25 }
1 /*
  * sumNine1.h
  * Computes sum of nine integers.
  * Bob Plantz - 13 June 2009
6 #ifndef SUMNINE_H
7 #define SUMNINE_H
  int sumNine(int one, int two, int three, int four, int five,
             int six, int seven, int eight, int nine);
10 #endif
1 /*
  * sumNine1.c
   * Computes sum of nine integers.
   * Bob Plantz - 13 June 2009
6 #include <stdio.h>
7 #include "sumNine1.h"
9 int sumNine(int one, int two, int three, int four, int five,
             int six, int seven, int eight, int nine)
11 {
      int x;
12
13
      x = one + two + three + four + five + six
              + seven + eight + nine;
      printf("sumNine done.\n");
      return x;
17
18 }
```

Listing 11.4: Passing more than six arguments to a function (C). (There are three files here.)

The assembly language generated by gcc from the program in Listing 11.4 is shown in Listing 11.5, with comments added to explain parts of the code.

```
.file
                    "nineInts1.c"
           .section
                             .rodata
  .LC0:
           .string "The sum is %i\n"
           .text
  .globl main
           .type
                    main, @function
7
  main:
           pushq
                    %rbp
           movq
                    %rsp, %rbp
10
           subq
                    $80, %rsp
11
           movl
                    $1, -8(%rbp)
12
                    $2, -12(%rbp)
           movl
13
                    $3, -16(%rbp)
           movl
           movl
                    $4, -20(%rbp)
15
                    $5, -24(%rbp)
           movl
                    $6, -28(%rbp)
           movl
17
                    $7, -32(%rbp)
           movl
18
           movl
                    $8, -36(%rbp)
19
                    $9, -40(%rbp)
           movl
20
                    -28(%rbp), %edx
                                        # load f into temp. reg.
           movl
21
                    -24(%rbp), %ecx
           movl
                                        # load e into temp. reg.
22
                                        # load d into temp. reg.
                    -20(%rbp), %esi
           movl
23
           movl
                    -16(%rbp), %edi
                                        # load c into temp. reg.
24
           movl
                    -12(%rbp), %r10d
                                        # load b into temp. reg.
25
           movl
                    -8(%rbp), %r11d
                                        # load a into temp. reg.
26
                                        # load i into temp. reg.
           movl
                    -40(%rbp), %eax
27
           movl
                    %eax, 16(%rsp)
                                        # put on stack, 9th arg.
28
           movl
                    -36(%rbp), %eax
                                        # load h into temp. reg.
29
                    %eax, 8(%rsp)
                                        # put on stack, 8th arg.
           movl
30
                    -32(%rbp), %eax
                                        # load g into temp. reg.
31
           movl
                                        # put on stack, 7th arg.
           movl
                    %eax, (%rsp)
32
                    %edx, %r9d
           movl
                                        # 6th arg. from temp. reg.
                    %ecx, %r8d
                                        # 5th arg. from temp. reg.
           movl
34
35
           movl
                    %esi, %ecx
                                        # 4th arg. from temp. reg.
                    %edi, %edx
           movl
                                        # 3rd arg. from temp. reg.
36
                    %r10d, %esi
           movl
                                        # 2nd arg. from temp. reg.
37
           movl
                    %rlld, %edi
                                        # 1st arg. from temp. reg.
38
           call
                    sumNine
39
           movl
                    %eax, -4(%rbp)
40
41
           movl
                    -4(%rbp), %esi
           movl
                    $.LC0, %edi
42
           movl
                    $0, %eax
43
           call
                    printf
44
           movl
                    $0, %eax
45
           leave
46
           ret
47
           .size
                    main, .-main
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
49
                             .note.GNU-stack, "",@progbits
           .section
50
           .file
                    "sumNine1.c"
           .section
                             .rodata
2
  .LC0:
3
           .string "sumNine done."
           .text
```

```
.globl sumNine
           .type
                    sumNine, @function
  sumNine:
                    %rbp
           pushq
           movq
                    %rsp, %rbp
10
                    $48, %rsp
           suba
11
                    %edi, -20(%rbp)
           movl
                                       # save one
           movl
                    %esi, -24(%rbp)
                                       # save two
13
           movl
                    %edx, -28(%rbp)
                                       # save three
                    %ecx, -32(%rbp)
                                       # save four
           movl
15
           movl
                    %r8d, -36(%rbp)
                                       # save five
16
                    %r9d, -40(%rbp)
                                       # save six
           movl
17
                    -24(%rbp), %edx
                                       # load two
           movl
18
                    -20(%rbp), %eax
                                       # load one, subtotal
19
           movl
                                       # add two
           addl
                    %edx, %eax
20
           [bba
                    -28(%rbp), %eax
                                       # add three
21
           addl
                                       # add four
                    -32(%rbp), %eax
22
           addl
                    -36(%rbp), %eax
                                       # add five
           addl
                    -40(%rbp), %eax
                                       # add six
24
           addl
                    16(%rbp), %eax
                                       # add seven
           addl
                    24(%rbp), %eax
                                       # add eight
26
                    32(%rbp), %eax
           addl
                                       # add nine
27
                    %eax, -4(%rbp)
           movl
                                       # x <- total
28
                    $.LC0, %edi
           movl
           call
                    puts
30
31
           movl
                    -4(%rbp), %eax
           leave
32
           ret
33
           .size
                    sumNine, .-sumNine
34
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
35
                             .note.GNU-stack, "", @progbits
36
           .section
```

Listing 11.5: Passing more than six arguments to a function (gcc assembly language). (There are two files here.)

Before main calls sumNine the values of the seventh, eighth, and ninth arguments, g-i, are moved to their appropriate locations on the call stack. Enough space was allocated at the beginning of the function to allow for these arguments. They are moved into their correct locations on lines 27-32:

```
movl
                   -40(%rbp), %eax
                                       # load i into temp. reg.
27
          movl
                   %eax, 16(%rsp)
                                       # put on stack, 9th arg.
28
          movl
                   -36(%rbp), %eax
                                       # load h into temp. reg.
29
                                       # put on stack, 8th arg.
          movl
                   %eax, 8(%rsp)
          movl
                   -32(%rbp), %eax
                                       # load g into temp. reg.
31
          movl
                   %eax, (%rsp)
                                       # put on stack, 7th arg.
```

The stack pointer, rsp, is used as the reference point for storing the arguments on the stack here because the main function is starting a new stack frame for the function it is about to call, sumNine. Then the first six arguments, a - f, are moved to the appropriate registers:

```
movl
                    %edx, %r9d
                                       # 6th arg. from temp. reg.
33
           movl
                    %ecx, %r8d
                                       # 5th arg. from temp. reg.
34
                    %esi, %ecx
           movl
                                       # 4th arg. from temp. reg.
35
                    %edi, %edx
           movl
                                       # 3rd arg. from temp. reg.
36
           movl
                    %r10d, %esi
                                       # 2nd arg. from temp. reg.
37
           movl
                    %rlld, %edi
                                       # 1st arg. from temp. reg.
38
```

When program control is transferred to the sumNine function, the partial stack frame appears as shown in Figure 11.2. Even though each argument is only four bytes (int), each is passed

in an 8-byte portion of stack memory. Compare this with passing arguments in registers; only one data item is passed per register even if the data item does not take up the entire eight bytes in the register. The return address is at the top of the stack, immediately followed by the

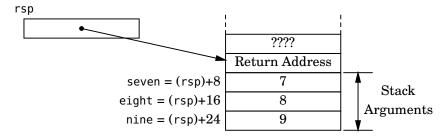


Figure 11.2: Arguments 7 – 9 are passed on the stack to the sumNine function. State of the stack when control is first transferred to this function.

three arguments (beyond the six passed in registers). Notice that each argument is in the same position on the stack as it would have been if it had been pushed onto the stack just before the call instruction. Since the address in the stack pointer (rsp) was 16-byte aligned before the call to this function, and the call instruction pushed the 8-byte return address onto the stack, the address in rsp is now 8-byte aligned.

The prologue of sumNine completes the stack frame. Then the function saves the register arguments in the register save area of the stack frame:

```
pushq
                    %rbp
10
           movq
                    %rsp, %rbp
           subq
                    $48, %rsp
11
           movl
                    %edi, -20(%rbp)
                                      # save one
12
           mov1
                    %esi, -24(%rbp)
                                      # save two
13
           movl
                    %edx, -28(%rbp)
                                      # save three
14
           mov1
                    %ecx, -32(%rbp)
                                      # save four
15
16
           movl
                    %r8d, -36(%rbp)
                                     # save five
           movl
                    %r9d, -40(%rbp) # save six
17
```

The state of the stack frame at this point is shown in Figure 11.3.

You may question why the compiler did not simply use the red zone. The sumNine function is not a leaf function. It calls another function, which may require use of the call stack. So space must be explicitly allocated on the call stack for local variables and the register argument save areas.

By the way, the compiler has replaced this function call, a call to printf, with a call to puts:

```
movl $.LC0, %edi
call puts
```

Since the only thing to be written to the screen is a text string, the puts function is equivalent. After the register arguments are safely stored in the argument save area, they can be easily summed and the total saved in the local variable:

```
movl
                   -24(%rbp), %edx # load two
          movl
                   -20(%rbp), %eax # load one, subtotal
19
          addl
                   %edx, %eax
                                     # add two
20
          addl
                   -28(%rbp), %eax
                                     # add three
21
          addl
                   -32(%rbp), %eax
                                     # add four
22
                                    # add five
          addl
                   -36(%rbp), %eax
23
          addl
                   -40(%rbp), %eax # add six
          addl
                   16(%rbp), %eax
                                     # add seven
25
          addl
                   24(%rbp), %eax
                                     # add eight
26
                   32(%rbp), %eax
          addl
                                     # add nine
27
          movl
                   %eax, -4(%rbp)
                                     # x <- total
28
```

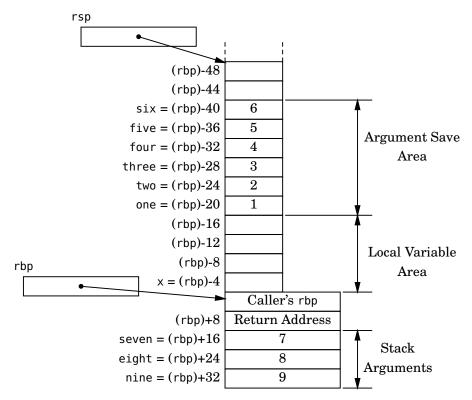


Figure 11.3: Arguments and local variables in the stack frame, sumNine function. The first six arguments are passed in registers but saved in the stack frame. Arguments beyond six are passed in the portion of the stack frame that is created by the calling function.

Notice that the seventh, eighth, and ninth arguments are accessed by *positive* offsets from the frame pointer, rbp. The were stored in the stack frame by the calling function. The called function "owns" the entire stack frame so it does not need to make additional copies of these arguments.

It is important to realize that once the stack frame has been completed within a function, that area of the call stack cannot be treated as a stack. That is, it cannot be accessed through pushes and pops. It must be treated as a record. (You will learn more about records in Section 13.2, page 296.)

If we were to recompile these functions with higher levels of optimization, many of these assembly language operations would be removed (see Exercise 11-2). But the point here is to examine the mechanisms that can be used to work with arguments and to write easily read code, so we study the unoptimized code.

A version of this program written in assembly language is shown in Listing 11.6.

```
1 # nineInts2.s
  # Demonstrate how integral arguments are passed in 64-bit mode.
    Bob Plantz - 13 June 2009
  # Stack frame
      passing arguments on stack (rsp)
        need \ 3x8 = 24 \ -> \ 32 \ bytes
           .equ
                   seventh,0
           . equ
                   eighth,8
           . equ
                   ninth,16
11 #
      local vars (rbp)
12 #
        need\ 10x4 = 40 -> 48\ bytes
           .equ
                   i,-4
```

```
h,-8
            .equ
14
                    g,-12
            .equ
15
            .equ
                    f,-16
                    e,-20
           .equ
17
            .equ
                    d,-24
18
                    c,-28
            .equ
19
                    b,-32
           .equ
20
                    a,-36
            .equ
21
            . equ
                    total,-40
            . equ
                    localSize,-80
23
24 # Read only data
           .section
                      .rodata
25
  format:
26
           .string "The sum is %i\n"
27
28 # Code
           .text
29
           .globl
                    main
30
           .type
                    main, @function
31
32 main:
           pushq
                    %rbp
                                         # save caller's base pointer
           movq
                    %rsp, %rbp
                                         # establish ours
34
                    $localSize, %rsp
                                         # space for local variables
           addq
35
                                         # + argument passing
36
                    $1, a(%rbp)
                                         # initialize local variables
           movl
                    $2, b(%rbp)
                                         # etc...
           movl
38
           movl
                    $3, c(%rbp)
                    $4, d(%rbp)
           movl
40
                    $5, e(%rbp)
           movl
41
           movl
                    $6, f(%rbp)
42
           movl
                    $7, q(%rbp)
43
           movl
                    $8, h(%rbp)
44
           movl
                    $9, i(%rbp)
45
46
           movl
                    f(%rbp), %edx
                                         # load f
47
                    e(%rbp), %ecx
           movl
                                         # ....
           movl
                    d(%rbp), %esi
49
           movl
                    c(%rbp), %edi
50
           movl
                    b(%rbp), %r10d
51
                    a(%rbp), %r11d
                                         # load a
           movl
52
53
                                           # load i
           movl
                    i(%rbp), %eax
54
                    %eax, ninth(%rsp)
                                               9th argument
           movl
                                           #
55
                    h(%rbp), %eax
                                           # load h
           movl
           movl
                    %eax, eighth(%rsp)
                                           #
                                               8th argument
57
                                           # load g
           movl
                    g(%rbp), %eax
58
           movl
                    %eax, seventh(%rsp) #
                                               7th argument
59
                                           # f is 6th
                    %edx, %r9d
           movl
60
           movl
                    %ecx, %r8d
                                           # e is 5th
61
           movl
                    %esi, %ecx
                                           # d is 4th
62
           movl
                    %edi, %edx
                                           # c is 3rd
63
                    %r10d, %esi
           movl
                                           # b is 2nd
64
                    %r11d, %edi
                                           # a is 1st
65
           movl
           call
                    sumNine
66
           movl
                                           # total = nineInts(...)
                    %eax, total(%rbp)
68
           movl
                    total(%rbp), %esi
69
```

```
$format, %edi
           movl
70
           movl
                   $0, %eax
71
           call
                   printf
73
           movl
                   $0, %eax
                                       # return 0;
           movq
                   %rbp, %rsp
                                       # delete locals
75
                                       # restore caller's base pointer
           popq
                   %rbp
                                       # back to OS
           ret
77
1 # sumNine2.s
2 # Sums nine integer arguments and returns the total.
3 # Bob Plantz - 13 June 2009
5 # Stack frame
6 #
       arguments already in stack frame
                   seven, 16
           .equ
           .equ
                   eight,24
                   nine,32
           .equ
       local variables
10
           .equ
                   total,-4
11
                   localSize, -16
           .equ
12
  # Read only data
           .section
                     .rodata
14
  doneMsg:
           .string "sumNine done"
16
  # Code
17
           .text
18
           .globl
                   sumNine
           .type
                   sumNine, @function
20
  sumNine:
                                        # save caller's base pointer
           pushq
                   %rbp
22
           movq
                   %rsp, %rbp
                                        # set our base pointer
23
                                        # for local variables
           addq
                   $localSize, %rsp
24
25
           addl
                   %esi, %edi
                                        # add two to one
26
           addl
                   %ecx, %edi
                                        # plus three
27
           addl
                   %edx, %edi
                                        # plus four
           addl
                   %r8d, %edi
                                        # plus five
29
           addl
                   %r9d, %edi
                                        # plus six
           addl
                   seven(%rbp), %edi
                                        # plus seven
31
                                        # plus eight
           addl
                   eight(%rbp), %edi
           addl
                   nine(%rbp), %edi
                                        # plus nine
33
                   %edi, total(%rbp) # save total
           movl
35
           movl
                   $doneMsg, %edi
           call
                   puts
37
           movl
                   total(%rbp), %eax # return total;
39
           movq
                   %rbp, %rsp
                                        # delete local vars.
                   %rbp
                                        # restore caller's base pointer
           popq
41
42
```

Listing 11.6: Passing more than six arguments to a function (programmer assembly language). (There are two files here.)

The assembly language programmer realizes that all nine integers can be summed in the sumNine function before it calls another function. In addition, none of the values will be needed after this

summation. So there is no reason to store the register arguments locally:

```
# add two to one
           addl
                    %esi, %edi
26
           addl
                    %ecx, %edi
                                         # plus three
27
           addl
                    %edx, %edi
                                         # plus four
28
                    %r8d, %edi
           addl
                                         # plus five
29
           addl
                    %r9d, %edi
                                         # plus six
30
           addl
                    seven(%rbp), %edi
                                         # plus seven
31
           addl
                    eight(%rbp), %edi
                                         # plus eight
32
           addl
                    nine(%rbp), %edi
                                         # plus nine
33
```

However, the edi register will be needed for passing an argument to puts, so the total is saved in a local variable in the stack frame:

```
movl %edi, total(%rbp) # save total
```

Then it is loaded into eax for return to the calling function:

```
movl total(%rbp), %eax # return total;
```

The overall pattern of a stack frame is shown in Figure 11.4. The rbp register serves as the frame pointer to the stack frame. Once the frame pointer address has been established in a function, its value must never be changed. The return address is always located +8 bytes offset from the frame pointer. Arguments to the function are positive offsets from the frame pointer, and local variables are negative offsets from the frame pointer.

Do *not* change the rbp register once it has been set up in a function.

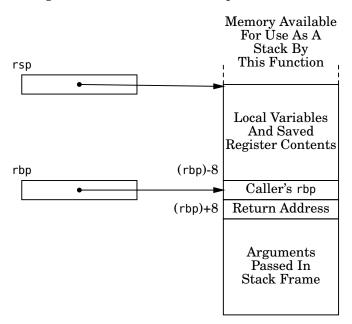


Figure 11.4: Overall layout of the stack frame.

It is essential that you follow the register usage and argument passing disciplines precisely. Any deviation can cause errors that are very difficult to debug.

1. In the *calling function*:

- (a) Assume that the values in the rax, rcx, rdx, rsi, rdi and r8 r11 registers will be changed by the called function.
- (b) The first six arguments are passed in the rdi, rsi, rdx, rcx, r8, and r9 registers in left-to-right order.
- (c) Arguments beyond six are stored on the stack as though they had been pushed onto the stack in right-to-left order.
- (d) Use the call instruction to invoke the function you wish to call.

2. Upon *entering* the *called function*:

- (a) Save the caller's frame pointer by pushing rbp onto the stack.
- (b) Establish a new frame pointer at the current top of stack by copying rsp to rbp.
- (c) Allocate space on the stack for all the local variables, plus any required register save space, by subtracting the number of bytes required from rsp; this value must be a
- (d) If a called function changes any of the values in the rbx, rbp, rsp, or r12 r15 registers, they must be saved in the register save area, then restored before returning to the calling function.
- (e) If the function calls another function, save the arguments passed in registers on the stack.

3. Within the called function:

- (a) rsp is pointing to the current bottom of the stack that is accessible to this function. Observe the usual stack discipline (see §8.2). In particular, DO NOT use the stack pointer to access arguments or local variables.
- (b) Arguments passed in registers to the function and saved on the stack are accessed by negative offsets from the frame pointer, rbp.
- (c) Arguments passed on the stack to the function are accessed by positive offsets from inside a function the frame pointer, rbp.

Never change rbp body.

(d) Local variables are accessed by negative offsets from the frame pointer, rbp.

4. When leaving the called function:

- (a) Place the return value, if any, in eax.
- (b) Restore the the values in the rbx, rbp, rsp, and r12 r15 registers from the register save area in the stack frame.
- (c) Delete the local variable space and register save area by copying rbp to rsp.
- (d) Restore the caller's frame pointer by popping rbp off the stack save area.
- (e) Return to calling function with ret.

The best way to design a stack frame for a function is to make a drawing on paper following the pattern in Figure 11.3. Show all the local variables and arguments to the function. To be safe, assume that all the register-passed arguments will be saved in the function. Compute and write down all the offset values on your drawing. When writing the source code for your function, use the .equ directive to give meaningful names to each of the numerical offsets. If you do this planning before writing the executable code, you can simply use the name (%rbp) syntax to access the value stored at name.

11.3 **Interface Between Functions, 32-Bit Mode**

In 32-bit mode, all arguments are passed on the call stack. The 32-bit assembly language generated by qcc is shown in Listing 11.7.

```
"nineInts1.c"
          .file
          .section
                           .rodata
3 .LC0:
          .string "The sum is %i\n"
          .text
6 .globl main
          .type
                  main, @function
8 main:
          leal
                  4(%esp), %ecx
```

```
andl
                    $-16, %esp
10
                    -4(%ecx)
           pushl
11
           pushl
                    %ebp
12
           movl
                    %esp, %ebp
13
           pushl
                    %есх
14
           subl
                    $84, %esp
15
                    $1, -12(%ebp)
           movl
                    $2, -16(%ebp)
           movl
17
           movl
                    $3, -20(%ebp)
18
           movl
                    $4, -24(%ebp)
19
           movl
                    $5, -28(%ebp)
20
                    $6, -32(%ebp)
           movl
21
           movl
                    $7, -36(%ebp)
22
                    $8, -40(%ebp)
23
           movl
                    $9, -44(%ebp)
24
           movl
                    -44(%ebp), %eax
           movl
                                         # load i
25
           movl
                    %eax, 32(%esp)
                                         # store in stack frame
26
           movl
                    -40(%ebp), %eax
                                         # load h
27
                    %eax, 28(%esp)
                                         # store in stack frame
           movl
28
           movl
                    -36(%ebp), %eax
                                         # load g
           movl
                    %eax, 24(%esp)
                                         # etc....
30
                    -32(%ebp), %eax
                                         # load f
           movl
31
                    %eax, 20(%esp)
           movl
32
                    -28(%ebp), %eax
                                         # load e
           movl
           movl
                    %eax, 16(%esp)
34
35
           movl
                    -24(%ebp), %eax
                                         # load d
           movl
                    %eax, 12(%esp)
36
                                         # load c
           movl
                    -20(%ebp), %eax
37
                    %eax, 8(%esp)
           movl
38
           movl
                    -16(%ebp), %eax
                                         # load b
39
           movl
                    %eax, 4(%esp)
40
           movl
                    -12(%ebp), %eax
                                         # load a
41
           movl
                    %eax, (%esp)
                                         # store in stack frame
42
           call
                    sumNine
43
                                         # total <- sum
           movl
                    %eax, -8(%ebp)
                    -8(%ebp), %eax
           movl
45
                    %eax, 4(%esp)
46
           movl
           movl
                    $.LC0, (%esp)
47
                    printf
           call
                    $0, %eax
           movl
49
                    $84, %esp
50
           addl
           popl
                    %ecx
51
           popl
                    %ebp
           leal
                    -4(%ecx), %esp
53
           ret
54
           .size
                    main, .-main
55
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
56
           .section
                             .note.GNU-stack, "",@progbits
57
                    "sumNine1.c"
           .file
1
           .section
                             .rodata
  .LC0:
3
           .string "sumNine done."
           .text
  .globl sumNine
           .type
                    sumNine, @function
8 sumNine:
```

```
pushl
                    %ebp
                    %esp, %ebp
           movl
10
           subl
                    $24, %esp
11
           movl
                    12(%ebp), %edx
                                       # load two
12
           movl
                    8(%ebp), %eax
                                       # load one, subtotal
13
           addl
                    %edx, %eax
                                       # add two
14
           addl
                    16(%ebp), %eax
                                       # add three
           addl
                    20(%ebp), %eax
                                       # add four
16
                    24(%ebp), %eax
           addl
                                       # add five
17
           addl
                    28(%ebp), %eax
                                       # add six
18
           addl
                    32(%ebp), %eax
                                       # add seven
19
           addl
                    36(%ebp), %eax
                                       # add eight
20
           addl
                    40(%ebp), %eax
                                       # add nine
21
                    %eax, -4(%ebp)
                                       # x <- total
           movl
22
                    $.LC0, (%esp)
23
           movl
           call
                    puts
24
           movl
                    -4(%ebp), %eax
                                       # return x;
25
           leave
26
           ret
27
                    sumNine, .-sumNine
           .size
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
29
           .section
                             .note.GNU-stack, "",@progbits
```

Listing 11.7: Passing more than six arguments to a function (gcc assembly language, 32-bit). (There are two files here.)

The argument passing sequence can be seen on lines 25-42 in the main function. Rather than pushing each argument onto the stack, the compiler has used the technique of allocating space on the stack for the arguments, then storing each argument directly in the appropriate location. The result is the same as if they had been pushed onto the stack, but the direct storage technique is more efficient.

The state of the call stack just before calling the nineInts function is shown in Figure 11.5. Comparing this with the 64-bit version in Figure 11.3, we see that the local variables are treated in essentially the same way. But the 32-bit version differs in the way it passes arguments:

- All the arguments are passed on the call stack, none in registers.
- Arguments are passed in 4-byte blocks.

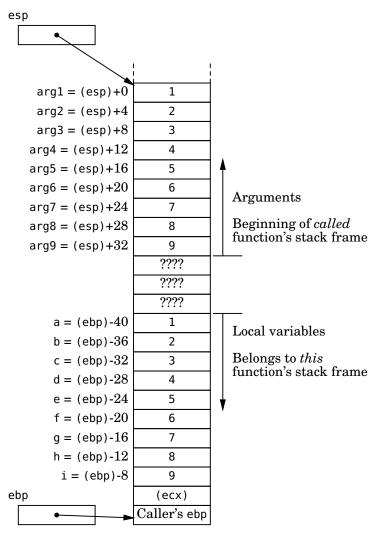


Figure 11.5: Calling function's stack frame, 32-bit mode. Local variables are accessed relative to the frame pointer (ebp register). In this example, they are all 4-byte values. Arguments are accessed relative to the stack pointer (esp register). Arguments are passed in 4-byte blocks.

11.4 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

11.4.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmov <i>cc</i>	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movs <i>ss</i>	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
pushw	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic/logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
adds	mem	%reg	add	189
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
decs	%reg/mem		decrement	220
incs	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
subs	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
test <i>s</i>	mem	%reg	test bits	210

s = b, w, l, q; w = l, q

 $program\ flow\ control:$

opcode	location	action	see page:
call	label	call function	156
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
j <i>cc</i>	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

cc = condition codes

11.4.2 Addressing Modes

syntax: name of the register with a "%" prefix. example: movl %eax, %ebx The data value is located immediately after the instruction. Source operand only. syntax: data value with a "\$" prefix. example: movl \$0xabcd1234, %ebx The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses around the name and the offset value immediately be-
The data value is located immediately after the instruction. Source operand only. syntax: data value with a "\$" prefix. example: movl \$0xabcd1234, %ebx Dase register The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
tion. Source operand only. syntax: data value with a "\$" prefix. example: movl \$0xabcd1234, %ebx The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
syntax: data value with a "\$" prefix. example: movl \$0xabcd1234, %ebx Dase register The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
example: movl \$0xabcd1234, %ebx Dase register The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
pase register The data value is located in memory. The address of the memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
blus offset: memory location is the sum of a value in a base register plus an offset value. syntax: use the name of the register with parentheses
plus an offset value. syntax: use the name of the register with parentheses
<i>syntax</i> : use the name of the register with parentheses
around the name and the offset value immediately be-
· · · · · · · · · · · · · · · · · · ·
fore the left parenthesis.
example: movl \$0xaabbccdd, 12(%eax)
rip-relative: The target is a memory address determined by adding
an offset to the current address in the rip register.
syntax: a programmer-defined label
example: je somePlace

11.5 Exercises

11-1 (§11.2) Enter the program in Listing 11.6. Single-step through the program with gdb and record the changes in the rsp and rip registers and the changes in the stack on paper. Use drawings similar to Figure 11.3.

Note: Each of the two functions should be in its own source file. You can single-step into the subfunction with gdb at the call instruction in main, then single-step back into main at the ret instruction in addConst.

- **11-2** (§11.2) Enter the C program in Listing 11.4. Using the "-S" compiler option, compile it with differing levels of optimization, i.e., "-01, -02, -03," and discuss the assembly language that is generated. Is the optimized code easier or more difficult to read?
- 11-3 (§11.2, §10.1) Write the function, writeStr, in assembly language. The function takes one argument, a char *, which is a pointer to a C-style text string. It displays the text string on the screen. It returns the number of characters displayed.

Demonstrate that your function works correctly by writing a main function that calls writeStr to display "Hello world" on the screen.

Note that the main function will not do anything with the character count that is returned by writeStr.

11-4 (§11.2, §10.1) Write the function, readLn, in assembly language. The function takes one argument, a char *, which is a pointer to a char array for storing a text string. It reads characters from the keyboard and stores them in the array as a C-style text string. It does not store the '\n' character. It returns the number of characters, excluding the NUL character, that were stored in the array.

Demonstrate that your function works correctly by writing a main function that prompts the user to enter a text string, then echoes the user's input.

When testing your program, be careful not to enter more characters than the allocated space. Explain what would occur if you did enter too many characters.

Note that the main function will not do anything with the character count that is returned by readLn.

11.5. EXERCISES 257

- 11-5 (§11.2, §10.1) Write a program in assembly language that
 - a) prompts the user to enter any text string,
 - b) reads the entered text string, and
 - c) echoes the user's input.

Use the writeStr function from Exercise 11-3 and the readLn function from Exercise 11-4 to implement the user interface in this program.

11-6 (§11.2, §10.1) Modify the readLn function in Exercise 11-4 so that it takes a second argument, the maximum length of the text string, including the NULL character. Excess characters entered by the user are discarded.

Chapter 12

Bit Operations; Multiplication and Division

We saw in Section 3.5 (page 43) that input read from the keyboard and output written on the screen is in the ASCII code and that integers are stored in the binary number system. So if a program reads user input as, say, 123_{10} , that input is read as the characters '1', '2', and '3'', but the value used in the program is represented by the bit pattern $0000007b_{16}$. In this chapter, we return to the conversion algorithms between these two storage codes and look at the assembly language that is involved.

12.1 Logical Operators

Two numeric operators, addition and subtraction, were introduced in Section 9.2 (page 189). Many data items are better thought of as bit patterns rather than numerical entities. For example, study Table 2.3 on page 20 and see if you can determine which bit determines the case (upper/lower) of the alphabetic characters.

In order to manipulate individual character codes in a text string, we introduce the bit-wise logical operators in this section. The logical operations are shown in the truth tables in Figure 3.4 (page 47). The instructions available to us to perform these three operations are:

ands source, destination ors source, destination xors source, destination

where s denotes the size of the operand:

<u>s</u>	meaning	number of bits
b	byte	8
W	word	16
ι	longword	32
q	quadword	64

and destination, source Syntaxor destination, source xor destination, source

For example, the instruction

andl %eax, %edx

performs an and operation between each of the respective 32 bits in the eax register with the 32 bits in the edx register, leaving the result in the edx register. The instruction

¹Some programs, notably those that do not perform many arithmetic operations, maintain the numbers in the character code. This requires more complex algorithms for performing arithmetic.

```
andb %dh, %ah
```

performs an and operation between each of the respective 8 bits in the dh register with the 8 bits in the ah register, leaving the result in the ah register.

The addressing modes available for the arithmetic operators, add and sub, are also available for the logical operators. For example, if eax contains the bit pattern 0x89abcdef, the instruction

```
andb $0xee, %ah
```

would change eax to contain 0x89abcdee. If we follow this with the instruction

```
orl $0x11111111, %eax
```

* Converts letters in a C string to upper case.

the bit pattern in eax becomes 0x99bbddff. Finally, if we then use

```
xorw $0x1111, %ax
```

we end up with 0x89bbccee in eax.

The program in Listing 12.1 shows the use of the C bit-wise logical operators "&" and "|" to change the case of alphabetic characters.

```
1 /*
  * upperLower.c
   * Converts alphabetic characters to all upper case
   * and all lower case.
   * Bob Plantz - 14 June 2009
8 #include "writeStr.h"
9 #include "readLn.h"
10 #include "toUpper.h"
11 #include "toLower.h"
12 #define MAX 50
13 int main()
14 {
      char stringOrig[MAX];
      char stringWork[MAX];
16
17
      writeStr("Enter some alphabetic characters: ");
18
      readLn(stringOrig, MAX);
19
20
      writeStr("All upper: ");
21
      toUpper(stringOrig, stringWork);
22
      writeStr(stringWork);
23
      writeStr("\n");
24
25
      writeStr("All lower: ");
26
      toLower(stringOrig, stringWork);
27
      writeStr(stringWork);
      writeStr("\n");
29
30
      writeStr("Original: ");
31
      writeStr(stringOrig);
32
      writeStr("\n");
33
34
      return 0;
35
36 }
   * toUpper.h
```

Logical operators use the same addressing modes as add and sub.

```
* * Bob Plantz - 14 June 2009
7 #ifndef TOUPPER_H
8 #define TOUPPER_H
9 int toUpper(char *, char *);
10 #endif
1 /*
2 * toUpper.c
* Converts alphabetic letters in a C string to upper case.
  * Bob Plantz - 14 June 2009
7 #include "toUpper.h"
8 #define UPMASK 0xdf
int toUpper(char *srcPtr, char *destPtr)
11 {
      int count = 0;
12
      while (*srcPtr != '\0')
14
          *destPtr = *srcPtr & UPMASK;
15
          srcPtr++;
16
          destPtr++;
17
          count++;
18
19
      *destPtr = '\0'; // terminate string
20
      return count;
21
22 }
2 * toLower.h
  * Converts letters in a C string to lower case.
  * Bob Plantz - 14 June 2009
   */
7 #ifndef TOLOWER_H
8 #define TOLOWER_H
9 int toLower(char *, char *);
10 #endif
1 /*
2 * toLower.c
* Converts letters in a C string to lower case.
  * Bob Plantz - 14 June 2009
5 */
7 #include "toLower.h"
8 #define LOWMASK 0x20
int toLower(char *srcPtr, char *destPtr)
      int count = 0;
12
      while (*srcPtr != '\0')
13
14
15
          *destPtr = *srcPtr | LOWMASK;
```

Listing 12.1: Convert letters to upper/lower case (C). The functions writeStr and readLn are not shown here; see Exercises 11-3 and 11-4 for the assembly language versions. (There are three files here.)

The program assumes that the user enters all alphabetic characters without making mistakes. Of course, the conversions could be accomplished with addition and subtraction, but in this application the bit-wise logical operators are more natural.

In Listing 12.2 we show only the gcc-generated assembly language for the main and toUpper functions.

```
.file
                    "upperLower.c"
           .section
                             .rodata
           .align 8
4 .LC0:
           .string "Enter some alphabetic characters: "
  .LC1:
           .string "All upper: "
  .LC2:
           .string "\n"
10 .LC3:
           .string "All lower: "
11
  .LC4:
12
           .string "Original: "
           .text
14
  .globl main
15
                    main, @function
           .type
16
  main:
17
                    %rbp
18
           pushq
           movq
                    %rsp, %rbp
19
           addq
                    $-128, %rsp
20
                                        # load guard value
           movq
                    %fs:40, %rax
21
                    %rax, -8(%rbp)
                                        # store at end of stack
           movq
22
           xorl
                    %eax, %eax
                                        # clear rax
23
                    $.LC0, %edi
24
           movl
           call
                    writeStr
25
                    -64(%rbp), %rdi
           leaq
                    $50, %esi
           movl
27
                    readLn
           call
           movl
                    $.LC1, %edi
29
           call
                    writeStr
           leaq
                    -128(%rbp), %rsi
31
                    -64(%rbp), %rdi
           leaq
32
           call
                    toUpper
33
           leaq
                    -128(%rbp), %rdi
34
           call
                    writeStr
35
           movl
                    $.LC2, %edi
36
           call
                    writeStr
37
           movl
                    $.LC3, %edi
38
           call
                    writeStr
39
           leag
                    -128(%rbp), %rsi
40
```

```
leaq
                    -64(%rbp), %rdi
41
           call
                    toLower
42
                    -128(%rbp), %rdi
43
           leaq
           call
                    writeStr
44
           movl
                    $.LC2, %edi
45
           call
                    writeStr
46
                    $.LC4, %edi
47
           movl
           call
                    writeStr
48
           leag
                    -64(%rbp), %rdi
           call
                    writeStr
50
           movl
                    $.LC2, %edi
51
           call
                    writeStr
52
           movl
                    $0, %eax
53
                    -8(%rbp), %rdx
54
           movq
55
           xorq
                    %fs:40, %rdx
           jе
                    .L3
56
           call
                    __stack_chk_fail # check for stack overflow
57
  .L3:
           leave
59
           ret
           .size
                    main, .-main
61
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
62
           .section
                             .note.GNU-stack, "",@progbits
63
           .file
                    "toUpper.c"
           .text
  .globl toUpper
           .type
                    toUpper, @function
  toUpper:
5
                    %rbp
           pushq
           movq
                    %rsp, %rbp
                    %rdi, -24(%rbp)
                                         # save srcPtr
           movq
                    %rsi, -32(%rbp)
                                         # save destPtr
           movq
           movl
                    $0, -4(%rbp)
10
                    .L2
11
           jmp
  .L3:
12
                                         # srcPtr
           movq
                    -24(%rbp), %rax
13
                                         # load char there
           movzbl
                    (%rax), %edx
14
           movl
                    $-33, %eax
                                         # load 0xffffffdf
15
           andl
                    %eax, %edx
                                         # make upper case
16
                                         # destPtr
17
           movq
                    -32(%rbp), %rax
           movb
                    %dl, (%rax)
                                         # store char there
18
                    $1, -24(%rbp)
                                         # srcPtr++;
           addq
19
                    $1, -32(%rbp)
                                         # destPtr++;
           addq
20
           addl
                    $1, -4(%rbp)
                                         # count++;
  .L2:
22
23
           movq
                    -24(%rbp), %rax
           movzbl
                    (%rax), %eax
24
                                         # NUL character?
           testb
                    %al, %al
25
                    .L3
                                         # no, keep going
           jne
26
           movq
                    -32(%rbp), %rax
                                         # yes, load destPtr
27
           movb
                    $0, (%rax)
                                         # and store NUL there
           movl
                    -4(%rbp), %eax
                                         # return count;
           leave
30
           ret
31
                    toUpper, .-toUpper
           .size
32
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
33
```

```
.section .note.GNU-stack,"",@progbits
```

Listing 12.2: Convert letters to upper/lower case (gcc assembly language). Only two of the functions in Listing 12.1 are shown. (There are two files here.)

The toLower function is similar to the toUpper, and the writeStr and readLn functions were covered in the exercises in Chapter 11.

Most of the code in Listing 12.2 should be familiar from previous chapters. Note that the C code specifies char arrays in the main function that are 50 elements long (lines 13 and 14). But the compiler generates assembly language that allocates 64 bytes for each array:

```
18 main:
                     %rbp
           pushq
19
           movq
                     %rsp, %rbp
20
           addq
                     $-128, %rsp
21
  and:
           leag
                     -128(%rbp), %rsi
31
           leag
                     -64(%rbp), %rdi
32
           call
                     toUpper
33
```

Recall that this 16-byte address alignment is specified by the ABI [25].

The code sequence on lines 21 - 23 in main:

```
movq %fs:40, %rax # load guard value
movq %rax, -8(%rbp) # store at end of stack
xorl %eax, %eax # clear rax
```

is new to you. This code sequence stores a value supplied by the operating system near the end of the stack. The purpose is described in the gcc man page entry for the -fstack-protector option:

Emit extra code to check for buffer overflows, such as stack smashing attacks. This is done by adding a guard variable to functions with vulnerable objects. This includes functions that call alloca, and functions with buffers larger than 8 bytes. The guards are initialized when a function is entered and then checked when the function exits. If a guard check fails, an error message is printed and the program exits.

The value stored there is checked at the end of the function, on lines 54 - 58:

If the value has been overwritten, the __stack_chk_fail function is called, which notifies the user about the problem.

Your version of gcc may be compiled without this option as the default. It can be turned off with the -fno-stack-protector option. Since the assembly language we are writing in this book is not "industrial strength," we will not include this stack protection code.

For the toUpper function, the compiler-generated assembly language first loads the address stored in the srcPtr variable into a register so it can dereference the pointer.

```
movq -24(%rbp), %rax
```

It then moves the byte at that address into another register. It uses the movzbl instruction to zero out the remaining 24 bits of the edx register. (Recall that changing the low-order 32 bits of the rdx register also zeros out the high-order 32 bits.)

```
movzbl (%rax), %edx
```

Next it loads the bit pattern ffffffdf (= -33_{10}) into the eax register and performs the bit-wise and operation, leaving the result in the edx register. This and operation leaves all the bits in the edx register as they were, except the sixth bit is set to zero. The sixth bit in the ASCII code determines whether a letter is upper or lower case.

```
movl $-33, %eax andl %eax, %edx
```

Regardless of whether the letter was upper or lower case, it is now upper case. The letter is stored in the low-order eight bits of the edx register, the dl register. So the program loads the address stored in the destPtr variable into a register so it can dereference it and store the character there.

```
movq -32(%rbp), %rax
movb %dl, (%rax)
```

We will now consider the version of this program written in assembly language (Listing 12.3).

```
1 # upperLower.s
2 # Converts alphabetic characters to all upper case
  # and all lower case.
  # Bob Plantz - 14 June 2009
6 # Constant
                   MAX,50
7
           .equ
  # Local variable names
                                               # original char array
           .equ
                   stringOrig, -64
9
                   stringWork,-128 # working char array
           .equ
10
                   localSize, -128
           .equ
11
12 # Read only data
           .section .rodata
13
14 prompt:
           .string "Enter some alphabetic characters: "
15
16 upMsg:
           .string "All upper: "
17
18 lowMsq:
           .string "All lower: "
19
20 origMsg:
           .string "Original: "
21
22 endl:
           .string "\n"
23
24 # Code
25
           .text
           .globl
                   main
26
           .type
                   main, @function
27
28 main:
                   %rbp
                                      # save base pointer
           pushq
                                      # base pointer = current top of stack
           movq
                   %rsp, %rbp
30
           addq
                   $localSize, %rsp # allocate local var. space
31
32
           movq
                   $prompt, %rdi # point to prompt message
33
           call
                   writeStr
34
35
           leag
                    stringOrig(%rbp), %rdi # place to store string
36
           movl
                   $MAX, %esi
                                             # max number of char
37
           call
                   readLn
38
39
                   stringOrig(%rbp), %rdi # original string stored here
           leag
40
           leag
                    stringWork(%rbp), %rsi # modified string goes here
41
```

```
call
                   toLower
42
          movq
                   $lowMsg, %rdi
43
          call
                   writeStr
          leag
                   stringWork(%rbp), %rdi # show modified string
45
          call
                   writeStr
                   $endl, %rdi
          mova
47
                   writeStr
          call
49
          leag
                   stringWork(%rbp), %rdi # original string stored here
          leag
                   stringWork(%rbp), %rsi # modified string goes here
51
          call
                   toUpper
52
                   $upMsg, %rdi
          movq
53
          call
                   writeStr
54
                   stringWork(%rbp), %rdi # show modified string
55
          leaq
56
          call
                   writeStr
                   $endl, %rdi
          movq
57
          call
                   writeStr
58
          movq
                   $origMsg, %rdi
60
61
          call
                   writeStr
          leag
                   stringOrig(%rbp), %rdi # original string stored here
62
          call
                   writeStr
          movq
                   $endl, %rdi
64
          call
                   writeStr
66 done:
          movl
                   $0, %eax
                                    # return 0;
          movq
                   %rbp, %rsp
                                    # remove local variables
68
          popq
                   %rbp
                                    # restore caller base pointer
                                    # back to OS
          ret
70
1 # toUpper.s
2 # Converts alpha characters to upper case.
3 # Bob Plantz - 14 June 2009
5 # Calling sequence:
6 #
          rdi <- address of string to be converted
7 #
          rsi <- address to store result string
          call
                   toUpper
9 # returns number of characters written
10 # If rdi and rsi have the same address, original string
11 # is overwritten.
13 # Useful constant
                   UPMASK, 0xdf
           .equ
15 # Stack frame, showing local variables and arguments
           .equ
                   destPtr,-32
16
           .equ
                   srcPtr,-24
17
                   count,-4
           .equ
18
           .equ
                   localSize,-32
19
20 # Code
21
           .text
           .globl
                   toUpper
22
           .type
                   toUpper, @function
23
24 toUpper:
          pushq
                   %rbp
                                     # save frame pointer
25
                                     # new frame pointer
                   %rsp, %rbp
26
          movq
27
          addq
                   $localSize, %rsp # local vars. and arg.
```

```
28
                   %rdi, srcPtr(%rbp)
          movq
                                         # source pointer
29
          movq
                   %rsi, destPtr(%rbp) # destination pointer
          movl
                   $0, count(%rbp) # count = 0;
31
  upLoop:
32
          movq
                   srcPtr(%rbp), %rax # source pointer
33
                                    # get current char
          movb
                   (%rax), %al
34
          cmpb
                   $0, %al
                                     # at end yet?
35
          jе
                   done
                                     # yes, all done
37
          andb
                   $UPMASK, %al
                                     # in range, convert
38
          movq
                   destPtr(%rbp), %r8 # destination pointer
39
          movb
                   %al, (%r8)
                                     # store character
40
41
                   count (%rbp)
42
          incl
                                     # count++;
          incl
                                     # srcPtr++;
                   srcPtr(%rbp)
43
          incl
                   destPtr(%rbp)
                                     # destPtr++;
44
                                     # and check for end
          jmp
                   upLoop
45
46 done:
          movq
                   destPtr(%rbp), %r8 # destination pointer
          movb
                   $0, (%r8)
                                    # store NUL
48
                   count(%rbp), %eax
          movl
                                         # return count
49
                                    # restore stack pointer
          movq
                   %rbp, %rsp
50
                                    # restore frame pointer
          popq
                   %rbp
                                    # back to caller
          ret
52
1 # toLower.s
2 # Converts alpha characters to lower case.
 # Bob Plantz - 14 June 2009
5 # Calling sequence:
          rdi <- address of string to be converted
7 #
          rsi <- address to store result string
          call
                   toLower
9 # returns number of characters written
  # If rdi and rsi have the same address, original string
11 # is overwritten.
13 # Useful constant
                   LOWMASK, 0x20
14
          .equ
15 # Stack frame, showing local variables and arguments
           .equ
                   destPtr,-32
16
                   srcPtr,-24
17
           .equ
          .equ
                   count,-4
18
                   localSize,-32
           .equ
20 # Code
          .text
21
           .globl
                   toLower
22
                   toLower, @function
           .type
23
  toLower:
24
                                     # save frame pointer
          pushq
                   %rbp
25
          movq
                   %rsp, %rbp
                                     # new frame pointer
26
          addq
                   $localSize, %rsp # local vars. and arg.
28
          movq
                   %rdi, srcPtr(%rbp)
                                         # source pointer
29
                   %rsi, destPtr(%rbp) # destination pointer
          movq
30
          movl
                   0, count(%rbp) # count = 0;
31
```

12.2. SHIFTING BITS 267

```
lowLoop:
           movq
                    srcPtr(%rbp), %rax # source pointer
33
           movb
                    (%rax), %al
                                      # get current char
           cmpb
                    $0, %al
                                      # at end yet?
35
           jе
                    done
                                      # yes, all done
36
37
                    $LOWMASK, %al
                                      # in range, convert
           orb
                    destPtr(%rbp), %r8 # destination pointer
           mova
39
           movb
                    %al, (%r8)
                                      # store character
40
41
           incl
                    count (%rbp)
                                      # count++;
42
           incl
                    srcPtr(%rbp)
                                      # srcPtr++;
43
           incl
                    destPtr(%rbp)
                                      # destPtr++;
44
                                      # and check for end
                    lowLoop
45
           jmp
  done:
46
           movq
                    destPtr(%rbp), %r8 # destination pointer
47
                    $0, (%r8)
                                     # store NUL
           movb
48
                                           # return count
           movl
                    count(%rbp), %eax
49
                                     # restore stack pointer
           movq
                    %rbp, %rsp
50
                                     # restore frame pointer
51
           popq
                    %rbp
           ret
                                     # back to caller
52
```

Listing 12.3: Convert letters to upper/lower case (programmer assembly language). See Exercises 11.3 and 11.4 for the functions writeStr and readLn. (There are three files here.)

Again, we will describe on the toUpper function. Writing directly in assembly language, we also need to get the address in srcPtr so we can dereference it. But in copying the character stored there, we simply ignore the remaining 56 bits of the rax register. Notice that the movb instruction first uses the full 64-bit address in the rax register to *fetch* the byte stored there, and it then can write over the low-order 8 bits of the same register. (This, of course, "destroys" the address.)

```
movq srcPtr(%rbp), %rax # source pointer
movb (%rax), %al # get current char
```

Since we are ignoring the high-order 56 bits of the rax register, we must be consistent when operating on the data in the low-order 8 bits. So we use the andb instruction to operate only on the al portion of the rax register.

```
38 andb $UPMASK, %al # in range, convert
```

Storing the final result is the same, except we are using different registers.

```
movq destPtr(%rbp), %r8 # destination pointer
movb %al, (%r8) # store character
```

Both ways of implementing this algorithm are correct, and there is probably no significant efficiency difference. However, comparing the two shows the importance of maintaining consistency in data sizes. You do not need to zero out unused portions of registers, but you should also never assume that they are zero.

12.2 Shifting Bits

It is sometimes useful to be able to shift all the bits to the left or right. Since the relative position of a bit in an integer has significance, shifting all the bits to the left one position effectively multiplies the value by two. And shifting them one position to the right effectively divides the value by two. As you will see in Sections 12.3 and 12.4, the multiplication and division instructions are complicated. They also take a great deal of processor time. Using left/right shifts to effect multiplication/division by powers of two is very efficient.

There are two instructions for shifting bits to the right — *shift right* and *shift arithmetic right*:

shrs source, destination sars source, destination

where s denotes the size of the operand:

<u>s</u>	meaning	number of bits
b	byte	8
W	word	16
ι	longword	32
q	quadword	64

 $rac{Shr}{Syntax}$ shr destination, source $rac{Shr}{Syntax}$ sar destination, source

The *source* operand can be either an immediate value, or the value can be located in the cl register. If it is an immediate value, it can be up to 63_{10} .

The *destination* operand can be either a memory location or a register. Any of the addressing modes that we have covered can be used to specify a memory location.

The action of the shr instruction is to shift all the bits in the destination operand to the right by the number of bit positions specified by the source operand. The "vacated" bit positions at the high-order end of the destination operand are filled with zeros. The last bit to be shifted out of the low-order bit position is copied into the carry flag (CF).

For example, if the eax register contained the bit pattern aabb 2233, then the instruction

shrw \$1, %ax

would produce

eax: aabb 1119

and the CF would be one. With the same initial conditions, the instruction

shrl \$4, %eax

would produce

eax: 0aab b223

and the CF would be zero.

The action of the sar instruction is to shift all the bits in the destination operand to the right by the number of bit positions specified by the source operand. The "vacated" bit positions at the high-order end of the destination operand are filled with the same value that was originally in the highest-order bit. The last bit to be shifted out of the low order bit position is copied into the carry flag (CF).

For example, if the eax register contained the bit pattern aabb 2233, then the instruction

sarw \$1, %ax

would produce

eax: aabb 1119

and the CF would be one. With the same initial conditions, the instruction

sarl \$4, %eax

would produce

eax: faab b223

12.2. SHIFTING BITS 269

and the CF would be zero.

Thus the difference between "shift right" and "shift arithmetic right" is that the arithmetic shift preserves the sign of the value – as though it represents an integer stored in two's complement code.

There are two instructions for shifting bits to the left — shift left and shift arithmetic left:

```
shls source, destination sals source, destination
```

where *s* denotes the size of the operand:

1	<u>s</u>	meaning	number of bits
	b	byte	8
	W	word	16
	ι	longword	32
	q	quadword	64

 $rac{ ext{Shl} & destination, source}{ ext{Syntax} & ext{sal} & destination, source}$

The *source* operand can be either an immediate value, or the value can be located in the cl register. If it is an immediate value, it can be up to 31_{10} .

The *destination* operand can be either a memory location or a register. Any of the addressing modes that we have covered can be used to specify a memory location.

The action of both the shl and sal instructions is to shift all the bits in the destination operand to the left by the number of bit positions specified by the source operand. In fact, these are really two different assembly language mnemonics for the same machine code. The "vacated" bit positions at the low-order end of the destination operand are filled with zeros. The last bit to be shifted out of the highest-order bit position is copied into the carry flag (CF). For example, if the eax register contained the bit pattern bbaa 2233, then the instruction

```
shlw $1, %ax
```

would produce

```
eax: bbaa 4466
```

and the CF would be zero. With the same initial conditions, the instruction

```
shll $4, %eax
```

would produce

```
eax: baa2 2330
```

and the CF would be one.

We see how shifts can be used in the hexToInt function shown in Listing 12.4.

```
1 /*
2 * readHex.c
3 * Gets hex number from user and stores it as int.
4 * Bob Plantz - 14 June 2009
5 */
6 #include <stdio.h>
7 #include "writeStr.h"
8 #include "readLn.h"
9 #include "toLower.h"
10 #include "hexToInt.h"
11 #define MAX 20
12 int main()
13 {
14 char theString[MAX];
```

```
long int theInt;
15
16
      writeStr("Enter up to 16 hex characters: ");
      readLn(theString, MAX);
18
      toLower(theString, theString);
20
      theInt = hexToInt(theString);
21
      printf("%lx = %li\n", theInt, theInt);
22
      return 0;
24 }
1 /*
  * hexToInt.h
   * Converts hex character string to int.
   * Bob Plantz - 8 April 2008
7 #ifndef HEXTOINT_H
8 #define HEXTOINT_H
9 long int hexToInt(char *);
10 #endif
1 /*
  * hexToInt.c
   * Converts hex character string to int.
   * Assumes A - F in upper case.
   * Bob Plantz - 14 June 2009
   */
8 #include "hexToInt.h"
9 #define NUMERAL 0x30
10 #define ALPHA 0x57
12 long int hexToInt(char *stringPtr)
13 {
      long int accumulator = 0;
      char current;
15
      current = *stringPtr;
17
      while (current != '\0')
19
           accumulator = accumulator << 4;</pre>
20
           if (current <= '9') // only works for 0-9,A-F</pre>
21
               current -= NUMERAL;
           else
23
               current -= ALPHA;
           accumulator += (long int)current;
25
           stringPtr++;
           current = *stringPtr;
27
28
      return accumulator;
29
30 }
```

Listing 12.4: Shifting bits (C). (There are three files here.)

Notice that "«" (on line 20 in the hexToInt function) is the left shift operator and "»" is the right shift operator in C/C++. In C++ these operators are overloaded to provide file output and input.

12.2. SHIFTING BITS 271

The code in the main function is familiar. The compiler-generated assembly language for hexToInt is shown in Listing 12.5 with comments added.

```
"hexToInt.c"
           .file
           .text
  .globl hexToInt
           .type
                    hexToInt, @function
5 hexToInt:
                    %rbp
           pushq
                    %rsp, %rbp
           movq
           movq
                    %rdi, -24(%rbp)
                    $0, -16(%rbp)
           movq
           movq
                    -24(%rbp), %rax
10
           movzbl
                    (%rax), %eax
11
           movb
                    %al, -1(%rbp)
12
                                      # jump to bottom of loop
13
           jmp
                    . L2
  .L5:
14
           salq
                    $4, -16(%rbp)
                                     # accumulator = accumulator << 4;</pre>
15
                    $57, -1(%rbp)
                                      # if (current > '9')
           cmpb
16
                                          jump to .L4 ("else" part)
           jg
                    .L3
17
           movzbl
                    -1(%rbp), %eax
                                     # "then" part
18
           subl
                    $48, %eax
                                           convert numeral char to int
19
                    %al, -1(%rbp)
           movb
                                           and update current
20
                    .L4
                                     # jump around the "else" part
           jmp
21
  .L3:
22
           movzbl
                    -1(%rbp), %eax
                                     # "else" part
23
           subl
                    $87, %eax
                                     #
                                           convert letter char to int
24
           movb
                    %al, -1(%rbp)
                                           and update current
25
  .L4:
           movsbq
                                     # type-cast char to a long int
                    -1(%rbp),%rax
27
                    %rax, -16(%rbp) # add it to accumulator
           addq
28
           addq
                    $1, -24(%rbp)
                                     # stringPtr++;
29
           movq
                    -24(%rbp), %rax
30
           movzbl
                    (%rax), %eax
31
           movb
                    %al, -1(%rbp)
                                     # current = *stringPtr;
32
  .L2:
33
           cmpb
                    $0, -1(%rbp)
                                     # while (current != '\0')
34
           jne
                                           go to top of loop
35
           movq
                    -16(%rbp), %rax # 64-bit return value
36
           leave
37
           ret
38
                    hexToInt, .-hexToInt
39
           .size
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
40
           .section
                             .note.GNU-stack, "", @progbits
```

Listing 12.5: Shifting bits (gcc assembly language).

As usual, gcc has converted the while loop in hexToInt to a do-while loop, which is entered at the bottom. Most of this code has been covered previously. The instruction

```
salq $4, -16(%rbp) # accumulator = accumulator << 4;
```

shifts the 64 bits that make up the value of the variable accumulator four bits to the left. Make sure that you understand the the four high-order bits in this group of 64 are lost. That is, the shift does not carry on to other memory areas beyond these 64 bits. As stated above, the last bit to get shifted out of these 64 bits is copied to the CF.

The conversions from characters to integers

```
movzbl -1(%rbp), %eax # "then" part
```

36

```
subl
                   $48, %eax
                                           convert numeral char to int
19
                   %al, -1(%rbp)
                                           and update current
          movb
20
  and
                                      # "else" part
          movzbl
                   -1(%rbp), %eax
23
                                           convert letter char to int
          subl
                   $87, %eax
                                      #
24
          movb
                   %al, -1(%rbp)
                                      #
                                           and update current
25
```

start by moving a one-byte character into an int-sized register with the high-order 24 bits zeroed. The actual conversion consists of subtracting off the "character part" as an integer arithmetic operation. Then the result, which is guaranteed to fit within a byte, is stored back in the single byte allocated for the original character.

Actually, we can easily see that the result of this conversion operation is a four-bit value in the range $0000_2 - 1111_2$. The four-bit left shift of the variable accumulator has left space for inserting these four bits. The bit insertion operation consists of first type casting the four-bit integer to a 64-bit integer as we load it from the variable:

```
movsbq -1(%rbp),%rax # type-cast char to a long int
```

then adding this 64-bit integer to the variable accumulator:

```
addq %rax, -16(%rbp) # add it to accumulator
```

We also note that although the standard return value is 32-bits in the eax register, declaring a long int (64-bit) return value causes the compiler to use the entire rax register:

```
movq -16(%rbp), %rax # 64-bit return value
```

Listing 12.6 shows a version of the hexToInt function written in assembly language.

```
# hexToInt_a.s
  # Converts hex characters to a 64-bit int.
  # Bob Plantz - 14 June 2009
    Calling sequence:
           rdi <- address of hex string to be converted
           call
                   string2Hex
    returns 64-bit int represented by the hex string
  # Useful constants
10
                   NUMERAL, 0x30
           .eau
11
                    ALPHA, 0x57
           .equ
12
                   HEXBITS,4
           .equ
13
                   TYPEMASK, 0xf
14
           .equ
15 # Stack frame, showing local variables and arguments
           .equ
                    accumulator, -16
16
                    current,-1
           .equ
17
                    localSize, -32
           .equ
18
  # Code
19
           .text
20
           .globl
                   hexToInt
           .type
                    hexToInt, @function
22
  hexToInt:
                                      # save frame pointer
           pushq
                    %rbp
24
           movq
                   %rsp, %rbp
                                      # new frame pointer
25
           addq
                   $localSize, %rsp # local vars. and arg.
26
                    $0, accumulator(%rbp)
                                               # accumulator = 0;
           mova
28
29 loop:
                    (%rdi), %al
                                      # load character
           movb
30
           cmpb
                    $0, %al
                                      # at end yet?
31
```

12.3. MULTIPLICATION 273

```
jе
                    done
                                      # yes, all done
32
33
           salq
                    $HEXBITS, accumulator(%rbp) # accumulator = accumulator << 4;</pre>
35
           cmpb
                    $'9', %al
                                      # is it numeral?
36
                    isAlpha
                                      # no, so it's alpha
           ja
37
           subb
                    $NUMERAL, %al
                                      # convert to int
           ami
                    addIn
                                      # and add to accumulator
39
  isAlpha:
                    $ALPHA, %al
           subb
                                      # convert to int
41
  addIn:
42
                    $TYPEMASK, %rax # 4 bits -> 64 bits
           andq
43
           addq
                    %rax, accumulator(%rbp) # insert the 4 bits
44
                                      # stringPtr++;
           incq
                    %rdi
45
           jmp
                    loop
                                      # and check for end
46
  done:
47
                    accumulator(%rbp), %rax # return accumulator;
           movq
48
                    %rbp, %rsp
                                     # restore stack pointer
           movq
                                     # restore frame pointer
           popq
                    %rbp
50
51
           ret
                                     # back to caller
```

Listing 12.6: Shifting bits (programmer assembly language).

It differs from the C version in several ways. First, since this is a leaf function, we do not save the argument in the stack frame. Instead, we simply use the register as the stringPtr variable:

We do, however, explicitly allocate stack space for the local variable:

```
hexToInt:
23
           pushq
                   %rbp
                                      # save frame pointer
24
                   %rsp, %rbp
                                      # new frame pointer
           movq
25
           addg
                   $localSize, %rsp # local vars. and arg.
26
27
           movq
                   $0, accumulator(%rbp)
                                               # accumulator = 0;
```

Although this is not required because this is a leaf function, it is somewhat better software engineering. If this function is ever modified such that it does call another function, the programmer may forget to allocate the stack space, which would then be required. There is less chance that saving the contents of the rdi register would be overlooked since it is the where the first argument is passed. Both of these issues are arguable design decisions.

Next, for the conversion from 4-bit integer values to 64-bit, we define a *bit mask*:

```
4 .equ TYPEMASK,0xf
```

Performing an and operation with this bit mask leaves the four low-order bits as they were and sets the 60 high-order bits all to zero. Then we simply add this to the 64-bit accumulator (which has already been shifted four bits to the left) it effectively insert the four bits into the correct location:

```
andq $TYPEMASK, %rax # 4 bits -> 64 bits

addq %rax, accumulator(%rbp) # insert the 4 bits
```

12.3 Multiplication

The hexToInt function discussed in Section 12.2 shows how to convert a string of hexadecimal characters into the integer they represent. That function uses the fact that each hexadecimal

character represents four bits. So as the characters are read from left to right, the bits in the accumulator are shifted four places to the left in order to make space for the next four-bit value. The character is converted to the four bits it represents and added to the accumulator.

Although the four-bit left shift seems natural for hexadecimal, it is equivalent to multiplying the value in the accumulator by sixteen. This follows from the positional notation used to write numbers. Add another hexadecimal digit to the right of an existing number effectively multiplies that existing number by sixteen. A little thought shows that this algorithm, shown in Algorithm 12.1, works in any number base.

Algorithm 12.1: Character to integer conversion.

```
1 accumulator = 0;
2 while more characters do
3 accumulator = base × accumulator;
4 tempInt = integer equivalent of the character;
5 accumulator = accumulator + tempInt;
```

Of course, you probably want to write programs that allow users to work with decimal numbers. So we need to know how to convert a string of decimal characters to the integer they represent. The characters that represent decimal numbers are in the range $30_{16} - 39_{16}$. Table 12.1 shows the 32-bit int that corresponds to each numeric character. For a string of character

Numeral	int					
(ASCII code)	(Binary number system)					
0011 0000	0000 0000 0000 0000 0000 0000 0000 0000					
0011 0001	0000 0000 0000 0000 0000 0000 0000 0001					
0011 0010	0000 0000 0000 0000 0000 0000 0000 0010					
0011 0011	0000 0000 0000 0000 0000 0000 0000 0011					
0011 0100	0000 0000 0000 0000 0000 0000 0000 0100					
0011 0101	0000 0000 0000 0000 0000 0000 0000 0101					
0011 0110	0000 0000 0000 0000 0000 0000 0000 0110					
0011 0111	0000 0000 0000 0000 0000 0000 0000 0111					
0011 1000	0000 0000 0000 0000 0000 0000 0000 1000					
0011 1001	0000 0000 0000 0000 0000 0000 0000 1001					

Table 12.1: Bit patterns (in binary) of the ASCII numerals and the corresponding 32-bit ints.

ters that represents a decimal integer, Algorithm 12.1 can be specialized to give Algorithm 12.2. (Recall that ":" is the bit-wise and operator.)

Algorithm 12.2: Decimal character to integer conversion.

```
 \begin{array}{ll} \text{1 accumulator} \leftarrow 0; \\ \textbf{2 while } \textit{more characters do} \\ \textbf{3} & \text{accumulator} \leftarrow 10 \times \text{accumulator}; \\ \textbf{4} & \text{tempInt} \leftarrow 0 \text{xf} \cdot \text{character}; \\ \textbf{5} & \text{accumulator} \leftarrow \text{accumulator} + \text{tempInt}; \\ \end{array}
```

Shifting N bits to the left multiplies a number by 2^N , so it can only be used to multiply be powers of two. Algorithm 12.2 multiplies the accumulator by 10, which cannot be accomplished with only shifts. Thus, we need to use the multiplication instruction for decimal conversions.

The multiplication instruction is somewhat more complicated than addition. The main problem is that the product can, in general, occupy the number of digits in the multiplier plus the number of digits in the multiplicand. This is easily seen by computing $99 \times 99 = 9801$ (in decimal). Thus in general,

```
8\text{-bit} \times 8\text{-bit} \rightarrow 16\text{-bit}

16\text{-bit} \times 16\text{-bit} \rightarrow 32\text{-bit}

32\text{-bit} \times 32\text{-bit} \rightarrow 64\text{-bit}
```

64-bit \times 64-bit \rightarrow 128-bit

The unsigned multiplication instruction is:

muls source

	8	meaning	number of bits
	b	byte	8
where <i>s</i> denotes the size of the operands:	W	word	16
	l	longword	32
	q	quadword	64

Intel® Syntax mul source

In the x86-64 architecture, the destination operand contains the multiplicand and must be in the al, ax, eax, or rax register, depending on the size of the operand, for the unsigned multiplication instruction, mul. This register is not specified as an operand. The instruction specifies the source operand, which contains the multiplier and must be the same size. It can be located in another behind the scene. general-purpose register or in memory. If the numbers are eight bits (hence, one number is in al), the high-order portion of the result will be in the ah register, and the low-order portion of the result will be in the al register. For sixteen and thirty-two bit numbers, the low-order portion of the product will be stored in a portion of the rax register and the high-order will be stored in a portion of the rdx register as shown in Table 12.2.

mul will probably change rdx behind the scene.

Operand		High-Order		
Size	of A Reg.	Result	Result	
8 bits	al	ah	al	
16 bits	ax	dx	ax	
32 bits	eax	edx	eax	
$64 \mathrm{\ bits}$	rax	rdx	rax	

Table 12.2: Register usage for the mul instruction.

For example, let's see how the computation $7 \times 24 = 168$ looks in 8-bit, 16-bit, and 32-bit values. First, note that:

$$\begin{array}{rcl} 7_{10} & = & 0000 & 0111_2 \\ & = & 07_{16} \\ 24_{10} & = & 0001 & 1000_2 \\ & = & 18_{16} \end{array}$$

and

$$168_{10} = 1010 \ 1000_2$$

= $a8_{16}$

Now, if we declare the constants:

byteDay: .byte 24 wordDay: 24 longDay:

> .long 24

These declarations cause the assembler to do the following:

- byteDay \rightarrow allocate one byte of memory and set the bit pattern of the byte to 0x18.
- wordDay \rightarrow allocate two bytes of memory and set the bit pattern of those two bytes to 0x0018.
- longDay \rightarrow allocate four bytes of memory and set the bit pattern of those four bytes to 0x00000018.

First, consider 8-bit multiplication. If eax contains the bit pattern 0x??????07, then

changes eax such that it contains 0x?????00a8. Notice that only the all portion of the A register can be used for the operand, but the result will occupy the entire ax portion of the register even though the result would fit into only the all portion. That is, the instruction *will* produce a 16-bit result, and anything stored in the ah portion will be lost.

Next, consider 16-bit multiplication. If eax contains 0x????0007, then

```
mulw wordDay
```

changes eax to contain 0x????00a8 and edx to contain 0x????0000. Two points are important in this example:

- the ah portion of the A register must be set to zero before executing the mulw instruction so that the ax portion contains the proper value, and
- the dx portion of the D register is used, even though the result is fits within the 16 bits of the ax register.

Finally, 32-bit multiplication. If eax contains 0x00000007, then

```
mull longDay
```

changes eax to contain 0x00000008 and edx to contain 0x00000000. This example shows the entire eax register must be used for the operand before mull is executed, and the entire edx register is used for the high-order portion of the result, even though it is not needed. That is, the instruction *will* produce a 64-bit result, and anything stored in the edx register will be lost.

These examples show that the rax and rdx registers are used without ever explicitly appearing in the instruction. You must be very careful not to write over a required value that is stored in one of these registers. Using the multiplication instruction requires some careful planning.

meaning

number of bits

8

16

32

64

There is also a signed multiply instruction, which has three forms:

imuls source
imuls source, destination
imuls immediate, source, destination

where *s* denotes the size of the operand:

| b | byte | | w | word | l | longword | q | quadword |

imul source

imul destination, source

imul destination, source, immediate

In the one-operand format the signed multiply instruction uses the rdx:rax register combination in the same way as the mul instruction.

In its two-operand format the destination must be a register. The source can be a register, an immediate value, or a memory location. The source and destination are multiplied, and the

result is stored in the destination register. Unfortunately, if the result is too large to fit into the destination register, it is simply truncated. In this case, both the CF and OF flags are set to 1. If the result was able to fit into the destination register, both flags are set to θ .

In its three-operand format the destination must be a register. The source can be a register or a memory location. The source is multiplied by the immediate value and the result is stored in the destination register. As in the two-operand form, if the result is too large to fit into the destination register, it is simply truncated. In this case, both the CF and OF flags are set to 1. If the result was able to fit into the destination register, both flags are set to 0.

The difference between signed and unsigned multiplication can be illustrated with the following multiplication of two 16-bit values. Given the declaration:

```
.data mOne: .word -1
```

and the initial conditions in the rdx and rax registers:

```
rdx 0x7fffec889ec8 140737161764552
rax 0x2ba1be79ffff 47973685395455
```

we will multiply the two 16-bit values in the memory location mone and the register ax. Notice that if we consider them to be signed integers, both values represent -1, and we would expect the result to be +1 (= 00000001₁₆). However, if we consider them to be unsigned integers, they both represent 65535_{10} , and we would expect the result to be 4294836225_{10} (= fffe0001₁₆).

Indeed, starting with the initial conditions above, the instruction:

```
        mulw
        m0ne

        yields:
        rdx
        0x7fffec88fffe
        140737161789438

        rax
        0x2balbe790001
        47973685329921
```

We see that the register combination dx:ax = fffe:0001. And with the same initial conditions, the instruction

With signed multiplication we get dx:ax = 0000:0001. Both of these operations multiplied 16-bit values to provide a 32-bit result. They each used the sixteen low-order bits of the rax and rdx registers for the result. Notice that the upper 48 bits of these registers were not changed and that neither "ax" nor "dx" appeared in either instruction.

Multiplication is used on line 18 in the decToInt function shown in Listing 12.7.

```
1 /*
2 * decToUInt.c
3 * Converts decimal character string to int.
4 * Bob Plantz - 15 June 2009
5 */
6
7 #include "decToUInt.h"
8 #define NUMERALMASK 0xf
9
10 unsigned int decToUInt(char *stringPtr)
11 {
12     unsigned int accumulator = 0;
13     unsigned int base = 10;
14     unsigned char current;
```

```
15
      current = *stringPtr;
16
      while (current != '\0')
      {
18
           accumulator = accumulator * base;
           current = current & NUMERALMASK;
20
           accumulator += (int)current;
21
           stringPtr++;
22
           current = *stringPtr;
24
      return accumulator;
25
26 }
```

Listing 12.7: Convert decimal text string to int (C).

As we can see on line 17 in Listing 12.8 the compiler has chosen to use the imull instruction for multiplication.

```
.file
                    "decToUInt.c"
           .text
  .globl decToUInt
                    decToUInt, @function
           .type
  decToUInt:
5
           pushq
                    %rbp
                    %rsp, %rbp
           movq
           movq
                    %rdi, -24(%rbp)
                    $0, -12(%rbp)
           movl
10
           movl
                    $10, -8(%rbp)
           movq
                    -24(%rbp), %rax
11
           movzbl
                    (%rax), %eax
12
                    %al, -1(%rbp)
           movb
13
           jmp
                    .L2
14
  .L3:
15
           movl
                    -12(%rbp), %eax
                                       # destination must
16
           imull
                    -8(%rbp), %eax
                                       #
                                             be in eax
17
           movl
                    %eax, -12(%rbp)
                                             register
18
                    $15, -1(%rbp)
           andb
                    -1(%rbp), %eax
           movzbl
20
           addl
                    %eax, -12(%rbp)
           adda
                    $1, -24(%rbp)
22
           movq
                    -24(%rbp), %rax
23
           movzbl
                    (%rax), %eax
24
           movb
                    %al, -1(%rbp)
25
  .L2:
26
           cmpb
                    $0, -1(%rbp)
27
           jne
                    .L3
28
           movl
                    -12(%rbp), %eax
29
           leave
31
                    decToUInt, .-decToUInt
           .size
32
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
33
                             .note.GNU-stack,"",@progbits
           .section
```

Listing 12.8: Convert decimal text string to int (gcc assembly language).

Recall that the destination must be a register. So the value to be multiplied must be loaded from its memory location into a register, multiplied, then stored back into memory:

```
movl -12(%rbp), %eax # destination must
```

```
imull -8(%rbp), %eax # be in a

movl %eax, -12(%rbp) # register
```

It may appear that the compiler has made an error here. Since both the multiplier and the multiplicand are 32-bit values, the product can be 64 bits wide. However, the compiler has chosen code that assumes the product will be no wider than 32 bits. This can lead to arithmetic errors when multiplying large integers, but according to the C programming language standard [10] this is acceptable:

A computation involving unsigned operands can never overflow, because a result that cannot be represented by the resulting unsigned integer type is reduced modulo the number that is one greater than the largest value that can be represented by the resulting type.

In Listing 12.9 the programmer has chosen unsigned multiplication, mull.

```
1 # decToUInt.s
2 # Converts decimal character string to unsigned int.
3 # Bob Plantz - 15 June 2009
  # Calling sequence:
          rdi <- address of decimal string to be converted
          call
                   decToUInt
8 # returns 64-bit int represented by the decimal string
10 # Useful constants
           .equ
                   NUMERALMASK, 0xf
11
           .equ
                   DECIMAL, 10
12
13 # Stack frame, showing local variables and arguments
           .equ
                   accumulator,-8
14
                   current,-1
15
           .equ
           .equ
                   localSize, -16
16
17
           .text
18
           .globl
                   decToUInt
19
                   decToUInt, @function
20
           .type
  decToUInt:
21
          pushq
                   %rbp
                                     # save base pointer
22
          movq
                   %rsp, %rbp
                                     # new base pointer
23
                   $localSize, %rsp # local vars. and arg.
          addq
24
25
          movl
                   $0, accumulator(%rbp)
                                              # accumulator = 0;
26
 loop:
27
                                     # load character
          movb
                   (%rdi), %sil
28
                   $0, %sil
                                     # at end yet?
          cmpb
29
                   done
                                     # yes, all done
          jе
31
          movl
                   $DECIMAL, %eax
                                     # multiplier
          mull
                   accumulator(%rbp) # accumulator * 10
33
                   %eax, accumulator(%rbp) # update accumulator
          movl
34
35
                   $NUMERALMASK, %esi # char -> int
          andl
36
          addl
                   %esi, accumulator(%rbp) # add the digit
37
          incq
                   %rdi
                                     # stringPtr++;
38
                   loop
                                     # and check for end
          jmp
39
40 done:
                   accumulator(%rbp), %eax # return accumulator;
          movl
41
          movq
                   %rbp, %rsp
                                    # restore stack pointer
42
```

```
popq %rbp # restore base pointer
ret # back to caller
```

Listing 12.9: Convert decimal text string to int (programmer assembly language).

And since this is a leaf function, the register used to pass the address of the text string (rdi) is simply used as the pointer variable rather than allocate a register save area in the stack frame:

```
27 loop:
           movb
                   (%rdi), %sil
                                      # load character
                   $0, %sil
                                      # at end yet?
           cmpb
29
           jе
                   done
                                      # yes, all done
30
                   $DECIMAL, %eax
                                      # multiplier
           movl
32
                   accumulator(%rbp) # accumulator * 10
33
           mull
           movl
                   %eax, accumulator(%rbp) # update accumulator
34
                   $NUMERALMASK, %esi # char -> int
           andl
36
                   %esi, accumulator(%rbp) # add the digit
           addl
37
           inca
                                      # stringPtr++;
38
           jmp
                   loop
                                      # and check for end
```

This is safe because no other functions are called within this loop. Of course, the programmer must be careful that the pointer variable (rdi) is not changed unintentionally.

The discussion of multiplication here highlights a problem with C — if an arithmetic operation produces a result that is too large to fit into the allocated data type, the most significant portion of the result is lost. It is important to realize that this loss of information can occur in intermediate results when executing even simple arithmetic expressions. It is therefore *VERY IMPORTANT* that you analyze each step of arithmetic operations with the range of values that is possible at that step in order to ensure that the result does not overflow the allocated data type. This is one more place where your knowledge of assembly language can help you to write better programs in C/C++.

12.4 Division

Intel®

Division poses a different problem. In general, the quotient will not be larger than the dividend (except when attempting to divide by zero). Division is also complicated by the existence of a remainder. The divide instruction starts with a dividend that is twice as wide as the divisor. Both the quotient and remainder are the same width as the divisor. The unsigned division instruction is:

divs source

div

source

```
where s denotes the size of the operands: \begin{bmatrix} \underline{s} & \underline{\text{meaning}} \\ \text{b} & \overline{\text{byte}} & 8 \\ \text{w} & \text{word} & 16 \\ \text{l} & \text{longword} & 32 \\ \text{q} & \text{quadword} & 64 \end{bmatrix}
```

The *source* operand specifies the divisor. It can be either a register or a memory location. Table 12.3 shows how to set up the registers with the dividend and where the quotient and remainder will be located after the unsigned division instruction, div, is executed. Notice that the quotient is the C "/" operation, and the remainder is the "%" operation.

12.4. DIVISION 281

Operand	High-Order	Low-Order		
Size	Dividend	Dividend	Quotient	Remainder
8 bits	ah	al	al	ah
16 bits	dx	ax	ax	dx
$32 \mathrm{\ bits}$	edx	eax	eax	edx
64 bits	rdx	rax	rax	rdx

Table 12.3: Register usage for the div instruction.

For example, let's see how the computation $93 \div 19 = 4$ with remainder 17 looks in 8-bit, 16-bit, and 32-bit values. First, note that:

$$\begin{array}{rcl} 19_{10} & = & 0001 \ 0011_2 \\ & = & 13_{16} \\ \\ 93_{10} & = & 0101 \ 1101_2 \\ & = & 5d_{16} \end{array}$$

Now if we declare the constants:

byteDivisor:

.byte 19

wordDivisor:

.word 19

longDivisor:

.long 19

These declarations cause the assembler to do the following:

- byteDivisor \rightarrow allocate one byte of memory and set the bit pattern of the byte to 0x13.
- wordDivisor \rightarrow allocate two bytes of memory and set the bit pattern of those two bytes to 0x0013.
- longDivisor \rightarrow allocate four bytes of memory and set the bit pattern of those four bytes to 0x00000013.

First, consider 8-bit division. If eax contains the bit pattern 0x????905d, then

```
divb byteDivisor
```

changes eax such that it contains 0x?????1104. Notice that ah had to be set to 0 *before* executing divb even though the dividend fits into one byte. That's because the divb instruction starts with the ah:al pair as a 16-bit number. We also see that after executing the instruction, ax contains what appears to be a much larger number as a result of the division. Of course, we no longer consider ax, but al (the quotient) and ah (the remainder) as two separate numbers.

Next, consider 16-bit division. If eax contains 0x????005d and edx 0x????0000, then

```
divw wordDivisor
```

changes eax to contain 0x????0004 and edx to contain 0x????0011. You may wonder why the divw instruction does not start with the 32-bit dividend in eax. This is for backward compatibility — Intel processors prior to the 80386 had only 16-bit registers.

Finally, 32-bit division. If eax contains 0x00000005d and edx 0x00000000, then

```
divl longDivisor
```

changes eax to contain 0x00000004 and edx to contain 0x00000011. Again, we see that the entire edx register must be filled with zeros before executing the divl instruction, even though the dividend fits within two bytes.

One of the more common errors with division occurs when performing repeated division of a number. Since the first division places the remainder in the area occupied by the high-order portion of the dividend, you must remember to set that area to zero before dividing again.

The signed division instruction is:

idivs source

where *s* denotes the size of the operand:

8	meaning	number of bits
b	byte	8
W	word	16
ι	longword	32
q	quadword	64

Intel® Syntax idiv source

Unlike the signed multiply instruction, signed divide only has one form, which is the same as unsigned divide. That is, the divisor is in the source operand, and the dividend is set up in the rax and rdx registers as shown in Table 12.3.

We can see the difference between signed and unsigned division by dividing a 32-bit value by a 16-bit value. Given the declaration:

```
.data
mOne: .word -1
```

we load the 32-bit dividend, +1, into the dx:ax register pair

```
movw $0, %dx
movw $1, %ax
```

This give the conditions

```
rdx 0x7fffb6d00000 140736260472832
rax 0x2ae8f4310001 47180017631233
```

Now, the unsigned value in the mone variable is $0xff_{16} = 255_{10}$. When we divide 1 by 255 we expect to get 0 with a remainder of 1. Indeed, unsigned division:

```
divw m0ne
```

yields:

```
rdx 0x7fffb6d00001 140736260472833
rax 0x2ae8f4310000 47180017631232
```

The quotient is in ax and is 0, while the remainder (in dx) is 1.

With the same initial conditions, when we use the signed divide instruction, we are dividing +1 by -1. Then we expect to get -1 with a remainder of 0. Indeed, signed division:

```
idivw mOne
```

yields:

```
rdx 0x7fffb6d00000 140736260472832
rax 0x2ae8f431ffff 47180017696767
```

The quotient is in ax and is $ffff_{16} (= -1)$, while the remainder (in dx) is 0.

The "/" operation is used on line 34 in the intToUDec function shown in Listing 12.7, and the "%" operation is used on line 35.

```
1 /*
2 * intToUDec.c
3 *
4 * Converts an int to corresponding unsigned text
```

12.4. DIVISION 283

```
* string representation.
   * input:
        32-bit int
        pointer to at least 10-char array
   * output:
        null-terminated string in array
   * Bob Plantz - 15 June 2009
14
16 #include "intToUDec.h"
17 #define TOASCII 0x30
19 void intToUDec(char *decString, int theInt)
20 {
      unsigned int x = theInt;
21
      int base = 10;
22
      char reverseArray[10];
23
      char digit;
      char *ptr = reverseArray;
25
      *ptr = '\0';
                        // start with NUL
27
      ptr++;
      if (x == 0)
                         // zero case
29
      {
          *ptr = '0';
31
          ptr++;
32
33
      while (x > 0)
                        // create the string
34
35
          digit = x % base;
36
          x = x / base;
37
          digit = TOASCII | digit;
38
          *ptr = digit;
          ptr++;
40
      }
41
      do
                         // reverse the string
42
43
          ptr--;
44
          *decString = *ptr;
          decString++;
46
      } while (*ptr != '\0');
47
48 }
```

Listing 12.10: Convert unsigned int to decimal text string (C).

The assembly language generated by gcc is shown in Listing 12.11 (with comments added).

```
.file "intToUDec.c"
.text
.globl intToUDec
.type intToUDec, @function
intToUDec:
pushq %rbp
movq %rsp, %rbp
movq %rsp, %rbp
movq %rsi, -40(%rbp)
movl %esi, -44(%rbp)
```

```
movl
                    -44(%rbp), %eax
10
                    %eax, -20(%rbp)
           movl
11
           movl
                    $10, -16(%rbp)
12
           leag
                    -32(%rbp), %rax
13
           movq
                    %rax, -8(%rbp)
14
           movq
                    -8(%rbp), %rax
15
           movb
                    $0, (%rax)
           addq
                    $1, -8(%rbp)
17
           cmpl
                    $0, -20(%rbp)
18
                    .L3
           jne
19
                    -8(%rbp), %rax
           movq
20
                    $48, (%rax)
           movb
21
           addq
                    $1, -8(%rbp)
22
                    .L3
23
           jmp
24
  .L4:
                                        # load base value (10)
           movl
                    -16(%rbp), %edx
25
           movl
                    -20(%rbp), %eax
                                        # load the integer
26
           movl
                    %eax, -72(%rbp)
27
           movl
                    -72(%rbp), %eax
28
           movl
                    %edx, %ecx
                                        # move the base value because
                    $0, %edx
           movl
                                            edx forms part of dividend
30
           divl
                                        # this is for % operation
                    %есх
31
                    %edx, %eax
           movl
                                        # move remainder
32
                    %al, -9(%rbp)
                                        # type cast to char and store
           movb
                                        # load base value (10)
           movl
                    -16(%rbp), %eax
34
           movl
                    %eax, -68(%rbp)
                                        #
                                              and store it
           movl
                    -20(%rbp), %eax
                                        # load the integer
36
           movl
                    $0, %edx
                                             edx forms part of dividend
37
                    -68(%rbp)
                                        # this is for / operation
           divl
38
           movl
                    %eax, -20(%rbp)
                                        \# x = x / base;
39
           orb
                    $48, -9(%rbp)
                                        # digit = TOASCII | digit;
40
           movq
                    -8(%rbp), %rdx
                                        # load ptr for dereference
41
                    -9(%rbp), %eax
                                        # load digit
           movzbl
42
                    %al, (%rdx)
                                        # *ptr = digit;
           movb
43
           addq
                    $1, -8(%rbp)
                                        # ptr++;
  .L3:
45
           cmpl
                    $0, -20(%rbp)
46
           ine
                    .L4
47
  .L5:
                    $1, -8(%rbp)
           subq
49
                    -8(%rbp), %rax
50
           movq
           movzbl
                   (%rax), %edx
51
                    -40(%rbp), %rax
           movq
           movb
                    %dl, (%rax)
53
           addq
                    $1, -40(%rbp)
54
                    -8(%rbp), %rax
           movq
55
           movzbl
                    (%rax), %eax
56
           testb
                    %al, %al
57
           jne
                    . L5
58
           leave
           ret
60
                    intToUDec, .-intToUDec
61
           .size
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
62
                             .note.GNU-stack, "",@progbits
           .section
```

Listing 12.11: Convert unsigned int to decimal text string (gcc assembly language).

285 12.4. DIVISION

Compare the code sequence from lines 25 - 33:

from one execution of the divl instruction.

```
movl
                   -16(%rbp), %edx
                                       # load base value (10)
25
          movl
                   -20(%rbp), %eax
                                       # load the integer
26
                   %eax, -72(%rbp)
          movl
27
          movl
                   -72(%rbp), %eax
28
                   %edx, %ecx
                                       # move the base value because
          movl
          movl
                   $0, %edx
                                           edx forms part of dividend
30
                                       # this is for % operation
          divl
                   %ecx
31
          movl
                   %edx, %eax
                                       # move remainder
32
                   %al, -9(%rbp)
                                       # type cast to char and store
          movb
  with that from lines 34 - 39:
                                       # load base value (10)
          movl
                   -16(%rbp), %eax
34
          movl
                   %eax, -68(%rbp)
                                            and store it
35
                                      # load the integer
          movl
                   -20(%rbp), %eax
                                           edx forms part of dividend
          movl
                   $0, %edx
37
          divl
                   -68(%rbp)
                                       # this is for / operation
          movl
                   %eax, -20(%rbp)
                                      \# x = x / base:
39
```

Even though the divl instruction produces both the quotient ("/" operation) and remainder ("%" operation), the compiler uses almost the same code sequence twice, once for each operation. 0 = in rdx(The instruction on line 28 clearly has no effect; recall that this is unoptimized by the compiler.) register before

In Listing 12.12 the programmer has chosen to retrieve both the quotient and the remainder

```
1 # intToUDec.s
2 # Converts unsigned int to corresponding unsigned decimal string
  # Bob Plantz - 15 June 2009
5 # Calling sequence
6 #
           esi <- value of the int
           rdi <- address of place to store string
           call intToUDec
  # Useful constant
           .equ
                   asciiNumeral,0x30
  # Stack frame
11
           .equ
                   reverseArray, -12
           .equ
                   localSize, -16
13
14 # Read only data
           .section .rodata
15
16 ten:
           .long
                   10
17 # Code
           .text
18
           .globl
                   intToUDec
19
                   intToUDec, @function
           .type
  intToUDec:
21
           pushq
                   %rbp
                                     # save caller's base ptr
22
           movq
                   %rsp, %rbp
                                     # our stack frame
23
           addq
                   $localSize, %rsp
                                              # local char array
24
25
           movl
                   %esi, %eax
                                     # eax used for division
26
           leag
                   reverseArray(%rbp), %r8 # ptr to local array
27
           movb
                   $0, (%r8)
                                     # store NUL
28
                   %r8
                                     # increment pointer
           incq
29
30
                   $0, %eax
                                     # integer == 0?
           cmpl
31
           jne
                   stringLup
                                     # no, start on the string
32
```

```
$'0', (%r8)
           movb
                                      # yes, this is the string
33
                                      # for reverse copy
           incq
                    %r8
34
  stringLup:
           cmpl
                    $0, %eax
                                      # integer > 0?
36
           jbe
                    copyLup
                                      # no, do reverse copy
37
           movl
                    $0, %edx
                                      # yes, high-order = 0
38
           divl
                                      # divide by ten
                    ten
39
           orb
                    $asciiNumeral. %dl # convert to ascii
40
           movb
                    %dl, (%r8)
                                      # store character
                    %r8
                                      # increment pointer
           incq
42
           jmp
                    stringLup
                                      # check at top
43
44
  copyLup:
45
                                      # decrement pointer
46
           decq
                    %r8
47
           movb
                    (%r8), %dl
                                      # get char
           movb
                    %dl, (%rdi)
                                      # store it
           incq
                    %rdi
                                      # increment storage pointer
49
           cmpb
                    $0, %dl
                                      # NUL character?
50
                                      # no, keep copying
           ine
                    copyLup
51
           movq
                    %rbp, %rsp
                                      # delete local vars.
53
                                      # restore caller base ptr
           popq
                    %rbp
           ret
55
```

Listing 12.12: Convert unsigned int to decimal text string (programmer assembly language).

On line 38 the high-order 32 bits of the quotient (edx register) are set to 0.

```
movl $0, %edx # yes, high-order = 0
divl ten # divide by ten
orb $asciiNumeral, %dl # convert to ascii
movb %dl, (%r8) # store character
```

The division on line 39 leaves "x / base" in the eax register for the next execution of the loop body. It also places "x % base" in the edx register. We know that this value is in the range 0-9 and thus fits entirely within the dl portion of the register. Lines 40 and 41 show how the value is converted to its ASCII equivalent and stored in the local char array.

As in the decToUInt function (Listing 12.9), since this is a leaf function, the register used to pass the address of the text string (rdi) is simply used as the pointer variable rather than allocate a register save area in the stack frame. Similarly, the eax register is used as the local "x" variable.

12.5 Negating Signed ints

For dealing with signed numbers, the x86-64 architecture provides an instruction that will perform the two's complement operation. That is, this instruction will negate an integer that is stored in the two's complement notation. The mnemonic for the instruction is neg.

negs source

number of bits meaning <u>s</u> 8 b byte where *s* denotes the size of the operand: word 16 W ι longword 32 q quadword 64

Intel® Syntax neg source

neg performs a two's complement operation on the value in the operand, which can be either a memory location or a register. Any of the addressing modes that we have covered can be used to specify a memory location.

12.6 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

12.6.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmovcc	%reg/mem	%reg	conditional move	230
mov <i>s</i>	\$imm/%reg	%reg/mem	move	141
movs <i>ss</i>	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic / logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
add s	mem	%reg	add	189
and <i>s</i>	\$imm/%reg	%reg/mem	bit-wise and	258
and <i>s</i>	mem	%reg	bit-wise and	258
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
decs	%reg/mem		decrement	220
divs	%reg/mem		unsigned divide	280
idivs	%reg/mem		signed divide	282
imul <i>s</i>	%reg/mem		signed multiply	276
inc <i>s</i>	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
sub <i>s</i>	\$imm/%reg	%reg/mem	subtract	190
muls	%reg/mem		unsigned multiply	275
negs	%reg/mem		negate	286
ors	\$imm/%reg	%reg/mem	bit-wise inclusive or	258
ors	mem	%reg	bit-wise inclusive or	258
sal s	\$imm/%cl	%reg/mem	shift arithmetic left	269
sars	\$imm/%cl	%reg/mem	shift arithmetic right	268
shl <i>s</i>	\$imm/%cl	%reg/mem	shift left	269
shr <i>s</i>	\$imm/%cl	%reg/mem	shift right	268
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210
xors	\$imm/%reg	%reg/mem	bit-wise exclusive or	258
xors	mem	%reg	bit-wise exclusive or	258

s = b, w, l, q; w = l, q

opcode	location	action	see page:
call	label	call function	156
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
jcc	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

cc = condition codes

12.6.2 Addressing Modes

register direct:	The data value is located in a CPU register.		
- • 8	syntax: name of the register with a "%" prefix.		
	example: movl %eax, %ebx		
·	•		
immediate	The data value is located immediately after the instruc-		
data:	tion. Source operand only.		
	syntax: data value with a "\$" prefix.		
	example: movl \$0xabcd1234, %ebx		
base register	The data value is located in memory. The address of the		
plus offset:	memory location is the sum of a value in a base register		
-	plus an offset value.		
	<i>syntax</i> : use the name of the register with parentheses		
	around the name and the offset value immediately be-		
	fore the left parenthesis.		
	example: movl \$0xaabbccdd, 12(%eax)		
rip-relative:	The target is a memory address determined by adding		
	an offset to the current address in the rip register.		
	syntax: a programmer-defined label		
	example: je somePlace		

12.7 Exercises

12-1 (§12.2) Write a program in assembly language that

- a) prompts the user to enter a number in binary,
- b) reads the user input into a char array, and
- c) converts the string of characters in the char array into a decimal integer stored in a local int variable.
- d) calls printf to display the int.

Your program should use the writeStr function from Exercise 11-3 to display the user prompt. And it should use the readStr function from Exercise 11-4 or 11-6 to read the user's input.

12.7. EXERCISES 289

Your program should read the user's input into the local char array, then perform the conversion using the stored characters. Do not do the conversion as the characters are entered by the user.

Your program does not need to check for user errors. You can assume that the user will enter only ones and zeros. And you can assume that the user will not enter more that 32 bits. (Be careful when you test your program.)

12-2 (§12.2) Write a program in assembly language that allows the user to enter a decimal integer then displays it in binary.

Your program should convert the decimal integer into the corresponding C-style text string of ones and zeros, then use the writeStr function from Exercise 11-3 to display the text string.

This program will require some careful planning in order to get the bits to print in the correct order.

12-3 (§12.3) Write a function, mul16, in assembly language that takes two 16-bit integers as arguments and returns the 32-bit product of the argument. Write a main driver function to test mul16. You may use printf and scanf in the main function for the user interface.

Hint: Notice that most of the numbers in this problem are 16-bit unsigned integers. Read the man pages for printf and scanf. In particular, the "u" flag character is used to indicate a short (16-bit) int.

- **12-4** (§12.4) Write a function, div32, in assembly language that implements the C / operation. The function takes two 32-bit integers as arguments and returns the 32-bit quotient of the first argument divided by the second. Write a main driver function to test div32. You may use printf and scanf in the main function for the user interface.
- **12-5** (§12.4) Write a function, mod32, in assembly language that implements the C % operation. The function takes two 32-bit integers as arguments and returns the 32-bit quotient of the first argument divided by the second. Write a main driver function to test mod32. You may use printf and scanf in the main function for the user interface.
- **12-6** (§12.4) Write a function in assembly language, decimal2uint, that takes two arguments: a pointer to a char, and a pointer to an unsigned int.

```
int decimal2uint(char *, unsigned int *);
```

The function assumes that the first argument points to a C-style text string that contains only numeric characters representing an unsigned decimal integer. It computes the binary value of the integer and stores the result at the location where the second argument points. It returns zero.

Write a program that demonstrates the correctness of decimal2uint. Your program will allocate a char array, call readStr (from Exercise 11-4 or 11-5) to get a decimal integer from the user, and call decimal2uint to convert the text string to binary format. Then it adds an integer to the user's input integer and uses printf to display the result.

Hint: Start with the program from Exercise 12-1. Rewrite it so that the conversion from the text string to the binary number is performed by a function. Then modify the function so that it performs a decimal conversion instead of binary.

12-7 (§12.4) Write a function in assembly language, uint2dec, that takes two arguments: a pointer to a char, and an unsigned int.

```
int uint2dec(char *, unsigned int);
```

The function assumes that the first argument points to a char array that is large enough to hold a text string that represents the largest possible 32-bit unsigned integer in decimal. It computes the characters that represent the integer (the second argument) and stores

this representation as a C-style text string where the first argument points. It returns zero.

Write an assembly language program that demonstrates the correctness of uint2dec. Your program will allocate one char array, call readStr (from Exercise 11-4) or 11-6 to get a decimal integer from the user, and call decimal2uint (from Exercise 12-6) to convert the text string to binary format. It should add a constant integer to this converted value. Then it calls uint2dec to convert the sum to its corresponding text string, storing the string in the char array.

Hint: Start with the program from Exercise 10-6. Rewrite it so that the conversion from the binary number to the text string is performed by a function. Then modify the function so that it performs a decimal conversion instead of binary.

12-8 (§12.3) Modify the program in Exercise 12-7 so that it deals with signed ints. Hint: Write the function decimal2sint, which will call decimal2uint, and write the function sint2dec, which will call uint2dec.

Chapter 13

Data Structures

An essential part of programming is determining how to organize the data. Homogeneous data is often grouped in an array, and heterogeneous data in a struct. In this chapter, we study how both these data structures are implemented.

13.1 Arrays

An array in C/C++ consists of one or more elements, all of the same type, arranged contiguously in memory. To access an element in an array you need to specify two address-related items:

- the beginning of the array, and
- the number of the element to access. (Element numbering begins at zero.)

For example, given the declaration:

```
int array[50];
```

you can store an integer, say 123, in the ith element with the statement

```
array[i] = 123;
```

In this example the beginning of the array is specified by using the name, and the number of the element is specified by the [...] syntax, as illustrated by the program in Listing 13.1.

```
* arrayElement.c
  * Stores a value in one element of an array.
  * Bob Plantz - 15 June 2009
   */
7 #include <stdio.h>
9 int main(void)
      int myArray[50];
      int i = 25;
12
      myArray[i] = 123;
14
      printf("The value is %i\n", myArray[i]);
16
17
      return 0;
18 }
```

Listing 13.1: Storing a value in one element of an array (C).

We would expect this program to allocate $4\times50=200$ bytes for myArray, plus 4 bytes for i in the local variable area. Indeed, the gcc-generated assembly language in Listing 13.2 shows that this total (204) has been increased to the next multiple of sixteen, and 208 bytes have been allocated in the stack frame.

```
.file
                    "arrayElement.c"
           .section
                             .rodata
  .LC0:
           .string "The value is %i\n"
           .text
  .globl main
                    main, @function
           .type
  main:
8
           pushq
                    %rbp
           movq
                    %rsp, %rbp
10
                                        # myArray and i
           subq
                    $208, %rsp
11
           movl
                    $25, -4(%rbp)
                                        # i = 25;
12
                                        # load i
           movl
                    -4(%rbp), %eax
13
                                        # convert to 64-bit
           cltq
14
           movl
                    $123, -208(%rbp,%rax,4) # myArray[i] = 123;
15
           movl
                    -4(%rbp), %eax
                                        # load i
16
17
           cltq
                                        # convert to 64-bit
                    -208(%rbp,%rax,4), %esi # esi <- myArray[i]
           movl
18
           movl
                    $.LC0, %edi
19
                    $0, %eax
20
           movl
           call
                    printf
21
           movl
                    $0, %eax
           leave
23
           ret
24
           .size
                    main. .-main
25
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .section
                             .note.GNU-stack,"",@progbits
```

Listing 13.2: Storing a value in one element of an array (qcc assembly language).

Next, we see that the number of the element that is being accessed, 25, is stored in the variable i. Then it is loaded into eax and converted from 32-bit to 64-bit.

```
movl $25, -4(%rbp) # i = 25;

movl -4(%rbp), %eax # load i

cltq # convert to 64-bit
```

The next instruction

```
5 movl $123, -208(%rbp,%rax,4) # myArray[i] = 123;
```

uses an addressing mode for the destination that is new to you, *indexed*. The syntax in the GNU assembly language is

```
offset(base_register_name, index_register_name, scale_factor)
```

When it is zero, the offset is not required.

indexed: The data value is located in memory. The address of the memory location is the sum of the value in the base register plus the scale factor times the value in the index register, plus the offset.

13.1. ARRAYS 293

syntax: place parentheses around the comma separated list — $base_register$, $index_register$, scale — and preface it with the offset.

The indexed addressing mode allows us to specify

- the beginning address of the array,
- the index, and
- the number of bytes in each element

in one instruction. The number of bytes in each element can be 1, 2, 4, or 8. Both registers, the beginning address register and the index register, must be the same size. (Hence the cltq instruction on line 14 of Listing 13.4 to convert the index value from a 32 to 64 bits in the rax register.)

So from the destination operand of the instruction on line 15, we can see that

- the first byte of myArray is -208 bytes from the stack frame pointer, rbp,
- the index into the array, i, is in rax, and
- each array element is four bytes.

Thus, the address of the element in the array is given by

```
effective address = 4 \times \text{index in rax} + \text{address in rbp} - 208
```

Now that we know how a single array element is accessed, let us see how an entire array is processed.

```
* clearArray1.c
   * Allcates an int array, stores zero in each element,
   * and prints results.
   * Bob Plantz - 16 June 2009
   */
7 #include <stdio.h>
9 int main(void)
      int intArray[10];
11
      int index;
12
      index = 0;
14
      while (index < 10)
15
      {
16
           intArray[index] = 0;
17
           index++;
18
      index = 0;
20
      while (index < 10)</pre>
21
22
           printf("intArray[%i] = %i\n", index, intArray[index]);
           index++;
24
      return 0;
26
27 }
```

Listing 13.3: Clear an array (C).

The gcc compiler generated the assembly language shown in Listing 13.4 for this array clearing program.

```
"clearArray1.c"
           .file
           .section
                             .rodata
2
  .LC0:
           .string "intArray[%i] = %i\n"
           .text
5
  .globl main
           .type
                    main, @function
7
  main:
                    %rbp
           pushq
           movq
                    %rsp, %rbp
10
           subq
                    $48, %rsp
11
                    $0, -4(%rbp)
                                             # index = 0;
           movl
12
           jmp
                    .L2
13
  .L3:
                                             # load current index value
           movl
                    -4(%rbp), %eax
15
                                             # convert to 64 bits
           cltq
16
           movl
                    $0, -48(%rbp,%rax,4)
                                             # intArray[index] = 0;
17
           addl
                    $1, -4(%rbp)
                                             # index++;
18
  .L2:
19
           cmpl
                    $9, -4(%rbp)
20
                    .L3
           jle
21
           movl
                    $0, -4(%rbp)
                                             # index = 0;
22
           jmp
                    .L4
23
  .L5:
24
                                             # load current index value
           movl
                    -4(%rbp), %eax
25
           cltq
                                             # convert to 64 bits
26
                    -48(%rbp,%rax,4), %edx # load array element
           movl
27
                    -4(%rbp), %esi
                                             # load current index value
           movl
28
                    $.LC0, %edi
           movl
29
                    $0, %eax
                                             # no floats
           movl
30
           call
                    printf
31
           addl
                                             # index++;
                    $1, -4(%rbp)
32
  .L4:
           cmpl
                    $9, -4(%rbp)
34
           jle
                    .L5
35
           movl
                    $0, %eax
36
           leave
37
           ret
           .size
                    main, .-main
39
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
40
                             .note.GNU-stack, "",@progbits
           .section
41
```

Listing 13.4: Clear an array (gcc assembly language).

We can see from line 13

```
movl $0, -48(%rbp,%rax,4) # intArray[index] = 0;
```

that the address of the first element of this array is 0*4-48=-48 from the address in rbp, and the address of the last element is 9*4-48=-12 from the address in rbp. Since this function does not call any others, the array is stored in the red zone.

Indexing through the array is accomplished by loading the current value of the index variable into the rax register. Although this example simply increments the index through the array, you can see that the value used to index the array element is independent of maintaining the beginning address of the array.

13.1. ARRAYS 295

The third value in the parentheses, 4, allows you to use the actual element number as the array index. This is clearly more convenient — hence, less error prone — than having to compute the number of bytes from the beginning of the array using the index value.

If we did not have this addressing mode, we would have to do something like:

```
# clear the array
.L3:
        movl
                -4(%rbp), %eax
        cltq
                                  # multiply index by 4
        salq
                $2, %rax
        leaq
                -48(%rbp), %rsi # address of array start
                                  # address of current element
        addg
                %rax, %rsi
        movl
                $0, (%rsi)
                                  # store zero there
        addl
                $1, -4(%rbp)
                                  # index ++
.L2:
        cmpl
                $9, -4(%rbp)
        jle
                 .L3
```

Although this is logically correct, it requires two more instructions and uses more registers.

RISC architectures (e.g., PowerPC, MIPS, Itanium) typically do not have the indexed addressing mode, hence this algorithm must be used.

Listing 13.5 shows the equivalent program written in assembly language.

```
1 # clearArray2.s
2 # Allocates an int array, stores zero in each element,
3 # and prints results.
4 # Bob Plantz - 16 June 2009
6 # Stack frame
                   intArray,-40
                                     # space for 10 ints in the array
           .equ
                   rbxSave,-48
                                     # preserve registers
           .equ
                   r12Save, -56
           .equ
                   localSize, -64
           .equ
10
11
  # Constant data
12
          .section .rodata
  format: .string "intArray[%i] = %i\n"
14
15
16 # The progam
17
           .text
           .globl main
18
           .type
                   main, @function
20 main:
                                          # save caller base pointer
          pushq
                   %rbp
21
                   %rsp, %rbp
                                          # set our base pointer
          movq
22
          addq
                   $localSize, %rsp
                                          # local variables
          movq
                   %rbx, rbxSave(%rbp)
                                          # save regs.
24
                   %r12, r12Save(%rbp)
          movq
25
  # clear the array
          movq
                   $0, %rax
                                          # index = 0
28
          leag
                   intArray(%rbp), %rbx # beginning of array
29
30 clearLup:
          movl
                   $0, (%rbx,%rax,4)
                                          # store zero
31
                                          # index++
          incq
                   %rax
32
          cmpq
                   $9, %rax
                                          # all filled?
33
```

```
jle
                                           # do rest of elements
                    clearLup
34
35
  # print the array
                    $0, %r12
                                           # index = 0
           mova
37
           leaq
                    intArray(%rbp), %rbx # beginning of array
38
  printLup:
39
                    (%rbx,%r12,4), %edx # load element value
           movl
           movl
                    %r12d. %esi
                                           # get index value
41
           movq
                    $format, %rdi
                                           # format string
42
           movl
                    $0, %eax
                                           # no floats
43
           call
                    printf
44
                    %r12
                                           # index++
           incq
45
           cmpq
                    $9, %r12
                                           # all filled?
46
                                           # do rest of elements
                    printLup
47
           jle
48
           movq
                    rbxSave(%rbp), %rbx # restore regs.
49
                    r12Save(%rbp), %r12
           movq
50
                    $0, %eax
                                           # return 0;
           movl
51
                                           # remove local vars
           movq
                    %rbp, %rsp
52
                                           # restore caller base ptr
           popq
                    %rbp
           ret
                                           # back to OS
```

Listing 13.5: Clear an array (programmer assembly language).

This version uses a do-while loop instead of a while loop entered at the bottom. The index and the address of the beginning of the array are maintained in registers.

Using a register for the index value presents a potential problem. Recall that some registers are guaranteed to be preserved by a function (Table 6.4, page 121). We have used r12 for the print do-while loop in this program because it calls another function — printf. The current value of index must be copied to the correct argument register for the call to printf:

```
movl %r12d, %esi # get index value
```

Although the operating system probably does not depend on registers being saved, we have done so in this program:

```
movq %rbx, rbxSave(%rbp) # save regs.
movq %r12, r12Save(%rbp)
and:
movq rbxSave(%rbp), %rbx # restore regs.
movq r12Save(%rbp), %r12
```

13.2 structs (Records)

just to be safe.

An array is useful for grouping homogeneous data items that are of the same data type. A record (struct in C/C++) is used for grouping heterogeneous data items, which may be of the same or different data types. For example, an array is probably better for storing a list of test scores in a program that works with the i^{th} test score, but a struct might be better for storing the coordinates of a point on an x-y graph.

The data elements in a struct are usually called *fields*. Accessing a field in a struct also requires two address-related items:

- the name of the struct, and
- the name of the field.

Consider the C program in Listing 13.6

```
* structField1.c
   * Allcates two structs and assigns a value to each field
   * in each struct.
   * Bob Plantz - 16 June 2009
  #include <stdio.h>
10 struct the Tag
11
     char aByte;
     int anInt;
13
     char anotherByte;
15 };
int main(void)
      struct theTag x;
19
      struct theTag y;
20
21
      x.aByte = 'a';
22
      x.anInt = 123;
23
      x.anotherByte = 'b';
24
      y.aByte = '1';
25
      y.anInt = 456;
26
      y.anotherByte = '2';
27
28
      printf("x: %c, %i, %c and y: %c, %i, %c\n",
29
               x.aByte, x.anInt, x.anotherByte,
30
               y.aByte, y.anInt, y.anotherByte);
31
      return 0;
32
33
  }
```

Listing 13.6: Two struct variables (C).

Assignment to each of the three fields in the "x" struct is:

```
x.aByte = 'a';
x.anInt = 123;
x.anotherByte = 'b';
```

The name of the struct variable is specified first, followed by a dot (.), followed by the field name. The field names and their individual data types are declared between the {...} pair of the struct declaration.

The amount of memory required by a struct variable is equal to the sum of the amount of memory required by each of its fields. Thus in the above program, the amount of memory required is:

```
aByte: 1 byte
anInt: 4 bytes
anotherByte: 1 byte

total = 6 bytes
```

If we were to allocate these six bytes of memory without some thought, the first char variable could occupy the first byte, the int variable the next four bytes, and the second char variable the following byte. That is, relative to the address of the beginning of the struct,

• aByte would be stored in byte number 0,

- anInt would be stored in bytes number 1-4, and
- anotherByte would be stored in byte number 5.

However, the ABI [25] specifies that the alignment of each element should be the same as that of the "most strictly aligned component." In this example the int element should be aligned on a 4-byte boundary. So even though the char elements only require one byte, they should also be aligned on 4-byte boundaries. Also, as explained in Section 8.4 (page 173), we should allocate memory in multiples of sixteen for local variables (see Exercise 13-4). These requirements suggest that each struct variable will be allocated on the stack as shown in Figure 13.1. Thus we

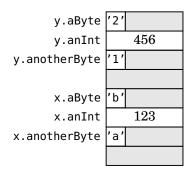


Figure 13.1: Memory allocation for the variables x and y from the C program in Listing 13.6. Shaded areas are padding bytes used to properly align the address of each variable; no data is stored in them.

see that each of the struct variables in Listing 13.6 requires that we allocate sixteen bytes in the stack frame.

The next issue is access each of the fields in these two structs. You learned in Section 9.1 (page 183) that assignment in C is implemented with the mov instruction. So in this program assignment at the assembly language level is implemented:

```
movb $'a', address_of_aByte_field_in_x
movl $123, address_of_anInt_field_in_x
movb $'b', address_of_anotherByte_field_in_x
```

The *base register plus offset* addressing mode (page 165) provides a convenient way to access each field in a struct. Simply load the address of the struct variable into a register, then use the offset of the field. We can see how the compiler has implemented this in Listing 13.7.

```
"structField1.c"
           .file
           .section
                             .rodata
2
           .align 8
  .LC0:
           .string "x: %c, %i, %c and y: %c, %i, %c\n"
   .globl main
                    main, @function
           .type
  main:
           pushq
                    %rbp
10
           movq
                    %rsp, %rbp
11
                    $48, %rsp
           subq
12
           movb
                    $97, -16(%rbp)
13
           movl
                    $123, -12(%rbp)
14
           movb
                    $98, -8(%rbp)
15
                    $49, -32(%rbp)
           movb
16
           movl
                    $456, -28(%rbp)
17
                    $50, -24(%rbp)
           movb
18
           movzbl
                    -24(%rbp), %eax
19
```

```
movsbl %al,%edx
20
           movl
                    -12(%rbp), %ecx
21
           movzbl
                    -32(%rbp), %eax
           movsbl
                    %al,%esi
23
           movzbl
                    -8(%rbp),
                               %eax
24
           movsbl
                    %al,%edi
25
           movl
                    -12(%rbp), %r10d
           movzbl
                    -16(%rbp), %eax
27
           movsbl
                    %al,%eax
28
           movl
                    %edx, (%rsp)
29
           movl
                    %ecx, %r9d
30
                    %esi, %r8d
           movl
31
           movl
                    %edi, %ecx
32
                    %r10d, %edx
33
           movl
34
           movl
                    %eax, %esi
                    $.LC0, %edi
           mov1
35
                    $0, %eax
           movl
36
           call
                    printf
37
                    $0, %eax
           movl
38
           leave
           ret
40
           .size
                    main, .-main
41
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
42
                             .note.GNU-stack, "",@progbits
           .section
```

Listing 13.7: Two struct variables (gcc assembly language).

The compiler allocated 48 bytes in the stack frame. Thirty-two are for the two struct variables. The additional sixteen are needed for passing the seventh argument to the printf function (line 29), while maintaining 16-byte addressing of the stack pointer. Rather than load the address of each struct into a register, the compiler has computed the total offset to each of the fields in each of the structs.

As usual, we equate symbolic names to these numbers when writing in assembly language. We have tried to make our assembly language version (Listing 13.8) a little more readable than the version generated by gcc.

```
1 # structField2.s
2 # Allcates two structs and assigns a value to each field
3 # in each struct.
4 # Bob Plantz - 18 June 2009
  # struct field offsets from start of struct
           .equ
                   aByte,0
                   anInt,4
           .equ
                   anotherByte,8
           .equ
                   structSize,16
           .equ
11
  # Stack frame
           .equ
                   y,x-structSize
                   x,-structSize
           .equ
13
           .equ
                   localSize,y-8 # include space for 7th arg
14
  # Read only data
           .section
                     .rodata
  formatString:
17
           .string "x: %c, %i, %c and y: %c, %i, %c\n"
19 # Code
           .text
20
           .globl
                  main
21
           .type
                   main, @function
```

```
23 main:
           pushq
                   %rbp
                                       # save frame pointer
24
           movq
                   %rsp, %rbp
                                       # our frame pointer
           addq
                   $localSize, %rsp
                                       # local variables
26
           andq
                   $-16, %rsp
                                       # align stack pointer
27
28
 # fill the x struct
           leag
                   x(%rbp), %rax
                                       # the x struct
30
                   a', aByte(a', aByte = 'a'
           movb
31
           movl
                   $123, anInt(%rax) # x.anInt = 123
32
           movb
                   b', anotherByte(rax) # x.anotherByte = 'b'
33
34
 # fill the y struct
35
                   y(%rbp), %rax
                                       # the y struct
36
           leag
37
           movb
                   $'1', aByte(%rax) # y.aByte = '1'
                   $456, anInt(%rax) # y.anInt = 456
           mov1
           movb
                   $'2', anotherByte({rax}) # y.anotherByte = '2'
39
40
41 # print values
           movq
                   $formatString, %rdi
           leag
                   x(%rbp), %rax
                                       # the x struct
43
                   aByte(%rax), %sil
           movb
44
           movl
                   anInt(%rax), %edx
45
                   anotherByte(%rax), %cl
           movb
           lead
                   y(%rbp), %rax
                                       # the y struct
47
           movb
                   aByte(%rax), %r8b
           movl
                   anInt(%rax), %r9d
49
           movb
                   anotherByte(%rax), %al
50
                                       # pass on stack
           movb
                   %al, (%rsp)
51
           movl
                   $0, %eax
                                       # no floating point
52
           call
                   printf
53
54
           mov1
                   $0, %eax
                                       # return 0;
55
                   %rbp, %rsp
                                       # remove local vars
           movq
56
                                       # restore caller's frame ptr
                   %rbp
57
           popq
                                       # back to OS
           ret
58
```

Listing 13.8: Two struct variables (programmer assembly language).

The version written in assembly language loads the address of a struct variable into a register before accessing the fields. This allows the use of the symbolic names for each field:

```
x(%rbp), %rax
                                      # the x struct
30
          leaq
                   a', aByte(a, a) # a. aByte = a'
          movb
31
                   $123, anInt(%rax) # x.anInt = 123
32
          movl
          movb
                   b', anotherByte(rax) # x.anotherByte = 'b'
33
  and:
                   y(%rbp), %rax
                                      # the y struct
          leaq
36
                   $'1', aByte(%rax) # y.aByte = '1'
          movb
37
                   456, anInt(%rax) # y.anInt = 456
          movl
38
                   $'2', anotherByte(%rax) # y.anotherByte = '2'
          movb
```

This technique would be necessary with, say, an array of structs or a function that takes an address of a struct as an argument.

13.3 structs as Function Arguments

The general rules for passing arguments to functions are:

- An input is passed by value.
- An output is passed by reference.

While C++ supports pass by reference for output parameters, C does not. In C, a pass by reference is simulated by passing a pointer to the variable to the function. Then the function can change the variable, thus effecting an output. At the assembly language level, pass by reference is implemented in C++ by passing a pointer, so these two rules can be restated:

- An input is a copy of the original value.
- An output provides the address of the original value.

Some languages, e.g., ADA, also support passing an "update." In this case the function replaces the original value with a new value that depends upon the original value. Passing an argument for update is also implemented by passing its address.

There is an *important exception* to the rule of passing a copy for inputs. When the amount of data is large, making a copy of it is inefficient. So we organize it into a single entity and pass the address of that entity.

The most common example of this is an array. In fact, it is so common that in C arrays are automatically passed by address. Thus, in C/C++

```
void f(int a, int b[]);
    ....
int x;
int y[100];
    ....
f(x, y);
```

means that x is passed by value and y is passed by address.

Another common example of passing a possibly large amount of data as input to a function is a struct. Of course, not all structs are large. And it is possible to pass the value in a single struct field, but the main reason for organizing data into a struct format is usually to treat several pieces of data as a more or less single unit.

Since structs are not automatically passed by address in C, we must use the address-of operator (&) on the name of the struct variable if we wish to avoid making a copy of the entire variable on the stack. The technique is exactly the same as passing an address of a simple variable.

Let us rewrite the C program from Listing 13.6 such that the main function calls another function to fill the two structs. In this example, the structs must be passed by address because the function, loadStruct, outputs values to them. This new version is shown in Listing 13.9.

```
1 /*
2 * structPass1.c
3 * Demonstrates passing structs as arguments in c
4 * Bob Plantz - 16 June 2009
5 */
6
7 #include <stdio.h>
8 #include "loadStruct1.h" // includes struct theTag def.
9
10 int main(void)
11 {
12     struct theTag x;
```

```
struct theTag y;
13
14
      loadStruct(&x, 'a', 123, 'b');
      loadStruct(&y, '1', 456, '2');
16
17
      printf("x: %c, %i, %c and y: %c, %i, %c\n",
18
             x.aByte, x.anInt, x.anotherByte,
             y.aByte, x.anInt, y.anotherByte);
20
      return 0;
22
23 }
1 /*
   * structPass1.h
   * Assigns values to the fields of a struct.
   * precondition
         aStruct is the address of a theTag struct
   * postcondition
         firstChar is stored in the aByte field of aStruct
         aNumber is stored in the anInt field of aStruct
         secondChar is stored in the anotherByte field of aStruct
  * Bob Plantz - 16 June 2009
  */
12
14 #ifndef LOADSTRUCT_H
15 #define LOADSTRUCT_H
17 struct theTag {
     char aByte;
     int anInt;
     char anotherByte;
21 };
void loadStruct(struct theTag* aStruct, char firstChar,
           int aNumber, char secondChar);
25 #endif
  * loadStruct1.c
   * Assigns values to the fields of a struct.
   * precondition
         aStruct is the address of a theTag struct
   * postcondition
         firstChar is stored in the aByte field of aStruct
         aNumber is stored in the anInt field of aStruct
         secondChar is stored in the anotherByte field of aStruct
   * Bob Plantz - 16 June 2009
   */
12
13
#include "loadStruct1.h" // includes struct theTag def.
16 void loadStruct(struct theTag* aStruct, char firstChar,
           int aNumber, char secondChar)
17
18 {
19
      aStruct->aByte = firstChar;
```

```
aStruct->anInt = aNumber;
aStruct->anotherByte = secondChar;
}
```

Listing 13.9: Passing struct variables (C). (There are three files here.)

In Listing 13.10 we examine the compiler-generated assembly language for the loadStruct function.

```
.file
                   "loadStruct1.c"
           .text
  .globl loadStruct
                   loadStruct, @function
           .type
  loadStruct:
          pushq
                   %rbp
          movq
                   %rsp, %rbp
                   %rdi, -8(%rbp)
          movq
                                     # save address of struct
                   %edx, -16(%rbp)
                                     # save aNumber
          movl
          movb
                   %sil, -12(%rbp)
                                     # save firstChar
10
                   %cl, -20(%rbp)
                                     # save secondChar
11
          movb
          mova
                   -8(%rbp), %rdx
                                     # load struct addresss
12
                  -12(%rbp), %eax
                                     # load firstChar
          movzbl
13
                   %al, (%rdx)
                                     # aStruct->aByte = firstChar;
          movb
14
                   -8(%rbp), %rdx
                                     # load struct addresss
          movq
                   -16(%rbp), %eax
                                     # load firstChar
16
          movl
17
          movl
                   %eax, 4(%rdx)
                                     # aStruct->anInt = aNumber:
          movq
                   -8(%rbp), %rdx
                                     # load struct addresss
18
                   -20(%rbp), %eax # load firstChar
          movzbl
                   %al, 8(%rdx)
                                     # aStruct->anotherByte = secondChar;
          movb
20
21
          leave
          ret
22
           .size
                   loadStruct, .-loadStruct
           .ident
                   "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
24
           .section
                            .note.GNU-stack, "", @progbits
```

Listing 13.10: Passing struct variables (gcc assembly language). Only the loadStruct function is shown.

The type declaration in the function signature, struct the Tag* a Struct, together with the struct definition in the header file, load Struct 1.h, tell the compiler what offsets to use for the struct fields on lines 14, 17, and 20.

We have already covered all the assembly language instructions and addressing modes needed to express the program in Listing 13.9 in assembly language. However, the .include assembler directive will make things much easier. The syntax is

```
.include "filename"
```

which causes the assembler to insert everything in the file named "filename" into the source at the point of the .include directive. This assembler directive is essentially the same as the #include directive in C/C++. The assembly language version of our structPass program is shown in Listing 13.11.

Pay particular attention to the header file, loadStruct.h, which defines the offset to each field within the struct and provides overall size of the struct. This header file must be .included in any file that uses the struct.

Note that specifying the overall size of the struct makes it easier to allocate space for it. For example, we use

```
s .equ y,x-structSize # Space for y struct
9 .equ x,-structSize # Space for x struct
```

in Listing 13.11 to compute the offsets to the x and y variables in the stack frame.

```
2 # loadStruct2.h
3 # The struct definition
4 # Bob Plantz - 16 June 2009
6 # struct definition
           .equ
                   aByte,0
                   anInt,4
           . equ
                   anotherByte,8
           .equ
           .equ
                   structSize, 16
1 # structPass2.s
2 # Demonstrates passing structs as arguments in assembly language
3 # Bob Plantz - 16 June 2009
           .include "loadStruct2.h"
  # Stack frame
                   y,x-structSize
                                   # Space for y struct
           . equ
                                     # Space for x struct
                   x,-structSize
           .equ
9
                                    # 0xffffffffffffff
                   round16,-16
10
           .equ
           . equ
                   passArgs,-16
                                    # Space for passing args
11
12 # Read only data
           .data
14 formatString:
           .string "x: %c, %i, %c and y: %c, %i, %c\n"
16 # Code
           .text
17
           .globl
                   main
18
                   main, @function
           .type
19
20 main:
                                      # save frame pointer
           pushq
                   %rbp
21
                                      # our frame pointer
22
           movq
                   %rsp, %rbp
           addq
                   $y, %rsp
                                      # local variables
23
          andq
                   $round16, %rsp
                                      # round down to 16-byte boundary
24
           addq
                   $passArgs, %rsp
                                      # for passing 7th arg
25
26
           leag
                   x(%rbp), %rdi
                                      # get address of x struct
27
                   $'a', %sil
                                      # 1st char
           movb
           movl
                   $123, %edx
                                      # the int
29
                   $'b', %cl
                                      # 2nd char
          movb
30
                   loadStruct
           call
31
                                      # get address of y struct
           leag
                   y(%rbp), %rdi
33
           movb
                   $'1', %sil
                                      # 1st char
           movl
                   $456, %edx
                                      # the int
35
                   $'2', %cl
                                      # 2nd char
           movb
36
           call
                   loadStruct
37
38
  # print values
39
           movq
                   $formatString, %rdi
40
          leaq
                   x(%rbp), %rax
                                      # the x struct
41
           movb
                   aByte(%rax), %sil
42
          movl
                   anInt(%rax), %edx
43
           movb
                   anotherByte(%rax), %cl
44
```

```
y(%rbp), %rax
                                       # the y struct
          leaq
45
          movb
                   aByte(%rax), %r8b
46
          movl
                   anInt(%rax), %r9d
          movb
                   anotherByte(%rax), %al
48
          movb
                   %al, (%rsp)
                                       # pass on stack
                   $0, %eax
                                       # no floating point
          movl
50
          call
                   printf
51
52
          movl
                   $0, %eax
                                       # return 0;
53
                   %rbp, %rsp
                                       # delete local vars.
          mova
54
                   %rbp
                                       # restore frame pointer for OS
          popq
55
                                       # back to caller (OS)
           ret
    loadStruct2.s
    Stores values in struct fields
    Calling sequence:
          rdi <- address of the struct
         sil <- first character to be stored
         edx <- integer to be stored
         cl <- second character to be stored
         call loadStruct
   Bob Plantz - 16 June 2009
           .include "loadStruct2.h"
11
           .text
13
           .globl
                   loadStruct
14
                   loadStruct, @function
           .type
15
  loadStruct:
16
                                # save caller's frame pointer
17
          pusha
                   %rsp, %rbp # our frame pointer
          movq
18
19
                   %sil, aByte(%rdi)
                                            # 1st character
          movb
20
                   %edx, anInt(%rdi)
          movl
                                            # the int
21
          movb
                   %cl, anotherByte(%rdi) # 2nd character
22
                   %rbp, %rsp
                                # delete local vars.
          mova
24
          popq
                   %rbp
                                # restore frame pointer
25
                                # back to caller
           ret
```

Listing 13.11: Passing struct variables (programmer assembly language). (There are three files here.)

The number in main,

```
10    .equ round16,-16  # 0xffffffffffffff
and its use,
24    andq $round16, %rsp # round down to 16-byte boundary
```

deserve some discussion here. After allocating space for the two structs on the stack, there is no way to know if the stack pointer is aligned on a 16-byte boundary. If it is not, the lowest-order four bits will be non-zero. The andq instruction sets these bits to zero, thus rounding the address down to the next lower 16-byte address boundary. Notice that this works because the stack grows toward numerically lower addresses.

The prologue and epilogue in loadStruct are not really needed in this simple function. But it is good to get in the habit of coding them into all your functions. It certainly has a negligible effect on execution time, and they help establish a structure to the function if it is ever changed.

13.4 Structs as C++ Objects

In C++ the data that defines an instance of an *object* is organized as a struct. The name of the object is essentially the name of a struct variable. The class member functions have direct access to the struct's fields, even if these fields are private data members. This direct access is implemented by passing the address of the object (the struct variable) as an implicit argument to the member function. In our environment, it is passed as the first (the left-most) argument, but it does not appear in the argument list.

Let's look at a simple fraction class (Listing 13.12) as an example. The programs in this section assume the existence of the functions:

- writeStr displays a text string on the screen
- getUint reads an unsigned integer from the keyboard and returns it
- putUint displays an unsigned integer on the screen

```
* incFraction.cc
   * Gets a fraction from user and increments by one
   * Bob Plantz - 18 June 2009
  #include "fraction.h"
  #include "writeStr.h"
 int main(void)
11
      // char array is used because writeStr takes
             a pointer to a C-style string.
13
      char newline[] = "\n";
14
      fraction x;
15
      x.get();
17
      x.add(1);
      x.display();
19
      writeStr(newline);
      return 0;
21
22 }
   * fraction.h
   * simple fraction class
   * Bob Plantz - 18 June 2009
7 #ifndef FRACTION_H
  #define FRACTION_H
10 class fraction
11 {
    public:
12
      fraction();
                       // default constructor
13
      void get();
                       // gets user's values
14
      void display(); // displays fraction
15
      void add(int); // adds integer
16
17
    private:
```

```
int num;
                       // numerator
      int den;
                       // denominator
19
20 };
22 #endif
   * fraction.cc
   * simple fraction class
   * Bob Plantz - 18 June 2009
7 #include "writeStr.h"
8 #include "getUint.h"
9 #include "putUint.h"
10 #include "fraction.h"
12 fraction::fraction()
      num = 0;
      den = 1;
15
16 }
  void fraction::get()
19
      // char arrays are used because writeStr takes
             a pointer to a C-style string.
21
      char numMsg[] = "Enter numerator: ";
      char denMsq[] = "Enter denominator: ";
23
      writeStr(numMsg);
25
      num = getUint();
27
      writeStr(denMsg);
      den = getUint();
29
30 }
32 void fraction::display()
      // char array is used because writeStr takes
34
              a pointer to a C-style string.
      char over[] = "/";
36
      putUint(num);
38
      writeStr(over);
      putUint(den);
41 }
43 void fraction::add(int theValue)
      num += theValue * den;
45
46 }
```

Listing 13.12: Add 1 to user's' fraction (C++). The C functions getUint, putUint, and writeStr are not shown here. (There are three files here.)

Let us consider the main function and see how arguments are passed on the stack. Recall

```
that declaring an object in C++ fraction x;
```

calls the constructor function. As we said above, the address of the object (actually a struct) is passed to the constructor function, even though it is not explicitly stated in the object declaration statement. When program flow is passed to the constructor, the address of the x object is placed in the rdi register. The same thing occurs when the other member functions are called. The add member function takes an explicit argument, which is actually the second argument to the function, so is passed in the rsi register.

Before showing how the program of Listing 13.12 could be implemented in assembly language, we look at a C implementation, since we already know a lot about the transition from C to assembly language.

In C, the member data would be explicitly implemented as a struct. Implementing the member functions in C may seem very straightforward, but there is an important issue to consider — how do the member functions gain access to the data members? Since the data members are organized as a struct, passing its address as an argument to the member functions will allow each of them access to the data members. This is effectively what C++ does. The address of the "object" (actually, a struct) is passed as an implicit argument to each member function.

Another issue arises if you think about the possible names of member functions. Different C++ classes can have the same member function names, but functions in C do not belong to any class, so each must have a unique name. (Actually, "free" functions in C++ must also have unique names.) The C++ compiler takes care of this by adding the class name to the member function name. This is called *name mangling*. (There is no standard for how this is actually done, so each compiler may do it differently.) We do our own "name mangling" for the C version of the program as shown in Listing 13.13.

```
* createFraction.c
   * creates a fraction and gets user's values
   * Bob Plantz - 16 June 2009
 #include "fraction.h"
 #include "fractionGet.h"
  #include "fractionAdd.h"
 #include "fractionDisplay.h"
11 #include "writeStr.h"
int main(void)
14 {
15
      struct fraction x;
16
      fraction(&x);
                          // "constructor"
17
      fractionGet(&x);
18
      fractionAdd(&x, 1);
      fractionDisplay(&x);
20
      writeStr("\n");
21
      return 0;
22
   * fraction.h
   * A fraction "constructor" in C
   * Bob Plantz - 16 June 2009
 #ifndef FRACTION_H
```

```
8 #define FRACTION_H
10 struct fraction
11 {
      int num;
      int den;
14 };
16 void fraction(struct fraction* this);
18 #endif
1 /*
2 * fraction.c
* * A fraction "constructor" in C
* * Bob Plantz - 16 June 2009
5 */
7 #include "fraction.h"
9 void fraction(struct fraction* this)
      this->num = 0;
      this->den = 1;
13 }
1 /*
2 * fractionGet.h
* Gets numerator and denominator from user.
* * Bob Plantz - 16 June 2009
7 #ifndef FRACTION_ADD_H
8 #define FRACTION_ADD_H
10 #include "fraction.h"
12 void fractionAdd(struct fraction* this, int theValue);
_{14} #endif
* * fractionGet.c
* Gets user values for a fraction
* * Bob Plantz - 16 June 2009
7 #include "writeStr.h"
8 #include "getUint.h"
9 #include "fractionGet.h"
void fractionGet(struct fraction* this)
      writeStr("Enter numerator: ");
13
      this->num = getUint();
14
     writeStr("Enter denominator: ");
```

```
this->den = getUint();
17
18 }
1 /*
* fractionAdd.h
* adds an integer to the fraction
* * Bob Plantz - 16 June 2009
7 #ifndef FRACTION_ADD_H
8 #define FRACTION_ADD_H
9 #include "fraction.h"
void fractionAdd(struct fraction* this, int theValue);
13 #endif
1 /*
* fractionAdd.c
* adds an integer to the fraction
* * Bob Plantz - 16 June 2009
5 */
8 #include "fractionAdd.h"
void fractionAdd(struct fraction* this, int theValue)
11 {
     this->num += theValue * this->den;
12
13 }
1 /*
* * fractionDisplay.h
* Displays a fraction in num/den format
  * Bob Plantz - 16 June 2009
5 */
7 #ifndef FRACTION_DISPLAY_H
8 #define FRACTION_DISPLAY_H
10 #include "fraction.h"
12 void fractionDisplay(struct fraction* this);
14 #endif
1 /*
* fractionDisplay.c
* Displays a fraction in num/den format
* Bob Plantz - 16 June 2009
5 * precondition
          this points to fraction, both num and den within 0 - 9
7 * postcondition
         num/den displayed on the screen
9 */
```

```
#include "writeStr.h"
#include "putUint.h"
#include "fractionDisplay.h"

void fractionDisplay(struct fraction* this)
{
    putUint(this->num);
    writeStr("/");
    putUint(this->den);
}
```

Listing 13.13: Add 1 to user's' fraction (C). (There are nine files here.)

Notice the use of the this pointer in the C equivalents of the "member" functions. Its place in the parameter list coincides with the "implicit" argument to C++ member functions — that is, the address of the object. The this pointer is implicitly available for use within C++ member functions. Its use depends upon the specific algorithm. Listing 13.13 should give you a good idea of how C++ implements objects.

From the C version in Listing 13.13 it is straightforward to move to the assembly language version in Listing 13.14.

```
1 # incFraction.s
2 # adds one to a fraction
3 # Bob Plantz - 18 June 2009
5 # Include object data definition
           .include "fraction.h"
  # Stack frame
                   x,-fractionSize # Space for a fraction object
           .equ
                   localSize,x
           .equ
  # Read only data
           .section .rodata
11
           .string "\n"
  endl:
13 # Code
           .text
14
           .globl
15
                   main
           .type
                   main, @function
16
17 main:
          pushq
                   %rbp
                                     # save frame pointer
18
                                     # our frame pointer
                   %rsp, %rbp
          movq
19
          addq
                   $localSize, %rsp # local variables
20
21
          andq
                   $-16, %rsp
                                     # ensure 16-byte boundary
22
                   x(%rbp), %rdi
                                     # get address of object
          leaq
          call
                                     # construct it
                   fraction
24
                                     # get address of object
          leag
                   x(%rbp), %rdi
26
          call
                   fractionGet
                                     # get user's values
28
          movl
                   $1, %esi
                                     # increment fraction by 1
29
          leag
                   x(%rbp), %rdi
                                     # get address of object
30
          call
                   fractionAdd
                                     # add the value
31
32
          leag
                   x(%rbp), %rdi
                                     # get address of object
33
          call
                   fractionDisplay # display result
34
35
                   $endl, %rdi
                                     # do next line
          mova
          call
                   writeStr
37
```

```
movl
                   $0, %eax
                                    # return 0;
39
                   %rbp, %rsp
          movq
                                    # delete local vars.
                                    # restore frame pointer
                   %rbp
          popq
41
          ret
                                    # back to caller (OS)
1 # fraction.h
2 # simple fraction class
3 # Bob Plantz - 18 June 2009
5 # struct definition
          .equ
                   num,0
                                     # numerator
                   den,4
                                     # denominator
           .equ
                   fractionSize,8
                                   # total size needed for struct
           .equ
1 # fraction.s
2 # constructs a fraction to be 0/1
3 # Bob Plantz - 18 June 2009
4 # Calling sequence:
          rdi <- address of object
          call
                  decToUInt
7 # Include object data definition
          .include "fraction.h"
9 # Read only data
          .section .rodata
           .long
                  0
11 zero:
12 one:
          .long
                   1
13 # Code
          .text
          .globl fraction
15
                   fraction, @function
          .type
17 fraction:
                                    # save frame pointer
          pushq
                   %rbp
          movq
                   %rsp, %rbp
                                    # our frame pointer
19
20
          movl
                   zero, %eax
21
                   ext{lem} %eax, num(%rdi) # numerator = 0
          movl
22
          movl
                   one, %eax
23
24
          movl
                   %eax, den(%rdi) # denominator = 1
          movq
                   %rbp, %rsp
                                    # delete local vars.
26
                                    # restore frame pointer
                   %rbp
          popq
27
          ret
                                    # back to caller
28
1 # fractionGet.s
2 # gets user values for a fraction
3 # Bob Plantz - 18 June 2009
4 # Calling sequence:
5 #
          rdi <- address of object
          call
                   fractionGet
7 # Include object data definition
           .include "fraction.h"
9 # local register save area
           . equ
                   this,-8
                                   # pointer to object
          .equ
                   localSize, -16
12 # Read only data
          .section .rodata
```

```
14 numPrompt:
           .string "Enter numerator: "
15
  denPrompt:
           .string "Enter denominator: "
17
  # Code
18
           .text
19
           .globl
                  fractionGet
           .type
                   fractionGet, @function
21
  fractionGet:
          pushq
                                     # save frame pointer
                   %rbp
23
          movq
                   %rsp, %rbp
                                     # our frame pointer
24
                   $localSize, %rsp
          addq
25
          movq
                   %rdi, this(%rbp) # save this pointer
26
27
28
          movq
                   $numPrompt, %rdi # prompt for numerator
          call
                   writeStr
          call
                   getUint
                                     # get numerator
30
                   this(%rbp), %rdi # this pointer
          movq
31
                   %eax, num(%rdi) # store in object
          movl
32
          movq
                   $denPrompt, %rdi
                                        # prompt for denominator
34
                   writeStr
          call
                                    # get denominator
          call
                   getUint
36
                   this(%rbp), %rdi # this pointer
          movq
                   %eax, den(%rdi) # store in object
          movl
38
                   %rbp, %rsp
                                    # delete local vars.
          movq
                                    # restore frame pointer
          popq
                   %rbp
41
                                    # back to caller
          ret
42
1 # fractionDisplay.s
2 # Displays a fraction in num/den format
3 # Bob Plantz - 18 June 2009
4 # Calling sequence:
          rdi <- address of object
5 #
          call
                   fractionDisplay
7 # Include object data definition
           .include "fraction.h"
9 # local register save area
                                  # pointer to object
          .equ
                   this,-8
10
           .equ
                   localSize,-16
12 # Read only data
          .section .rodata
14 slash:
           .string " / "
16 # Code
          .text
           .globl
                  fractionDisplay
18
                   fractionDisplay, @function
           .type
19
  fractionDisplay:
20
                                     # save frame pointer
21
          pushq
                   %rbp
          movq
                   %rsp, %rbp
                                     # our frame pointer
22
          addq
                   $localSize, %rsp # local vars
                   %rdi, this(%rbp) # save this pointer
          movq
24
25
          movl
                   num(%rdi), %edi # numerator
26
          call
                   putUint
                                     # display it
```

```
$slash, %rdi
                                     # "over"
          movq
29
          call
                   writeStr
31
          movq
                   this(%rbp), %rdi # get this pointer
32
          movl
                   den(%rdi), %edi # denominator
33
                   putUint
                                     # display it
          call
35
                   %rbp, %rsp
          movq
                                     # delete local vars.
                   %rbp
                                     # restore frame pointer
          popq
37
          ret
                                     # back to caller
1 # fractionAdd.s
2 # adds input value to a fraction
  # Bob Plantz - 18 June 2009
    Calling sequence:
          esi <- int to be added
          rdi <- address of object
          call
                   fractionAdd
 # Include object data definition
           .include "fraction.h"
  # local register save area
           .equ
                   this, -8
                                    # pointer to object
11
12 # Code
13
           .text
          .globl
                   fractionAdd
14
           .type
                   fractionAdd, @function
  fractionAdd:
16
                                     # save frame pointer
                   %rbp
          pushq
17
          movq
                   %rsp, %rbp
                                     # our frame pointer
18
                   %rdi, this(%rsp) # save this pointer in
19
          movq
                                            red zone
20
                   %esi, %eax
                                     # int to be added
          movl
21
          mull
                   den(%rdi)
                                     # times denominator
22
                   this (%rsp), %rdi # restore this pointer
          movq
                   %eax, num(%rdi) # add to numerator
          addl
24
          movq
                   %rbp, %rsp
                                     # delete local vars.
26
                                     # restore frame pointer
                   %rbp
          popq
                                     # back to caller
          ret
```

Listing 13.14: Add 1 to user's' fraction (programmer assembly language). (There are six files here; note that the assembly language header file, fraction.h, is different from the C++ version.)

The "header" file, fraction.h, contains offsets for the fields of the struct that defines the state variables for a fraction object. Notice on line 8 that it includes a symbolic name for the size of the object.

```
.equ fractionSize,8 # total size needed for struct
```

This makes it easier to define offsets in the stack frame in main:

20 # Stack frame

```
addq $localSize, %rsp # local variables
andq $-16, %rsp # ensure 16-byte boundary
```

technique to allocate space on the stack and make sure the stack pointer is on a 16-byte boundary.

In the fraction constructor function we see the use of the field names that are defined in the header file to access the state variables of the object:

```
movl zero, %eax
movl %eax, num(%rdi) # numerator = 0
movl one, %eax
movl %eax, den(%rdi) # denominator = 1
```

The fraction_add function is a leaf function. So we use the red zone for saving the this pointer:

Be careful not to use the red zone in non-leaf functions.

13.5 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

13.5.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmovcc	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movs <i>ss</i>	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; $w = \overline{l}$, q; cc = condition codes

arithmetic/logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
add s	mem	%reg	add	189
and s	\$imm/%reg	%reg/mem	bit-wise and	258
and s	mem	%reg	bit-wise and	258
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
dec <i>s</i>	%reg/mem		decrement	220
div <i>s</i>	%reg/mem		unsigned divide	280
idivs	%reg/mem		signed divide	282
imul <i>s</i>	%reg/mem		signed multiply	276
inc <i>s</i>	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
subs	\$imm/%reg	%reg/mem	subtract	190
muls	%reg/mem		unsigned multiply	275
negs	%reg/mem		negate	286
ors	\$imm/%reg	%reg/mem	bit-wise inclusive or	258
ors	mem	%reg	bit-wise inclusive or	258
sal <i>s</i>	\$imm/%cl	%reg/mem	shift arithmetic left	269
sar <i>s</i>	\$imm/%cl	%reg/mem	shift arithmetic right	268
shl <i>s</i>	\$imm/%cl	%reg/mem	shift left	269
shr <i>s</i>	\$imm/%cl	%reg/mem	shift right	268
subs	mem	%reg	subtract	190
test <i>s</i>	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210
xors	\$imm/%reg	%reg/mem	bit-wise exclusive or	258
xors	mem	%reg	bit-wise exclusive or	258

s = b, w, l, q; w = l, q

$program\ flow\ control:$

opcode	location	action	see page:
call	label	call function	156
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
j <i>cc</i>	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

cc = condition codes

13.6. EXERCISES 317

13.5.2 Addressing Modes

register direct:	The data value is located in a CPU register.
g	syntax: name of the register with a "%" prefix.
	example: movl %eax, %ebx
immediate	The data value is located immediately after the instruc-
data:	tion. Source operand only.
	syntax: data value with a "\$" prefix.
	example: movl \$0xabcd1234, %ebx
base register	The data value is located in memory. The address of the
plus offset:	memory location is the sum of a value in a base register
P	plus an offset value.
	syntax: use the name of the register with parentheses
	around the name and the offset value immediately be-
	fore the left parenthesis.
	example: movl \$0xaabbccdd, 12(%eax)
rip-relative:	The target is a memory address determined by adding
-	an offset to the current address in the rip register.
	syntax: a programmer-defined label
	example: je somePlace
indexed:	The data value is located in memory. The address
	of the memory location is the sum of the value in
	the base_register plus scale times the value in the in-
	dex_register, plus the offset.
	syntax: place parentheses around the comma separated
	list (base_register, index_register, scale) and preface it
	with the offset.
	example: movl \$0x6789cdef, -16(%edx, %eax, 4)

13.6 Exercises

13-1 (§13.1) Write a program in assembly language that allocates a twenty-five element integer array and stores the index value in each element. That is, the first element will be assigned zero, the second element one, etc. Use four-byte integers.

After the array has been completely initialized, display the contents of the array in a column.

13-2 (§13.1) Write a program in assembly language that allocates a ten element integer array and prompts the user to enter an integer to be stored in each element of the array. Use four-byte integers.

After the user's values have been stored in the array, compute the sum of the integers. (Do not accumulate the sum as the numbers are entered.) Display the sum.

13-3 (§13.1) Write a program in assembly language that allocates a ten element integer array and prompts the user to enter an integer to be stored in each element of the array. Use four-byte integers.

After the user's values have been stored in the array, compute the average of the integers. (Do not accumulate the sum as the numbers are entered.) Display the average.

- **13-4** (§13.2) Modify the program in Listing 13.6 so that it displays the total number of bytes allocated for the struct. Hint: use the C sizeof operator.
- **13-5** (§13.2) Modify the program of Exercise 13-4 such that it also displays the offset of each field within a struct. Hint: use the C & operator to get addresses.
- **13-6** (§13.2) Enter the program in Listing 13.8 and make sure that you understand how it works.

- 13-7 (§13.3) Enter the three files from Listing 13.11 and get the program to work.
 - a) Create a makefile to assemble and link the files into a program.
 - b) Using the debugger, gdb, set breakpoints in the main function at each call to loadStruct and at the instruction immediately following each call.
 - c) Use the debugger to observe the values that are stored in the fields of the aByte, anInt, and anotherByte fields each time loadStruct is called. Hint: Note the address in rdi just before executing each function call.
- 13-8 (§13.3) Modify the program in Listing 13.8 such that it has separate functions for:
 - · getting the data from the user for a struct, and
 - · displaying the data in a struct.

Add two more struct variables to the program. Your program will then call the first function three times, once for each variable. Then it calls the second function three times, also once for each variable.

13-9 (§13.3) Write a program in assembly language that allocates three variables of the type:

```
struct item {
    char name[50];
    int cost;
};
```

That is, each variable will have two fields, one for the name of the item, and one for its cost.

The user will be prompted to enter the name and cost of each item, and the user's input will be stored in the respective variables.

After the data for all three items is entered, the program will list the name and cost of each of the three items and then display the total cost for all three items.

- **13-10** (§13.4) Implement the program in Listing 13.14 such that it allows the user to enter an integer value to be added to the fraction.
- **13-11** (§13.4) Modify the program in Exercise 13-10 such that it allows the user to enter a fractional value, then adds the two fractions.
- **13-12** (§13.4) Write a program that allows the user to maintain an address book. Each entry into the address book should allow the user to enter
 - 48 characters for the name
 - 80 characters for the street address
 - 24 characters for the city
 - 2 characters for the state (abbreviation)
 - 5 characters for the zip code

The user should be able to display the entries.

- **13-13** (§13.4) Modify the program in Exercise 13-12 so that the user can sort the address book entries on any of the five fields.
- **13-14** (§13.4) Write a program that allows the user to set up and maintain two bank accounts. Each account should have a unique account name. The user should be able to credit or debit the account.
- **13-15** (§13.4) Modify the program in Exercise 13-14 so that it requires a pin number in order to access each of the bank accounts.

Chapter 14

Fractional Numbers

So far in this book we have used only integers for numerical values. In this chapter you will see two methods for storing fractional values — fixed point and floating point. Storing numbers in fixed point format requires that the programmer keep track of the location of the binary point within the bits allocated for storage. In the floating point format, the number is essentially written in scientific format and both the significand and exponent are stored.

14.1 Fractions in Binary

Before discussing the storage formats, we need to think about how *fractional values* are stored in binary. The concept is quite simple. We can extend Equation 2.2

$$N = d_{n-1} \times 2^{n-1} + d_{n-2} \times 2^{n-2} + \dots + d_1 \times 2^1 + d_0 \times 2^0 + d_{-1} \times 2^{-1} + d_{-2} \times 2^{-2} + \dots$$
 (14.1)

For example,

$$123.6875_{10} = 1111011.1011_2$$

because

$$\begin{array}{rcl} d_{-1} \times 2^{-1} & = & \mathbf{1} \times 0.5 \\ d_{-2} \times 2^{-2} & = & \mathbf{0} \times 0.25 \\ d_{-3} \times 2^{-3} & = & \mathbf{1} \times 0.125 \\ d_{-4} \times 2^{-4} & = & \mathbf{1} \times 0.0625 \end{array}$$

and thus

$$\begin{array}{rcl} \textbf{0.1011}_2 & = & 0.5_{10} + 0.125_{10} + 0.0625_{10} \\ & = & 0.6875_{10} \end{array}$$

See Exercise 14-1 for an algorithm to convert decimal fractions to binary. We assume that you can convert the integral part and that Equation 14.1 is sufficient for converting from binary to decimal.

Although any integer can be represented as a sum of powers of two, an exact representation of fractional values in binary is limited to sums of *inverse* powers of two. For example, consider an 8-bit representation of the fractional value 0.9. From

$$\begin{array}{lll} \textbf{0.11100110}_2 & = & 0.89843750_{10} \\ \textbf{0.11100111}_2 & = & 0.90234375_{10} \end{array}$$

¹The binary point is equivalent to the decimal point when a number is stored in binary. In particular, it separates the integral and fractional parts.

²This is often called the "mantissa," which means the fractional part of a logarithm.

we can see that

$$0.11100110_2 < 0.9_{10} < 0.11100111_2$$

In fact,

$$0.9_{10} = 0.11100\overline{1100}_2$$

where $\overline{1100}$ means that this bit pattern repeats forever.

Rounding off fractional values in binary is very simple. If the next bit to the right is one, add one to the bit position where rounding off. In the above example, we are rounding off to eight bits. The ninth bit to the right of the binary point is zero, so we do not add one in the eighth bit position. Thus, we use

$$0.9_{10} = 0.1110 \ 0110_2$$

which gives a round off error of

```
0.9_{10} - 0.11100110_2 = 0.9_{10} - 0.8984375_{10}
= 0.0015625_{10}
```

We note here that two's complement also works correctly for storing negative fractional values. You are asked to show this in Exercise 14-2.

14.2 Fixed Point ints

In a *fixed point* format, the storage area is divided into the integral part and the fractional part. The programmer must keep track of where the binary point is located. For example, we may decide to divide a 32-bit int in half and use the high-order 16 bits for the integral part and the low-order 16 bits for the fractional part.

My bank provides me with printed deposit slips that use this method. There are seven boxes for numerals. There is also a decimal point printed just to the left of the rightmost two boxes. Note that the decimal point does not occupy a box. That is, there are no digits allocated for the decimal point. So the bank assumes up to five decimal digits for the "dollars" part (rather optimistic), and the rightmost two decimal digits represent the "cents" part. The bank's printing tells me how they have allocated the digits, but it is my responsibility to keep track of the location of the decimal point when filling in the digits.

One advantage of a fixed point format is that integer instructions can be used for arithmetic computations. Of course, the programmer must be very careful to keep track of which bits are allocated for the integral part and which for the fractional part. And the range of possible values is restricted by the number of bits.

An example of using ints for fixed point addition is shown in Listing 14.1.

```
1 /*
  * rulerAdd.c
   * Adds two ruler measurements, to nearest 1/16th inch.
   * Bob Plantz - 18 June 2009
 #include <stdio.h>
 int main(void)
  {
9
10
      int x, y, fraction_part, sum;
11
      printf("Enter first measurement, inches: ");
      scanf("%d", &x);
13
                           /* shift to integral part of variable */
      x = x << 4;
14
      printf("
                                     sixteenths: ");
15
      scanf("%d", &fraction_part);
16
```

```
x = x | (0xf & fraction_part); /* add in fractional part */
17
18
      printf("Enter second measurement, inches: ");
      scanf("%d", &y);
20
      y = y << 4;
                            /* shift to integral part of variable */
21
      printf("
                                       sixteenths: ");
22
      scanf("%d", &fraction_part);
23
      y = y | (0xf & fraction_part); /* add in fractional part */
24
25
      sum = x + y;
26
      printf("Their sum is %d and %d/16 inches\n",
27
             (sum >> 4), (sum & 0xf));
28
29
      return 0;
30
31 }
```

Listing 14.1: Fixed point addition. The high-order 28 bits are used for the integral part, the low-order 4 for the fractional part.)

The numbers are input to the nearest 1/16th inch, so the programmer has allocated four bits for the fractional part. This leaves 28 bits for the integral part. After the integral part is read, the stored number must be shifted four bit positions to the left to put it in the high-order 28 bits. Then the fractional part (in number of sixteenths) is added into the low-order four bits with a simple bit-wise or operation. Printing the answer also requires some bit shifting and some masking to filter out the fractional part.

This is clearly a contrived example. A program using floats would work just as well and be somewhat easier to write. However, the program in Listing 14.1 uses integer instructions, which execute faster than floating point. The hardware issues have become less significant in recent times. Modern CPUs use various parallelization schemes such that a mix of floating point and integer instructions may actually execute faster than only integer instructions. Fixed point arithmetic is often used in embedded applications where the CPU is small and may not have floating point capabilities.

14.3 Floating Point Format

The most important concept in this section is that *floating point* numbers are not *real numbers*.³ Real numbers include the continuum of all numbers from $-\infty$ to $+\infty$. You already understand that computers are finite, so there is certainly a limit on the largest values that can be represented. But the problem is much worse than simply a size limit.

As you will see in this section, floating point numbers comprise a very small subset of real numbers. There are significant gaps between adjacent floating point numbers. These gaps can produce the following types of errors:

- Rounding the number cannot be exactly represented in floating point.
- Absorption a very small number gets lost when adding it to a large one.
- Cancellation a very small number gets lost when subtracting it from a large one.

To make matters worse, these errors can occur in intermediate results, where they are very difficult to debug.

The idea behind floating point formats is to think of numbers written in scientific format. This notation requires two numbers to completely specify a value — a significand and an exponent. To review, a decimal number is written in scientific notation as a significand times ten raised to an exponent. For example,

```
1,024 = 1.024 \times 10^{3}-0.000089372 = -8.9372 \times 10^{-5}
```

³It is unfortunate that Pascal uses the keyword "real" for the floating point type.

Notice that the number is *normalized* such that only one digit appears to the left of the decimal point. The exponent of 10 is adjusted accordingly.

If we agree that each number is normalized and that we are working in base 10, then each floating point number is completely specified by three items:


- 1. The significand.
- 2. The exponent.
- 3. The sign.

That is, in the above examples

- 1024, 3, and + represent 1.024×10^3 (The "+" is understood.)
- 89372, -5, and represent 8.9372×10^{-5}

The advantage of using a floating point format is that, for a given number of digits, we can represent a larger range of values. To illustrate this, consider a four-digit, unsigned decimal system. The range of integers that could be represented is

Now, let's allocate two digits for the significand and two for the exponent. We will restrict our scheme to unsigned numbers, but we will allow negative exponents. So we will need to use one of the exponent digits to store the sign of the exponent. We will use 0 for positive and 1 for negative. For example, 3.9×10^{-4} would be stored

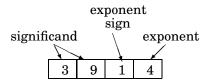

where each box holds one decimal digit. Some other examples are:

$$1000 \Leftrightarrow 1.0 \times 10^{0}$$

 $3702 \Leftrightarrow 3.7 \times 10^{2}$
 $9316 \Leftrightarrow 9.3 \times 10^{-6}$

Our normalization scheme requires that there be a single non-zero digit to the left of the decimal point. We should also allow the special case of 0.0:

$$0000 \Leftrightarrow 0.0 \times 10^0$$

A little thought shows that this scheme allows numbers in the range

$$1.0 \times 10^{-9} \le N \le 9.9 \times 10^9$$


That is, we have increased the range of possible values by a factor of 10^{14} !

However, it is important to realize that in both storage schemes, the integer and the floating point, we have exactly the same number of possible values — 10^4 .

Although floating point formats can provide a much greater range of numbers, the distance between any two adjacent numbers depends upon the value of the exponent. Thus, floating point is generally *less* accurate than an integer representation, especially for large numbers.

14.4. IEEE 754 323

To see how this works, let's look at a plot of numbers (using our current scheme) in the range

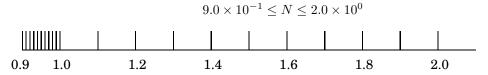

Notice that the larger numbers are further apart than the smaller ones. (See Exercise 14-7 after you read Section 14.4.)

Let us pick some numbers from this range and perform some addition.

$$9111 \Leftrightarrow 9.1 \times 10^{-1}$$
$$9311 \Leftrightarrow 9.3 \times 10^{-1}$$

If we add these values, we get 0.91 + 0.93 = 1.84. Now we need to round off our "paper" addition in order to fit this result into our current floating point scheme:

$$1800 \Leftrightarrow 1.8 \times 10^0$$

On the other hand,


$$9411 \Leftrightarrow 9.4 \times 10^{-1}$$
$$9311 \Leftrightarrow 9.3 \times 10^{-1}$$

and adding these values, we get 0.94 + 0.93 = 1.87. Rounding off, we get:

$$1900 \Leftrightarrow 1.9 \times 10^0$$

So we see that starting with two values expressed to the nearest 1/100th, their sum is accurate only to the nearest 1/10.

To compare this with fixed point arithmetic, we could use the same four digits to store 0.93 this way

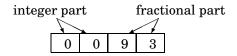

It is clear that this storage scheme allows us to perform both additions (0.91 + 0.93) and 0.94 + 0.93 and store the results exactly.

These *round off errors* must be taken into account when performing floating point arithmetic. In particular, the errors can occur in intermediate results when doing even moderately complex computations, where they are very difficult to detect.

14.4 IEEE 754

Specific floating point formats involve trade-offs between resolution, round off errors, size, and range. The most commonly used formats are the *IEEE 754*.⁴ They range in size from four to sixteen bytes. The most common sizes used in C/C++ are floats (4 bytes) and doubles (8 bytes). The x86 processor performs floating point computations using an extended 10-byte format. The results are rounded to 4-byte mode if the programmer uses the float data type or 8-byte mode for the double data type.

⁴There is a slightly newer standard, IEEE 854. It is a generalization of IEEE 754.

In the IEEE 754 4-byte format, one bit is used for the sign, eight for the exponent, and twenty-three for the significand. The IEEE 754 8-byte format specifies one bit for the sign, eleven for the exponent, and fifty-two for the significand.

In this section we describe the 4-byte format in order to save ourselves (hand) computation effort. The goal is to get a feel for the *limitations* of floating point formats. The normalized form of the number in binary is given by Equation 14.2.

$$N = (-1)^s \times 1.f \times 2^e \tag{14.2}$$

where: s is the sign bit

f is the 23-bit fractional part

e is the 8-bit exponent

The bit patterns for floats and doubles are arranged as shown in Figure 14.1.

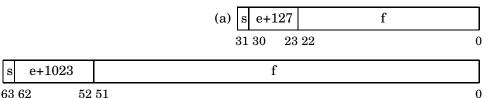


Figure 14.1: IEEE 754 bit patterns. (a) Float. (b) Double.

As in decimal, the exponent is adjusted such that there is only one non-zero digit to the left of the binary point. In binary, though, this digit is always one. Since it is always one, it need not be stored. Only the fractional part of the normalized value needs to be stored as the significand. This adds one bit to the significance of the fractional part. The integer part (one) that is not stored is sometimes called the *hidden bit*.

The sign bit, *s*, refers to the number. Another mechanism is used to represent the sign of the exponent, *e*. Your first thought is probably to use two's complement. However, the IEEE format was developed in the 1970s, when floating point computations took a lot of CPU time. Many algorithms depend upon only the comparison of two numbers, and the computer scientists of the day realized that a format that allowed integer comparison instructions would result in faster execution times. So they decided to store a *biased exponent* as an unsigned int. The amount of the bias is one-half the range allocated for the exponent. In the case of an 8-bit exponent, the bias amount is 127.

Example 14-a

Show how 97.8125 is stored in 32-bit IEEE 754 binary format.

First, convert the number to binary.

$$97.8125_{10} = 1100001.1101_2$$

= $(-1)^0 \times 1100001.1101 \times 2^0$

Adjust the exponent to obtain the normalized form.

$$(-1)^0 \times 1100001.1101 \times 2^0 = (-1)^0 \times 1.1000011101 \times 2^6$$

Compute s, e+127, and f.

14.4. IEEE 754 325

Finally, use Figure 14.1 to place the bit patterns. (Remember that the *hidden* bit is not stored; it is understood to be there.)

Example 14-b ____

Using IEEE 754 32-bit format, what decimal number does the bit pattern 3e400000₁₆ represent?

First, convert the hexadecimal to binary, using spaces suggested by Figure 14.1.

Now compute the values of s, e, and f.

Finally, plug these values into Equation 14.2. (Remember to add the hidden bit.)

$$(-1)^0 \times 1.100...00 \times 2^{-3} = (-1)^0 \times 0.0011 \times 2^0$$

= 0.1875₁₀

Example 14-c _

Using IEEE 754 32-bit format, what decimal number would the bit pattern 00000000_{16} represent? (The specification states that it is an exception to the format and is defined to represent 0.0. This example provides some motivation for this exception.)

The conversion to binary is trivial. Computing the values of s, e, and f.

$$\begin{array}{rcl} s & = & 0 \\ e+127 & = & 00000000_2 \\ e & = & -127_{10} \\ f & = & 000000000000000000000000 \end{array}$$

Finally, plug these values into Equation 14.2. (Remember to add the hidden bit.)

$$(-1)^0\times 1.00\dots 00\times 2^{-127}\quad =\quad \text{very small number}$$

This last example illustrates a problem with the hidden bit — there is no way to represent zero. To address this issue, the IEEE 754 standard has several special cases.

• **Zero** — all the bits in the exponent and significand are zero. Notice that this allows for -0.0 and +0.0, although (-0.0 == +0.0) computes to true.

- **Denormalized** all the bits in the exponent are zero. In this case there is no hidden bit. Zero can be thought of as a special case of denormalized.
- **Infinity** all the bits in the exponent are one, and all the bits in the significand are zero. The sign bit allows for $-\infty$ and $+\infty$.
- NaN all the bits in the exponent are one, and the significand is non-zero. This is used when the results of an operation are undefined. For example, \pm nonzero \div 0.0 yields infinity, but \pm 0.0 \div \pm 0.0 yields NaN.

14.5 Floating Point Hardware

Until the introduction of the Intel 486DX in April 1989, the *x87 Floating Point Unit* was on a separate chip. It is now included on the CPU chip although it uses a somewhat different execution architecture than the Integer Unit in the CPU.

In 1997 Intel added *MMX*TM(Multimedia Extensions) to their processors, which includes instructions that process multiple data values with a single instruction instruction (SIMD). Operations on single data items are called *scalar* operations, while those on multiple data items in parallel are called *vector* operations. Vector operations are useful for many multi-media and scientific applications. In this book we will discuss only scalar floating point operations. Originally, MMX only performed integer computations. But in 1998 AMD added the *3DNow!*TMextension to MMX, which includes floating point instructions. Intel soon followed suit.

Intel then introduced *SSE* (Streaming SIMD Extension) on the Pentium III in 1999. Several versions have evolved over the years — SSE, SSE2, SSE3, and SSE4A — as of this writing. There are instructions for performing both integer and floating point operations on both scalar and vector values.

The x86-64 architecture includes three sets of instructions for working with floating point values:

- *SSE2* instructions operate on 32-bit or 64-bit values.⁵ Four 32-bit values or two 64-bit values can be processed simultaneously.
- **x87 Floating Point Unit** instructions operate on 80-bit values.
- **3DNow!** instructions operate on two 32-bit values.

All three floating point instruction sets include a wide variety of instructions to perform the following operations:

- Move data from memory to a register, from a register to memory, and from a register to another register.
- Convert data from integer to floating point, and from floating point to integer formats.
- Perform the usual add, subtract, multiply, and divide arithmetic operations. They also provide square root instructions.
- · Compare two values.
- Perform the usual and, or, and xor logical operations.

In addition, the x87 includes instructions for transcendental functions — sine, cosine, tangent, and arc tangent, and logarithm functions.

We will not cover all the instructions in this book. The following subsections provide an introduction to how each of the three sets of instructions is used. See the manuals [2] - [6] and [14] - [18] for details.

⁵Newer x86-64 processors have later versions of SSE, but SSE2 is part of the definition of x86-64, so it is the only version that can be assumed to be available.

14.5.1 SSE2 Floating Point

Most of the SSE2 instructions operate on multiple data items simultaneously — *single instruction, multiple data* (SIMD). There are SSE2 instructions for both integer and floating point operations. Integer instructions operate on up to sixteen 8-bit, eight 16-bit, four 32-bit, two 64-bit, or one 128-bit integers at a time. Vector floating point instructions operate on all four 32-bit or both 64-bit floats in a register simultaneously. Each data item is treated independently. These instructions are useful for algorithms that do things like process arrays. One SSE2 instruction can operate on several array elements in parallel, resulting in considerable speed gains. Such algorithms are common in multi-media and scientific applications.

In this book we will only consider some of the scalar floating-point instructions, which operate on only single data items. The SSE2 instructions are the preferred floating-point implementation in 64-bit mode. These instructions operate on either 32-bit (single-precision) or 64-bit (double-precision) values. The scalar instructions operate on only the low-order portion of the 128-bit xmm registers, with the high-order 64 or 96 bits remaining unchanged.

SSE includes a 32-bit MXCSR register that has flags for handling floating-point arithmetic errors. These flags are shown in Table 14.1. SSE instructions that perform arithmetic operations

bits	mnemonic	meaning	de fault
31 - 18	-	reserved	
17	$\mathbf{M}\mathbf{M}$	Misaligned Exception Mask	0
16	_	reserved	
15	FZ	Flush-toZero for Masked Underflow	0
14 - 13	RC	Floating-Point Rounding Control	00
12	\mathbf{PM}	Precision Exception Mask	1
11	$\mathbf{U}\mathbf{M}$	Underflow Exception Mask	1
10	\mathbf{OM}	Overflow Exception Mask	1
9	$\mathbf{Z}\mathbf{M}$	Zero-Divide Exception Mask	1
8	$\mathbf{D}\mathbf{M}$	Denormalized-Operand Exception Mask	1
7	\mathbf{IM}	Invalid-Operation Exception Mask	1
6	DAZ	Denormals Are Zero	0
5	${ m PE}$	Precision Exception	0
4	UE	Underflow Exception	0
3	\mathbf{OE}	Overflow Exception	0
2	$\mathbf{Z}\mathbf{E}$	Zero-Divide Exception	1
1	\mathbf{DE}	Denormalized-Operand Exception	0
0	IE	Invalid-Operation Exception	0

Table 14.1: MXCSR status register.

and the SSE compare instructions also affect the status flags in the rflags register. Thus the regular conditional jump instructions (Section 10.1.2, page 211) are used to control program flow based on floating-point computations.

The instruction mnemonics used by the gnu assembler are mostly the same as given in the manuals, [2] – [6] and [14] – [18]. Since they are quite descriptive with respect to operand sizes, a size letter is not appended to the mnemonic, except when one of the operands is in memory and the size is ambiguous. Of course, the operand order used by the gnu assembler is still reversed compared to the manufacturers' manuals, and the register names are prefixed with the "%" character.

A very important set of instructions provided for working with floating point values are those to convert between integer and floating point formats. The scalar conversion SSE2 instructions are shown in Table 14.2.

Data movement and arithmetic instructions must distinguish between scalar and vector operations on values in the xmm registers. The low-order portion of the register is used for scalar operations. Vector operations are performed on multiple data values packed into a single register. See Table 14.3 for a sampling of SSE2 data movement and arithmetic instructions.

mnemonic	source	destination	meaning
cvtsd2si	xmm register	32-bit general	convert scalar 64-bit float
	or memory	purpose register	to 32-bit integer
cvtsd2ss	xmm register	xmm register or	convert scalar 64-bit float
		memory	to 32-bit float
cvtsi2sd	general purpose integer	xmm register	convert 32-bit integer
	register or memory		to scalar 64-bit float
cvtsi2sdq	general purpose integer	xmm register	convert 64-bit integer
	register or memory		to scalar 64-bit float
cvtsi2ss	general purpose integer	xmm register	convert 32-bit integer
	register or memory		to scalar 32-bit float
cvtsi2ssq	general purpose integer	xmm register	convert 64-bit integer
	register or memory		to scalar 32-bit float
cvtss2sd	xmm register	another xmm register	convert scalar 32-bit float
		or memory	to 64-bit float
cvtss2si	xmm register	32-bit general	convert scalar 32-bit float
	or memory	purpose register	to 32-bit integer
cvtss2siq	xmm register	64-bit general	convert scalar 32-bit float
	or memory	purpose register	to 64-bit integer

Table 14.2: SSE scalar floating point conversion instructions. Source and destination xmm registers must be different. The low-order portion of the xmm register is used. When reading from or writing to memory, the "q" suffix is used to designate a 64-bit value.

mnemonic	source	destination	meaning
addps	xmm register or memory	xmm register	add packed 32-bit floats
addpd	xmm register or memory	xmm register	add packed 64-bit floats
addss	xmm register or memory	xmm register	add scalar 32-bit floats
addsd	xmm register or memory	xmm register	add scalar 64-bit floats
divps	xmm register or memory	xmm register	divide packed 32-bit floats
divpd	xmm register or memory	xmm register	divide packed 64-bit floats
divss	xmm register or memory	xmm register	divide scalar 32-bit floats
divsd	xmm register or memory	xmm register	divide scalar 64-bit floats
movss	xmm register or memory	xmm register	move scalar 32-bit float
movss	xmm register	xmm register or memory	move scalar 32-bit float
movsd	xmm register or memory	xmm register	move scalar 64-bit float
movsd	xmm register	xmm register or memory	move scalar 64-bit float
mulps	xmm register or memory	xmm register	multiply packed 32-bit floats
mulpd	xmm register or memory	xmm register	multiply packed 64-bit floats
mulss	xmm register or memory	xmm register	multiply scalar 32-bit floats
mulsd	xmm register or memory	xmm register	multiply scalar 64-bit floats
subps	xmm register or memory	xmm register	subtract packed 32-bit floats
subpd	xmm register or memory	xmm register	subtract packed 64-bit floats
subss	xmm register or memory	xmm register	subtract scalar 32-bit floats
subsd	xmm register or memory	xmm register	subtract scalar 64-bit floats

Table 14.3: Some SSE floating point arithmetic and data movement instructions. Source and destination xmm registers must be different. Scalar instructions use the low-order portion of the xmm registers.

Notice that the code for the basic operation is followed by a "p" or "s" for "packed" or "scalar." This character is then followed by a "d" or "s" for "double" (64-bit) or "single" (32-bit) data item.

We will use the program in Listing 14.2 to illustrate a few floating point operations.

```
1 /*
   * frac2float.c
   * Converts fraction to floating point.
   * Bob Plantz - 18 June 2009
7 #include <stdio.h>
9 int main(void)
10 {
      int x, y;
11
      double z;
12
13
      printf("Enter two integers: ");
14
      scanf("%i %i", &x, &y);
15
      z = (double) \times / y;
16
      printf("%i / %i = %lf\n", x, y, z);
17
      return 0;
18
  }
```

Listing 14.2: Converting a fraction to a float.

Compiling this program in 64-bit mode produced the assembly language in Listing 14.3.

```
"frac2float.c"
           .file
           .section
                            .rodata
  .LC0:
           .string "Enter two integers: "
  .LC1:
           .string "%i %i"
  .LC2:
           .string "%i / %i = %lf\n"
           .text
  .globl main
           .type
                   main, @function
11
12 main:
          pushq
                   %rbp
13
                   %rsp, %rbp
          movq
14
          subq
                   $16, %rsp
15
                   $.LC0, %edi
          movl
          movl
                   $0, %eax
17
                   printf
          call
                   -8(%rbp), %rdx
                                         # address of y
          leag
19
                   -4(%rbp), %rsi
                                         # address of x
          leaq
                   $.LC1, %edi
          movl
21
          movl
                   $0, %eax
                                         # no xmm arguments
          call
                   scanf
23
          movl
                   -4(%rbp), %eax
                                         # load x
24
                            %eax, %xmm1 # convert x to double
          cvtsi2sd
25
          movl
                   -8(%rbp), %eax
                                         # load y
          cvtsi2sd
                            %eax, %xmm0 # convert y to double
27
          movapd %xmm1, %xmm2
                                         # move aligned packed double
28
                   %xmm0, %xmm2
                                         \# z = (double)x / y;
          divsd
29
          movapd %xmm2, %xmm0
                                         # move aligned packed double
30
                   %xmm0, -16(%rbp)
                                         # store z
          movsd
31
          movl
                   -8(%rbp), %edx
                                         # load y
32
```

```
movl
                                           # load x
                    -4(%rbp), %esi
33
                    -16(%rbp), %xmm0
                                           # load z
           movsd
34
           movl
                    $.LC2, %edi
35
                                           # one xmm argument (in xmm0)
           movl
                    $1, %eax
36
           call
                    printf
37
           movl
                    $0, %eax
38
           leave
39
           ret
40
           .size
                    main, .-main
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
42
           .section
                             .note.GNU-stack, "",@progbits
43
```

Listing 14.3: Converting a fraction to a float (gcc assembly language, 64-bit).

Before the division is performed, both integers must be converted to floating point. This takes place on lines 24 - 27:

```
movl -4(%rbp), %eax # load x

cvtsi2sd %eax, %xmm1 # convert x to double
movl -8(%rbp), %eax # load y

cvtsi2sd %eax, %xmm0 # convert y to double
```

The cvtsi2sd instruction on lines 25 and 27 converts a signed integer to a scalar double-precision floating point value. The signed integer can be either 32 or 64 bits and can be located in a general purpose register or in memory. The double-precision float will be stored in the low-order 64 bits of the specified xmmn register. The high-order 64 bits to the xmmn register are not changed.

The division on line 29 leaves the result in the low-order 64 bits of xmm2, which is then stored in z:

```
divsd %xmm0, %xmm2 # z = (double)x / y;

movapd %xmm2, %xmm0 # move aligned packed double

movsd %xmm0, -16(%rbp) # store z
```

The movapd instruction moves the entire 128 bits, and the movsd instruction moves only the low-order 64 bits.

The floating point arguments are passed in the registers xmm0, xmm1, ..., xmm15 in left-to-right order. So the value of z is loaded into the (xmm0) register for passing to the printf function, and the number of floating point values passed to it must be stored in eax:

14.5.2 x87 Floating Point Unit

The x87 FPU has eight 80-bit data registers, its own status register, and its own stack pointer. Floating point values are stored in the floating point data registers in an *extended* format.:

- bit 79 is the sign bit: 0 for positive, 1 for negative.
- bits 78 64 are for the exponent: 2's complement, biased by 16383.
- bit 63 is the integer: 1 for normalized.
- bits 62 0 are for the fraction.

So there are 64 bits (63 - 0) for the significand. Since there is no hidden bit in the extended format, one of these bits, bit 63, is required for the integer part.

Example 14-d

Show how 97.8125 is stored in 80-bit extended IEEE 754 binary format.

First, convert the number to binary.

$$97.8125_{10} = 1100001.1101_2$$

= $(-1)^0 \times 1100001.1101 \times 2^0$

Adjust the exponent to obtain the normalized form.

$$(-1)^0 \times 1100001.1101 \times 2^0 = (-1)^0 \times 1.1000011101 \times 2^6$$

Compute s, e+16383.

$$egin{array}{lll} s &=& 0 \\ e+16383 &=& 6+16383 \\ &=& 16389 \\ &=& 100000000000101_2 \end{array}$$

Filling in the bit patterns as specified above:

Compare this with the 32-bit format in Example 14-a above.

The 16-bit Floating Point Unit Status Word register shows the results of floating point operations. The meaning of each bit is shown in Table 14.4.

bit number	mnemonic	meaning
0	IE	invalid operation
1	DE	denormalized operation
2	ZE	zero divide
3	0E	overflow
4	UE	underflow
5	PE	precision
6	SF	stack fault
7	ES	error summary status
8	C0	condition code 0
9	C1	condition code 1
10	C2	condition code 2
11 - 13	T0P	top of stack
14	C3	condition code 3
 15	В	FPU busy

Table 14.4: x87 Status Word.

Figure 14.2 shows a pictorial representation of the floating point registers. The absolute locations are named fpr0, fpr1,...,fpr7 in this figure. The floating point registers are accessed by program instructions as a stack with st(0) being the register at the top of the stack. It "grows" from higher number registers to lower. The TOP field (bits 13-11) in the FPU Status Word holds the (absolute) register number that is currently the top of the stack. If the stack is full, i.e., fpr0 is the top of the stack, a push causes the TOP field to roll over, and the next item goes into register fpr7. (The value that was in fpr7 is lost.)

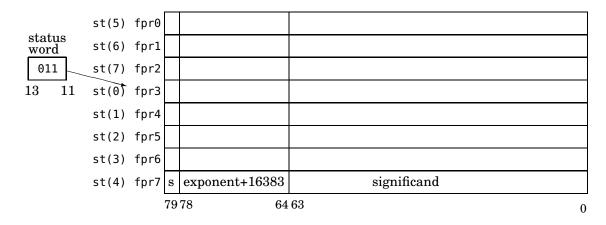


Figure 14.2: x87 floating point register stack. The fpri represent the absolute locations. The st(j) are the stack names, which are used by the instructions. In this example the top of the stack is at fpr3, as shown in bits 13 – 11 of the x87 status register.

The instructions that read data from memory automatically push the value onto the top of the register stack. Arithmetic instructions are provided that operate on the value(s) on the top of the stack. For example, the faddp instruction adds the two values on the top of the stack and leaves their sum on the top. The stack has one less value on it. The original two values are gone.

Many floating point instructions allow the programmer to access any of the floating point registers, st(i), where i = 0...7, relative to the top of the stack. Fortunately, the programmer does not need to keep track of where the top is. When using this format, st(i) refers to the ith register from the top of the stack. For example, if fpr3 is the current top of the stack, the instruction

will add the value in the fpr5 register to the value in the fpr3 register, leaving the result in the fpr3 register.

Table 14.5 provides some examples of the floating point instruction set. Notice that the instructions that deal only with the floating point register stack do not use the size suffix letter, s. To avoid ambiguity the gnu assembler requires a single letter suffix on the floating point instructions that access memory. The suffixes are:

- 's' for single precision 32-bit
- 'l' for long (or double) precision 64-bit
- 't' for ten-byte 80-bit

Most of the floating point instructions have several variants. See [2] – [6] and [14] – [18] for details. In general,

- Data cannot be moved directly between the integer and floating point registers. Only data stored in memory or another floating point register can be pushed onto the floating point register stack.
- st(0) is always involved when performing floating point arithmetic.
- Many floating point instructions have a pop variant. The mnemonic includes a 'p' after the basic mnemonic, immediately before the size character. For example,

```
fistl someplace(%ebp)
```

converts the 80-bit floating point number in st(0) to a 32-bit integer and stores it at the specified memory location. Using the pop variant,

```
fistpl someplace(%ebp)
```

does the same thing but also pops one from the floating point register stack.

mnemonic	source	destination	meaning
fadds	memfloat		add memfloat to st(0)
faddp			add st(0) to st(1) and pop register stack
fchs			change sign of st(0)
fcoms	memfloat		compare st(0) with memfloat
fcomp			compare st(0) with st(1) and pop register stack
fcos			replace st(0) with its cosine
fdivs	memfloat		divide st(0) by memfloat
fdivp			divide st(0) by st(1), store result in st(1), and pop reg-
			ister stack
filds	memint		convert integer at <i>memint</i> to 80-bit float and push onto
			register stack
fists		memint	convert 80-bit float at st(0) to int and store at <i>memint</i>
flds	memint		convert float at <i>memint</i> to 80-bit float and push onto reg-
			ister stack
fmuls	memfloat		multiply st(0) by memfloat
fmulp			multiply st(0) by st(1), store result in st(1), and pop
			register stack
fsin			replace st(0) with its sine
fsqrt			replace st(0) with its square root
fst s		memint	convert 80-bit float at $st(0)$ to s size float and store at
			memint
fsub s	memfloat		subtract $memfloat$ from $st(0)$
fsubp			subtract st(0) from st(1) and pop register stack
s = s, l, t	<u> </u>	<u> </u>	

Table 14.5: A sampling of x87 floating point instructions. Size characters are: s = 32-bit, l = 64-bit, t = 80-bit.

Compiling the fraction conversion program of Listing 14.2 in 32-bit mode shows (Listing 14.4) that the compiler uses the x87 floating-point instructions. This ensures backward compatibility since the x86-32 architecture does not need to include SSE instructions.

```
.file
                    "frac2float.c"
           .section
                            .rodata
з .LC0:
           .string "Enter two integers: "
5 .LC1:
           .string "%i %i"
7 .LC2:
           .string "%i / %i = %lf\n"
           .text
10 .globl main
                   main, @function
           .type
11
12 main:
           leal
                    4(%esp), %ecx
           andl
                    $-16, %esp
14
           pushl
                    -4(%ecx)
15
           pushl
                    %ebp
16
17
           movl
                    %esp, %ebp
           pushl
                    %ecx
18
           subl
                    $52, %esp
19
           movl
                    $.LCO, (%esp)
20
                    printf
           call
21
           leal
                    -16(%ebp), %eax # address of x
22
23
           movl
                    %eax, 8(%esp)
```

```
# address of y
           leal
                    -12(%ebp), %eax
24
                    %eax, 4(%esp)
           movl
25
           movl
                    $.LC1, (%esp)
           call
                    scanf
27
           movl
                    -12(%ebp), %eax
                                        # load y
28
           pushl
                                        #
                                          needs to be in memory to
                    %eax
29
           fildl
                                              convert to 80-bit float
                    (%esp)
30
           leal
                    4(%esp), %esp
                                        #
                                              restore stack pointer
31
           movl
                    -16(%ebp), %eax
                                        # load x
           pushl
                                        # needs to be in memory to
                    %eax
33
           fildl
                    (%esp)
                                              convert to 80-bit float
34
           leal
                                        #
                                              restore stack pointer
                    4(%esp), %esp
35
           fdivrp
                    %st, %st(1)
                                        \# z = (double)x / y;
36
           fstpl
                    -24(%ebp)
                                        # save z
37
                                        # load x
           movl
                    -16(%ebp), %eax
38
           movl
                    -12(%ebp), %edx
                                        # load y
           fldl
                    -24(%ebp)
                                        # push z onto fp stack
40
                                        # put z on call stack
                    12(%esp)
           fstpl
41
           movl
                    %eax, 8(%esp)
                                        # put x on call stack
42
           movl
                    %edx, 4(%esp)
                                        # put y on call stack
           movl
                    $.LC2, (%esp)
44
           call
                    printf
45
           movl
                    $0, %eax
46
                    $52, %esp
           addl
           Jaoa
                    %ecx
48
49
           popl
                    %ebp
           leal
                    -4(%ecx), %esp
50
           ret
51
           .size
                    main, .-main
52
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
53
                             .note.GNU-stack, "",@progbits
           .section
```

Listing 14.4: Converting a fraction to a float (gcc assembly language, 32-bit).

We add comments to lines 22 - 27 to show where the x and y variables are located in the stack frame.

```
leal
                    -12(%ebp), %eax
                                      # address of x
22
           movl
                    %eax, 8(%esp)
23
           leal
                    -8(%ebp), %eax
                                       # address of y
24
                    %eax, 4(%esp)
           movl
25
           movl
                    $.LC1, (%esp)
           call
                    scanf
27
```

Rather than actually push the arguments onto the stack, enough space was allocated on the stack (line 19) to directly store the values in the location where they would be if they had been pushed there. This is more efficient that pushing each argument.

Casting an int to a float requires a conversion in the storage format. This conversion is done by the x87 FPU as an integer is pushed onto the floating point register stack using the fildl instruction. This conversion can only be done to an integer that is stored in memory. The compiler uses a location on the call stack to temporarily store each integer so it can be converted:

```
28
           movl
                    -8(%ebp), %edx
                                      # load v
           movl
                    -12(%ebp), %eax
                                      # load x
29
           pushl
                    %edx
                                      # put y into memory
30
           fildl
                                      # convert to 80-bit float
                   (%esp)
31
           movl
                    %eax, (%esp)
                                      # put x into memory
32
           fildl
                                      # convert to 80-bit float
                    (%esp)
33
           leal
                    4(%esp), %esp
                                      # restore stack pointer
34
```

The fildl instructions on lines 31 and 33 each convert a 32-bit integer to an 80-bit float and pushes the float onto the x87 register stack. At this point the floating-point equivalent of x is at the top of the stack, and the floating-point equivalent of y is immediately below it. Then the floating-point division instruction:

```
fdivrp %st, %st(1) # z = (double)x / y;
```

divides the number at st(0) (the (0) can be omitted) by the number at st(1) and pops the x87 register stack so that the result is now at the top of the stack.

Finally, the fstpl instruction is used to pop the value off the top of the x87 register stack and store it in memory — at its proper location on the call stack. The "l" suffix indicates that 64 bits of memory should be used for storing the floating-point value. So the 80-bit value on the top of the x87 register stack is rounded to 64 bits as it is stored in memory. The other three arguments are also stored on the call stack.

```
fstpl 12(%esp) # put z on call stack
movl %eax, 8(%esp) # put x on call stack
movl %edx, 4(%esp) # put y on call stack
movl $.LC2, (%esp)
```

Note that the 32-bit version of printf does not receive arguments in registers, so eax is not used.

14.5.3 3DNow! Floating Point

The 3DNow! instructions use the low-order 64 bits in the same physical registers at the x87. These 64-bit portions are named mmx0, mmx1,..., mmx7. They are used as fixed register, not in a stack configuration. Execution of a 3DNow! instruction changes the TOP field (bits 13 - 11) in the MXCSR status register, so the top of stack is lost for any subsequent x87 instructions. The bottom line is that x87 and 3DNow! instructions cannot be used simultaneously.

Another limitation of the 3DNow! instructions set is that it only handles 32-bit floating point. These limitations of the 3DNow! instruction set make it essentially obsolete in the x86-64 architecture, so it will not be discussed further in this book.

14.6 Comments About Numerical Accuracy

Beginning programmers often see floating point arithmetic as more accurate than integer. It is true that even adding two very large integers can cause overflow. Multiplication makes it even more likely that the result will be very large and, thus, overflow. And when used with two integers, the / operator in C/C++ causes the fractional part to be lost. However, as you have seen in this chapter, floating point representations have their own set of inaccuracies.

Arithmetically accurate results require a thorough analysis of your algorithm. Some points to consider:

- Try to scale the data such that integer arithmetic can be used.
- All floating point computations are performed in 80-bit extended format. So there is no processing speed improvement from using floats instead of doubles.
- Try to arrange the order of computations so that similarly sized numbers are added or subtracted.
- Avoid complex arithmetic statements, which may obscure incorrect intermediate results.
- Choose test data that "stresses" your algorithm. For example, 0.00390625 can be stored exactly in eight bits, but 0.1 has no exact binary equivalent.

14.7 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

14.7.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmov cc	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movsss	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
pushw	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic / logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
adds	mem	%reg	add	189
and s	\$imm/%reg	%reg/mem	bit-wise and	258
and s	mem	%reg	bit-wise and	258
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
decs	%reg/mem		decrement	220
divs	%reg/mem		unsigned divide	280
idivs	%reg/mem		signed divide	282
imuls	%reg/mem		signed multiply	276
inc <i>s</i>	%reg/mem		increment	220
lea w	mem	%reg	load effective address	167
muls	%reg/mem		unsigned multiply	275
negs	%reg/mem		negate	286
ors	\$imm/%reg	%reg/mem	bit-wise inclusive or	258
ors	mem	%reg	bit-wise inclusive or	258
sal s	\$imm/%cl	%reg/mem	shift arithmetic left	269
sars	\$imm/%cl	%reg/mem	shift arithmetic right	268
shl s	\$imm/%cl	%reg/mem	shift left	269
shr <i>s</i>	\$imm/%cl	%reg/mem	shift right	268
subs	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210
xors	\$imm/%reg	%reg/mem	bit-wise exclusive or	258
xors	mem	%reg	bit-wise exclusive or	258

s = b, w, l, q; w = l, q

program flow control:

opcode	location	action	see page:
call	label	call function	156
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
j <i>cc</i>	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177

cc = condition codes

SSE floating point conversion:

opcode	source	destination	action	see page:
cvtsd2si	%xmmreg/mem	%reg	scalar double to signed integer	328
cvtsd2ss	%xmmreg	%xmmreg/%reg	scalar double to single float	328
cvtsi2sd	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2sdq	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2ss	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtsi2ssq	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtss2sd	%xmmreg	%xmmreg/mem	scalar single to scalar double	328
cvtss2si	%xmmreg/mem	%reg	scalar single to signed integer	328
cvtss2siq	%xmmreg/mem	%reg	scalar single to signed integer	328

x87 floating point:

opcode	source	destination	action	see page:
fadd <i>s</i>	memfloat		add	333
faddp			add/pop	333
fchs			change sign	333
fcom <i>s</i>	memfloat		compare	333
fcomp			compare/pop	333
fcos			cosine	333
fdiv <i>s</i>	memfloat		divide	333
fdivp		divide/pop	333	
filds	memint		load integer	333
fist <i>s</i>		memint	store integer	333
flds	memint		load floating point	333
fmuls	memfloat		multiply	333
fmulp			multiply/pop	333
fsin			sine	333
fsqrt			square root	333
fst <i>s</i>		memint	floating point store	333
fsub <i>s</i>	memfloat		subtract	333
fsubp			subtract/pop	333

s = b, w, l, q; w = l, q

14.7.2 Addressing Modes

register direct:	The data value is located in a CPU register.		
	syntax: name of the register with a "%" prefix.		
	example: movl %eax, %ebx		
immediate data:	The data value is located immediately after the instruc-		
	tion. Source operand only.		
	syntax: data value with a "\$" prefix.		
	example: movl \$0xabcd1234, %ebx		
base register plus	The data value is located in memory. The address of the		
offset:	memory location is the sum of a value in a base register		
	plus an offset value.		
	syntax: use the name of the register with parentheses		
	around the name and the offset value immediately be-		
	fore the left parenthesis.		
	example: movl \$0xaabbccdd, 12(%eax)		
rip-relative:	The target is a memory address determined by adding		
	an offset to the current address in the rip register.		
	syntax: a programmer-defined label		
	<pre>example: je</pre>		
indexed:	The data value is located in memory. The address		
	of the memory location is the sum of the value in		
	the base_register plus scale times the value in the in-		
	dex_register, plus the offset.		
	syntax: place parentheses around the comma separated		
	list (base_register, index_register, scale) and preface it		
	with the offset.		

14.8 Exercises

- **14-1** (§14.1) Develop an algorithm for converting decimal fractions to binary. Hint: Multiply both sides of Equation 14.1 by two.
- **14-2** (§14.1) Show that two's complement works correctly for fractional values. What is the decimal range of 8-bit, two's complement fractional values? Hint: +0.5 does not exist, but -0.5 does.
- **14-3** (§14.3) Copy the following program and run it:

```
* exer14_3.c
  * Use float for Loop Control Variable?
   * Bob Plantz - 18 June 2009
7 #include <stdio.h>
9 int main()
10 {
      float number;
11
      int counter = 20;
12
      number = 0.5;
14
      while ((number != 0.0) && (counter > 0))
15
16
          printf("number = %.10f and counter = %i\n", number, counter);
17
```

14.8. EXERCISES 339

```
number -= 0.1;
counter -= 1;
return 0;
```

Listing 14.5: Use float for Loop Control Variable?

Explain the behavior. What happens if you change the decrement of number from 0.1 to 0.0625? Explain.

14-4 (§14.3 §14.4) Copy the following program and run it:

```
* exer14_3.c
   * Are floats accurate?
   * Bob Plantz - 18 June 2009
7 #include <stdio.h>
9 int main()
10 {
      float fNumber = 2147483646.0;
11
      int iNumber = 2147483646;
12
13
      printf(" Before adding the float is %f\n", fNumber);
      printf("
                        and the integer is %i\n\n", iNumber);
15
      fNumber += 1.0;
      iNumber += 1;
      printf("After adding 1 the float is f\n", fNumber);
      printf("
                        and the integer is %i\n", iNumber);
19
      return 0;
21
22 }
```

Listing 14.6: Are floats accurate?

Explain the behavior. What is the maximum value of fNumber such that adding 1.0 to it works?

14-5 (§14.4) Convert the following decimal numbers to 32-bit IEEE 754 format by hand:

a) 1.0
e) -3125.3125
b) -0.1
f) 0.33
c) 2005.0
g) -0.67
d) 0.00390625
h) 3.14

14-6 (§14.4) Convert the following 32-bit IEEE 754 bit patterns to decimal.

a) 4000 0000 e) 42c8 1000 b) bf80 0000 f) 3f99 999a c) 3d80 0000 g) 42f6 e666 d) c180 4000 h) c259 48b4 14-7 (§14.4) Show that half the floats (in 32-bit IEEE 754 format) are between -2.0 and +2.0.

14-8 (§14.5) The following C program

```
1 /*
2 * casting.c
   * Casts two integers to floats and adds them.
   * Bob Plantz - 18 June 2009
7 #include <stdio.h>
9 int main()
10 {
      int x;
11
      double y, z;
13
      printf("Enter an integer: ");
14
      scanf("%i", &x);
15
      y = 1.23;
      z = (double)x + y;
17
      printf("%i + %lf = %lf\n", x, y, z);
19
      return 0;
20
21 }
```

Listing 14.7: Casting integer to float in C.

was compiled with the -S option to produce

```
"casting.c"
           .file
           .section
                             . rodata
3 .LC0:
           .string "Enter an integer: "
5 .LC1:
           .string "%i"
7 .LC3:
           .string "%i + %lf = %lf\n"
           .text
10 .globl main
           .type
                   main, @function
11
12 main:
           pushq
                    %rbp
13
                    %rsp, %rbp
           movq
                    $48, %rsp
           subq
15
                    $.LC0, %edi
           movl
                    $0, %eax
           movl
17
           call
                    printf
           leaq
                    -4(%rbp), %rsi
19
                    $.LC1, %edi
           movl
           movl
                    $0, %eax
21
           call
                    scanf
22
           movabsq $4608218246714312622, %rax
           movq
                    %rax, -16(%rbp)
           movl
                    -4(%rbp), %eax
25
           cvtsi2sd
                            %eax, %xmm0
           addsd
                    -16(%rbp), %xmm0
27
           movsd
                    %xmm0, -24(%rbp)
28
```

14.8. EXERCISES 341

```
movl
                   -4(%rbp), %esi
          movsd
                   -24(%rbp), %xmm0
30
                   -16(%rbp), %rax
          movq
          movapd
                   %xmm0, %xmm1
                   %rax, -40(%rbp)
          movq
          movsd
                   -40(%rbp), %xmm0
34
          movl
                   $.LC3, %edi
          movl
                   $2, %eax
          call
                   printf
          movl
                   $0, %eax
          leave
          ret
                   main, .-main
           .size
41
                   "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
           .ident
42
                           .note.GNU-stack,"",@progbits
           .section
43
```

Listing 14.8: Casting integer to float in assembly language.

Identify the assembly language sequence that performs the C sequence

```
15     y = 1.23;
16     z = (double)x + y;
```

and describe what occurs.

Chapter 15

Interrupts and Exceptions

Thus far in this book, all programs have been executed under the Linux operating system. An operating system (OS) can be viewed as a set of programs that provide services to application programs. These services allow the application programs to use the hardware, but only under the auspices of the OS.

Linux allows multiple programs to be executing concurrently, and each of the programs is accessing the hardware resources of the computer. One of the jobs of the OS is to manage the hardware resources in such a way that the programs do not interfere with one another. In this chapter we introduce the CPU features that enable Linux to carry out this management task.

The read system call is a good example of a program using the services of the OS. It requests input from the keyboard. The OS handles all input from the keyboard, so the read function must first request keyboard input from the OS. One of the reasons this request must be funneled through the OS is that other programs may also be requesting input from the keyboard, and the OS needs to ensure that each program gets the keyboard input intended for it.

Once the request for input has been made, it would be very inefficient for the OS to wait until a user strikes a key. So the OS allows another program to use the CPU, and the keyboard notifies the OS when a key has been struck. To avoid losing a character, this notification interrupts the CPU so that the OS can read the character from the keyboard.

Another example comes from something you probably did not intend to do. Unless you are a perfect programmer, you have probably seen a "segmentation fault." This can occur when your program attempts to access memory that has not been allocated for your program. I have gotten this error (yes, I still make programming mistakes!) when I have made a mistake using the stack, or when I dereference a register that contains a bad address.

We can summarize these three types of events:

- a *software interrupt* can be used to request a service from the OS.
- most I/O devices can generate a hardware interrupt when they are ready to transfer data.
- certain conditions within the CPU (typically caused by our programming errors) generate exceptions.

In response to any of these events, the CPU performs an operation that is very similar to the call instruction. The value in the rip register is pushed onto the stack, and another address is placed in the rip register. The net effect is that a function is called, just as in the call instruction, but the address of the called function is specified in a different way, and additional information is pushed onto the stack. Before describing the differences, we discuss what ought to occur in order for the OS to deal with each of these events.

15.1 Hardware Interrupts

Keyboard input is a good place to start the discussion. It is impossible to know exactly when someone will strike a key on the keyboard, nor how soon the next key will be struck. For example, if a key is struck in the middle of executing the first of the following two instructions

15.2. EXCEPTIONS 343

in order to avoid losing the keystroke, we would like to read the character immediately after the cmpb instruction is executed but before the CPU starts working on the je instruction.

The function that reads the character from the keyboard is called an *interrupt handler* or simply *handler*. Handlers are part of the OS. In Linux they can either be built into the kernel or loaded as separate modules as needed.

The timing — between the two instructions — means that the CPU will acknowledge an interrupt only between instruction execution cycles. Just before executing the je instruction the rip register has the address of the instruction, and it is that address that gets pushed onto the stack. That is, since calling a handler occurs automatically and does not involve fetching an instruction, the current value of the rip pushed onto the stack is the correct return address from the handler.

There is another important issue. It is almost certain that the rflags register will be changed by the handler that gets called. When program control returns to the je instruction (which is supposed to depend on the state of the rflags register as a result of executing the cmpb instruction), there is little chance that the program will do what the programmer intended. Thus we conclude that in addition to saving the rip register,

• an interrupt causes the CPU to save the rflags register on the stack.

The next issue is the question of how the CPU knows the address of the appropriate handler to call. In the call instruction, the address of the function to call is specified as an operand to the instruction. For example,

```
call toUpperCase
```

Since the keyboard has no knowledge of the software, there must be some other mechanism for specifying the address of the handler to call. The answer to this problem is that addresses of interrupt handlers are stored in an Interrupt Descriptor Table (IDT). Each possible interrupt in the system is associated with a unique entry in the IDT.

The IDT table entries are data structures (128 bits in 64-bit mode, 64 bits in 32-bit mode) called *gate descriptors*. In addition to the handler address, they contain information that the CPU uses to help protect the integrity of the OS.

After it has completed execution of the current instruction, the following actions must occur when there is an interrupt from a device external external to the CPU:

- A copy of the rflags register must be saved.
- The address in the rip register must be saved so that the CPU can return to the current program after it has handled the interrupting device.
- The address of the handler associated with this interrupt must be placed in the rip register

15.2 Exceptions

We next consider exceptions. These are typically the result of a number that the CPU cannot deal with. Examples are

- division by zero
- an invalid instruction
- an invalid address

In a perfect world, the application software would include all the checks that would prevent the occurrence of many of these errors. The reality is that no program is perfect, so some of these errors will occur.

When they do occur, it is the responsibility of the OS to take an appropriate action. The currently executing instruction may have caused the exception to occur. So the CPU often reacts to an exception in the midst of a normal instruction execution cycle. The actions that the CPU must take in response to an exception are essentially the same as those for an interrupt:

- A copy of the rflags register must be saved.
- The address in the rip register must be saved. Depending on the nature of the exception, the handler may or may not return to the current program after it has handled the exception.
- The address of the handler associated with this exception must be placed in the rip register.

Not all exceptions are due to actual program errors. For example, when a program references an address in another part of the program that has not yet been loaded into memory, it causes a page fault exception. The OS must provide a handler that loads the appropriate part of the program from the disk into memory, then continues with normal program execution.

15.3 Software Interrupts

The usefulness of the interrupt/exception handling mechanism for requesting OS services is not apparent until we discuss privilege levels. As mentioned above, one of the jobs of the OS is to keep concurrently executing programs from interfering with one another. It uses the privilege level mechanism in the CPU to do this.

At any given time, the CPU is running in one of four possible *privilege levels*. The levels, from most privileged to least, are:

- O Provides direct access to all hardware resources. Restricted to the lowest-level operating system functions, e.g., BIOS, memory management.
- 1 Somewhat restricted access to hardware resources. Might be used by library routines and software that controls I/O devices.
- 2 More restricted access to hardware resources. Might be used by library routines and software that controls I/O devices.
- 3 No direct access to hardware resources. Applications programs run at this level.

The OS needs to have direct access to all the hardware, so it executes at privilege level 0. Application programs should be limited, so they execute at privilege level 3. The CPU includes a mechanism for recognizing the privilege level of the memory associated with each program. A program can access memory at a lower privilege level, but not at a higher level. Thus, an application program (running at level 3) cannot access memory that belongs to the OS.

Gate descriptors include privilege level information in addition to the handler address. The CPU's interrupt/exception mechanism automatically switches to this privilege level when it calls the handler function. Thus, for example, the keyboard might interrupt during the execution of an application program running at privilege level 3, but its handler function would execute at privilege level 0.

The software interrupt allows an application program to use OS services while still allowing the OS to control this access. The instruction is

int \$n

where n specifies the n^{th} entry in the IDT table.

Older versions of the Linux kernel used

Use syscall instead.

int \$0x80 # Should be avoided in 64-bit mode.

to make system calls. The code corresponding to the desired action is loaded into eax and the arguments are loaded into the proper registers before the system call is executed. The recommended technique for making system calls is discussed in Section 15.6 on page 345.

15.4 CPU Response to an Interrupt or Exception

Each entry in the IDT is called a *vector*. The CPU is hardwired to associate vectors 0-31 with specific exceptions. For example, vector number 0 represents a divide-by-zero exception. Vector number 14 is a page fault exception.

Vectors 32 - 255 can be assigned to interrupts, both external and the int n instruction. These assignments are determined by the OS programmers.

During OS initialization, the address of a handler function is stored in the gate descriptor corresponding to the vector number it is designed to handle. Other information in the gate descriptor causes the CPU to switch to a higher (numerically lower) privilege level, so the handler function has appropriate access to the hardware.

Whenever an interrupt or exception occurs the CPU executes an *exception processing cycle*, which consists of the following actions:

Exception processing cycle.

- 1. Push the rflags register onto the stack.
- 2. Push the rip register onto the stack.
- 3. Determine the address of the corresponding gate descriptor in the IDT table.
- 4. Load the handler address from the gate descriptor into the rip register.

The CPU continues with a normal instruction processing cycle — fetch the instruction at the address in rip, etc. Thus, control will transfer to the handler function.

Depending upon the nature of an exception and what actually caused it, CPU execution may or may not be returned to the program that was executing when the exception occurred.

15.5 Return from Interrupt/Exception

There is one more part of this puzzle. Since the ret instruction simply pops the value at the top of the stack into the rip register, it will not work for the OS's handler function. The CPU has another instruction

iret

that correctly pops everything off the stack into the rip and rflags registers and restores the privilege level to where it was before the handler function was invoked. (The privilege level information was also stored on the stack.)

15.6 The syscall and sysret Instructions

Using a software interrupt to invoke one of the services provided by the OS is somewhat of an overkill. The x86-64 architecture includes another instruction that causes the CPU to change priority levels but does not use the stack nor goes through the IDT table, thus saving execution time. The instruction is

syscall

We first introduced it in Section 8.5 (page 177) to perform I/O.

The syscall instruction causes the CPU to

- 1. Move the low-order 32 bits of the rflags register to the r11 register.
- 2. Move the address in the rip register to the rcx register.
- 3. Load the address from the LSTAR register into the rip register. The LSTAR register is a Model-Specific Register; see Table 6.2 on page 119.
- 4. Change the privilege level to 0.

Now the CPU has been switched to privilege level 0, and the OS has control and can enforce orderly use of the hardware.

The program in Listing 15.1 illustrates the use of syscall to do system calls without using the C libraries. See Exercise 15-1 for using syscall within the C runtime environment.

```
1 # myCat.s
2 # Writes a file to standard out
3 # Does not use C libraries
4 # Bob Plantz -- 18 June 2009
  # Useful constants
           . equ
                    STDIN, 0
                    STDOUT, 1
           .equ
     # from asm/unistd_64.h
9
           .equ
                    READ, 0
10
                    WRITE, 1
           .equ
11
                    OPEN, 2
12
           .equ
                    CLOSE,3
           .equ
13
           . equ
                    EXIT,60
14
     # from bits/fcntl.h
15
                    O_RDONLY,0
           .equ
16
                    0_WRONLY,1
           .equ
17
                    0_RDWR,3
           .equ
18
19 # Stack frame
                    aLetter, -16
           .equ
20
                    fd, -8
           .equ
21
                    localSize, -16
           .equ
22
                    fileName, 24
           . equ
23
24 # Code
           .text
                                     # switch to text segment
           .globl
                    __start
26
           .type
                    __start, @function
27
  __start:
28
           pushq
                                     # save caller's frame pointer
29
           movq
                                     # establish our frame pointer
30
                    %rsp, %rbp
           addq
                    $localSize, %rsp
                                         # for local variable
31
32
           movl
                    $OPEN, %eax
                                         # open the file
33
                    fileName(%rbp), %rdi # the filename
           movq
34
           movl
                    $0_RDONLY, %esi
                                         # read only
35
           syscall
           movl
                    %eax, fd(%rbp)
                                         # save file descriptor
37
                    $READ, %eax
           movl
39
                    $1, %edx
                                         # 1 character
           movl
                    aLetter(%rbp), %rsi # place to store character
           leag
41
           movl
                    fd(%rbp), %edi
                                         # standard in
           syscall
                                         # request kernel service
43
44
45 writeLoop:
           cmpl
                    $0, %eax
                                         # any chars?
46
                                         # no, must be end of file
           jе
                    allDone
47
           movl
                    $1, %edx
                                         # yes, 1 character
48
                    aLetter(%rbp), %rsi # place to store character
           leag
49
           movl
                    $STDOUT, %edi
                                         # standard out
50
           movl
                    $WRITE, %eax
51
           syscall
                                         # request kernel service
52
```

```
53
          movl
                   $READ, %eax
                                        # read next char
54
                   $1, %edx
          movl
                                        # 1 character
          leag
                   aLetter(%rbp), %rsi # place to store character
          movl
                   fd(%rbp), %edi
                                        # standard in
57
          syscall
                                        # request kernel service
58
                                        # check the char
          jmp
                   writeLoop
60 allDone:
          movl
                   $CLOSE, %eax
                                        # close the file
61
          movl
                   fd(%rbp), %edi
                                        # file descriptor
62
          syscall
                                        # request kernel service
63
                                        # delete local variables
                   %rbp, %rsp
          movq
65
                                        # restore caller's frame pointer
66
          popq
                   %rbp
                                        # end this process
67
          movl
                   $EXIT, %eax
          syscall
```

Listing 15.1: Using syscall to cat a file. Use "ld -e __start -o myCat myCat.o" after assembling this file.

In Section 8.1 (page 154) we saw how to call the write system call function to write characters to standard out (the screen). write and the other system call functions are simply C wrappers that load the proper code in eax and the arguments into the appropriate registers.

Several system call codes are shown in Table 15.1. For additional system call codes see the

function	eax	rdi	rsi	rdx	returns
read	0	file descriptor	pointer to	number of	number of
	0		storage area	bytes to read	bytes read
write	1	file descriptor	pointer to	number of	number of
	1		first byte	bytes to write	bytes written
open	2	pointer to	flags	mode	file descriptor
open	2	filename			
close	3	file descriptor			
exit	60				_

Table 15.1: Some system call codes for the syscall instruction.

unistd $_64.h$ file on your system. The arguments for each system call are given in the man page for the corresponding C version. For example,

```
bob@bob-desktop:~$ man 2 write
```

describes the write system call.

There is a complementary instruction, sysret, that the OS executes in order to return from a system call:

sysret

The sysret instruction causes the CPU to

- 1. Move the low-order 32 bits of the rll register to the rflags register.
- 2. Move the value in the rcx register to the rip register.
- 3. Change the privilege level to 3. (We omit the details of how this is done.)

15.7 Summary

We summarize the differences between a call instruction and an interrupt/exception. The similarities are

- the address in the rip is pushed onto the stack, thus providing a way for the CPU to return to the normal flow of the application program (if appropriate), and
- the address of the function to be called is placed in the rip.

The additional features of the interrupt/exception are

- the value in the rflags register is also pushed onto the stack,
- the address of the called function is stored in the IDT table instead of being specified by the programmer, and
- the privilege level of the called function can be changed (and it usually is).

15.8 Instructions Introduced Thus Far

This summary shows the assembly language instructions introduced thus far in the book. The page number where the instruction is explained in more detail, which may be in a subsequent chapter, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

15.8.1 Instructions

data movement:

opcode	source	destination	action	see page:
cmov cc	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movsss	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push <i>w</i>	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic/logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
adds	mem	%reg	add	189
and s	\$imm/%reg	%reg/mem	bit-wise and	258
and s	mem	%reg	bit-wise and	258
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
decs	%reg/mem		decrement	220
divs	%reg/mem		unsigned divide	280
idivs	%reg/mem		signed divide	282
imuls	%reg/mem		signed multiply	276
inc <i>s</i>	%reg/mem		increment	220
lea w	mem	%reg	load effective address	167
muls	%reg/mem		unsigned multiply	275
negs	%reg/mem		negate	286
ors	\$imm/%reg	%reg/mem	bit-wise inclusive or	258
ors	mem	%reg	bit-wise inclusive or	258
sal <i>s</i>	\$imm/%cl	%reg/mem	shift arithmetic left	269
sar <i>s</i>	\$imm/%cl	%reg/mem	shift arithmetic right	268
shl <i>s</i>	\$imm/%cl	%reg/mem	shift left	269
shr <i>s</i>	\$imm/%cl	%reg/mem	shift right	268
subs	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210
xors	\$imm/%reg	%reg/mem	bit-wise exclusive or	258
xors	mem	%reg	bit-wise exclusive or	258

 $s = \mathsf{b}, \, \mathsf{w}, \, \mathsf{l}, \, \mathsf{q}; \, w = \mathsf{l}, \, \mathsf{q}$

program flow control:

opcode	location	action	see page:
call	label	call function	156
iret		return from kernel function	345
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
jcc	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177
sysret		return from kernel function	347

cc = condition codes

$SSE\ floating\ point\ conversion:$

opcode	source	destination	action	see page:
cvtsd2si	%xmmreg/mem	%reg	scalar double to signed integer	328
cvtsd2ss	%xmmreg	%xmmreg/%reg	scalar double to single float	328
cvtsi2sd	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2sdq	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2ss	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtsi2ssq	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtss2sd	%xmmreg	%xmmreg/mem	scalar single to scalar double	328
cvtss2si	%xmmreg/mem	%reg	scalar single to signed integer	328
cvtss2siq	%xmmreg/mem	%reg	scalar single to signed integer	328

x87 floating point:

opcode	source	destination	action	see page:
fadd <i>s</i>	memfloat		add	333
faddp			add/pop	333
fchs			change sign	333
fcoms	memfloat		compare	333
fcomp			compare/pop	333
fcos			cosine	333
fdiv <i>s</i>	memfloat		divide	333
fdivp		divide/pop	333	
filds	memint		load integer	333
fist <i>s</i>		memint	store integer	333
flds	memint		load floating point	333
fmuls	memfloat		multiply	333
fmulp			multiply/pop	333
fsin			sine	333
fsqrt			square root	333
fst <i>s</i>		memint	floating point store	333
fsubs	memfloat		subtract	333
fsubp	•	_	subtract/pop	333

s = b, w, l, q; w = l, q

15.9. EXERCISES 351

15.8.2 Addressing Modes

register direct:	The data value is located in a CPU register.
	syntax: name of the register with a "%" prefix.
	example: movl %eax, %ebx
immediate data:	The data value is located immediately after the instruc-
	tion. Source operand only.
	syntax: data value with a "\$" prefix.
	example: movl \$0xabcd1234, %ebx
base register plus	The data value is located in memory. The address of the
offset:	memory location is the sum of a value in a base register
	plus an offset value.
	<i>syntax</i> : use the name of the register with parentheses
	around the name and the offset value immediately be-
	fore the left parenthesis.
	example: movl \$0xaabbccdd, 12(%eax)
rip-relative:	The target is a memory address determined by adding
	an offset to the current address in the rip register.
	syntax: a programmer-defined label
	<pre>example: je</pre>
indexed:	The data value is located in memory. The address
	of the memory location is the sum of the value in
	the base_register plus scale times the value in the in-
	dex_register, plus the offset.
	syntax: place parentheses around the comma separated
	list (base_register, index_register, scale) and preface it
	with the offset.
	example: movl \$0x6789cdef, -16(%edx, %eax, 4)

15.9 Exercises

15-1 (§15.6) Modify the program in Figure 15.1 so that it uses the C environment. That is, turn it into a main function using the prototype int main(int argc, char **argv); argc is the number of space-delimited strings on the command line, including the command to execute the program. argv is a pointer to an array of pointers to each of the command line strings.

Chapter 16

Input/Output

In this chapter we discuss the I/O subsystem. The I/O subsystem is the means by which the CPU communicates with the outside world. By "outside world" we mean devices other than the CPU and memory.

As you have learned, the CPU executes instructions, and memory provides a place to store data and instructions. Most programs read data from one or more input devices, process the data, then write the results to one or more output devices.

Typical input devices are keyboards and mice. Common output devices are display screens and printers. Although most people do not think of them as such, magnetic disks, CD drives, etc. are considered as I/O devices. It may be a little more obvious that a connection with the internet is also seen as I/O. The reasons will become clearer in this chapter, where we discuss how I/O devices are programmed.

16.1 Memory Timing

Since the CPU accesses I/O devices via the same buses as memory (see Figure 1.1, page 3), it might seem that the CPU could access the I/O devices in the same way as memory. That is, it might seem that I/O could be performed by using the movb instruction to transfer bytes of data between the CPU and the specific I/O device. This can be done with many devices, but there are other issues that must be taken into account in order to make it work correctly. One of the main issues lies in the timing differences between memory and I/O. Before tackling the I/O timing issues, let us consider memory timing characteristics.

Aside: As pointed out in Section 1.2 (page 4), the three-bus description given here shows the logical interaction between the CPU and I/O. Most modern general purpose computers employ several types of buses. The way in which the CPU connects to the various buses is handled by hardware controllers. A programmer generally deals only with the logical view.

Two types of RAM are commonly used in PCs.

- SRAM holds its values as long as power is on. Access times are very fast. It requires more components to do this, so it is more expensive and larger.
- DRAM uses passive components that hold data values for only a few fractions of a second. Thus DRAM includes circuitry that automatically refreshes the data values before the values are completely lost. It is much less expensive than SRAM, but also much slower.

Most of the memory in a PC is DRAM because it is much less expensive and smaller than SRAM. Of course, each instruction must be fetched from memory, so slow memory access would limit CPU speed. This problem is solved by using cache systems made from SRAM.

A cache is a small amount of fast memory placed between the CPU and main memory. When the CPU needs to access a byte in main memory, that byte, together with several surrounding bytes, are copied into the cache memory. There is a high probability that the surrounding bytes will be accessed soon, and the CPU can work with the values in the much faster cache. This is handled by the system hardware. See [28] and [31] for more details.

Modern CPUs include cache memory on the same chip, which can be accessed at CPU speeds. Even small cache systems are very effective in speeding up memory access. For example, the CPU in my desktop system (built in 2005) has 64 KB of Level 1 instruction cache, 64 KB of Level 1 data cache, and 512 KB of Level 2 cache (both instructions and data). In contrast, most of the memory in the system consists of 1 GB of DDR 400 memory.

The important point here is that memory is matched to the CPU by the hardware. Very seldom is memory access speed a programming issue.

Aside: There are some cases where knowing how to manipulate memory caches can speed up execution time. The x86 has instructions for working directly with cache. Optimizing cache usage is an advanced topic beyond the scope of this book.

16.2 I/O Device Timing

I/O devices are much slower than memory. Consider a common input device, the keyboard. Typing at 120 words per minute is equivalent to 10 characters per second, or 100 milliseconds. between each character. A CPU running at 2 GHz can execute approximately 200 million instructions during that time. And the time intervals between keystrokes are very inconsistent. Many will be much longer than this.

Even a magnetic disk is very slow compared to memory. What if the byte that needs to be read has just passed under the read/write head on a disk that is rotating at 7200 RPM? The system must wait for a full revolution of the disk, which takes 8.33 milliseconds. Again, there is a great deal of variability in the rotational delay between reads from the disk.

In addition to being much slower, I/O devices exhibit much more variance in their timing. Some people type very fast on a keyboard, some very slow. The required byte on a magnetic disk might be just coming up to the read/right head, or it may have just passed. We need a mechanism to determine whether an input device has a byte ready for our program to read, and whether an output device is ready to accept a byte that is sent to it.

16.3 Bus Timing

Thus far in this book buses have been shown simply as wires connecting the subsystems. Since more than one device is connected to the same wires, the devices must follow a protocol for deciding which two devices can use the bus at any given time. There are many protocols in use, which fall into one of two types:

Synchronous — data transfer is controlled by a clock signal. Typically, a centralized bus controller generates the clock signal, which is sent on a separate control line in the bus.

Asynchronous — data transfer is controlled by a "handshaking" exchange between the two devices. Many asynchronous protocols are handled by the devices themselves over the data and address lines in the bus.

Modern computer systems employ both types of buses. A typical PC arrangement is shown in Figure 16.1.

16.4 I/O Interfacing

In addition to a very wide range in their timing, there is an enormous range of I/O devices that are commonly attached to computers, which differ greatly in how they handle data. A mouse provides position information. A monitor displays graphic information. Most computers have

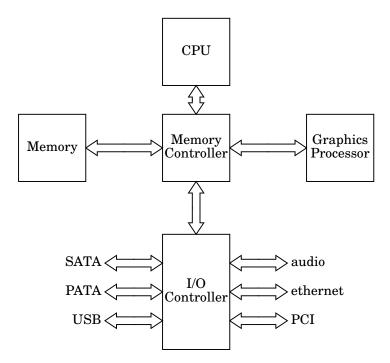


Figure 16.1: Typical bus controllers in a modern PC. The Memory Controller is often called the North Bridge; it provides synchronous communication with main memory and the graphics interface. The I/O Controller is often called the South Bridge; it provides asynchronous communication with the several types of buses that connect to I/O devices.

speakers connected to them. Ultimately, the CPU must be able to communicate with I/O devices in bit patterns at the speed of the device.

The hardware between the CPU and the actual I/O device consists of two subsystems — the *controller* and the *interface*. The controller is the portion that works directly with the device. For example, a keyboard controller detects which keys are pressed and converts this to a code. It also detects whether a key is pressed or not. A disk controller moves the read/write head to the requested track. It then detects the sector number and waits until the requested sector comes into position. Some very simple devices do not need a controller.

The interface subsystem provides *registers* that the CPU can read from or write to. An I/O device is programmed through the interface registers. In general, the following types of registers are provided:

- **Transmit** Allows data to be written to an output device.
- **Receive** Allows data to be read from an input device.
- **Status** Provides information about the current state of the device, including the controller.
- Control Allows a program to send commands to the controller and to change its settings.

It is common for one register to provide multiple functionality. For example, there may be one register for transmitting and receiving, its functionality depending on whether the CPU writes to or reads from the register. And it is common for an interface to have more than one register of the same type, especially control registers.

16.5. I/O PORTS 355

16.5 I/O Ports

The CPU communicates with an I/O device through I/O ports. The specific port is specified by a value on the address bus. There are two ways to distinguish an I/O port address from a physical memory address:

- Isolated I/O
- Memory-Mapped I/O

With isolated I/O, the I/O ports can be numbered from 0x0000 to 0xffff. This address space is separate from the physical memory address space. Instructions are provided for accessing the I/O address space. The distinction between the two addressing spaces is made in the control bus.

One instruction to perform input is:

ins source, destination

where s denotes the size of the operand: $\begin{bmatrix} \underline{s} & \underline{\text{meaning}} \\ b & \overline{\text{byte}} & 8 \end{bmatrix}$ w word 16 $\begin{bmatrix} 1 & longword \\ q & quadword \end{bmatrix}$ 32 $\begin{bmatrix} q & quadword \end{bmatrix}$

Intel® Syntax in destination, source

The in instruction moves data from the I/O port specified by the source into the register specified by the destination. The source operand can be either an immediate value, or a value in the dx register. The destination must be al, ax, or eax, consistent with the operand size. For example, the instruction

inb \$4, %al

reads I/O port number 4, placing the value in the al register.

An instruction to perform output is:

outs source, destination

where s denotes the size of the operand: $\begin{bmatrix} \underline{s} \\ b \end{bmatrix}$ $\begin{bmatrix} \underline{meaning} \\ b \end{bmatrix}$ $\underbrace{number of bits} \\ 8 \\ w \\ word \\ 16 \\ 1 \\ longword \\ q \\ quadword \\ 64 \\ \end{bmatrix}$

Intel® Syntax out destination, source

The out instruction moves data to the I/O port specified by the destination from the register specified by the source. The destination operand can be either an immediate value, or a value in the dx register. The source must be al, ax, or eax, consistent with the operand size. For example, the instruction

outb %**al**, \$6

writes the value in the al register to I/O port number 6.

16.6 Programming Issues

One of the primary jobs of an operating system is to handle I/O. The software that does this is called a *device handler*. The operating system coordinates the activities of all the device

handlers so that the hardware is utilized in an efficient manner. In Linux, a device handler may either be compiled into the kernel or in a separate module that is loaded into memory only if needed.

Thus, programming I/O devices generally means changing the operating system kernel. This can be done, but it requires considerably more knowledge than is provided in this book. It is possible to give user applications permission to directly access specific I/O devices, but this can produce disastrous results, especially in a multi-user environment.

We will not do any direct I/O programming in this book, but we will look at the general concepts. Listing 16.1 sketches the general algorithms in C. The code was abstracted from some I/O routines that work with a Dual Asynchronous Universal Receiver/Transmitter (DUART) on a single board computer. It is incomplete code and does not run on any known computer, but it illustrates the basic concepts.

This example uses memory-mapped I/O. The program calls three functions:

- init_io Initialize the I/O interface. This includes placing the hardware in an "all clear" state and setting parameters such as speed, etc.
- charin Read one character from the input.
- charout Write one character to the output.

We will examine what each does.

```
* io_sketch_mm.c
   * This code sketches the algorithms to intialize
   * a DUART, read one character and echo it using
   * isolated I/O.
   * WARNING: This code does not run on any known
               device. It is meant to sketch some
               general I/O concepts only.
   * Bob Plantz - 18 June 2009
12 /* register offsets */
13 #define MR
                      /* mode register */
              0 \times 01
14 #define SR
               0x03
                      /* status register */
15 #define CSR 0x03
                      /* clock select register */
16 #define CR
              0x05
                      /* command register */
17 #define RR
                      /* receiver register */
              0 \times 07
18 #define TR
              0x07
                      /* transmitter register */
                      /* auxilliary control register */
19 #define ACR 0x09
20 #define IMR 0x0B
                      /* interrupt mask register */
22 /* status bits */
23 #define RxRDY 1
                     /* receiver ready */
24 #define TxRDY 4
                     /* transmitter ready */
26 /* commands */
27 #define RESETRECEIVER 0x20
28 #define RESETTRANSMIT 0x30
29 #define RESETERROR
                         0x40
30 #define RESETMODE
                         0×10
31 #define TIMER
                         0xF0
32 #define NOPARITY8BITS 0x13
33 #define STOPBIT2
                         0x0F
34 #define BAUD19200
                         0xC
#define BAUDRATE BAUD19200+(BAUD19200<<4)</pre>
```

```
36 #define ENABLE
                          0x05
37 #define NOINTERRUPT
                          0x00
39 void init_io();
40 unsigned char charin();
41 void charout( unsigned char c );
43 int main() {
     unsigned char aCharacter;
45
     init_io();
     aCharacter = charin();
47
     charout(aCharacter);
49
50
     return 0;
51 }
52
  void init_io() {
     unsigned char* port = (unsigned char*) 0xff000;
54
     *(port+CR) = RESETRECEIVER; /* reset receiver */
56
     *(port+CR) = RESETTRANSMIT; /* reset transmitter */
57
                                   /* clear any errors */
     *(port+CR) = RESETERROR;
58
     *(port+CR) = RESETMODE;
                                    /* make sure we're using MR1 */
60
61
     *(port+ACR) = TIMER;
                                    /* baud set 2, crystal divide by 16 */
     *(port+MR) = NOPARITY8BITS; /* no parity, 8 bits */
62
     *(port+MR) = STOPBIT2;
                                    /* stop bit length 2.000 */
                                   /* set baud */
     *(port+CSR) = BAUDRATE;
     *(port+IMR) = 0;
                                    /* turn off interrupts */
65
     *(port+CR) = ENABLE;
                                    /* enable receiver and transmitter */
67 }
68
  unsigned char charin() {
69
     unsigned char* port = (unsigned char*) 0xff000;
     unsigned char character, status;
71
72
     do
73
74
        status = *(port+SR);
75
     } while ((status & RxRDY) != 0);
     character = *(port+RR);
77
78
     return character;
79 }
{\it s}_{1} void charout( unsigned char c )
82
     unsigned char* port = (unsigned char*) 0xff000;
83
     unsigned char status;
84
     do
        status = *(port+SR);
87
     } while ((status & TxRDY) != 0);
88
     *(port+TR) = c;
90 }
```

Listing 16.1: Sketch of basic I/O functions using memory-mapped I/O — C version.

Lines 12-37 define symbolic names for values that are used to program the device. Notice that some names have the same value. For example, on lines 17 and 18 the receiver register (RR) and transmitter register (TR) are actually the same register. The CPU receives when it reads from this register and transmits when it writes to it. A similar situation is seen on lines 14 and 15. Reading from register 0×03 provides status information, and the clock selection commands are written to the same register. This illustrates an important point — I/O interface registers are not simply data storage places like CPU registers. It would probably be more accurate to call them "interface ports," but "registers" is the commonly used terminology.

This example uses memory-mapped I/O, so simple assignment statements are used to access the I/O interface registers. The memory addresses 0xff0000 - 0xff020 are associated with I/O registers for this device instead of physical memory. The base address of the device is assigned to a pointer variable on line 54 in the init_io function. Then the commands to initialize the device are written to the appropriate registers on lines 56 - 66. It is not important that you completely understand what this function is doing, but the comments should give you a rough idea.

Lines 56 - 59 assign four different values to the same location:

```
*(port+CR) = RESETRECEIVER; /* reset receiver */
*(port+CR) = RESETTRANSMIT; /* reset transmitter */
*(port+CR) = RESETERROR; /* clear any errors */
*(port+CR) = RESETMODE; /* make sure we're using MR1 */
```

If these were assignment to an actual memory location or to a CPU register, only the final statement would be required. But the Command Register is an I/O interface register. And as described above, it really is not a storage register, even on the I/O interface. In fact, these are four different commands that are sent to the Command Register "port" on the I/O interface.

The order in which commands are sent to the I/O interface may also be important. For example, on this particular device, the sequence on lines 62-63

```
*(port+MR) = NOPARITY8BITS; /* no parity, 8 bits */
*(port+MR) = STOPBIT2; /* stop bit length 2.000 */
```

must be performed in this order. There are actually two Mode Registers, which are both accessed through the same I/O interface register. The first time the register is accessed, it is connected to Mode Register 1. This access causes the hardware to automatically switch to Mode Register 2 for all subsequent accesses. Now you can understand the reason for sending the "RESETMODE" command to the Command Register on line 59. It's important to ensure that the first access will be to Mode Register 1.

When compiling I/O functions, it is very important not to use optimization. If you do, the compiler may try coalesce command values into one value. (See Exercise 1.)

The next function is charin(). Its job is to read a character from the DUART. In the lab where this code was used, the DUART receiver was connected to a keyboard. The DUART must wait until somebody presses a key on the keyboard, then convert the code for that key to an eight-bit ASCII code representing the character. When the DUART has a character ready to be read from its receiver register, it sets the "receiver ready" bit in its status register to one. The do-while loop on lines 73 – 76 in charin show how the code must wait for this event.

When the status indicates that a character is ready, line 77 shows how it is read from the receiver register.

The charout() function writes a character to the transmitter. As you might expect, the transmitter was connected to a computer monitor. Although it is clear that keyboard input is very slow, writing on a monitor screen is also slow compared to CPU processing. Thus, we need a similar do-while loop (lines 83-88) to wait until the monitor is ready to accept a new character. Once the value provided by the status register shows it is ready, line 89 shows how the character is written to the DUART's transmitter register.

Listing 16.2 shows the assembly language generated by the gcc compiler for the C program in Listing 16.1. Some comments have been added to explain the general concepts.

```
.file "io_sketch_mm.c"
.text
```

```
3 .globl main
                    main, @function
           .type
5 main:
           pushq
                    %rbp
6
           movq
                    %rsp, %rbp
           subq
                    $16, %rsp
                    $0, %eax
           movl
                    init_io
           call
10
           movl
                    $0, %eax
11
           call
                    charin
12
           movb
                    %al, -1(%rbp)
13
                   -1(%rbp), %edi
           movzbl
14
           call
                    charout
15
                    $0, %eax
           movl
16
17
           leave
           ret
18
           .size
                    main, .-main
19
  .globl init_io
                    init_io, @function
           .type
21
  init_io:
           pushq
                    %rbp
23
           movq
                    %rsp, %rbp
24
                    $1044480, -8(%rbp) # initialize pointer variable to 0xff000
           movq
25
                    -8(%rbp), %rax
                                         # base address of DUART
           movq
                                         # address of command register
           adda
                    $5, %rax
27
           movb
                    $32, (%rax)
                                         # reset receiver
           movq
                    -8(%rbp), %rax
29
           addq
                    $5, %rax
30
                                         # reset transmitter
           movb
                    $48, (%rax)
31
           movq
                    -8(%rbp), %rax
32
           addq
                    $5, %rax
33
           movb
                    $64, (%rax)
                                         # reset error
34
                    -8(%rbp), %rax
           movq
35
           addq
                    $5, %rax
36
                    $16, (%rax)
                                         # reset mode
           movb
37
                    -8(%rbp), %rax
                                         # base address of DUART
           movq
38
                                         # address of auxiliary control register
           addq
                    $9, %rax
           movb
                    $-16, (%rax)
                                         # baud set, crystal rate
40
                    -8(%rbp), %rax
41
           movq
                    $1, %rax
           addq
42
           movb
                    $19, (%rax)
           movq
                    -8(%rbp), %rax
44
                    $1, %rax
           addq
                    $15, (%rax)
           movb
46
           movq
                    -8(%rbp), %rax
47
           addq
                    $3, %rax
48
           movb
                    $-52, (%rax)
49
                    -8(%rbp), %rax
           movq
50
           addq
                    $11, %rax
51
           movb
                    $0, (%rax)
52
           movq
                    -8(%rbp), %rax
53
54
           addq
                    $5, %rax
           movb
                    $5, (%rax)
55
           leave
           ret
57
                    init_io, .-init_io
           .size
```

```
.globl charin
           .type
                    charin, @function
60
61 charin:
                    %rbp
           pushq
62
           movq
                    %rsp, %rbp
63
                    $1044480, -16(%rbp) # initialize pointer variable to 0xff000
           movq
64
  .L6:
65
                                          # base address of DUART
                    -16(%rbp), %rax
           mova
66
           addq
                    $3, %rax
                                          # address of status register
                    (%rax), %eax
                                          # read status
           movzbl
68
           movb
                    %al, -2(%rbp)
                                              and save locally
69
           movzbl
                    -2(%rbp), %eax
70
           andl
                    $1, %eax
                                          # check receiver status
71
                                          # if bit is 0
           testb
                    %al, %al
72
                                              recheck
73
           ine
                    . L6
           movq
                    -16(%rbp), %rax
                                          # receiver ready, get DUART address
74
                                          # address of receiver register
           addq
                    $7, %rax
75
                    (%rax), %eax
                                          # read input byte
           movzbl
76
                                          # store locally
           movb
                    %al, -1(%rbp)
77
           movzbl
                    -1(%rbp), %eax
                                          # return value
           leave
79
           ret
           .size
                    charin, .-charin
81
  .globl charout
           .type
                    charout, @function
83
  charout:
           pushq
                    %rbp
85
                    %rsp, %rbp
           movq
86
                    %dil, -20(%rbp)
           movb
87
                    1044480, -16(%rbp) # initialize pointer variable to 0xff000
           movq
88
  .L9:
89
           movq
                    -16(%rbp), %rax
                                          # base address of DUART
90
           addq
                    $3, %rax
                                          # address of status register
91
                                          # read status
           movzbl
                    (%rax), %eax
92
           movb
                    %al, -1(%rbp)
                                              and save locally
           movzbl
                    -1(%rbp), %eax
94
                    $4, %eax
                                          # check transmitter status
           andl
           testl
                    %eax, %eax
                                          # if bit is 0
96
           jne
                    .L9
                                              recheck
                                          # transmitter ready, get DUART address
           movq
                    -16(%rbp), %rax
98
                    7(%rax), %rdx
                                          # address of transmitter register
           leaq
           movzbl
                    -20(%rbp), %eax
                                          # load byte to send
100
                                          # send it
101
           movb
                    %al, (%rdx)
           leave
102
           ret
103
                    charout, .-charout
           .size
104
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
105
           .section
                             .note.GNU-stack, "",@progbits
106
```

Listing 16.2: Memory-mapped I/O in assembly language. Comments have been added to explain the code.

The comments on line 25-40 in the <code>init_io</code> function describe how values are written to the appropriate memory addresses, which are mapped to I/O registers.

Lines 65 - 73 in the charin function make up a loop that waits until the receiver has a character ready to be read. The readiness of the receiver is indicated by bit 2 in the status register. The address of the receiver register is computed on lines 74 - 75, then the character is

read from that register on line 75. A similar loop is used on lines 89-97 in the charout function to wait until the status register shows that the transmitter is ready for another character. When it is ready, the address of the transmitter register is computed on lines 98-99, the byte to be sent is loaded into the eax register on line 100, and it is written to the transmitter register on line 101.

As we saw in Section 16.5, special instructions are required to access isolated I/O. The Linux kernel source includes macros to use these instructions. The macros are defined in the file io.h. Listing 16.3 illustrates the use of these macros to write the same program as in Listing 16.1 if the DUART interface were connected to the isolated I/O system.

```
1 /*
  * io_sketch_iso.c
   * This code sketches the algorithms to intialize
   * a DUART, read one character and echo it using
   * isolated I/O.
   * WARNING: This code does not run on any known
              device. It is meant to sketch some
              general I/O concepts only.
   * Bob Plantz - 18 June 2009
   */
  #include <sys/io.h>
 /* register offsets */
14 #define MR 0x01
                     /* mode register */
15 #define SR
              0x03
                     /* status register */
16 #define CSR 0x03
                     /* clock select register */
                      /* command register */
17 #define CR
              0x05
18 #define RR
              0x07
                      /* receiver register */
19 #define TR
              0x07
                     /* transmitter register */
20 #define ACR 0x09
                     /* auxilliary control register */
  #define IMR 0x0B
                      /* interrupt mask register */
23 /* status bits */
24 #define RxRDY 1
                     /* receiver ready */
  #define TxRDY 4
                     /* transmitter ready */
 /* commands */
  #define RESETRECEIVER 0x20
  #define RESETTRANSMIT 0x30
  #define RESETERROR
31 #define RESETMODE
                         0 \times 10
  #define TIMER
                         0xF0
33 #define NOPARITY8BITS 0x13
  #define STOPBIT2
                         0x0F
35 #define BAUD19200
                         0xC
  #define BAUDRATE BAUD19200+(BAUD19200<<4)
37 #define ENABLE
                         0 \times 05
38 #define NOINTERRUPT
                         0x00
  #define NOINTERRUPT
                         0x00
  void init_io();
42 unsigned char charin();
  void charout( unsigned char c );
44
  int main() {
     unsigned char aCharacter;
47
```

```
init_io();
48
     aCharacter = charin();
49
     charout(aCharacter);
50
51
     return 0;
52
53 }
54
55 void init_io() {
     outb(CR, RESETRECEIVER);
     outb(CR, RESETTRANSMIT);
57
     outb(CR, RESETERROR);
58
     outb(CR, RESETMODE);
59
     outb(ACR, TIMER);
60
     outb(MR, NOPARITY8BITS);
61
62
     outb(MR, STOPBIT2);
     outb(CSR, BAUDRATE);
     outb(IMR, NOINTERRUPT);
64
     outb(CR, ENABLE);
65
66 }
68 unsigned char charin() {
     unsigned char character, status;
69
70
     do
71
     {
72
73
         status = inb(SR);
     } while ((status & RxRDY) != 0);
74
     character = inb(RR);
75
     return character;
76
77 }
79 void charout( unsigned char c )
80
     unsigned char status;
81
     do
83
         status = inb(SR);
     } while ((status & TxRDY) != 0);
85
     outb(TR, c);
87 }
```

Listing 16.3: Sketch of basic I/O functions, isolated I/O — C version.

On line 11 we need to include the file containing the macros:

```
#include <sys/io.h>
```

The use of the outb() macro can be seen in lines 55-64. And on line 72 we see the inb() macro being used to read the status register.

The gcc compiler generates assembly language as shown in Listing 16.4

```
.file "io_sketch_iso.c"
.text
.text
.type main, @function
main:
.type writing
main, @function
main:
.type writing
main, @function
smain:
.type writing
main, @function
smain:
.type writing
smain, @function
smain;
.type writing
sma
```

```
$0, %eax
           movl
                    {\tt init\_io}
           call
10
                    $0, %eax
           movl
           call
                    charin
12
           movb
                    %al, -1(%rbp)
13
           movzbl
                    -1(%rbp), %edi
14
                    charout
           call
                    $0, %eax
           movl
16
           leave
           ret
18
           .size
                    main, .-main
  .globl init_io
           .type
                    init_io, @function
21
22 init_io:
23
           pushq
                    %rbp
           movq
                    %rsp, %rbp
24
           movl
                    $32, %esi
25
           movl
                    $5, %edi
           call
                    outb
                               # outb(CR, RESETRECEIVER);
27
                    $48, %esi
           movl
                    $5, %edi
           movl
29
                    outb
                               # outb(CR, RESETTRANSMIT);
           call
                    $64, %esi
           movl
31
                    $5, %edi
           movl
                    outb
                               # outb(CR, RESETERROR);
           call
33
           movl
                    $16, %esi
           movl
                    $5, %edi
35
           call
                    outb
                               # outb(CR, RESETMODE);
36
                    $240, %esi
           movl
37
           movl
                    $9, %edi
38
           call
                    outb
                               # outb(ACR, TIMER);
39
           movl
                    $19, %esi
40
           movl
                    $1, %edi
41
           call
                    outb
                               # outb(MR, NOPARITY8BITS);
42
                    $15, %esi
           movl
           movl
                    $1, %edi
44
           call
                    outb
                               # outb(MR, STOPBIT2);
           movl
                    $204, %esi
46
                    $3, %edi
           movl
47
                    outb
                               # outb(CSR, BAUDRATE);
           call
48
                    $0, %esi
           movl
                    $11, %edi
           movl
50
                    outb
                               # outb(IMR, NOINTERRUPT);
51
           call
                    $5, %esi
           movl
52
           movl
                    $5, %edi
53
           call
                    outb
                               # outb(CR, ENABLE);
54
55
           leave
           ret
56
           .size
                    init_io, .-init_io
57
           .type
                    outb, @function
                                         # begin outb function
  outb:
59
                    %rbp
           pushq
           movq
                    %rsp, %rbp
61
                    %dil, -4(%rbp)
           movb
                    %si, -8(%rbp)
63
           movw
                    -4(%rbp), %eax
           movzbl
```

```
movzwl -8(%rbp), %edx
66 #APP
67 # 99 "/usr/include/sys/io.h" 1
           outb %al,%dx
                                          # write the byte
69 # 0 "" 2
70 #NO_APP
           leave
            ret
72
            .size
                    outb, .-outb
   .globl charin
            .type
                    charin, @function
75
76 charin:
            pushq
                    %rbp
77
                    %rsp, %rbp
78
            movq
79
            subq
                    $16, %rsp
   .L8:
80
            movl
                    $3, %edi
                                          # address of status register
81
            call
                    inb
                                          # read status
82
            movb
                    %al, -2(%rbp)
83
            movzbl
                    -2(%rbp), %eax
            andl
                    $1, %eax
                                          # check receiver status
85
                                          # if bit is 0
            testb
                    %al, %al
86
                                              recheck
            jne
                     .L8
87
                    $7, %edi
            movl
                                          # ready, address of receiver register
                                          # read input byte
            call
                    inb
89
            movb
                    %al, -1(%rbp)
                                          # store locally
            movzbl
                    -1(%rbp), %eax
                                          # return value
91
            leave
92
            ret
93
            .size
                    charin, .-charin
94
                    inb, @function
                                          # begin outb function
95
            .type
  inb:
96
                    %rbp
            pushq
97
            movq
                    %rsp, %rbp
98
                    %di, -20(%rbp)
            movw
                    -20(%rbp), %edx
            movzwl
100
101 #APP
  # 48 "/usr/include/sys/io.h" 1
                                          # read the byte
            inb %dx,%al
104 # 0 "" 2
105 #NO_APP
                    %al, -1(%rbp)
           movb
106
                    -1(%rbp), %eax
107
            movzbl
            leave
108
            ret
109
                    inb, .-inb
            .size
110
   .globl charout
111
            .type
                    charout, @function
112
  charout:
113
            pushq
                    %rbp
114
            movq
                    %rsp, %rbp
115
116
            subq
                    $24, %rsp
            movb
                    %dil, -20(%rbp)
117
  .L13:
118
            movl
                    $3, %edi
                                          # address of status register
119
            call
                    inb
                                          # read status
120
```

```
%al, -1(%rbp)
           movb
121
           movzbl
                     -1(%rbp), %eax
122
           andl
                     $4, %eax
                                          # check transmitter status
           testl
                     %eax, %eax
                                          # if bit is 0
124
           jne
                     .L13
                                               recheck
125
                     -20(%rbp), %esi
                                          # load byte to send
           movzbl
126
                                          # address of transmitter register
           movl
                     $7, %edi
127
           call
                     outb
                                          # send it
128
           leave
129
            ret
130
            .size
                     charout, .-charout
131
                     "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
            .ident
132
            .section
                              .note.GNU-stack, "", @progbits
133
```

Listing 16.4: Isolated I/O in assembly language. Comments have been added to explain the code.

Looking at lines 58 - 73 and lines 95 - 110, we see that the outb() and inb() macros generate functions. The actual outb instruction is used on line 68 and inb is used on line 103.

At the points were the macros are called in the C source code, the compiler generates calls to the appropriate function. For example, the C sequence

```
outb(CR, RESETRECEIVER);
55
     outb(CR, RESETTRANSMIT);
  generates the assembly language
                    $32, %esi
           movl
25
           movl
                    $5, %edi
           call
                    outb
27
           movl
                    $48, %esi
28
                    $5, %edi
           movl
29
           call
                    outb
```

16.7 Interrupt-Driven I/O

Reading the code in Section 16.6, you probably realize that the CPU can waste a lot of time simply waiting for I/O devices. Most I/O interfaces include hardware that can send an interrupt signal to the CPU when they have data ready for input or are able to accept output (see Section 15.1, page 342). While waiting for an I/O device, the operating system will suspend the requesting process and allow another process, perhaps being run by another user, to use the CPU.

The device handler for each I/O device that can interrupt includes a special *interrupt handler* function. The address of each interrupt handler is stored in a table in the operating system. When the requested I/O device is ready for I/O, it sends an interrupt signal to the CPU on the control bus. The device identifies itself to the CPU, and the CPU consults the table to obtain the address of the corresponding interrupt handler. CPU execution control then transfers to the interrupt handler function, which contains code to read from or write to the device as needed. When the interrupt handler function completes its servicing of the I/O device, the last instruction in the function is an iret (see Section 15.5 on page 345). This causes CPU execution control to return to the control flow where it was interrupted.

This is a highly simplified description. The operating system must perform a great deal of "bookkeeping" in this transfer of control. For example, before allowing the interrupt handler function to execute, at least any registers that will be used in the function must be saved. And more than one process may be waiting for I/O to complete. The operating system must keep track of which process is waiting for which I/O device and make sure that the process gets or sends the correct input or output.

Many other issues face the device handler programmer. For example, I/O devices are left to run on their own time, so one device may attempt to interrupt while another device's interrupt handling function is being executed. The programmer must decide whether the interrupt should be allowed or not. In general, it cannot be ignored because this would cause the loss of I/O data. On the other hand, spending too much time handling the second interrupt may cause the first device to lose data.

16.8 I/O Instructions

opcode	source	destination	see page:
ins	\$imm/%reg	%reg/mem	355
out s	\$imm/%reg	%reg/mem	355

s = b, w, l, q

16.9 Exercises

- **16-1** (§16.6) Enter the C program in Listing 16.1. Compile it to the assembly language stage (use the -S option) with different levels of optimization. For example, -01, -02. Compare the results with the non-optimized version in Listing 16.2.
- **16-2** (§16.6) Enter the C program in Listing 16.3. Compile it to the assembly language stage (use the -S option) with different levels of optimization. For example, -01, -02. Compare the results with the non-optimized version in Listing 16.4.

Appendix A

Reference Material

A.1 Basic Logic Gates

$$x - y - x \cdot y$$

$$\begin{array}{c|cccc} x & y & x \cdot y \\ \hline 0 & 0 & 0 \\ 0 & 1 & 0 \\ 1 & 0 & 0 \\ 1 & 1 & 1 \\ \end{array}$$

$$x \rightarrow x + y$$

$$\begin{array}{c|cccc} x & y & x+y \\ \hline 0 & 0 & 0 \\ 0 & 1 & 1 \\ 1 & 0 & 1 \\ 1 & 1 & 1 \\ \end{array}$$

$$x \longrightarrow x'$$

$$\begin{array}{c|cc}
x & x' \\
\hline
0 & 0 \\
0 & 1
\end{array}$$

$$x - y - (x \cdot y)$$

$$\begin{array}{c|cccc}
x & y & (x \cdot y)' \\
\hline
0 & 0 & 1 \\
0 & 1 & 1 \\
1 & 0 & 1 \\
1 & 1 & 0
\end{array}$$

$$x \longrightarrow (x+y)'$$

$$\begin{array}{c|cccc} x & y & (x+y) \\ \hline 0 & 0 & 1 \\ 0 & 1 & 0 \\ 1 & 0 & 0 \\ 1 & 1 & 0 \\ \end{array}$$

A.2 Register Names

(page 116)

bits 63 -	bits 31-	bits 15-	bits 15-	bits 7-0
0	0	0	8	
rax	eax	ax	ah	al
rbx	ebx	bx	bh	bl
rcx	ecx	CX	ch	cl
rdx	edx	dx	dh	dl
rsi	esi	si		sil
rdi	edi	di		dil
rbp	ebp	bp		bpl
rsp	esp	sp		spl
r8	r8d	r8w		r8b
r9	r9d	r9w		r9b
r10	r10d	r10w		r10b
r11	r11d	r11w		r11b
r12	r12d	r12w		r12b
r13	r13d	r13w		r13b
r14	r14d	r14w		r14b
r15	r15d	r15w		r15b

A.3 Argument Order in Registers

(page 157)

Argument	Register
\mathbf{first}	rdi
second	rsi
third	rdx
fourth	rcx
fifth	r8
sixth	r9

A.4 Register Usage

(page 121)

Register	Special usage	Called function preserves contents
rax	1st function return value.	No
rbx	Optional base pointer.	Yes
rcx	Pass 4th argument to func-	No
	tion.	
rdx	Pass 3rd argument to func-	No
	tion; 2nd function return	
	value.	
rsp	Stack pointer.	Yes
rbp	Optional frame pointer.	Yes
rdi	Pass 1st argument to func-	No
	tion.	
rsi	Pass 2nd argument to func-	No
	tion.	
r8	Pass 5th argument to func-	No
	tion.	
r9	Pass 6th argument to func-	No
	tion.	
r10	Pass function's static chain	No
	pointer.	
r11		No
r12		Yes
r13		Yes
r14		Yes
r15		Yes

A.5 Assembly Language Instructions Used in This Book

This summary shows the assembly language instructions used in this book. The page number where the instruction is explained in more detail, is also given. This book provides only an introduction to the usage of each instruction. You need to consult the manuals ([2] - [6], [14] - [18]) in order to learn all the possible uses of the instructions.

data movement:

opcode	source	destination	action	see page:
cmov cc	%reg/mem	%reg	conditional move	230
movs	\$imm/%reg	%reg/mem	move	141
movsss	\$imm/%reg	%reg/mem	move, sign extend	216
movzss	\$imm/%reg	%reg/mem	move, zero extend	217
popw		%reg/mem	pop from stack	163
push w	\$imm/%reg/mem		push onto stack	163

s = b, w, l, q; w = l, q; cc = condition codes

arithmetic/logic:

opcode	source	destination	action	see page:
adds	\$imm/%reg	%reg/mem	add	189
add s	mem	%reg	add	189
and s	\$imm/%reg	%reg/mem	bit-wise and	258
and s	mem	%reg	bit-wise and	258
cmps	\$imm/%reg	%reg/mem	compare	209
cmps	mem	%reg	compare	209
decs	%reg/mem		decrement	220
${ t div}s$	%reg/mem		unsigned divide	280
idivs	%reg/mem		signed divide	282
imul <i>s</i>	%reg/mem		signed multiply	276
inc <i>s</i>	%reg/mem		increment	220
leaw	mem	%reg	load effective address	167
muls	%reg/mem		unsigned multiply	275
negs	%reg/mem		negate	286
ors	\$imm/%reg	%reg/mem	bit-wise inclusive or	258
ors	mem	%reg	bit-wise inclusive or	258
sal s	\$imm/%cl	%reg/mem	shift arithmetic left	269
sars	\$imm/%cl	%reg/mem	shift arithmetic right	268
shl s	\$ imm /%cl	%reg/mem	shift left	269
shr <i>s</i>	\$imm/%cl	%reg/mem	shift right	268
sub <i>s</i>	\$imm/%reg	%reg/mem	subtract	190
subs	mem	%reg	subtract	190
tests	\$imm/%reg	%reg/mem	test bits	210
tests	mem	%reg	test bits	210
xors	\$imm/%reg	%reg/mem	bit-wise exclusive or	258
xors	mem	%reg	bit-wise exclusive or	258

s = b, w, l, q; w = l, q

$program\ flow\ control:$

opcode	location	action	see page:
call	label	call function	156
iret		return from kernel function	345
ja	label	jump above (unsigned)	212
jae	label	jump above/equal (unsigned)	212
jb	label	jump below (unsigned)	212
jbe	label	jump below/equal (unsigned)	212
je	label	jump equal	211
jg	label	jump greater than (signed)	212
jge	label	jump greater than/equal (signed)	212
jl	label	jump less than (signed)	212
jle	label	jump less than/equal (signed)	212
jmp	label	jump	213
jne	label	jump not equal	211
jno	label	jump no overflow	211
jcc	label	jump on condition codes	211
leave		undo stack frame	168
ret		return from function	168
syscall		call kernel function	177
sysret		return from kernel function	347

cc = condition codes

SSE floating point conversion:

opcode	source	destination	action	see page:
cvtsd2si	%xmmreg/mem	%reg	scalar double to signed integer	328
cvtsd2ss	%xmmreg	%xmmreg/%reg	scalar double to single float	328
cvtsi2sd	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2sdq	%reg	%xmmreg/mem	signed integer to scalar double	328
cvtsi2ss	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtsi2ssq	%reg	%xmmreg/mem	signed integer to scalar single	328
cvtss2sd	%xmmreg	%xmmreg/mem	scalar single to scalar double	328
cvtss2si	%xmmreg/mem	%reg	scalar single to signed integer	328
cvtss2siq	%xmmreg/mem	%reg	scalar single to signed integer	328

x87 floating point:

opcode	source	destination	action	see page:
fadd <i>s</i>	memfloat		add	333
faddp			add/pop	333
fchs			change sign	333
fcoms	memfloat		compare	333
fcomp			compare/pop	333
fcos			cosine	333
fdivs	memfloat		divide	333
fdivp			divide/pop	333
fild <i>s</i>	memint		load integer	333
fist <i>s</i>		memint	store integer	333
flds	memint		load floating point	333
fmuls	memfloat		multiply	333
fmulp			multiply/pop	333
fsin			sine	333
fsqrt			square root	333
fst <i>s</i>		memint	floating point store	333
fsub <i>s</i>	memfloat		subtract	333
fsubp			subtract/pop	333

s = b, w, l, q; w = l, q

A.6 Addressing Modes

register direct:	The data value is located in a CPU register.		
	syntax: name of the register with a "%" prefix.		
	example: movl %eax, %ebx		
immediate	The data value is located immediately after the instruc-		
data:	tion. Source operand only.		
	syntax: data value with a "\$" prefix.		
	example: movl \$0xabcd1234, %ebx		
base register	The data value is located in memory. The address of the		
plus offset:	memory location is the sum of a value in a base register		
	plus an offset value.		
	<i>syntax</i> : use the name of the register with parentheses		
	around the name and the offset value immediately be-		
	fore the left parenthesis.		
	example: movl \$0xaabbccdd, 12(%eax)		
rip-relative:	The target is a memory address determined by adding		
	an offset to the current address in the rip register.		
	syntax: a programmer-defined label		
	<pre>example: je</pre>		
indexed:	The data value is located in memory. The address		
	of the memory location is the sum of the value in		
	the base_register plus scale times the value in the in-		
	dex_register, plus the offset.		
	<i>syntax</i> : place parentheses around the comma separated		
	list (base_register, index_register, scale) and preface it		
	with the offset.		
	example: movl \$0x6789cdef, -16(%edx, %eax, 4)		

Appendix B

Using GNU make to Build Programs

This discussion covers the fundamental concepts employed in a Makefile. My intent is to show you how to write Makefiles that help you debug your programs. The problem with many discussions of make is that they show how to use many of the "features" of the make program. Many problems students have when debugging their programs are actually caused by errors in the Makefile that cause make to use its default behavior.

For example, if you try to compile the program myProg with the command:

```
make myProg
```

make will look for its instructions in a file in the current directory named Makefile (or makefile). Assuming Makefile exists, make searches the file for a *target* (defined later in this chapter) named myProg. If there is no Makefile, make searches for a file named myProg.s, myProg.c or myProg.cc. If either of the .s or .c source files exists, make issues the command

```
cc myProg.c -o myProg
and if the .cc source file exits,
    q++ myProg.cc -o myProg
```

Notice that the compiler is invoked with only the -o option. For example, you cannot use gdb to debug the program because the -g option does not get used. This means that if one of the entries in your Makefile is incorrect, the default behavior may cause make to compile a source file without the debugging option. It is much easier to avoid these problems if you:

- keep your Makefiles very simple, and
- read what make writes on the screen very carefully when it executes a Makefile.

A Makefile consists of a series of entries. Each entry in a Makefile consists of:

1. One dependency line. The format of a dependency line is:

```
target: [prerequisite1] [prerequisite2]...
```

Prerequisites are names of files or other targets in this Makefile. Use spaces as separators between the prerequisites, not tabs.

- 2. Zero or more Unix command lines. The format of a command line is:
 - (a) Each line must begin with a tab character (not a group of spaces). Be careful if you write a Makefile with an editor on another platform; some editors automatically replace tabs with spaces.

(b) The remainder of the line is a Unix command.

There can also be (should be!) comment lines that begin with a #.

If you invoke make with no argument:

make

make starts with the first entry in the Makefile.

Starting with the prerequisites of the first target (the first entry or the argument used in the command), make follows the hierarchical tree of target / prerequisite entries until it gets to the lowest level — either a file or no prerequisites. It works its way back up through this tree. If any entry along the tree has a target that is not at least as recent as all of its prerequisites, the commands for that entry are executed.

A common organization is to have an entry for the program name, with each of the object files that make up the program as prerequisites. The command(s) in this entry link the object files together.

Then there is an entry for each object file, with its source file and any required local header files as prerequisites. The command(s) in each of these entries compile/assemble the source file and produce the corresponding object file.

It is also common to have various utility targets in a Makefile.

These concepts are illustrated in Listing B.1. Notice that there are no prerequisites for the clean target. Thus the command

```
make clean
```

causes make to start with the clean entry. Since there are no prerequisites, the tree ends here, and the target is always "out of date." Hence, the command for this entry will always be executed, but none of the other entries is executed.

IMPORTANT: When using the make program, it will echo each command as it is executed and provide diagnostic error messages on the screen. You must read this display very carefully in order to determine what has taken place.

Listing B.1: An example of a Makefile for an assembly language program with one source file.

The functions in real programs are distributed amongst many files. When changes are made, it is clearly a waste of time to recompile all the functions. With a properly designed Makefile, make only recompiles files that have been changed. (This is a motivation for placing each function is its own file.) Listing B.2 illustrates a Makefile for a program where the main function and one subfunction are written in C and one subfunction is written in assembly language. Notice that header files have been created for both subfunctions to provide prototype statements for the main function, which is written in C. The assembly language source file does not #include its own header file because prototype statements do not apply to assembly language.

```
# makefile to create biggerProg

# link object files and system libraries to create executable

biggerProg: biggerProg.o sub1.o sub2.o

gcc -o biggerProg biggerProg.o sub1.o sub2.o

# compile/assemble source files to create object files

biggerProg.o: biggerProg.c sub1.h sub2.h

gcc -g -c biggerProg.c

sub1.o: sub1.c sub1.h

gcc -g -c sub1.c

sub2.o: sub2.s

as --gstabs sub2.s -o sub2.o

# remove object files and emacs backup files

clean:

prm -i *.0 *~
```

Listing B.2: An example of a Makefile for a program with both C and assembly language source files.

As you can see in Listing B.2, there is quite a bit of repetition in a Makefile. Variables provide a good way to reduce the chance of typing errors. Listing B.3 illustrates the use of variables to simplify the Makefile from Listing B.2.

```
1 # Makefile for biggerProg
2 # Bob Plantz - 19 June 1009
4 # Specify the compiler and assembler options.
5 compflags = -g -c -01 -Wall
6 asmflags = --gstabs
8 # The object files are specific to this program.
 objects = biggerProg.o sub1.o sub2.o
 biggerProg: $(objects)
          gcc -o biggerProg $(objects)
14 biggerProg.o: biggerProg.c sub1.h sub2.h
          gcc $(compflags) -o biggerProg.o biggerProg.c
17 subl.o: subl.c subl.h
          gcc $(compflags) -o sub1.o sub1.c
20 sub2.o: sub2.s
21
          as $(asmflags) -o sub2.o sub2.s
23 clean:
          rm $(objects) biggerProg *~
```

Listing B.3: Makefile variables. Another version of Figure B.2

Executing make with the Makefile in Listing B.3 shows that the two C source files are compiled, and the assembly source file is assembled with the proper flags:

```
gcc -g -c -O1 -Wall -o biggerProg.o biggerProg.c
gcc -g -c -O1 -Wall -o sub1.o sub1.c
as --gstabs -o sub2.o sub2.s
gcc -o biggerProg biggerProg.o sub1.o sub2.o
bob$
```

Reading the output from make it is doing.

make shows each command in your terminal window as it executes it. Reading them is the best helps you way to ensure that your Makefile is written correctly. This display also shows how make starts understand what with the commands at the leaves of the tree and works its way back up to the top of the tree.

We can use gdb to follow execution of the program:

```
bob$ gdb biggerProg
GNU gdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
(gdb) li
4 *
        4 Jan. 06 - R. Plantz
  */
7 #include <stdio.h>
8 #include "sub1.h"
9 #include "sub2.h"
10
11 int main()
12 {
13
       printf("Starting in main, about to call sub1...\n");
(qdb) run
Starting program: /home/bob/progs/appendB/biggerProg/biggerProg
Starting in main, about to call sub1...
In sub1
Back in main, about to call sub2...
In sub2
Back in main.
Program ending.
Program exited normally.
(gdb) q
bob$
```

However, if we do not write a complete Makefile (see Listing B.4)

```
1 # Makefile for biggerProg
2 # Bob Plantz - 19 June 2009
3 # WARNING! THIS IS A BAD MAKEFILE!!
5 # Specify the compiler and assembler options.
_{6} compflags = -g -c
\tau asmflags = --gstabs
9 # The object files are specific to this program.
objects = biggerProg.o sub1.o sub2.o
12 biggerProg: $(objects)
```

Listing B.4: Incomplete Makefile. Several entries are missing, so make invokes its default behavior.

executing make shows that the two C source files are compiled, and the assembly source file is assembled using the make program's own default behavior to give:

```
cc -c -o biggerProg.o biggerProg.c

cc -c -o sub1.o sub1.c

as -o sub2.o sub2.s

gcc -o biggerProg biggerProg.o sub1.o sub2.o

bob$
```

Read what make does. This is DEFAULT behavior.

Note that make does not give any error messages even though our Makefile is incomplete. It appears to have created the program correctly. However, when we try to use gdb we see:

```
bob$ gdb biggerProg
GNU qdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
(qdb) li
1
        ../sysdeps/x86_64/elf/start.S: No such file or directory.
        in ../sysdeps/x86_64/elf/start.S
(gdb) run
Starting program: /home/bob/progs/appendB/biggerProg/biggerProg
Starting in main, about to call sub1...
Back in main, about to call sub2...
In sub2
Back in main.
Program ending.
Program exited normally.
(gdb) q
bob$
```

Reading the make messages on the screen shows that it created the program without using all our flags. The important lesson to note here is that an error-free execution of make is not sufficient to guarantee your program was built as you intended. You need to read the screen messages written on the screen when using make.

To learn more about using make see [30].

Appendix C

Using the gdb Debugger for Assembly Language

The program in Listing 10.5 uses a while loop to write "Hello World" on the screen one character at a time. A common programming error is to create an "infinite" loop. It would be nice to have a tool that allows us to stop such a program in the middle of the loop so we can observe the state of registers and memory locations. That can help us to determine such things as whether the loop control variable is being changed as we planned.

Fortunately, the gnu program development environment includes a debugger, gdb (see [29]), that allows us to do just that. The gdb debugger allows you to load another program into memory and use gdb commands to control the execution of the other program — the *target program* — and to observe the states of its variables.

There is another, very important, reason for learning how to use gdb. This book describes how registers and memory are controlled by computer instructions. The gdb program is a very valuable learning tool, since it allows you to observe the behavior of each instruction, one step at a time

gdb has a large number of commands, but the following are the most common ones that will be used in this book:

- li *lineNumber* lists ten lines of the source code, centered at the specified line number.
- break *sourceFilename:lineNumber* sets a breakpoint at the specified line in the source file. Control will return to gdb when the line number is encountered.
- clear lineNumber removes the breakpoint at the specified line number.
- run begins execution of a program that has been loaded under control of qdb.
- cont continues execution of a program that has been running.
- n execute current source code statement of a program that has been running; if it's a call to a function, the entire function is executed.
- s execute current source code statement of a program that has been running; if it's a call to a function, step into the function.
- si execute current (machine) instruction of a program that has been running; if it's a call to a function, step into the function.
- print *expression* evaluate expression and display the value.
- i r info registers displays the contents of the registers, except floating point and vector.
- x/nfs memoryAddress displays (examine) n values in memory in format f of size s.

Here is a screen shot of how I assembled, linked, and then used gdb to control the execution of the program and observe its behavior. User input is **boldface** and the session is annotated in *italics*.

```
bob@ubuntu:~$ as --gstabs -o helloWorld3.o helloWorld3.s
bob@ubuntu:~$ gcc -o helloworld3 helloWorld3.o
bob@ubuntu:~$ gdb helloworld3
GNU gdb 6.8-debian
Copyright (C) 2008 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <a href="http://gnu.org/licenses/gpl.html">http://gnu.org/licenses/gpl.html</a>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying" and "show warranty" for details.
This GDB was configured as "x86_64-linux-gnu"...
```

After assembling and linking the program, we start gdb program and load the helloworld program — the one we want to observe — into memory. This leaves me in gdb. The target program is not running.

The li command lists ten lines of the source code.

```
(gdb) li 29
24
           movl
                    $theString, %esi
25
           movl
                   %esi, aString(%rbp) # *aString = "Hello World.\n";
26 whileLoop:
           movl
27
                   aString(%rbp), %esi # current char in string
28
           cmpb
                    $0, (%esi) # null character?
29
                   allDone
                                # yes, all done
           jе
30
31
           movl
                    $1, %edx
                                # one character
32
           movl
                    $STDOUT. %edi # standard out
33
           call
                   write
                                # invoke write function
(gdb)
34
35
           incl
                   aString(%rbp) # aString++;
36
                   whileLoop
                                # back to top
           jmp
37 allDone:
38
           movl
                    $0, %eax
                                # return 0;
39
                   %rbp, %rsp # restore stack pointer
           movq
40
           popq
                    %rbp
                                # restore base pointer
41
           ret
```

We are trying to observe the while loop. Providing an argument to the li command causes it to list ten lines centered around the value of the argument. We still do not see the entire loop. Pressing the Enter key tells gdb to repeat the immediately previous command. The li command is smart enough to list the next ten lines (only eight in this example since that takes us to the end of the source code in this file).

```
(gdb) br 29
Breakpoint 1 at 0x400523: file helloWorld3.s, line 29.
(gdb) br 37
Breakpoint 1 at 0x400523: file helloWorld3.s, line 29.
```

From the listed source code, we can see that the decision to exit the loop is made on line 29 in the source code. The jump to the allDone label will occur if the cmpb instruction on line 28 shows that the rsi register is pointing to a byte that contains zero — the ASCII NUL character. I set a breakpoint at line 29 so we can see what esi is pointing to.

I also set a breakpoint at line 37, the target of the jump. This second breakpoint serves as a sort of "safety net" in case I did not read the code correctly. If the program does not reach the breakpoint within the loop, perhaps I can work backwards and figure out my error from examining the registers and memory at this point.

```
(gdb) run
Starting program: /home/bob/progs/chap10//helloWorld3
Breakpoint 1, whileLoop () at helloWorld3.s:29
29        je        allDone  # yes, all done
Current language: auto; currently asm
```

The run command causes the target program, helloworld, to execute until it reaches a breakpoint. Control then returns to the gdb program.

IMPORTANT: The instruction at the breakpoint is not executed when the break occurs. It will be the first instruction to be executed when we command gdb to resume execution of the target program.

```
(qdb) i r
                0x7f12d857fac0 139718915783360
rax
                0x400560 4195680
rbx
                0x0 0
rcx
                0x7fffe079fbc8 140736959478728
rdx
rsi
                0x40063c 4195900
                0x1 1
rdi
rbp
                0x7fffe079fae0 0x7fffe079fae0
                0x7fffe079fad0 0x7fffe079fad0
rsp
                0x7f12d857e2e0 139718915777248
r8
r9
                0x7f12d8591ef0 139718915858160
r10
                0x7fffe079f920 140736959478048
                0x7f12d822f380 139718912308096
r11
r12
                0x400420 4195360
r13
               0x7fffe079fbb0 140736959478704
                0x0 0
r14
r15
               0x0 0
               0x400523 0x400523 <whileLoop+7>
rip
eflags
               0x206 [ PF IF ]
                0x33 51
CS
                0x2b 43
SS
ds
                0x0 0
es
                0x0 0
fs
                0 \times 0 0
                0x0 0
as
fctrl
                0x37f 895
fstat
                0x0 0
                0xffff 65535
ftag
fiseq
                0x0 0
```

```
fioff 0x0 0
foseg 0x0 0
fooff 0x0 0
fop 0x0 0
mxcsr 0x1f80 [ IM DM ZM OM UM PM ]
(gdb) i r rsi
ebx 0x40063c 4195900
```

The i r command (notice the space between "i" and "r") is used to display all the registers. The left-hand column shows the contents of the register in hexadecimal, and the right-hand column is in decimal. Addresses are usually stated in hexadecimal, so the contents of registers that are supposed to hold only addresses are not converted to decimal.

Since our primary interest is the rsi register, we can simplify the display by explicitly specifying which register(s) to display.

```
(gdb) help x
Examine memory: x/FMT ADDRESS.
ADDRESS is an expression for the memory address to examine.
FMT is a repeat count followed by a format letter and a size letter.
Format letters are o(octal), x(hex), d(decimal), u(unsigned decimal),
    t(binary), f(float), a(address), i(instruction), c(char) and s(string).
Size letters are b(byte), h(halfword), w(word), g(giant, 8 bytes).
The specified number of objects of the specified size are printed according to the format.

Defaults for format and size letters are those previously used.
Default count is 1. Default address is following last thing printed with this command or "print".
(gdb) x/10cb 0x40063c
0x40063c <theString>: 72 'H'101 'e'108 'l'108 'l'111 'o'32 ' '119 'w'111 'o'
0x400644 <theString+8>: 114 'r'108 'l'
```

We should examine the byte that rsi is pointing to because that determines whether this jump instruction transfers control or not. The help x command provides a very brief reminder of the codes to use. The character display (c) shows two values for each byte — first in decimal, then the equivalent ASCII letter. We can see that rsi is pointing to the beginning of the text string. I chose to display ten characters to confirm that this is the correct text string.

```
(gdb) si
31
           movl
                   $1, %edx
                                # one character
(gdb)
32
                   $STDOUT, %edi # standard out
           movl
(gdb)
                                # invoke write function
33
           call
                   write
(gdb)
0x0000000000400408 in write@plt ()
```

We use the si command to single-step through a portion of the program. Recall that simply pushing the Enter key repeats the immediately previous gdb command.

The last step in this sequence gave an odd result. It caused the program to execute the call instruction, which took us into the write function. Since write is a library function, gdb does not have access to its source code. Hence, it cannot display the source code for us.

Not wanting to single-step through the write function, I use the cont command. The program displays the first letter of the string, "H", on the screen, then loops back and breaks again at line 20. I display register rsi and examine the memory it is pointing to. We can see that the pointer variable, aString, is marching through the text string one character at a time.

```
(gdb) cont
Continuing.
e
Breakpoint 1, whileLoop () at helloWorld3.s:29
29        je        allDone  # yes, all done
(gdb) clear 29
Deleted breakpoint 1
```

Continuing the program shows that it will break back into gdb each time through the loop. We are reasonably confident that the loop is executing properly, so we remove the breakpoint in the loop.

With the breakpoint inside the loop removed, continuing the program displays the remainder of the text. Then it breaks at the breakpoint we set outside the loop. Recall that I set the breakpoint at line 37, but the program breaks at line 32. The reason is that there is no instruction on line 37, just a label. The first instruction following the label is on line 38.

I then look at the address in rsi. By examining two bytes previous to where it is currently pointing, we can easily see the last two characters that the program displayed before reaching the NUL character. And it is the NUL character that caused the loop to terminate.

```
(gdb) cont
Continuing.
Program exited normally.
(gdb) q
```

Continuing the program, it completes normally. Notice that even though our target program has completed, we are still in gdb. We need to use the q command to exit from gdb.

Appendix D

Embedding Assembly Code in a C Function

The gcc C compiler has an extension to standard C that allows a programmer to write assembly language instructions within a C function. Of course, you need to be very careful when doing this because you do not know how the compiler has allocated memory and/or registers for the variables. Yes, you can use the "-S" option to see what the compiler did, but if anybody make one change to the function, even compiling it with a different version of gcc, things almost certainly will have changed.

The way to do this is covered in the info pages for gcc. In my version (4.1.2) I found it by going to "C Extensions," then "Extended Asm." (No, it's not obvious to me, either.) The presentation here is a very brief introduction.

The overall format is a C statement of the form:

```
asm("assembly_language_instruction" : output(s) : inputs(s));
```

The *output* operands are destinations for the *assembly_language_instruction*, and the *input* operands are sources. Each operand is of the form

```
"operand_constraint" : C_{expression}
```

where the $operand_constraint$ describes what type of register, memory location, etc. should be used for the operand, and $C_expression$ is a C expression, often just a variable name. If there is more than one operand, they are separated by commas.

The assembly_language_instruction can refer to each operand numerically with the "n" syntax, starting with n = 0 for the first operand, 1 for the second, etc.

For example, let us consider a case where we wish to add two 32-bit integers. (Yes, there is a C operation to do this, but it is generally better to start with simple examples.) The program is shown in Listing D.1.

```
1 /*
2 * embedAsm1.c
3 * Very simple example of how to embed assembly language
4 * in a C function.
5 * Bob Plantz - 18 June 2009
6 */
7 * #include <stdio.h>
9
10 int main()
11 {
12    int x, y;
13
14    printf("Enter an integer: ");
```

```
15     scanf("%i", &x);
16     printf("Enter another integer: ");
17     scanf("%i", &y);
18     asm("addl %1, %0" : "=m" (x) : "r" (y));
19     printf("There sum is %i\n", x);
20
21     return 0;
22 }
```

Listing D.1: Embedding an assembly language instruction in a C function (C).

There is only one output (destination), and its operand constraint is "=m". The '=' sign is required to show that it is an output. The 'm' character shows that this operand is located in memory.

Now, recall that the addl instruction requires that at least one of its operands be a register. So we specify the input operand as a register with the "r" operand constraint. We have to do this for the assembly language instruction even though the C code does not specify whether the variable, y, is in memory or in a register.

The operand constraints are described in the info pages for gcc. In my version (4.1.2) I found it by going to "C Extensions," then "Constraints." The documentation covers all the architectures supported by gcc, so it is difficult to wade through.

Listing D.2 shows the assembly language actually generated by the compiler.

```
.file
                     "embedAsm1.c"
           .section
                              .rodata
2
  .LC0:
3
           .string "Enter an integer: "
  .LC1:
           .string "%i"
6
  .LC2:
           .string "Enter another integer: "
  .LC3:
           .string "There sum is %i\n"
10
            .text
11
  .globl main
12
           .type
                    main, @function
13
14 main:
           pushq
                    %rbp
15
           movq
                    %rsp, %rbp
16
           subq
                    $16, %rsp
17
                    $.LC0, %edi
           movl
18
           movl
                    $0, %eax
19
                    printf
           call
20
           leag
                     -4(%rbp), %rsi
21
                    $.LC1, %edi
           movl
22
                    $0, %eax
           movl
23
           call
                    scanf
                    $.LC2, %edi
           movl
25
           movl
                    $0, %eax
           call
                    printf
27
                     -8(%rbp), %rsi
           leaq
28
           movl
                    $.LC1, %edi
29
           movl
                    $0, %eax
30
           call
                    scanf
31
           movl
                     -8(%rbp), %eax
33 #APP
34 # 18 "embedAsm1.c" 1
           addl %eax, -4(%rbp)
36 # 0 "" 2
```

```
#NO_APP
           movl
                    -4(%rbp), %esi
38
           movl
                    $.LC3, %edi
           movl
                    $0, %eax
40
           call
                    printf
41
           movl
                    $0, %eax
42
           leave
           ret
44
                    main, .-main
           .size
           .ident
                    "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
46
           .section
                             .note.GNU-stack, "",@progbits
```

Listing D.2: Embedding an assembly language instruction in a C function gcc assembly language.

In fact, the compiler did allocate y in memory, at -8(%rbp). It had to do that because scanf needs an address when reading a value from the keyboard.

The embedded assembly language is between the #APP and $\#NO_APP$ comments on lines 33 and 37, respectively.

```
movl -8(%rbp), %eax

#APP

# 18 "embedAsm1.c" 1

addl %eax, -4(%rbp)

# 0 "" 2

#NO_APP
```

The movl instruction on line 32 loads x into a register so that the addl instruction on line 35 can add the value to a memory location (y). Of course, it would have had to do that even if we had used a C statement for the addition instead of embedding an assembly language instruction.

There may be situations where you need to use a specific register for a variable. Listing D.3 shows how to do this.

```
* embed_asm2.c
   * Shows two assembly language instructions embedded
   * in a C function.
   * Bob Plantz - 18 June 2009
  #include <stdio.h>
10 int main()
11 {
      int \times, y;
12
      register int z asm("edx");
13
14
      printf("Enter an integer: ");
      scanf("%i", &x);
16
17
      printf("Enter another integer: ");
      scanf("%i", &y);
18
      asm("movl %1, %0\n\t %2, %0\n\t %1) ; "=r" (z) : "m" (x), "m" (y));
19
      printf("Sixteen times there sum is %i\n", z);
20
21
      return 0;
22
23
```

Listing D.3: Embedding more than one assembly language instruction in a C function and specifying a register (C).

The declaration on line 13,

```
register int z asm("edx");
```

shows how to request that the compiler use the edx register for the variable z.

We have decided to embed three assembly language instructions. Recall that each assembly language statement is on a separate line. And on the next line, we tab to the place where the operation code begins. In C, the newline character is '\n' and the tab character is 't'. So if you read line 18 carefully, you will see that there are three lines of assembly language. The first one is terminated by a '\n'. The second instruction begins with a '\t' and is terminated by a '\n'. And the third begins with a $'\t'$.

The assembly language results are shown in Listing D.4.

\$0, %eax

movl

leave

44

45

```
.file
                     "embedAsm2.c"
            .section
                              .rodata
  .LC0:
3
            .string "Enter an integer: "
4
  .LC1:
5
            .string "%i"
  .LC2:
7
            .string "Enter another integer: "
            .align 8
  .LC3:
10
            .string "Sixteen times there sum is %i\n"
11
            .text
12
  .globl main
13
                     main, @function
14
            .type
15 main:
           pushq
                     %rbp
           movq
                     %rsp, %rbp
17
18
           subq
                     $16, %rsp
           movl
                     $.LC0, %edi
19
           movl
                     $0, %eax
20
           call
                     printf
21
           leag
                     -4(%rbp), %rsi
22
23
           movl
                     $.LC1, %edi
           movl
                     $0, %eax
24
           call
                     scanf
25
           movl
                     $.LC2, %edi
26
           movl
                     $0, %eax
27
           call
                     printf
28
           leaq
                     -8(%rbp), %rsi
           movl
                     $.LC1, %edi
30
           movl
                     $0, %eax
31
           call
                     scanf
32
  #APP
  # 19 "embedAsm2.c" 1
34
           movl -4(%rbp), %edx
35
           addl -8(%rbp), %edx
36
           sall $4, %edx
37
    0 "" 2
38
  #NO_APP
39
           movl
                     %edx, %esi
40
           movl
                     $.LC3, %edi
41
                     $0, %eax
           movl
42
           call
                     printf
43
```

```
ret
size main, .-main
sident "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
section .note.GNU-stack,"",@progbits
```

Listing D.4: Embedding more than one assembly language instruction in a C function and specifying a register (gcc assembly language).

Indeed, we can see our embedded assembly language on lines 33 - 39:

```
33 #APP
34 # 19 "embedAsm2.c" 1
35 movl -4(%rbp), %edx
36 addl -8(%rbp), %edx
37 sall $4, %edx
38 # 0 "" 2
39 #NO_APP
```

This has been a very abbreviated introduction to embedding assembly language in C. Each situation will be unique, and you will need to study the info pages for gcc in order to determine what needs to be done. You can also expect the rules to change — hopefully become easier to use — as gcc evolves.

Appendix E

Exercise Solutions

The solutions to most of the exercises in the book are in this Appendix. You should attempt to work the exercise *before* looking at the solution. But don't allow yourself to get bogged down. If the solution does not come to you within a reasonable amount of time, peek at the solution for a hint.

A word of warning: I have proofread these solutions many times. Each time has turned up several errors. I am amazed at how difficult it is to make everything perfect. If you find an error, please email me and I will try to correct the next printing.

When reading my programming solutions, be aware that my goal is to present simple, easy-to-read code that illustrates the point. I have *not* tried to optimize, neither for size nor performance

I am also aware that each of us has our own programming style. Yours probably differs from mine. If you are working with an instructor, I encourage you to discuss programming style with him or her. I probably will not change my style, but I support other people's desire to use their own style.

E.2 Data Storage Formats

4 -1	a)	4307	
	b)	89ab	

0) 4567

c) fedcd) 0250

89a0

a) 1000 0011 1010 1111 c) 1010 1010 1010

2 -3 a) 32 d) 16 b) 48 e) 8

c) 4 f) 32

2 -4 a) 2 d) 3

b) 8 e) 5 c) 16 f) 2

2 -5 r = 10, n = 8, $d_7 = 2$, $d_6 = 9$, $d_5 = 4$, $d_4 = 5$, $d_3 = 8$, $d_2 = 2$, $d_1 = 5$, $d_0 = 4$. r = 16, n = 8, $d_7 = 2$, $d_6 = 9$, $d_5 = 4$, $d_4 = 5$, $d_3 = 8$, $d_2 = 2$, $d_1 = 5$, $d_0 = 4$.

2 -6	a) 170	e) 128
	b) 85	f) 99
	c) 240	g) 123
	d) 15	h) 255
2 -7	a) 43981	e) 32768
	b) 4660	f) 1024
	c) 65244	g) 65535
	d) 2000	h) 12345
2 -8	1. compute the value of each power	of 16 in decimal.
	2. multiply each power of 16 by its o	corresponding d_i .
	3. sum the terms.	
	a) 160	e) 100
	b) 80	f) 12
	c) 255	g) 17
	d) 137	h) 200
2 -9	1. compute the value of each power	of 16 in decimal.
2 -9	 compute the value of each power multiply each power of 16 by its of 	
2 -9		
2 -9	2. multiply each power of 16 by its o	
2 -9	2. multiply each power of 16 by its of3. sum the terms.	corresponding d_i .
2 -9	2. multiply each power of 16 by its of3. sum the terms.a) 40960	corresponding d_i .
2 -9	2. multiply each power of 16 by its of3. sum the terms.a) 40960b) 65535	e) 34952 f) 400
	 multiply each power of 16 by its of 3. sum the terms. 40960 65535 1024 4369 	e) 34952 f) 400 g) 43981 h) 21845
2 -9	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 	e) 34952 f) 400 g) 43981 h) 21845
	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 b) 7b 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10
	 multiply each power of 16 by its c sum the terms. 40960 65535 1024 4369 64 7b 0a 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10 g) 20
2 -10	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 b) 7b c) 0a d) 58 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10 g) 20 h) 80
	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 b) 7b c) 0a d) 58 a) 0400 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10 g) 20 h) 80 e) 0100
2 -10	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 b) 7b c) 0a d) 58 a) 0400 b) 03e8 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10 g) 20 h) 80 e) 0100 f) fffff
2 -10	 multiply each power of 16 by its of 3. sum the terms. a) 40960 b) 65535 c) 1024 d) 4369 a) 64 b) 7b c) 0a d) 58 a) 0400 	e) 34952 f) 400 g) 43981 h) 21845 e) ff f) 10 g) 20 h) 80 e) 0100

2-12 Since there are 12 values, we need 4 bits. Any 4-bit code would work. For example,

```
code
       grade
0000
          Α
0001
         A-
0010
         B+
0011
          В
0100
         B-
0101
         C+
0110
          \mathbf{C}
0111
         C-
1000
         D+
1001
         D
1010
         D-
          F
1011
```

2 -13 The addressing in Figure 2.1 uses only four bits. This limits us to a 16-byte addressing space. In order to increase our space to 17 bytes, we need another bit for the address. The 17th byte would be number 10000.

```
2 -14
              address contents
                                        address contents
            00000000: 106
                                      00000008: 240
            00000001: 240
                                      00000009: 2
            00000002: 94
                                      0000000a: 51
            00000003: 0
                                      0000000b: 60
            00000004: 255
                                      0000000c: 195
            00000005: 81
                                      0000000d: 60
                                      0000000e: 85
            00000006: 207
            00000007: 24
                                      0000000f: 170
2 -15
              address contents
                                        address contents
            00000000: 0000 0000
                                      00000008: 0000 1000
                                      00000009: 0000 1001
            00000001: 0000 0001
            00000002: 0000 0010
                                      0000000a: 0000 1010
            00000003: 0000 0011
                                      0000000b: 0000 1011
            00000004: 0000 0100
                                      0000000c: 0000 1100
                                      0000000d: 0000 1101
            00000005: 0000 0101
            00000006: 0000 0110
                                      0000000e: 0000 1110
            00000007: 0000 0111
                                      0000000f: 0000 1111
2 -16
              address contents
                                        address contents
            00000000: 00
                                      00000008: 08
            00000001: 01
                                      00000009: 09
            00000002: 02
                                      0000000a: 0a
            00000003: 03
                                      0000000b: 0b
            00000004: 04
                                      0000000c: 0c
            00000005: 05
                                      000000d: 0d
            00000006: 06
                                      0000000e: 0e
            00000007: 08
                                      0000000f: 0f
```

2 -17 The range of 32-bit unsigned ints is 0-4,294,967,295, so four bytes will be required. If the storage area begins at byte number $0\times2fffeb96$, the number will also occupy bytes number $0\times2fffeb97$, $0\times2fffeb98$, $0\times2fffeb99$.

```
2 -18
              address contents
                                         address contents
            00001000: 00
                                       0000100f: 0f
            00001001: 01
                                       00001010: 10
            00001002: 02
                                       00001011: 11
            00001003: 03
                                       00001012: 12
            00001004: 04
                                       00001013: 13
            00001005: 05
                                       00001014: 14
            00001006: 06
                                       00001015: 15
            00001007: 07
                                       00001016: 16
            00001008: 08
                                       00001017: 17
            00001009: 09
                                       00001018: 18
            0000100a: 0a
                                       00001019: 19
            0000100b: 0b
                                       0000101a: 1a
            0000100c: 0c
                                       0000101b: 1b
            0000100d: 0d
                                       0000101c: 1c
            0000100e: 0e
                                       0000101d: 1d
2 -19
             number letter grade
              0
                          Α
              1
                          В
              2
                          C
              3
                          D
                          F
              4
2 -26 -
   1 /*
   * echDecHexAddr.c
     * Asks user to enter a number in decimal or hexadecimal
      * then echoes it in both bases, also showing where values
      * are stored.
      * Bob Plantz - 19 June 2009
   10 #include <stdio.h>
   11
   12 int main(void)
   13 {
         int x;
   14
         unsigned int y;
   15
   16
   17
         while(1)
         {
   18
             printf("Enter a decimal integer: ");
   19
             scanf("%i", &x);
   20
             if (x == 0) break;
   22
             printf("Enter a bit pattern in hexadecimal: ");
             scanf("%x", &y);
   24
             if (y == 0) break;
   25
   26
             printf("%i is stored as %#010x at %p, and\n", x, x, &x);
             printf("%#010x represents the decimal integer %d stored at %p\n\n",
                  y, y, &y);
   30
         printf("End of program.\n");
  31
   32
         return 0;
   33
```

34 }

```
2 -28
   1 /*
      * stringInHex.c
      * displays "Hello world" in hex.
      * Bob Plantz - 19 June 2009
     #include <stdio.h>
     int main(void)
   10
     {
   11
         char *stringPtr = "Hello world.\n";
   12
   13
         while (*stringPtr != '\0')
   14
   15
              printf("%p: ", stringPtr);
   16
              printf("0x%02x\n", *stringPtr);
              stringPtr++;
   18
   19
         printf("%p: ", stringPtr);
   20
         printf("0x%02x\n", *stringPtr);
   21
   22
         return 0;
   23
   24 }
```

2 -29 Keyboard input is line buffered by the operating system and is not available to the application program until the user presses the enter key. This action places two characters in the keyboard buffer – the character key pressed and the end of line character. (The "end of line" character differs in different operating systems.)

The call to the read function gets one character from the keyboard buffer – the one corresponding to the key the user pressed. Since there is a breakpoint at the instruction following the call to read, control returns to the debugger, gdb. But the end of line character is still in the keyboard buffer, and the operating system dutifully provides it to gdb.

The net result is the same as if you had pushed the enter key immediately in response to gdb's prompt. This causes gdb to execute the previous command, which was the continue command. So the program immediately loops back to its prompt.

Experiment with this. Try to enter more than one character before pressing the enter key. It is all very consistent. You just have to think through exactly which keys you are pressing when using the debugger to determine what your call to read are doing.

```
char *stringPtr = aString;
  14
  15
         write(STDOUT_FILENO, "Enter a text string: ",
              strlen("Enter a text string: ")); // prompt user
  17
         read(STDIN_FILENO, stringPtr, 1);
                                                  // get first character
  19
         while (*stringPtr != '\n')
                                                  // look for end of line
         {
  21
             stringPtr++;
                                                  // move to next location
             read(STDIN_FILENO, stringPtr, 1); // get next characte
  23
         }
  25
         // now echo for user
         write(STDOUT_FILENO, "You entered:\n",
  27
              strlen("You entered:\n"));
         stringPtr = aString;
         do
  30
         {
  31
             write(STDOUT_FILENO, stringPtr, 1);
  32
             stringPtr++;
         } while (*stringPtr != '\n');
  34
         write(STDOUT_FILENO, stringPtr, 1);
  36
         return 0;
  37
  38 }
2 -31 -
   1 /*
   * echoString2.c
     * Echoes a string entered by user. Converts input
     * to C-style string.
     * Bob Plantz - 19 June 2009
      */
   8 #include <stdio.h>
   9 #include <unistd.h>
  10 #include <string.h>
  12 int main(void)
  13 {
  14
         char aString[200];
         char *stringPtr = aString;
  15
         write(STDOUT_FILENO, "Enter a text string: ",
  17
              strlen("Enter a text string: ")); // prompt user
  19
         read(STDIN_FILENO, stringPtr, 1);
                                                // get first character
         while (*stringPtr != '\n')
                                                 // look for end of line
  21
         {
  22
             stringPtr++;
                                                 // move to next location
  23
             read(STDIN_FILENO, stringPtr, 1); // get next character
  24
         *stringPtr = '\0';
                                                 // make into C string
  27
         // now echo for user
         printf("You entered:\n%s\n", aString);
  29
  30
```

```
return 0;
  31
  32 }
2 -32 -
   1 /*
   * echoString3.c
   * Echoes a string entered by user.
     * Bob Plantz - 19 June 2009
      */
   8 #include "readLn.h"
   9 #include "writeStr.h"
  int main(void)
  12 {
         char aString[STRLEN]; // limited to 5 for testing readStr
  13
                           // change to 200 for use
  14
         writeStr("Enter a text string: ");
  15
         readLn(aString, STRLEN);
  16
         writeStr("You entered:\n");
  17
         writeStr(aString);
  18
         writeStr("\n");
   19
  20
         return 0;
  ^{21}
  22 }
   1 /*
     * writeStr.h
      * Writes a line to standard out.
      * input:
           pointer to C-style text string
      * output:
           to screen
           returns number of chars written
     * Bob Plantz - 19 June 2009
  12
   14 #ifndef WRITESTR_H
   15 #define WRITESTR_H
   int writeStr(char *);
   17 #endif
   1 /*
   2 * writeStr.c
      * Writes a line to standard out.
      * input:
           pointer to C-style text string
      * output:
           to screen
           returns number of chars written
  * Bob Plantz - 19 June 2009
```

```
*/
12
14 #include <unistd.h>
#include "writeStr.h"
int writeStr(char *stringAddr)
      int count = 0;
19
      while (*stringAddr != '\0')
21
          write(STDOUT_FILENO, stringAddr, 1);
23
          count++;
24
          stringAddr++;
25
26
      }
      return count;
29 }
1 /*
2 * readLn.h
   * Reads a line from standard in.
   * Drops newline character. Eliminates
   * excess characters from input buffer.
   * input:
        from keyboard
   * output:
        null-terminated text string
        returns number of chars in text string
   * Bob Plantz - 19 June 2009
16 #ifndef READLN_H
17 #define READLN_H
18 int readLn(char *, int);
19 #endif
1 /*
  * readLn.c
   * Reads a line from standard in.
   * Drops newline character. Eliminates
   * excess characters from input buffer.
   * input:
        from keyboard
   * output:
        null-terminated text string
        returns number of chars in text string
   * Bob Plantz - 19 June 2009
14
16 #include <unistd.h>
17 #include "readLn.h"
```

```
int readLn(char *stringAddr, int maxLength)
      int count = 0;
21
      maxLength - -;
                              // allow space for NUL
22
      read(STDIN_FILENO, stringAddr, 1);
23
      while (*stringAddr != '\n')
25
           if (count < maxLength)</pre>
           {
27
               count++;
               stringAddr++;
           read(STDIN_FILENO, stringAddr, 1);
31
32
      *stringAddr = '\0'; // terminate C string
33
34
     return count;
35
36 }
```

E.3 Computer Arithmetic

- **3-1** four
- **3 -2** Store a digit in every four bits. Thus, the lowest-order digit would be stored in bits 7 0, the next lowest-order in 15 8, etc., with the highest-order digit in bits 31 24.

No, binary addition does not work. For example, let's consider 48 + 27:

```
number 32 bits (hex)
48 ==> 00000048
+ 27 ==> 00000027
----
75 0000007f
```

3 -3 See next answer.

No, it doesn't work. The problem is that the range of 4-bit signed numbers in two's complement format is $-8 \le x \le +7$, and 4 + 5 exceeds this range.

```
3-5 number 4 bits (hex)
-4 ==> 1100
+ -5 ==> 1011
----
+7 <== 0111
```

No, it doesn't work. The problem is that the range of 4-bit signed numbers in two's complement format is $-8 \le x \le +7$, and (-4) + (-5) exceeds this range.

3 -6 Adding any number to its negative will set the CF to one and the OF to zero. The sum is 2^n , where n is the number of bits used for representing the signed integer. That is, the sum is one followed by n zeroes. The one gets recorded in the CF. Since the CF is irrelevant in two's complement arithmetic, the result — n zeroes — is correct.

In two's complement, zero does not have a representation of opposite sign. (-0.0 does exist in IEEE 754 floating point.) Also, -2^{n-1} does not have a representation of opposite sign.

- **3-7** a) +85
 - b) -86
 - c) -16
 - d) +15
- **3 -8** a) +4660
 - b) -4660
 - c) -292
 - d) +2000
- **3-9** a) 64
 - b) ff
 - c) f6
 - d) 58
- **3-10** a) 0400
 - b) fc00
 - c) ffff
 - d) 7fff
- **3-11** a) ff

 $CF = 0 \Rightarrow unsigned right$

 $0F = 0 \Rightarrow signed right$

b) 45

 $CF \ = \ 1 \Rightarrow unsigned \ wrong$

 $0F = 0 \Rightarrow signed right$

c) fb

 $CF = 0 \Rightarrow unsigned right$

 $0F = 0 \Rightarrow signed right$

3-12 a) 0000

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 0 \Rightarrow signed right$

b) 1110

 $\mathsf{CF} \, = \, \mathsf{1} \Rightarrow \mathsf{unsigned} \; \mathsf{wrong}$

 $0F = 0 \Rightarrow signed right$

c) 0000

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 1 \Rightarrow signed wrong$

- e) -128
- f) +99
- g) +123
- e) -32768
- f) +1024
- g) -1
- h) +30767
- e) 7f
- f) f0
- g) e0
- h) 80
- e) ff00
- f) 8000
- g) 8001
- h) ff80

d) de

 $CF = 0 \Rightarrow unsigned right$

 $0F = 1 \Rightarrow signed wrong$

e) 0e

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 0 \Rightarrow signed right$

f) 00

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 1 \Rightarrow signed wrong$

d) 03ff

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 0 \Rightarrow signed right$

e) 7fff

 $CF \ = \ 0 \Rightarrow unsigned \ right$

 $0F = 0 \Rightarrow signed right$

f) 7fff

 $CF = 1 \Rightarrow unsigned wrong$

 $0F = 1 \Rightarrow signed wrong$

3 -14 -

- 1 /*
- * hexTimesTen.c
- * Multiplies a hex number by 10.
- * * Bob Plantz 19 June 2009
- 5 */
- 6
- 7 #include "readLn.h"
- 8 #include "writeStr.h"

```
9 #include "hex2int.h"
10 #include "int2hex.h"
12 int main(void)
13 {
      char aString[9];
14
      unsigned int x;
15
16
      writeStr("Enter a hex number: ");
      readLn(aString, 9);
18
      x = hex2int(aString);
      x *= 10;
      int2hex(aString, x);
21
      writeStr("Multiplying by ten gives: ");
22
23
      writeStr(aString);
      writeStr("\n");
25
      return 0;
27 }
1 /*
   * hex2int.h
   * Converts a hexadecimal text string to corresponding
   * unsigned int format.
   * Assumes text string is valid hex chars.
   * input:
        pointer to null-terminated text string
   * output:
        returns the unsigned int.
11
   * Bob Plantz - 19 June 2009
13
   */
14
16 #ifndef HEX2INT_H
17 #define HEX2INT_H
unsigned int hex2int(char *hexString);
21 #endif
1 /*
2 * hex2int.c
   * Converts a hexadecimal text string to corresponding
   * unsigned int format.
   * Assumes text string is valid hex chars.
   * input:
        pointer to null-terminated text string
   * output:
        returns the unsigned int.
11
  * Bob Plantz - 19 June 2009
14 */
```

```
16 #include "hex2int.h"
unsigned int hex2int(char *hexString)
19 {
      unsigned int x;
20
      unsigned char aChar;
21
22
      x = 0;
                                   // initialize result
      while (*hexString != '\0') // end of string?
24
          x = x << 4;
                                   // make room for next four bits
          aChar = *hexString;
27
          if (aChar <= '9')
              x = x + (aChar \& 0x0f);
          else
          {
31
              aChar = aChar \& 0x0f;
              aChar = aChar + 9;
33
              x = x + aChar;
          }
35
          hexString++;
      }
37
      return x;
39
40 }
1 /*
   * int2hex.h
   * Converts an unsigned int to corresponding
   * hex text string format.
   * Assumes char array is big enough.
   * input:
        unsigned int
   * output:
        null-terminated text string
   * Bob Plantz - 19 June 2009
14
16 #ifndef INT2HEX_H
17 #define INT2HEX_H
19 void int2hex(char *hexString, unsigned int number);
21 #endif
  * int2hex.c
  * Converts an unsigned int to corresponding
   * hex text string format.
  * Assumes char array is big enough.
7
```

```
* input:
        unsigned int
   * output:
        null-terminated text string
11
12
   * Bob Plantz - 19 June 2009
15
16 #include "int2hex.h"
  void int2hex(char *hexString, unsigned int number)
19
      unsigned char aChar;
20
      int i;
21
22
      hexString[8] = ' \setminus 0';
                                   // install string terminator
      for (i = 7; i >= 0; i--)
24
          aChar = number & 0x0f; // get four bits
26
          if (aChar <= 9)
               aChar += '0';
28
          else
               aChar = aChar - 10 + 'a';
          hexString[i] = aChar;
          number = number >> 4;
32
      }
34 }
```

See Section E.2 for writeStr and readLn.

```
3 - 15 -
   1 /*
   * binTimesTen.c
     * Multiplies a hex number by 10.
      * Bob Plantz - 19 June 2009
   8 #include "readLn.h"
   9 #include "writeStr.h"
   10 #include "bin2int.h"
   11 #include "int2bin.h"
  int main(void)
  14 {
         char aString[33];
  15
         unsigned int x;
   17
         writeStr("Enter a binary number: ");
         readLn(aString, 33);
   19
         x = bin2int(aString);
         x *= 10;
         int2bin(aString, x);
         writeStr("Multiplying by ten gives: ");
  23
         writeStr(aString);
  24
         writeStr("\n");
  25
  26
```

```
return 0;
27
28 }
  * bin2int.h
  * bin2int.c
   * Converts a binary text string to corresponding
   * unsigned int format.
   * Assumes text string contains valid binary chars.
   * input:
        pointer to null-terminated text string
   * output:
        returns the unsigned int.
   * Bob Plantz - 19 June 2009
15
17 #ifndef BIN2INT_H
18 #define BIN2INT_H
unsigned int bin2int(char *binString);
22 #endif
1 /*
2 * bin2int.c
   * Converts a binary text string to corresponding
   * unsigned int format.
   * Assumes text string contains valid binary chars.
  *
   * input:
        pointer to null-terminated text string
   * output:
        returns the unsigned int.
   * Bob Plantz - 19 June 2009
13
15 #include "bin2int.h"
unsigned int bin2int(char *binString)
18 {
      unsigned int x;
19
      unsigned char aChar;
21
      x = 0;
                                   // initialize result
      while (*binString != '\0') // end of string?
23
24
          x = x << 1;
                                   // make room for next bit
25
          aChar = *binString;
          x \mid = (0x1 \& aChar);
                                   // sift out the bit
27
          binString++;
      }
29
30
```

```
return x;
31
32 }
1 /*
   * int2bin.h
   * Converts an unsigned int to corresponding
   * binary text string format.
   * Assumes char array is big enough.
   * input:
        unsigned int
   * output:
        null-terminated text string
   * Bob Plantz - 19 June 2009
14
16 #ifndef INT2BIN_H
17 #define INT2BIN_H
19 void int2bin(char *binString, unsigned int number);
21 #endif
  * int2bin.c
   * Converts an unsigned int to corresponding
   * binary text string format.
   * Assumes char array is big enough.
   * input:
        unsigned int
   * output:
        null-terminated text string
11
   * Bob Plantz - 19 June 2009
14
15
16 #include "int2bin.h"
17
18 void int2bin(char *binString, unsigned int number)
19 {
      int i;
21
      binString[32] = ' \setminus 0';
                                   // install string terminator
      for (i = 31; i >= 0; i--)
23
24
          if (number & 0x01)
               binString[i] = '1';
          else
27
               binString[i] = '0';
          number = number >> 1;
      }
30
31 }
```

See Section E.2 for writeStr and readLn.

```
3 - 16 -
   1 /*
   * uDecTimesTen.c
   * Multiplies a decimal number by 10.
   * * Bob Plantz - 20 June 1009
   7 #include "readLn.h"
   8 #include "writeStr.h"
   9 #include "udec2int.h"
   10 #include "int2bin.h"
   12 int main(void)
  13 {
         char aString[33];
         unsigned int x;
  15
         writeStr("Enter a decimal number: ");
   17
         readLn(aString, 33);
         x = udec2int(aString);
   19
         x *= 10;
         int2bin(aString, x);
  21
         writeStr("Multiplying by ten gives (in binary): ");
         writeStr(aString);
   23
         writeStr("\n");
  25
         return 0;
  26
  27 }
   1 /*
   2 * uDec2int.h
     * Converts a decimal text string to corresponding
      * unsigned int format.
      * Assumes text string is valid decimal chars.
      * input:
           pointer to null-terminated text string
     * output:
           returns the unsigned int.
   11
      * Bob Plantz - 19 June 2009
      */
  14
  15
   16 #ifndef UDEC2INT_H
  17 #define UDEC2INT_H
   unsigned int uDec2int(char *decString);
   21 #endif
   1 /*
   2 * uDec2int.c
   * * Converts a decimal text string to corresponding
```

```
* unsigned int format.
   * Assumes text string is valid decimal chars.
   * input:
        pointer to null-terminated text string
   * output:
        returns the unsigned int.
   * Bob Plantz - 19 June 2009
   */
14
16 #include "uDec2int.h"
unsigned int uDec2int(char *decString)
19 {
      unsigned int x;
      unsigned char aChar;
21
22
      x = 0;
                                    // initialize result
23
      while (*decString != '\0') // end of string?
25
          x *= 10;
          aChar = *decString;
27
          x += (0xf \& aChar);
          decString++;
29
      }
31
      return x;
32
33 }
```

See above for int2bin. See Section E.2 for writeStr and readLn.

```
3 - 17 -
   * * sDecTimesTen.c
   * Multiplies a signed decimal number by 10
   * * and shows result in binary.
      * Bob Plantz - 21 June 2009
   8 #include "readLn.h"
   9 #include "writeStr.h"
   10 #include "sDec2int.h"
   11 #include "int2bin.h"
  int main(void)
  14 {
         char aString[33];
  15
         int x;
   16
  17
         writeStr("Enter a signed decimal number: ");
  18
         readLn(aString, 33);
         x = sDec2int(aString);
         x *= 10;
  21
         int2bin(aString, x);
  22
         writeStr("Multiplying by ten gives (in binary): ");
  23
         writeStr(aString);
  24
```

```
writeStr("\n");
26
      return 0;
28 }
  * sDec2int.h
  * Converts a decimal text string to corresponding
   * signed int format.
   * Assumes text string is valid decimal chars.
   * input:
        pointer to null-terminated text string
  * output:
        returns the signed int.
   * Bob Plantz - 19 June 2009
16 #ifndef SDEC2INT_H
17 #define SDEC2INT_H
int sDec2int(char *decString);
21 #endif
  * sDec2int.c
  * Converts a decimal text string to corresponding
   * signed int format.
   * Assumes text string is valid decimal chars.
   * input:
        pointer to null-terminated text string
   * output:
       returns the signed int.
   * Bob Plantz - 19 June 2009
16 #include "uDec2int.h"
17 #include "sDec2int.h"
int sDec2int(char *decString)
20 {
      int x;
^{21}
      int negative = 0;
22
      if (*decString == '-')
24
         negative = 1;
26
         decString++;
      }
      else
```

See above for int2bin and uDec2int. See Section E.2 for writeStr and readLn.

E.4 Logic Gates

4-1 Using truth tables:

$$\begin{array}{c|cc} x & x \cdot 1 \\ \hline 0 & 1 & 0 \\ 1 & 1 & 1 \end{array}$$

$$\begin{array}{c|cc} x & x+0 \\ \hline 0 & 0 & 0 \\ 1 & 0 & 1 \\ \end{array}$$

4 -2 Using truth tables:

x	y	$x \cdot y$	$y \cdot x$
0	0	0	0
0	1	0	0
1	0	0	0
1	1	1	1

x	y	x + y	y + x
0	0	0	0
0	1	1	1
1	0	1	1
1	1	1	1

4 -3 Using truth tables:

$$\begin{array}{c|cc} x & x \cdot 0 \\ \hline 0 & 0 & 0 \\ 1 & 0 & 0 \\ \end{array}$$

$$\begin{array}{c|cc} x & & x+1 \\ \hline 0 & 1 & 1 \\ 1 & 1 & 1 \end{array}$$

4-4 Using truth tables:

$$\begin{array}{c|cccc} x & x' & x \cdot 0 \\ \hline 0 & 1 & 0 \\ 1 & 0 & 0 \\ \end{array}$$

$$\begin{array}{c|cccc} x & x' & x+1 \\ \hline 0 & 1 & 1 \\ 1 & 0 & 1 \\ \end{array}$$

4 -5 Using truth tables:

$$\begin{array}{c|cc} x & x & x \cdot 0 \\ \hline 0 & 0 & 0 \\ 1 & 1 & 1 \end{array}$$

$$\begin{array}{c|cc}
x & x & x+1 \\
\hline
0 & 0 & 0 \\
1 & 1 & 1 \\
\end{array}$$

4-6 Using truth tables:

\boldsymbol{x}	y	z	$x \cdot (y+z)$	$x \cdot y + x \cdot z$
0	0	0	0	0
0	0	1	0	0
0	1	0	0	0
0	1	1	0	0
1	0	0	0	0
1	0	1	1	1
1	1	0	1	1
1	1	1	1	1

x	y	z	$x + y \cdot z$	$(x+y)\cdot(x+z)$
0	0	0	0	0
0	0	1	0	0
0	1	0	0	0
0	1	1	1	1
1	0	0	1	1
1	0	1	1	1
1	1	0	1	1
1	1	1	1	1

4 -7 Using a truth table and letting y = x':

$$\begin{array}{c|ccc}
x & y = x' & y' \\
\hline
0 & 1 & 0 \\
1 & 0 & 1
\end{array}$$

4 -8 Minterms:

4 -9 Minterms:

4-10 The prime numbers correspond to the minterms m_2 , m_3 , m_5 , and m_7 . The minterms m_{10} , m_{11} , m_{12} , m_{13} , m_{14} , m_{15} cannot occur so are marked "don't care" on the Karnaugh map.

$$F(w, x, y, z) = yz \\ 00 = 01 = 11 = 10$$

$$00 = m_0 = m_1 = 1 = 1$$


$$01 = m_4 = 1 = 1 = 1$$

$$wx = 11 = x = x = x$$

$$10 = m_8 = m_9 = x = x$$

$$F(w, x, y, z) = x \cdot z + x' \cdot y$$

x_1	x_0	y_1	y_0	F
0	0	0	0	0
0	0	0	1	1
0	0	1	0	1
0	0	1	1	1 1
0	1	0	0	0
0 0 0 0	1	0	1	0
0	1	1	0	1
0	1	1	1	1
1	1 0	0	0	1 0 0 0 1 0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	1
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

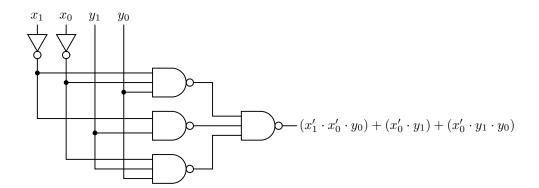

E.5 Logic Circuits

5 -3 Referring to Figure 5.26 (page 103), we see that JK = 10 is the set (state = 1) input and JK = 01 is the reset (state = 0).

		Enable = 0								Enat	ole =	1	
Cur	rent	Ne	\mathbf{ext}					Ne	\mathbf{ext}				
n_1	n_0	n_1	n_0	J_1	K_1	J_0	K_0	n_1	n_0	J_1	K_1	J_0	K_0
0	0	0	0	0	1	0	1	0	1	0	1	1	0
0	1	0	1	0	1	1	0	1	0	1	0	0	1
1	0	1	0	1	0	0	1	1	1	1	0	1	0
1	1	1	1	1	0	1	0	0	0	0	1	0	1

This leads to the following equations for the inputs to the JK flip-flops (using "E" for "Enable"):

$$J_{0} = E' \cdot n'_{1} \cdot n_{0} + E' \cdot n_{1} \cdot n_{0} + E \cdot n'_{1} \cdot n'_{0} + E \cdot n_{1} \cdot n'_{0}$$


$$K_{0} = E' \cdot n'_{1} \cdot n'_{0} + E' \cdot n_{1} \cdot n'_{0} + E \cdot n'_{1} \cdot n_{0} + E \cdot n_{1} \cdot n_{0}$$

$$J_{1} = E' \cdot n_{1} \cdot n'_{0} + E' \cdot n_{1} \cdot n_{0} + E \cdot n'_{1} \cdot n_{0} + E \cdot n_{1} \cdot n'_{0}$$

$$K_{1} = E' \cdot n'_{1} \cdot n'_{0} + E' \cdot n'_{1} \cdot n_{0} + E \cdot n'_{1} \cdot n'_{0} + E \cdot n_{1} \cdot n_{0}$$

Simplify these equations using Karnaugh maps.

E.5. LOGIC CIRCUITS 409

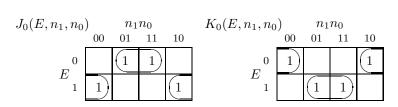

$J_1(E, n_1, n_0)$	n_1	n_0		$K_1(E, n_1, n_0)$	n_1	n_0	
00	01	11	10	00	01	11	10
E^0		(1	1	0 (1	1		
1	1		1	$1 \boxed{1}$		1	


$$J_{0} = E' \cdot n_{0} + E \cdot n'_{0}$$

$$K_{0} = E' \cdot n'_{0} + E \cdot n_{1}$$

$$J_{1} = E' \cdot n_{1} + n_{1} \cdot n'_{0} + E \cdot n'_{1} \cdot n_{0}$$

$$K_{1} = E' \cdot n'_{1} + n'_{1} \cdot n'_{0} + E \cdot n_{1} \cdot n_{0}$$

5 -4 Four-bit up counter.

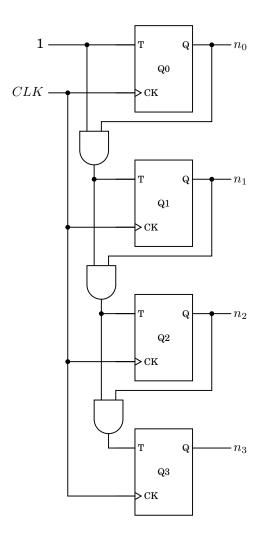

E.6 Central Processing Unit

6-3 The compiler will not use a register for the theInteger variable because the algorithm requires the address of this variable, and registers have no memory address.

```
6 - 5
  1 /*
  2 * endian.c
     * Determines endianess. If endianess cannot be determined
     * from input value, defaults to "big endian"
     * Bob Plantz - 22 June 2009
    #include <stdio.h>
  int main(void)
  11
        unsigned char *ptr;
        int x, i, bigEndian;
  13
  14
        ptr = (unsigned char *)&x;
  15
  16
```

```
printf("Enter a non-zero integer: ");
  17
        scanf("%i", &x);
  18
        printf("You entered %#010x and it is stored\n", x);
        for (i = 0; i < 4; i++)
            printf("
                        %p: %02x\n", ptr + i, *(ptr + i));
  22
        bigEndian = (*ptr == (unsigned char)(0xff & (x >> 24))) &&
                 (*(ptr + 1) == (unsigned char)(0xff & (x >> 16))) &&
                 (*(ptr + 2) == (unsigned char)(0xff & (x >> 8))) &&
  26
                 (*(ptr + 3) == (unsigned char)(0xff & x));
        if (bigEndian)
            printf("which is big endian.\n");
        else
  30
            printf("which is little endian.\n");
  31
        return 0;
  34 }
6 -6
  1 /*
  * endianReg.c
     * Stores user int in memory then copies to register var.
     * Use gdb to observe endianess.
     * Bob Plantz - 22 June 2009
    #include <stdio.h>
  int main(void)
  11 {
        int x;
  12
        register int y;
  14
        printf("Enter an integer: ");
        scanf("%i", &x);
  16
        y = x;
  18
        printf("You entered %i\n", y);
  20
        return 0;
  21
  22 }
```

When I ran this program with the input -1985229329, I got the results:

which shows the value stored in rcx (used as the y variable) is in regular order, and the value store in memory (the x variable) is in little endian.

E.7 Programming in Assembly Language

```
7 - 1 -
  1 # f.s
  2 # Does nothing but return zero to caller.
  3 # Bob Plantz - 22 June 2009
             .text
             .globl f
             .type
                    f, @function
                                      # save caller's frame pointer
            pushq
                     %rbp
                     %rsp, %rbp
                                     # establish ours
             movq
  10
  11
             movl
                     $0, %eax
                                      # return 0;
  12
  13
                     %rbp, %rsp
                                     # delete local vars.
             movq
  14
                                      # restore caller's frame pointer
                     %rbp
            popq
                                      # return to caller
             ret
7 -2 -
  1 # g.s
  2 # Does nothing but return to caller.
  3 # Bob Plantz - 22 June 2009
             .text
             .globl g
             .type
                    g, @function
  8 g:
            pushq
                     %rbp
                                     # save caller's frame pointer
            movq
                     %rsp, %rbp
                                     # establish ours
  10
  12 # A function that returns void has "garbage" in eax.
            movq
                     %rbp, %rsp
                                      # delete local vars.
  14
                     %rbp
                                      # restore caller's frame pointer
            popq
  15
                                      # return to caller
            ret
7 -3 -
  1 # h.s
  2 # Does nothing but return 123 to caller.
  3 # Bob Plantz - 22 June 2009
             .text
             .globl h
             .type
                     h, @function
  8 h:
                                     # save caller's frame pointer
             pushq
                     %rbp
            movq
                     %rsp, %rbp
                                     # establish ours
  10
  11
             movl
                     $123, %eax
                                     # return 123;
  12
  13
                                      # delete local vars.
                     %rbp, %rsp
  14
            movq
                                      # restore caller's frame pointer
            popq
                     %rbp
  15
            ret
                                      # return to caller
```

```
7 -4 -
  1 /*
  2 * checkRetNos.c
  * calls three assembly language functions and
  * * prints their return numbers.
  * Bob Plantz - 22 June 2009
  9 #include <stdio.h>
  10 int one();
  11 int two();
  int three();
  14 int main()
  15 {
        int x;
  16
  17
        x = one();
        printf("one returns %i, ", x);
  19
        x = two();
  21
        printf("two returns %i, and ", x);
  22
  23
        x = three();
  24
        printf("three returns %i.\n", x);
  25
  26
        return 0;
  27
  28 }
  1 # one.s
  2 # returns 1 to calling function.
  3 # Bob Plantz - 22 June 2009
            .text
            .globl one
                     one, @function
             .type
  8 one:
            pushq
                     %rbp
                                     # save caller's base pointer
                     %rsp, %rbp
                                   # establish ours
            movq
  10
                     $1, %eax
                                     # return 1;
            movl
  12
                                     # delete local vars.
            movq
                     %rbp, %rsp
  14
                                     # restore caller's base pointer
            popq
                     %rbp
  15
                                     # return to caller
            ret
  1 # two.s
  2 # returns 2 to calling function.
  3 # Bob Plantz - 22 June 2009
  4
             .text
             .globl two
            .type
                    two, @function
  8 two:
            pushq
                   %rbp
                                  # save caller's base pointer
```

```
%rsp, %rbp
                                    # establish ours
          movq
10
11
                                    # return 1;
          movl
                   $2, %eax
13
                                    # delete local vars.
          movq
                   %rbp, %rsp
14
          popq
                   %rbp
                                    # restore caller's base pointer
15
                                    # return to caller
          ret
1 # three.s
2 # returns 3 to calling function.
3 # Bob Plantz - 22 June 2009
```

.text .globl three .type three, @function 8 three: pushq %rbp # save caller's base pointer # establish ours %rsp, %rbp 10 movq 11 \$3, %eax # return 3; movl 13 # delete local vars. %rbp, %rsp movq 14 # restore caller's base pointer %rbp popq 15 ret # return to caller

```
7 -5 -
  1 /*
   2 * checkRetLtrs.c
     * calls three assembly language functions and
     * prints their return characters.
     * Bob Plantz - 22 June 2009
   9 #include <stdio.h>
  10 char el();
  11 char em();
  12 char en();
  14 int main()
  15 {
         char letter;
  16
  17
        letter = el();
        printf("el returns %c, ", letter);
  19
        letter = em();
  21
        printf("en returns %c, and ", letter);
  22
  23
        letter = en();
        printf("em returns %c.\n", letter);
  25
         return 0;
  27
  28 }
```

```
2 # returns L to calling function.
3 # Bob Plantz - 22 June 2009
          .text
          .globl
                 el
          .type
                  el, @function
7 el:
                                   # save caller's base pointer
          pushq
                  %rbp
                                   # establish ours
          movq
                  %rsp, %rbp
          movl
                  $'L', %eax
                                   # return 'L';
11
                                   # delete local vars.
                  %rbp, %rsp
          movq
13
          popq
                  %rbp
                                   # restore caller's base pointer
                                   # return to caller
          ret
2 # returns M to calling function.
3 # Bob Plantz - 22 June 2009
          .text
          .globl em
```

```
em, @function
           .type
7 em:
                                    # save caller's base pointer
          pushq
                   %rbp
                   %rsp, %rbp
                                    # establish ours
          movq
10
                   $'M, %eax
                                    # return 'M';
          movl
11
12
                   %rbp, %rsp
                                    # delete local vars.
          movq
                   %rbp
                                    # restore caller's base pointer
          popq
14
                                    # return to caller
          ret
```

```
2 # returns N to calling function.
3 # Bob Plantz - 22 June 2009
           .text
           .globl en
          .type
                   en, @function
7 en:
                                    # save caller's base pointer
          pushq
                   %rbp
                   %rsp, %rbp
                                    # establish ours
          movq
10
                   $'N', %eax
                                    # return 'N';
          movl
11
12
                   %rbp, %rsp
                                    # delete local vars.
          movq
                   %rbp
                                    # restore caller's base pointer
          popq
14
                                    # return to caller
          ret
```

7-6 The four characters are returned as a 4-byte word and then stored in memory by main. They are then written to standard out one character at a time. Storage order in memory is little endian, so the characters are displayed "backwards."

```
1 /*
2 * fourLetterWord.c
3 * calls a function to get a four letter word, then
4 * prints it.
5 *
```

```
6 * Bob Plantz - 22 June 2009
9 #include <unistd.h>
10 #include "retWord.h"
12 int main()
13 {
      int x;
      char endl = '\n';
15
      x = retWord();
17
      write(STDOUT_FILENO, &x, 4);
18
      write(STDOUT_FILENO, &endl, 1);
20
      return 0;
22
23 }
1 # retWord.s
2 # returns 4-letter word to calling function.
3 # Bob Plantz - 22 June 2009
          .text
          .globl retWord
          .type
                   retWord, @function
7 retWord:
                   %rbp
                                    # save caller's base pointer
          pushq
                                   # establish ours
          movq
                   %rsp, %rbp
10
                   $0x61426339, %eax
                                            # return "aBc9";
          movl
11
12
                   %rbp, %rsp
                                   # delete local vars.
          movq
          popq
                                    # restore caller's base pointer
14
          ret
                                    # return to caller
```

E.8 Program Data - Input, Store, Output

```
8 -2

1  /*
2  * stackPositive.c
3  * implementation of push and pop stack operations in C
4  *
5  * Bob Plantz - 22 June 2009
6  */
7
8  #include <stdio.h>
9
10  int theStack[500];
11  int *stackPointer = &theStack[0];
12
13  /*
14  * precondition:
15  * stackPointer points to data element at top of stack
16  * postcondtion:
17  * address in stackPointer is incremented by four
```

```
data_value is stored at top of stack
  */
20 void push(int data_value)
21 {
      stackPointer++;
      *stackPointer = data_value;
23
24 }
25
   * precondition:
         stackPointer points to data element at top of stack
   * postcondtion:
         data element at top of stack is copied to *data_location
         address in stackPointer is decremented by four
void pop(int *data_location)
34 {
      *data_location = *stackPointer;
      stackPointer--;
36
37 }
38
39 int main(void)
40 {
      int x = 12;
      int y = 34;
42
      int z = 56;
      printf("Start with the stack pointer at %p", (void *)stackPointer);
      printf(", and x = \%i, y = \%i, and z = \%i \n", x, y, z);
46
      push(x);
47
      push(y);
      push(z);
      x = 100;
      y = 200;
      z = 300;
      printf("Now the stack pointer is at %p", (void *)stackPointer);
      printf(", and x = \%i, y = \%i, and z = \%i \n", x, y, z);
      pop(&z);
      pop(&y);
      pop(&x);
57
      printf("And we end with the stack pointer at %p", (void *)stackPointer);
59
      printf(", and x = \%i, y = \%i, and z = \%i \n", x, y, z);
61
      return 0;
63 }
```

- **8 -3** Use gdb to examine the values in the rbp and rsp registers just before the first and just before the last instructions are executed.
- **8 -4** This exercise shows that the text strings and local variables are stored in different areas of memory.

```
8 -6

1 # int2hex.s
2 # Prompts user to enter an integer, then displays its hex equivalent
3 # Bob Plantz - 22 June 2009
```

```
5 # Stack frame
             .equ
                     anInt,-4
             .equ
                     localSize, -16
  8 # Read only data
             .section
                       .rodata
  10 prompt:
             .string "Enter an integer number: "
  12 scanFormat:
             .string "%i"
  14 printFormat:
             .string "%i = %x\n"
  16 # Code
             .text
                                     # switch to text segment
  17
             .globl main
  19
             .type
                     main, @function
    main:
             pushq
                     %rbp
                                     # save caller's base pointer
  21
                                     # establish our base pointer
             movq
                     %rsp, %rbp
  22
                     $localSize, %rsp # for local variable
             addq
  23
             movl
                     $prompt, %edi # address of prompt text string
  25
                     $0, %eax
                                     # no floating point args.
             movl
                                     # invoke printf function
             call
                     printf
  27
                     anInt(%rbp), %rsi # place to store integer
             leag
  29
             movl
                     $scanFormat, %edi # address of scanf format string
             movl
                     $0, %eax
                                     # no floating point args.
  31
                                     # invoke scanf function
             call
                     scanf
  32
  33
             movl
                     anInt(%rbp), %edx
                                          # the integer
  34
                     anInt(%rbp), %esi
             movl
                                          #
                                                two copies
             movl
                     $printFormat, %edi # address of printf text string
             movl
                     $0, %eax
                                     # no floating point args.
  37
             call
                     printf
                                     # invoke printf function
  38
                     $0, %eax
                                     # return 0
             movl
  40
                     %rbp, %rsp
                                     # delete local variables
             movq
             popq
                     %rbp
                                     # restore caller's base pointer
  42
                                     # back to calling function
             ret
8 -7 -
  1 # assignSeveral.s
  2 # Assigns values to four chars and four ints and prints them.
  3 # Bob Plantz - 22 June 2009
  5 # Stack frame
             .equ
                     a,-1
                     b, -2
             .equ
                     c,-3
             .equ
                     d,-4
             .equ
             .equ
                     w,-8
  10
             .equ
                     x,-12
  11
             . equ
                     y,-16
  12
```

z,-20

arg7,0

arg8,8

arg9,16

.equ

.equ

.equ

13

14

15

16

```
localSize, -48
           . equ
18 # Read only data
                    .rodata
          .section
20 format:
          .string "The values are %c, %i, %c, %i, %c, %i, %c, and %i\n"
22 # Code
         .text
         .globl
                 main
24
          .type
                  main, @function
26 main:
          pushq
                   %rbp
                                     # save calling function's base pointer
          movq
                   %rsp, %rbp
                                     # establish our base pointer
          addq
                   $localSize, %rsp # allocate memory for local variables
30
          movb
                   $'A', a(%rbp)
31
                                     # initialize chars
                   $'B', b(%rbp)
          movb
          movb
                   $'C', c(%rbp)
                   $'D', d(%rbp)
          movb
                   $12, w(%rbp)
                                     # and ints
          movl
          movl
                   $34, x(%rbp)
          movl
                   $45, y(%rbp)
37
          movl
                   $67, z(%rbp)
                   z(%rbp), %rax
                                     # load z
          movslq
                   %rax, arg9(%rsp) # and place on stack
          movq
41
                   d(%rbp), %rax
          movzbq
                                     # load d
          movq
                   %rax, arg8(%rsp) # place on stack
43
          movslq
                   y(%rbp), %rax
                                     # load y
                   %rax, arg7(%rsp) # place on stack
          movq
45
          movl
                   y(%rbp), %r9d
          movzbl c(%rbp), %r9d
                                     # load args into regs.
          movl
                   x(%rbp), %r8d
                   b(%rbp), %ecx
          movzbl
49
          movl
                   w(%rbp), %edx
                   a(%rbp), %esi
          movzbl
          movl
                   $format, %edi
                                     # format string
52
                                     # no floating point values
          movl
                   $0, %eax
          call
                   printf
                                     # delete local variables
          movq
                   %rbp, %rsp
56
                   %rbp
                                     # restore calling function's base pointer
          popq
                   $0, %eax
          movl
                                     # return 0
58
          ret
```

E.9 Computer Operations

9-1 Your numbers may differ.

instruction	n bytes	rax	rsi	rbp	rsp
		7f940f088a60	7fff24330778	0	7fff172a9618
pushq %rbp	1	7f940f088a60	7fff24330778	0	7fff172a9610
movl %rsp, %rbp	3	7f940f088a60	7fff24330778	7fff172a9610	7fff172a9610
movl \$0xabcd1234,%esi	5	7f940f088a60	abcd1234	7fff172a9610	7fff172a9610
movl \$0, %eax	5	0	abcd1234	7fff172a9610	7fff172a9610
movl %rbp, %rsp	3	0	abcd1234	7fff172a9610	7fff172a9610
popq %rbp	1	0	abcd1234	0	7fff172a9618
ret					

9 -3 The assembly language program in Listing 9.6 uses esi for the y variable and edx for the z variable. If there is overflow, the call to printf changes the contents of these registers. So when the results are displayed y and/or z are incorrect.

```
1 # addAndSubtract3.s
2 # Gets two integers from user, then
3 # performs addition and subtraction
4 # Bob Plantz - 23 June 2009
5 # Stack frame
          .equ
                 w, -16
                  x, -12
          .equ
                 y,-8
          .equ
          .equ
                  z,-4
          . equ
                  localSize, -16
 # Read only data
          .section
                   .rodata
13 prompt:
          .string "Enter two integers: "
14
15 getData:
          .string "%i %i"
17 display:
          .string "sum = %i, difference = %i\n"
19 warning:
          .string "Overflow has occurred.\n"
21 # Code
          .text
          .globl
                 main
23
                 main, @function
          .type
 main:
25
                  %rbp
                              # save caller's base pointer
          pushq
          movq
                  %rsp, %rbp # establish our base pointer
27
                  $localSize, %rsp # for local vars
          addq
                  $prompt, %edi # prompt user
          movl
          movl
                  $0, %eax
                                 # no floats
31
          call
                  printf
32
          leaq
                  x(%rbp), %rdx # &x
                 w(%rbp), %rsi # &w
          leag
35
          movl
                  $getData, %edi # get user data
                                # no floats
          movl
                  $0, %eax
37
          call
                  scanf
38
# These three instructions could replace the four that follow
   this sequence. They work because mov does not affect eflags.
   But changes in the code may introduce an instruction before
44 #
    the jno that does affect eflags, thus breaking the code.
 #
         movl
                  w(%rbp), %eax # load w
46 #
          addl
                  y(%rbp), %eax # add y
         movl
                  eax, y({rbp}) # y = w + x
movl
                 w(%rbp), %eax # load w
                  ext{%eax}, y(\rvert rbp) # y = w
          movl
50
          movl
                 x(%rbp), %eax # load x
51
                  ext{length} % ext{length} % ext{length} % ext{length} % (% rbp) # y = w + x
         addl
52
          jno
                  n0ver1
                                # skip warning if no OF
53
```

```
$warning, %edi #### changes edi
          movl
          movl
                   $0, %eax
55
          call
                   printf
                                   #### may change several registers
57 nOver1:
          movl
                   w(%rbp), %eax # load w
          movl
                   eax, z({rbp}) # z = w
59
                   x(%rbp), %eax # load x
          movl
                   %eax, z(%rbp) \# z = w - x
          subl
61
          jno
                   n0ver2
                                   # skip warning if no OF
          movl
                   $warning, %edi
63
          movl
                   $0, %eax
          call
                   printf
65
66 nOver2:
                   z(%rbp), %edx # load z
          movl
67
          movl
                   y(%rbp), %esi # and y
68
                   $display, %edi # display results
          movl
          movl
                   $0, %eax
                                  # no floats
70
          call
                   printf
71
72
                   $0, %eax
                                   # return 0 to OS
          movl
          movq
                   %rbp, %rsp
                                   # restore stack pointer
74
                                   # restore caller's base pointer
          popq
                   %rbp
          ret
```

9-6 GAS LISTING Exercise_9-6.s page 1

```
# Exercise_9-6.s
                  # This is not a program. It is a group of
 2
 3
                  # instructions to hand-assemble.
 4
                  # Bob Plantz - 27 June 2009
 5
                          .text
 6
                          .globl main
 7
                  main:
 8 0000 55
                           pushq
                                   %rbp
 9 0001 4889E5
                           movq
                                   %rsp, %rbp
10
11 0004 B9EFCDAB
                           movl
                                   $0x89abcdef, %ecx
                                                           # a)
11
        89
12 0009 66B8CDAB
                                   $0xabcd, %ax
                                                           # b)
                           movw
13 000d B030
                           movb
                                    $0x30, %al
                                                           # c)
14 000f B431
                           movb
                                   $0x31, %ah
                                                           # d)
15 0011 4D89C7
                           movq
                                   %r8, %r15
                                                           # e)
16 0014 4588CA
                                   %r9b, %r10b
                                                           # f)
                           movb
17 0017 4589DC
                           movl
                                   %r11d, %r12d
                                                           # g)
18 001a 48BEF42C
                                   $0x7fffec9b2cf4, %rsi # h)
                           movq
18
        9BECFF7F
18
        0000
19
20 0024 B8000000
                           movl
                                   $0, %eax
20
        00
21 0029 4889EC
                                   %rbp, %rsp
                           movq
22 002c 5D
                                   %rbp
                           popq
23 002d C3
                           ret
24
```

9-7 GAS LISTING Exercise_9-7.s page 1

```
# Exercise_9-7.s
 1
 2
                  # This is not a program. It is a group of
 3
                 # instructions to hand-assemble.
 4
                 # Bob Plantz - 27 June 2009
 5
                          .text
 6
                          .globl main
 7
                 main:
 8 0000 55
                           pushq
                                   %rbp
9 0001 4889E5
                                   %rsp, %rbp
                           movq
10
11 0004 81C1EFCD
                                   $0x89abcdef, %ecx # a)
                           addl
11
        AB89
12 000a 6605CDAB
                           addw
                                   $0xabcd, %ax
                                                        # b)
13 000e 0430
                           addb
                                   $0x30, %al
                                                        # c)
14 0010 80C431
                           addb
                                   $0x31, %ah
                                                        # d)
15 0013 4D01E7
                           addq
                                   %r12, %r15
                                                        # e)
                                   %r8w, %r10w
16 0016 664501C2
                                                       # f)
                           addw
17 001a 4400CE
                           addb
                                   %r9b, %sil
                                                       # g)
18 001d 01F7
                           addl
                                   %esi, %edi
                                                        # h)
19
20 001f B8000000
                                   $0, %eax
                           movl
20
        00
21 0024 4889EC
                           movq
                                   %rbp, %rsp
22 0027 5D
                           popq
                                   %rbp
23 0028 C3
                           ret
24
```

9-8 GAS LISTING Exercise_9-8.s page 1

```
1
                  # Exercise_9-8.s
 2
                  # This is not a program. It is an experiment
 3
                  # to determine the machine code for pushl.
 4
                  # Bob Plantz - 27 June 2009
 5
                          .text
 6
                          .globl main
 7
                 main:
 8 0000 55
                           pushq
                                    %rbp
9 0001 4889E5
                           movq
                                    %rsp, %rbp
10
11 0004 50
                           %rax
                   pushq
12 0005 51
                           pushq
                                    %rcx
13 0006 52
                           pushq
                                    %rdx
14 0007 53
                           pushq
                                    %rbx
15 0008 56
                           pushq
                                    %rsi
16 0009 57
                           pushq
                                    %rdi
17 000a 4150
                           pushq
                                    %r8
18 000c 4151
                           pushq
                                    %r9
19 000e 4152
                           pushq
                                    %r10
20 0010 4153
                           pushq
                                    %r11
21 0012 4154
                           pushq
                                    %r12
22 0014 4155
                                    %r13
                           pushq
23 0016 4156
                           pushq
                                    %r14
```

24 25	0018	4157		pushq	%r15
26	001a	415F		popq	%r15
27	001c	415E		popq	%r14
28	001e	415D		popq	%r13
29	0020	415C		popq	%r12
30	0022	415B		popq	%r11
31	0024	415A		popq	%r10
32	0026	4159		popq	%r9
33	0028	4158		popq	%r8
34	002a	5F		popq	%rdi
35	002b	5E		popq	%rsi
36	002c	5B		popq	%rbx
37	002d	5A		popq	%rdx
38	002e	59		popq	%rcx
39	002f	58	popq	%rax	
40					
41	0030	B8000000		movl	\$0, %eax
41		00			
42	0035	4889EC		movq	%rbp, %rsp
43	0038	5D		popq	%rbp
44	0039	C3		ret	
45					

9-9 See solution to Exercise 8

9-10 GAS LISTING Exercise_9-10.s page 1

```
1
                 # Exercise_9-10.s
 2
                 # This is not a program. I used the machine code from the
 3
                 # listing to create Exercise 9-9.
 4
                 # Uses a drill and kill approach to learning
 5
                 # how to disassemble machine code
 6
                 # Bob Plantz - 27 June 2009
 7
                          .text
 8
                          .globl main
 9
                 main:
10 0000 55
                          pushq
                                   %rbp
11 0001 4889E5
                           movq
                                   %rsp, %rbp
12
13
                 #a
14 0004 B0AB
                                   $0xab, %al
                           movb
15 0006 B4CD
                           movb
                                   $0xcd, %ah
16 0008 41B0EF
                           movb
                                   $0xef, %r8b
17 000b 41B701
                           movb
                                   $0x01, %r15b
18
19
                 #b
20 000e 40B723
                                   $0x23, %dil
                           movb
21 0011 40B634
                                   $0x34, %sil
                           movb
22 0014 B256
                                   $0x56, %dl
                           movb
23 0016 B678
                           movb
                                   $0x78, %dh
24
25
                 #c
                                   $0xabcd1234, %eax
26 0018 B83412CD
                           movl
```

	4.0			
26	AB			¢0,,2412 adab 0 aby
	BBABCD12		movl	\$0x3412cdab, %ebx
27	-			#00 00 d
	41B90000		movl	\$0x0, %r9d
28			_	
	41BE7B00		movl	\$0x7b, %r14d
29	0000			
30				
31		#d		
	66B8CDAB		movw	
	66BBBACD		movw	•
34 0036	66B93412		movw	\$0x1234, %cx
35 003a	66BA2143		movw	\$0x4321, %dx
36				
37		#e		
38 003e	88C4		movb	%al, %ah
39 0040	88C8		movb	%cl, %al
40 0042	8808		movb	%cl, (%rax)
41 0044	88480A		movb	%cl, 10(%rax)
42 0047	8A08		movb	(%rax), %cl
43 0049	8A480A		movb	10(%rax), %cl
44				
45		#f		
46 004 0	89C3		movl	%eax, %ebx
47 004e	6689D8		movw	%bx, %ax
48 0051	4889CA		movq	%rcx, %rdx
49 0054	4589C6		movl	%r8d, %r14d
50				,
51		#q		
52 0057	OAAD	3	ما ام ام	+0 0
	UHAD		addb	Suxap. %al
			addb addb	<pre>\$0xab, %al \$0xcd. %ah</pre>
53 0059	80C4CD	se_9-10.s	addb	\$0xab, %al \$0xcd, %ah
53 0059		se_9-10.s	addb	
53 0059	80C4CD	se_9-10.s	addb	
53 0059 GAS LISTI	80C4CD	se_9-10.s	addb	
53 0059 GAS LISTI 54 0050	80C4CD NG Exercis	se_9-10.s	addb page 2	\$0xcd, %ah
53 0059 GAS LISTI 54 0050	80C4CD NG Exercis	se_9-10.s	addb page 2	\$0xcd, %ah \$0xef, %bl
53 0059 GAS LISTI 54 0050 55 005f	80C4CD NG Exercis	se_9-10.s #h	addb page 2	\$0xcd, %ah \$0xef, %bl
53 0059 GAS LISTI 54 0050 55 005f 56 57	80C4CD NG Exercis		addb page 2	\$0xcd, %ah \$0xef, %bl
53 0059 GAS LISTI 54 0050 55 0051 56 57 58 0062	80C4CD NG Exercis 80C3EF 80C701		addb page 2 addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh
53 0059 GAS LISTI 54 0056 55 005f 56 57 58 0062 59 0065	80C4CD NG Exercis 80C3EF 80C701 80C123		addb 2 addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch
53 0059 GAS LISTI 54 0056 55 005f 56 57 58 0062 59 0065 60 0068	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534		addb page 2 addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl
53 0059 GAS LISTI 54 0056 55 005f 56 57 58 0062 59 0065 60 0068	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256		addb page 2 addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256	#h	addb page 2 addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678		addb page 2 addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678	#h	addb page 2 addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678	#h	addb addb addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678	#h	addb page 2 addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678	#h	addb addb addb addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3	#h	addb addb addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1	#h	addb addb addb addb addl addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x78, %dh \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0079 66 67 0076	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1 81C2A1B2	#h	addb addb addb addb addb addb addb addb	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66 67 0076 67	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1	#h	addb addb addb addb addl addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x78, %dh \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx
53 0059 GAS LISTI 54 0056 55 005f 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66 67 007f 67 68	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1 81C2A1B2	#h #i	addb addb addb addb addl addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x78, %dh \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66 67 0076 67 68 69	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1 81C2A1B2 C3D4	#h	addb addb addb addb addb addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx \$0xd4c3b2a1, %edx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66 67 0076 67 68 69 70 0085	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1 81C2A1B2 C3D4	#h #i	addb addb addb addb addl addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x78, %dh \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx
53 0059 GAS LISTI 54 0056 55 0056 56 57 58 0062 59 0065 60 0068 61 0066 62 63 64 0066 64 65 0073 65 66 0079 66 67 0076 67 68 69	80C4CD NG Exercis 80C3EF 80C701 80C123 80C534 80C256 80C678 053412CD AB 81C3ABCD 1234 81C1D4C3 B2A1 81C2A1B2 C3D4	#h #i	addb addb addb addb addb addl addl addl	\$0xcd, %ah \$0xef, %bl \$0x01, %bh \$0x23, %cl \$0x34, %ch \$0x56, %dl \$0x78, %dh \$0xabcd1234, %eax \$0x3412cdab, %ebx \$0xa1b2c3d4, %ecx \$0xd4c3b2a1, %edx

72	008d 0090	83C301 83C100 81C2FF00 0000		addl addl addl	\$0x1, %ebx \$0x0, %ecx \$0xff, %edx
75			#k		
76	0096	6605CDAB		addw	\$0xabcd, %ax
77	009a	6681C3BA		addw	\$0xcdba, %bx
77		CD			
78	009f	6681C134		addw	\$0x1234, %cx
78		12			
79	00a4	6681C221		addw	\$0x4321, %dx
79		43			
80					
81			#l		
		6605AB00		addw	\$0xab, %ax
		6683C301		addw	\$0x1, %bx
		6683C100		addw	\$0x0, %cx
	00b5	6681C2FF		addw	\$0xff, %dx
85		00			
86			44		
87	00ha	0004	#m	addh	0-21 0-2h
	00ba	4100C2		addb addb	%al, %ah %al, %r10b
	00bc			addb	%cl, %dl
		4500C1		addb	%r8b, %r9b
92	0001	4300C1		auub	ବାପଥ, ବାଅଥ
93			#n		
	00c4	01C3	<i>π</i> 11	addl	%eax, %ebx
		6601D8		addw	%bx, %ax
		4801CA		addq	%rcx, %rdx
		4501C6		addl	%r8d, %r14d
98					,
99	00cf	B8000000		movl	\$0, %eax
99		00			
GAS I	ISTI	NG Exercis	se_9-10.s	page 3	
				. 3	
100	00d4	4889EC		movq	%rbp, %rsp
101	00d7	5D		popq	%rbp
102	00d8	C3		ret	•

E.10 Program Flow Constructs

instruction n bytes offset decimal total 7462 2 62 64 +100 10 -1 749a 2 9с -100 0f8426010000 6 00000126 0000012c +300 0f84cefeffff fffffece fffffed4 -300

10 -2 Looking at the listing file:

18 0009 EB03 jmp here1 19 000b 83F601 xorl \$1, %esi # no jump, turn of bit 0 20 here1:

```
21 000e 488D0425 leaq here2, %rax 21 00000000
```

the second byte in the jmp herel instruction is 03, which is the number of bytes to the herel location.

Single-stepping through the program with gdb and examining the contents of rax, rip, and pointer shows that jmp *%rax and jmp *pointer use the full address, not just an offset.

10 -3 The program will probably crash. When the write function is called, it returns the number of characters written. Return values are placed in eax. Hence, the address is overwritten. In general, it is safer to use variables in the stack frame if their values must remain the same after another function is called.

```
10 -4
   1 # numerals.s
   2 # Displays the numerals on screen
   3 # Bob Plantz - 27 June 2009
       useful constant
                       STDOUT, 1
              . equ
       stack frame
              . equ
                       theNumeral,-1
              . equ
                       localSize, -16
       read only data
              .section
                         .rodata
   10
   11 newline:
              .byte
                       '\n'
   12
     # code
              .text
   14
              .globl
                       main
              .type
                       main, @function
   16
     main:
   17
                       %rbp
                                         # save caller's base pointer
              pushq
              movq
                       %rsp, %rbp
                                         # establish ours
   19
              addq
                       $localSize, %rsp # local vars.
   20
   21
              movb
                       $'0', theNumeral(%rbp) # initial numeral
     loop:
   23
                       $1, %edx
                                         # one character
   24
              movl
                       theNumeral(%rbp), %rsi # in this mem location
              leag
   25
              movl
                       $STDOUT, %edi
              call
                       write
   27
                       theNumeral(%rbp) # next char
              incb
   29
              cmpb
                       $'9', theNumeral(%rbp) # over 9 yet?
              jbe
                       loop
                                         # no, keep going
   31
      allDone:
   33
              movl
                       $1, %edx
                                          # do a newline for user
   34
                       $newline, %esi
              movl
   35
              movl
                       $STDOUT, %edi
              call
                       write
   37
   38
              movl
                       $0, %eax
                                        # return 0;
   40
                                         # delete local vars.
              movq
                       %rbp, %rsp
              popq
                       %rbp
                                         # restore caller's base pointer
   42
              ret
                                         # return to caller
```

11 newline:

```
10 -5
   1 # alphaUpper.s
   2 # Displays the upper case alphabet on screen
   3 # Bob Plantz - 27 June 2009
   4 # useful constant
              .equ
                      STDOUT, 1
   6 # stack frame
             .equ
                      theLetter,-1
                      localSize,-16
              .equ
   9 # read only data
              .section
                       .rodata
   11 newline:
                      '\n'
             .byte
   12
   13 # code
             .text
             .globl
                      main
   15
                      main, @function
             .type
   17 main:
                      %rbp
                                        # save caller's base pointer
             pushq
                      %rsp, %rbp
                                        # establish ours
             movq
   19
             addq
                      $localSize, %rsp # local vars.
   21
                      $'A', theLetter(%rbp) # initial alpha
             movb
   22
   23 loop:
             movl
                      $1, %edx
                                        # one character
  24
                      theLetter(%rbp), %rsi # in this mem location
             leaq
   25
             movl
                      $STDOUT, %edi
  26
             call
                      write
                      theLetter(%rbp) # next char
             incb
             cmpb
                      $'Z', theLetter(%rbp) # over Z yet?
   30
             jbe
                      loop
                                        # no, keep going
   31
   32
      allDone:
                      $1, %edx
                                        # do a newline for user
             movl
  34
             movl
                      $newline, %esi
                      $STDOUT, %edi
             movl
   36
             call
                      write
   37
   38
             movl
                      $0, %eax
                                       # return 0;
   40
             movq
                      %rbp, %rsp
                                       # delete local vars.
   41
                      %rbp
                                       # restore caller's base pointer
             popq
   42
                                       # return to caller
             ret
   43
10 -6
   1 # alphaLower.s
   2 # Displays the lower case alphabet on screen
   3 # Bob Plantz - 27 June 2009
   4 # useful constant
              .equ
                      STDOUT, 1
   6 # stack frame
              .equ
                      theLetter,-1
                      localSize, -16
              .equ
   9 # read only data
             .section .rodata
   10
```

```
.byte
                   '\n'
13 # code
          .text
           .globl
                  main
15
           .type
                   main, @function
17 main:
                   %rbp
                                     # save caller's base pointer
          pushq
                                     # establish ours
          movq
                   %rsp, %rbp
19
                   $localSize, %rsp # local vars.
          addq
21
          movb
                   $'a', theLetter(%rbp) # initial alpha
  loop:
23
                                     # one character
          movl
                   $1, %edx
24
                   theLetter(%rbp), %rsi # in this mem location
          leaq
25
                   $STDOUT, %edi
26
          movl
          call
                   write
27
28
          incb
                   theLetter(%rbp) # next char
          cmpb
                   $'z', theLetter(%rbp) # over z yet?
                                     # no, keep going
          jbe
                   loop
32
   allDone:
          movl
                   $1, %edx
                                     # do a newline for user
34
                   $newline, %esi
          movl
          movl
                   $STDOUT, %edi
36
          call
                   write
                   $0, %eax
                                    # return 0;
          movl
40
                                    # delete local vars.
          movq
                   %rbp, %rsp
41
                   %rbp
                                    # restore caller's base pointer
          popq
          ret
                                    # return to caller
```

```
10 -7 -
   1 /*
   * whileLoop.c
   * While loop multiplication.
      * Bob Plantz - 27 June 2009
   8 #include<stdio.h>
   10 int main ()
   11 {
         int x, y, z;
   12
         int i;
   14
         printf("Enter two integers: ");
         scanf("%i %i", &x, &y);
   16
   17
         z = x;
         i = 1;
         while (i < y)
   20
             z += x;
   21
             i++;
   22
   23
         }
```

```
printf("%i * %i = %i\n", x, y, z);
return 0;
6 }
```

With version 4.3.3 of gcc and no optimization (-00), they both use the same assembly language for the loop:

```
jmp
                 .L2
.L3:
        movl
                 -4(%rbp), %eax
        addl
                %eax, -12(%rbp)
        addl
                $1, -16(%rbp)
.L2:
                -8(%rbp), %eax
        movl
        cmpl
                %eax, -16(%rbp)
        jι
                 .L3
```

10 -8 After the program executes, the system prompt is displayed twice because the "return key" is still in the standard in buffer. This can be fixed by reading two characters.

```
1 /*
  * yesNo1a.c
   * Prompts user to enter a y/n response.
   * Bob Plantz - 27 June 2009
   */
8 #include <unistd.h>
10 static char response[2];
11
12 int main(void)
13 {
      register char *ptr;
14
15
      ptr = "Save changes? ";
16
17
      while (*ptr != '\0')
18
19
           write(STDOUT_FILENO, ptr, 1);
20
           ptr++;
      }
22
      read (STDIN_FILENO, response, 2);
24
      if (*response == 'y')
26
           ptr = "Changes saved.\n";
           while (*ptr != '\0')
           {
30
               write(STDOUT_FILENO, ptr, 1);
               ptr++;
           }
      }
34
      else
35
36
           ptr = "Changes discarded.\n";
37
```

47 noPrint:

```
while (*ptr != '\0')
   39
                  write(STDOUT_FILENO, ptr, 1);
                  ptr++;
   41
             }
   42
         }
   43
         return 0;
   44
   45 }
10 - 10 -
   1 # others.s
   2 # Displays all printable characters other than numerals
   3 # and letters.
   4 # Bob Plantz - 27 June 2009
   5 # useful constants
              .equ
                      STDOUT, 1
                      SPACE,' ' # lowest printable character
              .equ
                      SQUIGGLE,'~' # highest printable character
              .equ
    # stack frame
              .equ
                      theChar,-1
              .equ
                      localSize, -16
   11
   12 # read only data
              .section
                        .rodata
   14 newline:
              .byte
                      '\n'
   15
   16 # code
              .text
   17
              .globl main
                      main, @function
              .type
   19
     main:
                      %rbp
                                        # save caller's base pointer
             pushq
  21
                      %rsp, %rbp
                                        # establish ours
             movq
   22
             addq
                      $localSize, %rsp # local vars.
   23
  24
                      $SPACE, theChar(%rbp) # initial char
  25
             movb
     loop:
   26
             cmpb
                      $SQUIGGLE, theChar(%rbp) # all chars?
  27
             ja
                      allDone
                                       # yes, we're done
   28
  29
                      $'0', theChar(%rbp) # numeral?
             cmpb
   30
   31
             jb
                      print
                                       # no, print it
             cmpb
                      $'9', theChar(%rbp)
   32
                      noPrint
             jbe
                                       # yes, don't print it
                      $'A', theChar(%rbp) # upper case?
             cmpb
  34
             jb
                      print
                                       # no, print it
                      $'Z', theChar(%rbp)
             cmpb
   36
             jbe
                      noPrint
                                       # yes, don't print it
             cmpb
                      $'a', theChar(%rbp) # lower case?
             jb
                      print
                                       # no, print it
                      $'z', theChar(%rbp)
             cmpb
   40
  41
             jbe
                      noPrint
   42 print:
             movl
                      $1, %edx
                                       # one character
                      theChar(%rbp), %rsi # in this mem location
             leag
   44
             movl
                      $STDOUT, %edi # standard out
   45
             call
                      write
```

```
incb
                      theChar(%rbp)
                                       # next char
                      loop
                                       # check at top of loop
             jmp
   49
      allDone:
  51
             movl
                      $1, %edx
                                       # do a newline for user
             movl
                      $newline, %esi
   53
                      $STDOUT, %edi
             movl
             call
                      write
   55
             movl
                      $0, %eax
                                       # return 0;
   57
                                       # delete local vars.
                      %rbp, %rsp
             movq
   59
                      %rbp
                                       # restore caller's base pointer
             popq
                                       # return to caller
             ret
10 -11
   1 # incChars.s
   2 # Prompts user to enter a text string, then changes each
   3 # character to the next higher one.
   4 # Bob Plantz - 27 June 2009
   5 # useful constants
                      STDIN, 0
              .equ
              .equ
                      STDOUT, 1
   7
                      SPACE,''
              .equ
                                      # lowest printable character
                      SQUIGGLE,'~'
                                      # highest printable character
              .equ
   10 # stack frame
              .equ
                      theString, -256
   11
                      localSize, -256
              .equ
   13 # read only data
              .section
                        .rodata
   15 prompt:
             .string "Enter a string of characters: "
   17 msg:
              .string "Incrementing each character: "
   18
   19 newline:
             .byte
                      '\n'
   20
  21 # code
              .text
   22
             .globl main
   23
                      main, @function
   24
             .type
   25 main:
             pushq
                      %rbp
                                       # save caller's base pointer
                                       # establish ours
                      %rsp, %rbp
             movq
                      $localSize, %rsp # local vars.
             addq
   28
                      $prompt, %esi
             movl
                                       # prompt user
   30
   31 promptLup:
             cmpb
                      $0, (%esi)
                                       # end of string?
   32
             jе
                      getString
                                       # yes, get user input
   33
                      $1, %edx
                                       # no, one character
             movl
   34
                      $STDOUT, %edi
             movl
   35
             call
                      write
             incl
                      %esi
                                       # next char
                      promptLup
                                       # check at top of loop
             jmp
   38
   40 getString:
   41
             leag
                      theString(%rbp), %rsi # place to put user input
```

```
$1, %edx
                                     # one character
           movl
                   $STDIN, %edi
           movl
43
           call
                   read
  readLup:
45
           cmpb
                   $'\n', (%rsi)
                                     # end of input?
46
                   incChars
                                     # yes, process the string
           jе
47
                   %rsi
                                     # next char
           incq
                                     # one character
           movl
                   $1, %edx
49
           movl
                   $STDIN, %edi
           call
                   read
51
           jmp
                   readLup
                                     # check at top of loop
52
54 incChars:
          movb
                   $0, (%rsi)
                                     # null character for C string
                   theString(%rbp), %rsi # pointer to the string
          leaq
  incLoop:
                   $0, (%rsi)
                                     # end of string?
           cmpb
58
                                     # yes, display the results
           jе
                   doDisplay
                                     # change character
           incb
                   (%rsi)
60
           cmpb
                   $SQUIGGLE, (%rsi) # did we go too far?
           jbe
                   okay
                                     # no
62
           movb
                   $SPACE, (%rsi) # yes, wrap to beginning
64 okay:
                                     # next char
                   %rsi
           incq
                                     # check at top of loop
           jmp
                   incLoop
66
68 doDisplay:
                   $msg, %esi
                                     # print message for user
70 dispLoop:
           cmpb
                   $0, (%esi)
                                     # end of string?
71
                   showString
                                     # yes, show results
72
           jе
           movl
                   $1, %edx
                                     # no, one character
73
          movl
                   $STDOUT, %edi
74
           call
                   write
75
                                     # next char
          incl
                   %esi
                                     # check at top of loop
           jmp
                   dispLoop
77
  showString:
                   theString(%rbp), %rsi # pointer to the string
           leaq
  showLoop:
81
                   $0, (%rsi)
                                    # end of string?
           cmpb
                   allDone
          jе
                                     # yes, get user input
83
          movl
                   $1, %edx
                                     # no, one character
           movl
                   $STDOUT, %edi
85
           call
                   write
                   %rsi
                                     # next char
           incq
                                     # check at top of loop
           jmp
                   showLoop
88
   allDone:
90
           movl
                   $1, %edx
                                     # do a newline for user
91
           movl
                   $newline, %esi
92
                   $STDOUT, %edi
93
           movl
           call
                   write
94
           movl
                   $0, %eax
                                     # return 0;
96
                                     # delete local vars.
                   %rbp, %rsp
97
           movq
```

```
# restore caller's base pointer
                      %rbp
             popq
                                       # return to caller
             ret
10 -12
   1 # decChars.s
   2 # Prompts user to enter a text string, then changes each
   3 # character to the next lower one.
   4 # Bob Plantz - 27 June 2009
   5 # useful constants
             .equ
                      STDIN, 0
                      STDOUT, 1
              .equ
                      SPACE,''
              .equ
                                     # lowest printable character
                      SQUIGGLE,'~' # highest printable character
              .equ
   10 # stack frame
             .equ
                      theString,-256
   11
                      localSize, -256
              .equ
   12
   13 # read only data
             .section
                       .rodata
   14
   15 prompt:
             .string "Enter a string of characters: "
   16
   17 msg:
             .string "Decrementing each character: "
   19 newline:
              .byte
                      '\n'
   21 # code
   22
             .text
             .globl
                      main
   23
             .type
                      main, @function
   25 main:
                      %rbp
                                       # save caller's base pointer
             pushq
             movq
                      %rsp, %rbp
                                       # establish ours
   27
                      $localSize, %rsp # local vars.
             addq
   28
   29
             movl
                      $prompt, %esi
                                       # prompt user
   30
    promptLup:
             cmpb
                      $0, (%esi)
                                       # end of string?
   32
             jе
                      getString
                                       # yes, get user input
   33
             movl
                      $1, %edx
                                       # no, one character
   34
                      $STDOUT, %edi
             movl
   35
             call
                      write
   36
   37
             incl
                      %esi
                                       # next char
             jmp
                      promptLup
                                       # check at top of loop
   38
   40 getString:
                      theString(%rbp), %rsi # place to put user input
             leaq
   41
                                       # one character
             movl
                      $1, %edx
   42
             movl
                      $STDIN, %edi
             call
                      read
   44
     readLup:
   45
                      $'\n', (%rsi)
                                       # end of input?
   46
             cmpb
   47
             jе
                      decChars
                                       # yes, process the string
                      %rsi
             incq
                                       # next char
   48
             movl
                      $1, %edx
                                       # one character
   49
             movl
                      $STDIN, %edi
   50
             call
                      read
  51
                                       # check at top of loop
   52
             jmp
                      readLup
   53
```

```
54 decChars:
                      $0, (%rsi)
                                       # null character for C string
             movb
             leaq
                      theString(%rbp), %rsi # pointer to the string
     decLoop:
  57
             cmpb
                      $0, (%rsi)
                                       # end of string?
   58
                      doDisplay
                                       # yes, display the results
             jе
   59
                                       # change character
             decb
                      (%rsi)
                      $SPACE, (%rsi) # did we go too far?
             cmpb
   61
             jae
                      okay
                                       # no
                      $SQUIGGLE, (%rsi) # yes, wrap to beginning
             movb
   63
     okay:
   64
                      %rsi
                                       # next char
             incq
             jmp
                      decLoop
                                       # check at top of loop
   66
   67
     doDisplay:
             movl
                      $msg, %esi
                                       # print message for user
     dispLoop:
                                       # end of string?
                      $0, (%esi)
   71
             cmpb
                      showString
                                       # yes, show results
             iе
   72
                      $1, %edx
             movl
                                       # no, one character
             movl
                      $STDOUT, %edi
   74
             call
                      write
                                       # next char
             incl
                      %esi
   76
                      dispLoop
                                       # check at top of loop
             jmp
     showString:
             leag
                      theString(%rbp), %rsi # pointer to the string
   80
   81 showLoop:
                      $0, (%rsi)
                                       # end of string?
             cmpb
   82
             jе
                      allDone
                                       # yes, get user input
   83
                      $1, %edx
                                       # no, one character
   84
             movl
             movl
                      $STDOUT, %edi
   85
             call
                      write
             incq
                      %rsi
                                       # next char
   87
                                       # check at top of loop
             jmp
                      showLoop
      allDone:
             movl
                      $1, %edx
                                       # do a newline for user
  91
             movl
                      $newline, %esi
                      $STDOUT, %edi
             movl
  93
                      write
             call
  95
                      $0, %eax
                                       # return 0;
             movl
             movq
                      %rbp, %rsp
                                       # delete local vars.
   97
             popq
                      %rbp
                                       # restore caller's base pointer
                                       # return to caller
             ret
10 -13
   1 # echoN.s
   2 # Prompts user to enter a single charcter.
   3 # The character is echoed. If it is a numeral, say N,
   4 # it is echoed N+1 times
```

```
5 # Bob Plantz - 27 June 2009
6 # useful constants
          .equ
                  STDIN,0
                  STDOUT, 1
          .equ
9 # stack frame
```

```
count,-8
10
           . equ
                   response, -4
           .equ
11
           . equ
                   localSize,-16
13 # read only data
           .section
                     . rodata
15 instruct:
           .ascii "A single numeral, N, is echoed N+1 times, other characters "
           .asciz "are\nechoed once. 'q' ends program.\n\n"
17
18 prompt:
           .string "Enter a single character: "
19
20 msg:
           .string "You entered: "
^{21}
22 bye:
           .string "End of program.\n"
23
24 newline:
                    '\n'
           .byte
25
26 # code
           .text
           .globl
                   main
28
           .type
                   main, @function
30 main:
                   %rbp
                                     # save caller's base pointer
           pushq
31
           movq
                   %rsp, %rbp
                                     # establish ours
32
           addq
                   $localSize, %rsp # local vars
34
           movl
                   $instruct, %esi
                                       # instruct user
36 instructLup:
           cmpb
                   $0, (%esi)
                                     # end of string?
37
                   runLoop
                                     # yes, run program
           jе
38
           movl
                   $1, %edx
                                     # no, one character
39
                   $STDOUT, %edi
40
           movl
           call
                   write
41
           incl
                   %esi
                                     # next char
42
                   instructLup
                                     # check at top of loop
           jmp
43
  runLoop:
45
           movl
                   $prompt, %esi
                                     # prompt user
  promptLup:
47
                   $0, (%esi)
                                     # end of string?
           cmpb
                   getChar
                                     # yes, get user input
           jе
49
                   $1, %edx
                                     # no, one character
           movl
                   $STDOUT, %edi
          movl
51
           call
                   write
           incl
                   %esi
                                     # next char
53
           jmp
                   promptLup
                                     # check at top of loop
54
55
  getChar:
                   response(%rbp), %rsi # place to put user input
           leaq
57
           movl
                   $2, %edx
                                     # include newline
58
           movl
                   $STDIN, %edi
           call
60
61
           movb
                   response(%rbp), %al
                                          # get input character
62
                   $'q', %al
                                     # if 'q'
           cmpb
                   allDone
                                     # end program
           jе
64
     # Otherwise, set up count loop
```

```
$1, count(%rbp) # assume not numeral
           movl
                    $'0', %al
                                     # check for numeral
           cmpb
67
           jb
                    echoLoop
           cmpb
                    $'9', %al
           ja
                    echoLoop
           andl
                    $0xf, %eax
                                     # numeral, convert to int
71
                                     # echo N+1 times
           incl
                    %eax
           movl
                    %eax, count(%rbp) # save counter
73
74 echoLoop:
                    $msg, %esi
                                     # pointer to the string
           movl
  msgLoop:
                    $0, (%esi)
                                     # end of string?
           cmpb
                    doChar
                                     # yes, show character
           jе
78
           movl
                    $1, %edx
                                     # no, one character
79
                    $STDOUT, %edi
           movl
           call
                    write
           incl
                    %esi
                                     # next char
82
                                     # check at top of loop
           jmp
                    msgLoop
84
  doChar:
           movl
                    $1, %edx
                                     # one character
86
                    response(%rbp), %rsi # in this mem location
           leaq
                    $STDOUT, %edi
           movl
           call
                    write
90
           movl
                    $1, %edx
                                     # and a newline
           movl
                    $newline, %esi
92
                    $STDOUT, %edi
           movl
93
           call
                    write
94
95
           decl
                    count (%rbp)
                                     # count --
           jne
                    echoLoop
                                     # continue if more to do
           jmp
                    runLoop
                                     # else get next character
  allDone:
                    $bye, %esi
                                     # ending message
           movl
101
  doneLup:
           cmpb
                    $0, (%esi)
                                     # end of string?
103
                    cleanUp
                                     # yes, get user input
           jе
                    $1, %edx
                                     # no, one character
           movl
105
                    $STDOUT, %edi
           movl
           call
                    write
107
                                     # next char
108
           incl
                    %esi
           jmp
                    doneLup
                                     # check at top of loop
109
110
111 cleanUp:
                    $0, %eax
                                     # return 0;
112
           movl
                    %rbp, %rsp
                                     # delete local vars.
           movq
113
           popq
                    %rbp
                                      # restore caller's base pointer
114
           ret
                                     # return to caller
115
```

E.11 Writing Your Own Functions

```
11 -3 _____ # helloworld.s
```

^{2 #} Hello world program to test writeStr function

```
3 # Bob Plantz - 27 June 2009
5 hiworld:
          .string "Hello, world!\n"
           .text
           .globl main
10
11 main:
          pushq
                   %rbp
                                    # save caller base pointer
12
          movq
                   %rsp, %rbp
                                    # establish our base pointer
13
14
          movl
                   $hiworld, %edi # address of string to print
15
                   writeStr
                                    # write it
          call
16
17
          movl
                   $0, %eax
                                    # return 0;
                   %rbp, %rsp
                                    # delete local variables
          movq
19
                                    # restore caller base pointer
                   %rbp
          popq
20
          ret
21
1 # writeStr.s
2 # Writes a C-style text string to the standard output (screen).
3 # Bob Plantz - 27 June 2009
5 # Calling sequence:
          rdi <- address of string to be written
6 #
7 #
          call
                   writestr
8 # returns number of characters written
10 # Useful constant
                   STDOUT, 1
          .equ
12 # Stack frame, showing local variables and arguments
          .equ
                   stringAddr, -16
13
                   count,-4
14
          .equ
          .equ
                   localSize, -16
15
16
           .text
          .globl writeStr
                   writeStr, @function
19
          .type
20 writeStr:
          pushq
                   %rbp
                                     # save base pointer
21
                   %rsp, %rbp
                                     # new base pointer
          movq
                   $localSize, %rsp # local vars. and arg.
          addq
23
                   %rdi, stringAddr(%rbp) # save string pointer
          movq
25
          movl
                   $0, count(%rbp) # count = 0;
27 writeLoop:
                   stringAddr(%rbp), %rax # get current pointer
          movq
          cmpb
                   $0, (%rax)
                                     # at end yet?
29
          jе
                   done
                                     # yes, all done
30
31
          movl
                   $1, %edx
                                     # no, write one character
                   %rax, %rsi
                                     # points to current char
          movq
33
          movl
                   $STDOUT, %edi
                                     # on the screen
          call
                   write
35
          incl
                   count (%rbp)
                                     # count++;
```

```
incl
                      stringAddr(%rbp) # stringAddr++;
                                        # and check for end
             jmp
                      writeLoop
   38
   39 done:
             movl
                      count(%rbp), %eax
                                             # return count
   40
                                       # restore stack pointer
             movq
                      %rbp, %rsp
   41
             popq
                      %rbp
                                       # restore base pointer
   42
                                       # back to caller
             ret
11 -4
   1 # echoString.s
   2 # Prompts user to enter a string, then echoes it.
   3 # Bob Plantz - 27 June 2009
   4 # stack frame
              .eau
                      theString, -256
              .equ
                      localSize, -256
   7 # read only data
              .data
   9 usrprmpt:
              .string "Enter a text string:\n"
   11 usrmsq:
   12
              .string "You entered:\n"
   13 newline:
              .string "\n"
   14
   15 # code
              .text
   16
              .globl main
   17
              .type
                      main, @function
   18
     main:
                                         # save caller base pointer
             pushq
                      %rbp
   20
                      %rsp, %rbp
                                         # establish our base pointer
   21
             movq
                      $localSize, %rsp # local vars.
             addq
  22
             movl
                      $usrprmpt, %edi
                                         # tell user what to do
  24
             call
                      writeStr
             leag
                      theString(%rbp), %rdi # place for user response
  27
             call
                      readLn
   28
             movl
                      $usrmsg, %edi
                                         # echo for user
             call
                      writeStr
  31
                      theString(%rbp), %rdi
             leaq
   32
                      writeStr
             call
  33
             movl
                      $newline, %edi
                                         # some formatting for user
   35
                      writeStr
             call
  37
                      $0, %eax
                                         # return 0;
             movl
             movq
                                         # delete local variables
                      %rbp, %rsp
   39
                                         # restore caller base pointer
             popq
                      %rbp
             ret
   41
```

```
1 # readLnSimple.s
2 # Reads a line (through the '\n' character from standard input. Deletes
3 # the '\n' and creates a C-style text string.
4 # Bob Plantz - 27 June 2009
5
6 # Calling sequence:
```

```
7 #
          rdi <- address of place to store string
s #
          call
    returns number of characters read (not including NUL)
    Useful constant
11
           .equ
                   STDIN, 0
12
  # Stack frame, showing local variables and arguments
                   stringAddr, -16
          .equ
14
           .equ
                   count,-4
15
                   localSize, -16
           .equ
16
17
           .text
18
           .globl
                   readLn
19
                   readLn, @function
20
           .type
21
 readLn:
          pushq
                   %rbp
                                     # save base pointer
          movq
                   %rsp, %rbp
                                     # new base pointer
23
                   $localSize, %rsp # local vars. and arg.
          addq
25
          movq
                   %rdi, stringAddr(%rbp) # save string pointer
          movl
                   $0, count(%rbp)
                                        # count = 0;
27
                   $1, %edx
                                   # read one character
          movl
29
                   stringAddr(%rbp), %rsi # into storage area
          movq
                                             # from kevboard
          movl
                   $STDIN. %edi
31
          call
                   read
  readLoop:
33
                   stringAddr(%rbp), %rax # get pointer
          movq
34
                   $'\n', (%rax)
                                            # return key?
          cmpb
35
          jе
                   endOfString
                                            # yes, mark end of string
36
                   stringAddr(%rbp) # no, move pointer to next byte
          incq
37
          incl
                   count (%rbp)
                                    # count++;
          movl
                   $1, %edx
                                    # get another character
                   stringAddr(%rbp), %rsi # into storage area
          movq
40
          movl
                   $STDIN, %edi
                                             # from keyboard
          call
                   read
42
                   readLoop
                                    # and look at it
          jmp
44
  endOfString:
45
                   stringAddr(%rbp), %rax # current pointer
          movq
46
                   $0, (%rax)
                                            # mark end of string
          movb
48
                   count(%rbp), %eax # return count;
          movl
          movq
                   %rbp, %rsp
                                    # restore stack pointer
50
          popq
                   %rbp
                                    # restore base pointer
51
                                    # back to OS
          ret
```

See above for writeStr.

11 -5 Note: Some students will try to create a nested loop, the outer one being executed twice. But the display messages are not nearly as nice, unless the student uses some "goto" statements. In my opinion, two separate change case loops is better software engineering because it allows maximum flexibility in the user messages. The user will generally complain about what is seen on the screen, not the cleverness of the code.

^{1 #} changeCase.s

^{2 #} Prompts user to enter a string, echoes it, changes case of alpha

```
3 # characters, displays them, changes them back, then displays result.
4 # Bob Plantz - 27 June 2009
6 # Stack frame
           .equ
                   response, -256
                   localSize, -256
           .equ
           .data
10 usrprmpt:
           .string "Enter a text string:\n"
11
12 usrmsq:
           .string "You entered:\n"
14 chngmsg:
           .string "Changing the case gives:\n"
15
16 newline:
17
           .string "\n"
           .text
19
           .globl
                  main
20
                   main, @function
           .type
21
  main:
          pushq
                   %rbp
                                       # save caller base pointer
23
                                       # establish our base pointer
          movq
                   %rsp, %rbp
24
                   $localSize, %rsp # local vars
          addq
25
                   $usrprmpt, %edi
                                      # tell user what to do
          movl
27
          call
                   writeStr
                   $256, %esi
                                      # max number of chars
          movl
                   response(%rbp), %rdi # place to store them
          leaq
31
          call
                   readLn
32
          movl
                   $usrmsg, %edi
                                       # echo for usr
34
          call
                   writeStr
35
                   response(%rbp), %rdi
          leaq
          call
                   writeStr
38
          movl
                   $newline, %edi
                                      # some formatting for user
          call
                   writeStr
42
                   response(%rbp), %rax
                                             # address of user's text string
          leaq
44 changeCaseLup:
                                      # end of string
          cmpb
                   $0, (%rax)
          jе
                   showChange
                                       # yes, show what we've done
46
          cmpb
                   $'A', (%rax)
                                      # no, see if it's an alpha character
47
                                      # lower than 'A'
          jb
                   notAlpha
                   $'Z', (%rax)
                                      # check if it's upper case
          cmpb
49
          jbe
                   isAlpha
                                      # it is
50
          cmpb
                   $'a', (%rax)
                                      # now check lower case range
51
          jb
                   notAlpha
                   $'z', (%rax)
          cmpb
53
          ja
                   notAlpha
55 isAlpha:
                   $0x20, (%rax)
                                      # flip the case bit
          xorb
57 notAlpha:
                                       # next character
          incq
                   %rax
```

```
jmp
                   changeCaseLup
                                      # and check for end to string
59
60
  showChange:
           movl
                   $chngmsg, %edi
                                      # tell user about it
62
           call
                   writeStr
64
                   response(%rbp), %rdi # show the changes
           leag
           call
                   writeStr
           movl
                   $newline, %edi
                                      # some formatting for user
           call
                   writeStr
           leag
                   response(%rbp), %rax
                                             # address of user's text string
71
72 restoreLup:
73
           cmpb
                   $0, (%rax)
                                      # end of string
                   show0rig
           jе
                                      # yes, we're back to original
                   $'A', (%rax)
                                      # no, see if it's an alpha character
           cmpb
75
                                      # lower than 'A'
           jb
                   notLetter
                                      # check if it's upper case
                   $'Z', (%rax)
           cmpb
           jbe
                   isLetter
                                      # it is
           cmpb
                   $'a', (%rax)
                                      # now check lower case range
79
           jb
                   notLetter
                   $'z', (%rax)
           cmpb
81
                   notLetter
           ja
83 isLetter:
           xorb
                   $0x20, (%rax)
                                      # flip the case bit
85 notLetter:
                                      # next character
           incq
                   %rax
                                      # and check for end to string
                   restoreLup
           jmp
87
  showOrig:
           movl
                   $usrmsg, %edi
                                     # show original version
           call
                   writeStr
91
92
                   response(%rbp), %rdi # should be restored
           leaq
           call
                   writeStr
94
           movl
                   $newline, %edi
                                      # some formatting for user
           call
                   writeStr
                   $0, %eax
                                      # return 0;
           movl
                                      # delete local variables
           mova
                   %rbp, %rsp
100
                                      # restore caller base pointer
           popq
                   %rbp
           ret
102
```

See above for writeStr and readLn.

```
11 -6

1 # echoString2.s
2 # Prompts user to enter a string, then echoes it.
3 # Bob Plantz - 27 June 2009
4 # stack frame
5 .equ theString,-256
6 .equ localSize,-256
7 # Length of the array. Do not make this larger than 255.
8 # I have used a small number to test readLn for removing
9 # extra characters from the keyboard buffer.
```

19

```
arrayLngth,4
           .equ
11 # read only data
           .data
13 usrprmpt:
           .string "Enter a text string:\n"
15 usrmsg:
           .string "You entered:\n"
17 newline:
           .string "\n"
19 # code
          .text
           .globl main
21
22 main:
                                      # save caller base pointer
                   %rbp
23
          pushq
24
          movq
                   %rsp, %rbp
                                      # establish our base pointer
                   $localSize, %rsp # local vars.
          addq
25
26
                   $usrprmpt, %edi
                                     # tell user what to do
          movl
27
          call
                   writeStr
28
          movl
                   $arrayLngth, %esi # "length" of array
30
                   theString(%rbp), %rdi # place for user response
          leaq
          call
                   readLn
32
                   $usrmsa. %edi
                                      # echo for user
          movl
34
          call
                   writeStr
          leag
                   theString(%rbp), %rdi
          call
                   writeStr
38
          movl
                   $newline, %edi
                                      # some formatting for user
39
          call
                   writeStr
41
          movl
                   $0, %eax
                                      # return 0;
42
                   %rbp, %rsp
                                      # delete local variables
          movq
43
                                      # restore caller base pointer
                   %rbp
          popq
          ret
45
1 # readLn.s
2 # Reads a line (through the '\n' character from standard input. Deletes
3 # the '\n' and creates a C-style text string.
4 # Bob Plantz - 27 June 2009
6 # Calling sequence:
7 #
          rsi <- length of char array
          rdi <- address of place to store string
8 #
          call
                   readLn
10 # returns number of characters read (not including NUL)
12 # Useful constant
           .equ
                   STDIN, 0
14 # Stack frame, showing local variables and arguments
           .equ
                   maxLength, -24
15
                   stringAddr, -16
           .equ
16
           .equ
                   count,-4
17
                   localSize, -32
18
           .equ
```

```
.text
20
           .globl
                   readLn
21
           .type
                   readLn, @function
  readLn:
23
          pushq
                   %rbp
                                     # save base pointer
24
          movq
                   %rsp, %rbp
                                     # new base pointer
25
                   $localSize, %rsp # local vars. and arg.
          addq
27
          movq
                   %rsi, maxLength(%rbp) # save max storage space
                   %rdi, stringAddr(%rbp) # save string pointer
          movq
29
                   $0, count(%rbp)
                                        # count = 0;
          movl
31
          subq
                   $1, maxLength(%rbp) # leave room for NUL char
32
33
          movl
                   $1, %edx
                                   # read one character
34
                   stringAddr(%rbp), %rsi # into storage area
          movq
          movl
                   $STDIN, %edi
                                            # from keyboard
36
          call
                   read
37
  readLoop:
38
                   stringAddr(%rbp), %rax # get pointer
          movq
                                           # return key?
          cmpb
                   $'\n', (%rax)
40
          jе
                   endOfString
                                           # yes, mark end of string
41
          movl
                   count(%rbp), %eax
                                           # current count
42
                   %eax, maxLength(%rbp) # is caller's array full?
          cmpl
          jе
                   skipStore
                                           # yes, store any more chars
44
          incq
                   stringAddr(%rbp) # no, move pointer to next byte
46
                   count (%rbp)
          incl
                                    # count++;
47
  skipStore:
48
          movl
                   $1, %edx
                                    # get another character
49
                   stringAddr(%rbp), %rsi # into storage area
50
          movq
          movl
                   $STDIN, %edi
                                            # from keyboard
51
          call
                   read
52
          jmp
                   readLoop
                                    # and look at it
53
  endOfString:
55
                   stringAddr(%rbp), %rax # current pointer
          movq
          movb
                   $0, (%rax)
                                           # mark end of string
57
                   count(%rbp), %eax # return count;
          movl
59
                   %rbp, %rsp
                                    # restore stack pointer
          movq
                                    # restore base pointer
          popq
                   %rbp
61
                                    # back to OS
          ret
```

See above for writeStr.

E.12 Bit Operations; Multiplication and Division

```
12 -1
   1 # binary2int.s
   2 # Prompts the user to enter an integer in binary, then displays
   3 # it in decimal.
   4 # Bob Plantz - 12 June 2008
   6 # Stack frame
             .equ
                      theInt,-40
                      buffer, -36
             .equ
             .equ
                      localSize, -48
   10 # Read only data
             .section
                        .rodata
   12 prompt:
             .asciz "Please enter an integer in binary: "
   14 displayFmt:
             .asciz "In decimal: %d\n"
   16 # Code
             .text
   17
             .globl main
   18
             .type
                     main, @function
   20 main:
             pushq
                      %rbp
                                        # save frame pointer
  21
                      %rsp, %rbp
                                        # new frame pointer
             movq
  22
             addq
                      $localSize, %rsp # local vars.
   23
  24
     # Tell user what to do.
                      $prompt, %edi
                                        # prompt user
   26
             call
                      writeStr
     # Get binary number
             movl
                      $36, %esi
                                        # max number of chars
                      buffer(%rbp), %rax # place for user input
             leag
   31
                      %rax, %rdi
   32
             movq
             call
                      readLn
                                        # get user input string
   33
     # convert text string from zeros and ones to int format
                      buffer(%rbp), %rdi # start of string
             leag
             movl
                      $0, %esi
                                        # use for int
     convertloop:
             movb
                      (%rdi), %al
                                        # get char
                      $0, %al
                                        # null char?
             cmpb
                      done_convert
                                        # yes, done with conversion
             jе
   41
             andb
                      $0x0f, %al
                                        # no, convert char to 8-bit byte
             shll
                      $1, %esi
                                        # make room for it
   43
             orb
                      %al, %sil
                                        # add it in
             incq
                      %rdi
                                        # next char
   45
                                        # and do the next one
             jmp
                      convertloop
   47 done_convert:
                      %esi, theInt(%rbp) # store result
             movl
     # display in decimal
             movl
                      theInt(%rbp), %esi # int to display
   51
             movl
                      $displayFmt, %edi # format string
                      $0, %eax
             movl
             call
                      printf
   54
```

```
55
           movl
                   $0, %eax
                                    # return 0
56
           movq
                   %rbp, %rsp
                                     # restore stack pointer
                   %rbp
                                     # restore frame pointer
           popq
58
           ret
                                     # back to OS
```

See Section E.11 for writeStr and readLn.

48

```
12 - 2
   1 # int2binary.s
   2 # Converts decimal int to binary
   3 # Bob Plantz - 27 June 2009
   5 # Stack frame
             .equ
                      myInt,-44
                      counter, -40
             .equ
             .equ
                      buffer,-36
                      localSize, -48
             . equ
   10 # Read only data
             .section .rodata
   12 prompt:
             .string "Enter an integer: "
   14 format:
             .string "%i"
   16 msq1:
             .string "The stored number is "
   17
   18 msg2:
             .string " in binary.\n"
   20 # Code
             .text
              .globl main
   22
                      main, @function
             .type
   23
   24 main:
             pushq
                      %rbp
                                       # save frame pointer
   25
                      %rsp, %rbp
                                       # new frame pointer
   26
             movq
             addq
                      $localSize, %rsp # local vars.
   27
             movl
                      $prompt, %edi # prompt user
                      writeStr
             call
   30
                      myInt(%rbp), %rsi # get user's int
   31
             leag
                      $format, %edi
   32
             movl
             movl
                      $0, %eax
   33
             call
                      scanf
   34
   35
     # Generate text string of ones and zeros
                      buffer(%rbp), %rax # place for text string
             leag
  37
             movl
                      $32, counter(%rbp) # 32 bits
   39 convertloop:
                      $1, myInt(%rbp) # move high order bit to CF
             shll
   40
             jnc
                      zero
                                       # it's zero
  41
             movb
                      $'1', (%rax)
                                       # one character
   42
             jmp
                      cont
                                       # go on
   43
   44 zero:
                      $'0', (%rax)
                                       # zero character
             movb
   45
   46 cont:
                                       # next char position
             incq
                      %rax
   47
             decl
                      counter(%rbp)
                                       # counter --
```

```
# keep going until counter == 0
           jg
                   convertloop
50
           movb
                   $0, (%rax)
                                     # store NULL
52
  # display in binary
          movl
                   $msg1, %edi
                                     # nice message for user
54
                   writeStr
          call
           leag
                   buffer(%rbp), %rdi # address of our string
           call
                   writeStr
58
                   $msg2, %edi
                                     # nice message for user
          movl
           call
                   writeStr
61
62
63
           movl
                   $0, %eax
                                     # return 0
                                     # restore stack pointer
           movq
                   %rbp, %rsp
64
           popq
                   %rbp
                                     # restore frame pointer
65
                                     # back to OS
           ret
```

See Section E.11 for writeStr.

35

```
12 -3
   1 # multiply.s
   2 # Gets two 16-bit integers from user and computes their product.
   3 # Bob Plantz - 27 June 2009
   5 # Stack frame
                      multiplier,-8
              .equ
                      multiplicand, -4
              .equ
                      localSize, -16
              .equ
     # Read only data
              .section
                        .rodata
   11 prompt:
              .string "Enter an integer (0 - 65535): "
   12
   13 printformat:
              .string "%hu times %hu = %u\n"
   14
   15 scanformat:
              .string "%hu"
   16
   17 # Code
             .text
   18
   19
              .globl main
              .type
                      main, @function
  20
   21 main:
                                         # save frame pointer
             pushq
                      %rbp
  22
                      %rsp, %rbp
                                          # new frame pointer
             movq
             addq
                      $localSize, %rsp # local vars.
  24
     # prompt user
   26
                      $prompt, %edi
                                          # message address
             movl
   27
             movl
                      $0, %eax
   28
             call
                      printf
     # get first integer
                      multiplicand(%rbp), %rsi # place to store it
             leaq
   32
             movl
                      $scanformat, %edi # scanf formatting string
   33
             movl
                      $0, %eax
   34
             call
                      scanf
```

```
get second integer
37
          movl
                   $prompt, %edi
                                      # message address
          movl
                   $0, %eax
          call
                   printf
41
                   multiplier(%rbp), %rsi # place to store it
          leag
                   $scanformat, %edi # scanf formatting string
          movl
43
          movl
                   $0, %eax
          call
                   scanf
45
47 # now multiply them
          movw
                   multiplier(%rbp), %si # pass by value
48
          movw
                   multiplicand(%rbp), %di
49
          call
                   mul16
50
  # at this point, the 32-bit result is in eax
                   %eax, %ecx
          movl
                                       # result
                   multiplier(%rbp), %edx
                                             # one number
          movl
54
                   multiplicand(%rbp), %esi # other number
          movl
          movl
                   $printformat, %edi # printf formatting string
56
          movl
                   $0, %eax
                   printf
          call
          movl
                   $0, %eax
                                    # return 0
60
          movq
                   %rbp, %rsp
                                    # restore stack pointer
                   %rbp
                                    # restore base pointer
          popq
62
          ret
                                    # back to OS
1 # mul16.s
2 # Multiplies two 16-bit integers and returns 32-bit result
    Bob Plantz - 27 June 2009
    Calling sequence
6 #
          si <- multiplier
7 #
          di <- multiplicand
8 #
          call mul16
9 #Code
          .text
10
           .globl
                   mul16
11
                   mul16, @function
           .type
13 mul16:
                                    # save frame pointer
          pushq
                   %rbp
          movq
                   %rsp, %rbp
                                    # new frame pointer
15
          movw
                   %si, %ax
                                    # move for multiply
17
          mulw
                   %di
18
19
                   $16, %edx
                                    # shift high-order part of answer
          sal
                                    # into high-order part of the regiser
          andl
                   $0xffff, %eax
                                    # make sure high-order part of eax is clear
22
                   %edx, %eax
                                    # make 32-bit result for return
          orl
23
                   %rbp, %rsp
                                    # restore stack pointer
          movq
          popq
                   %rbp
                                    # restore frame pointer
26
          ret
                                    # back to caller
```

```
12 -4 ·
   1 # divide.s
   2 # Gets two 32-bit integers from user and computes quotient
   3 # of the first divided by the second.
   4 # Bob Plantz - 27 June 2009
   6 # Stack frame
             .equ
                      divisor,-8
                      dividend, -4
             .equ
             .equ
                      localSize, -16
   10 # Read only data
             .section .rodata
   11
   12 prompt:
             .asciz "Enter an integer (0 - 4294967295): "
   13
   14 printformat:
             .asciz
                     "%u div %u = %u\n"
   16 scanformat:
                      "%u"
             .asciz
   17
   18 # Code
             .text
   19
             .globl main
             .type
                      main, @function
  21
  22 main:
                      %rbp
                                       # save frame pointer
             pushq
  23
             movq
                      %rsp, %rbp
                                       # new frame pointer
  24
             addq
                      $divisor, %rsp # local vars.
   25
  27 # prompt user
             movl
                      $prompt, %edi
                                       # message address
  28
                      $0, %eax
             movl
   29
             call
                      printf
   30
   31
   32 # get first integer
                      dividend(%rbp), %rsi # place to store it
             leaq
                      $scanformat, %edi
                                             # scanf formatting string
             movl
  34
                      $0, %eax
             movl
             call
                      scanf
   36
   38 # get second integer
             movl
                      $prompt, %edi
                                       # message address
   39
                      $0, %eax
   40
             movl
   41
             call
                      printf
   42
                      divisor(%rbp), %rsi # place to store it
             leaq
   43
                      $scanformat, %edi # scanf formatting string
             movl
   44
             movl
                      $0, %eax
   45
                      scanf
   46
             call
  47
   48 # now divide them
                      divisor(%rbp), %esi # pass by value
             movl
  49
                      dividend(%rbp), %edi
             movl
                      div32
             call
  51
  53 # at this point, the 32-bit result is in eax
             movl
                      %eax, %ecx
                                      # result
  54
             movl
                      divisor(%rbp), %edx # numerator
   55
                      dividend(%rbp), %esi # denominator
             movl
  56
```

```
$printformat, %edi # printf formatting string
             movl
  57
             movl
                      $0, %eax
  58
             call
                      printf
                      $0, %eax
             movl
                                       # return 0
  61
                      %rbp, %rsp
                                       # restore stack pointer
             movq
  62
                                       # restore frame pointer
             popq
                      %rbp
                                       # back to OS
             ret
   1 # div32.s
   2 # divides two 32-bit integers and returns 32-bit quotient
   3 # Bob Plantz - 27 June 2009
   5 # Calling sequence
   6 #
             esi <- divisor
   7 #
             edi <- dividend
   8 #
             call div32
   9 # Code
             .text
             .globl div32
  11
                      div32, @function
             .type
  12
  13 div32:
                                       # save base pointer
             pushq
                      %rbp
  14
             movq
                      %rsp, %rbp
                                       # new base pointer
  15
  16
                                       # clear for divide
                      $0, %edx
             movl
  17
             movl
                      %edi, %eax
  18
             divl
                      %esi
                                       # div is in eax
  19
             movq
                      %rbp, %rsp
                                       # restore stack pointer
  21
                      %rbp
                                       # restore base pointer
             popq
  22
             ret
                                       # return quotient
12 -5 -
   1 # modulo.s
   2 # Gets two 32-bit integers from user and computes remainder
   3 # of the first divided by the second.
   4 # Bob Plantz - 27 June 2009
   6 # Stack frame
             .equ
                      divisor, -8
             . equ
                      dividend, -4
                      localSize, -16
             .equ
  10 # Read only data
             .section .rodata
  12 prompt:
             .asciz "Enter an integer (0 - 4294967295): "
  14 printformat:
                      "%u mod %u = %u\n"
             .asciz
  16 scanformat:
                      "%u"
             .asciz
  18 # Code
             .text
             .globl main
  20
             .type
                      main, @function
  22 main:
             pushq
                      %rbp
                                      # save frame pointer
```

```
movq
                   %rsp, %rbp
                                    # new frame pointer
                   $localSize, %rsp # local vars.
          addq
25
  # prompt user
27
          movl
                   $prompt, %edi
                                   # message address
          movl
                   $0, %eax
29
                   printf
          call
  # get first integer
          leag
                   dividend(%rbp), %rsi # place to store it
33
          movl
                   $scanformat, %edi
                                       # scanf formatting string
34
          movl
                   $0, %eax
35
          call
                   scanf
37
  # get second integer
          movl
                   $prompt, %edi
                                  # message address
          movl
                   $0, %eax
40
          call
                   printf
41
42
          leaq
                   divisor(%rbp), %rsi # place to store it
          movl
                   $scanformat, %edi
                                         # scanf formatting string
44
                   $0, %eax
          movl
          call
                   scanf
46
48 # now divide them
          movl
                   divisor(%rbp), %esi # pass by value
          movl
                   dividend(%rbp), %edi
50
          call
                   div32
51
53 # at this point, the 32-bit result is in eax
          movl
                   %eax, %ecx
                                  # result
54
          movl
                   divisor(%rbp), %edx # numerator
55
          movl
                   dividend(%rbp), %esi # denominator
          movl
                   $printformat, %edi # printf formatting string
57
                   $0, %eax
          movl
          call
                   printf
59
          movl
                   $0, %eax
                                    # return 0
61
                                   # restore stack pointer
                   %rbp, %rsp
          movq
                   %rbp
                                    # restore frame pointer
          popq
63
                                    # back to OS
          ret
1 # mod32.s
2 # divides two 32-bit integers and returns 32-bit remainder
3 # Bob Plantz - 27 June 2009
5 # Calling sequence
```

```
esi <- divisor
6 #
7 #
          edi <- dividend
          call div32
9 # Code
           .text
          .globl div32
11
           .type
                   div32, @function
13 div32:
14
          pushq
                   %rbp
                                    # save base pointer
```

```
%rsp, %rbp
                                       # new base pointer
   15
             movq
   16
                                       # clear for divide
             movl
                      $0, %edx
                      %edi, %eax
             movl
   18
             divl
                      %esi
                                       # remainder is in edx
   19
             movl
                      %edx, %eax
                                       # return remainder
   20
   21
                      %rbp, %rsp
                                       # restore stack pointer
             movq
   22
             popq
                      %rbp
                                       # restore base pointer
                                       # return quotient
             ret
12 -6 -
   1 # decimal2unt.s
   2 # Prompts the user to enter an integer in decimal, then converts
   3 # it to int format.
   4 # Bob Plantz - 27 June 2009
   6 # Constant
                      buffSize, 12
             .equ
    # Stack frame
                      buffer, -16
             . equ
   10
             .equ
                      theInt,-4
   11
             .equ
                      localSize,-16
   12
   13
   14 # Read only data
             .section .rodata
   15
   16 prompt:
             .asciz "Please enter an integer in decimal: "
   17
   18 format:
             .asciz "You entered %i\n"
   19
   21 # Code
              .text
   22
   23
             .globl main
             .type
                      main, @function
  24
   25 main:
             pushq
                      %rbp
                                         # save frame pointer
   26
                      %rsp, %rbp
                                         # new frame pointer
             movq
  27
             addq
                      $localSize, %rsp # local vars.
   28
   30 # Tell user what to do.
                      $prompt, %rdi
                                         # prompt user
   31
             movq
             call
                      writeStr
  32
  34 # Get decimal number
             movl
                      $buffSize, %esi
                                         # max number of chars
             leag
                      buffer(%rbp), %rdi # place for user input
   36
                      readLn
                                         # get user input string
             call
   37
   38
     # convert the string to int format
   39
             leaq
                      theInt(%rbp), %rsi
                                            # place to store the int
   40
             leaq
                      buffer(%rbp), %rdi
                                           # user's string
   41
             call
                      dec2uInt
   42
   43
             movl
                      theInt(%rbp), %esi
                                            # disply results
   44
             movq
                      $format, %rdi
   45
```

```
call
                   printf
47
           movl
                   $0, %eax
                                    # return 0
           movq
                   %rbp, %rsp
                                    # restore stack pointer
                   %rbp
                                    # restore base pointer
           popq
51
                                     # back to OS
           ret
1 # dec2uInt.s
2 # Converts string of numerals to decimal unisgned int
3 # Bob Plantz - 13 June 2009
5 # Calling sequence
          rsi <- address of place to store the int
6 #
          rdi <- address of string
7 #
          call dec2uInt
9 #
           returns 0
10 # Code
           .text
           .globl
                   dec2uInt
12
                   dec2uInt, @function
           .type
14 dec2uInt:
                                    # save caller frame ptr
          pushq
                   %rbp
15
                                    # our stack frame
                   %rsp, %rbp
           movq
16
17
                                    # subtotal = 0
           movl
                   $0, %eax
18
  loop:
19
           movb
                   (%rdi), %cl
                                    # get current character
                   $0, %cl
                                    # end of string?
           cmpb
21
                   done
                                    # yes, all done
           jе
22
          andl
                   $0xf, %ecx
                                    # no, convert char to int
23
           imull
                   $10, %eax
                                    # 10 x subtotal
24
           addl
                   %ecx, %eax
                                    # add current int to subtotal
25
                                    # move pointer
           incq
                   %rdi
                                    # and check again
           jmp
                   loop
27
28 done:
           movl
                   %eax, (%rsi)
                                    # store the int
29
30
                   $0, %eax
                                    # return 0
           movl
31
                   %rbp, %rsp
                                    # delete local vars
           movq
```

restore caller frame ptr

See Section E.11 for writeStr and readLn.

%rbp

popq

ret

33

\$0, %eax

movl

```
12 -7

1 # addConstant.s

2 # Prompts the user to enter an integer in decimal, converts

3 # it to int format, adds a constant, then displays result.

4 # Bob Plantz - 28 June 2009

5

6 # useful constant

7 theConstant = 12345

8

9 # Stack frame

10 .equ theInt,-16

11 .equ buffer,-12
```

```
localSize, -16
           .equ
13 # Read only data
           .section .rodata
15 prompt:
           .asciz "Please enter an integer in decimal: "
17 msg:
                   "The result is: "
           .asciz
19 endl:
           .asciz "\n"
21 # Code
           .text
           .globl main
23
           .type
                   main, @function
24
25 main:
26
          pushq
                   %rbp
                                     # save frame pointer
                   %rsp, %rbp
                                     # new frame pointer
          movq
27
          addq
                   $localSize, %rsp # local vars.
28
30 # Tell user what to do.
                   $prompt, %edi
31
          movl
                                     # prompt user
          call
                   writeStr
32
34 # Get decimal number
                                     # allow up to 11 chars
          movl
                   $12, %esi
                   buffer(%rbp), %rdi # place for user input
          leag
36
          call
                   readLn
                                     # get user input string
38
  # convert the string to int format
                   theInt(%rbp), %rsi # place to store the int
          leaq
40
          leag
                   buffer(%rbp), %rdi # user's string
41
          call
                   dec2uInt
42
43
44 # add the constant
          addl
                   $theConstant, theInt(%rbp)
45
46
  # convert the int to string format
47
          movl
                   theInt(%rbp), %esi # the result
          leag
                   buffer(%rbp), %rdi
49
          call
                   uInt2dec
                                     # do conversion
50
51
  # now display for user
          movl
                   $msq, %edi
                                     # nice message for user
53
          call
                   writeStr
55
                   buffer(%rbp), %rdi
          leaq
          call
                   writeStr
57
          movl
                   $endl, %edi
                                     # some formatting
59
          call
                   writeStr
          movl
                   $0, %eax
                                     # return 0
62
                   %rbp, %rsp
                                     # restore stack pointer
          movq
          popq
                   %rbp
                                     # restore frame pointer
64
                                     # back to OS
          ret
```

```
2 # Converts unsigned int to corresponding unsigned decimal string
3 # Bob Plantz - 13 June 2009
5 # Calling sequence
          esi <- value of the int
7 #
          rdi <- address of string
          call uInt2dec
9 #
          returns zero
11 # Stack frame
           .equ
                   array,-12
12
                   localSize, -16
           .equ
13
14 # Read only data
                     .rodata
           .section
16 ten:
           .long
                   10
17 # Code
           .text
18
                  uInt2dec
           .globl
                   uInt2dec, @function
           .type
  uInt2dec:
          pushq
                   %rbp
                                       # save callers frame ptr
22
                   %rsp, %rbp
                                       # our stack frame
           movq
23
                   $localSize, %rsp # local vars.
          addq
24
                   array(%rbp), %rcx # ptr to local array
           leag
26
          movb
                   $0, (%rcx)
                                      # null byte
                   %esi, %eax
                                       # the number to conv.
           movl
30 charLup:
          movl
                   $0, %edx
                                       # high-order = 0
31
          divl
                                       # divide by ten
32
                   ten
          orb
                   $0x30, %dl
                                       # convert to ascii
33
                   %rcx
                                       # next location
          incq
34
          movb
                   %dl, (%rcx)
                                       # store the character
35
                   $0, %eax
                                       # anything left?
           cmpl
           ine
                                       # yes, do it
                   charLup
37
  copyLup:
                   $0, (%rcx)
                                       # NUL char?
           cmpb
                   allDone
          jе
                                       # yes, copy it
41
                   (%rcx), %dl
                                       # get achar
42
          movb
                   %dl, (%rdi)
          movb
                                       # store it
43
                   %rdi
                                       # move pointers
           incq
          decq
                   %rcx
45
           jmp
                   copyLup
                                       # and check again
46
47
  allDone:
                                       # get NUL char
          movb
                   (%rcx), %dl
49
          movb
                   %dl, (%rdi)
                                       # and store it
50
                   $0, %eax
                                       # return count;
          movl
52
                                       # delete local vars.
           movq
                   %rbp, %rsp
           popq
                   %rbp
                                       # restore caller frame ptr
54
           ret
```

See Section E.11 for writeStr and readLn.

```
12 -8 -
   1 # addConstant2.s
   2 # Prompts the user to enter an integer in decimal, converts
   3 # it to int format, adds a constant, then displays result.
   4 # Bob Plantz - 28 June 2009
   6 # useful constant
   _{7} theConstant = -12345
   9 # Stack frame
             .equ
                      theInt,-16
  10
                      buffer, -12
              .equ
  11
             .equ
                      localSize,-16
  13 # Read only data
             .section .rodata
  15 prompt:
             .asciz "Please enter an integer in decimal: "
  17 msq:
                      "The result is: "
             .asciz
  19 endl:
             .asciz "\n"
  21 # Code
             .text
             .globl main
  23
             .type
                      main, @function
  24
  25 main:
                      %rbp
                                        # save frame pointer
             pushq
  26
                                        # new frame pointer
             movq
                      %rsp, %rbp
             addq
                      $localSize, %rsp # local vars.
  28
  30 # Tell user what to do.
             movl
                      $prompt, %edi
                                        # prompt user
             call
                      writeStr
  32
  34 # Get decimal number
             movl
                      $12, %esi
                                        # allow up to 11 chars
                      buffer(%rbp), %rdi # place for user input
             leag
  36
                      readLn
                                        # get user input string
             call
  37
  38
     # convert the string to int format
                      theInt(%rbp), %rsi # place to store the int
  40
             leag
             leaq
                      buffer(%rbp), %rdi # user's string
  41
             call
                      dec2sInt
  42
  43
  44 # add the constant
             addl
                      $theConstant, theInt(%rbp)
  45
  46
  47 # convert the int to string format
                      theInt(%rbp), %esi # the result
             movl
                      buffer(%rbp), %rdi
             leag
  49
             call
                      sInt2dec
  50
                                        # do conversion
  51
  52 # now display for user
             movl
                      $msg, %edi
                                        # nice message for user
  53
             call
                      writeStr
  54
  55
             leaq
                      buffer(%rbp), %rdi
```

```
call
                   writeStr
58
           movl
                   $endl, %edi
                                     # some formatting
           call
                   writeStr
           movl
                   $0, %eax
                                     # return 0
62
                                     # restore stack pointer
                   %rbp, %rsp
           movq
                                     # restore frame pointer
                   %rbp
           popq
64
                                     # back to OS
           ret
1 # dec2sInt.s
2 # Converts string of numerals to decimal int, signed version
    Bob Plantz - 13 June 2009
    Calling sequence
          rsi <- address of place to store the int
          rdi <- address of string
7 #
8 #
          call dec2sInt
           returns 0
11 # Stack frame
                   negFlag,-4
           .equ
12
                   localSize, -16
           .equ
14 # Code
15
           .text
           .globl dec2sInt
16
           .type
                   dec2sInt, @function
17
  dec2sInt:
                   %rbp
                                    # save caller frame ptr
           pushq
19
                                    # our stack frame
          movq
                   %rsp, %rbp
           addq
                   $localSize, %rsp # space for local var
21
                   $0, negFlag(%rbp) # assume false
           movl
23
                   $'-', (%rdi)
           cmpb
                                    # minus sign?
25
           jne
                   checkPlus
                                    # no, check for plus sign
           movl
                   $1, negFlag(%rbp) # negFlag = true;
27
           incq
                   %rdi
                                    # skip minus sign
28
                                    # and do the conversion
           jmp
                   doIt
  checkPlus:
                   $'+', (%rdi)
                                    # plus sign?
           cmpb
31
           jne
                   doIt
                                    # no, ready for conversion
32
                   %rdi
                                    # skip plus sign
           incq
33
  doIt:
           call
                   dec2uInt
                                    # arguments are correct
35
                                    # absolute value now stored
36
                                        # negative?
           cmpl
                   $0, negFlag(%rbp)
37
           jе
                   done
                                    # no, all done
38
                   (%rsi)
                                    # change sign
           negl
40 done:
           movl
                   $0, %eax
                                    # return 0
41
                                    # delete local vars
           movq
                   %rbp, %rsp
42
                                    # restore caller frame ptr
           popq
                   %rbp
43
           ret
44
```

```
2 # Converts signed int to corresponding signed decimal string
3 # Bob Plantz - 13 June 2009
5 # Calling sequence
          esi <- value of the int
7 #
          rdi <- address of string
8 #
          call sInt2dec
9 #
          returns zero
10 # Code
          .section .rodata
12 ten:
          .long
                   10
13
          .text
14
          .globl sInt2dec
15
                   sInt2dec, @function
16
          .type
17 sInt2dec:
                   %rbp
                                    # save callers frame ptr
          pushq
18
                                    # our stack frame
          movq
                   %rsp, %rbp
20
                   $0, %esi
                                    # >= 0?
          cmpl
          jge
                   positive
                                    # yes, just convert it
22
                   $'-', (%rdi)
                                    # store minus sign
          movb
                   %rdi
                                    # and move the pointer
          incq
                                    # negate the number
          negl
                   %esi
26 positive:
          call
                   uInt2dec
                                    # arguments are correct
                   $0, %eax
                                    # return 0
          movl
                   %rbp, %rsp
                                    # delete local vars.
          movq
30
                   %rbp
                                    # restore caller frame ptr
31
          popq
          ret
```

See above for uInt2dec and dec2uInt. See Section E.11 for writeStr and readLn.

E.13 Data Structures

```
13 -1
   1 # arrayIndex.s
   2 # Allcates an int array and stores element number in each element.
   3 # Bob Plantz - 29 June 2009
   5 # number of elements in the array
   _6 nInts = 25
   7 # Stack frame
                      rbxSave, intArray-8
             .equ
             .equ
                      intArray,-4*nInts
                      index,intArray-8 # 8 bytes to be consistent
             .equ
  10
                                         # with indexed addressing
                      localSize, index
             .equ
  12
  13 # Read only data
             .section .rodata
  14
  15 msg:
             .string "The array contains:\n"
  17 endl:
             .string "\n"
  18
  19 # Code
```

```
.text
           .globl
                   main
21
           .type
                   main, @function
23 main:
                                     # save caller frame pointer
          pushq
                   %rbp
          movq
                   %rsp, %rbp
                                     # set our frame pointer
25
                   $localSize, %rsp # local variables
          addq
                                     # 16-byte alignment
          anda
                   $-16, %rsp
27
                   %rbx, rbxSave(%rbp) # save reg for OS
          movq
29
          movq
                   $0, index(%rbp) # index = \theta
                   intArray(%rbp), %rbx # the array
          leaq
31
33 # store values in the array
34 storeLup:
                   index(%rbp), %rax
          movq
                                         # get index value
          cmpq
                   $nInts, %rax
                                     # all filled?
36
                   display
                                     # yes, display it
          jae
37
                   %eax, (%rbx,%rax,4) # no, store index
          movl
40
          incq
                   index(%rbp)
                                     # index++
41
                   storeLup
                                     # do rest of elements
          jmp
42
44 display:
          movq
                   $0, index(%rbp) # restart at beginning
  displayLup:
46
                   index(%rbp), %rax
                                       # get index value
          movq
47
                   $nInts, %rax
                                     # any more?
          cmpq
48
          jae
                   done
                                     # no, all done
49
          movl
                   (%rbx,%rax,4), %edi # yes, display it
51
          call
                   putInt
52
53
                   $endl, %edi
                                     # do it in a column
          movl
          call
                   writeStr
55
          incq
                   index(%rbp)
                                     # index++
57
                   displayLup
                                     # do rest of elements
          jmp
59
  done:
                   $0, %eax
                                     # return 0;
          movl
61
                   rbxSave(%rbp), %rbx # restore reg
          movq
          movq
                   %rbp, %rsp
                                     # remove local vars
63
                                     # restore caller frame ptr
          popq
                   %rbp
64
                                     # back to OS
          ret
1 # putInt.s
2 # writes a signed int to standard out
3 # Bob Plantz - 28 June 2009
```

```
# putint.s
2 # writes a signed int to standard out
3 # Bob Plantz - 28 June 2009
4
5 # Calling sequence
6 # edi <- value of the int
7 # call putInt
8
9 # Stack frame</pre>
```

31

```
buffer, -12
           . equ
10
                   localSize, -16
           .equ
11
12 # Code
           .text
13
           .globl
                   putInt
14
                   putInt, @function
           .type
15
16 putInt:
                                      # save callers frame ptr
           pushq
                   %rbp
17
                   %rsp, %rbp
           movq
                                      # our stack frame
18
           addq
                   $localSize, %rsp # local vars.
19
                   %edi, %esi
                                      # number to convert
           movl
21
           leag
                   buffer(%rbp), %rdi # place to store string
22
                   sInt2dec
                                      # do the conversion to string
           call
23
24
                   buffer(%rbp), %rdi # place where string stored
           leag
           call
                   writeStr
                                      # write it
           movl
                   $0, %eax
                                      # return 0
28
           movq
                   %rbp, %rsp
                                      # delete local vars.
           popq
                   %rbp
                                      # restore caller frame ptr
30
           ret
```

See Section E.12 fot sInt2dec. See Section E.11 for writeStr.

```
13 -2 -
   1 # sumInts.s
   2 # Prompts user for 10 integers, stores them in an array, then
   3 # displays their sum.
   4 # Bob Plantz - 28 June 2009
     # number of elements in the array
                      nInts,10
             .equ
     # Stack frame
                      rbxSave, total-8
             .equ
             .equ
                      total, index-4
   10
                      index,intArray-8
              .equ
   11
              .equ
                      intArray,-4*nInts
   12
                      localSize, rbxSave
              .equ
   13
   14 # Read only data
             .section .rodata
   16 prompt:
             .string "Enter an integer: "
   17
   18 msq:
             .string "The sum is: "
   20 endl:
              .string "\n"
   22 # Code
              .text
   23
              .globl
                      main
   24
              .type
                      main, @function
   26 main:
             pushq
                      %rbp
                                        # save caller frame pointer
                      %rsp, %rbp
                                        # set our frame pointer
             movq
   28
             addq
                      $localSize, %rsp # local variables
   29
                                        # 16-byte boundary
             andq
                      $-16, %rsp
   30
             movq
                      %rbx, rbxSave(%rbp) # save reg for OS
```

```
$0, index(%rbp) # index = 0
           movq
33
           leaq
                   intArray(%rbp), %rbx # the array
  # store user values in the array
37 storeLup:
                   $nInts, index(%rbp)
                                            # all filled?
           cmpq
           jae
                   sum
                                      # yes, sum them
39
           movl
                   $prompt, %edi
                                     # no, prompt user
41
           call
                   writeStr
42
           movq
                   index(%rbp), %rax
                                        # get index value
44
                   (%rbx,%rax,4), %rdi # place to store int
45
           leaq
           call
                   getInt
46
           incq
                   index(%rbp)
                                    # index++
48
                                    # do rest of elements
           jmp
                   storeLup
49
50
  sum:
           movq
                   $0, index(%rbp) # restart at beginning
52
                   $0, total(%rbp) # init total
           movl
53
54 sumLup:
                   $nInts, index(%rbp) # all summed?
           cmpl
           jae
                   display
                                    # yes, display total
56
           movq
                   index(%rbp), %rax
                                        # get index value
                   (%rbx,%rax,4), %eax # no, add current
           movl
           addl
                   %eax, total(%rbp)
60
61
           incq
                   index(%rbp)
                                    # index++
62
           jmp
                   sumLup
                                    # do rest of elements
63
64
  display:
65
                   $msg, %edi
                                    # tell user about it
           movl
           call
                   writeStr
67
           movl
                   total(%rbp), %edi # and show the sum
           call
                   putInt
71
          movl
                   $endl, %edi
                   writeStr
           call
73
           movq
                   rbxSave(%rbp), %rbx # restore reg
75
           movl
                   $0, %eax
                                    # return 0;
                   %rbp, %rsp
                                    # remove local vars
77
           movq
                                    # restore caller frame ptr
           popq
                   %rbp
78
                                    # back to OS
           ret
79
```

```
1 # getInt.s
2 # reads an int from standard in
3 # Bob Plantz - 28 June 2009
4
5 # Calling sequence
6 # rdi <- pointer where to store the int
7 # call getInt</pre>
```

```
8 #
          returns 0
10 # Stack frame
                   outPtr,-24
           .equ
11
           .equ
                   buffer, -12
12
                   localSize, -32
           .equ
13
14 # Code
           .text
15
           .globl
                   getInt
                   getInt, @function
           .type
17
18 getInt:
          pushq
                                     # save callers frame ptr
                   %rbp
          movq
                   %rsp, %rbp
                                     # our stack frame
20
                   $localSize, %rsp # local vars.
          addq
21
22
          movq
                   %rdi, outPtr(%rbp) # save argument
                   $12, %esi
                                     # max number of chars
          movl
                   buffer(%rbp), %rdi # place where string stored
          leag
                                     # read it it
          call
                   readLn
                   outPtr(%rbp), %rsi # place to store number
          movq
                   buffer(%rbp), %rdi # address of string
          leag
          call
                   dec2sInt
                                    # convert string to int
32
          movl
                   $0, %eax
                                     # return 0
          movq
                   %rbp, %rsp
                                     # delete local vars.
34
          popq
                   %rbp
                                     # restore caller frame ptr
           ret
```

See above for putInt. See Section E.12 for dec2sInt See Section E.11 for writeStr and readLn.

```
13 - 3 -
   1 # averageInts
   2 # Prompts user for 10 integers, stores them in an array, then
   3 # displays their average.
   4 # Bob Plantz - 29 June 2009
   6 # number of elements in the array
              .equ
                      nInts,10
   8 # Stack frame
                      rbxSave, total-8
              .equ
                      total, index-4
              .equ
   10
                      index, intArray-8
   11
              . equ
                      intArray, -4*nInts
              .equ
   12
              .equ
                      localSize, rbxSave
   14 # Read only data
              .section .rodata
   16 prompt:
              .string "Enter an integer: "
   17
   18 msg:
              .string "The sum is: "
   20 endl:
              .string "\n"
   22 # Code
   23
              .text
```

```
.globl main
                   main, @function
           .type
25
26 main:
          pushq
                   %rbp
                                      # save caller frame pointer
27
           movq
                   %rsp, %rbp
                                      # set our frame pointer
28
           addq
                   $localSize, %rsp # local variables
29
                                      # 16-byte boundary
           andq
                   $-16, %rsp
                   %rbx, rbxSave(%rbp) # save reg for OS
           movq
31
                   $0, index(%rbp) # index = \theta
           movq
33
           leaq
                   intArray(%rbp), %rbx # the array
34
35
  # store user values in the array
37 storeLup:
38
           cmpq
                   $nInts, index(%rbp)
                                            # all filled?
           jae
                   sum
                                      # yes, sum them
40
                   $prompt, %edi
           movl
                                      # no, prompt user
41
           call
                   writeStr
42
           movq
                   index(%rbp), %rax
                                       # get index value
44
                   (%rbx,%rax,4), %rdi # place to store int
           leaq
           call
                   getInt
46
           incq
                   index(%rbp)
                                     # index++
48
           jmp
                   storeLup
                                     # do rest of elements
  sum:
51
                   $0, index(%rbp) # restart at beginning
           movq
52
           movl
                   $0, total(%rbp) # init total
53
54
  sumLup:
           cmpl
                   $nInts, index(%rbp) # all summed?
55
           jae
                   display
                                     # yes, display total
56
57
           movq
                   index(%rbp), %rax
                                        # get index value
           movl
                   (%rbx,%rax,4), %eax # no, add current
59
           addl
                   %eax, total(%rbp)
61
           incq
                   index(%rbp)
                                     # index++
                   sumLup
                                     # do rest of elements
           jmp
63
  display:
65
                   $msg, %edi
                                    # tell user about it
           movl
           call
                   writeStr
67
                                         # compute the average
           movl
                   total(%rbp), %eax
70
           movl
                   $0, %edx
                                     # create 64-bit dividend
71
           cmpl
                   $0, %eax
                                     # is it negative?
72
                                     # no
           jge
                   pos
73
           movl
                   $-1, %edx
                                     # sign extend dividend
74
75 pos:
           movl
                   $nInts, %ebx
                                     # get divisor
76
           idivl
                   %ebx
                                     # signed division
77
78
                                     # and show the average
           movl
                   %eax, %edi
79
```

```
call
                   putInt
81
          movl
                   $endl, %edi
          call
                   writeStr
                   rbxSave(%rbp), %rbx # restore reg
          movq
85
                   $0, %eax
                                   # return 0;
          movl
                   %rbp, %rsp
                                   # remove local vars
          movq
87
          popq
                   %rbp
                                   # restore caller frame ptr
          ret
                                   # back to OS
```

See above for putInt and getInt. See Section E.11 for writeStr and readLn.

```
13 -8
   1 # structFields.s
   2 # Stores user input values in three structs and echoes them
   3 # Bob Plantz - 28 June 2009
             .include "structDef.h"
   6 # Stack frame
             .equ
                      buffer,z-12
                      z,y-structSize
             . equ
                      y,x-structSize
             .equ
             .equ
                      x,-structSize
  10
                      localSize, buffer
             .equ
  11
  12 # Read only data
              .section .rodata
  14 userPrompt:
              .string "Enter data for the three structs.\n"
  16 echoMsg:
              .string "You entered:\n"
  17
  18 endl:
              .string "\n"
  19
  20 # Code
             .text
             .globl
                     main
  22
             .type
                      main, @function
  23
  24 main:
             pushq
                      %rbp
                                         # save frame pointer
  25
             movq
                      %rsp, %rbp
                                        # our frame pointer
  26
                      $localSize, %rsp # local variables
             addq
             andq
                      $-16, %rsp
                                         # stack alignment
  28
                      $userPrompt, %edi # tell user what to do
             movl
  30
             call
                      writeStr
  32
             leaq
                      x(%rbp), %rdi
                                         # the x struct
             call
                      getData
                                         # get values from user
  34
             leag
                      y(%rbp), %rdi
                                         # the y struct
  36
             call
                      getData
                                         # get values from user
             leaq
                      z(%rbp), %rdi
                                         # the z struct
             call
                      getData
                                         # get values from user
  40
  42 # give the user a message
             movl
                      $echoMsq, %edi
                                        # start display
```

```
call
                   writeStr
44
45
          leaq
                   x(%rbp), %rdi
                                      # the x struct
          call
                   putData
                                      # show values to user
47
                                      # the y struct
          leaq
                   y(%rbp), %rdi
49
                                      # show values to user
          call
                   putData
51
                                      # the z struct
          leag
                   z(%rbp), %rdi
                                      # show values to user
          call
                   putData
53
                   $endl, %edi
                                      # do a newline
          movl
          call
                   writeStr
57
                                    # return 0;
          movl
                   $0, %eax
58
                                    # remove local vars
          movq
                   %rbp, %rsp
          popq
                   %rbp
                                    # restore caller's frame ptr
60
                                    # back to OS
          ret
1 # structDef.h
2 # Defines the struct field offsets.
3 # Bob Plantz - 28 June 2009
5 # struct definition
           .equ
                   aChar,0
                   anInt,4
           .equ
                   structSize,8
           .equ
1 # getData.s
2 # Gets user input values and stores them in a struct.
3 # Bob Plantz - 28 June 2009
    Calling sequence:
           rdi <- address of struct
5 #
6 #
           call putData
           .include "structDef.h"
  # Useful constant
                   STDOUT, 1
           .equ
11 # Stack frame
12
           .equ
                   structPtr,-32
           .equ
                   buffer,-2
13
                   localSize, -32
           .equ
15 # Read only data
           .section .rodata
17 charPrompt:
           .string "Enter a single character: "
19 intPrompt:
            .string "Enter an integer: "
21 # Code
           .text
           .globl
                  getData
           .type
                   getData, @function
25 getData:
          pushq
                   %rbp
                                       # save frame pointer
          movq
                   %rsp, %rbp
                                       # our frame pointer
27
          addq
                   $localSize, %rsp # local var. and arg.
28
```

31

```
%rdi, structPtr(%rbp) # save argument
          movq
30
                   $charPrompt, %edi # prompt user for character
          movl
          call
                   writeStr
32
          movl
                   $2, %esi
                                       # local buffer size
34
                   buffer(%rbp), %rdi # place to store input
          leag
          call
                   readLn
                                       # get user response
                   buffer(%rbp), %al # first char entered
          movb
38
          movq
                   structPtr(%rbp), %rdi
                   %al, aChar(%rdi)
                                       # x.aChar = buffer[0]
          movb
41
                                       # prompt user for integer
          movl
                   $intPrompt, %edi
42
          call
                   writeStr
43
                   structPtr(%rbp), %rdi
          movq
                   anInt(%rdi), %rdi # place for the int
          leaq
45
          call
                   getInt
                                       # get user response
47
                   $0, %eax
          movl
                                    # return 0;
          movq
                   %rbp, %rsp
                                    # remove local vars
49
                                    # restore caller's frame ptr
          popq
                   %rbp
                                    # back to caller
          ret
1 # putData.s
2 # Displays values stored in a struct.
3 # Bob Plantz - 28 June 2009
    Calling sequence:
           rdi <- address of struct
6 #
           call putData
          .include "structDef.h"
  # Useful constant
                   STDOUT, 1
           .equ
11 # Stack frame
                   structPtr,-16
          .equ
12
           .equ
                   localSize,-16
14 # Read only data
          .section .rodata
16 charMsq:
          .string "The char is: "
17
18 intMsg:
          .string "The int is: "
19
20 endl:
          .string "\n"
21
22 # Code
           .text
23
           .globl
                   putData
24
                   putData, @function
           .type
25
26 putData:
          pushq
                   %rbp
                                     # save frame pointer
27
          movq
                   %rsp, %rbp
                                     # our frame pointer
          addq
                   $localSize, %rsp # argument save area
29
          movq
                   %rdi, structPtr(%rbp) # save struct addr.
```

```
$charMsg, %rdi
                                     # tell user about character
          movq
          call
                   writeStr
34
          movq
                   structPtr(%rbp), %rsi # the struct
          movl
                   $1, %edx
                                     # one byte
          leaq
                   aChar(%rsi), %rsi
                                            # address of the char
          movl
                   $STDOUT, %edi
38
          call
                   write
                   $endl. %edi
                                     # some nice formatting
          movl
          call
                   writeStr
42
          movl
                   $intMsg, %edi
                                     # tell user about integer
43
          call
                   writeStr
44
          movq
                   structPtr(%rbp), %rdi # the struct
45
                   anInt(%rdi), %edi
          movl
47
          call
                   putInt
                                     # display the integer
                   $endl, %edi
                                     # some nice formatting
          movl
          call
                   writeStr
49
                   $0, %eax
                                    # return 0;
          movl
51
          movq
                   %rbp, %rsp
                                    # remove local vars
          popq
                   %rbp
                                    # restore caller's frame ptr
53
                                    # back to OS
          ret
```

See above for putInt and getInt. See Section E.11 for writeStr and readLn.

```
13 -9 -
   1 # totalCost.s
   2 # Gets names and prices for three items and shows total cost
   3 # Bob Plantz - 29 June 2009
             .include "item.h"
     # Stack frame
             .equ
                      third, second-itemSize
              .equ
                      second, first-itemSize
             .equ
                      first,-itemSize
             .equ
                      localSize, third
   11 # Read only data
             .section .rodata
             .string "\n"
   13 endl:
   14 totalMsg:
             .string "Their total cost is $"
   16 # Code
             .text
   17
             .globl main
   18
             .type
                     main, @function
   20 main:
             pushq
                      %rbp
                                        # save frame pointer
                      %rsp, %rbp
                                        # our frame pointer
             movq
   22
                      $localSize, %rsp # local variables
             addq
   23
             andq
                      $-16, %rsp
                                        # 16-byte boundary
  24
     # get values into each of the struct variables
             leag
                      first(%rbp), %rdi # address of first struct
             call
                      getItem
                                          # gets the values
   28
             leaq
                      second(%rbp), %rdi # address of second struct
   29
             call
                      getItem
             leag
                      third(%rbp), %rdi # address of third struct
  31
```

```
call
                   getItem
32
33
  # display them
          leaq
                   first(%rbp), %rdi # address of first struct
35
          call
                   displayItem
                                       # displays the values
36
          leag
                   second(%rbp), %rdi # address of second struct
37
          call
                   displayItem
                   third(%rbp), %rdi # address of third struct
          leag
39
          call
                   displayItem
41
  # Now show their total cost
42
          movl
                   $totalMsg, %edi
                                       # message for user
43
          call
                   writeStr
44
45
          leaq
                   first(%rbp), %rsi # first item
46
                   cost(%rsi), %edi
          movl
                                       # accumulate sum in eax
          leaq
                   second(%rbp), %rsi # second item
48
          addl
                   cost(%rsi), %edi
                                       # add to sum
                   third(%rbp), %rsi # third item
          leag
                   cost(%rsi), %edi
          addl
                                       # add to sum
          call
                   putInt
                                       # argument in correct reg.
52
          movl
                   $endl, %edi
                                       # do a newline for user
          call
                   writeStr
56
          movl
                   $0, %eax
                                    # return 0;
          movq
                   %rbp, %rsp
                                    # remove local vars
          popq
                   %rbp
                                    # restore caller's frame ptr
                                    # back to OS
          ret
1 # item.h
2 # Fields and size of an item struct
3 # Bob Plantz - 29 June 2009
                   name,0
           . equ
5
           .equ
                   cost,52
                   itemSize,56
          .equ
1 # displayItem.s
2 # displays an item
3 # Bob Plantz - 29 June 2009
5 # Calling sequence
6 #
          rdi <- address of item struct
          call getItem
7 #
          returns void
           .include "item.h"
11 # Stack frame
          .equ
                   structPtr,-16
           .equ
                   localSize,-16
14 # Read only data
           .section .rodata
16 costMsg:
          .string "Cost: $"
17
18 nameMsg:
```

```
.string "Name: "
20 endl:
           .string "\n"
22 spacing:
           .string "
24 # Code
           .text
           .globl displayItem
26
           .type
                   displayItem, @function
28 displayItem:
          pushq
                   %rbp
                                     # save caller's frame ptr
29
          movq
                   %rsp, %rbp
                                     # our stack frame
30
                   $localSize, %rsp # local vars
          addq
31
                   %rdi, structPtr(%rbp) # save arg.
32
          movq
33
          movl
                   $nameMsg, %edi
                                     # name message
          call
                   writeStr
35
          movq
                   structPtr(%rbp), %rdi # struct address
                   name(%rdi), %rdi # get pointer to name
          leag
37
                                     # show name
          call
                   writeStr
39
                   $spacing, %edi
                                     # do some formatting
          movl
                   writeStr
          call
41
                   $costMsq, %edi
          movl
                                     # cost message
43
          call
                   writeStr
          movq
                   structPtr(%rbp), %rdi # struct address
45
                   cost(%rdi), %edi # the integer
          movl
                   putInt
                                     # write it
          call
47
48
                   $endl, %edi
          movl
                                     # newline
          call
                   writeStr
50
51
                   %rbp, %rsp
                                     # delete local vars.
          movq
52
                                     # restore caller's frame ptr
                   %rbp
          popq
          ret
54
1 # getItem.s
2 # prompts user to enter an item name and it's cost
3 # Bob Plantz - 29 June 2009
5 # Calling sequence
          rdi <- address of item struct
6 #
          call getItem
7 #
8 #
          returns void
           .include "item.h"
11 # Stack frame
```

.equ

.equ

.section

14 # Read only data

16 costMsq:

18 nameMsg:

12 13

19

structPtr,-16

localSize, -16

. rodata

.string "Enter cost: \$"

.string "Name: "

```
20 # Code
           .text
21
           .globl
                   getItem
           .type
                   getItem, @function
23
  getItem:
24
          pushq
                   %rbp
                                     # save caller's frame ptr
25
                   %rsp, %rbp
                                     # our stack frame
          movq
                   $localSize, %rsp # local vars.
          adda
27
          movq
                   %rdi, structPtr(%rbp) # save arg.
29
          movl
                   $nameMsg, %edi
                                     # prompt for name
          call
                   writeStr
31
          movq
                   structPtr(%rbp), %rdi # struct address
32
                   name(%rdi), %rdi # pointer to name field
33
          leag
          movl
                   $50, %esi
                                     # max name length
34
          call
                   readLn
                                     # get name
36
                   $costMsg, %edi
          movl
                                     # prompt for cost
37
          call
                   writeStr
38
                   structPtr(%rbp), %rdi # struct address
          movq
          leag
                   cost(%rdi), %rdi # pointer to cost field
40
          call
                   getInt
                                     # get user input
41
42
                   %rbp, %rsp
                                     # delete local vars.
          movq
                   %rbp
                                     # restore caller's frame ptr
44
          popq
           ret
```

See above for putInt and getInt. See Section E.11 for writeStr and readLn.

```
13 -10
   # addInt2Frac.s
   2 # creates a fraction and gets user values, then gets an
   3 # integer from user and adds it to the fraction.
   4 # Bob Plantz - 29 June 2009
              .include "fraction.h"
   8 # Stack frame
             . equ
                      anInt,x-4
                      x,-fracSize
   10
              .equ
   11
              .equ
                      localSize,anInt
   12
   13 # Read only data
              .section
                       .rodata
   14
   15 prompt:
              .string "Enter an integer: "
   16
   17 endl:
              .string "\n"
   18
   19 # Code
              .text
   20
   21
              .globl
                      main
              .type
                      main, @function
   22
   23 main:
                      %rbp
                                       # save frame pointer
             pushq
   24
             movq
                      %rsp, %rbp
                                       # our frame pointer
   25
                      $localSize, %rsp # local variables
             addq
   26
             andq
                      $-16, %rsp
                                       # align stack pointer
   27
```

```
x(%rbp), %rdi
                                    # load address of object
          leag
29
                                    # call "constructor"
          call
                   fraction
31
                   x(%rbp), %rdi
          leaq
                                    # load address of object
32
          call
                   fractionGet
                                    # get "member function"
33
                   $prompt, %edi
                                    # ask user for a number
          movl
35
          call
                   writeStr
          leag
                   anInt(%rbp), %rdi # and get it
37
          call
                   getInt
          movl
                   anInt(%rbp), %esi # value to add to fraction
                   x(%rbp), %rdi
                                    # load address of object
          leaq
41
                   fractionAdd
                                    # add "member function"
          call
42
          leaq
                   x(%rbp), %rdi
                                    # load address of object
44
                   fractionDisplay # display "member function"
          call
45
                   $endl, %edi
          movl
                                    # formatting
          call
                   writeStr
48
          movl
                   $0, %eax
                                    # return 0;
50
                                    # delete local vars.
                   %rbp, %rsp
          movq
                                    # restore base pointer for OS
          popq
                   %rbp
52
          ret
                                    # back to caller (OS)
```

See above for getInt. See Section E.11 for writeStr.

```
13 -11
   1 # addFrac2Frac.s
   2 # creates two fractions and gets user values, then adds
   3 # one to the other and displays the sum.
   4 # Bob Plantz - 30 June 2009
             .include "fraction.h"
     # Stack frame
             . equ
                      y,x-fracSize
                      x,-fracSize
   10
             .equ
   11
             .equ
                      localSize,y
   12 # Read only data
             .section .rodata
   14 prompt:
             .string "Enter two fractions:\n"
   16 MSQ:
             .string "Their sum is:\n"
   18 endl:
              .string "\n"
   20 # Code
  21
             .text
             .globl
                     main
   22
             .type
                      main, @function
  24 main:
             pushq
                      %rbp
                                        # save frame pointer
  25
                      %rsp, %rbp
                                        # our frame pointer
             movq
  27
             addq
                      $localSize, %rsp # local vars.
```

```
andq
                   $-16, %rsp
                                     # align stack pointer
29
          leaq
                   x(%rbp), %rdi
                                     # pass address of object
          call
                   fraction
                                         to "constructor"
31
          leaq
                   y(%rbp), %rdi
                                     # pass address of object
          call
                   fraction
                                         to "constructor"
33
                   $prompt, %edi
                                     # tell user what to do
          movl
35
          call
                   writeStr
37
          leag
                   x(%rbp), %rdi
                                     # get address of object
          call
                   fractionGet
                                    # get "member function"
39
          leag
                   y(%rbp), %rdi
                                     # get address of object
40
                   fractionGet
                                     # get "member function"
          call
41
42
          leag
                   y(%rbp), %rsi
                                     # address of argument
43
          leaq
                   x(%rbp), %rdi
                                     # address of object
44
                                     # add "member function"
                   fractionsAdd
          call
45
46
                   $msg, %edi
          movl
                                     # tell user what happened
          call
                   writeStr
48
                                     # get address of object
          leaq
                   x(%rbp), %rdi
                   fractionDisplay # display "member function"
          call
50
                   $endl, %edi
                                    # formatting
          movl
          call
                   writeStr
52
                   %rbp, %rsp
                                    # delete local vars.
          movq
54
                                    # restore frame pointer
                   %rbp
          popq
                                    # back to caller
          ret
```

```
1 # fractionsAdd.s
    adds a fraction to this fraction
3 # Bob Plantz - 30 June 2009
5 # Calling sequence
6 #
          rsi <- address of object to add
          rdi <- address of this object
7 #
          call
8 #
                 fractionsAdd
9 #
          returns void
10
          .include "fraction.h"
11
12 # Stack frame
                   localFraction,-fracSize
          .equ
13
                   localSize, localFraction
          . equ
15 # Code
          .text
          .globl
                  fractionsAdd
17
          .type
                   fractionAdd, @function
18
  fractionsAdd:
19
          pushq
                   %rbp
                                     # save frame pointer
20
          movq
                   %rsp, %rbp
                                     # our frame pointer
21
          addq
                   $localSize, %rsp # for object address
                                     # align stack pointer
          andq
                   $-16, %rsp
23
          leaq
                   localFraction(%rbp), %rcx # pointer to local fraction
24
25
          movl
                   den(%rsi), %eax # multiply the denominators
```

```
mull
                   den(%rdi)
27
                   %eax, den(%rcx) # new denominator
          movl
28
          movl
                   num(%rdi), %eax # get this numerator
          mull
                   den(%rsi)
                                  # multiply by arg denominator
          movl
                   %eax, num(%rcx) # and store in local num
32
          movl
                   num(%rsi), %eax # get arg num
34
          mull
                   den(%rdi)
                                    # multiply by this den
          addl
                   %eax, num(%rcx) # and add to local num
36
                   num(%rcx), %eax # copy back to this object
          movl
          movl
                   %eax, num(%rdi)
                   den(%rcx), %eax
          movl
40
          movl
                   %eax, den(%rdi)
41
                   %rbp, %rsp
                                    # delete local vars.
          movq
43
                                    # restore frame pointer
                   %rbp
44
          popq
                                    # back to caller
          ret
45
```

See Section E.11 for writeStr.

.globl main

34

```
13 -12
   1 # addressBook.s
   2 # Allows up to MAX address cards to be stored.
   3 # Bob Plantz - 30 June 2009
             .include "cardDef.h"
   6 # Set MAX for the maximum number of cards
                      MAX,3
              .equ
   8 # Stack frame
                      count, index-4
             .equ
                      index, cards-4
             .equ
   10
             .equ
                      cards,buffer-(MAX*cardSize)
  11
                      buffer, -32
   12
             .equ
             .equ
                      localSize, count
   14 # Read only data
             .section .rodata
   16 prompt:
             .string "Command (Add, Delete, Show, List, Quit): "
   18 addMsg:
             .string "Add new person.\n "
   19
   20 delMsg:
             .string "Delete last person.\n"
   22 showMsg:
             .string "Your addresses:\n"
  23
   24 listMsg:
             .string "Here is the entire array:\n"
   26 fullMsg:
              .string "Address book is full.\n"
  28 emptyMsg:
             .string "Address book is empty.\n"
  29
   30 endl:
             .string "\n"
   32 # Code
             .text
  33
```

```
main, @function
35
           .type
36 main:
          pushq
                   %rbp
                                     # save frame pointer
                   %rsp, %rbp
                                     # our frame pointer
          movq
          addq
                   $localSize, %rsp # local variables
          andq
                   $-16, %rsp
                                     # align stack pointer
40
41
42 # construct the array objects
                   $0, index(%rbp)
          movl
                                      # start at beginning
44 constLup:
          cmpl
                   $MAX, index(%rbp) # end of list?
45
          jae
                   doProg
                                      # yes, run the program
46
                   cards(%rbp), %rdi # no, beginning of list
          leag
47
                   $cardSize, %eax
                                     # length of each record
48
          movl
                                      # times current location
          mull
                   index(%rbp)
49
                                      # points to current record
          addq
                   %rax, %rdi
          call
                   card
                                      # call constructor
51
          incl
                   index(%rbp)
52
          jmp
                   constLup
53
55 doProq:
          movl
                   $0, count(%rbp) # no people yet
56
  runLoop:
57
          movl
                   $prompt, %edi
                                    # tell user what to do
          call
                   writeStr
59
          movl
                   $32, %esi
                                        # max number of chars
61
          leaq
                   buffer(%rbp), %rdi # place for user input
62
                                        # get user command
          call
                   readI n
63
          orb
                   $0x20, buffer(%rbp) # make first char lower case
64
           cmpb
                   $'q', buffer(%rbp) # quit?
          jе
                   allDone
67
                   $'a', buffer(%rbp) # check for add command
          cmpb
          ine
                   chkDel
70
                   $MAX, count(%rbp)
                                        # check for full list
71
          cmpl
          jb
                   doAdd
                                        # there's space
72
                                        # array is full
          movl
                   $fullMsg, %edi
73
                   writeStr
          call
74
                   cont
          jmp
76 doAdd:
                   $addMsg, %edi
                                        # feedback for user
77
          movl
          call
                   writeStr
78
          leaq
                   cards(%rbp), %rdi
                                        # the array
79
                                        # length of each record
          movl
                   $cardSize, %eax
                                        # times number of records in array
          mull
                   count (%rbp)
81
          addq
                   %rax, %rdi
                                        # points to next open space
82
          call
                   cardGet
                                        # fill it in
83
          incl
                   count (%rbp)
                   cont
          jmp
85
87 chkDel:
                   $'d', buffer(%rbp) # check for delete command
          cmpb
          jne
                   chkShow
89
          cmpl
                   $0, count(%rbp)
                                        # anybody on the list?
```

```
doDel
                                           # yes, delete last one
           ja
                                           # no, tell user
           movl
                    $emptyMsg, %edi
92
           call
                    writeStr
           jmp
                    cont
94
  doDel:
           movl
                    $delMsg, %edi
                                           # feedback for user
96
                    writeStr
97
           call
           decl
                    count (%rbp)
98
           jmp
                    cont
100
  chkShow:
101
                    $'s', buffer(%rbp)
                                           # check for show command
           cmpb
102
           jne
                    chkList
103
                    $0, count(%rbp)
                                           # anybody on the list?
104
           cmpl
           ja
                    doShow
                                           # yes, show them
105
                                           # no, tell user
           movl
                    $emptyMsg, %edi
106
           call
                    writeStr
107
           jmp
                    cont
108
  doShow:
109
110
           movl
                    $showMsg, %edi
                                           # feedback for user
           call
                    writeStr
111
112
                    $0, index(%rbp)
                                           # start at beginning
           movl
113
  showLup:
           movl
                    count(%rbp), %eax
115
116
           cmpl
                    %eax, index(%rbp)
                                           # all names?
           jae
                    cont
                                           # yes, next thing
117
           leaq
                    cards(%rbp), %rdi
                                           # the array
118
                                           # length of each record
           movl
                    $cardSize, %eax
119
           mull
                    index(%rbp)
                                           # times number of records in array
120
                    %rax, %rdi
                                           # points to current card
121
           addq
           call
                    cardPut
122
           incl
                    index(%rbp)
123
           jmp
                    showLup
124
  chkList:
126
           cmpb
                    $'l', buffer(%rbp)
                                           # check for list command
127
           ine
                    cont
128
                    $listMsg, %edi
                                           # feedback for user
           movl
           call
                    writeStr
130
131
                    $0, index(%rbp)
           movl
                                           # start at beginning
132
133
  listLup:
           cmpl
                    $MAX, index(%rbp)
                                           # end of list?
134
           jae
                    cont
                                           # yes, next thing
135
                    cards(%rbp), %rdi
                                           # the array
           leaq
136
                                           # length of each record
           movl
                    $cardSize, %eax
137
           mull
                    index(%rbp)
                                           # times number of records in array
138
           addq
                    %rax, %rdi
                                           # points to current card
139
           call
                    cardPut
140
           incl
                    index(%rbp)
141
142
           jmp
                    listLup
143 cont:
           jmp
                    runLoop
145 allDone:
                                      # return 0;
           movl
                    $0, %eax
146
```

```
%rbp, %rsp
                                    # remove local vars
147
           movq
                   %rbp
                                    # restore caller's frame ptr
           popq
148
           ret
                                    # back to OS
1 # cardDef.h
2 # Defines the address card field offsets.
3 # Bob Plantz - 30 June 2009
5 # card definition
           .equ
                   name,0
                   address, name+48
           .equ
                   city, address+80
           .equ
           .equ
                   state,city+24
           .equ
                   zip, state+20
10
                   cardSize,zip+6
           .equ
1 # card.s
2 # card object default constructor.
3 # Bob Plantz - 30 June 2009
    Calling sequence:
5 #
           rdi <- address of object
6 #
           call card
7 #
           returns void
           .include "cardDef.h"
10 # Stack frame
                   thisPtr,-16
           .equ
                   localSize, -16
           .equ
13 # Read only data
           .section .rodata
14
15 nameDefault:
           .string "J. Doe"
17 addressDefault:
           .string "123 Main St."
19 cityDefault:
           .string "Middle Town"
21 stateDefault:
           .string "Kansas"
23 zipDefault:
           .string "12345"
25 # Code
           .text
           .globl card
27
                   card, @function
           .type
29 card:
           pushq
                   %rbp
                                     # save frame pointer
           movq
                   %rsp, %rbp
                                     # our frame pointer
31
                   $localSize, %rsp # for saving argument
           addq
32
           movq
                   %rdi, thisPtr(%rbp)
                                           # save it
33
  # Copy default data into the fields
35
           movl
                   $nameDefault, %edx
                                           # name
                   thisPtr(%rbp), %rsi
           movq
37
           leaq
                   name(%rsi), %rsi
                                           # place to store string
38
                   $(address-name), %edi # max number of chars
           movl
39
           call
                   copyStr
40
```

```
41
                   $addressDefault, %edx # address
          movl
42
          movq
                   thisPtr(%rbp), %rsi
          leag
                   address(%rsi), %rsi
                                          # place to store string
44
          movl
                   $(city-address), %edi # max number of chars
          call
                   copyStr
46
47
                   $cityDefault, %edx
          movl
                                           # city
          movq
                   thisPtr(%rbp), %rsi
                   city(%rsi), %rsi
                                           # place to store string
          leaq
50
          movl
                   $(state-city), %edi
                                           # max number of chars
51
          call
                   copyStr
52
53
                   $stateDefault, %edx
                                          # state
          movl
54
                   thisPtr(%rbp), %rsi
          movq
55
          leaq
                   state(%rsi), %rsi
                                           # place to store string
          movl
                   $(zip-state), %edi
                                           # max number of chars
57
          call
                   copyStr
          movl
                   $zipDefault, %edx
                                           # state
          movq
                   thisPtr(%rbp), %rsi
61
                   zip(%rsi), %rsi
                                           # place to store string
          leaq
                   $(cardSize-zip), %edi # max number of chars
          movl
63
          call
                   copyStr
65
          movq
                   %rbp, %rsp
                                    # remove local vars
                                    # restore caller's frame ptr
                   %rbp
          popq
67
          ret
                                    # back to caller
```

```
copyStr.s
    Copies a C-style text string.
3 #
    Calling sequence:
          rdx <- address of source
           rsi <- address of destination
7 #
          edi <- maximum length to copy (including NULL)
8 #
           call copyStr
      returns number of chars copied, not including NULL.
9 #
10 # assumes maximum length is at least 1.
11 # Bob Plantz - 30 June 2009
12
13 # Code
           .text
14
           .globl
                   copyStr
           .type
                   copyStr, @function
16
  copyStr:
           pushq
                   %rbp
                                      # save frame pointer
18
                                      # our frame pointer
           movq
                   %rsp, %rbp
19
20
                                      # allow room for NULL
           subl
                   $1, %edi
21
           movl
                   $0, %eax
                                     \# count = 0
  loop:
23
           cmpl
                   %eax, %edi
                                      # any more space?
24
           jle
                   done
                                     # no, have to quit
25
                                      # yes, get a char
           movb
                   (%rdx), %cl
           cmpb
                   $0, %cl
                                      # NULL?
27
```

```
# yes, copy is done
          jе
                   done
                                     # no, copy the char
          movb
                   %cl, (%rsi)
29
          incq
                   %rdx
                                     # increment our pointers
          incq
                   %rsi
31
          incl
                   %eax
                                     # and the counter
32
                   loop
                                     # and check for more
          jmp
33
                                     # store NULL char
35 done:
                   $0, (%rsi)
          movb
                   %rbp, %rsp
                                     # remove local vars
          mova
37
                   %rbp
                                     # restore caller's frame ptr
38
          popq
                                     # back to caller
          ret
1 # cardGet.s
    Gets user input values and stores them in a card object.
4 # Calling sequence:
           rdi <- address of object
           call cardGet
7 # Bob Plantz - 30 June 2009
          .include "cardDef.h"
10 # Stack frame
                   thisPtr,-16
11
          . equ
          .equ
                   localSize,-16
12
13 # Read only data
           .section .rodata
15 Prompt:
            .string "Enter the data\n"
17 namePrompt:
           .string "
                              name: "
19 addressPrompt:
            .string "
                           address: "
20
21 cityPrompt:
            .string "
                              city: "
22
23 statePrompt:
            .string "
                             state: "
25 zipPrompt:
            .string "
                          zip code: "
27 # Code
          .text
28
          .globl cardGet
                   cardGet, @function
          .type
30
31 cardGet:
          pushq
                   %rbp
                                      # save frame pointer
32
          movq
                   %rsp, %rbp
                                      # our frame pointer
          addq
                   $localSize, %rsp # local vars.
34
                   %rdi, thisPtr(%rbp) # address of object
          movq
35
36
37
          movl
                   $Prompt, %edi
                                      # tell use to enter data
          call
                   writeStr
  # get user responses
          movl
                   $namePrompt, %edi
                                          # name
40
          call
                   writeStr
41
                   $(address-name), %esi # space allocated for name
          movl
42
          movq
                   thisPtr(%rbp), %rdi # our object
43
```

```
name(%rdi), %rdi
                                           # name field
           leaq
44
           call
                   readLn
45
                   $addressPrompt, %edi
           movl
                                            # address
47
           call
                   writeStr
           movl
                   $(city-address), %esi # space allocated for address
49
                   thisPtr(%rbp), %rdi
                                            # our object
           movq
                   address(%rdi), %rdi
                                            # address field
           leag
51
           call
                   readLn
53
           movl
                   $cityPrompt, %edi
                                            # city
54
           call
                   writeStr
55
           movl
                   $(state-city), %esi
                                            # space allocated for city
56
                                            # our object
                   thisPtr(%rbp), %rdi
57
           movq
                                            # city field
           leaq
                   city(%rdi), %rdi
58
                   readLn
           call
60
                   $statePrompt, %edi
                                            # state
           movl
61
           call
                   writeStr
62
                                            # space allocated for state
           movl
                   $(zip-state), %esi
                   thisPtr(%rbp), %rdi
                                            # our object
           movq
64
                   state(%rdi), %rdi
                                            # state field
           leaq
                   readLn
           call
66
                   $zipPrompt, %edi
           movl
                                            # zip code
68
           call
                   writeStr
          movl
                   $(cardSize-zip), %esi # space allocated for zip
70
           movq
                   thisPtr(%rbp), %rdi
                                            # our object
71
                   zip(%rdi), %rdi
                                            # zip field
           leaq
72
           call
                   readLn
73
74
           movl
                   $0, %eax
                                    # return 0;
75
                   %rbp, %rsp
                                    # remove local vars
           movq
76
                   %rbp
                                    # restore caller's frame ptr
          popq
77
                                    # back to OS
           ret
```

```
1 # cardPut.s
2 # Displays a card object.
4 # Calling sequence:
5 #
           rdi <- address of object
           call cardPut
7 # Bob Plantz - 30 June 2009
           .include "cardDef.h"
10 # Stack frame
           .equ
                   thisPtr,-16
11
                   localSize,-16
           .equ
12
13 # Read only data
            .section .rodata
14
15 Msg:
            .string "*** Address Card ***\n"
16
17 nameMsg:
            .string "
                            name: "
19 addressMsg:
            .string "
                         address: "
20
```

```
21 cityMsg:
            .string "
                           city: "
22
23 stateMsg:
            .string "
                          state: "
24
25 zipMsg:
            .string " zip code: "
26
27 endl:
            .string "\n"
28
29 # Code
           .text
          .globl
                   cardPut
31
                   cardPut, @function
           .type
32
  cardPut:
33
          pushq
                                      # save frame pointer
34
                   %rbp
          movq
                   %rsp, %rbp
                                      # our frame pointer
35
                   $localSize, %rsp # local vars.
          addq
                   %rdi, thisPtr(%rbp) # address of object
          movq
37
                   $Msq, %edi
                                      # tell user about data
          movl
39
          call
                   writeStr
41
  # show each field
          movl
                   $nameMsq, %edi
                                      # name
43
          call
                   writeStr
                   thisPtr(%rbp), %rdi # our object
          mova
45
          leaq
                   name(%rdi), %rdi # name field
          call
                   writeStr
47
                                      # next line (nb: I do them
          movl
                   $endl, %edi
48
                   writeStr
                                      # individually so it's easier
          call
49
50
          movl
51
                   $addressMsg, %edi # address
          call
                   writeStr
52
                   thisPtr(%rbp), %rdi # our object
53
          movq
                   address(%rdi), %rdi # address field
          leaq
          call
                   writeStr
                   $endl, %edi
                                      # next line (nb: I do them
          movl
56
                   writeStr
                                      # individually so it's easier
          call
          movl
                   $cityMsg, %edi
                                      # city
          call
                   writeStr
60
                   thisPtr(%rbp), %rdi # our object
          movq
                   city(%rdi), %rdi # city field
          leag
62
          call
                   writeStr
          movl
                   $endl, %edi
                                      # next line (nb: I do them
64
          call
                   writeStr
                                      # individually so it's easier
          movl
                   $stateMsg, %edi
                                      # state
          call
                   writeStr
          movq
                   thisPtr(%rbp), %rdi # our object
          leaq
                   state(%rdi), %rdi # state field
          call
                   writeStr
71
                                      # next line (nb: I do them
          movl
                   $endl, %edi
72
          call
                   writeStr
                                      # individually so it's easier
73
          movl
                   $zipMsq, %edi
                                      # zip
75
                   writeStr
          call
76
```

13

```
movq
                   thisPtr(%rbp), %rdi # our object
77
                   zip(%rdi), %rdi # zip field
          leag
78
          call
                   writeStr
                   $endl, %edi
          movl
                                     # next line (nb: I do them
                                      # individually so it's easier
          call
                   writeStr
82
                   $0, %eax
                                    # return 0
          movl
                   %rbp, %rsp
                                   # remove local vars
          movq
84
          popq
                   %rbp
                                    # restore caller's frame ptr
          ret
                                    # back to OS
```

See Section E.11 for writeStr and readLn.

E.14 Fractional Numbers

```
14 -1 -
   1 /*
   2 * floatLoop.c
   * shows how round off error breaks a loop control variable
   * * Bob Plantz - 1 July 2009
   7 #include <stdio.h>
   9 int main()
   10 {
         float number:
   11
         int counter = 10;
   12
   13
         number = 0.5;
   14
         while ((number != 0.0) && (counter != 0))
   15
   16
             printf("number = %f and counter = %i\n", number, counter);
   17
   18
             number -= 0.1;
                              // change to 0.0625 to fix
             counter -= 1;
   20
         }
   21
   22
         return 0;
   23
   24 }
```

printf("Before adding the float is %f and the integer is %i\n",

```
fNumber, iNumber);
fNumber += 1.0;
iNumber += 1;
printf("After adding 1 the float is %f and the integer is %i\n",
fNumber, iNumber);

return 0;
}
```

14-5 The following program is provided for you to work with these conversions.

```
1 /*
2 * float2hex.c
   * allows user to see bit pattern of a float
   * Bob Plantz - 1 July 2009
   */
7 #include <stdio.h>
9 int main()
10 {
      float number;
11
      unsigned int *ptr = (unsigned int *)&number;
      char ans[50];
13
      *ans = 'y';
15
      while ((*ans == 'y') || (*ans == 'Y'))
16
          printf("Enter a decimal number: ");
18
          scanf("%f", &number);
          printf("%f => %#0x\n", number, *ptr);
          printf("Continue (y/n)? ");
          scanf("%s", ans);
      }
24
      return 0;
26
27 }
```

a) 3f800000

e) c5435500

b) bdccccd

f) 3ea8f5c3

c) 44faa000d) 3b800000

- g) 4048f5c3
- 14 -6 The following program is provided for you to work with these conversion.

```
1 /*
2 * hex2float.c
3 * converts hex pattern to float
4 * Bob Plantz - 1 July 2009
5 */
6
7 #include <stdio.h>
8
9 int main()
10 {
```

```
unsigned int number;
11
       float *ptr = (float *)&number;
12
       char ans [50];
14
       *ans = 'y';
       while ((*ans == 'y') || (*ans == 'Y'))
16
17
           printf("Enter a hex number: ");
18
           scanf("%x", &number);
           printf("%\#0x \Rightarrow \%f\n", number, *ptr);
20
           printf("Continue (y/n)? ");
22
           scanf("%s", ans);
23
       }
24
25
       return 0;
26
  }
27
```

- a) +2.0 e) 100.03125 b) -1.0 f) 1.2 c) +0.0625 g) 123.449997
- d) -16.03125 h) -54.320999
- 14-7 The bit pattern for +2.0 is 01000...0. Because IEEE 754 uses a biased exponent format, all the floating point numbers in the range 0.0 +2.0 are within the bit pattern range 00000...0 01000...0. So half the positive floating point numbers are in the range 00000...0 00111...0, and the other half in the range 01000...0 01111...1.

The same argument applies to the negative floating point numbers.

```
14-8
              .file
                       "casting.c"
   1
              .section
                                . rodata
   3 .LC0:
              .string "Enter an integer: "
   5 .LC1:
              .string "%i"
   7 .LC3:
              .string "%i + %lf = %lf\n"
              .text
     .globl main
   10
                       main, @function
   11
              .type
  12 main:
              pushq
                       %rbp
                       %rsp, %rbp
              movq
   14
              subq
                       $48, %rsp
              movl
                       $.LC0, %edi
   16
                       $0, %eax
              movl
              call
                       printf
   18
              leaq
                       -4(%rbp), %rsi
   19
              movl
                       $.LC1, %edi
              movl
                       $0, %eax
              call
                       scanf
   22
              movabsq $4608218246714312622, %rax # y = 1.23;
  23
                       %rax, -16(%rbp)
                                                     # store x
              movq
  24
              movl
                       -4(%rbp), %eax
                                                     # load x
  25
```

```
cvtsi2sd
                            %eax, %xmm0
                                                 \# xmm0 = (double)x
           addsd
                    -16(%rbp), %xmm0
                                                 # xmm0 += y
27
           movsd
                   %xmm0, -24(%rbp)
                                                 \# z = xmm0
           movl
                    -4(%rbp), %esi
           movsd
                    -24(%rbp), %xmm0
           movq
                    -16(%rbp), %rax
31
                   %xmm0, %xmm1
           movapd
           movq
                   %rax, -40(%rbp)
33
           movsd
                    -40(%rbp), %xmm0
           movl
                   $.LC3, %edi
35
           movl
                   $2, %eax
                   printf
           call
37
           movl
                   $0, %eax
38
           leave
39
           ret
40
           .size
                   main, .-main
41
           .ident
                   "GCC: (Ubuntu 4.3.3-5ubuntu4) 4.3.3"
42
                            .note.GNU-stack, "",@progbits
           .section
```

E.15 Interrupts and Exceptions

```
15 -1
   1 # myCatC.s
   2 # Writes a file to standard out
   3 # Runs in C environment, but does not use C libraries.
   4 # Bob Plantz - 1 July 2009
   6 # Useful constants
                       STDIN, 0
              . equ
                       STDOUT, 1
              .equ
              .equ
                       theArg,8
        # from asm/unistd_64.h
   10
              .equ
                       READ, 0
   11
                       WRITE, 1
   12
              .equ
              .equ
                       OPEN, 2
   13
                       CLOSE,3
              .equ
   14
              .equ
                       EXIT,60
   15
        # from bits/fcntl.h
   16
              .equ
                       O_RDONLY,0
   17
   18
              .equ
                       O_WRONLY,1
              .equ
                       0_RDWR,3
   19
     # Stack frame
                       aLetter, -16
              .equ
  21
                       fd, -8
   22
              . equ
                       localSize, -16
              .equ
   23
     # Code
              .text
                                       # switch to text segment
   25
              .globl
                       main
   26
                       main, @function
              .type
   27
  28
     main:
                       %rbp
              pushq
                                       # save caller's frame pointer
              movq
                       %rsp, %rbp
                                       # establish our frame pointer
              addq
                       $localSize, %rsp
                                            # for local variable
  31
   32
              movl
                       $OPEN, %eax
                                            # open the file
   33
              movq
                       theArg(%rsi), %rdi # the filename
```

```
movl
                   $0_RDONLY, %esi
                                       # read only
          syscall
36
                                       # save file descriptor
          movl
                   %eax, fd(%rbp)
                   $READ, %eax
          movl
          movl
                   $1, %edx
                                       # 1 character
40
                   aLetter(%rbp), %rsi # place to store character
          leag
                   fd(%rbp), %edi
                                       # standard in
          movl
42
                                       # request kernel service
          syscall
44
  writeLoop:
45
                   $0, %eax
                                       # any chars?
          cmpl
                                       # no, must be end of file
          jе
                   allDone
47
                   $1, %edx
                                       # yes, 1 character
          movl
48
                   aLetter(%rbp), %rsi # place to store character
49
          leaq
                   $STDOUT, %edi
                                       # standard out
          movl
          movl
                   $WRITE, %eax
51
                                       # request kernel service
          syscall
53
                   $READ, %eax
                                       # read next char
          movl
          movl
                   $1, %edx
                                       # 1 character
55
                   aLetter(%rbp), %rsi # place to store character
          leaq
                   fd(%rbp), %edi
                                       # standard in
          movl
57
                                       # request kernel service
          syscall
                                       # check the char
          jmp
                   writeLoop
59
60 allDone:
          movl
                   $CLOSE, %eax
                                       # close the file
61
                   fd(%rbp), %edi
                                       # file descriptor
          movl
62
                                       # request kernel service
          syscall
63
                                       # delete local variables
          movq
                   %rbp, %rsp
64
65
          popq
                   %rbp
                                       # restore caller's frame pointer
66
          movl
                   $EXIT, %eax
                                       # end this process
67
          syscall
```

Bibliography

- [1] Peter Abel. IBM PC Assembly Language and Programming, Fifth Edition. Prentice-Hall, 2001
- [2] AMD64 Architecture Programmer's Manual, Volume 1: Application Programming; http://developer.amd.com/devguides.jsp
- [3] AMD64 Architecture Programmer's Manual, Volume 2: System Programming; http://developer.amd.com/devguides.jsp
- [4] AMD64 Architecture Programmer's Manual, Volume 3: General-Purpose and System Instructions Programming; http://developer.amd.com/devguides.jsp
- [5] AMD64 Architecture Programmer's Manual, Volume 4: 128-Bit Media Instructions; http://developer.amd.com/devguides.jsp
- [6] AMD64 Architecture Programmer's Manual, Volume 5: 64-Bit Media and x87 Floating-Point Instructions; http://developer.amd.com/devguides.jsp
- [7] Jonathan Bartlett. Programming from the Ground Up. Bartlett Publishing, 2004
- [8] Barry B. Brey. The Intel Microprocessors, Fifth Edition. Prentice Hall, 2000
- [9] Randal E. Bryant and David R. O'Hallaron. Computer Systems. Prentice Hall, 2003
- [10] C programming language standard ISO/IEC 9899:TC3. Committee Draft, September 7, 2007.
- [11] Richard C. Detmer. *Introduction to 80x86 Assembly Language and Computer Architecture*. Jones and Bartlett Publishers, 2001
- [12] Jeff Duntemann. Assembly Language Step-By-Step: Programming with DOS and Linux, Second Edition. John Wiley & Sons, 2000
- [13] ELF-64 Object File Format, Version 1.5 Draft 2, 1998; http://busybox.net/cgi-bin/viewcvs.cgi/trunk/docs/elf-64-gen.pdf
- [14] IA-32 Intel® 64 and IA-32 Architecture Software Developer's Manual, Volume 1: Basic Architecture; http://www.intel.com/products/processor/manuals/index.htm
- [15] IA-32 Intel® 64 and IA-32 Architecture Software Developer's Manual, Volume 2A: Instruction Set Reference A-M; http://www.intel.com/products/processor/manuals/index.htm
- [16] IA-32 Intel® 64 and IA-32 Architecture Software Developer's Manual, Volume 2B: Instruction Set Reference N-Z; http://www.intel.com/products/processor/manuals/index.htm
- [17] IA-32 Intel® 64 and IA-32 Architecture Software Developer's Manual, Volume 3A: System Programming Guide; http://www.intel.com/products/processor/manuals/index.htm
- [18] IA-32 Intel® 64 and IA-32 Architecture Software Developer's Manual, Volume 3B: System Programming Guide; http://www.intel.com/products/processor/manuals/index.htm

486 BIBLIOGRAPHY

[19] Kip R. Irvine. Assembly Language for Intel-Based Computers, Fourth Edition. Prentice Hall, 2003

- [20] Bruce F. Katz. Digital Design: From Gates to Intelligent Machines. Da Vinci Engineering Press, 2006
- [21] John R. Levine. Linkers & Loaders. Elsevier Science & Technology Books, 1999
- [22] Mike Loukides and Andy Oram. Programming with GNU Software. O'Reilly, 1997
- [23] M. Morris Mano. Digital Design, Third Edition. Prentice Hall, 2002
- [24] Alan B. Marcovitz. Introduction to Logic Design, Second Edition. McGraw-Hill, 2005
- [25] Michael Matz, Jan Hubicka, Andreas Jaeger, and Mark Mitchell. System V Application Binary Interface AMD64 Architecture Processor Supplement, Draft Version 0.99, December 7, 2007; http://www.x86-64.org/documentation.html
- [26] Merriam-Webster's Online Dictionary; http://m-w.com
- [27] Bob Neveln. Linux Assembly Language Programming. Prentice Hall, 2000
- [28] David A. Patterson and John L. Hennessy. *Computer Organization and Design*, Third Edition. Morgan Kaufmann, 2005
- [29] Richard M. Stallman, Roland Pesch, Stan Shebs, et al. Debugging with GDB. GNU Press, 2003
- [30] Richard M. Stallman and Roland McGrath. GNU Make. GNU Press, 2002
- [31] William Stallings. Computer Organization & Architecture: Designing for Performance, Sixth Edition. Prentice Hall, 2002
- [32] Bjarne Stroustrup. The Design and Evolution of C++. Addison-Wesley, 1994
- [33] System V Application Binary Interface, Intel386TM Architecture Processor Support, Fourth Edition, The SCO Group, 1997; http://www.sco.com/developers/devspecs/
- [34] Andrew S. Tanenbaum. Structured Computer Organization, Fifth Edition. Prentice Hall, 2006
- [35] John von Neumann. First Draft of a Report on the EDVAC Moore School of Electrical Engineering, University of Pennsylvania, 1945

Index

activation record, 237	base, 8
active-low, 98	base pointer, 121
adder	basic data types, 43
full, 83	BCD code, 50
half, 83	Binary Coded Decimal, 50
addition,	binary point, 319
binary, 29	bit, 7
hexadecimal, 30	bit mask, 273
address, memory, 10	bitwise logical operators, 46
symbolic name for, 13	Boolean algebra, 55
addressing mode, 157	Boolean algebra properties
base register plus offset, 165	associative, 56
immediate data, 157, 202	commutative, 57
indexed, 292	complement, 57
register direct, 157, 202	distributive, 58
rip-relative, 212	idempotent, 57
adjacency property, 64	identity, 57
algebra	involution, 58
Boolean, 55	null, 57
alternating current, 70	Boolean expressions
ALU, 118	canonical product, 60
AND, 55	canonical sum, 59
antifuse, 91	maxterm, 60
Arithmetic Logic Unit, 118	minterm, 59
array, 291	product of maxterms, 60
ASCII, 20	product of sums, 60
assembler, 147	product term, 59
assembler directive, 136	sum of minterms, 59
.ascii, 156	sum of products, 59
.asciz, 156	sum term, 59
.byte, 156	borrow, 32
.equ, 170	branch point, 106
.globl, 138	bus, 4, 122
.include, 303	address, 4, 122
.long, 156	asynchronous, 353
. quad, 156	${ m control},4,122$
.space, 156	data, 4, 122
string, 156	synchronous, 353
.text, 137	timing, 353
.word, 156	byte, 7
assembly language, 135	C atrilo atring 91
efficiency, 1	C-style string, 21
required, 1	call stack, 158 canonical product, 60
assembly language mnemonic, 136	canonical sum, 59
assignment operator, 183, 185	Carry Flag, 28, 34, 41
assignment operator, 165, 165 asynchronous D flip-flop, 101	Central Processing Unit, 3, 116
1 1,	
AT&T syntax, 141	CF, 34, 41

-::	maristance 70
circuit	resistance, 70
combinational, 82	resistor, 70
clock, 95	series, 71
clock generator, 95	time constant, 72
clock pulses, 95	transient, 70
COBOL, 50	voltage, 69
comment field, 137	voltage level, 70
comment line, 136	volts, 69
compile, 133	watt, 69
compiler-generated label, 143	ELF, 137
complement, 56	ELF:section, 137
condition codes, 121	ELF:segment, 138
control characters, 20	endian
Control Unit, 118	big, 19
control unit, 6	little, 19, 128
•	
convert	exception processing cycle, 345
binary to decimal, 9	Executable and Linking Format, 137
binary to signed decimal, 37	finite state machine 04
hexadecimal to decimal, 9	finite state machine, 94
signed decimal-to-binary, 38	fixed point, 320
unsigned decimal to binary, 9	Flags Register, 118
CPU, 3, 116	flip-flop
block diagram, 117	D, 100
overview, 116	JK, 102
current, 69	T, 102
,	floating point, 321
data	errors, 321
storing in memory, 12	extended format, 330
data types, 12	fp <i>n</i> registers, 330
debugger, 16	limitation, 324
decimal fractions, 319	range, 322
decoder, 86	stack, 331
DeMorgan's Law, 58	x87, 326
device handler, 355	fractional values, 319
division, 280	FSM, 94
D latch, 99	function
do-while, 221	called, 251
don't care, 69	calling, 250
DRAM, 114	designing, 173
00 11 10 10 1	epilogue, 140
effective address, 167	prologue, 140
electronics, 69	writing, 176
AC, 70	functions
amp, 69	32-bit mode, 251
ampere, 69	64-bit mode, 242
battery, 70	
capacitance, 70	gate
capacitor, 72	AND, 55
coulomb, 69	NAND, 77
DC, 70	NOR, 77
direct current, 70	NOT, 56
inductance, 70	OR, 56
inductor, 73	XOR, 68
ohms, 70	gate descriptor, 343
parallel, 71	gdb, 16
- · · · · · · · · · · · · · · · · · · ·	
passive elements, 70	commands, 16, 126, 378
power supply, 70	Gray code, 50

handler, 343	syscall, 177
Harvard architecture, 4	test, 210
hexadecimal, 6, 7	xor, 258
human convenience, 15	instruction execution cycle, 123
114111411 0011 (011101100) 10	instruction fetch, 123
I/O, 3	Instruction Pointer, 117
devices, 4	instruction pointer, 120
isolated, 355	instruction prefixes, 199
memory-mapped, 355, 356	Instruction Register, 117
programming, 4	instruction register, 123
IDE, 132	instructions
identifier, 136, 137	cmovsf, 230
IEEE 754, 323	cvtsi2sd, 330
exponent bias, 324	in, 355
hidden bit, 324	iret, 345
size, 323	out, 355
if-else, 221	syscall, 345
impedance, 70	sysret, 345
implicit argument, 308	instruction set architecture, 2
Input/Output, 3	integer
instruction	signed decimal, 34
add, 189, 194	unsigned decimal, 33
and, 258	Integrated Development Environment, 132
call, 156	interrupt handler, 343, 365
cbtw, 217	invert, 56
cmp, 209	ISA, 2
dec,220	
div , 280	label field, 136
idiv, 282	least significant digit, 8
imul, 276	library, I/O, 44
in, 355	line-oriented, 136
inc, 220	line buffered, 23
ja, 212	linker, 149
jae, 212	listing file, 196
${\sf jb,212}$	literal, 59
jbe, 212	local variables, 169, 176
jg, 212	location, memory, 10
jge, 212	logic
jl, 212	sequential, 94
jle, 212	logical operators, 258
jmp, 213	logic circuit
lea, 167	combinational, 82
leave, $140, 168$	sequential, 94
mov,141	logic gate, 55
movs, 216	Loop Control Variable, 209
movz, 217	
mul,275	machine code, 195
neg,286	mantissa, 319
or, 258	master/slave, 100
pop, 163	maxterm, 60
push, 163	Mealy machine, 95
ret, 168	member data, 308
sal, 269	member function, 308
sar, 268	Memory, 3, 10
shl, 269	memory
shr, 268	data allocation, 156
sub, 190	timing, 352

memory segment:code, 137	pipeline, 106
memory segment:data, 137	PLD, 90
memory segment:heap, 137	positional notation, 8
memory segment:stack, 137	printf
memory segment:text, 137	calling, 171
minimal product of sums, 61	printf, 13
minimal sum of products, 61	conversion codes, 13
minterm, 59	privilege level, 344
mnemonic, 135	procedural programming, 13
mode	product of maxterms, 60
32-bit, 116	product of sums, 60
64-bit, 116	product term, 59
compatibility, 116	program, 4
IA-32e, 116	Programmable Array Logic, 93
long, 116	Programmable Logic Device, 90
Moore machine, 95	programming
most significant digit, 8	bit patterns, 7
multiplexer, 88	pseudo op, 136
multiplication, 274	pseudo op, 100
mux, 88	radix, 8
mux, oo	RAM, 11
name mangling, 308	Random Access Memory, 11
NAND, 77	read,22,44
negating, 36	Read Only Memory, 92
negation, 286	real number, 321
negative, 35	record, 296
NOR, 77	reduced radix complement, 36
normalize, 322	red zone, 240
NOT, 56	register
1101,00	1081001
number systems	general-purpose, 118
number systems	general-purpose, 118
binary, 6, 8	names, 118
binary, 6, 8 decimal, 6, 14	names, 118 register file, 109
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14	names, 118 register file, 109 registers, 109, 118
binary, 6, 8 decimal, 6, 14	names, 118 register file, 109 registers, 109, 118 register storage class, 125
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21 pass	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268 shift register, 111
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21 pass by pointer, 237	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268 shift register, 111 short-circuit evaluation, 230
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21 pass by pointer, 237 by reference, 237, 301	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268 shift register, 111 short-circuit evaluation, 230 SIB byte, 200
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21 pass by pointer, 237 by reference, 237, 301 by value, 237, 301	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268 shift register, 111 short-circuit evaluation, 230 SIB byte, 200 sign-extension, 203
binary, 6, 8 decimal, 6, 14 hexadecimal, 6, 7, 14 octal, 6 object, 306 object, C++, 308 object file, 137 octal, 6 OF, 34, 39, 41 offset, 212 one's complement, 36 operand field, 137 operation field, 136 OR, 56 Overflow Flag, 28, 39, 41 PAL, 93 parity, 20 even, 21 odd, 21 pass by pointer, 237 by reference, 237, 301	names, 118 register file, 109 registers, 109, 118 register storage class, 125 repetition, 208 return address, 156 return value, 139, 237 REX, 199 rflags, 28, 34, 39 ROM, 11, 92 round off, 320 scalar, 326 scanf calling, 171 scanf, 13 conversion codes, 13 section:text, 137 shift bits, 267 left, 269 right, 268 shift register, 111 short-circuit evaluation, 230 SIB byte, 200

Single Instruction, Multiple Data, 326 SRAM, 112 SR latch Reset, 95 Set, 95 SSE, 326 scalar instructions, 327 vector instructions, 327 stack, 143 discipline, 159 operations, 158 overflow, 159 pointer, 162 underflow, 159 stack frame, 165, 237 stack pointer, 121 stack pointer address, 163 stack protection, 263 state, 82 state diagram, 97 state table, 96 stdio.h, 13 ${\sf STDOUT_FILENO},\,22$ struct, 296 field, 296 overall size, 303 subsystems, 3 subtraction, 31 hexadecimal, 33 sum of minterms, 59 sum of products, 59 sum term, 59 switch, 6, 28 system call, 22, 44, 154 this pointer, 311 time constant, 74 toggle, 100 transistor drain, 75 gate, 75 source, 75 tri-state buffer, 112 truth table, 46, 55 two's complement, 34 computing, 37 defined, 35 two's complement code, 34 type casting, 272 unistd.h, 22variable automatic, 168 static, 168 variable argument list, 241 variables

local, 164 vector, 326, 345 von Neumann bottleneck, 5 while statement, 209 write, 22,44x86 architecture, 2