

12. Inspect that the helix has bottomed out on the stationary sheave through the bolt hole.
13. Apply LOCTITE 262 or equivalent to screw threads.



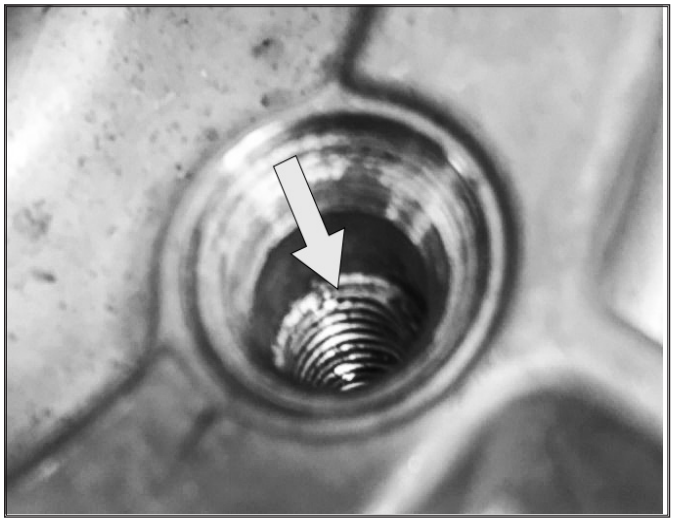



14. Install 4 screws and **torque to 21 ftlb (28 Nm).**
15. Removed driven clutch compression tool.

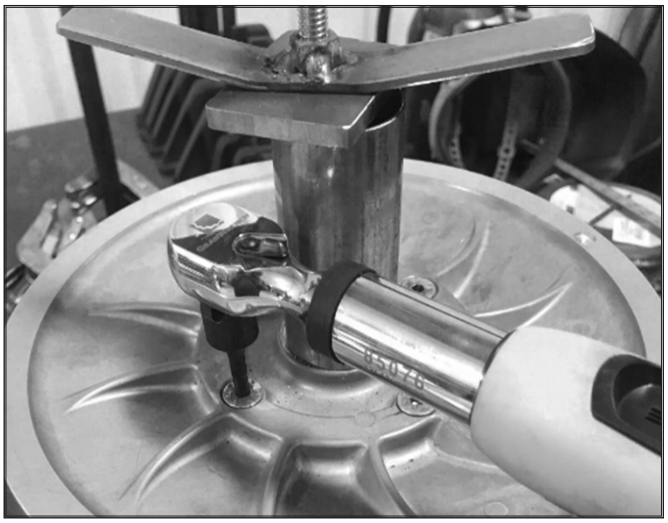

Replacing The Nylon Rollers (ITDS Driven Clutch)

1. Perform the servicing procedure, **Removing The Firewall.**
2. Perform the servicing procedure, **Removing The Drive Belt (ITDS Clutch System).**
3. Perform the servicing procedure, R**emoving The Driven Clutch (ITDS)**
4. Locate the nylon 500-135 Roller, Driven and bend the 500-0136 Tab Lock, Driven-10mm, away from the 500-0137 M10x1.25 bolt head. *See following page.*
5. Using a 16mm socket and impact, remove the bolt securing the nylon roller within the Driven Clutch.
6. While pulling the bolt from the clutch, remove Roller and Flat Washer.

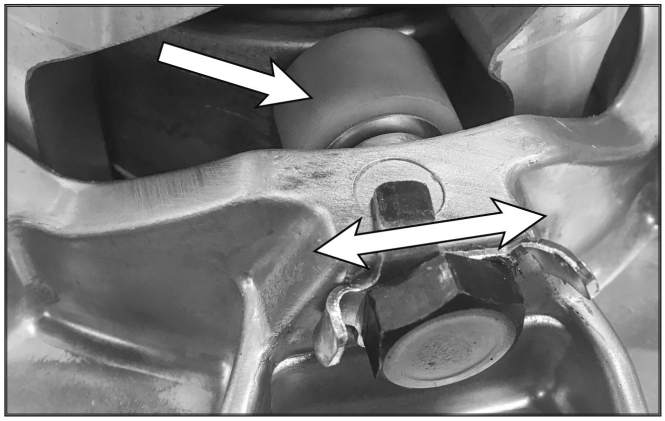

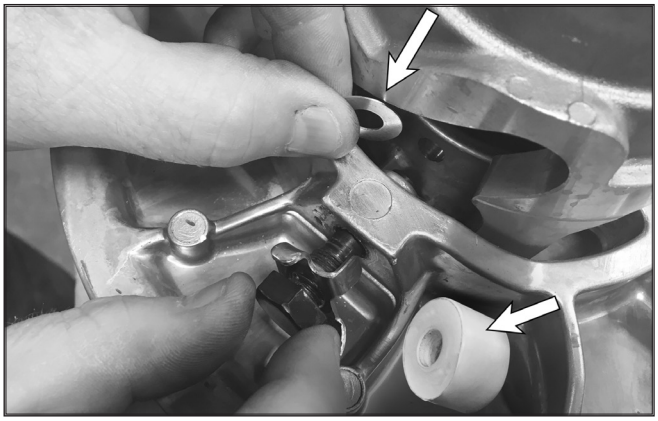

7. Reinstall new nylon 500-135 Roller, Driven to the M10 Bolt ensuring the Flat Washer is installed first.
8. Re-tighten bolt and lock the head of the bolt by re-bending 500-0136 Tab Lock-10mm with a channel lock pliers.

Installing The Driven Clutch (ITDS)

1. Install the key to the keyway of the input shaft and apply anti-seize compound along the length of the shaft.
2. Apply Blue 242 LOCTITE to the HHCS 3/8-16x3.5 Gr5 Zn, and secure the clutch along with Lock Washer and Flat Washer. **Torque fastener to 15 FT. LBS. 20.3Nm**

SECTION WA

Wheels, Axles & Chains

Table of Contents

GENERAL INSTRUCTIONS....WA3
LUBRICATION INFORMATION....WA4
DRIVE CHAIN LUBRICATION....WA4
IDLER CHAIN (FRONTIER MODELS ONLY)....WA4
IDLER CHAIN ADJUSTMENT - SELF-ADJUST IDLER CHAIN (FRONTIER)....WA4
IDLER CHAIN ADJUSTMENT - MANUAL ADJUST (FRONTIER)....WA5
REMOVING THE IDLER CHAINS - MANUAL ADJUST (FRONTIER)....WA5
INSTALLING THE IDLER CHAIN - MANUAL-ADJUST(FRONTIER)....WA6
REMOVE THE IDLER CHAIN-SELF ADJUST (FRONTIER)....WA6
INSTALLING THE IDLER CHAIN-SELF ADJUST (FRONTIER)....WA7
IDLER CHAIN LUBRICATION (FRONTIER MODELS ONLY)....WA7
OUTER AXLE FLANGE & BEARING LUBRICATION....WA8
IDLER CHAIN LUBRICATION (FRONTIER MODELS ONLY)....WA9
INNER AXLE BEARING LUBRICATION....WA9
OUTPUT SHAFT COUPLER LUBRICATION (AURORA MODELS ONLY)....WA10
DRIVE CHAINS....WA10
REMOVING A DRIVE CHAIN....WA10
INSTALLING A DRIVE CHAIN....WA10
DRIVE CHAIN TAKE-UP SYSTEM INSPECTION (SEMI-SELF ADJUST)....WA10
DRIVE CHAIN TAKE-UP SYSTEM INSPECTION (SCISSOR STYLE)....WA12
CHAIN TENIONER SLIDER BLOCK INSPECTION....WA12
REPLACING A SLIDER BLOCK (SEMI-SELF ADJUST)....WA12
REPLACING A SLIDER BLOCK (SCISSOR STYLE CHAIN TENSIONER)....WA13
DISASSEMBLING THE CHAIN TENSIONER SYSTEM (SEMI-SELF ADJUST)....WA13
ASSEMBLING THE CHAIN TENSIONER SYSTEM (SEMI-SELF ADJUST)....WA14
DISASSEMBLING THE CHAIN TENSIONER SYSTEM (SCISSOR STYLE)....WA16
ASSEMBLING THE CHAIN TENSIONER SYSTEM (SCISSOR STYLE)....WA17