
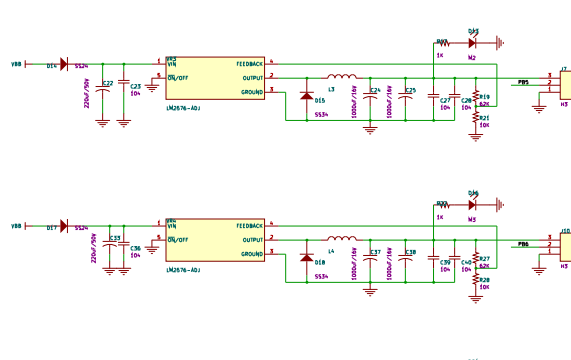


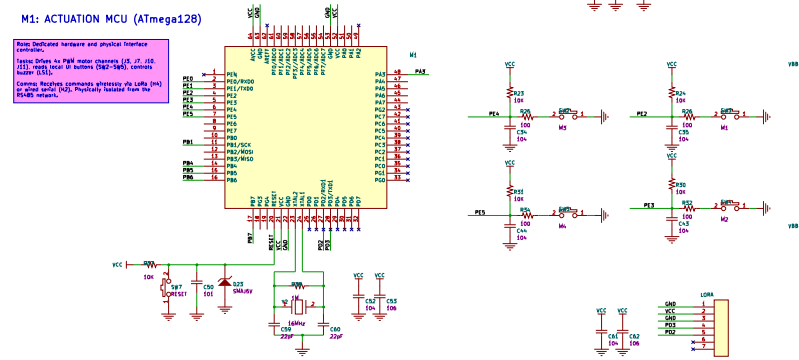

```

M1 (Majors) and M2 (Minors) have NO physical copper data links linking
them, they are designed to communicate wirelessly via dual LoRa modules
(m3 & m4).

* To establish a wired link, you must manually run jumper wires
  between programming headers M1 and M2.
* Turn SW1 OFF to prevent M2's USB bridge and prevent data collisions
  if routing UART over the M1/M2 pins.
*****

```

```

M1 (Majors) and M2 (Minors) have NO physical copper data links linking
them, they are designed to communicate wirelessly via dual LoRa modules
(m3 & m4).

* To establish a wired link, you must manually run jumper wires
  between programming headers M1 and M2.
* Turn SW1 OFF to prevent M2's USB bridge and prevent data collisions
  if routing UART over the M1/M2 pins.
*****

```