Turbine Manufacturing Documentation F25


What happened

1. Looked at the CAD file of the fuselage
2. Discussed the CAD file
3. Split into pairs
4. Group pieces together
5. Construct the fuselage with tape
6. Quality assurance (Basically double check)
7. Get glueing supplies (glue, Insta-Set, uncure, towels to prevent glue spill)
8. Put on PPE (gloves and masks)
9. Glue the fuselage together
    a. Start by gluing the spars into their group
    b. Then glue them onto the bulkheads
    c. Next, glue the landing gear mounts
    d. Glued TSmR and TSmL
    e. Glued Nacelle Mounts
10. Clean up

Notes

Wing spar outer supports (WSOS) are not thick enough; they need to be doubled in size for proper fitment.



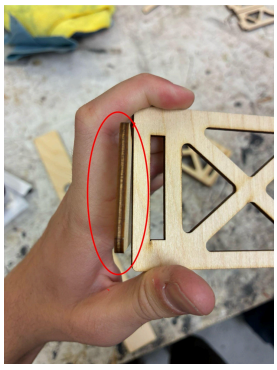

Bottom spar is too thin; double the size for proper fitment.




The nose gear housing is too thin, double or triple in size for a proper fit.




Spars snap easily (just add more glue)

Images of the process



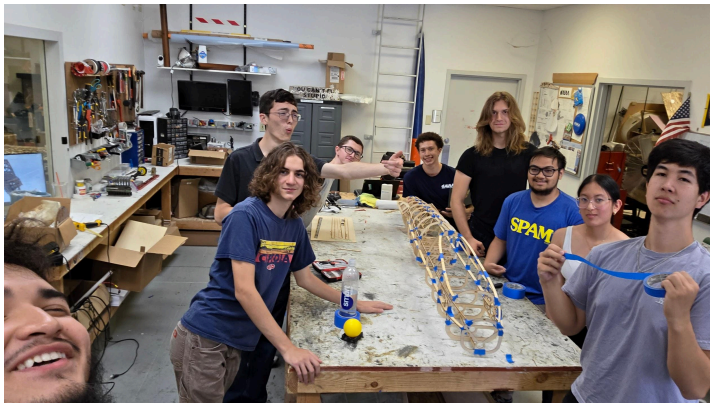




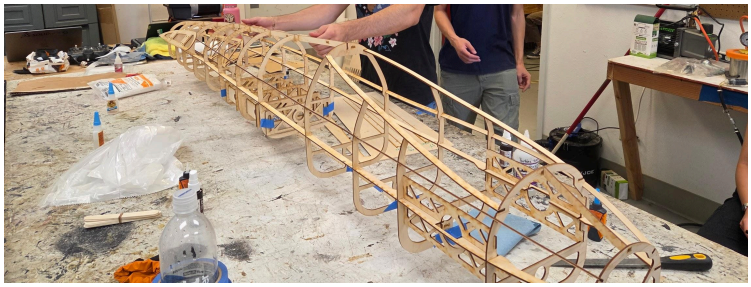






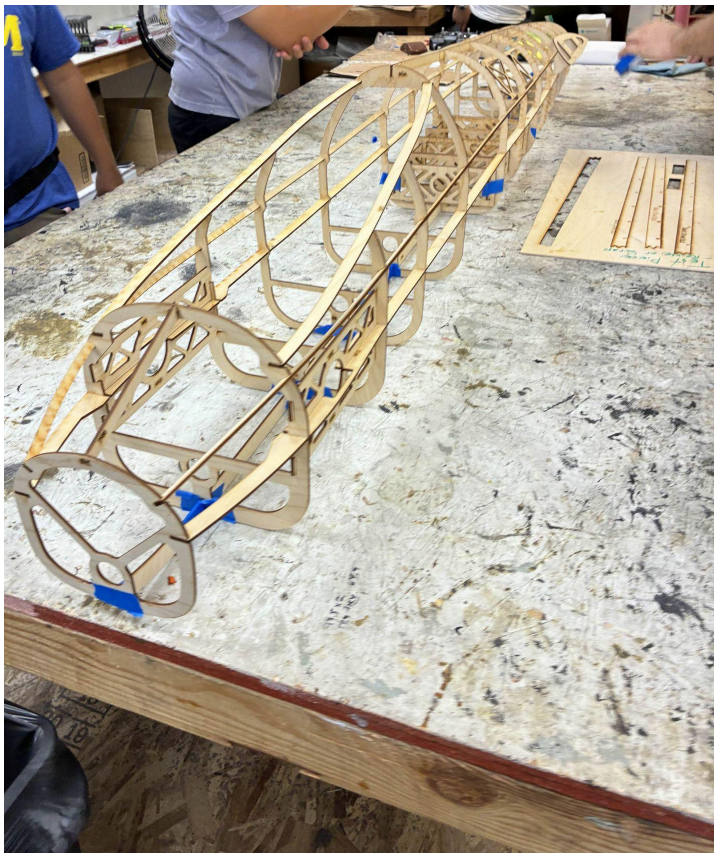




Molds

Some mold parts had their part numbers obscured by the supports. Make sure the numbers will be visible.

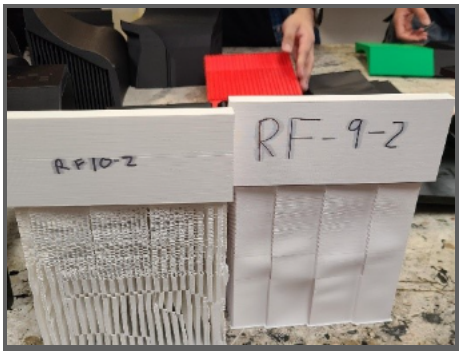


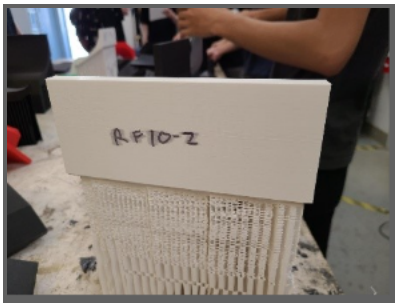


A part was mislabeled. Double check the numbers before sending it off to print.



Need supports for front parts so they match with the back parts.

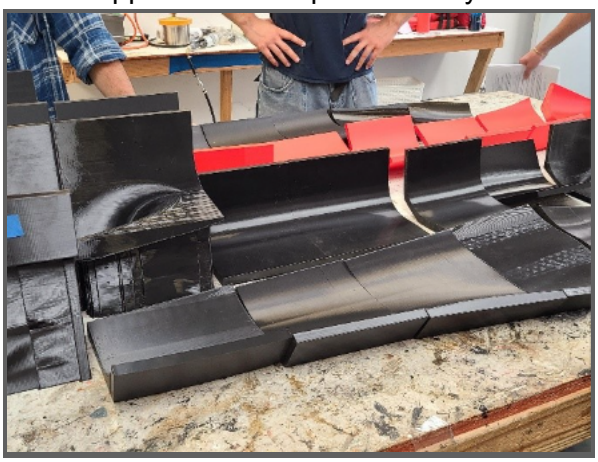

Gaps between mold parts. Fix by using body filler.

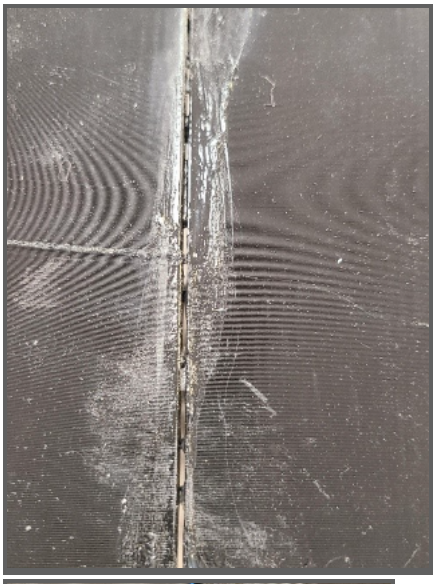



Crack on FL-9-1 and the supports are too long on each side. Cut off the sections interfering with other mold parts around it. Belt sander makes it hot and melts it together so the support is still strong










There was a long gap between FR-10-1&2 that needed to be filled with glue, but was difficult to do because of the mold set-up. We put glue on a piece of cardboard to get the glue in and deep into it without getting glue on the mold surface.

FL-2-2&3 need to be replaced. The surface broke.



Avoid gluing anything to the table!

Don’t break knife blades between the mold pieces!!!

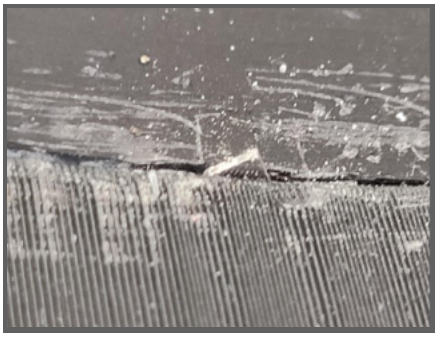






YOU CAN'T FIX
STUPID






DUAL VOLTAGE
USA