Chapter 3


Arithmetic for Computers

Arithmetic for Computers

- Operations on integers
  - Addition and subtraction
  - Multiplication and division
  - Dealing with overflow
- Floating-point real numbers
  - Representation and operations

Integer Addition


- Example: 7 + 6

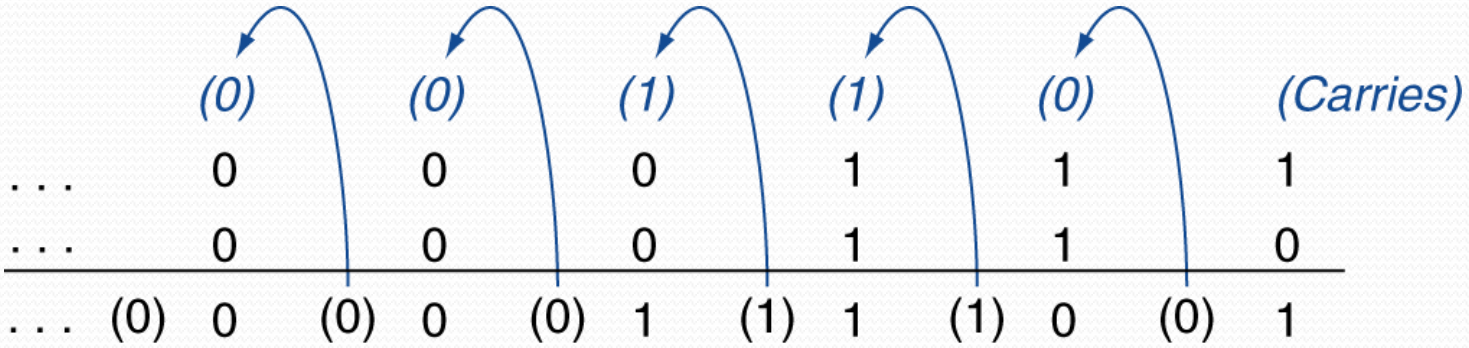


- Overflow if result out of range
  - Adding +ve and –ve operands, no overflow
  - Adding two +ve operands
    - Overflow if result sign is 1
  - Adding two –ve operands
    - Overflow if result sign is 0

Examples of 8-bit Addition

0001 1011 (27)	0111 1110 (126)	1000 0001 (-127)
+1000 0011 (-125)	+0000 0011 (3)	+1000 0010 (-126)
1001 1110 (-98)	1000 0001 (129)	0000 0011 (-253)

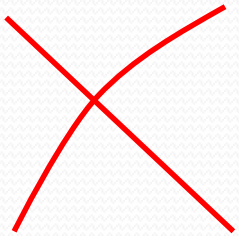

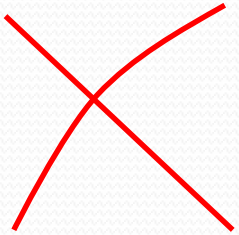

Integer Subtraction

- Add negation of second operand
- Example: 7 – 6 = 7 + (–6)

+7:	0000 0000 … 0000 0111
–6:	1111 1111 … 1111 1010
+1:	0000 0000 … 0000 0001

- Overflow if result out of range
  - Subtracting two +ve or two –ve operands, no overflow
  - Subtracting +ve from –ve operand
    - Overflow if result sign is 0
  - Subtracting –ve from +ve operand
    - Overflow if result sign is 1

Examples of 8-bit Subtraction

0001 1011	(27)	0111 1110	(126)	1000 0001	(-127)
-0000 0011	-(3)	- 1111 1101	-(-3)	-0000 0110	-(6)

0001 1011	(27)	0111 1110	(126)	1000 0001	(-127)
+1111 1101	-(3)	+ 0000 0011	-(-3)	+1111 1010	-(6)
0001 1000	(24)	1000 0001	(-127)	0111 1011	(123)





Dealing with Overflow

- Some languages (e.g., C) ignore overflow
  - Use MIPS `addu`, `addui`, `subu` unsigned instructions
- Other languages (e.g., Ada, Fortran) require raising an exception
  - Use MIPS `add`, `addi`, `sub` instructions
  - On overflow, invoke exception handler
    - Save PC in exception program counter (EPC) register
    - Jump to predefined handler address
    - `mfc0` (move from coprocessor reg) instruction can retrieve EPC value, to return after corrective action

Arithmetic for Multimedia

- Graphics and media processing operates on vectors of 8-bit and 16-bit data
  - Use 64-bit adder, with partitioned carry chain
    - Operate on 8×8-bit, 4×16-bit, or 2×32-bit vectors
  - SIMD (single-instruction, multiple-data)
- Saturating operations
  - On overflow, result is largest representable value
    - c.f. 2's-complement modulo arithmetic
  - E.g., clipping in audio, saturation in video

Multiplication

- Start with long-multiplication approach


multiplicand

multiplier


product

```
    1000
  × 1001
  ------
    1000
   0000
  0000
 1000
 -------
 1001000
```

Length of product is the sum of operand lengths

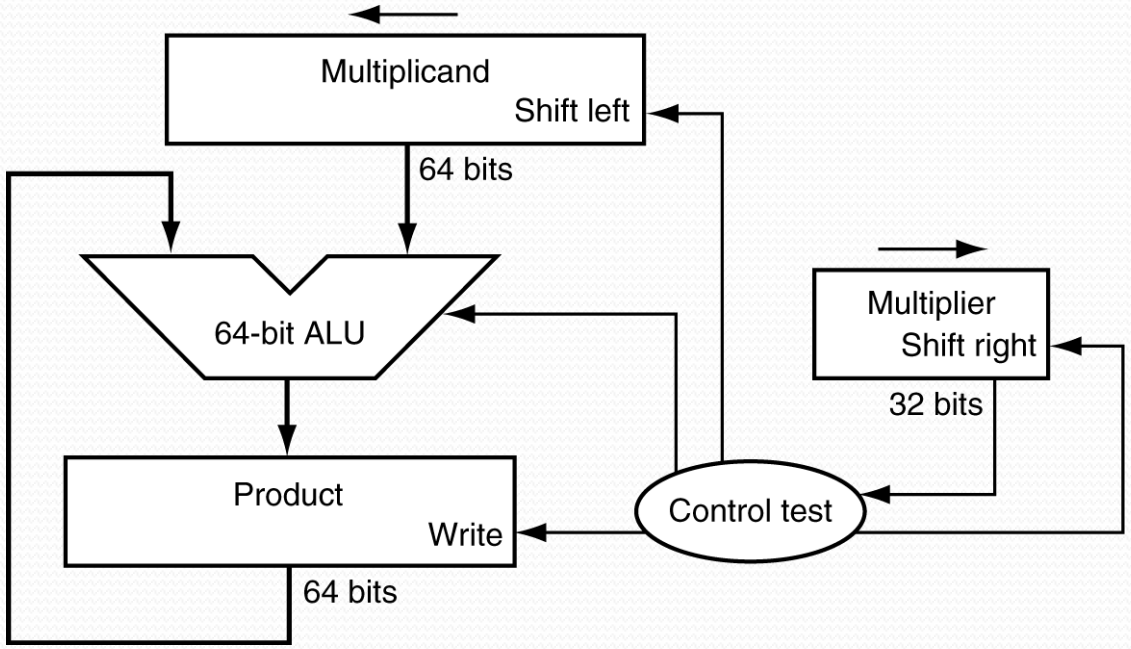


Multiplication Hardware

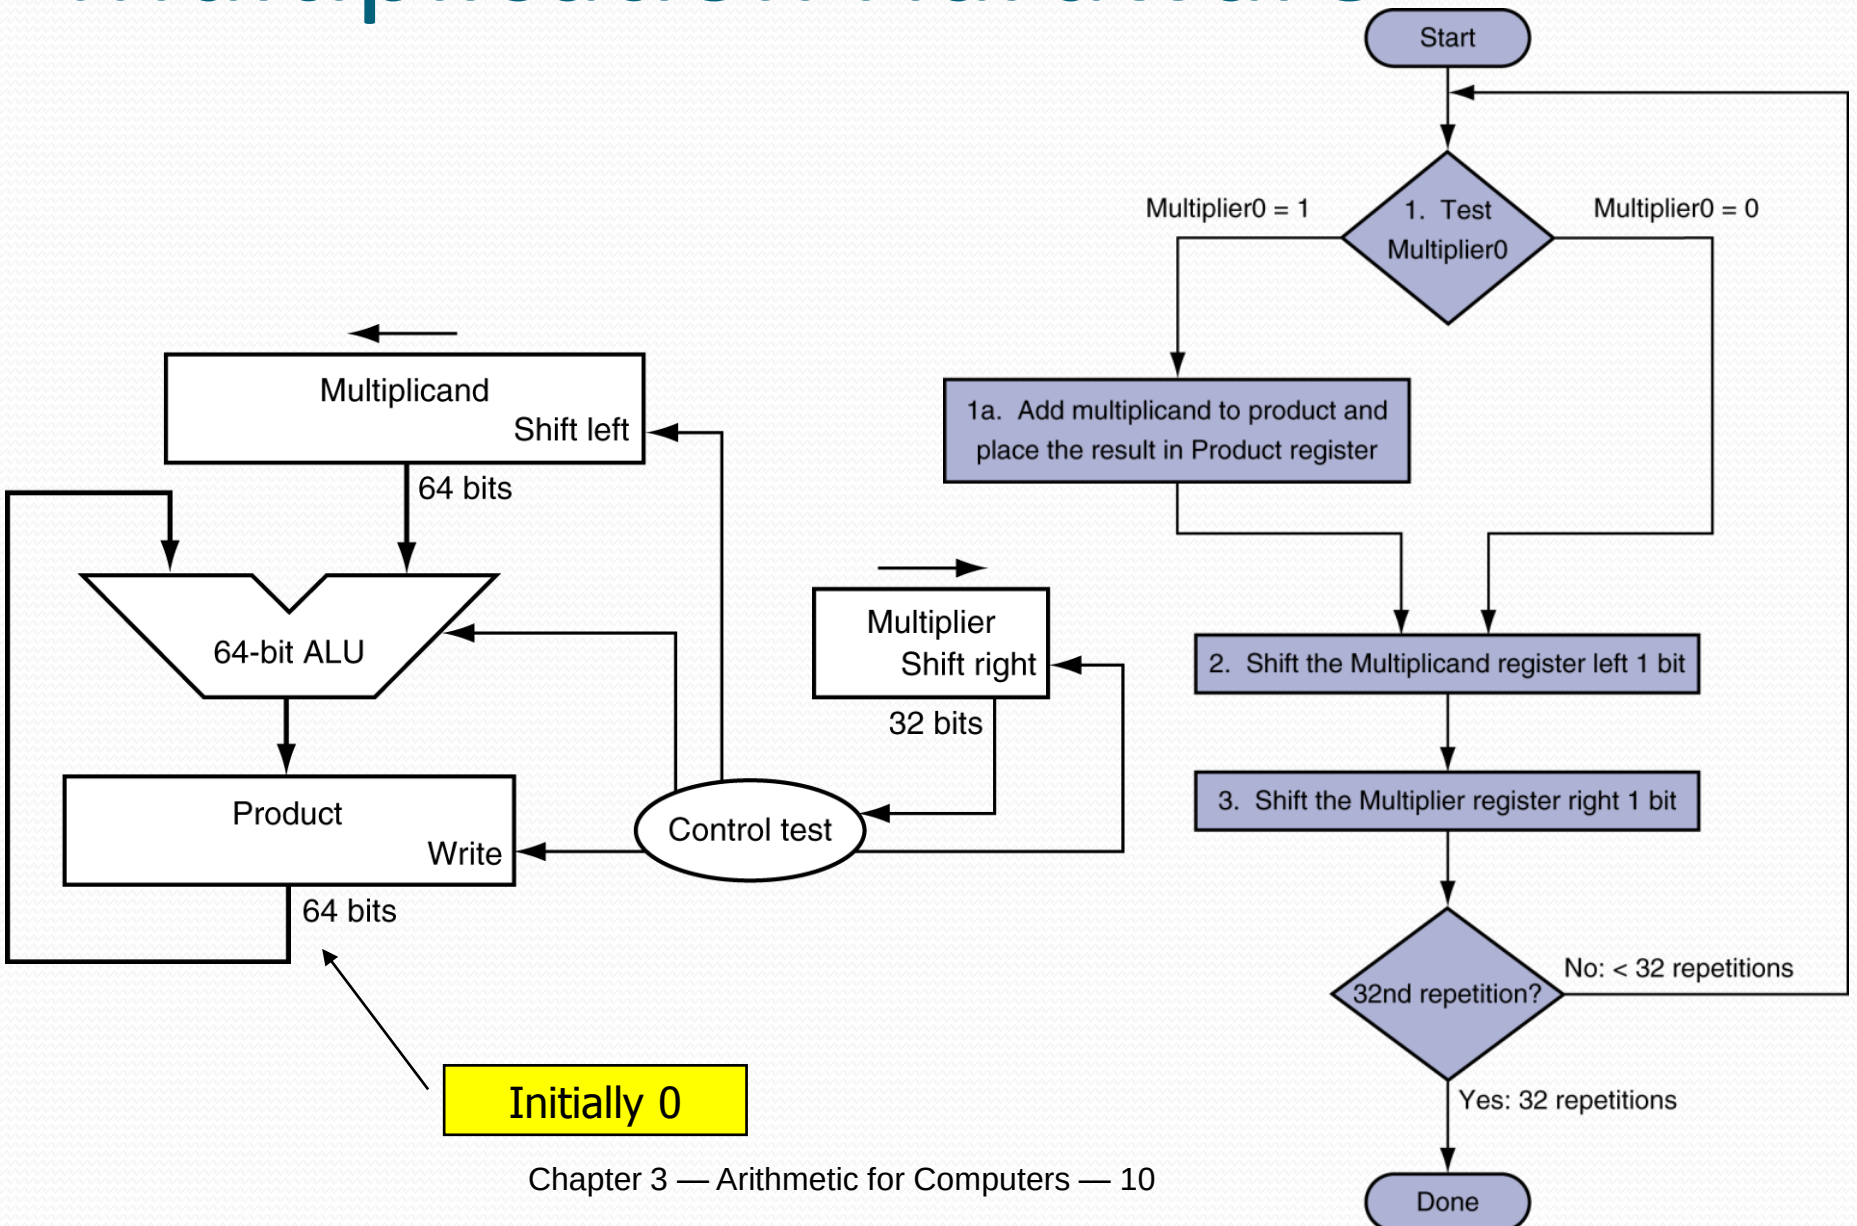

Optimized Multiplier

- Perform steps in parallel: add/shift

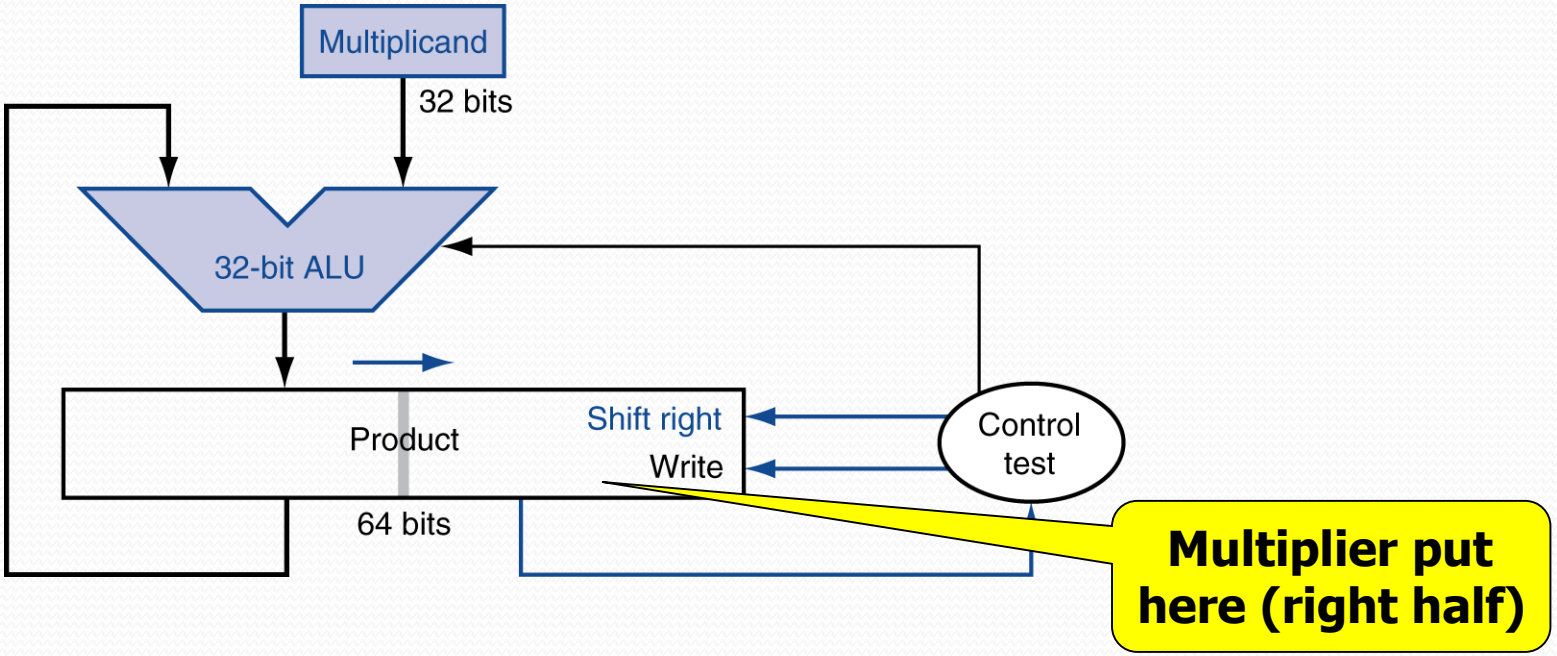

- One cycle per partial-product addition
  - That's ok, if frequency of multiplications is low


Example of Sequential Multiplication

23	10111	Multiplicand
19	10011	Multiplier
	00000	Initial partial product
	10111	Add multiplicand, since multiplier bit is 1
	10111	Partial product after add and before shift
	010111	Partial product after shift
	10111	Add multiplicand, since multiplier bit is 1
	1000101	Partial product after add and before shift[a]
	1000101	Partial product after shift
	01000101	Partial product after shift
	001000101	Partial product after shift
	10111	Add multiplicand, since multiplier bit is 1
	110110101	Partial product after add and before shift
437	0110110101	Product after final shift

a. Note that overflow temporarily occurred.

Faster Multiplier

- Uses multiple adders
  - Cost/performance tradeoff

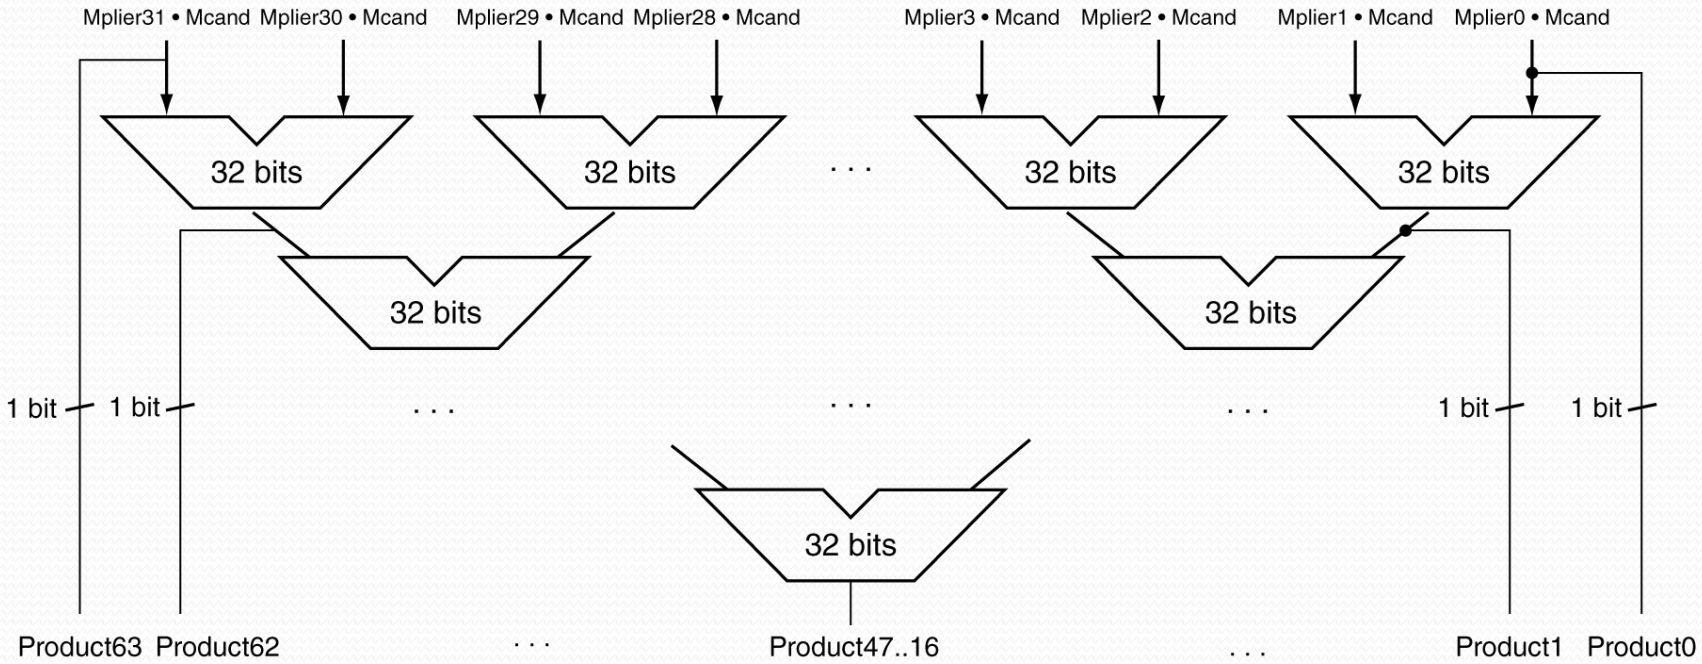


- Can be pipelined
  - Several multiplication performed in parallel

MIPS Multiplication

- Two 32-bit registers for product
  - HI: most-significant 32 bits
  - LO: least-significant 32-bits
- Instructions
  - `mult rs, rt / multu rs, rt`
    - 64-bit product in HI/LO
  - `mfhi rd / mflo rd`
    - Move from HI/LO to rd
    - Can test HI value to see if product overflows 32 bits
  - `mul rd, rs, rt`
    - Least-significant 32 bits of product –> rd


Division

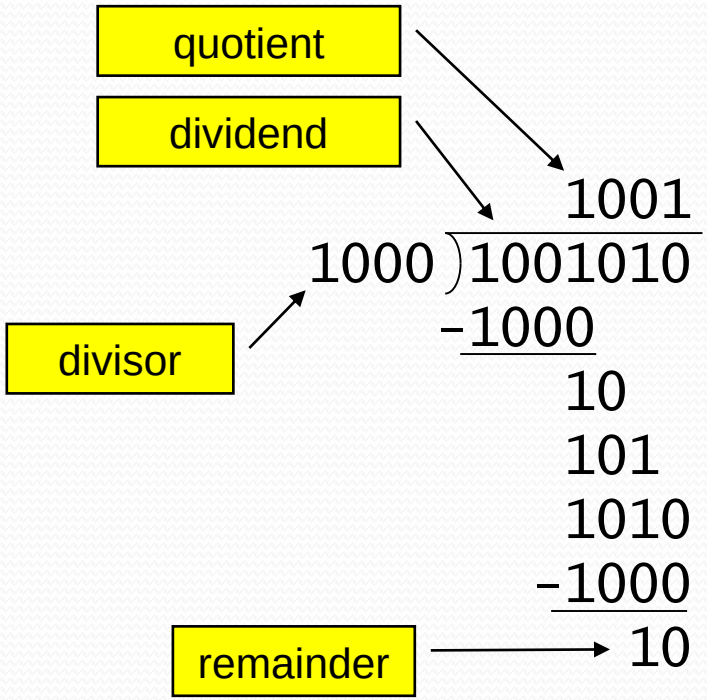

n-bit operands yield *n*-bit quotient and remainder

- Check for 0 divisor
- Long division approach
  - If divisor ≤ dividend bits
    - 1 bit in quotient, subtract
  - Otherwise
    - 0 bit in quotient, bring down next dividend bit
- Restoring division
  - Do the subtract, and if remainder goes < 0, add divisor back
- Signed division
  - Divide using absolute values
  - Adjust sign of quotient and remainder as required

Division Hardware

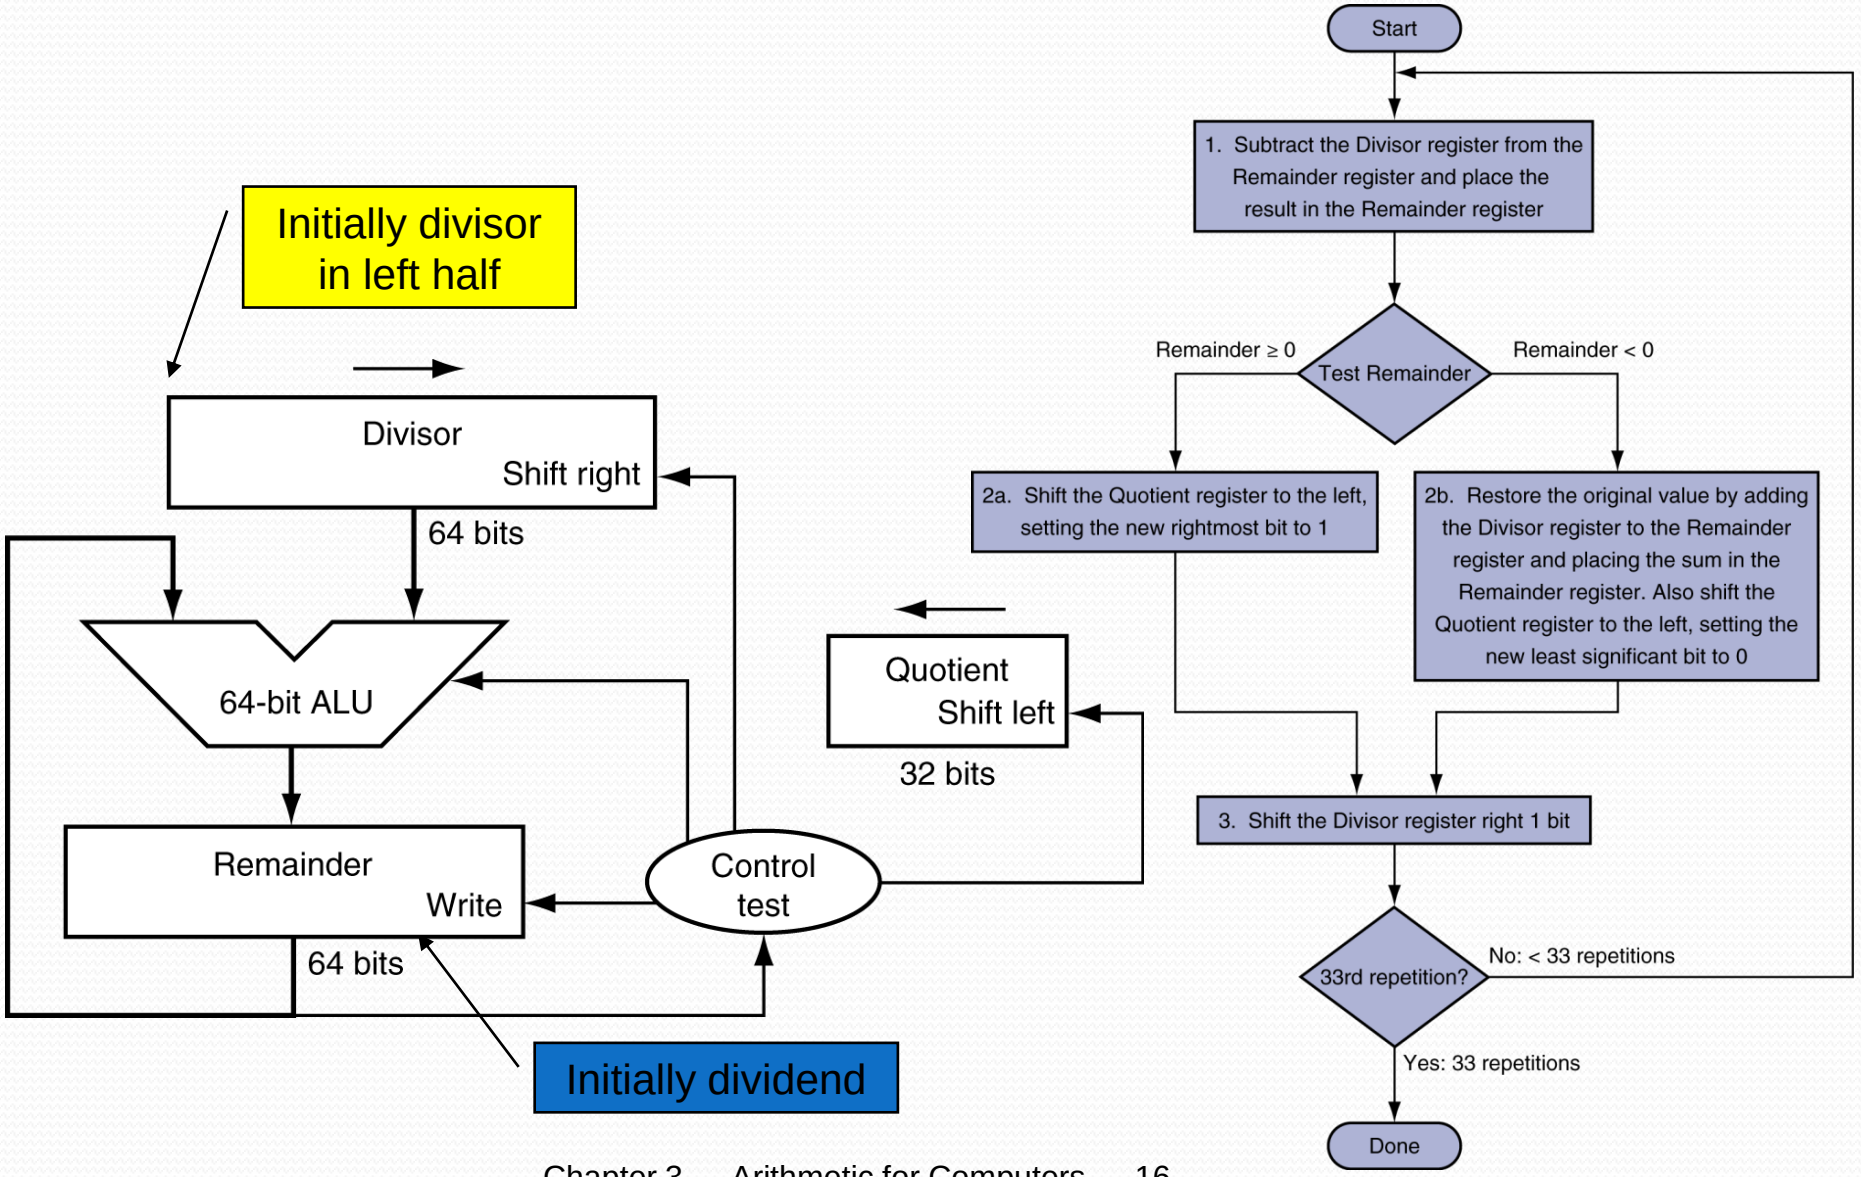


Division Example

- Divide 7_{ten} by 2_{ten} ($0000\ 0111_{two} \div 0010_{two}$)

Iteration	Step	Quotient	Divisor	Remainder
0	Initial values	0000	0010 0000	0000 0111
1	1:Rem=Rem-Div	0000	0010 0000	1110 0111
	2b:Rem<0 → +Div,sllQ, **Q0=0**	0000	0010 0000	0000 0111
	3:Shift Div right	0000	0001 0000	0000 0111
2	1:Rem=Rem-Div	0000	0001 0000	1111 0111
	2b:Rem<0 → +Div,sllQ, **Q0=0**	0000	0001 0000	0000 0111
	3:Shift Div right	0000	0000 1000	0000 0111
3	1:Rem=Rem-Div	0000	0000 1000	1111 1111
	2b:Rem<0 → +Div,sllQ, **Q0=0**	0000	0000 1000	0000 0111
	3:Shift Div right	0000	0000 0100	0000 0111
4	1:Rem=Rem-Div	0000	0000 0100	0000 0011
	2a:Rem≧0 → sllQ, **Q0=1**	0001	0000 0100	0000 0011
	3:Shift Div right	0001	0000 0010	0000 0011
5	1:Rem=Rem-Div	0001	0000 0010	0000 0001
	2a:Rem≧0 → sllQ, **Q0=1**	0011	0000 0010	0000 0001
	3:Shift Div right	0011	0000 0001	0000 0001

Optimized Divider

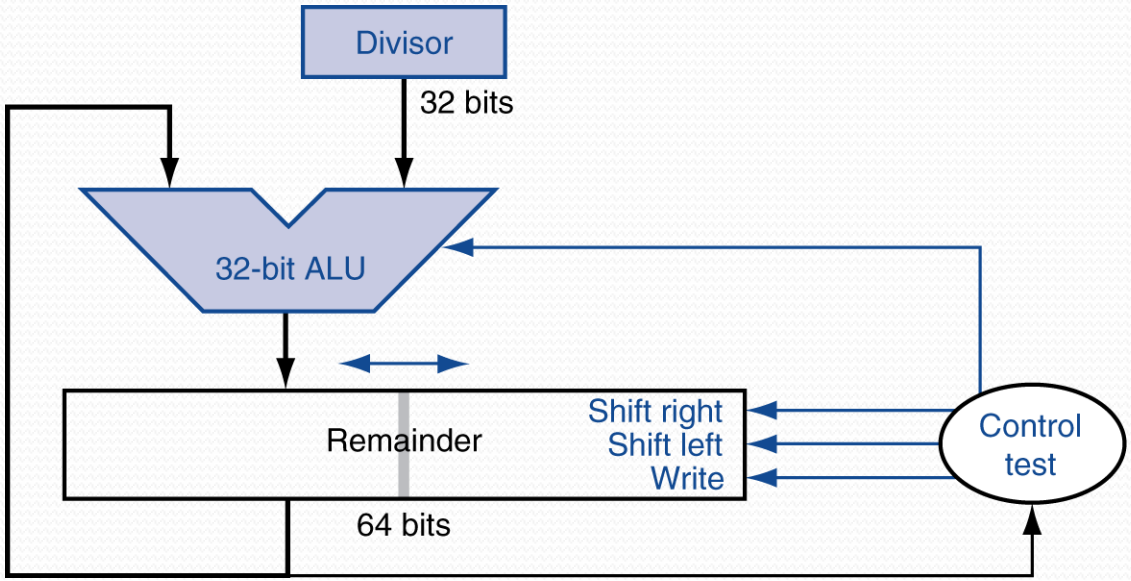

- One cycle per partial-remainder subtraction
- Looks a lot like a multiplier!
  - Same hardware can be used for both

Faster Division

- Can't use parallel hardware as in multiplier
  - Subtraction is conditional on sign of remainder
- Faster dividers (e.g. SRT devision) generate multiple quotient bits per step
  - Still require multiple steps

MIPS Division

- Use HI/LO registers for result
  - HI: 32-bit remainder
  - LO: 32-bit quotient
- Instructions
  - `div rs, rt / divu rs, rt`
  - No overflow or divide-by-0 checking
    - Software must perform checks if required
  - Use `mfhi`, `mflo` to access result


Floating Point

- Representation for non-integral numbers
  - Including very small and very large numbers
- Like scientific notation
  - -2.34×10^{56} ← normalized
  - $+0.002 \times 10^{-4}$ ← not normalized
  - $+987.02 \times 10^{9}$ ← not normalized
- In binary
  - $\pm 1.xxxxxxx_2 \times 2^{yyyy}$
- Types `float` and `double` in C

Floating Point Standard

- Defined by IEEE Std 754-1985
- Developed in response to divergence of representations
  - Portability issues for scientific code
- Now almost universally adopted
- Two representations
  - Single precision (32-bit)
  - Double precision (64-bit)

IEEE 754 Floating-Point Format

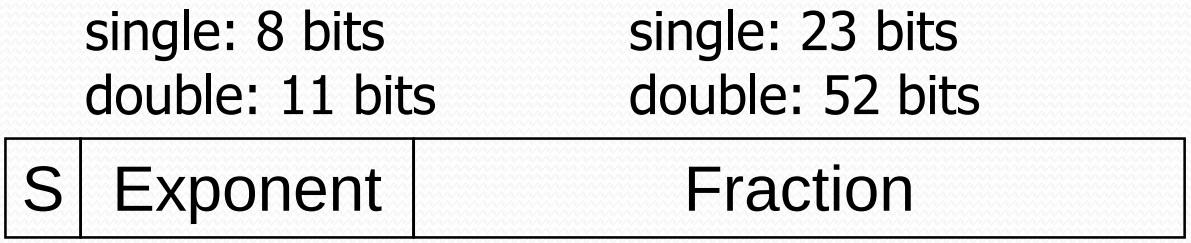

$$x = (-1)^S \times (1 + \text{Fraction}) \times 2^{(\text{Exponent} - \text{Bias})}$$

- S: sign bit (0 ⇒ non-negative, 1 ⇒ negative)
- Normalize significand: 1.0 ≤ |significand| < 2.0
  - Always has a leading pre-binary-point 1 bit, so no need to represent it explicitly (hidden bit)
  - Significand is Fraction with the "1." restored
- Exponent: excess representation: actual exponent + Bias
  - Ensures exponent is unsigned
  - Single: Bias = 127; Double: Bias = 1203

Single-Precision Range

- Exponents 00000000 and 11111111 reserved
- Smallest value
  - Exponent: 00000001
    $\Rightarrow$ actual exponent = 1 – 127 = –126
  - Fraction: 000…00 $\Rightarrow$ significand = 1.0
  - $\pm 1.0 \times 2^{-126} \approx \pm 1.2 \times 10^{-38}$
- Largest value
  - exponent: 11111110
    $\Rightarrow$ actual exponent = 254 – 127 = +127
  - Fraction: 111…11 $\Rightarrow$ significand $\approx$ 2.0
  - $\pm 2.0 \times 2^{+127} \approx \pm 3.4 \times 10^{+38}$

Double-Precision Range

- Exponents 0000…00 and 1111…11 reserved
- Smallest value
  - Exponent: 00000000001
    ⇒ actual exponent = 1 – 1023 = –1022
  - Fraction: 000…00 ⇒ significand = 1.0
  - $\pm 1.0 \times 2^{-1022} \approx \pm 2.2 \times 10^{-308}$
- Largest value
  - Exponent: 1111111110
    ⇒ actual exponent = 2046 – 1023 = +1023
  - Fraction: 111…11 ⇒ significand ≈ 2.0
  - $\pm 2.0 \times 2^{+1023} \approx \pm 1.8 \times 10^{+308}$

Floating-Point Precision

- Relative precision
  - all fraction bits are significant
  - Single: approx 2^{-23}
    - Equivalent to $23 \times \log_{10}2 \approx 23 \times 0.3 \approx 6$ decimal digits of precision
  - Double: approx 2^{-52}
    - Equivalent to $52 \times \log_{10}2 \approx 52 \times 0.3 \approx 16$ decimal digits of precision

Floating-Point Example

- Represent −0.75
  - $-0.75 = (-1)^1 \times 1.1_2 \times 2^{-1}$
  - S = 1
  - Fraction = $1000\ldots00_2$
  - Exponent = −1 + Bias
    - Single: −1 + 127 = 126 = 01111110_2
    - Double: −1 + 1023 = 1022 = 01111111110_2
- Single: 10111111010000…00
- Double: 10111111111010000…00

Floating-Point Example

- What number is represented by the single-precision float

  1100000010100000000000000

  - S = 1
  - Fraction = $01000\ldots00_2$
  - Fxponent = $10000001_2 = 129$
- $x = (-1)^1 \times (1 + 01_2) \times 2^{(129 - 127)}$

  $= (-1) \times 1.25 \times 2^2$

  $= -5.0$

Denormal Numbers

$$x = (-1)^S \times (0 + \text{Fraction}) \times 2^{-\text{Bias}}$$

- Exponent = ooo…o ⇒ hidden bit is o
  - Smaller than normal numbers
    - allow for gradual underflow, with diminishing precision
  - Denormal with fraction = ooo…o

$$x = (-1)^S \times (0 + 0) \times 2^{-\text{Bias}} = \pm 0.0$$

Two representations of 0.0!

Infinities and NaNs

- Exponent = 111...1, Fraction = 000...0
  - ±Infinity
  - Can be used in subsequent calculations, avoiding need for overflow check
- Exponent = 111...1, Fraction ≠ 000...0
  - Not-a-Number (NaN)
  - Indicates illegal or undefined result
    - e.g., 0.0 / 0.0
  - Can be used in subsequent calculations

Floating-Point Addition

- Consider a 4-digit decimal example
  - $9.999 \times 10^{1} + 1.610 \times 10^{-1}$
- 1. Align decimal points
  - Shift number with smaller exponent
  - $9.999 \times 10^{1} + 0.016 \times 10^{1}$
- 2. Add significands
  - $9.999 \times 10^{1} + 0.016 \times 10^{1} = 10.015 \times 10^{1}$
- 3. Normalize result & check for over/underflow
  - 1.0015×10^{2}
- 4. Round and renormalize if necessary
  - 1.002×10^{2}


Floating-Point Addition

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} + -1.110_2 \times 2^{-2}$ (0.5 + −0.4375)
- 1. Align binary points
  - Shift number with smaller exponent
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-1}$
- 2. Add significands
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-}1 = 0.001_2 \times 2^{-1}$
- 3. Normalize result & check for over/underflow
  - $1.000_2 \times 2^{-4}$, with no over/underflow
- 4. Round and renormalize if necessary
  - $1.000_2 \times 2^{-4}$ (no change) = 0.0625

FP Adder Hardware

- Much more complex than integer adder
- Doing it in one clock cycle would take too long
  - Much longer than integer operations
  - Slower clock would penalize all instructions
- FP adder usually takes several cycles
  - Can be pipelined

FP Adder Hardware

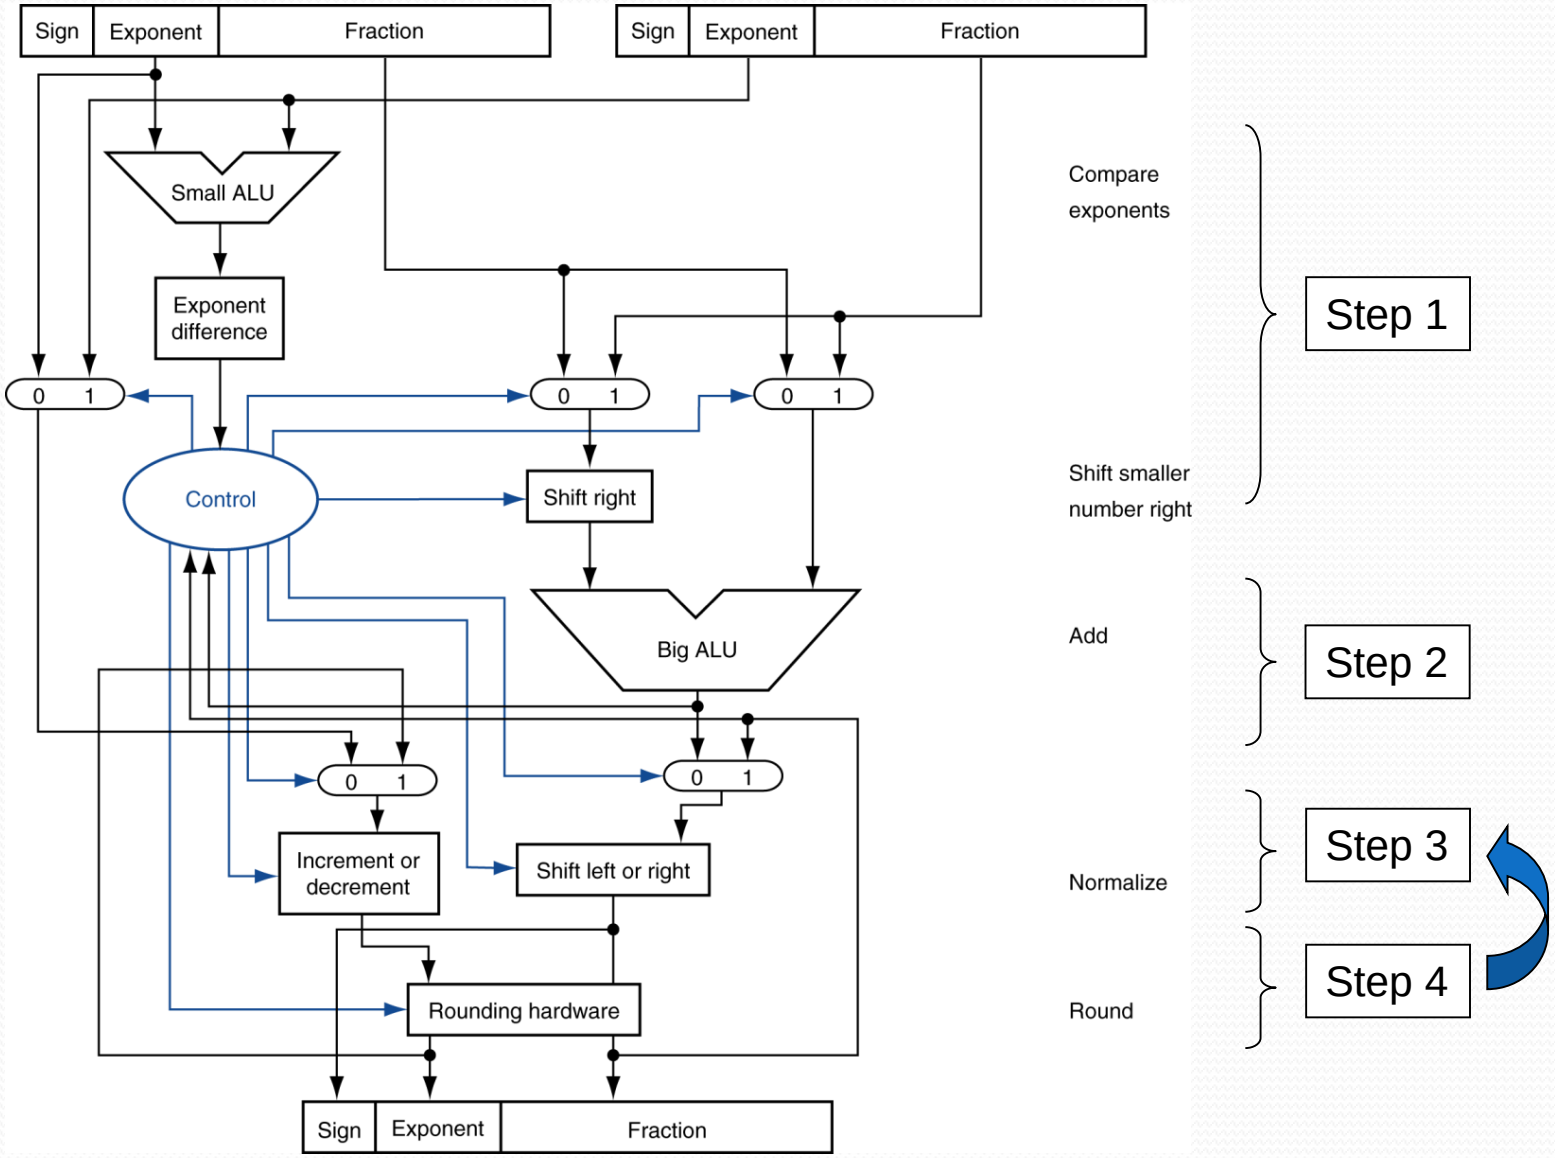

Floating-Point Multiplication

- Consider a 4-digit decimal example
  - $1.110 \times 10^{10} \times 9.200 \times 10^{-5}$
- 1. Add exponents
  - For biased exponents, subtract bias from sum
  - New exponent = 10 + −5 = 5
- 2. Multiply significands
  - $1.110 \times 9.200 = 10.212 \Rightarrow 10.212 \times 10^{5}$
- 3. Normalize result & check for over/underflow
  - 1.0212×10^{6}
- 4. Round and renormalize if necessary
  - 1.021×10^{6}
- 5. Determine sign of result from signs of operands
  - $+1.021 \times 10^{6}$

Floating-Point Multiplication

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} \times -1.110_2 \times 2^{-2}$ (0.5×-0.4375)
- 1. Add exponents
  - Unbiased: $-1 + -2 = -3$
  - Biased: $(-1 + 127) + (-2 + 127) = -3 + 254$ **(– 127!!!!)**
  - Actually it should be $-3 + 127$
- 2. Multiply significands
  - $1.000_2 \times 1.110_2 = 1.110_2 \Rightarrow 1.110_2 \times 2^{-3}$
- 3. Normalize result & check for over/underflow
  - $1.110_2 \times 2^{-3}$ (no change) with no over/underflow
- 4. Round and renormalize if necessary
  - $1.110_2 \times 2^{-3}$ (no change)
- 5. Determine sign: +ve × –ve ⇒ –ve
  - $-1.110_2 \times 2^{-3} = -0.21875$

FP Arithmetic Hardware

- FP multiplier is of similar complexity to FP adder
  - But uses a multiplier for significands instead of an adder
- FP arithmetic hardware usually does
  - Addition, subtraction, multiplication, division, reciprocal, square-root
  - FP $\leftrightarrow$ integer conversion
- Operations usually takes several cycles
  - Can be pipelined

FP Instructions in MIPS

- FP hardware is coprocessor 1
  - Adjunct processor that extends the ISA
- Separate FP registers
  - 32 single-precision: $f0, $f1, … $f31
  - Paired for double-precision: $f0/$f1, $f2/$f3, …
    - Release 2 of MIPs ISA supports 32 x 64-bit FP reg's
- FP instructions operate only on FP registers
  - Programs generally don't do integer ops on FP data, or vice versa
  - More registers with minimal code-size impact
- FP load and store instructions
  - `lwc1`, `ldc1`, `swc1`, `sdc1`
    - e.g., `ldc1 $f8, 32($sp)`

FP Instructions in MIPS

- Single-precision arithmetic
  - `add.s`, `sub.s`, `mul.s`, div.s
    - e.g., add.s $f0, $f1, $f6
- Double-precision arithmetic
  - `add.d`, `sub.d`, `mul.d`, `div.d`
    - e.g., mul.d $f4, $f4, $f6
- Single- and double-precision comparison
  - `c.`*xx*`.s`, `c.`*xx*`.d` (*xx* is `eq`, `lt`, `le`, …)
  - Sets or clears FP **condition-code bit**
    - e.g. c.lt.s $f3, $f4
- Branch on FP condition code true or false
  - `bc1t`, `bc1f`
    - e.g., `bc1t TargetLabel`

FP Example: °F to °C

- C code:

```
float f2c (float fahr) {
  return ((5.0/9.0)*(fahr - 32.0));
}
```

  - `fahr` in $f12, result in $f0, literals in global memory space

- Compiled MIPS code:

```
f2c: lwc1  $f16, const5($gp)
     lwc1  $f18, const9($gp)
     div.s $f16, $f16, $f18
     lwc1  $f18, const32($gp)
     sub.s $f18, $f12, $f18
     mul.s $f0,  $f16, $f18
     jr    $ra
```

FP Example: Array Multiplication

- $X = X + Y \times Z$
  - All 32×32 matrices, 64-bit double-precision elements
- C code:

```
void mm (double x[][],
         double y[][], double z[][]) {
  int i, j, k;
  for (i = 0; i! = 32; i = i + 1)
    for (j = 0; j! = 32; j = j + 1)
      for (k = 0; k! = 32; k = k + 1)
        x[i][j] = x[i][j]
                + y[i][k] * z[k][j];
}
```

  - Addresses of `x`, `y`, `z` in `$a0`, `$a1`, `$a2`, and `i`, `j`, `k` in `$s0`, `$s1`, `$s2`

FP Example: Array Multiplication

- MIPS code:

```
     li   $t1, 32        # $t1 = 32 (row size/loop end)
     li   $s0, 0         # i = 0; initialize 1st for loop
L1:  li   $s1, 0         # j = 0; restart 2nd for loop
L2:  li   $s2, 0         # k = 0; restart 3rd for loop
     sll  $t2, $s0, 5    # $t2 = i * 32 (size of row of x)
     addu $t2, $t2, $s1  # $t2 = i * size(row) + j
     sll  $t2, $t2, 3    # $t2 = byte offset of [i][j]
     addu $t2, $a0, $t2  # $t2 = byte address of x[i][j]
     l.d  $f4, 0($t2)    # $f4 = 8 bytes of x[i][j]
L3:  sll  $t0, $s2, 5    # $t0 = k * 32 (size of row of z)
     addu $t0, $t0, $s1  # $t0 = k * size(row) + j
     sll  $t0, $t0, 3    # $t0 = byte offset of [k][j]
     addu $t0, $a2, $t0  # $t0 = byte address of z[k][j]
     l.d  $f16, 0($t0)   # $f16 = 8 bytes of z[k][j]
     …
```

FP Example: Array Multiplication

…

```
    sll  $t0, $s0, 5        # $t0 = i*32 (size of row of y)
    addu  $t0, $t0, $s2     # $t0 = i*size(row) + k
    sll   $t0, $t0, 3       # $t0 = byte offset of [i][k]
    addu  $t0, $a1, $t0     # $t0 = byte address of y[i][k]
    l.d   $f18, 0($t0)      # $f18 = 8 bytes of y[i][k]
    mul.d $f16, $f18, $f16  # $f16 = y[i][k] * z[k][j]
    add.d $f4, $f4, $f16    # f4=x[i][j] + y[i][k]*z[k][j]
    addiu $s2, $s2, 1       # $k k + 1
    bne   $s2, $t1, L3      # if (k != 32) go to L3
    s.d   $f4, 0($t2)       # x[i][j] = $f4
    addiu $s1, $s1, 1       # $j = j + 1
    bne   $s1, $t1, L2      # if (j != 32) go to L2
    addiu $s0, $s0, 1       # $i = i + 1
    bne   $s0, $t1, L1      # if (i != 32) go to L1
```

Accurate Arithmetic

- IEEE Std 754 specifies additional rounding control
  - Extra bits of precision (guard, round, sticky)
  - Choice of rounding modes
  - Allows programmer to fine-tune numerical behavior of a computation
- Not all FP units implement all options
  - Most programming languages and FP libraries just use defaults
- Trade-off between hardware complexity, performance, and market requirements


Rounding Mode

- Round up (toward +∞)
- Round down (toward -∞)
- Truncate (toward 0)
- Round to nearest even

Round/Guard/Sticky bits

- Rounding accurately requires hardware to include extra bits in the calculation.
- Assume three significant decimal digits

Ex1: $2.56 \times 10^0 + 2.34 \times 10^2$

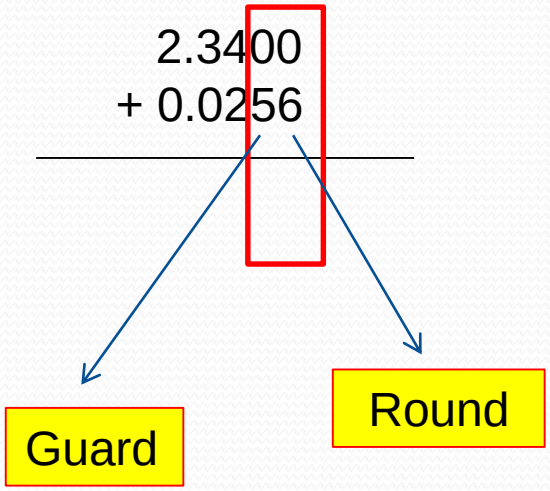

Sticky bit is set whenever there are nonzero bits to the right of the round bit

Ex2: $5.01 \times 10^{-1} + 2.34 \times 10^2$

2.3400
+ 0.0050

2.3500 With Sticky = 1
2.3400 Without Sticky

Round to nearest even

Subword Parallellism

- Graphics and audio applications can take advantage of performing simultaneous operations on short vectors
  - Example: 128-bit adder:
    - Sixteen 8-bit adds
    - Eight 16-bit adds
    - Four 32-bit adds
- Also called data-level parallelism, vector parallelism, or Single Instruction, Multiple Data (SIMD)

x86 FP Architecture

- Originally based on 8087 FP coprocessor
  - 8 × 80-bit extended-precision registers
  - Used as a push-down stack
  - Registers indexed from TOS: ST(0), ST(1), …
- FP values are 32-bit or 64 in memory
  - Converted on load/store of memory operand
  - Integer operands can also be converted on load/store
- Very difficult to generate and optimize code
  - Result: poor FP performance

Streaming SIMD Extension 2 (SSE2)

- Adds 4 × 128-bit registers
  - Extended to 8 registers in AMD64/EM64T
- Can be used for multiple FP operands
  - 2 × 64-bit double precision
  - 4 × 32-bit double precision
  - Instructions operate on them simultaneously
    - Single-Instruction Multiple-Data

Right Shift and Division

- Left shift by i places multiplies an integer by 2^i
- Right shift divides by 2^i?
  - Only for unsigned integers
- For signed integers
  - Arithmetic right shift: replicate the sign bit
  - e.g., −5 / 4
    - $11111011_2 >>> 2 = 11111110_2 = -2$
    - Rounds toward $-\infty$
  - c.f. $11111011_2 >> 2 = 00111110_2 = +62$

Associativity

- Parallel programs may interleave operations in unexpected orders
  - Assumptions of associativity may fail

		(x+y)+z	x+(y+z)
x	-1.50E+38		-1.50E+38
y	1.50E+38	0.00E+00	
z	1.0	1.0	1.50E+38
		1.00E+00	0.00E+00

- Need to validate parallel programs under varying degrees of parallelism

Who Cares About FP Accuracy?

- Important for scientific code
  - But for everyday consumer use?
- The Intel Pentium FDIV bug
  - The market expects accuracy
  - See Colwell, *The Pentium Chronicles*



Concluding Remarks

- Bits have no inherent meaning
  - Interpretation depends on the instructions applied
- Computer representations of numbers
  - Finite range and precision
  - Need to account for this in programs

Concluding Remarks

- ISAs support arithmetic
  - Signed and unsigned integers
  - Floating-point approximation to reals
- Bounded range and precision
  - Operations can overflow and underflow
- MIPS ISA
  - Core instructions: 54 most frequently used
    - 100% of SPECINT, 97% of SPECFP
  - Other instructions: less frequent