Physical computing from Scratch using scratchClient – Intermediate

Control servos, LEDs and more from Scratch using RPi, Arduino, scratchClient

Hans de Jong & Gerhard Hepp
Workshop for the Pi And More and Maker Faire
conferences

Part 1: Adding analog input




Changing the wiring on the board

- When changing the wiring on the board
 - First pull out the power
 - the USB cable
 - the 9V supply



The electronics of a potentiometer

- The potmeter is a resistor that will be connected between 5 V and 0 V.
- Over the length of the resistor the voltage drops linearly.
 - E.g. in the middle it would be 2.5 volt
 - So this is an analog signal. The value can be changed between 5 V and 0 V.
- There is a 1 kohm resistor in series for the reasons discussed earlier

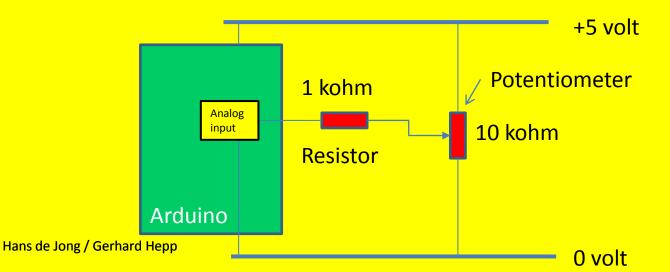


Consider what would happen if the 1 kohm resistor were not there and the port would be used as output and potmeter positioned close to the 0 volt side.

Then the Arduino would output 5 volt, and the potmeter is directly leading it to the 0 volt line → short circuit!

Likewise if the potentiometer is close to the 5 volt side and the Arduino would output 0 volt.



Adding analog input

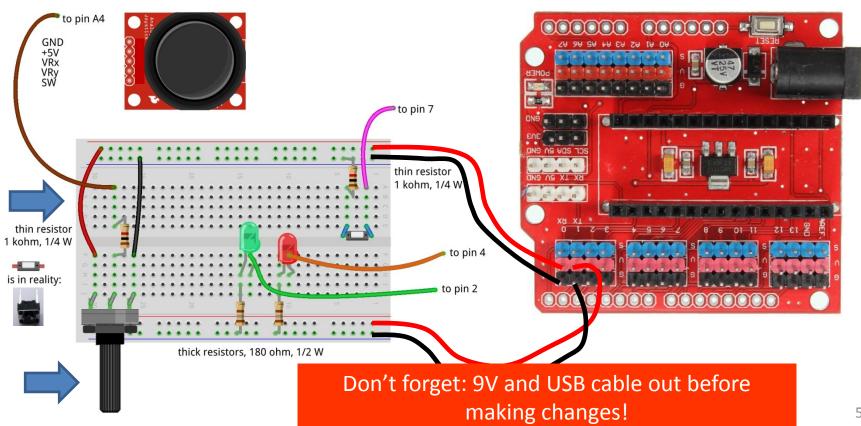



Update the config file

- Update the config file again (right click scratchClientTutorial.scl on the desktop, scratchConfig Edit)
 - Define Potmeter on pin A4 (direction: in, function: analog)
- Now that you are updating anyway, already define for the next steps:
 - Define Servo1 on pin 12 (direction: out, function: servo)
 - Define BigBlueLED on pin 5 (direction: out, function: PWM)
 - Define Buzzer on pin 11 (direction: out, function: PWM)
- Don't forget to save. Keep the config editor open.



Test whether it works

- Reconnect and repower the board
- Stop and restart scratchClient by double clicking scratchClientTutorial.scl on the desktop
- Make this piece of program and run it

w ala a a a a

variable Potmeter

- Turn the knob and see the values of Potmeter change
 - Between about 0 and about 1023
- We will write some Scratch program to use it in the next step

Part 2: Pulse Width Modulation




Where we are ...

- We have seen:
 - Digital Input (the button) (in the beginners module)
 - Digital Output (the LEDs) (in the beginners module)
 - Analog Input (the potentiometer)
- So what would be most logical next?
 - Analog Output? → but it does not exist!
 - However there is a good alternative: Pulse Width Modulation




Pulse Width Modulation (PWM)

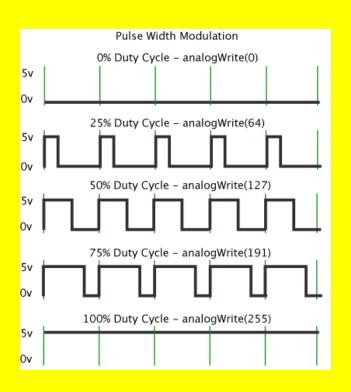

- By modulating (changing) the pulse width, the amount of energy fed to e.g. the LED is changed, and hence the intensity with which you see it lighting.
- Note that in practice the LED is blinking some 800 blinks / second.
- However, no human eye can see more than 100 blinks / second.



Dimming the BigBlueLED with PWM

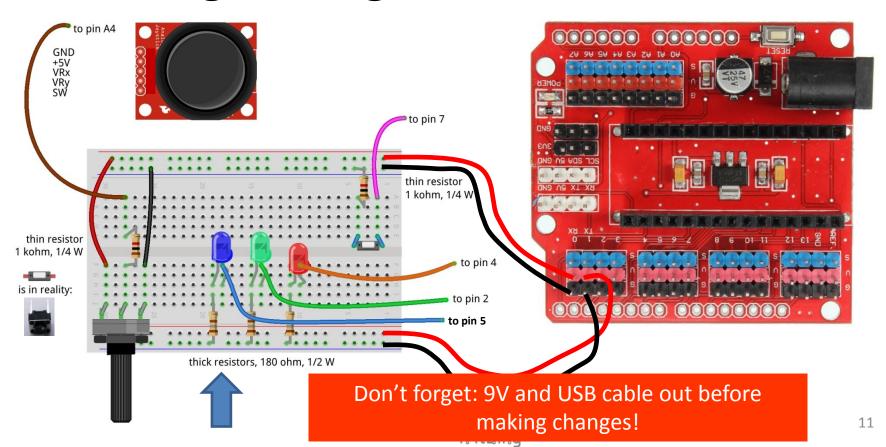





- Reconnect USB and 9V adapter
- You will see that scratchClient finds the board again
- You already updated the config file in the previous step, so no need to restart scratchClient
- Send BigBlueLED values between 0 and 255
- Does the LED brightness change?


Connect Potmeter and Big Blue LED (via Scratch)



- Make some code that takes the potentiometer reading (between 0 and 1023) and transforms it into the range 0 to 255 (so divide by 4) and set the value of *BigBlueLED*.
- Try out whether turning the potmeter changes the light intensity.
- Notice that when turning to the right, the intensity goes down.
 - You would expect it to go up …
 - How can you very simply change this by interchanging two wires?




Controlling a servo with PWM

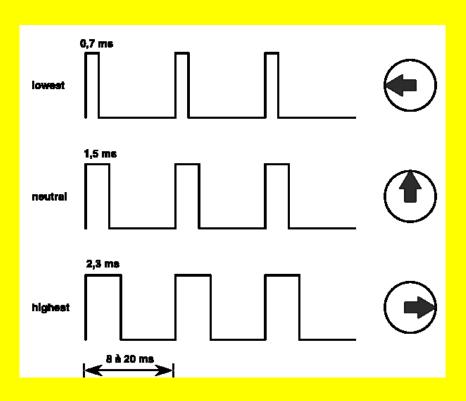

- The position of the servo is changed by sending pulses of different width.
- The servo looks at the pulsewidth and turns as desired.
- The servo gets power separately.
- With a servo, the pulse width modulation is not controlling the amount of energy fed to the servo
- With a servo, pulse width modulation is rather a communication protocol.



Adding the servo to pin 12

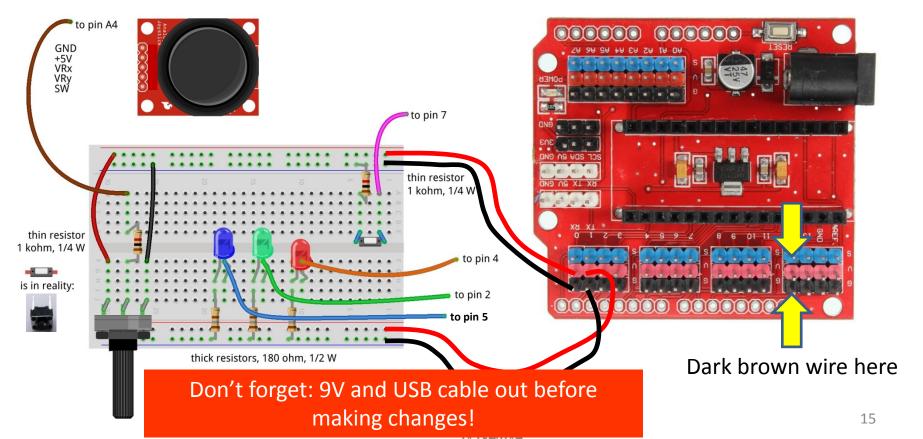

Testing the servo





- Reconnect and repower the board
- Update the loop where you set the Big Blue LED value dependent on the potmeter reading to now also set Servo 1.
 - But watch out: values have to be between 0 and 180.
 - To avoid overflow: first divide by 1024, then multiply by 180.
- You may observe jitter.
 - Because the values of the potmeter will drift a bit and there will be power fluctuations, the reading of the potmeter will not be constant.
 - We will in the advanced workshop show how to deal with jitter




Controlling a buzzer with PWM

- The buzzer will sound if it gets a signal in an audible frequency range.
- A PWM signal on Arduino gives ca. 800 Hz.
 - Different for different pins
- You will see that there is not much influence by changing the duty cycle.



Connect the buzzer to pin 11

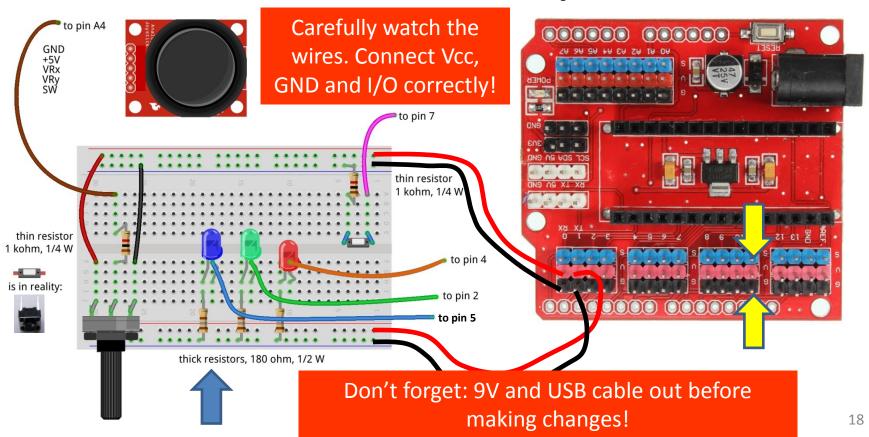



Testing the buzzer

- No need to restart scratchClient, because the config file was not changed.
- Add the setting of the buzzer to the loop where you already set the servo and the Big Blue LED.
 - Like with the LED, the values must be between 0 and 255.
- Only test a short time (to save the ears of your neighbors ©).



PWM limitations of Arduino (Nano and Uno)

- General PWM is available on pins 3, 5, 6, 9, 10, 11
- Servo can be configured on those pins, but also on 2, 4, 7, 8, 12
- If a servo is configured on any pin, pins 9 and 10 cannot be configured as PWM anymore.
 - The config tool will warn you if you do it wrongly.

Part 3: Summary & take aways

Takeaways of the beginners and intermediate workshops



- With scratchClient you define:
 - Function of each pin
 - Symbolic name for each configured pin
- scratchClient config is the tool to setup the configuration
- Restart scratchClient after you changed the configuration
- Put a resistor in series with LEDs
- Put a resistor in series with switches
- Configure a pull up resistor if the input signal goes between 0 volt and being open rather than between 0 volt and 3 to 5 volt.
- In Scratch 2, you use the extension block for scratchClient to get blocks that you can use to interact with scratchClient
- You can monitor the value of all pins from the browser
- scratchClient can do much more...
- There are some anomalies, therefore
 - Save the Scratch 2 files in the home folder (as Scratch 2 proposes)
 - Run CleanUpScratchFiles.sh on the desktop (once after start up of the RPi)
 - Use the files on the desktop

- Functions that a pin on Arduino can have:
 - Digital In
 - Digital Out
 - Analog In
 - No Analog Out
 - Pulse Width Modulation as alternative for Analog Out
 - For modulating the brightness of a LFD
 - For controlling a servo
 - · For controlling a buzzer
 - There a few more, see the advanced workshop
 - You can configure pull up resistors on Digital In

End of the intermediate workshop