Supervyse OPF Redfish UpdateService User Guide

Revision 1.0
Dec. 2024

Copyright (c) 2024, All Rights Reserved. Insyde Software.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form, or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Insyde Software Corp.

Disclaimer

Insyde Software provides this document and the programs "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose.

This document could contain technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in future revisions of this document. Insyde Software is under no obligation to notify any person of the changes.

The following trademarks are used in this document:

Insyde and InsydeH2O are registered trademarks or trademarks of Insyde Software. All other trademarks or trade names are property of their respective hol

Contents

1. Introduction 5

1.1 Overview 5

1.2 Related Information 5

2 How to use Simple Update 6

2.1 Description 6

2.2 How to use 6

2.3 Preparations before firmware update 7

2.4 Example 7

3 How to use Push Update 11

3.1 Description 11

3.2 Preparations before firmware update 12

3.3 Example 12

4 How to use Restore User 19

4.1 Description 19

4.2 Example 19

4.2.1 Backup 19

4.2.2 Restore 19

5 How to use OSdeployment 20

5.1 Description 20

5.2 Example 20

6 How to check if a firmware update is running 22

6.1 Description 22

6.2 Example 22

1. Revision History

Revision Number	Description	Author	Reviewer	Release Date
1.0	Initial release.	Chenglin	Victor Wu	2024-12-11

1 Introduction

This document is intended to help developers, users, and testers understand the specifications and usage of the deep operations of Updatee Service.

1.1 Overview

The purpose of this document is to detail the design specifications of Redfish Updatee Service operations and how to correctly use these operations for system management.

1.2 Related Information

The following publications and sources of information are referred to by this document or may be useful to you:

- *Supervyse OPF Redfish API User Guide*
- Supervyse OPF User Guide
- Supervyse OFP Backup and Restore User Configuration User Guide

2 How to use Simple Update

2.1 Description

Redfish can use TFTP, HTTP, SCP, etc... to update software components.

2.2 How to use

URI: https://{ip}/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate

Property	Required	Allowed Value	Platform		
			G3 Platform	G4 Platform	Oberon Platform
ImageURI	Yes	"<PROTOCOL>://<IMAGE_URI>"	Yes	Yes	Yes
TransferProtocol	No	TFTP	Yes	Yes	Yes
		HTTPS	Yes	No	No
		HTTP	No	No	No
		SCP	No	No	No
RestoreDefault	Yes	BOOLEAN • true • false (Notice only work in BMC update)	Yes	Yes	Yes
@Redfish.OperationApplyTime	No	Immediate	No	Yes	No
		OnReset			
UpdateRegion	No (Default: Active)	Active	No	Yes	No
		StandbySpare			
ClearConfig	No	BOOLEAN • true • false	No	Yes	No

Table 2.2-1: SimpleUpdate parameter introduction

2.3 Preparations before firmware update

Before performing firmware update, you need to prepare the tarball update file provided by Insyde.

Note:Please read the "*Supervyse OPF User Guide*" for details

2.4 Example

Table 2.4-1: G3 Platform SimpleUpdate command example

Quick Command	
Update mode	**G3 Platform**
TFTP	**Table 2.4-1-1: G3 Platform TFTP command example** curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false}'
HTTPS	**Table 2.4-1-2: G3 Platform HTTPS command example** curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"HTTPS", "ImageURI" : "192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false}'
HTTP	This feature is not supported
SCP	This feature is not supported

Table 2.4-2: G4 Platform SimpleUpdate command example

Quick Command	
Update mode	**G4 Platform**
TFTP	**Table 2.4-2-1: G4 Platform TFTP command example**

```
curl -k -H 'Content-Type: application/json' -X POST
https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.Si
mpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-
image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false"}'
```

***G4* Platform supports setting ApplyTime**

Note:The default value is Immediate

Table 2.4-2-2: G4 Platform ApplyTime command example

Immediate: Update immediately after uploading imager
curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"Immediate"}'
OnReset: You have to run reboot after uploading the file to update it.
curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset"}'

BHS supports UpdateRegion when using the PFR function

Note: For restoring or backing up flash memory.

Table 2.4-2-3: G4 Platform UpdateRegion command example

Active: Update Active region
curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset", "UpdateRegion":"Active"}'
StandbySpare: Update Recovery region
curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-

	image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset", "UpdateRegion":"StandbySpare"}' ***B*HS supports ClearConfig when using the PFR function** **Table 2.4-2-4: G4 Platform ClearConfig command example** **true: Restore to default setting after Updating Firmware** curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset", "UpdateRegion":"StandbySpare", "ClearConfig":true}' **false: No action** curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset", "UpdateRegion":"StandbySpare", "ClearConfig":false}'
HTTPS	This feature is not supported
HTTP	This feature is not supported
SCP	This feature is not supported

Table 2.4-3: Oberon Platform SimpleUpdate command example

Quick Command	
Update mode	**Oberon Platform**
TFTP	**Table 2.4-3-1: Oberon Platform TFTP command example** curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{"TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/obmc-phosphor-image-gb200nvl-bmc-insyde-20241107030358.static.mtd.all.tar", "RestoreDefault":false}' ***Oberon Platform supports setting ApplyTime*** **Note:The default value is Immediate**

<table>
<tr><td></td><td>
Table 2.4-3-1: Oberon Platform ApplyTime command example
<table>
<tr><td>Immediate: Update immediately after uploading imager</td></tr>
<tr><td>curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/obmc-phosphor-image-gb200nvl-bmc-insyde-20241107030358.static.mtd.all.tar", "RestoreDefault":false, @Redfish.OperationApplyTime":"Immediate}'</td></tr>
<tr><td>OnReset: You have to run reboot after uploading the file to update it.</td></tr>
<tr><td>curl -k -H 'Content-Type: application/json' -X POST https://root:0penBmc@192.168.9.54/redfish/v1/UpdateService/Actions/UpdateService.SimpleUpdate -d '{ "TransferProtocol":"TFTP", "ImageURI":"192.168.11.74/obmc-phosphor-image-gb200nvl-bmc-insyde-20241107030358.static.mtd.all.tar", "RestoreDefault":false, "@Redfish.OperationApplyTime":"OnReset"}'</td></tr>
</table>
</td></tr>
<tr><td>HTTPS</td><td>This feature is not supported</td></tr>
<tr><td>HTTP</td><td>This feature is not supported</td></tr>
<tr><td>SCP</td><td>This feature is not supported</td></tr>
</table>

3 How to use Push Update

3.1 Description

Perform firmware update using HTTP POST

URI: https://{ip}/redfish/v1/UpdateService

Table 3.1-1: Multipart Update parameter introduction

Multipart Update					
Property	**Required**	**Allowed Value**	**Platform**		
UpdateParameters	Yes	OBJECT	**G3 Platform**	**G4 Platform**	**Oberon Platform**
Targets	Yes	**G3 Platform、G4 Platform** only accept "/redfish/v1/Managers/bmc" **Oberon Platform** only accept "/redfish/v1/UpdateService/FirmwareInventory/bmc_active"	Yes	Yes	Yes
@Redfish.OperationApplyTime	No	**G3 Platform、G4 Platform** (Default: OnReset) • Immediate • OnReset **Oberon Platform** **oberon only supports immediate** (Default: immediate)	Yes	Yes	Yes

		• Immediate			
ClearConfig	No	BOOLEAN • true • false	No	Yes	No
UpdateRegion	No (Default: Active)	Active StandbySpare	No	Yes	No

Table 3.1-1: Multipart Update parameter introduction

3.2 Preparations before firmware update

Before performing firmware update, you need to prepare the tarball update file provided by Insyde.

Note:Please read the "Supervyse OPF User Guide" for details

3.3 Example

Table 3.3-1: G3 Platform Multipart Update command example

Quick Command	
Update mode	**G3 Platform**
Multipart Update	**Note:** • **Please see "Multipart Property List" for Property settings.** • **"Targets" please set /redfish/v1/Managers/bmc** • **@Redfish.OperationApplyTime can be set to Immediate and OnReset, and the default is OnReset** **Table 3.3-1-1: G3 Platform Multipart Update ApplyTime command example** **Immediate: Update immediately after uploading imager** curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate"}' -F 'UpdateFile=@intel-platforms-image-update-intel-ast2600-insyde-20241104051615.tar;type=application/octet-stream' https://<BMC_IP>/redfish/v1/UpdateService

	OnReset: You have to run reboot after uploading the file to update it. curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "OnReset"}' -F 'UpdateFile=@intel-platforms-image-update-intel-ast2600-insyde-20241104051615.tar;type=application/octet-stream' https://<BMC_IP>/redfish/v1/UpdateService

Table 3.3-2: G4 Platform Multipart Update command example

Quick Command	
Update mode	**G4 Platform**
Multipart Update	**Note:** • **Please see "Multipart Property List" for Property settings.** • **"Targets" please set /redfish/v1/Managers/bmc** • **@Redfish.OperationApplyTime can be set to Immediate and OnReset, and the default is OnReset** **Table 3.3-2-1: G4 Platform Multipart Update ApplyTime command example** **Immediate: Update immediately after uploading imager** curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate"}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update **OnReset: You have to run reboot after uploading the file to update it.** curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "OnReset"}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update **BHS supports ClearConfig when using the PFR function** **Table 3.3-2-2: G4 Platform Multipart Update ClearConfig command example** **true: Restore to default setting after Updating Firmware**

	curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate", "ClearConfig" : true}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update
	false: No action
	curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate", "ClearConfig" : true}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update
	BHS supports UpdateRegion when using the PFR function **Note: For restoring or backing up flash memory.** **Table 3.3-2-3: G4 Platform Multipart Update UpdateRegion command example**
	Active: Update Active region
	curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"UpdateRegion":"Active", "Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate", "ClearConfig" : true}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update
	StandbySpare: Update Recovery region
	curl -k -u root:0penBmc -X POST -H "Content-Type:multipart/form-data" -F 'UpdateParameters={"UpdateRegion":"StandbySpare", "Targets": ["/redfish/v1/Managers/bmc"], "@Redfish.OperationApplyTime": "Immediate", "ClearConfig" : true}' -F 'UpdateFile=@intel-platforms-image-update-intel-bhs-insyde-20241107092638.tar;type=application/octet-stream' https://192.168.9.54/redfish/v1/UpdateService/update

Table 3.3-3: Oberon Platform Multipart Update command example

Quick Command	
Update mode	**Oberon Platform**
Multipart Update	**Note:** • **Please see "Multipart Property List" for Property settings.** • **"Targets" Please set the URI under /redfish/v1/UpdateService/FirmwareInventor**

- **@Redfish.OperationApplyTime only immediate**

Targets Example

The content of /redfish/v1/UpdateService/FirmwareInventor has "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/bundle_active".

```
{
    "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory",
    "@odata.type": "#SoftwareInventoryCollection.SoftwareInventoryCollection",
    "Members": [
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/FW_CPLD_0"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/FW_CPLD_1"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/FW_CPLD_2"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/FW_CPLD_3"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/UEFI"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/bmc_active"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/bundle_active"
        },
        {
            "@odata.id": "/redfish/v1/UpdateService/FirmwareInventory/cpld0_active"
```

Figure 3.3-3.1 Targets URI Source

Targets can be set as follows

'UpdateParameters={"Targets":["/redfish/v1/UpdateService/FirmwareInventory/bundle_active "]};

Example Payload

curl -X POST -k -u root:0penBmc https://192.168.10.231/redfish/v1/UpdateService/update-multipart -F 'UpdateParameters={"Targets":["/redfish/v1/UpdateService/FirmwareInventory/bmc_active"]};type=application/json' -F UpdateFile=@obmc-phosphor-image-gb200nvl-bmc-insyde-20241107030358.static.mtd.all.tar

Table 3.3-4: Push Update command example

Quick Command			
Update mode	**G3 Platform**	**G4 Platform**	**Oberon Platform**
Push update	**Step 1:Modify Apply Time mode** **Note:ApplyTime can be set to Immediate and OnReset** **Table 3.3-4-1: Push Update ApplyTime command example** **Immediate : Apply immediately.** curl -k -H 'Content-Type: application/json' -X PATCH -d '{"HttpPushUriOptions": {"HttpPushUriApplyTime": {"ApplyTime": "Immediate"}}}' https://root:0penBmc@${ip}/redfish/v1/UpdateService/ **OnReset : Apply on a reset.** curl -k -H 'Content-Type: application/json' -X PATCH -d '{"HttpPushUriOptions": {"HttpPushUriApplyTime": {"ApplyTime": "OnReset"}}}' https://root:0penBmc@${ip}/redfish/v1/UpdateService/		
	Step 2: Setting RestoreDefault (Notice only work in BMC update) The status of RestoreDefault can be seen at https://{ip}/redfish/v1/UpdateService **Figure 3.3-4-1 RestoreDefault Display Example** **Note:RestoreDefault can be set to true or false** **Table 3.3-4-2: Set RestoreDefault command example** **RestoreDefault Type = True : Restore default settings after updating bmc** curl -k -H 'Content-Type: application/json' -X PATCH -d '{"Oem":{"InsydePushUpdate":{"RestoreDefault":true}}}' https://root:0penBmc@${ip}/redfish/v1/UpdateService/		


```
        "VMSlot": ""
    },
    "InsydePushUpdate": {
        "@odata.type": "#InsydeOEMExtensions.v1_0_0.PushUpdate",
        "RestoreDefault": false
    },
    "Nvidia": {
        "@odata.type": "#NvidiaUpdateService.v1_0_0.NvidiaUpdateService",
        "PersistentStorage": {
```

RestoreDefault Type = False : Default settings will not be restored after updating bmc

```
curl -k -H 'Content-Type: application/json' -X PATCH -d
'{"Oem":{"InsydePushUpdate":{"RestoreDefault":false}}}'
https://root:0penBmc@${ip}/redfish/v1/UpdateService/
```

Step 3:Get HttpPushUri content (Can be done or not)

Table 3.3-4-3: Get HttpPushUri command example

```
uri=$(curl -k -H 'Content-Type: application/json'
https://root:0penBmc@${ip}/redfish/v1/UpdateService | jq -r ' .HttpPushUri')
```

Note:If you don't run Step3, you need to get Redfish /redfish/v1/UpdateService/ to get the HttpPushUri.

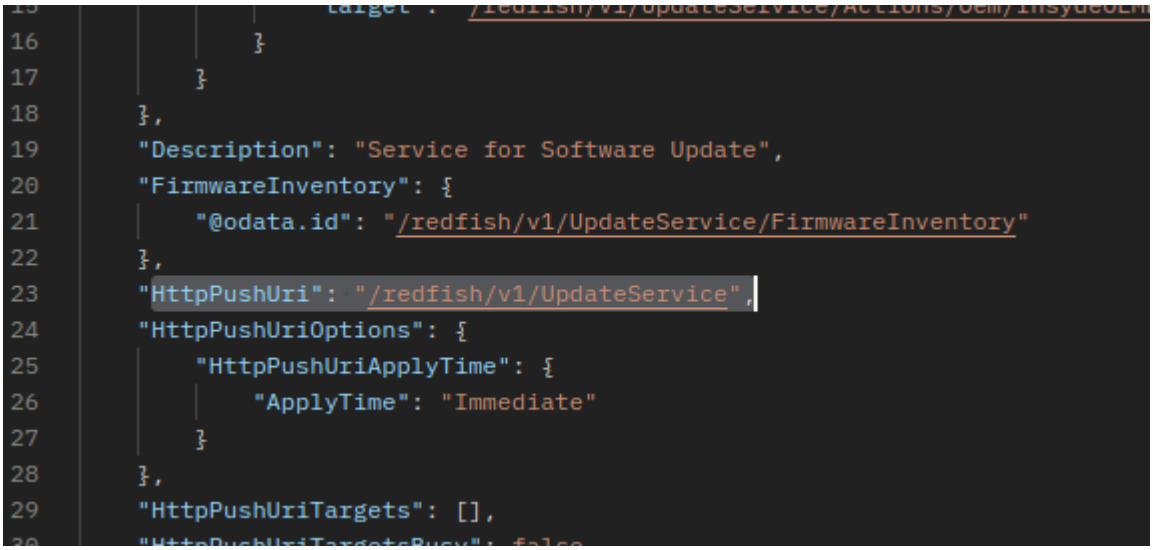

Figure 3.3-4.2 HttpPushUri Display Example

Step 4: POST Redfish

If you do Step3

```
curl -k -H 'Content-Type: application/json' -H "Content-Type: application/octet-stream" -X
POST -T <PATH_TO_IMAGE> https://root:0penBmc@${ip}${uri}
```

Table 3.3-4-4: Post command example

```
curl -k  -H "Content-Type: application/octet-stream" -X POST -T /tftpboot/intel-platforms-
image-update-intel-ast2600-insyde-20241104051615.tar https://root:0penBmc@${ip}${uri}
```

	If you don't do Step 3. **Take Step3 as an example** HttpPushUri = /redfish/v1/UpdateService curl –k -H "Content-Type: application/octet-stream" -X POST -T <PATH_TO_IMAGE> https://root:0penBmc@${ip}<Redfish HttpPushUri> **Table 3.3-4-5: Post command example** curl -k -H "Content-Type: application/octet-stream" -X POST -T /tftpboot/intel-platforms-image-update-intel-ast2600-insyde-20241104051615.tar https://root:0penBmc@${ip}/redfish/v1/UpdateService

4 How to use Restore User

4.1 Description

Provide a feature to backup & restore user configuration files.

URI: https://{ip}/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.PushUpdate

4.2 Example

4.2.1 Backup

Please refer to this document for backup methods

- Supervyse OFP Backup and Restore User Configuration User Guide

4.2.2 Restore

- Step 1:
  Put backup256.bin to a functional tftp server.

- Step 2:

```
curl -sku <BMC user>:<BMC user password> -X POST -H "Content-Type: application/json" https://<BMC IP>/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.PushUpdate -d '{"ImageURI" : "<tftp server IP>/backup256.bin","TransferProtocol": "TFTP"}'
```

Example Payload:

```
curl -sku root:0penBmc -X POST -H "Content-Type: application/json" https://192.168.9.17/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.Pushpdate -d '{"ImageURI" : "192.168.9.71/backup256.bin","TransferProtocol": "TFTP"}'
```

Table 4.2-1: Post Restore command example

5 How to use OSdeployment

5.1 Description

This action is used to trigger Insyde OS deployment. It is a comprehensive OS deployment solution that enables Host to capture an image of OS. Notice user should reboot Host manually to let BIOS finish related process

URI: https://{ip}/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.OSdeployment

Property	Required	Allowed Value
ImageURI	Yes	"<PROTOCOL>://<IMAGE_URI>"
TransferProtocol	No	CIFS/NFS/HTTPS
UserName	No	STRING
Password	No	STRING

Table 5.1-1: OSdeployment parameter introduction

5.2 Example

- CIFS

```
curl -sku root:0penBmc -X POST -H "Content-Type: application/json"
https://192.168.9.17/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.OSdeployment -d
'{"ImageURI":"192.168.22.156/qatest/iso/ubuntu-18.04.1-desktop-amd64.iso", "UserName":"qatest",
"Password":"qatest", "TransferProtocol": "CIFS"}'
```

Table 5.2-1: OSdeployment CIFS command example

- NFS

```
curl -sku root:0penBmc -X POST -H "Content-Type: application/json"
https://192.168.9.17/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.OSdeployment -d
'{"ImageURI":"nfs://192.168.9.197/ubuntu-18.04.1-desktop-amd64.iso", "TransferProtocol": "NFS"}'
```

Table 5.2-2: OSdeployment NFS command example

- HTTPS

```
curl -sku root:0penBmc -X POST -H "Content-Type: application/json"
https://192.168.9.17/redfish/v1/UpdateService/Actions/Oem/InsydeOEMExtensions.OSdeployment -d
'{"ImageURI":"https://releases.ubuntu.com/noble/ubuntu-24.04.1-desktop-amd64.iso", "TransferProtocol":
"HTTPS"}'
```

Table 5.2-3: OSdeployment HTTPS command example

6 How to check if a firmware update is running

6.1 Description

This feature is designed to allow the user to see that the machine is running a firmware update to prevent repetitive firmware updates from running

URI: https://{ip}/redfish/v1/UpdateService

6.2 Example

Step 1:Get Rredfish https://{ip}/redfish/v1/UpdateService

Step 2:Check OEM Property FwUpdateTag

- **Redfish is updating the firmware**


```
"Oem": {
  "InsydePushUpdate": {
    "@odata.type": "#InsydeOEMExtensions.v1_0_0.PushUpdate",
    "FwUpdateTag": false,
    "RestoreDefault": false
  }
}
```


- **Redfish is not performing a firmware update**


```
"Oem": {
  "InsydePushUpdate": {
    "@odata.type": "#InsydeOEMExtensions.v1_0_0.PushUpdate",
    "FwUpdateTag": true,
    "RestoreDefault": false
  }
}
```