



WiFi Share

User manual · Windows version

Share your PC's Wi-Fi internet through its Ethernet port with one click, and see every device plugged into it.

[1 What WiFi Share does](#)

[2 Getting started](#)

[3 A tour of the window](#)

[4 Sharing your Wi-Fi](#)

[5 Seeing who's connected](#)

[6 Troubleshooting](#)


[7 Good to know](#)

Version 1.4.1 · For Windows 10 and Windows 11

SECTION 1

What WiFi Share does

WiFi Share turns your Windows PC into a small router. Your PC stays on Wi-Fi, and anything you plug into its Ethernet port gets internet through it.



It's useful for devices that only have an Ethernet port, or for a Raspberry Pi that isn't set up for Wi-Fi yet. WiFi Share does two things:

- **Turns sharing on and off:** one button switches on Windows' built-in Internet Connection Sharing between the adapters you pick.
- **Shows who's connected:** a live list of each device plugged into the Ethernet side, with its name, address and whether it's online.

SECTION 2

Getting started

What you need

- A Windows 10 or Windows 11 PC with Wi-Fi and an Ethernet port. A USB Ethernet adapter works too.
- An administrator account on the PC. Windows only lets administrators change sharing settings.
- The file **WiFi Share.exe**. There's nothing else to install.

Opening it the first time

- 1 Save **WiFi Share.exe** somewhere you'll keep it, such as your Documents folder, then double-click it.
- 2 If a blue "**Windows protected your PC**" box appears, click **More info** and then **Run anyway**. Windows shows this for any program without a paid publisher certificate, and it only asks once.
- 3 When Windows asks "**Do you want to allow this app to make changes to your device?**", click **Yes**. You'll see this prompt every time you open WiFi Share.

Tip: make it easy to find

Right-click **WiFi Share.exe** and choose **Pin to Start** or **Pin to taskbar**. On Windows 11, those options may be under **Show more options**. To add a desktop icon, choose **Show more options → Send to → Desktop (create shortcut)**.

SECTION 3

A tour of the window

Here's the WiFi Share window while it's sharing, with one device connected.

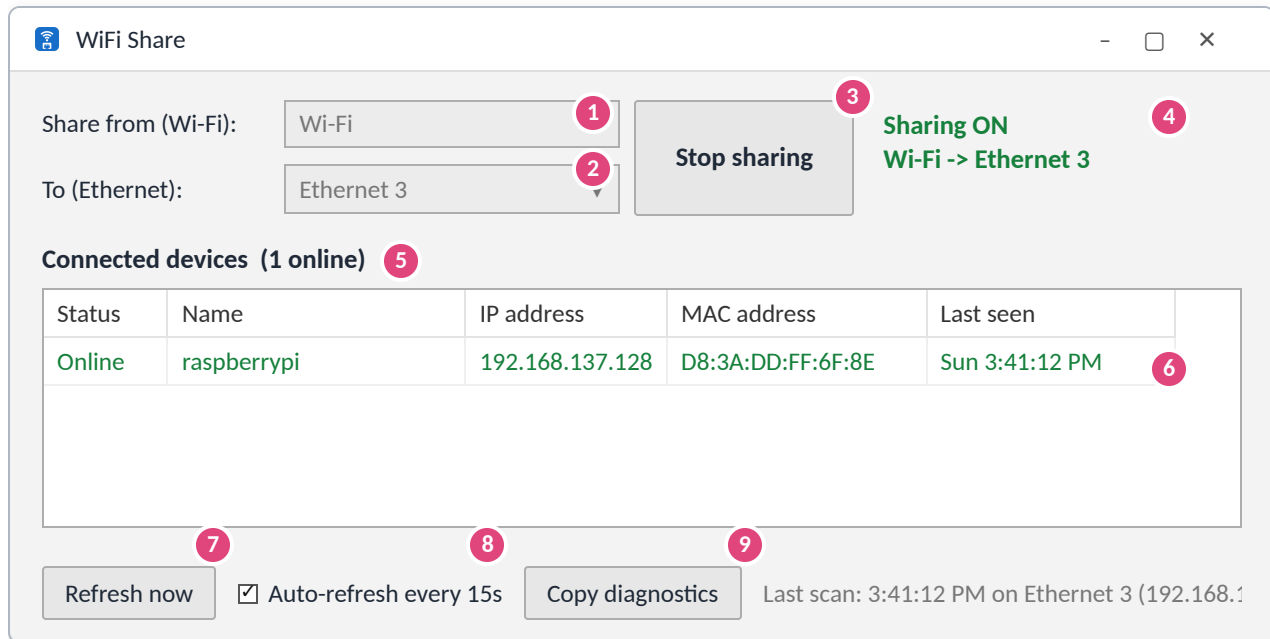


Illustration of the WiFi Share window. The numbered markers match the list below.

- 1 Share from (Wi-Fi):** the adapter that already has internet, usually *Wi-Fi*.
- 2 To (Ethernet):** the port your other device is plugged into.
- 3 Start / Stop sharing:** turns sharing on or off.
- 4 Status:** green *Sharing ON* with the two adapters, or grey *Sharing OFF*.
- 5 Device count:** how many devices are online right now.
- 6 Device list:** every device seen on the Ethernet side.
- 7 Refresh now:** scans for devices immediately.
- 8 Auto-refresh:** scans again every 15 seconds while ticked.
- 9 Copy diagnostics:** copies a report for troubleshooting (see Section 6).
- Grey status line:** when it last scanned, or what it's waiting for.

Why the dropdowns are greyed out

While sharing is on, you can't change the adapters. Click **Stop sharing** first, pick different ones, then start again.

Sharing your Wi-Fi

Turn sharing on

- 1 Make sure your PC is connected to Wi-Fi and has internet.
- 2 Open WiFi Share. It picks your Wi-Fi and Ethernet adapters for you. Check that **Share from** is your Wi-Fi and **To** is the Ethernet port you're using.
- 3 Click **Start sharing**. After a few seconds, the status turns green and reads **Sharing ON**.
- 4 Plug an Ethernet cable from your PC into the other device. It should get internet within about 10–30 seconds.

Turn sharing off

Click **Stop sharing**. The status turns grey and reads **Sharing OFF**, and the Ethernet port goes back to normal.

What happens behind the scenes

- Your PC's Ethernet port gets the address `192.168.137.1`.
- Your PC hands each plugged-in device an address in the range `192.168.137.2` to `192.168.137.254`.
- The other device needs no setup, as long as it's set to get its address automatically (DHCP). Almost all devices are by default.

Sharing keeps running after you close the window

You only need WiFi Share open to turn sharing on or off, or to see who's connected. Closing the window leaves sharing on, and Windows usually keeps it on after a restart too.

Windows allows one shared connection at a time

Starting sharing in WiFi Share turns off any other Internet Connection Sharing you set up earlier. Windows' **Mobile hotspot** feature can also get in the way, so turn it off if sharing won't start.

Using a different Ethernet port

If your PC has more than one Ethernet port, or you use a USB Ethernet adapter, pick the right one in **To (Ethernet)** before you click **Start sharing**. If you're not sure which is which, plug the cable in, open Windows **Settings** → **Network & internet**, and see which Ethernet connection says it's connected.

SECTION 5

Seeing who's connected

The device list fills in automatically while sharing is on. WiFi Share scans the Ethernet side every 15 seconds, or right away when you click **Refresh now**. A scan takes about two seconds.

What the columns mean

Column	What it shows
Status	Online (green) means the device answered in the last scan. Offline (grey) means it was seen earlier but has since been unplugged or turned off.
Name	The name the device gave itself, such as <i>raspberrypi</i> . Devices that don't give a name show as <i>(unknown device)</i> .
IP address	The address your PC gave the device, in the <code>192.168.137.x</code> range. You'll use this to reach the device, for example with SSH or a web browser.
MAC address	The device's permanent hardware ID. It helps tell apart devices that have no name.
Last seen	The last time the device answered a scan.

Online devices are listed first, sorted by address. The heading above the list shows how many are online right now.

Copying a device's address

Double-click any device in the list to copy its IP address. The grey status line confirms it, and you can then paste the address wherever you need it.

Example: connecting to a Raspberry Pi

Double-click the *raspberrypi* row to copy its address. Then open Windows Terminal and type `ssh pi@` followed by the address, for example `ssh pi@192.168.137.128`. Replace `pi` with the Pi's username if it's different.

Turning off auto-refresh

Untick **Auto-refresh every 15s** to stop the automatic scans. The list stays as it is until you click **Refresh now**. Sharing isn't affected either way.

About the "Offline" devices

WiFi Share remembers every device it has seen since you opened it, so you can tell when something drops off. The list starts fresh each time you open the app, or when you change the Ethernet adapter.

Troubleshooting

What you see	What to do
"Windows protected your PC" when opening the app	Click More info → Run anyway . This appears because the app isn't signed with a paid certificate.
"Couldn't change sharing" message	Turn off Windows Mobile hotspot and disconnect any VPN, then try again. If it still fails, click Stop sharing (if shown), restart the PC, and start sharing again.
The other device has no internet	Check that the status says Sharing ON and that the PC itself has internet over Wi-Fi. Unplug the cable, wait five seconds, and plug it back in so the device asks for a new address. Make sure the device is set to get its address automatically (DHCP).
Status line says " has no IP yet – start sharing first "	Sharing isn't on for that port. Click Start sharing .
Status line says " is unplugged or disconnected "	Windows doesn't see a cable on that port. Check that both ends are plugged in and the other device is powered on, and that you picked the right port in To (Ethernet) .
The device list is empty	Wait for the next scan, or click Refresh now . A device only appears after it has received an address, which can take up to 30 seconds after you plug it in.
A device shows as (unknown device)	That's normal. Not every device reports a name. Use the MAC address to tell it apart.
Sharing stopped after a restart or Windows update	Windows sometimes resets sharing when it restarts or updates. Open WiFi Share and click Start sharing again.
Status line says " Scan error: ... "	Click Refresh now . If the error keeps coming back, use Copy diagnostics (below).

Using Copy diagnostics

If the table above doesn't help, WiFi Share can produce a report for whoever is helping you. It lists your network adapters, which one is sharing, and every device the scan found. It contains no passwords.

- 1 Turn sharing on and plug in the device.
- 2 Wait about 20 seconds so a scan can finish.
- 3 Click **Copy diagnostics**. The report is copied to your clipboard.
- 4 Paste it into an email, a chat or a text file with **Ctrl + V**.

Good to know

Is it safe?

WiFi Share uses Windows' own built-in Internet Connection Sharing. It doesn't install anything or run in the background, and it doesn't connect anywhere on the internet. It needs administrator rights only because Windows requires them to change sharing settings.

Does the other device get the full speed?

It gets whatever your PC's Wi-Fi connection can deliver, with a small overhead. A strong Wi-Fi signal on the PC gives the best speed on the Ethernet side.

Can I connect more than one device?

Yes. Plug a network switch into your PC's Ethernet port, and connect as many devices to the switch as you like. They'll all get internet and show up in the device list.

Can other devices on my Wi-Fi reach the shared devices?

Not directly. Devices on the Ethernet side are on their own small network (192 . 168 . 137 . x) behind your PC. Your PC can reach them, and they can reach the internet.

How do I undo everything?

Click **Stop sharing**, then delete **WiFi Share.exe**. Nothing else is left behind.

Quick reference

To...	Do this
Share Wi-Fi to Ethernet	Click Start sharing
Stop sharing	Click Stop sharing
Change which port is shared	Stop sharing, pick a port in To (Ethernet) , then start again
See connected devices	Look at the list. It updates every 15 seconds
Scan right now	Click Refresh now
Copy a device's IP address	Double-click the device
Get a troubleshooting report	Click Copy diagnostics , then paste