


LOWER DECK - 1:1 TEMPLATE (handheld-robotics-v1, Nov 2026, direct-mount)

Print at 100% / 'Actual size' - NOT 'fit to page'. Check the 100 mm bar first.
26 holes: centre-punch each crosshair, drill 3 mm pilot, then open to 4 mm (black dots: 2 mm). Scrap wood behind.
Outer line = cut line (250 mm circle). Hatched = remove. Top face up; deck is symmetric left-right.
Sheet: LEFT half (+Y).



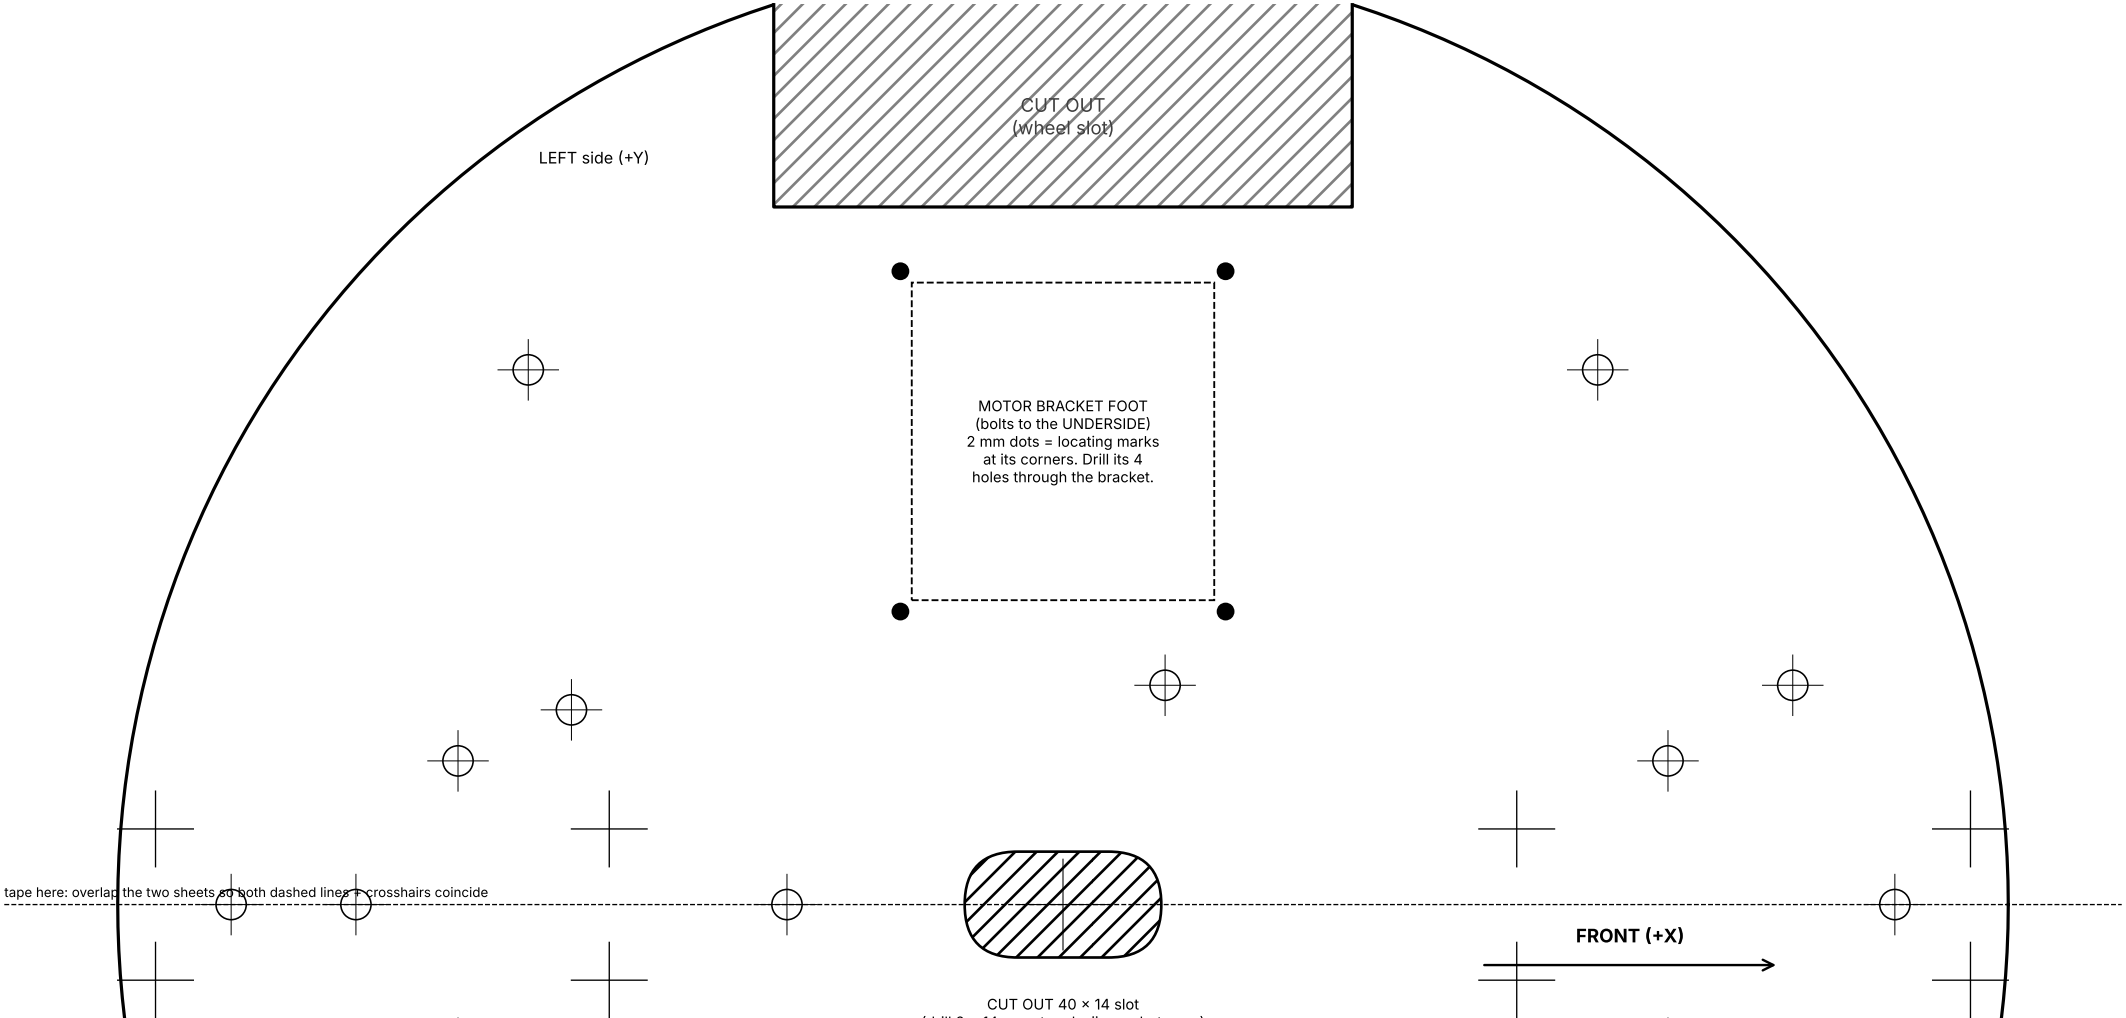

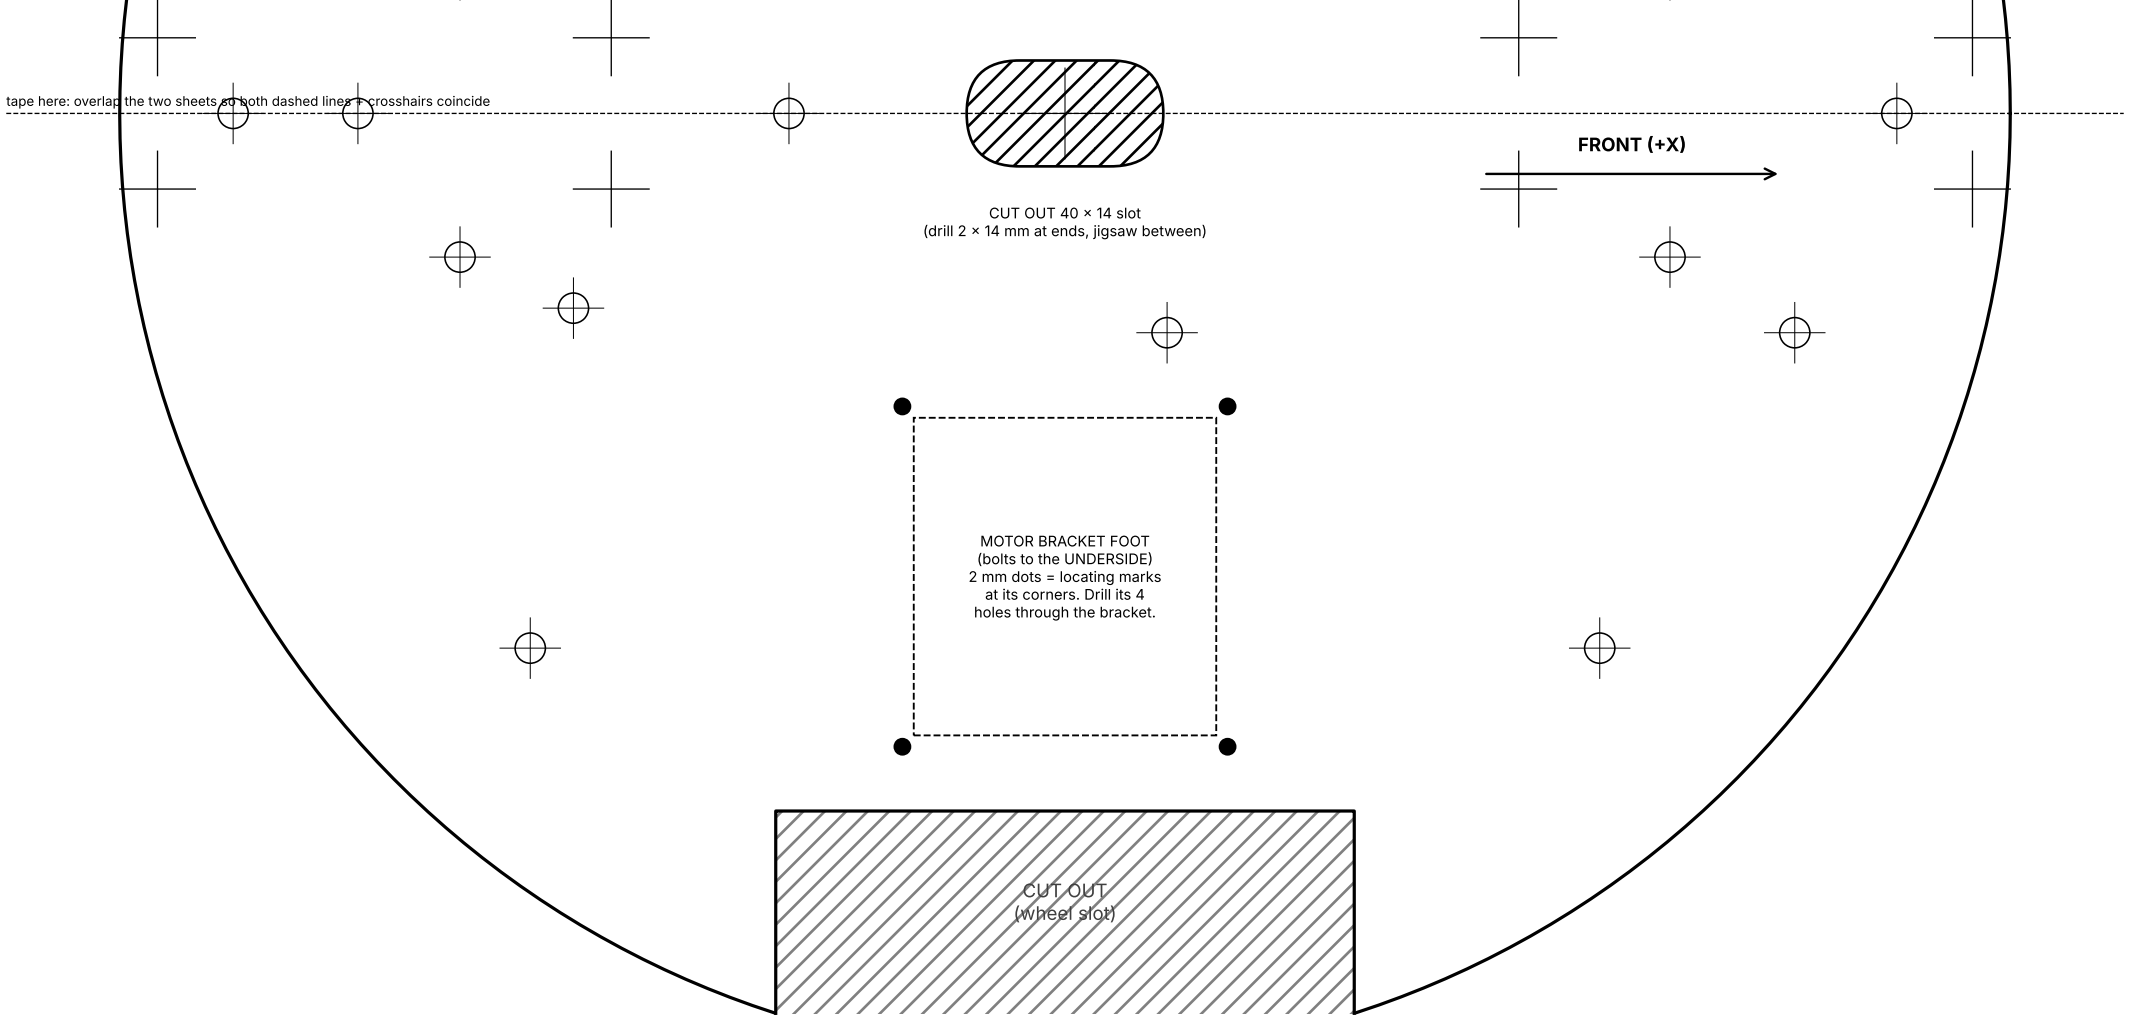


LOWER DECK - 1:1 TEMPLATE (handheld-robotics-v1, Nov 2026, direct-mount)


Print at 100% / 'Actual size' - NOT 'fit to page'. Check the 100 mm bar first.
26 holes: centre-punch each crosshair, drill 3 mm pilot, then open to 4 mm (black dots: 2 mm). Scrap wood behind.
Outer line = cut line (250 mm circle). Hatched = remove. Top face up; deck is symmetric left-right.
Sheet: RIGHT half (-Y).

100 mm - measure this

UPPER DECK - 1:1 TEMPLATE (handheld-robotics-v1, Nov 2026, direct-mount)

Print at 100% / 'Actual size' - NOT 'fit to page'. Check the 100 mm bar first.
18 holes: centre-punch each crosshair, drill 3 mm pilot, then open to 4 mm (black dots: 2 mm). Scrap wood behind.
Outer line = cut line (250 mm circle). Hatched = remove. Top face up; deck is symmetric left-right.
Sheet: LEFT half (+Y).

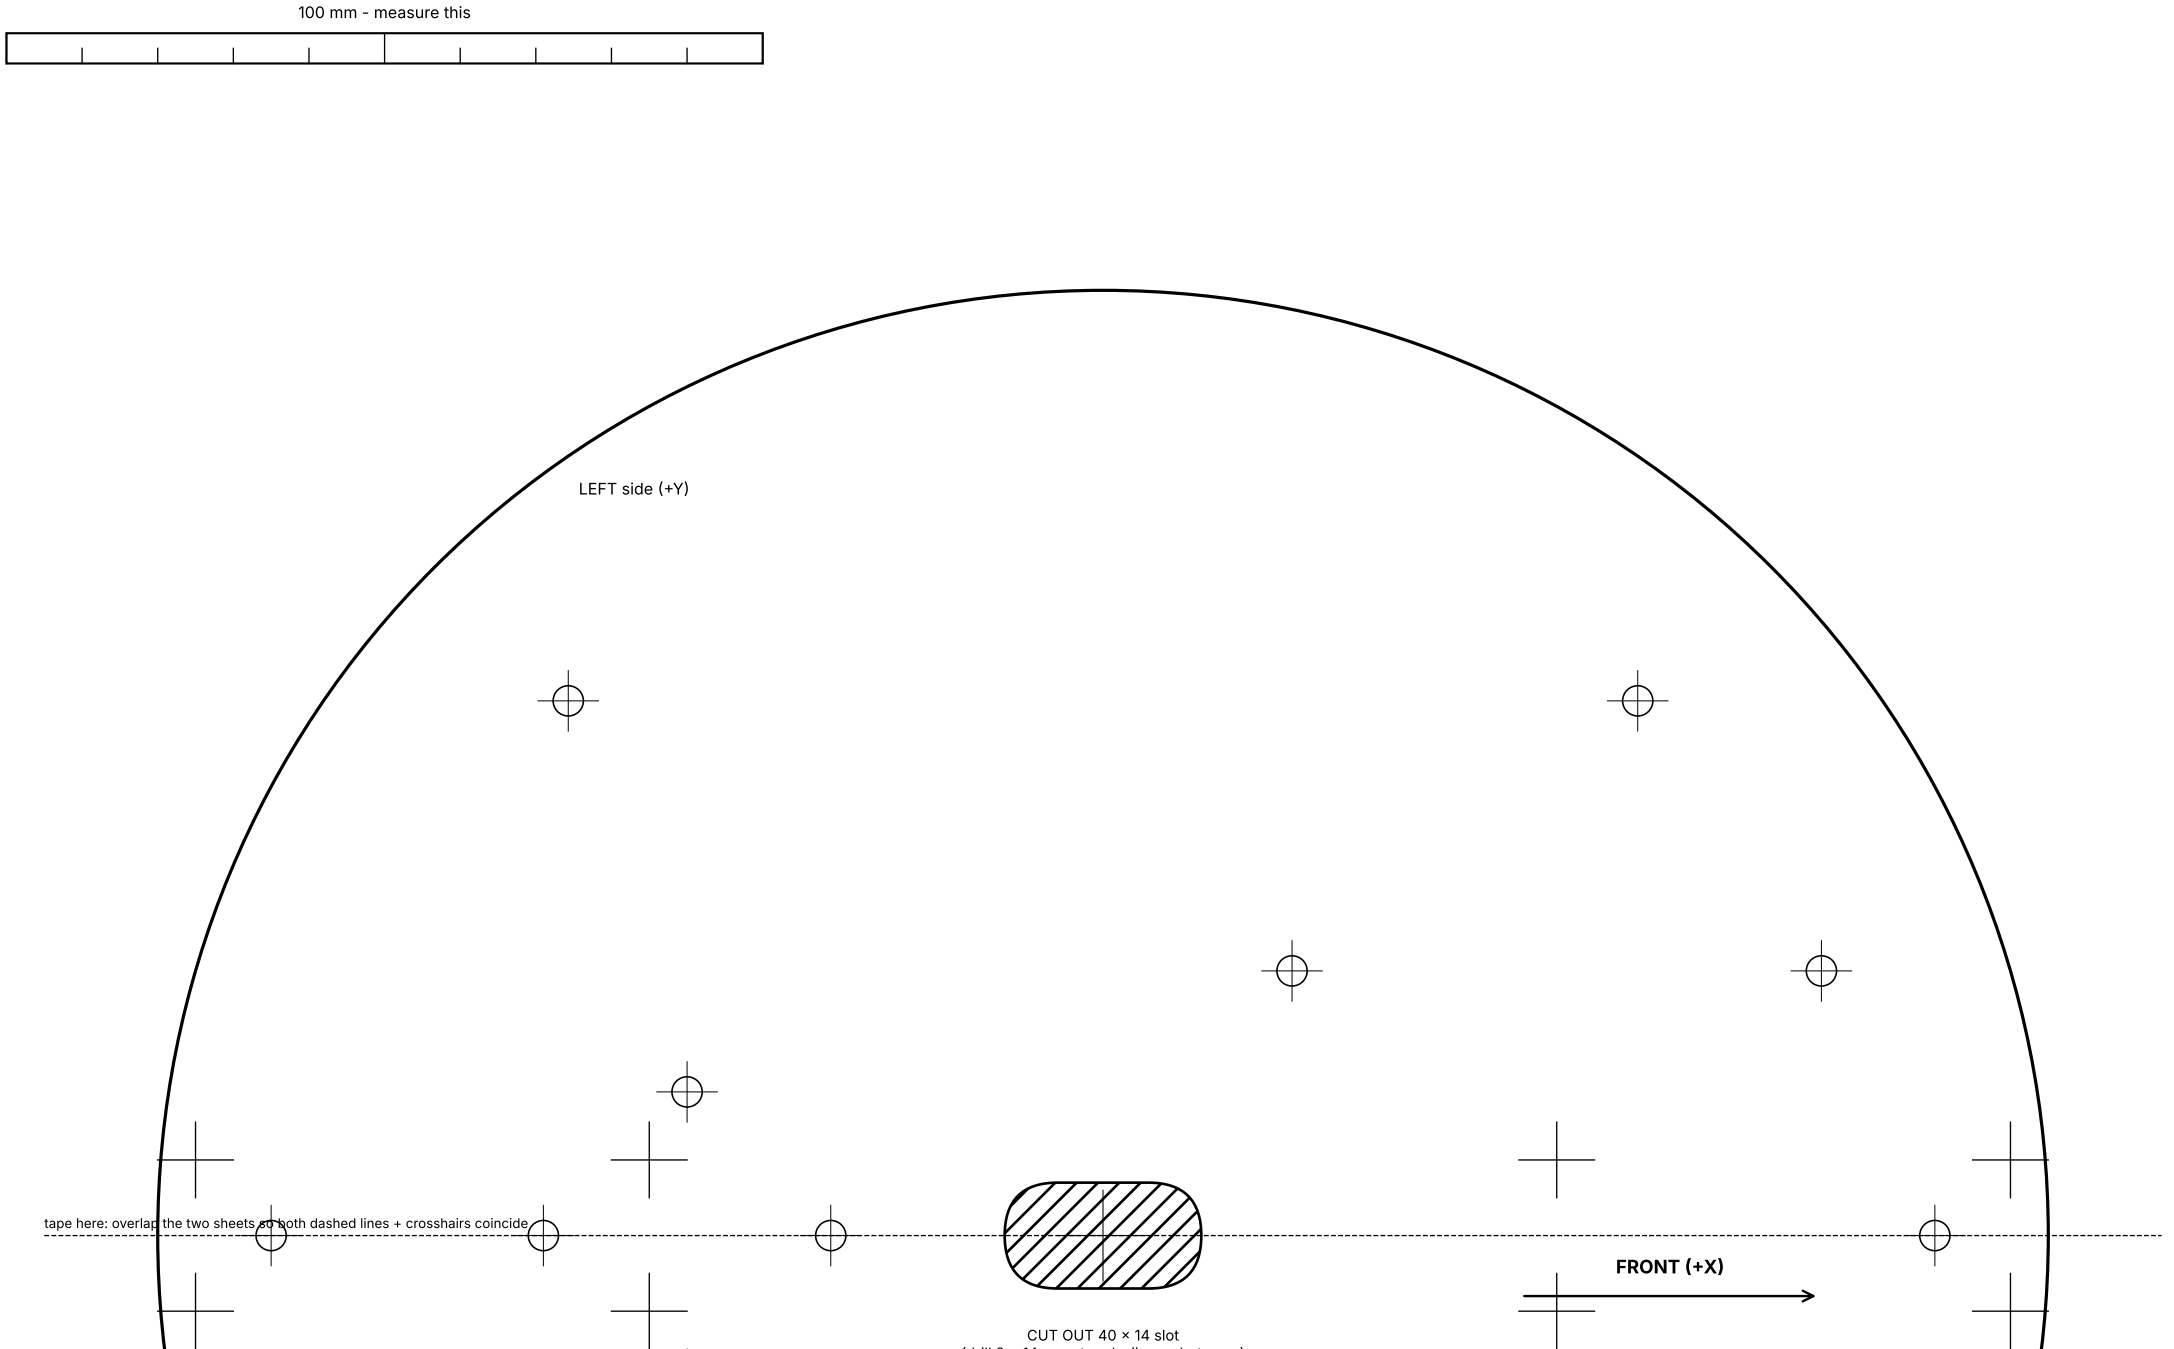

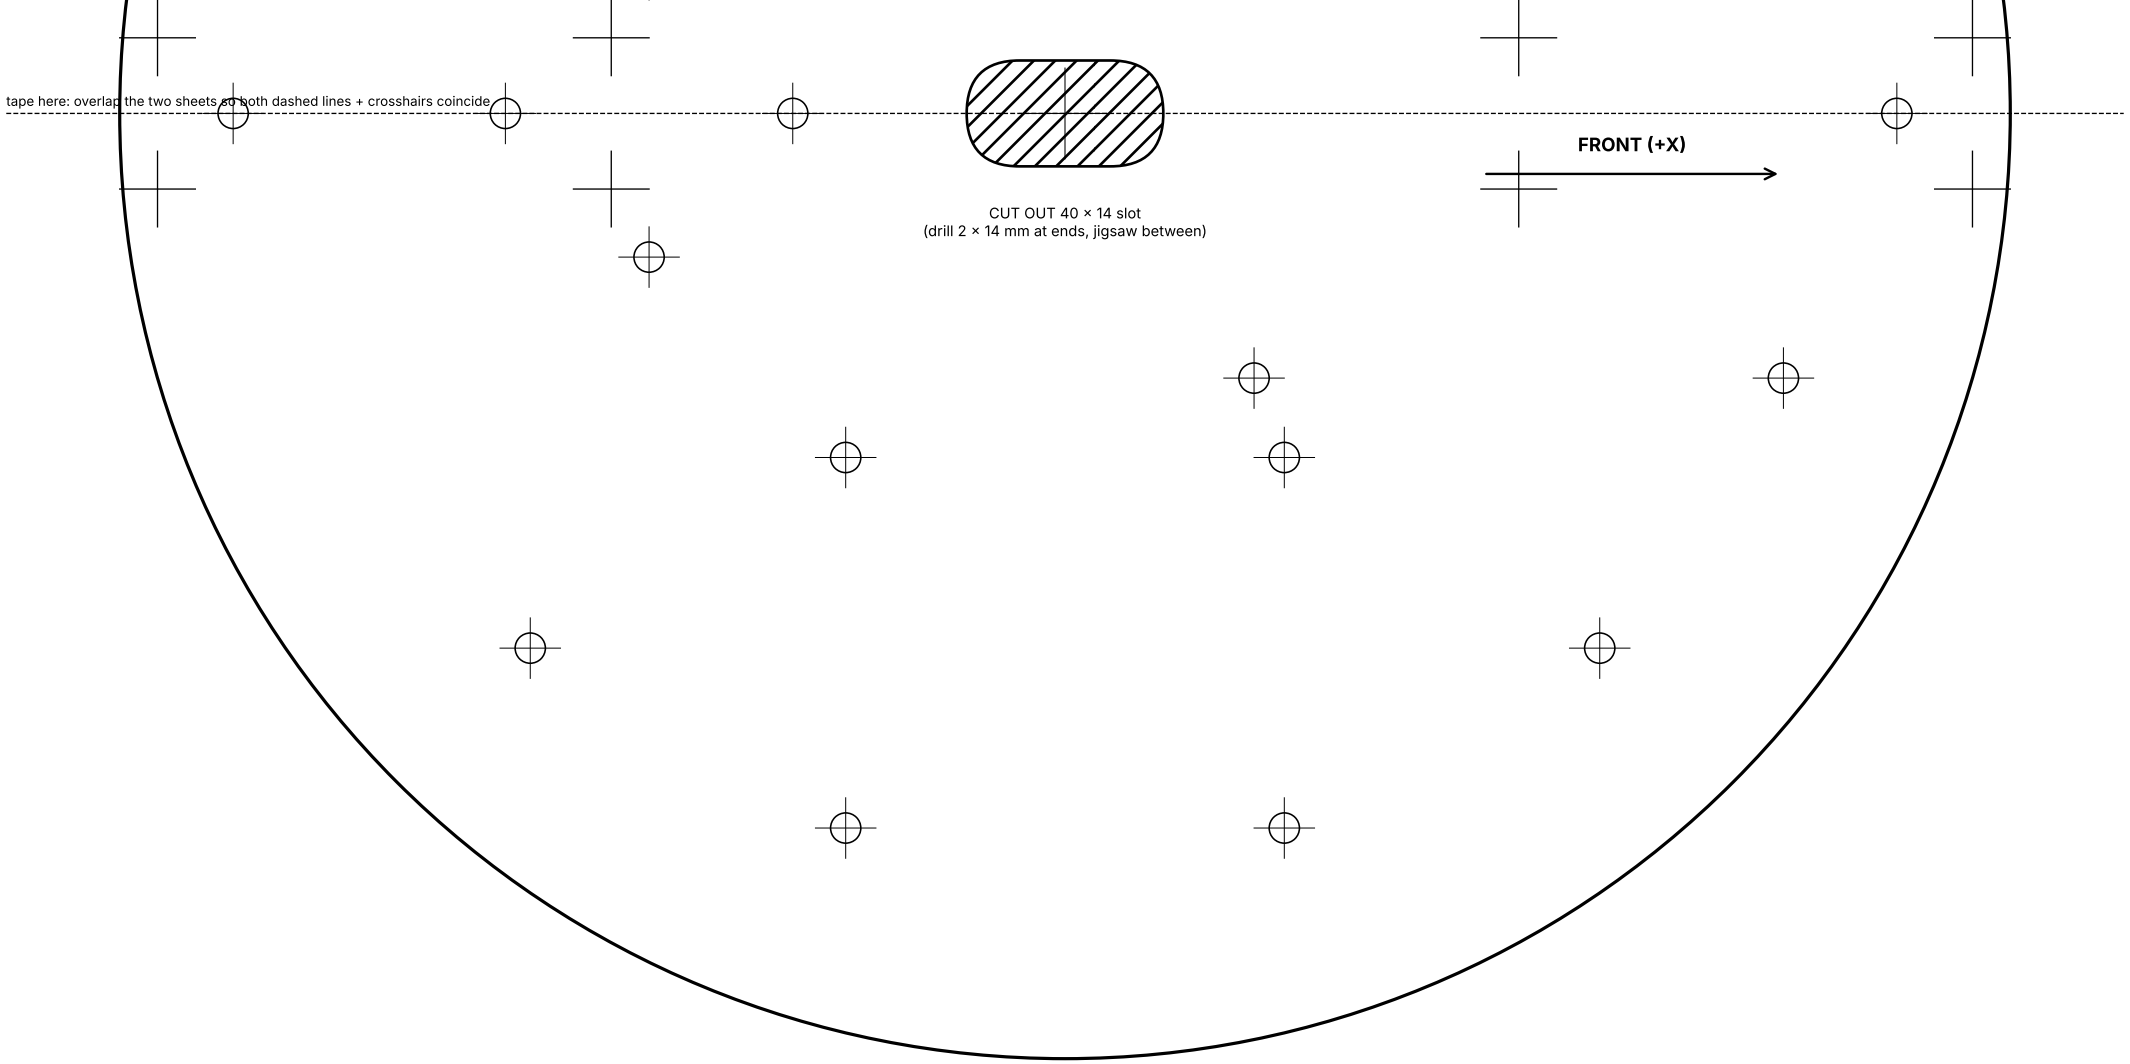

UPPER DECK - 1:1 TEMPLATE (handheld-robotics-v1, Nov 2026, direct-mount)

Print at 100% / 'Actual size' - NOT 'fit to page'. Check the 100 mm bar first.
18 holes: centre-punch each crosshair, drill 3 mm pilot, then open to 4 mm (black dots: 2 mm). Scrap wood behind.
Outer line = cut line (250 mm circle). Hatched = remove. Top face up; deck is symmetric left-right.
Sheet: RIGHT half (-Y).

100 mm - measure this