Test print

A paper prototype of your packaging at true size, to check the size and the fit before you order. It is not a production file: the export has the files your printer or cutter needs.

1. Print

- Print every page at 100 % (actual size). Turn off "fit to page" and "shrink oversized pages".
- Check the scale: the bar at the foot of each page must measure 2 in. If it doesn't, the pieces won't match your product.
- Thick paper or thin card (160 to 300 g/m2) folds more like real board than copy paper does.

2. Join the pages

Pieces too big for one sheet are spread over several pages, called tiles. A tile's name is in its footer: its row's letter and its column's number.

- On each tile with a hatched strip, cut the strip off along the dashed line.
- Lay each cut edge on the solid line of the tile it joins, so the grey half diamonds make whole ones, then tape the join. Lay the tiles out like this:

Box: shipping box: 8 tiles in 4 rows x 2 columns

A1	**A2**
B1	**B2**
C1	**C2**
D1	**D2**

3. Cut

- Cut along the solid black lines, the holes and slots inside the pieces too.

4. Fold

- Score the dashed blue lines first: press along each one with an empty ballpoint pen against a ruler, so the paper folds cleanly.
- Fold in the order of the numbers in the circles on the creases.

(1) White circle: fold away from the printed side, so the printed lines end up outside.

- Box pieces are printed on what becomes the outside of the box.

Box: shipping box

(1) Fold the 4 creases marked 1 by 90 degrees, away from the printed side.

(2) Fold the 2 creases marked 2 by 90 degrees, away from the printed side.

(3) Fold the 2 creases marked 3 by 90 degrees, away from the printed side.

check: this bar is 2 in

PACCRADLE TEST PRINT - NOT FOR PRODUCTION

4. Fold the 2 creases marked 4 by 90 degrees, away from the printed side.

5. Fold the 2 creases marked 5 by 90 degrees, away from the printed side.

5. Slot the dividers together

- Hold a divider slotted from the bottom over one slotted from the top, and slide them together slot into slot until their edges are level. Do the same at every crossing.


6. Check the fit

- Put your product in. It should go in without forcing, with a little room all round.
- Paper is thinner than board, so slots sit loose and folds are softer. Judge the size and the fit, not the strength.
- Too tight or too loose? Change the clearance in your design and print again.


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in


Insert: long divider

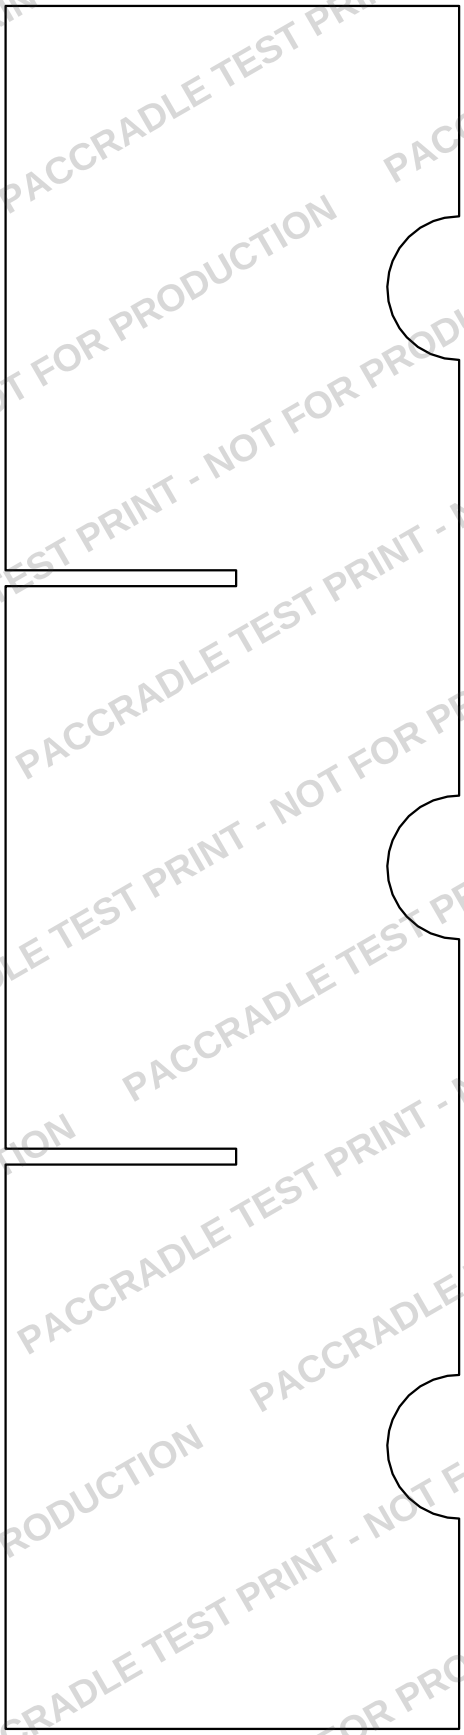

Insert: short divider (1 of 2)

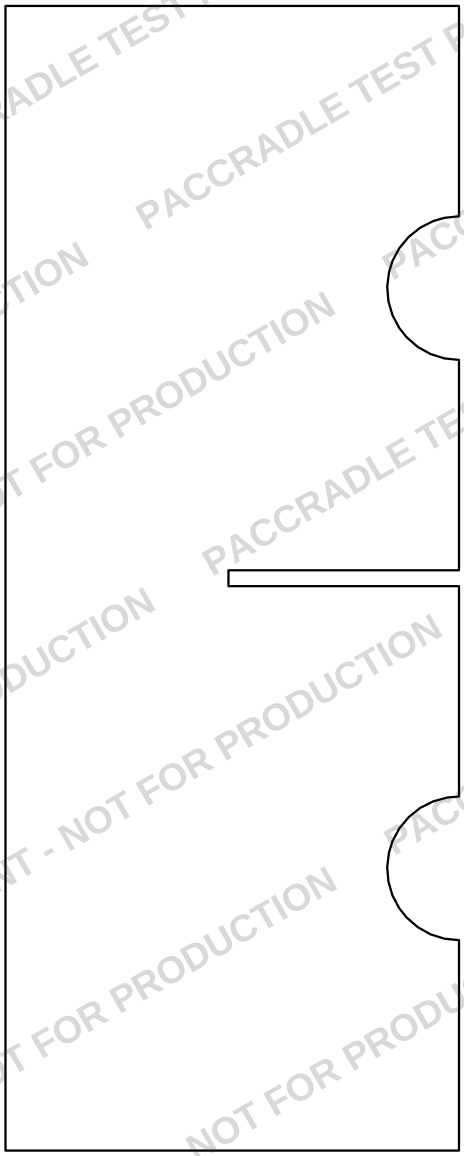


Insert: short divider (2 of 2)

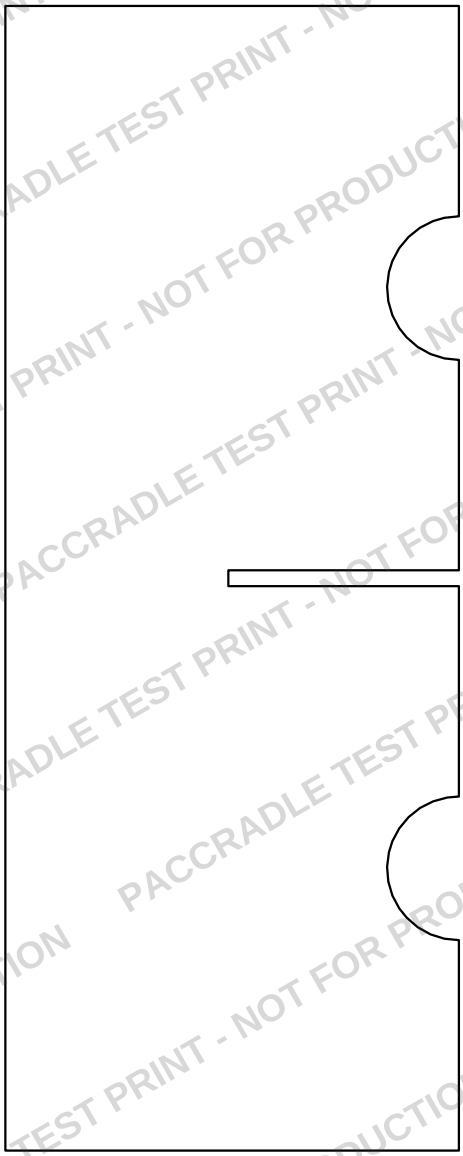


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

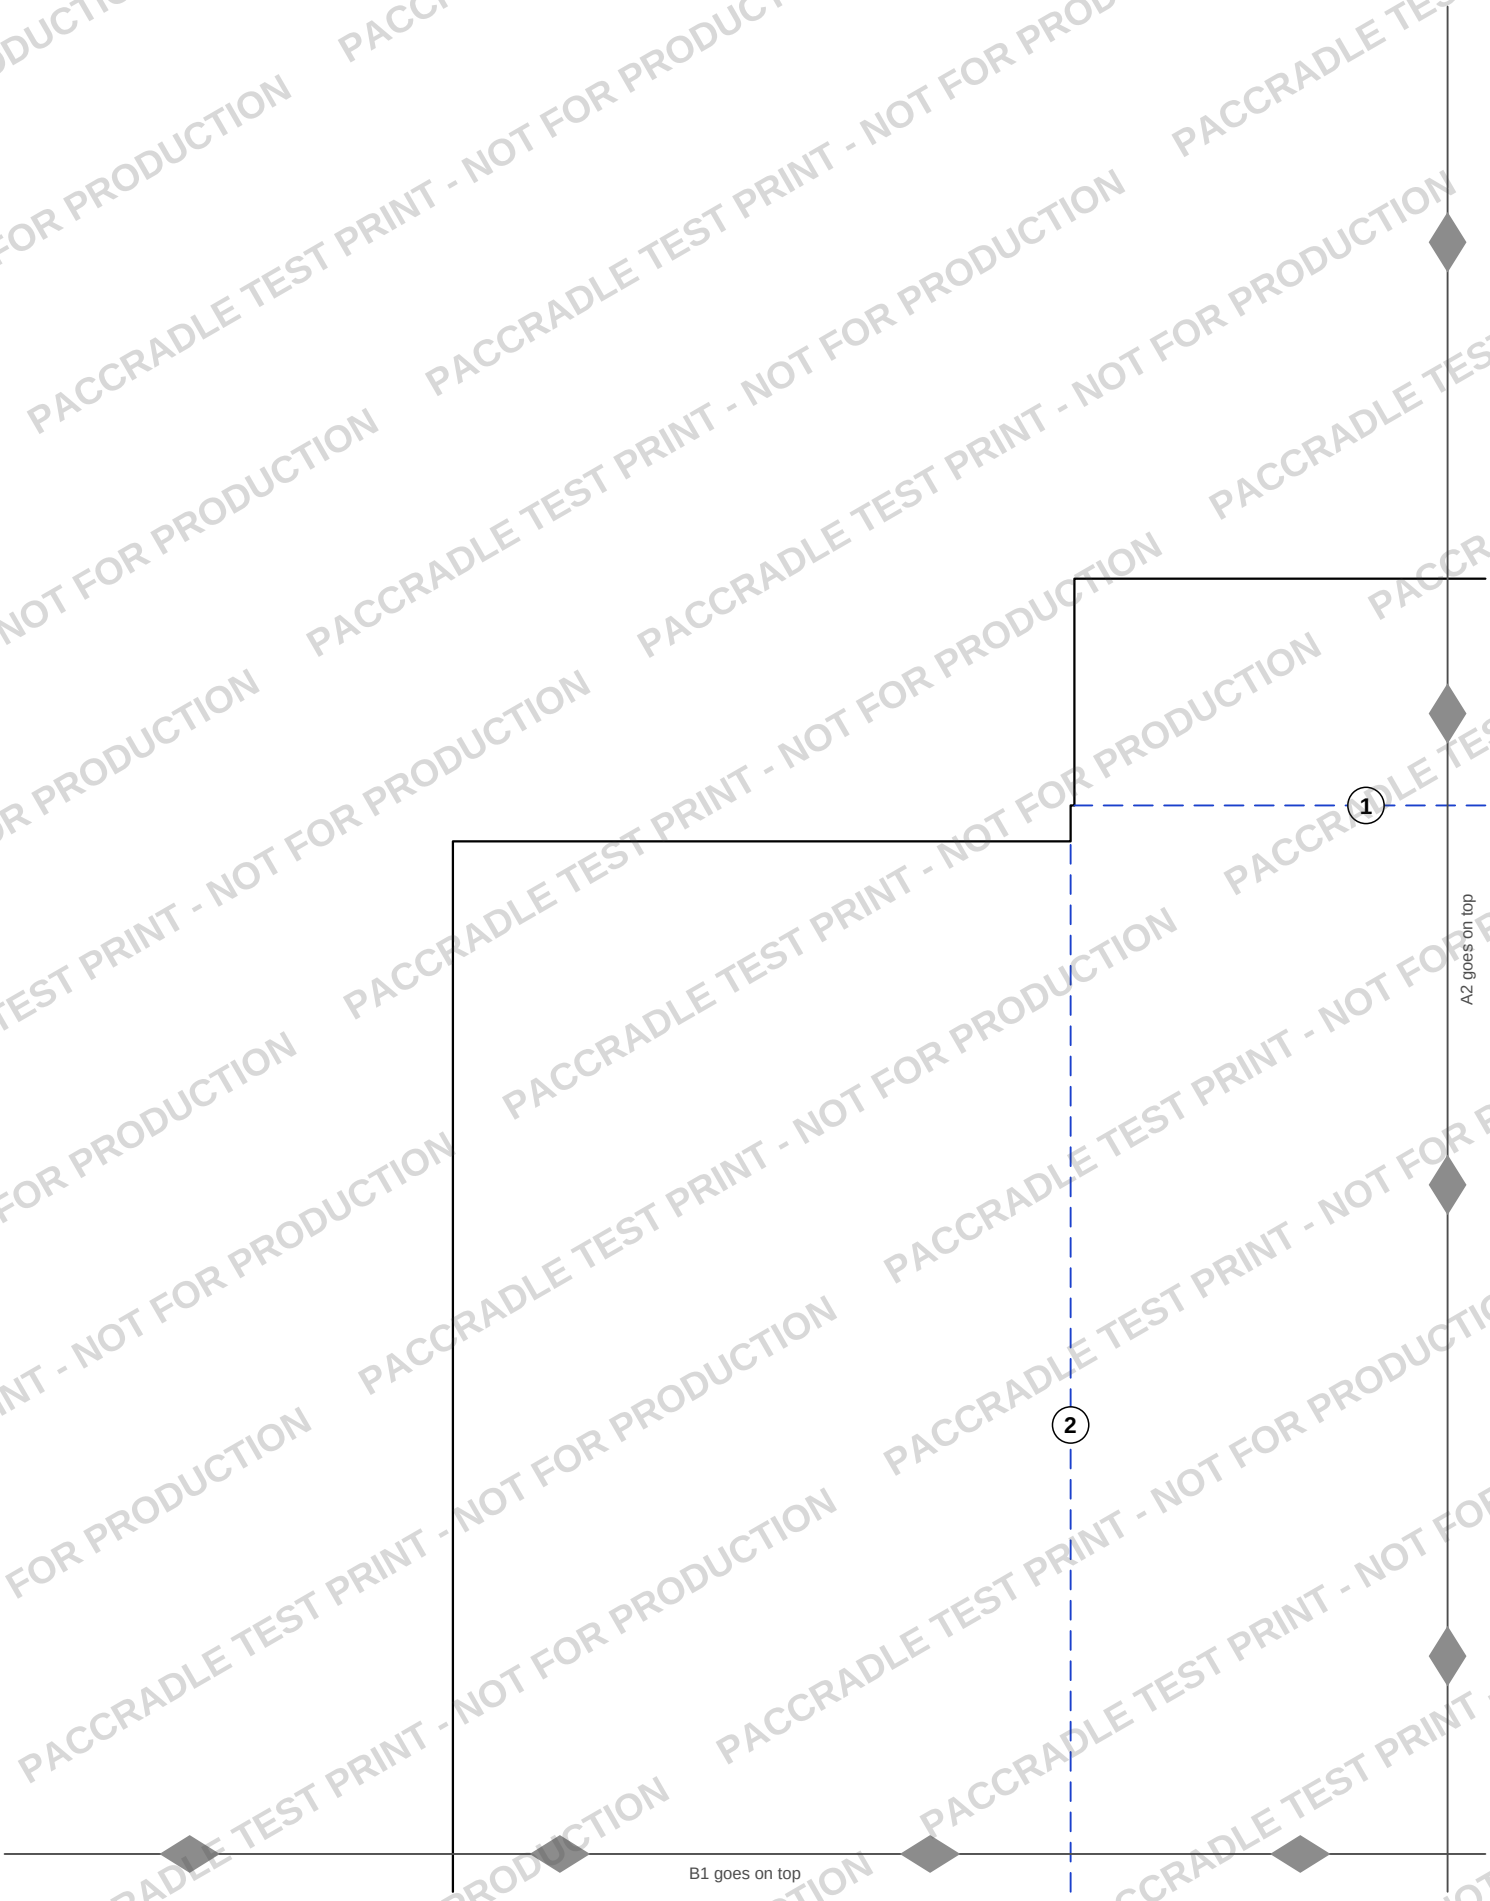


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

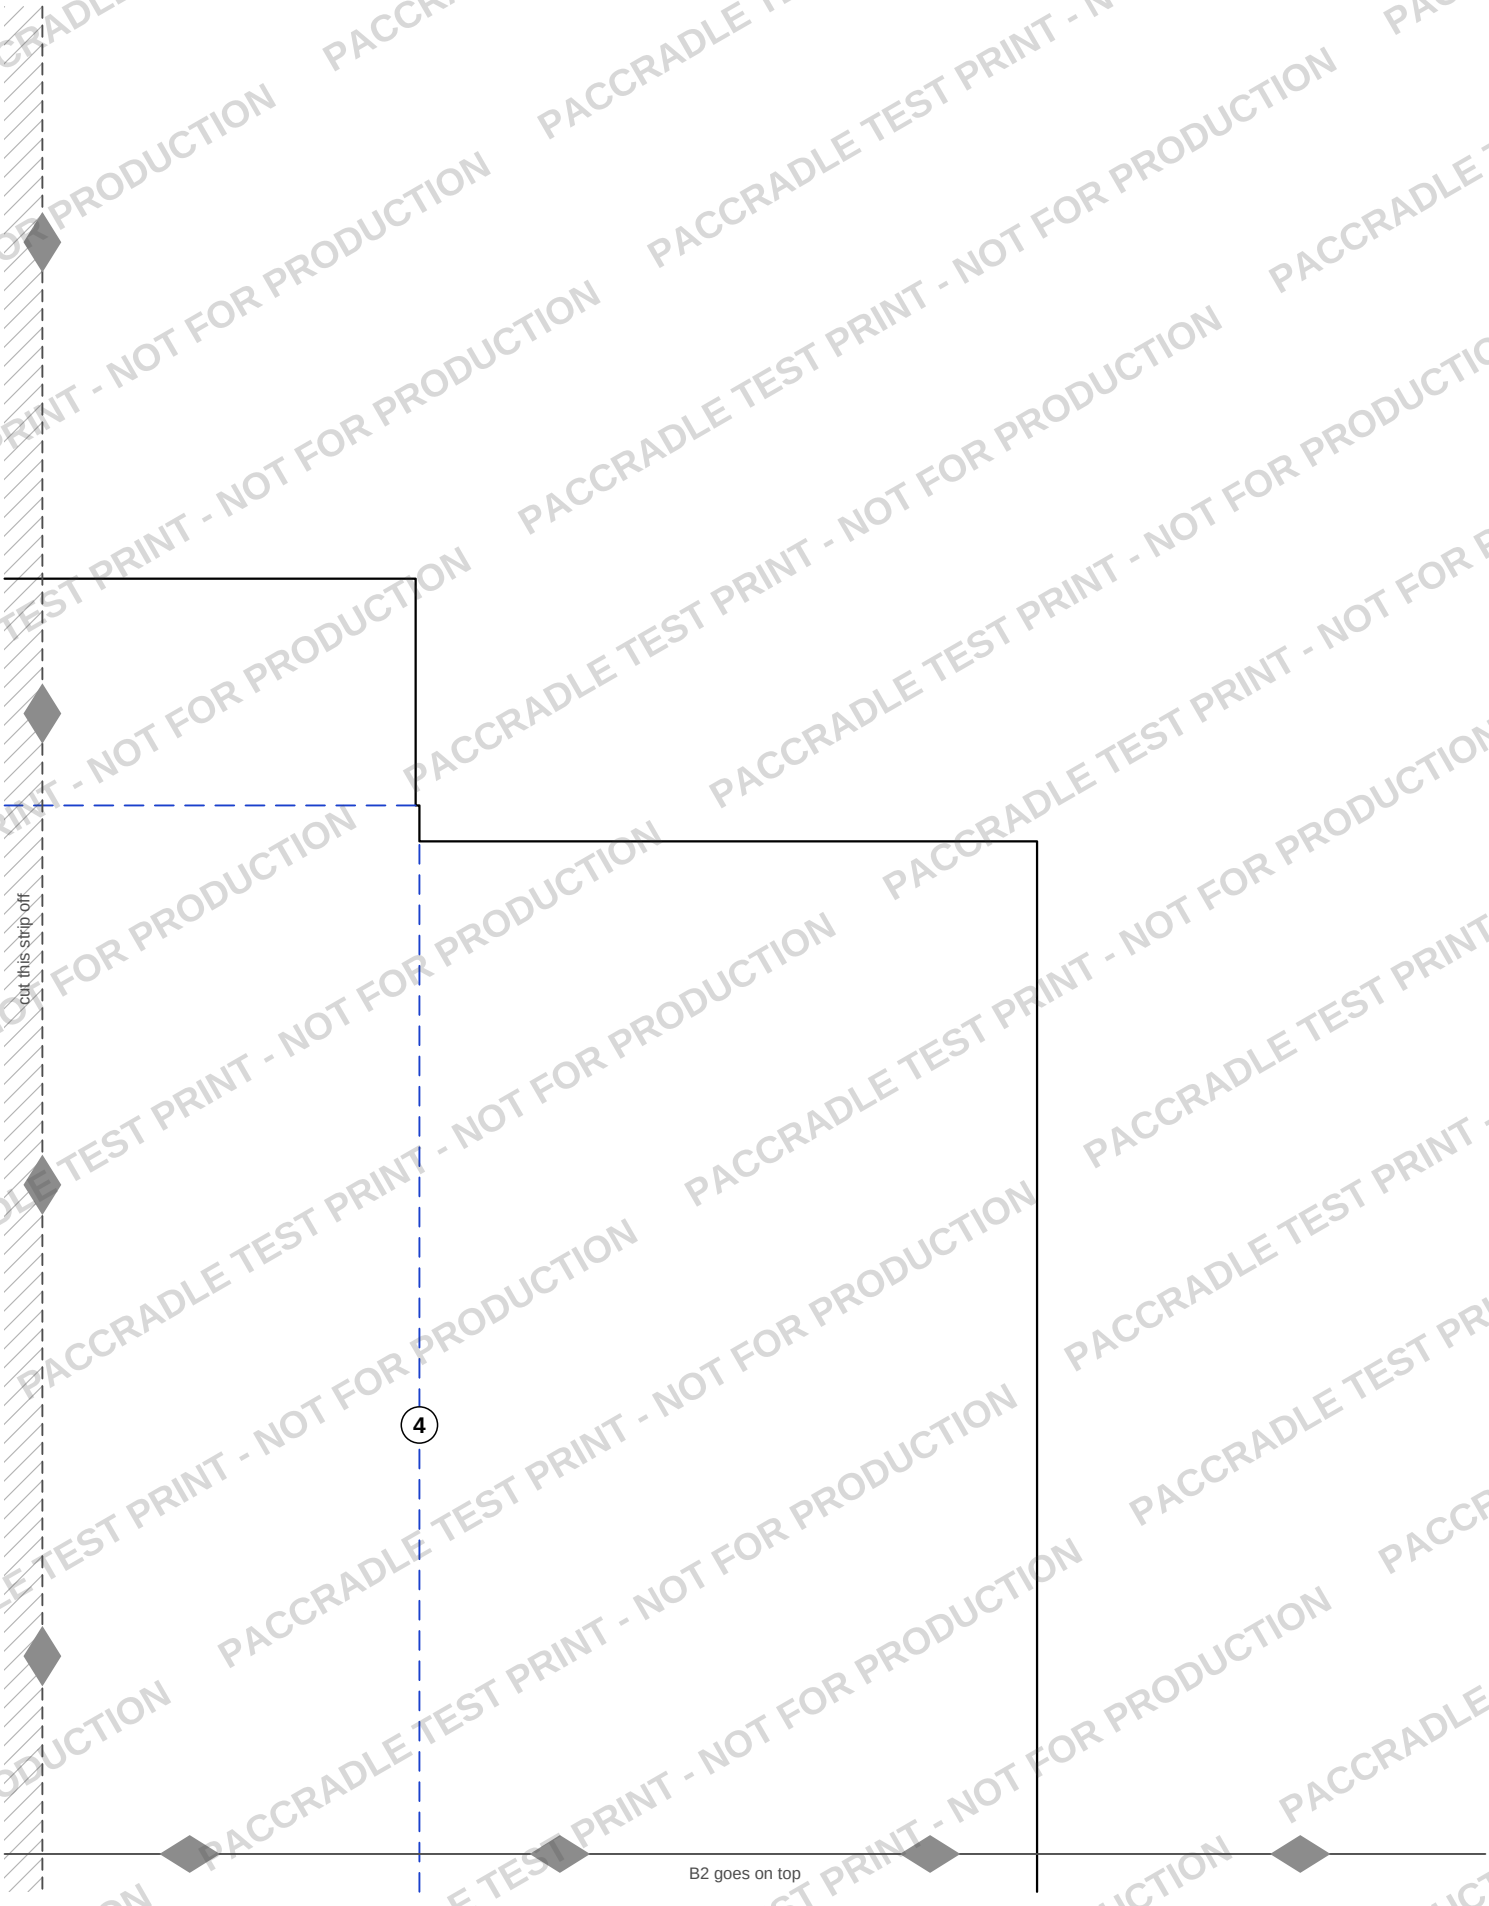


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

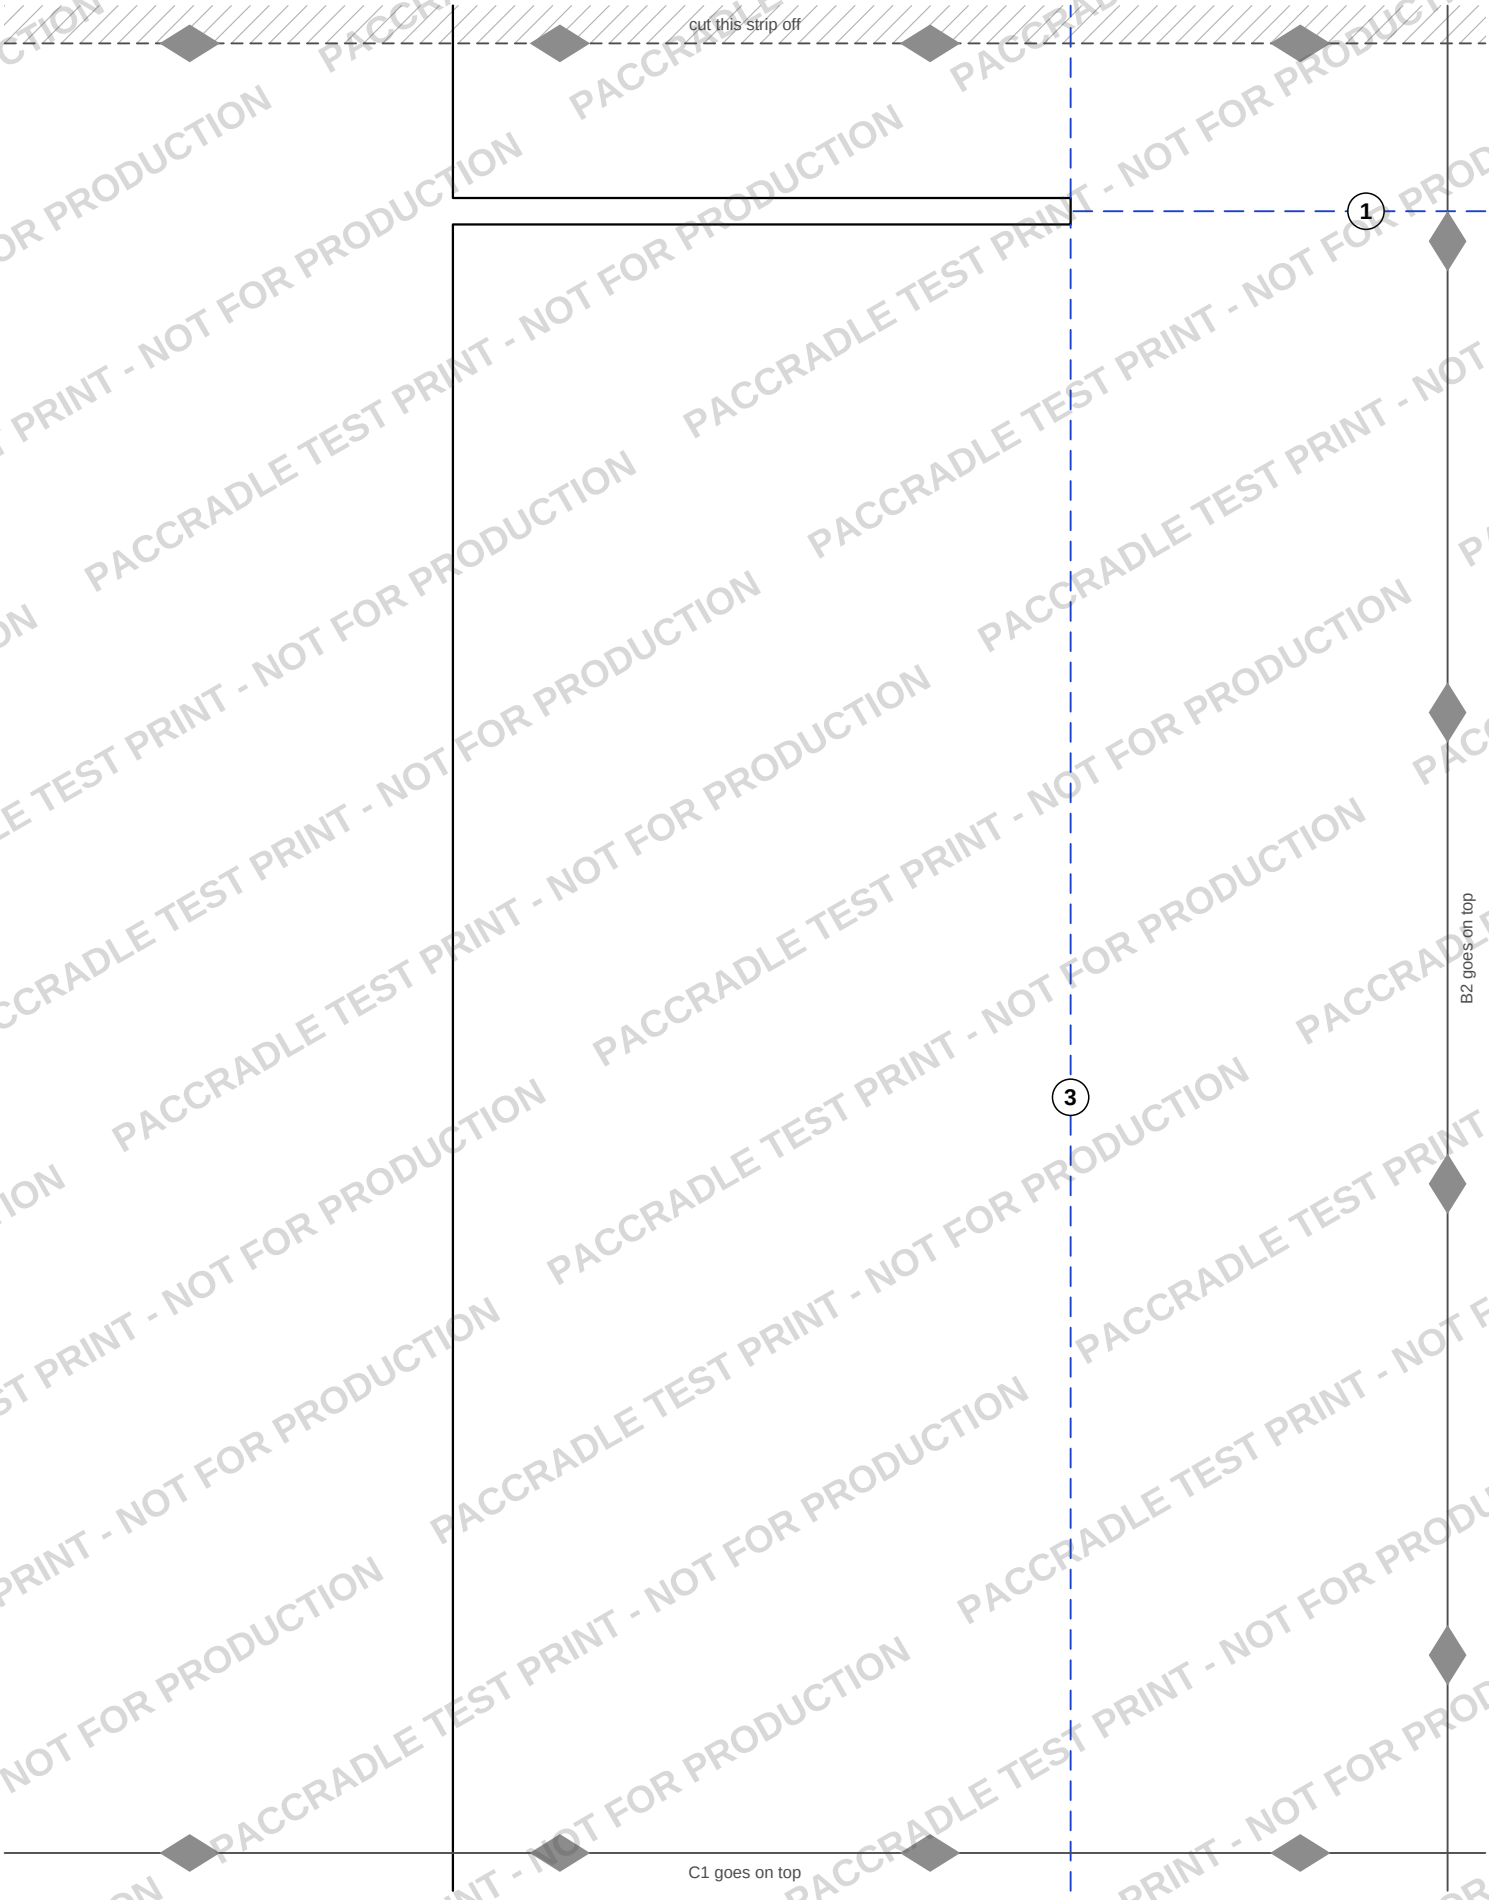


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

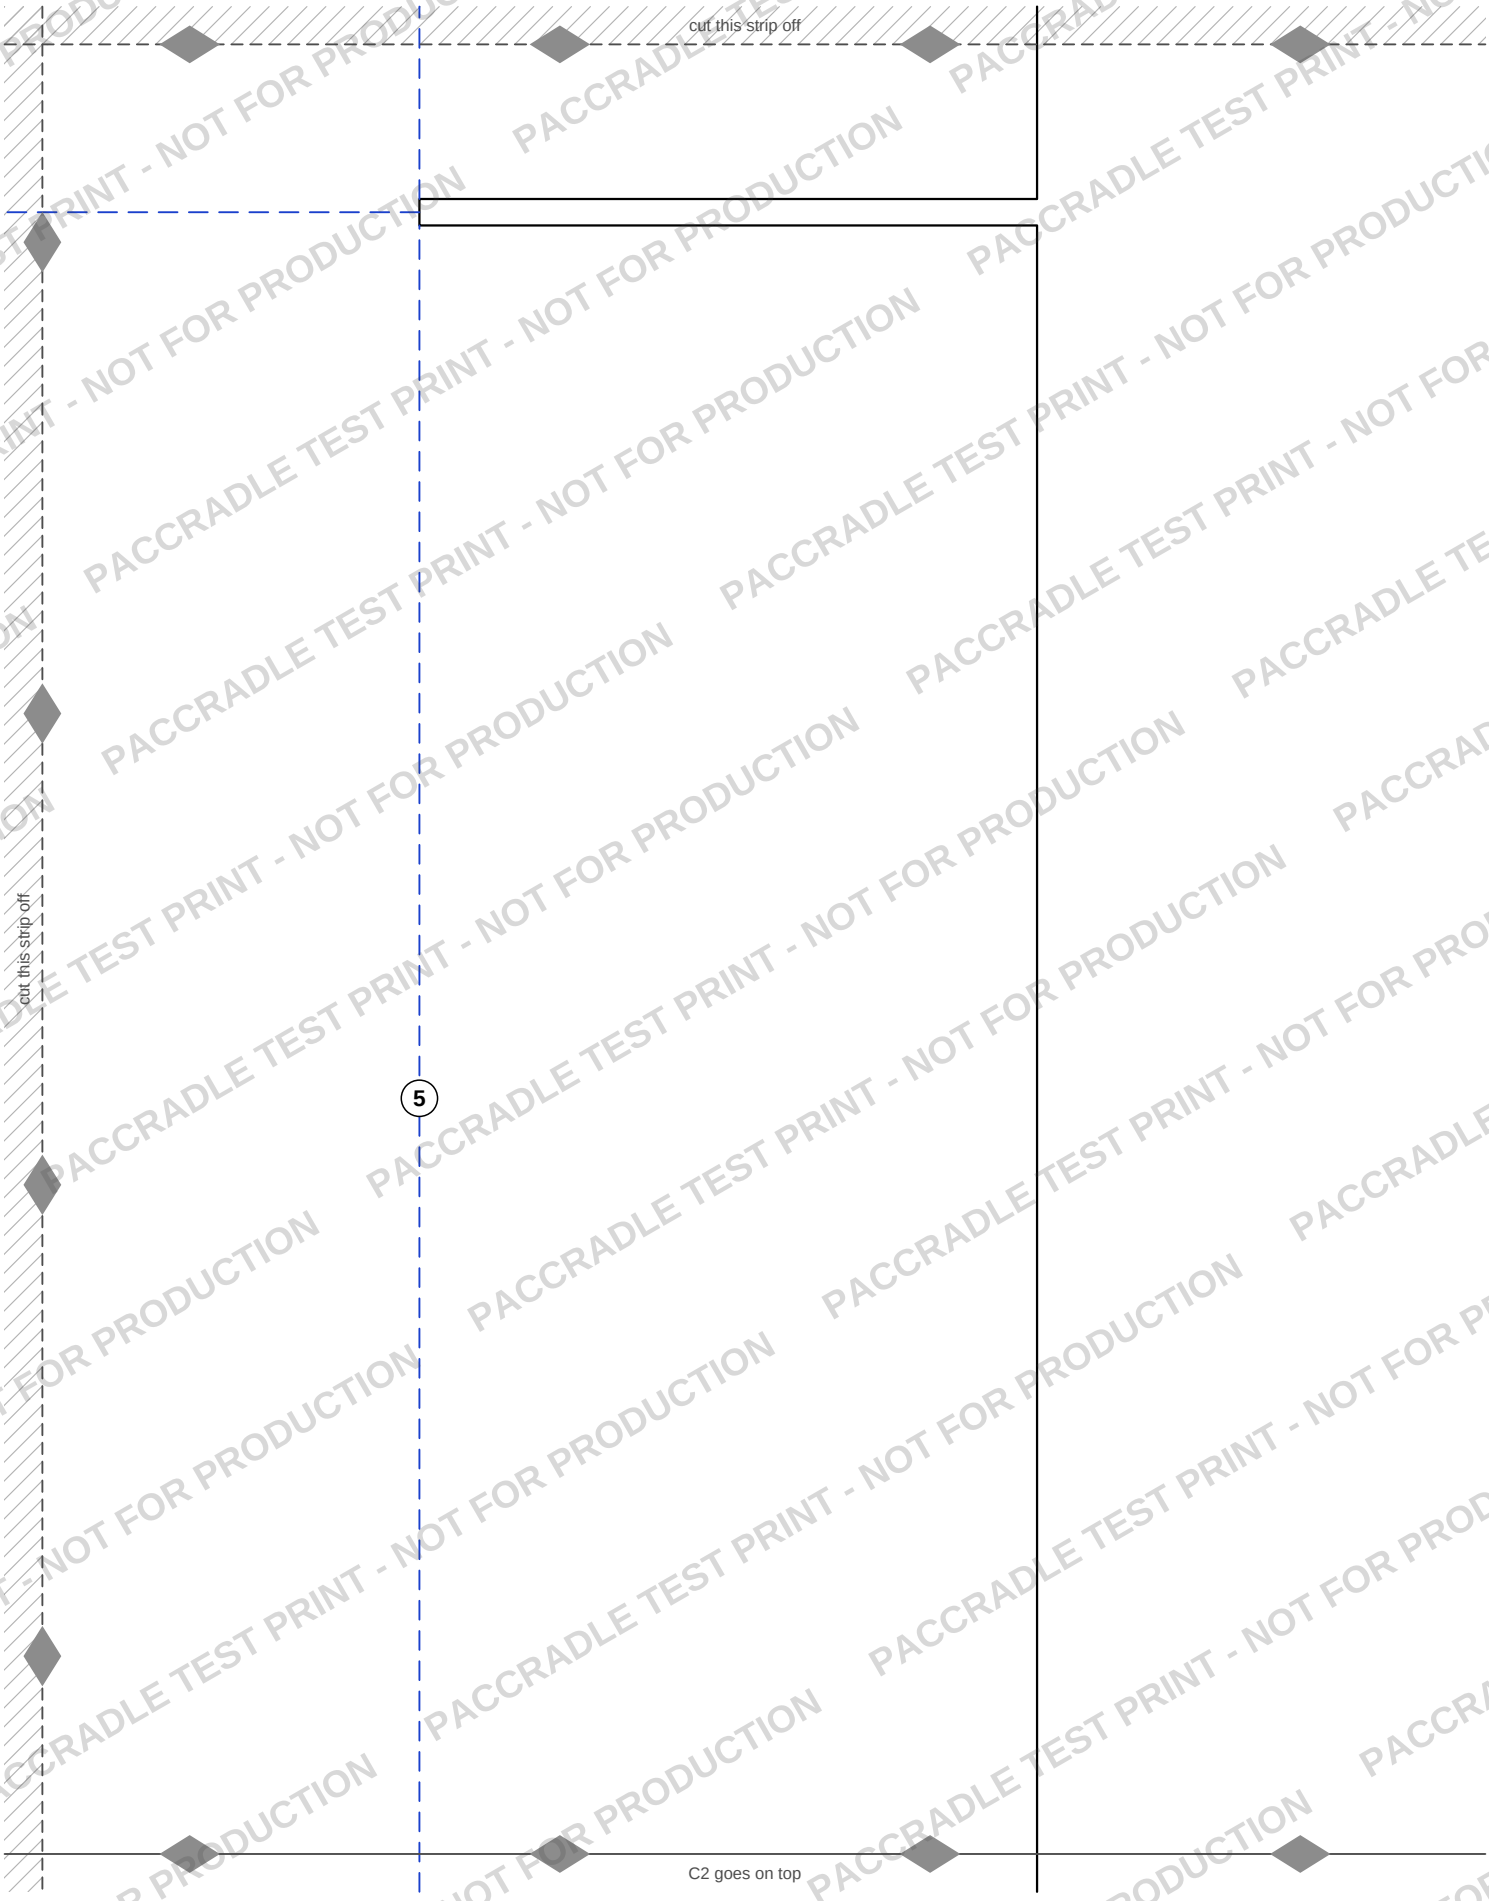


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

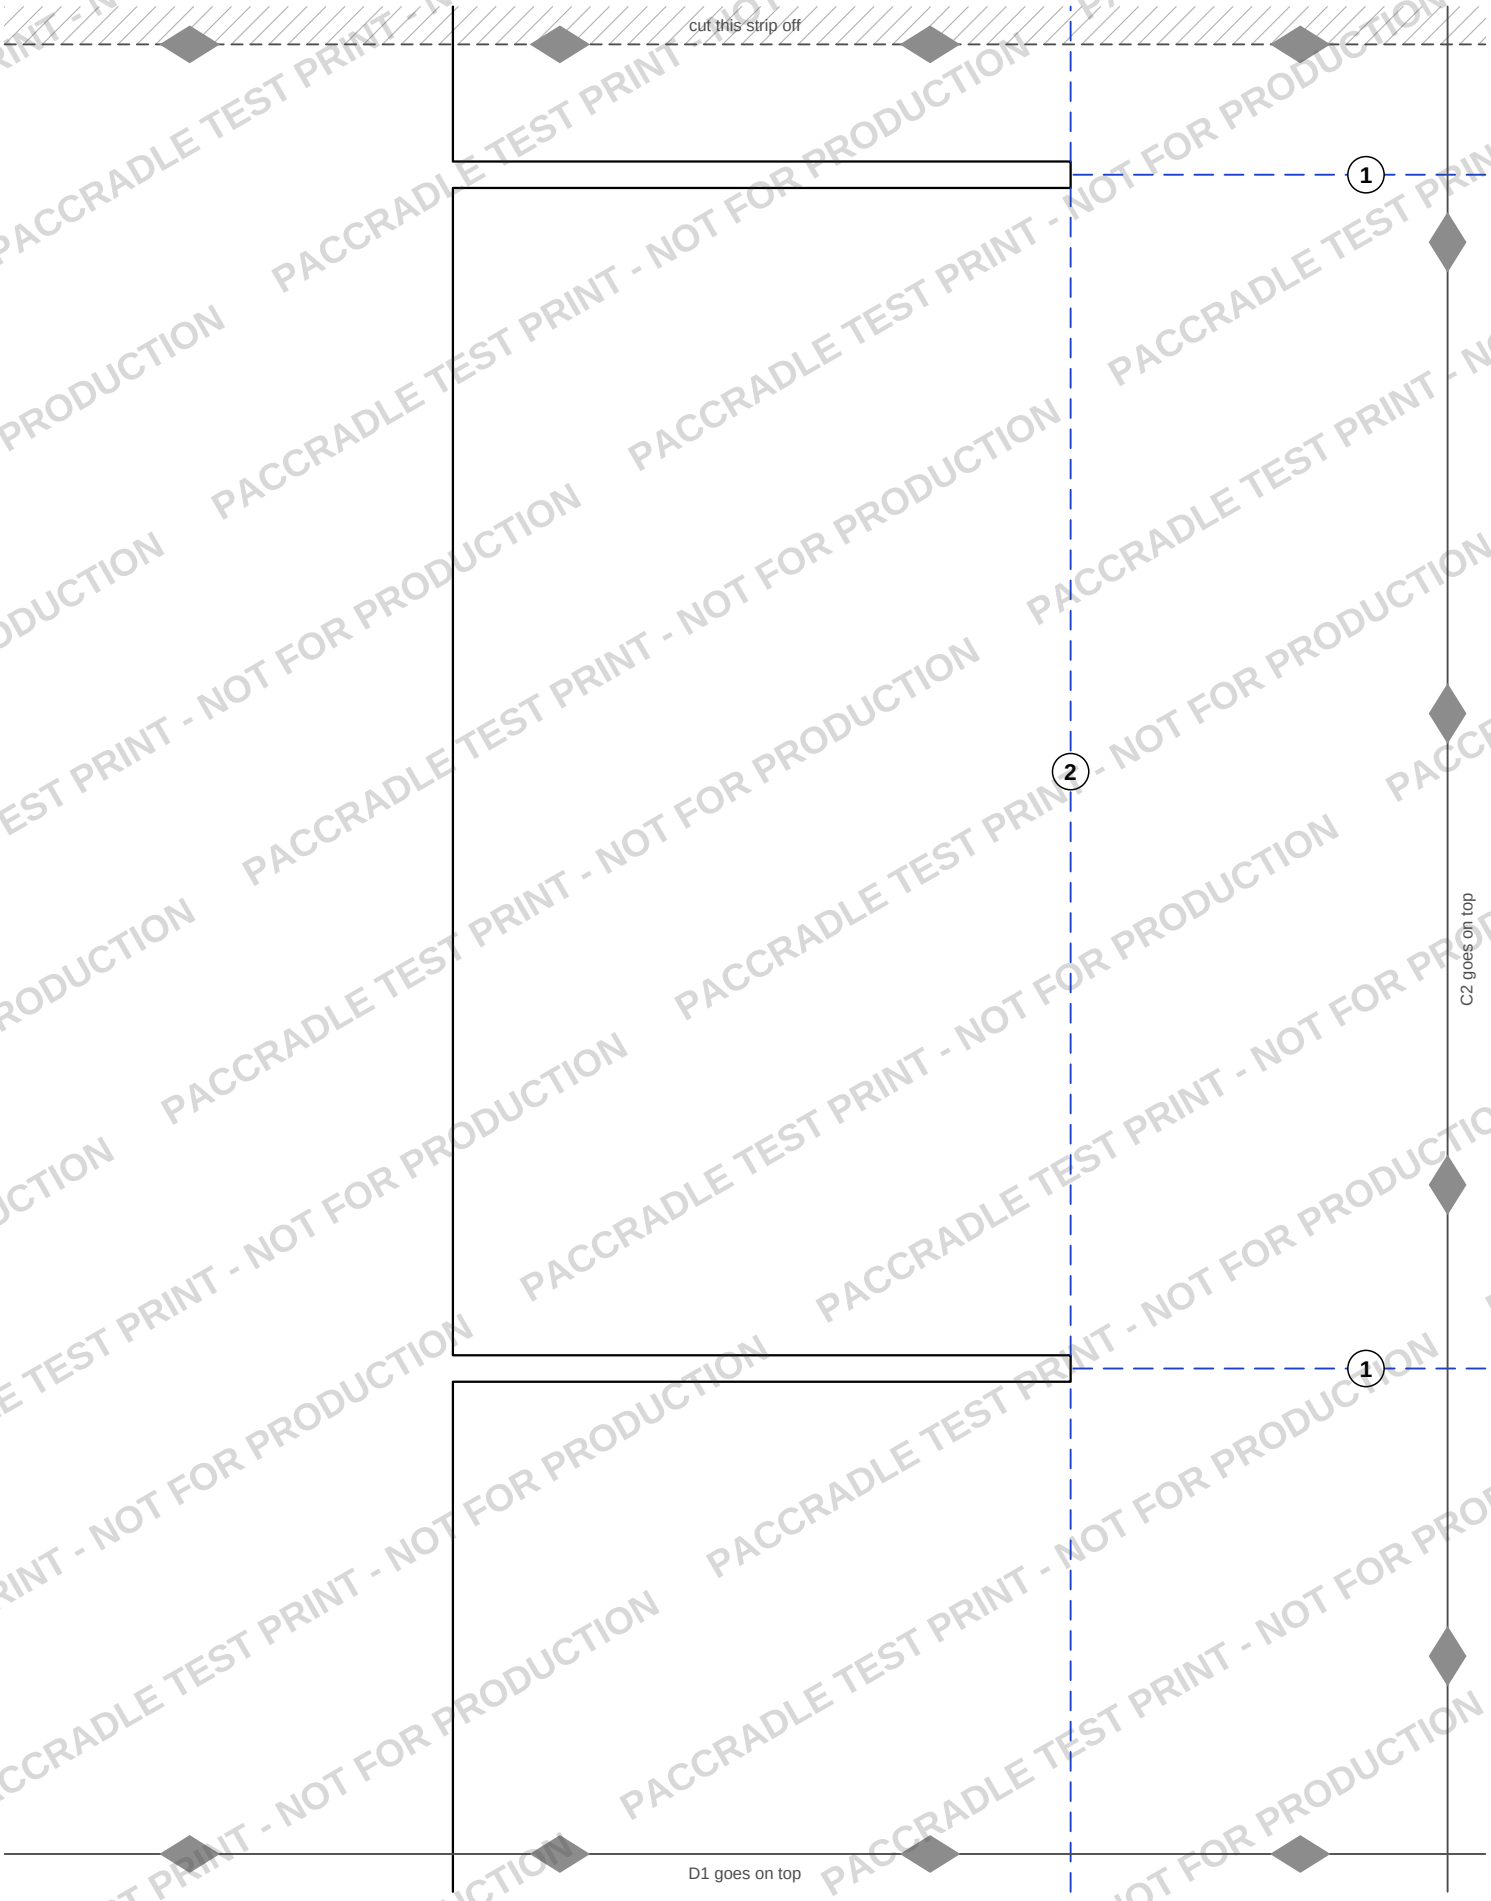


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

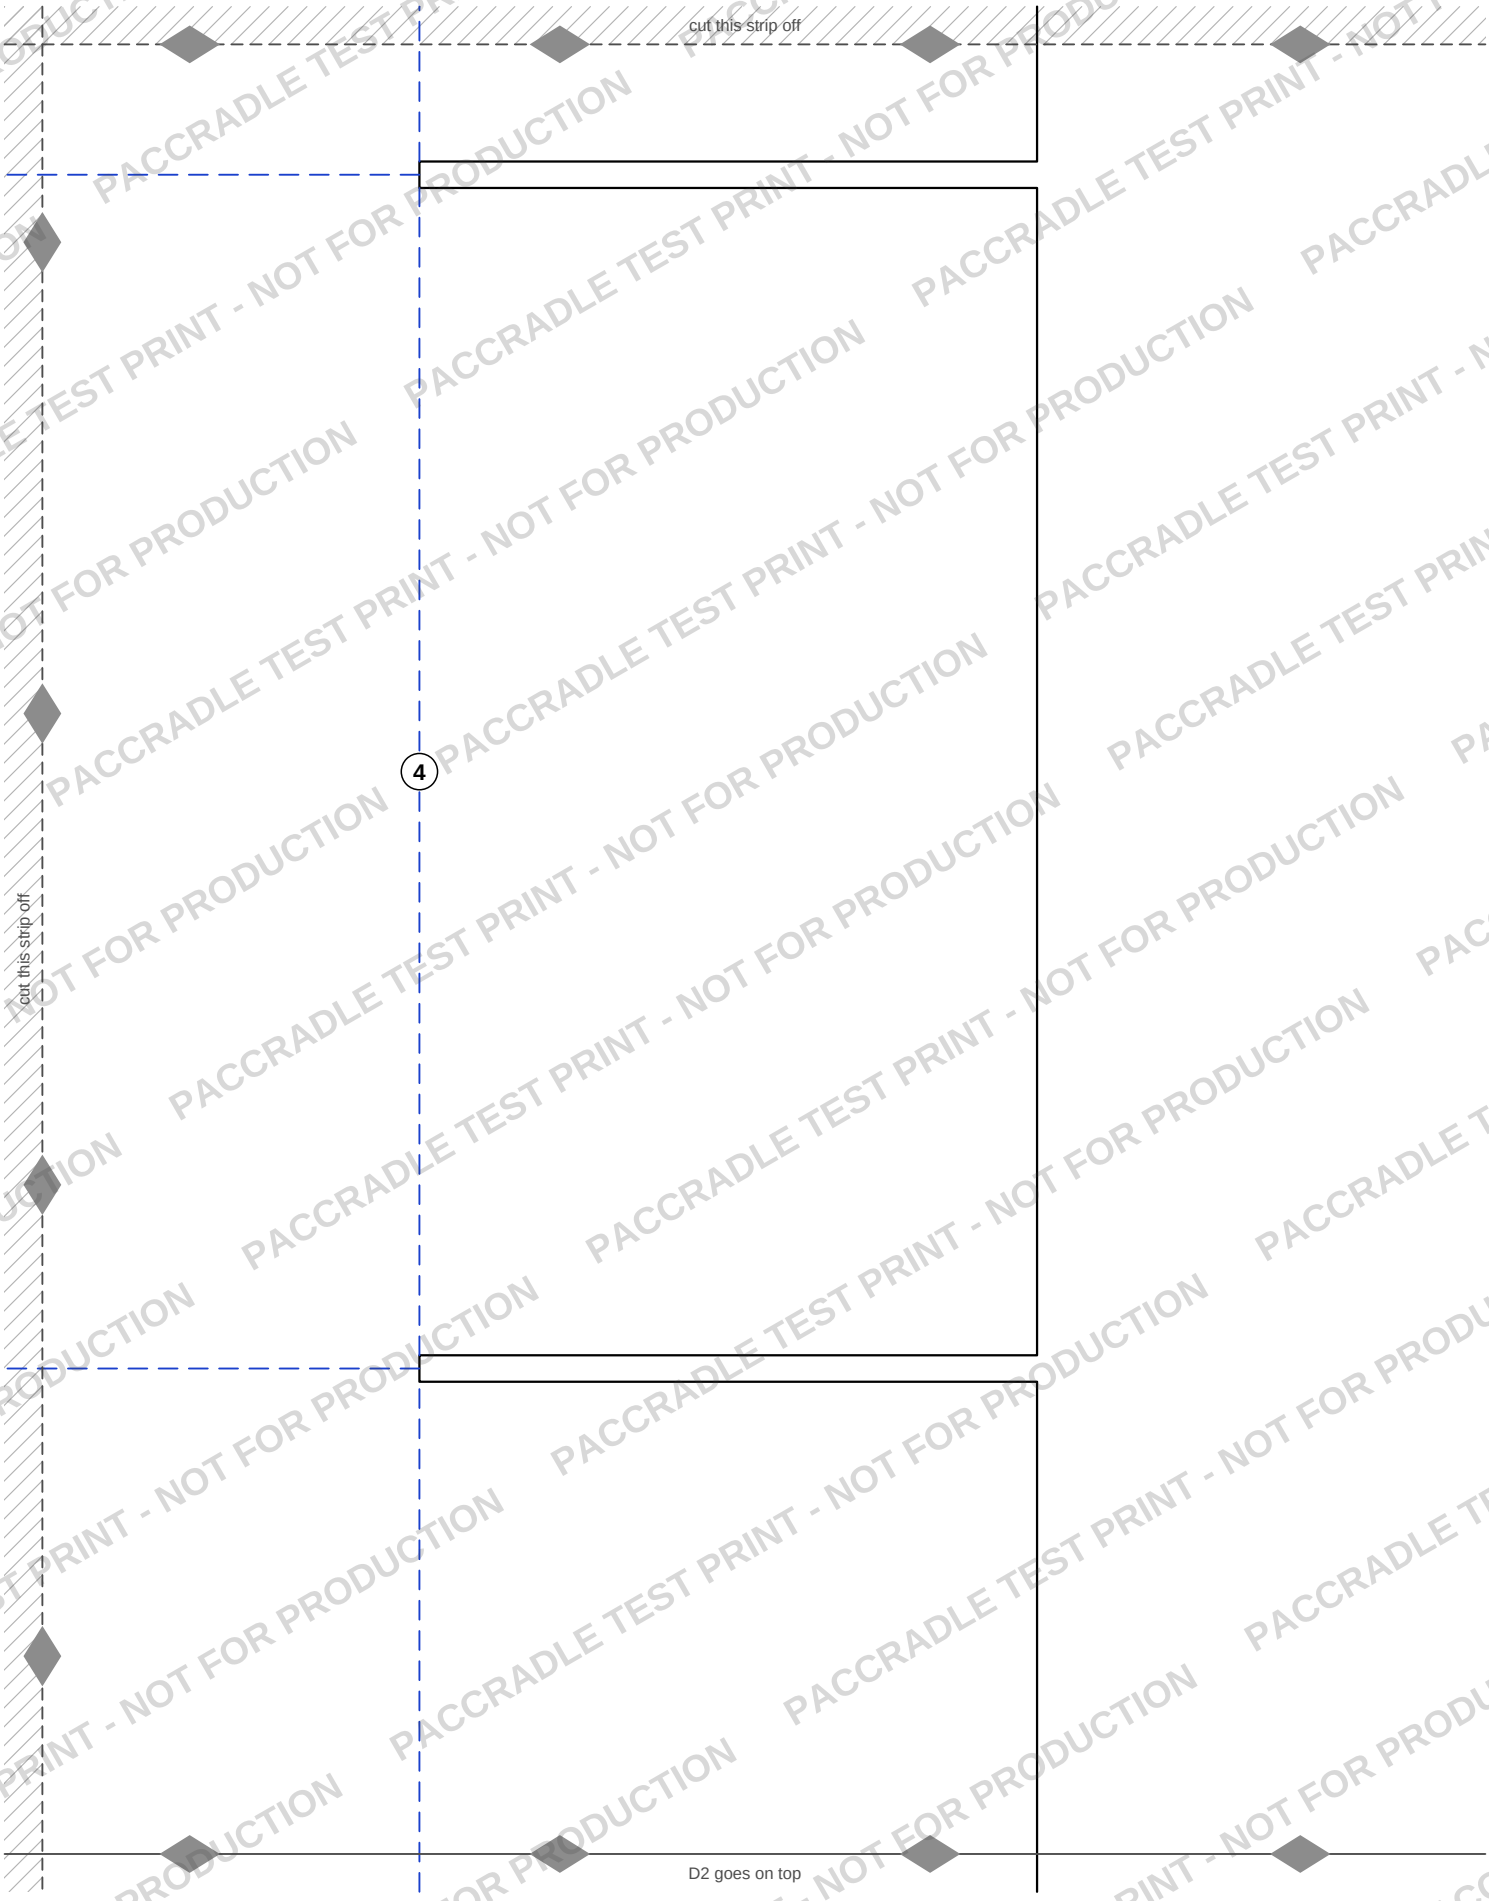


PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

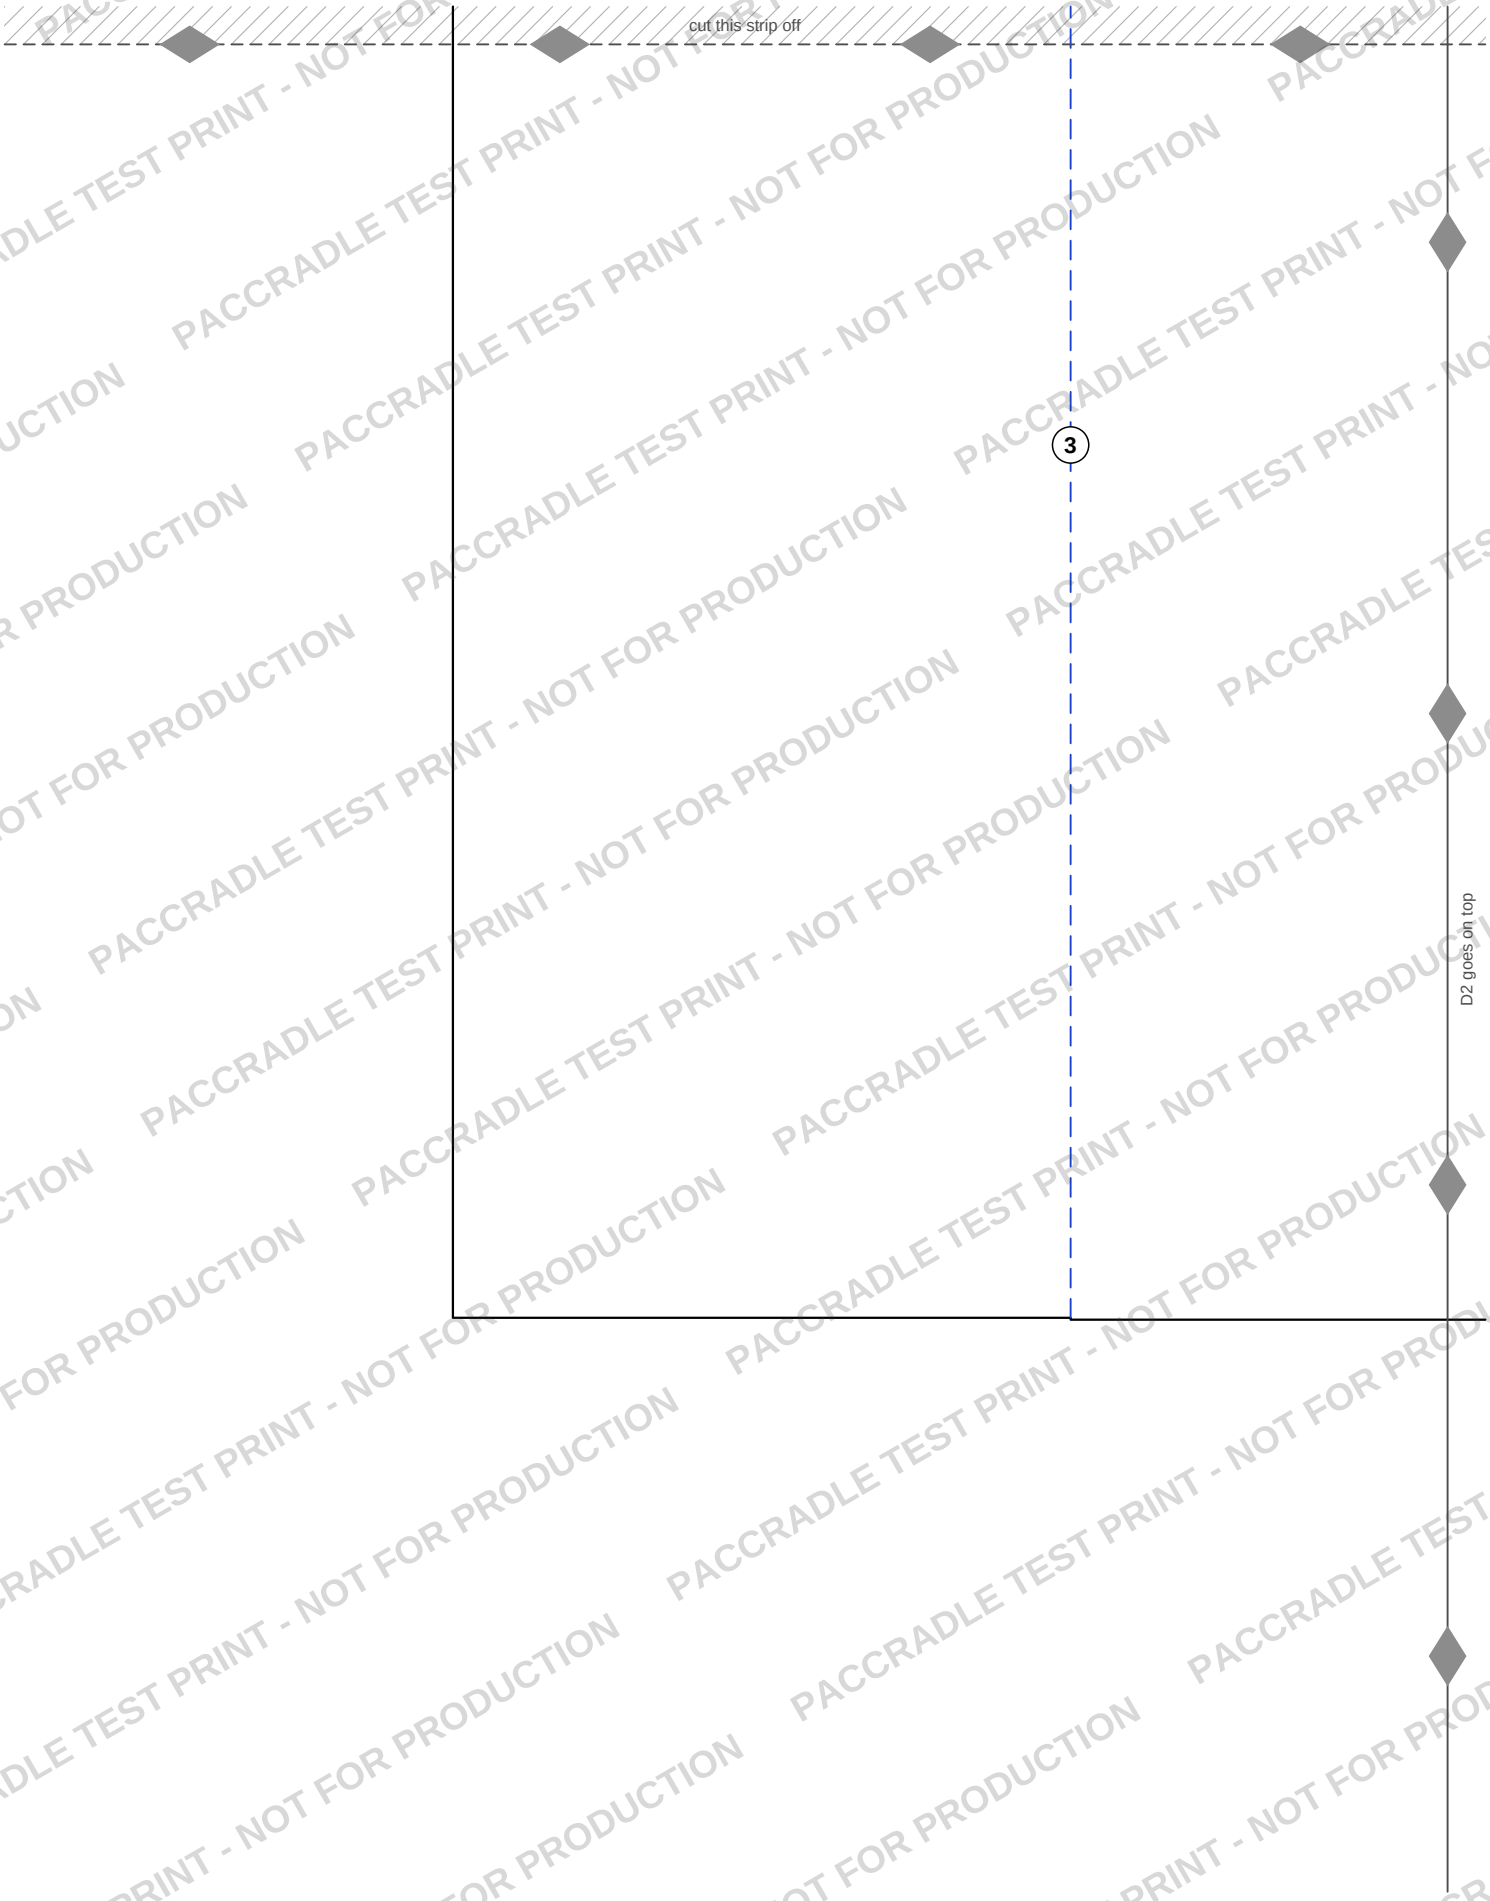

PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in

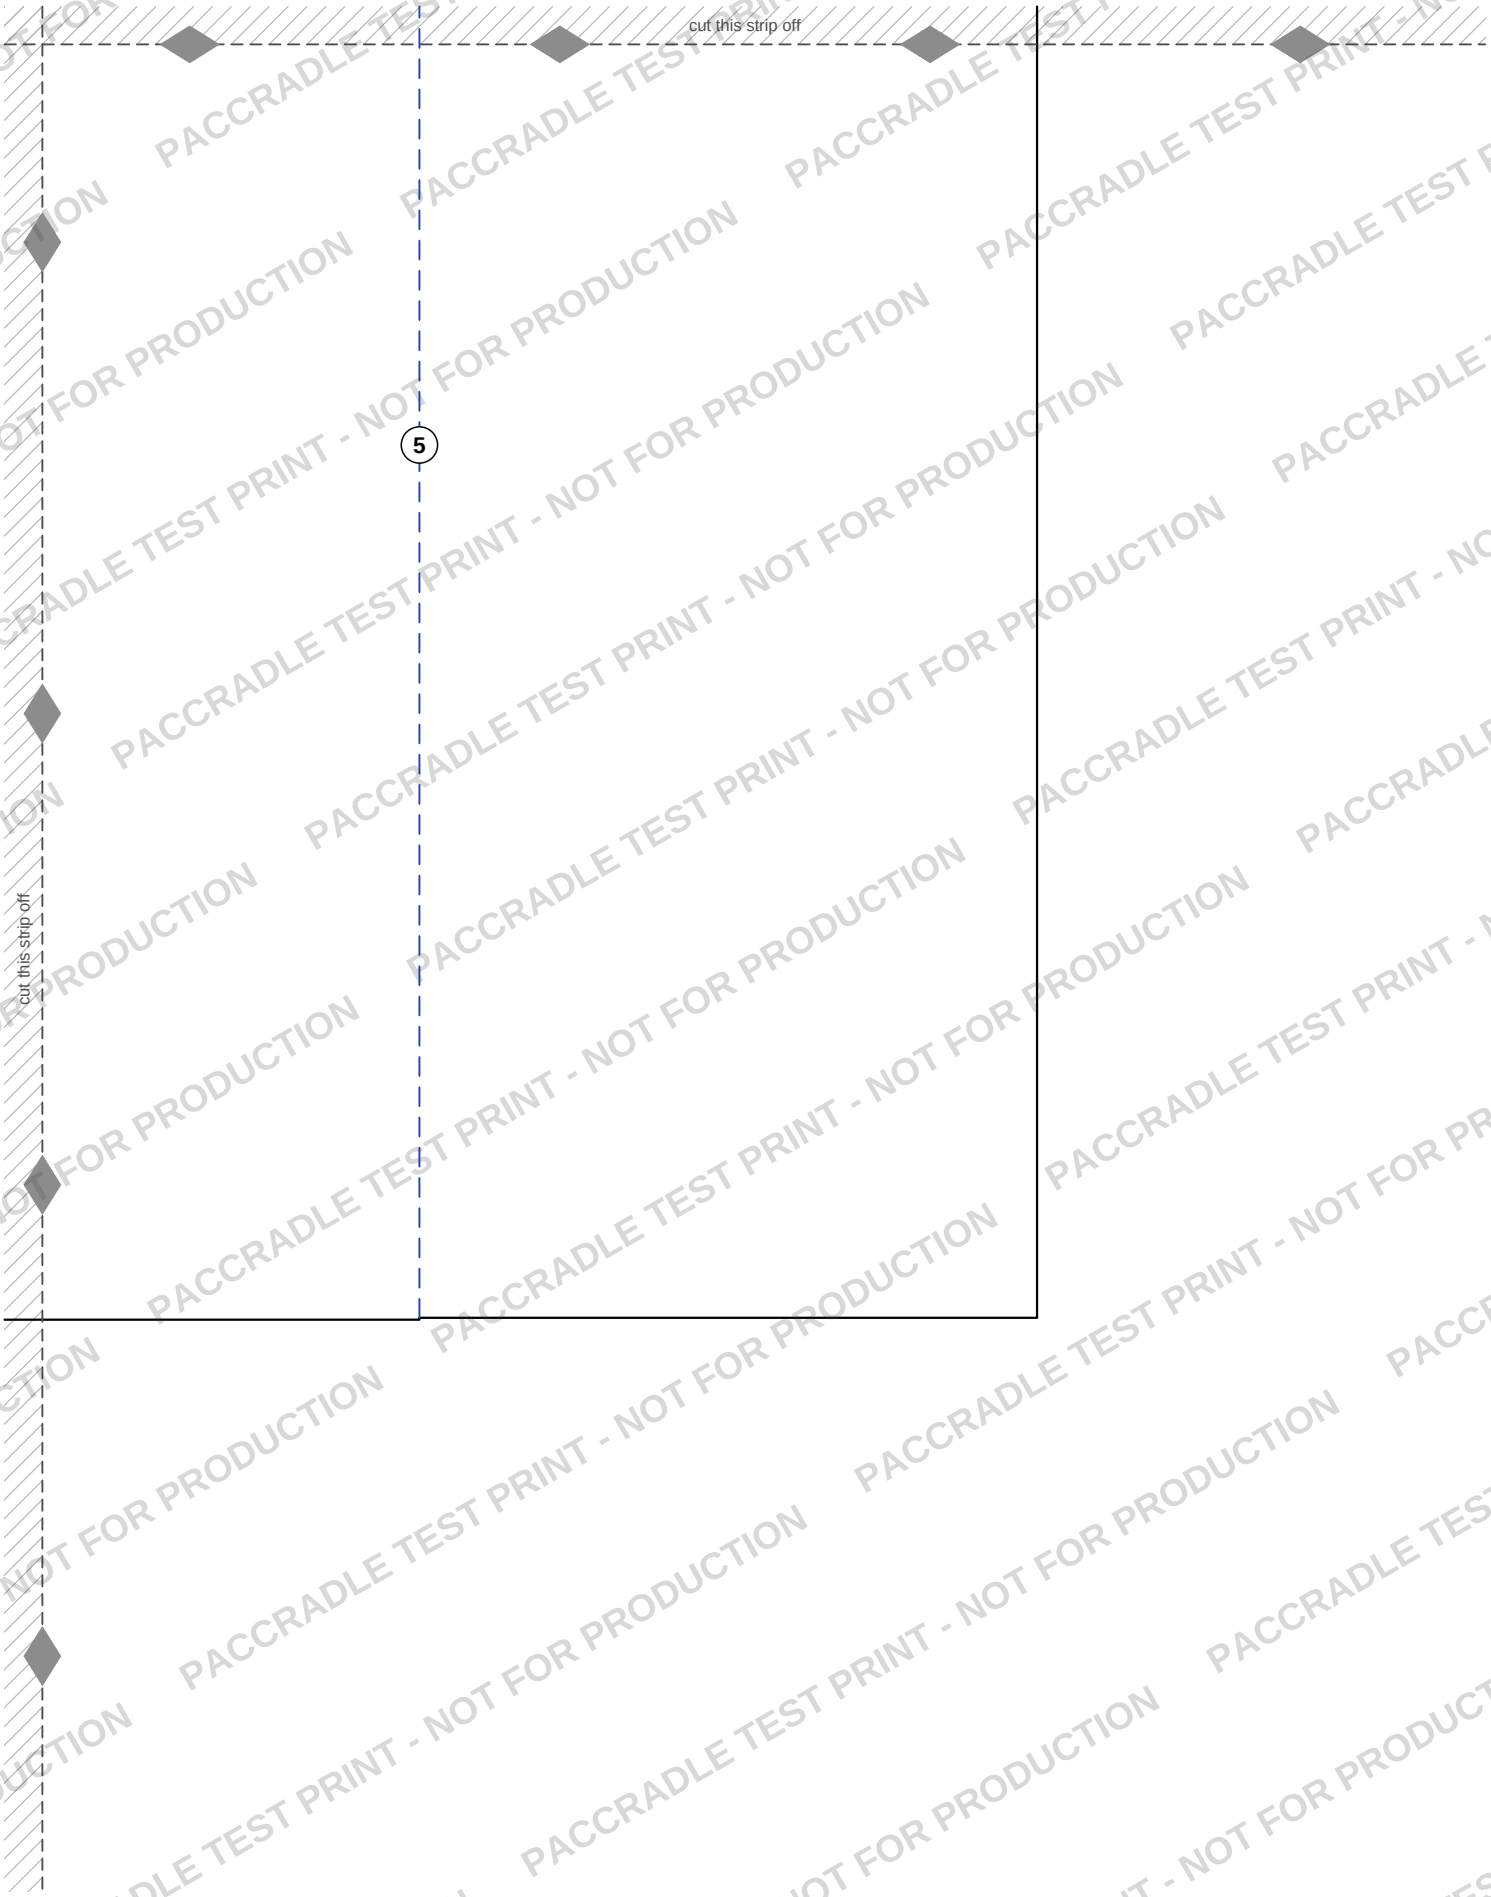

PACCRADLE TEST PRINT - NOT FOR PRODUCTION

check: this bar is 2 in