



UNIVERSITY COLLEGE LONDON

MENG MECHANICAL ENGINEERING

MECH0074 ENGINEERING IN EXTREME ENVIRONMENTS

TOPIC NOTES

Author:
HD

Module coordinator:
Prof. Ian Eames

Last updated: July 4, 2023

Contents

List of Figures	iv
List of Tables	vi
I Introduction	1
1 Road Mapping	2
1.1 Overview	2
1.1.1 Context	2
1.1.2 Course assessment	2
1.1.3 Group project - extreme pressure 2019 / 2020	2
1.1.4 Course structure	3
1.2 Engineering in extreme environments	4
1.2.1 Engineering	4
1.2.2 Classification of environment	4
1.2.3 Classification of interactions	5
1.2.4 Classification of extremes	5
1.3 Extreme natural environments	5
1.3.1 Extreme pressure	7
1.3.2 Extreme temperature	8
1.3.3 Extreme chemistry	8
1.4 Industrial accidents	9
1.5 Codes of practice	10
1.5.1 Professional bodies	11
1.5.2 Example of codes of practice	11
1.5.3 Contributing to codes of practice	12
1.5.4 Example of impact	12
2 Materials, Molecules and Chemistry	18
2.1 Introduction	18
2.1.1 Complexity of the problem at different length scales	18
2.1.2 Why focus on small scales?	19
2.2 Categorisation of matter	21
2.3 Atomistic view of matter	21
2.3.1 Bulk characteristic of materials	21
2.3.2 Newtonian model of matter	22
2.3.3 Vibrational modes and energy	23
2.3.4 Molecular description of material properties	23
2.3.5 Material classification	27
2.4 Kinetic theory of gases	30
2.4.1 Speed of molecules	30

2.4.2	Equations of state of real gases	31
2.5	Chemistry for engineers	32
II	Extreme Pressure	33
III	Extreme Temperature	34
3	How to Cool Very Hot Surfaces	35
3.1	Introduction	35
3.2	Jet engines	35
3.2.1	Brayton (or Joule) cycle	36
3.2.2	Typical values	37
3.2.3	Material selection	38
3.2.4	Manufacturing process	40
3.2.5	Thermal barrier coating	41
3.2.6	Corrosion processes	44
3.2.7	Cooling through design	45
3.3	Atmospheric re-entry objects	46
3.3.1	Idealised re-entry path	47
3.3.2	Blunt body entry vehicles	48
3.3.3	Shock layer physics	49
3.3.4	Different types of coatings	49
3.3.5	Thermal soak	50
3.3.6	Cooling methods	50
3.4	Conclusions	50
4	Large Spatial and Temporal Variations of Temperature	51
4.1	Introduction	51
4.2	Practical application of heat to a material	52
4.2.1	Welding	53
4.2.2	Friction welding	53
4.2.3	Radiation heating	54
4.2.4	Laser heating	54
4.3	Structural changes in the matter	55
4.3.1	Microstructural changes	55
4.3.2	Macroscopic changes	56
4.4	Soldering, brazing, welding	57
4.5	Rapid changes in temperature	59
4.5.1	Thermal shock	59
4.5.2	Stress criterion	60
4.5.3	Strain criterion	60
4.5.4	Fraction criterion	61
4.5.5	Material selection	63
4.6	Conclusions	63
5	Low Temperature Environments	64
5.1	Introduction	64
5.2	Engineering applications	66
5.2.1	LNG - liquefied natural gas	66
5.2.2	Cryogenic transport	66
5.3	Thermal bowing	67

5.4	Phase change transition	69
5.5	LNG transport	70
5.6	Sub 4K refrigeration system	73
IV	Extreme Corrosion	76
6	Corrosion Classification	77
6.1	Extreme environments	77
6.2	Corrosion	77
6.2.1	Corrosion is similar to a battery	77
6.2.2	Electrode potentials	78
6.2.3	Salt bridge	78
6.2.4	Electrochemical considerations	79
6.2.5	Galvanic couple	79
6.3	Standard hydrogen reference probe	80
6.3.1	Standard emf series	80
6.4	Classification of corrosion types	81
6.4.1	Group 1: corrosion you can see	81
6.4.2	Group 2: multiple mechanisms	82
6.4.3	Group 3: microscope corrosion viewed by microscope	82
6.5	Corrosion mechanisms in-depth	83
6.5.1	Pitting corrosion	83
6.5.2	Crevice corrosion	84

List of Figures

1.1	Regime diagram to show different pressure environments.	6
1.2	Regime diagram to show different temperature environments.	6
1.3	Regime diagram to show different chemical environments.	7
1.4	Figure to show titration curve of $\text{HNO}_3 + \text{NaOH}$	16
1.5	Figure to show jet experiment of acid and litmus.	16
1.6	Figure to show validation between predicted and experimental results for acid and litmus experiment.	17
1.7	UCL Mechanical Engineering tsunami experiment.	17
1.8	City scale tsunami experiment / simulation.	17
2.1	Pressure pulsation in a piping system	18
2.2	Graph to show complexity against scale.	19
2.3	Graph to show complexity against scale.	20
2.4	Example of plasticity from internal grain process level.	20
2.5	Hydrogen embrittlement - plastic deformation / slip	20
2.6	Rust corrosion from grain boundary level.	21
2.7	Ionic bond (electrovalence)	23
2.8	Bond stability.	23
2.9	Covalent bond (covalence). Note the overlap of electron orbit.	24
2.10	Metallic bond (electron cloud).	24
2.11	Secondary bonds. Note: long range attractive force - dipole-dipole interactions. Overlapping electron orbits - repulsive.	25
2.12	Young's modulus from atomic perspective.	26
2.13	Graph to show yield stress ratio for different materials.	27
2.14	Nucleation of crystals.	28
2.15	Stress-strain curve.	29
2.16	Topological changes in crystal structure.	30
2.17	Speed of molecules.	30
2.18	Van der Waals.	31
3.1	Jet engine.	35
3.2	Brayton (or Joule) cycle.	36
3.3	Typical temperature values for different stages of cycle in bypass gas-turbine engine.	37
3.4	Efficiencies of various gas-turbine engines.	38
3.5	Usage of different alloys within the engine.	39
3.6	Development of alloys.	39
3.7	Oxidation and corrosion resistance of different alloys.	40
3.8	Temperature resistance of TBCs and CMCs over the years.	41
3.9	Thermal barrier coatings (TBCs).	41
3.10	Thermal barrier coating composition.	42
3.11	Microstructure of TBC.	43
3.12	Failure of TBCs.	44

3.13	Schematic illustration of corrosive molten salts infiltration into the YSZ layer of different TBC coatings.	44
3.14	Cooling holes.	45
3.15	Blade with cooling holes.	45
3.16	Classes of cooling technologies for internal blade cooling.	46
3.17	Idealised re-entry path.	47
3.18	Re-entry path for Earth.	48
3.19	Re-entry path for Earth.	48
3.20	Shapes of entry path.	49
4.1	Heating processes.	52
4.2	Localised heating processes.	52
4.3	Friction welding.	53
4.4	Radiation heating.	54
4.5	Laser heating.	54
4.6	Close-up of laser heating.	55
4.7	Close-up of laser heating.	55
4.8	Effect on microstructure from cold rolling and then annealing.	56
4.9	Influence of localised heating on a weld.	57
4.10	Thermoplastic shrinkage.	58
4.11	Weld shrinkage.	58
4.12	Plate heating.	59
4.13	Rapid changes in temperature characterised.	59
4.14	Thermal shock.	60
4.15	Crack lengths against temperature difference.	62
4.16	Crack lengths , temperature difference, strength and fracture stress.	63
5.1	LNG carrier.	64
5.2	Thermal bowing.	67
5.3	Fixed end beam subjected to a uniform thermal gradient.	67
5.4	Laterally restrained beam subjected to a uniform thermal gradient.	68
5.5	Cross-section of pipe.	69
5.6	LNG rollover.	71
5.7	Above ground full containment LNG tank design.	72
5.8	Mechanics of rollover in LNG tanks.	73
5.9	Measurement of LNG density in tank.	73
5.10	Cryogenic transfer line cross-section and sliding support mechanism.	74
5.11	Cryogenic transfer line components.	74
6.1	Corrosion mechanism compared to battery.	77
6.2	Copper reduction and iron oxidation setup in galvanic cell.	78
6.3	Standard hydrogen reference probe.	80
6.4	Classification of corrosion types.	81
6.5	Frequency of different corrosion types.	82
6.6	Pitting corrosion.	84
6.7	Mechanism of crevice corrosion.	85
6.8	Chronology of crevice corrosion.	86

List of Tables

1.1	Table to show themes of assessments in previous years.	2
1.2	Table to show example naturally extreme environments.	5
1.3	List of some professional bodies and their remits.	11
2.1	Cascade of length scales	18
2.2	Micrograph	19
2.3	Categorisation of matter	21
2.4	Key points on material properties	22
2.5	Comparison between molecular and macroscopic measurements.	26
2.6	Configurations of atoms.	28
3.1	Introduction.	35
3.2	Table to show melting points of various metals used in bypass gas-turbine engines.	37
3.3	Table to show combustion temperatures of various fuels.	37
3.4	Internal blade configurations.	46
4.1	Spatial and temporal heat application.	52
4.2	Welding efficiencies.	58
5.1	Freezing temperatures of various gases.	64
5.2	Tables to show material properties of storage tanks.	65
5.3	Table to show materials used to store different low temperature materials.	66
5.4	Sizes and operating conditions of the process lines, thermal shield and vacuum jacket.	75
6.1	Table to show standard emf series. Increasingly inert to increasingly reactive from top to bottom. E.g. With Cu and Fe, Fe corrodes. With Fe and Zn, Zn corrodes.	80

Part I

Introduction

Chapter 1

Road Mapping

1.1 Overview

1.1.1 Context

Objective of year 4 is to bring together all your knowledge from your undergraduate courses and see how it can be applied to real practical problems. Graduate level courses put the emphasis on the student to find and read around the material.

- First, we will explore what we mean by the words “extreme pressure”, “extreme chemistry” and “extreme temperature”
 - … by looking at a number of examples
- Structure of the courses - the role of the professor and your role
- Formalisation of these definitions and classifications
- How does industry deal with these problems

1.1.2 Course assessment

Assessments

1. Coursework (30%) - January
2. Group Project (40%) - end of March
3. Laboratory class (30%) - February

1, 2, 3 will cover the three themes of pressure, temperature and chemistry.

	2018-2019	2019-2020	2020-2021
Exam	Extreme Pressure	Extreme Temperature	CW Extreme Temperature
Group Project	Extreme Temperature	Extreme Pressure	Extreme Pressure
Laboratory	Corrosion (chemistry)	Extreme chemistry (corrosion)	Extreme chemistry (corrosion)

Table 1.1: Table to show themes of assessments in previous years.

1.1.3 Group project - extreme pressure 2019 / 2020

You must choose which problem you are interested in and we will organise you into groups. We will have a fortnightly session to discuss through the term and give you help. We will be running training sessions so that

everyone has a chance to learn a bit about CFD. Need to raise the game from last year - tended to have a late start.

1.1.4 Course structure

4 teaching blocks:

Block 1

Lectures 1-4:

- Setting the scene, framework and terminology
- Investigative tools used to solve hard problems
- Key concepts for molecular scales (chemistry and materials)
- Key concepts for continuum scales (fluid mechanics, solid mechanics and structures)

Block 2

Lectures 5-8: Extreme Pressure.

- Static cases
 1. High pressure: bottom of the ocean, pressure vessels
 2. Low pressure: space, cavitation
- Unsteady cases
 1. High pressure: gas flows, AIV, explosions (nuclear), liquid flows, VIV, TIV
 2. Low pressure: cavitation

Block 3

Lecture 9-12: Extreme Chemistry.

- Slow chemistry
 1. Corrosion
- Fast chemistry
 1. Fuel cells
 2. Combustion
- Application section: manufacturing, design and testing

Block 4

Lecture 13-16: Extreme Temperature.

- Static cases
 1. High temperature: fire, manufacturing, coatings
 2. Low temperature: arctic, LNG transport
- Unsteady cases
 1. Thermal shocks

1.2 Engineering in extreme environments

What do we mean by these words?

The phrase "engineering in extreme environments" relates to the study, design, and implementation of engineering solutions that can withstand and function optimally under extremely harsh or atypical conditions. These conditions are characterized by extreme pressure, extreme temperature, and extreme chemical environments, all of which present unique challenges that can significantly affect the performance and durability of materials and systems.

Specifically:

Extreme Pressure: Engineering in high-pressure environments often involves deep-sea, subterranean or aerospace applications, where the equipment is subjected to extraordinary pressures. This requires an in-depth understanding of material properties and structural integrity under such conditions, including factors like compression, shear stress, and deformation.

Extreme Temperature: This refers to the ability to design and implement engineering solutions in environments with very high or very low temperatures. This might include deep-sea vents, cryogenic systems, combustion engines, or spacecraft re-entry systems. The challenges here primarily relate to thermal stress, material expansion/contraction, and maintaining operational efficiency under these temperature ranges.

Extreme Chemistry: Engineering in extreme chemical environments requires developing materials and systems that can resist highly corrosive or reactive environments, which can include certain industrial processes, chemical plants, or hostile extraterrestrial environments. An understanding of material science, including the resistance of different materials to corrosion, oxidation, and other chemical reactions, is crucial.

This aspect of mechanical engineering seeks to unite the foundational knowledge of mechanical engineering — such as fluid mechanics, thermodynamics, materials science, and structural analysis — with a deeper understanding of how these principles apply under extreme conditions. It typically involves rigorous testing and modelling, the use of advanced materials and coatings, and innovative design principles to ensure safety, efficiency, and longevity of engineering systems under extreme environments.

(ChatGPT-4 2023-07-03)

1.2.1 Engineering

Engineering - a branch of science and technology concerned with the design, building, and use of engines, machines, and structures.

Focussed on the discrete elements or components that sit in an environment. We will refer to a structure throughout the course, through what we really mean is anything (engine, blade, casing, tool, system, person).

1.2.2 Classification of environment

Environment - this is just the surroundings in which an objects sits or is exposed to. There are two types of environments:

1. Natural
2. Man-made

There has to be a physical way to communicate between the environment and the engineering structure which is usually through a surface.

1.2.3 Classification of interactions

- Internal or closed problems e.g. pipe flow, IC engine
- Open problems e.g. fire outside, atmospheric
 - Open problems represent challenges in terms of boundary conditions

Types of interactions

- Interactions are with the interfaces. What processes act on an interface?
- Solid surface - affected by:
 - normal / tangential forces / pressure / viscous forces (high / low pressure)
- Thermal effects (heating / cooling)
- Chemical effects (burning, corrosion)
- Structural changes due to forces / loading
- Fatigue

Interfacial processes

- Temperature
- Stresses - solid and fluid forces
- Chemistry

1.2.4 Classification of extremes

Extreme has quite a few interpretations. Extreme may be something that is an outlier. The definition that we will work around is based on two types:

1. based on magnitude (of a scalar or vector)
2. how it is spread and varies spatially or temporally

We try to tackle these broad questions using regime diagrams (Figures 1.1, 1.2, 1.3).

1.3 Extreme natural environments

Under extreme	Examples
Pressure	Tsunami, earthquakes, storms
Temperature	Fires, arctic
Chemistry	Corrosion, biofouling

Table 1.2: Table to show example naturally extreme environments.

Challenges in extreme natural environments

Main challenges are:

1. Living in these external environments
2. Working in these external environments

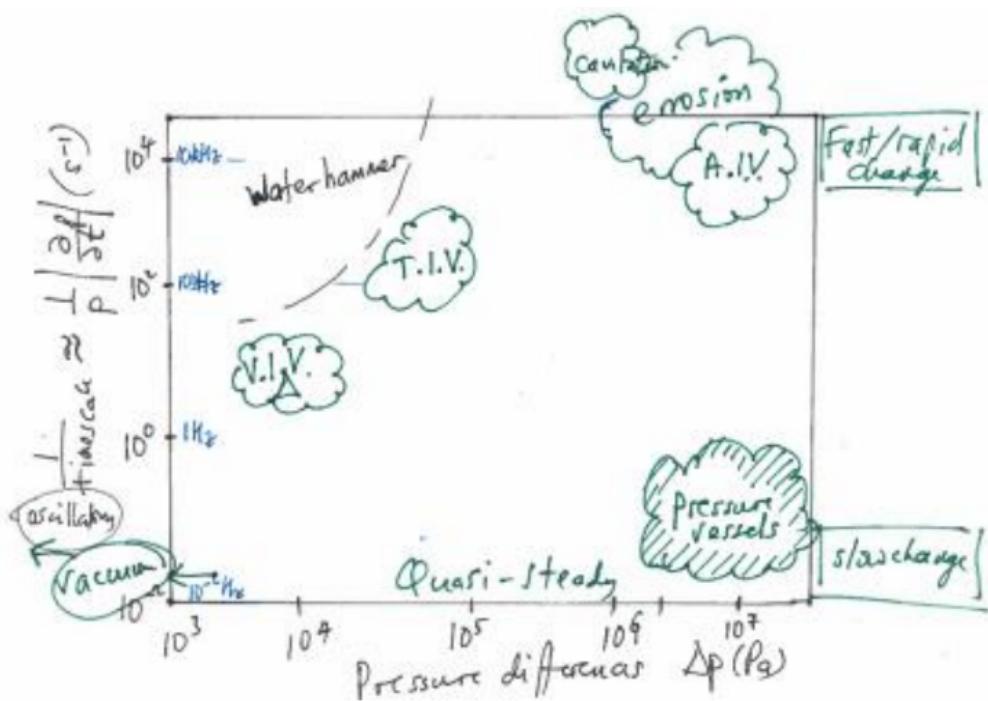


Figure 1.1: Regime diagram to show different pressure environments.

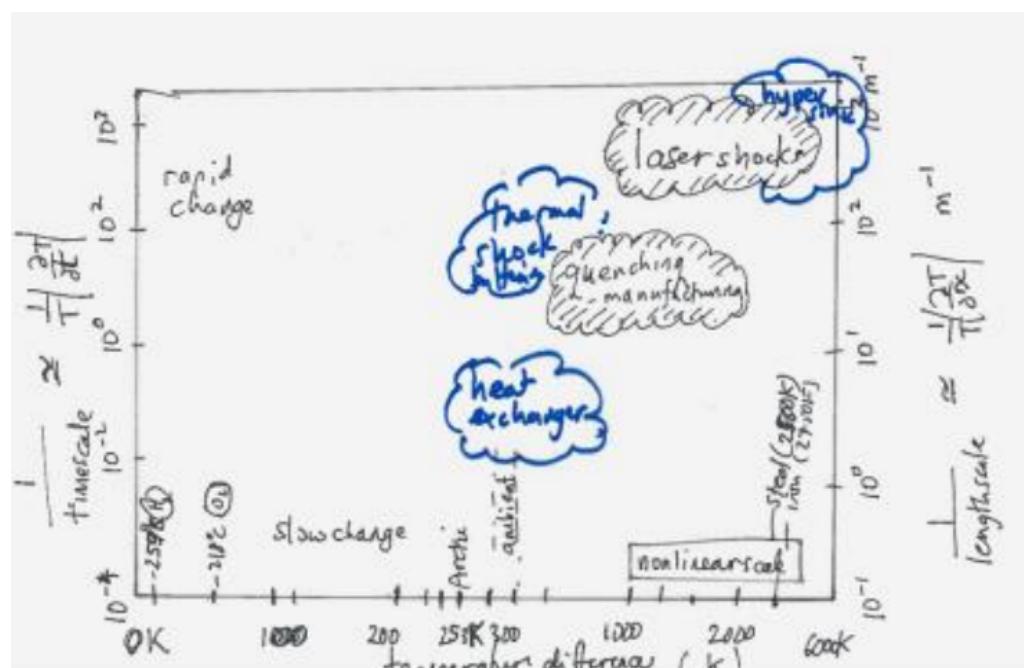


Figure 1.2: Regime diagram to show different temperature environments.

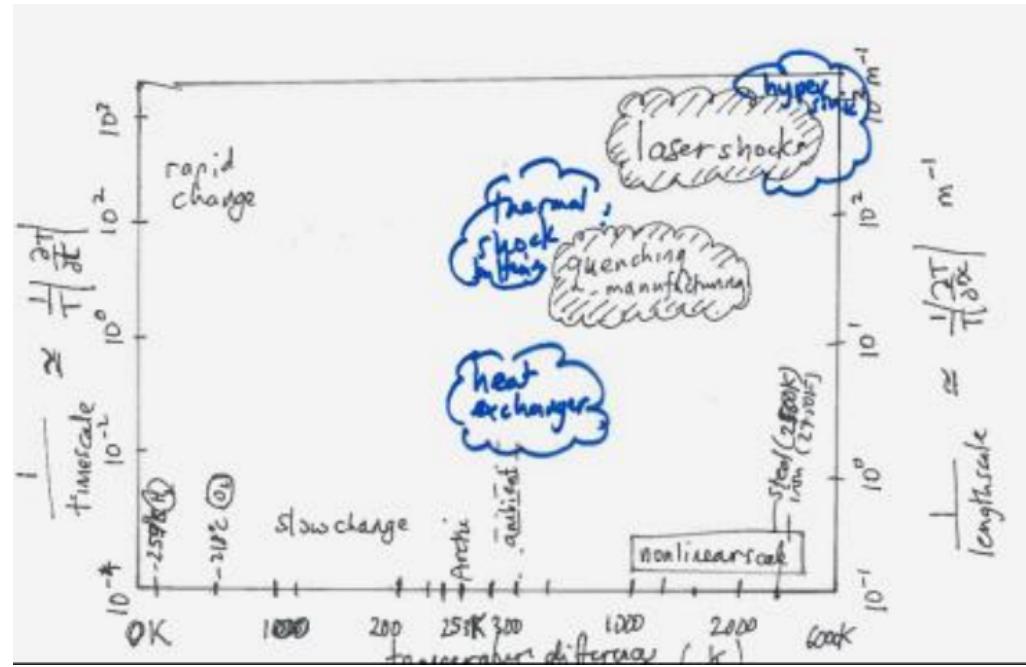


Figure 1.3: Regime diagram to show different chemical environments.

1.3.1 Extreme pressure

Example: deep water (high pressure)

Deep underwater environments, such as those over 2000 meters below sea level, experience extreme hydrostatic pressure. This pressure can pose severe challenges to structures, equipment, and human life. For instance, habitats in deep oceans and lakes must be designed to withstand these pressures. A case in point is the Deepwater Horizon oil drilling rig, which suffered a catastrophic failure in 2010. The disaster was partly attributed to a mismanagement of high-pressure conditions approximately 1000 meters below sea level, highlighting the critical role that pressure management plays in these environments.

(ChatGPT-4 2023-07-03)

Example: hurricanes (high pressure and gustiness)

Hurricanes present a convergence of extreme conditions. The high wind pressure and gustiness can lead to severe infrastructural damage. These natural disasters are formed from a convergence of tropical thunderstorms, leading to an area of low pressure with high winds blowing into the area. Over 2000 deaths have occurred due to hurricanes in the US since 2005. The combination of high pressure, high winds, and water hazards like storm surges and flooding make them a multifaceted challenge.

(ChatGPT-4 2023-07-03)

Example: earthquakes (high solid mechanical pressure)

Earthquakes generate extreme solid mechanical pressures resulting from seismic activity. The vibration of the ground due to surface waves can lead to the failure and collapse of structures, making it a significant challenge for civil and structural engineers to design buildings that can withstand these forces. On average, earthquakes result in around 10,000 fatalities per year, indicating the severity of their impact and the importance of engineering designs that consider seismic activity.

(ChatGPT-4 2023-07-03)

Example: tsunami (high fluid pressure)

Tsunamis represent a high-impact hazard that involves enormous fluid pressures. Generated by underwater seismic activity, landslides, or volcanic eruptions, tsunamis can travel across ocean basins and cause massive destruction when they make landfall. A devastating example of this is the 2004 Indian Ocean tsunami, which resulted in the deaths of over 230,000 people. Designing for tsunami resistance, especially in coastal areas, involves understanding and accounting for these extreme fluid pressures in order to protect structures and lives.

(ChatGPT-4 2023-07-03)

1.3.2 Extreme temperature

Example: fire on land

Areas that consistently experience temperatures in excess of 40 °C, often in combination with dry conditions, are prone to land fires. These high-temperature environments can cause severe challenges for both human and animal habitation, and can also lead to significant environmental damage. Land fires often result in casualties and cause extensive damage to wildlife and forests. They pose unique challenges for engineers and firefighters, who must design and implement fire prevention, containment, and extinguishing strategies. These may include fire-resistant building materials and designs, effective emergency evacuation plans, and the use of technology to predict and manage wildfires.

(ChatGPT-4 2023-07-04)

Example: arctic and antarctic

These regions present extreme cold conditions that provide a unique set of challenges for both natural and human-engineered systems. Life forms such as organisms living in the ice, zooplankton and phytoplankton, fish and marine mammals, birds, land animals, and human societies have to adapt to these frigid environments. In the context of engineering, these conditions necessitate the design of structures and equipment that can withstand the low temperatures, high winds, and icy conditions prevalent in these regions. This might involve the use of special materials that retain their structural integrity at low temperatures, insulation technologies to protect against the cold, and heating systems that can operate efficiently in these conditions. Infrastructure must be designed to accommodate the challenges of ice movement and permafrost, while ensuring the safety and comfort of human inhabitants.

(ChatGPT-4 2023-07-04)

1.3.3 Extreme chemistry

Example: corrosion

Corrosion is a common problem in environments where metal components are exposed to corrosive agents such as salt. Salt, particularly in the form of sea spray or road de-icing materials, can accelerate corrosion processes, leading to the deterioration and failure of metal structures and equipment. To combat this, engineers employ various protective strategies. These may include the use of special corrosion-resistant materials, protective coatings, or the application of an electro-motive force (EMF) to protect against the corrosive effects of salt.

(ChatGPT-4 2023-07-04)

Example: extreme pH (alkaline and acidic)

Certain environments can present extreme pH conditions, either persistently or intermittently, that pose challenges for both natural life and engineered systems:

- *Alkaline Environments: Habitats with a pH above 9, such as some soils, waters, and industrial processes, can be corrosive to certain materials and can disrupt biological processes. One interesting example is Mono Lake in California's Eastern Sierras, characterized by its highly alkaline waters. A unique feature of this environment is a soft, gelatinous microbial mat that forms on the lake's surface, demonstrating the ability of life to adapt to even these extreme conditions. For engineers, dealing with such environments might involve the use of materials that resist alkaline corrosion, or the design of systems that neutralize or manage the alkaline conditions.*
- *Acidic Environments: Habitats with a pH below 5, such as acid mine drainage or some peat bogs, present their own set of challenges. Acidic conditions can be highly corrosive, posing risks to infrastructure and equipment, and can also disrupt biological activity. Engineering solutions for these environments may include the use of acid-resistant materials, coatings, or pH buffering systems to manage the acidic conditions.*

(ChatGPT-4 2023-07-04)

1.4 Industrial accidents

Industrial accidents are usually a combination of failure and stupidity

Example disaster: Enschede

In this tragedy that occurred in Enschede, Netherlands on May 13, 2000, a fire ignited approximately 900 kg of fireworks stored in a central building depot. This led to a chain reaction explosion of 177 tons of fireworks stored in nearby containers. The disaster, resulting in the deaths of 23 people, injuring 940, and causing the destruction of over 1500 buildings, underscored the immense potential hazards of improperly stored explosives. Notably, the depot was inspected and deemed safe by authorities just a week before the disaster, highlighting a critical failure in regulatory oversight and safety protocol enforcement.

(ChatGPT-4 2023-07-04)

Example disaster: Exxon Valdez

This environmental catastrophe occurred on March 24, 1989, when the Exxon Valdez oil tanker hit a reef in Prince William Sound, Alaska, spilling hundreds of thousands of barrels of crude oil into the surrounding environment. The immediate impact included the death of up to 250,000 seabirds, at least 2800 sea otters, and many other marine creatures. Long-term effects were also profound, with significant quantities of oil remaining in the environment decades later and ongoing harm to local ecosystems. This disaster demonstrated the dire consequences of inadequate navigation safety protocols and environmental protection measures in oil transport operations.

(ChatGPT-4 2023-07-04)

Example disaster: Chernobyl

On April 26, 1986, a catastrophic failure occurred at reactor number four of the Chernobyl Nuclear Power Plant in Ukraine. This failure, resulting from a series of steam explosions during an attempted emergency shutdown, released substantial quantities of radioactive material into the

environment, resulting in immediate and long-term fatalities and significant environmental damage. The disaster highlighted the catastrophic risks associated with nuclear power generation, particularly in the context of inadequate safety measures and procedural controls.

(ChatGPT-4 2023-07-04)

Example disaster: Savar building collapse

This structural failure, which occurred in Savar, Bangladesh on April 24, 2013, is the deadliest building collapse in history. Despite visible cracks and official warnings, garment factories in the building continued operations, leading to the death of approximately 1129 people and injuries to over 2500. This disaster underscored the severe potential consequences of ignoring structural safety warnings, as well as the need for more effective enforcement of building safety regulations.

(ChatGPT-4 2023-07-04)

Example disaster: The Banqiao Dam Collapse, China

This dam collapse in China in August 1975 led to the deaths of approximately 171,000 people when it released about 15 billion cubic meters of water. The collapse, due to both natural (exceptional rainfall) and human (poor construction and engineering) factors, demonstrated the potential scale of disasters related to dam failure and highlighted the critical importance of robust design and construction practices for such significant infrastructure.

(ChatGPT-4 2023-07-04)

Example disaster: Bhopal Gas Tragedy, India

This industrial disaster occurred on the night of December 2-3, 1984, when over 500,000 people were exposed to methyl isocyanate and other chemicals leaking from a pesticide plant in Bhopal, India. The event resulted in thousands of deaths and serious injuries, and was a result of negligent safety practices by the plant operator and inadequate enforcement by government authorities. The tragedy serves as a stark reminder of the potentially disastrous consequences of lax industrial safety standards and oversight.

(ChatGPT-4 2023-07-04)

1.5 Codes of practice

- Most disasters occur because people fail to follow codes of practice
- Everything that is constructed and designed must be done within the confines of best practice
- Insurance is not given unless best practice is followed
- Various bodies are responsible for regulating engineering design in normal and extreme environments

1.5.1 Professional bodies

Society	Remit
ASTM	American Society for Testing Materials
ASME	American Society for Mechanical Engineers
ASCE	American Society for Civil Engineers
ISO	International Organisation for Standards
BSEN	British Standards Institute (BSI)
Lloyds Registry	Classification Society
MARPOL	Offshore Pollution IMO
DNV-GL	Classification Society

Table 1.3: List of some professional bodies and their remits.

1.5.2 Example of codes of practice

ASTM

American Society for Testing and Materials is an international standards organisation that develops and publishes voluntary consensus technical standards for a wide range of material, products, systems and services.

This specification covers high strength, cold drawn or cold rolled steel wire with rectangular cross-section and round mill edge. Intended for use in pre-stressed vessel and press frame windings. The steel shall be manufactured by basic oxygen, electric furnace, or vacuum induction processes and produced as ingot cast or continuous cast. Materials shall be tested for contents of carbon, manganese phosphorus, sulphur and silicon. A tension test shall also be performed to evaluate mechanical properties conformance. Guidelines for workmanship, finish and appearance are stated, as well as the inspection, certification of reports, packaging, marking, and loading for shipment.

(ASTM 9505-04 (2017) Standard Specification for Steel Wire, Pressure Vessel Winding Active Standard (latest version))

ASME

There are a number of student resources about codes of practice. It is worth looking at these: <https://www.asme.org/codes-standards/about-standards>.

Code and standards are an essential part of design and repair engineering requirements. Engineers that understand code and regulation requirements are a must in my industry and will increasingly become more widespread in other industries, as regulatory issues change and become more stringent. All industries are becoming more aware of the benefits of adherence to Code and industry standards in ensuring reliability of systems, components and structures.

(ASME Vision 2030 Survey Feedback)

ASCE

Our interest is on ASCE/SEI 7-16, Minimum Design Loads and Associated Criteria for Buildings and Other Structures. See: <https://asce7tsunami.online/>

ASCE/SEI 7-16, or "Minimum Design Loads and Associated Criteria for Buildings and Other Structures," is a particularly relevant standard developed by ASCE. This standard provides the complete set of load provisions, which includes provisions for dead, live, soil, flood, wind, snow, rain, ice, and earthquake loads, as well as their combinations that are suitable for inclusion in building codes and other documents. ASCE/SEI 7-16 applies to the design and construction of general structural systems and elements for buildings and other structures.

One particular update in the 2016 revision of ASCE/SEI 7 was the inclusion of tsunami loads and effects. The changes were a response to the recognition of the risk posed by tsunamis to coastal structures, especially in areas such as the Pacific Northwest. These changes involved substantial work in understanding the complex forces exerted by tsunami waves and the resulting implications for structural design.

(ChatGPT-4 2023-07-04)

1.5.3 Contributing to codes of practice

Codes of practice come out of the research activity from universities, committee memberships of various organisations.

1.5.4 Example of impact

The Marine Group in UCL MechEng have been working on the three main areas of environmental pollution of the seas:

1. ballast water discharge
2. acidic discharge
3. sound generation

Guidelines related to MARPOL Annex VI and the NOX Technical Code in accordance with the Action Plan endorsed by the MEPC 64.

Application of calculation-based methodology for verification of the wash water discharge criteria for pH in section 10.1.2.1(ii) of the 2009 Guidelines for Exhaust Gas Cleaning Systems, Professor I. Eames & Professor A. Greig

(Code MEPC 64 (MARPOL Annex VI))

Example chemistry: wash water discharge

Scrubbers are used to remove particulate and acidic gases from engine exhaust, they generate a buoyant and acidic discharge.

- $\text{pH} = -\log_{10} \text{H}^+$
- pH of discharge = 3-4
- pH of sea = 7.4-8.3

Code requires pH to recover to 6.0 about 4 m from the exit.

Example chemistry: physical process of jet

To offer guidance we need to be able to say whether discharge criteria are met. This requires a predictive environment that is validated against test and simple enough to be understood. Complexity comes from the turbulent part:

- Jet
- Plume
- Gravity current.

What defines a jet / plume?

A *jet* is a stream of fluid that is forced into a surrounding medium, usually air or water, typically from some kind of a nozzle. On the other hand, a *plume* is a column of one fluid moving through another, and is formed by the diffusion of the source fluid into the surrounding medium.

- Q is the volume flux, which measures the quantity of volume flowing through a given cross-sectional area per unit time. In the equation

$$Q = \pi b^2 w \quad (1.1)$$

b is the radius of the jet or plume and w is the velocity of the fluid.

- M is the momentum flux, which measures the rate of momentum flow across a given cross-sectional area. In the equation

$$M = \pi b^2 w^2 \quad (1.2)$$

b is again the radius and w is the velocity.

- B is the buoyancy flux, which describes the flow rate of buoyancy across a given cross-sectional area. In the equation

$$B = -\pi b^2 \frac{w \Delta \rho}{\rho_0} \quad (1.3)$$

b is the radius, w is the velocity, $\Delta \rho$ is the difference in density between the two fluids, and ρ_0 is the reference (usually ambient) density.

The equations for the jet radius R and the dimensionless volume flux \bar{Q} both involve R_0 (the initial radius) α (a constant of proportionality), and Z (the vertical height). In the context of these equations, αZ represents the spreading of the jet or plume with height.

For the jet:

- The radius increases linearly with height

$$R = R_0 + 2\alpha Z \quad (1.4)$$

- The dimensionless volume flux, which is the volume flux normalized by the initial volume flux, also increases linearly with height

$$\bar{Q} = \left(1 + \frac{2\alpha Z}{b_0} \right) \quad (1.5)$$

For the plume:

- The radius increases more rapidly with height

$$R = R_0 + \frac{6}{5} \alpha Z \quad (1.6)$$

reflecting the additional spreading due to buoyancy forces.

- The dimensionless volume flux for the plume also increases more rapidly with height

$$\bar{Q} = \left(1 + \frac{6\alpha Z}{5b_0} \right)^{\frac{5}{3}} \quad (1.7)$$

again due to the effects of buoyancy.

Example: chemistry of strong acids and bases

Conservation of charge:

$$[\text{H}^+] + [\text{M}^+] = [\text{OH}^-] + [\text{A}^-] \quad (1.8)$$

Conservation of mass:

$$C_b^0 D = ([\text{MOH}] + [\text{M}^+]) (1 + D) \quad (1.9)$$

$$C_a^0 = [\text{A}^-] (1 + D) \quad (1.10)$$

Note D is the dilution of the acid. Dissociation of water and base ($K_b = 1$, strong base):

$$K_w = [\text{OH}^-][\text{H}^+] \quad (1.11)$$

$$K_b = \frac{[\text{M}^+][\text{OH}^-]}{[\text{MOH}]} \quad (1.12)$$

Note $K_w = 1 \times 10^{-14} \text{ mol}^2/\text{dm}^{-6}$ is temperature dependent giving a point of neutralisation which varies from 7.47 at 0 °C to 6.92 at 30 °C. This leads to:

$$\frac{1}{D} = \frac{\left(\frac{C_b^0 K_b}{K_w} + [\text{H}^+] - \frac{K_w}{[\text{H}^+]} \right)}{C_a^0 - [\text{H}^+] + \frac{K_w}{[\text{H}^+]}} \quad (1.13)$$

Explanation of above section:

Strong acids and bases fully dissociate in solution, meaning they split into their respective ions completely. Here are the given equations explained:

The first equation is a conservation of charge equation. The sum of the charges of all species on both sides of the equation should be equal. This equation states that the sum of the hydrogen ion concentration ($[\text{H}^+]$) and metal ion concentration ($[\text{M}^+]$) equals the sum of the hydroxide ion concentration ($[\text{OH}^-]$) and the anion concentration ($[\text{A}^-]$).

The next two equations deal with conservation of mass. In the first, $C_b^0 D$ represents the initial molar concentration of the base multiplied by the dilution factor. This equals the sum of the concentrations of metal hydroxide ($[\text{MOH}]$) and the metal ion ($[\text{M}^+]$), each multiplied by the term $(1+D)$, where D represents dilution of the acid. The second equation states that the initial molar concentration of the acid C_a^0 equals the anion concentration ($[\text{A}^-]$) times the term $(1+D)$.

The dissociation of water and base is represented by two equilibrium expressions. The first, $K_w = [\text{OH}^-][\text{H}^+]$, is the equilibrium expression for the self-ionization of water, where K_w is the ion-product of water. The second equation, $K_b = \frac{[\text{M}^+][\text{OH}^-]}{[\text{MOH}]}$, is the equilibrium expression for the base, where K_b is the base dissociation constant.

$K_w = 1 \times 10^{-14} \text{ mol}^2/\text{dm}^{-6}$ are the units for the ion product of water at 25°C. However, it's worth noting that it is temperature-dependent. For instance, the pH of neutral water isn't always 7, but varies from 7.47 at 0 °C to 6.92 at 30 °C. This is due to changes in K_w with temperature.

The final equation provided is a more complex expression that includes both terms for the conservation of charge and conservation of mass, as well as equilibrium constants. This equation essentially allows you to calculate the dilution factor, given the known initial concentrations of the acid and base, and the equilibrium constants.

(ChatGPT-4 2023-07-04)

Fluid mechanical model

This section presents a fluid mechanical model that describes the reaction of an acid and a base in a flowing system. The model is based on several key principles of fluid dynamics, including conservation of mass (acid and base), conservation of volume flux, conservation of momentum flux, and conservation of buoyancy flux.

The first equation represents the conservation of acid in the flow:

$$\frac{d}{dz} \left(\pi b^2 w [A^-] \right) = 0 \quad (1.14)$$

This equation states that the rate of change of the acid concentration ($[A^-]$) with respect to position (z) is zero, indicating that the acid concentration in the fluid is constant along the flow.

The second equation represents the conservation of base in the flow:

$$\frac{d}{dz} \left(\pi b^2 w ([MOH] + [M^+]) \right) = 2\alpha \pi b w C_b^0 \quad (1.15)$$

This equation states that the rate of change of the sum of the concentrations of metal hydroxide ($[MOH]$) and metal ion ($[M^+]$) with respect to position (z) is equal to twice the product of the initial base concentration, the radius of the flow tube, and a proportionality constant α .

The third equation represents conservation of volume flux in the flow:

$$\frac{d}{dz} \left(\pi b^2 w \right) = 2\alpha \pi b w \quad (1.16)$$

This equation shows that the rate of change of volume flux with respect to position (z) is equal to twice the product of the radius of the flow tube, the velocity of the fluid, and a proportionality constant α .

The fourth equation represents the conservation of momentum flux in the flow:

$$\frac{d}{dz} \left(\pi b^2 w^2 \right) = -\frac{\Delta \rho g \pi b^2}{\rho_0} \quad (1.17)$$

This equation states that the rate of change of momentum flux with respect to position (z) is equal to the negative of the gravitational acceleration times the change in density times the cross-sectional area of the flow tube divided by the initial fluid density.

The fifth equation represents the conservation of buoyancy flux in the flow:

$$\frac{d}{dz} \frac{(\pi b^2 w \Delta \rho)}{\rho_0} = 0 \quad (1.18)$$

This equation indicates that the rate of change of the buoyancy flux with respect to position (z) is zero, implying that the buoyancy flux is conserved in the fluid flow.

The final three equations can be derived from the above equations and they capture the changes in the volume flux (Q), momentum flux (M), and the acid concentration with respect to position (z) in the fluid flow:


$$\frac{dQ}{dz} = 2\alpha \pi^{\frac{1}{2}} M^{\frac{1}{2}} \quad (1.19)$$

$$\frac{dM}{dz} = \frac{BM}{Q} \quad (1.20)$$

$$\frac{[A^-]}{C_a^0} = \frac{Q_0}{Q} \quad (1.21)$$

Titration curves

Figure 1.4: the dashed and solid lines show theoretical results while the points and crosses are experimental. Source of disagreement is most likely contamination (very difficult problem).

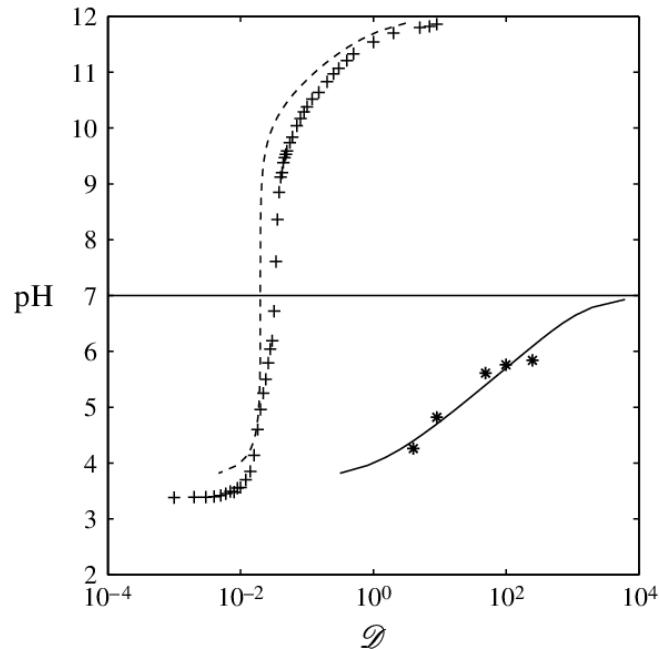Figure 1.4: Figure to show titration curve of $\text{HNO}_3 + \text{NaOH}$.

Example chemistry: jet experiment

Figures 1.5, 1.6 show an example jet experiment.

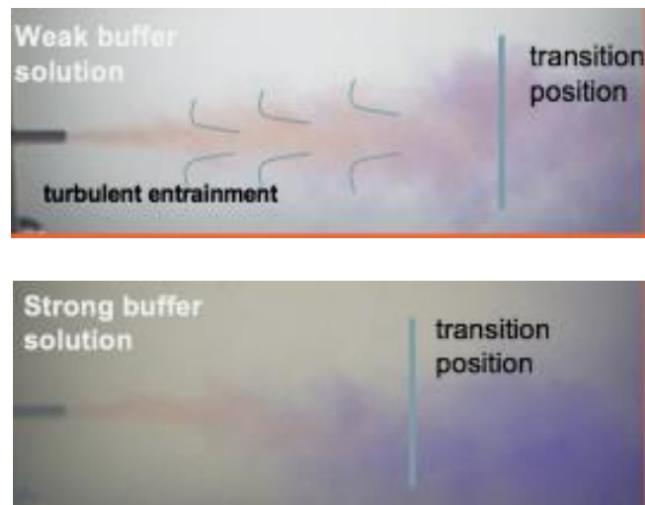


Figure 1.5: Figure to show jet experiment of acid and litmus.

Example of tsunami loading on buildings: ASCE6

- Computational and experimental study
- Measurements of surface elevations and forces on buildings
- Simulation and experiments at UCL's mechanical engineering department

Figures 1.7, 1.8 show some physical experiments.

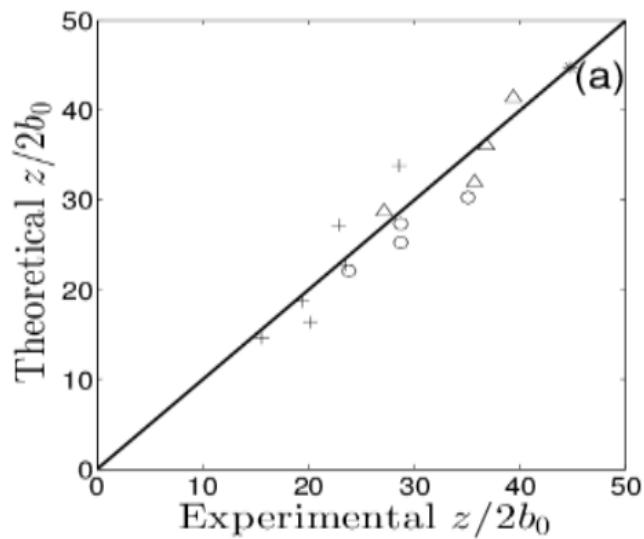


Figure 1.6: Figure to show validation between predicted and experimental results for acid and litmus experiment.



Figure 1.7: UCL Mechanical Engineering tsunami experiment.

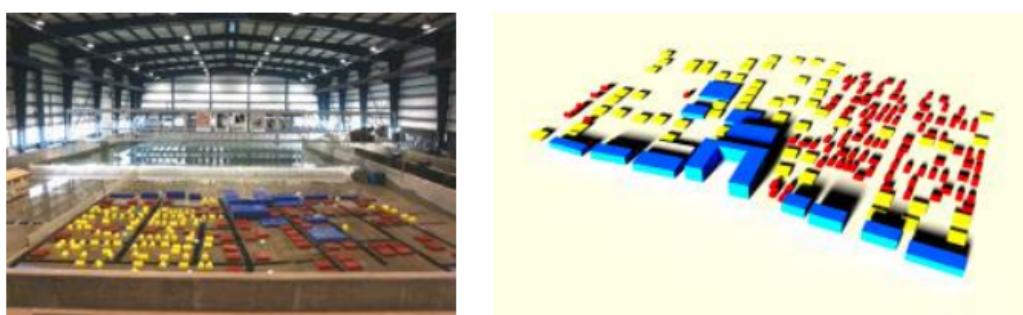


Figure 1.8: City scale tsunami experiment / simulation.

Chapter 2

Materials, Molecules and Chemistry

2.1 Introduction

- Macroscopic response of material depends on their microscopic structure
- We need to be able to understand physics from molecular to continuum scales

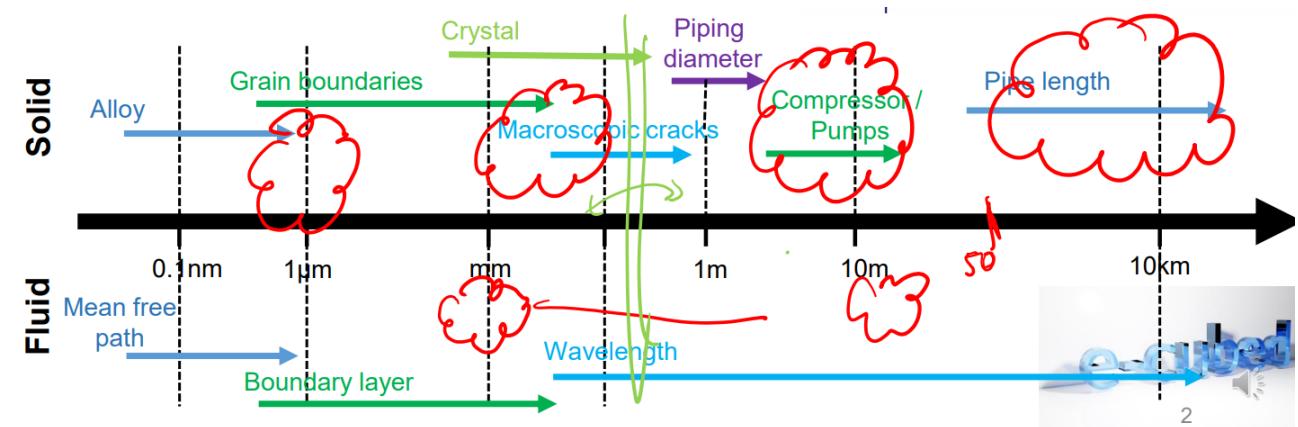


Figure 2.1: Pressure pulsation in a piping system

Cascade of length scales

2.1.1 Complexity of the problem at different length scales

Complexity of representation changes with the scale.

Molecular	Continuum	Structural
Material is made on this level $< 10 \mu\text{m}$	Cracks operate on this level $10 \mu\text{m} < x < 10 \text{ m}$	Structures considered at this level $> 10 \text{ m}$
Short range interactions	Long range interactions	Whole scale interactions
Failure / corrosion / chemistry	Tune model - variables change continuously / smoothly (can account for discontinuous behaviour, e.g. crack)	Long distance interaction - vibration (waves transporting energy)

Table 2.1: Cascade of length scales

Domain	Process
Bulk	Plasticity
Internal boundary	Hydrogen embrittlement - plastic deformation / slip
External boundary	Corrosion - chemistry

Table 2.2: Micrograph

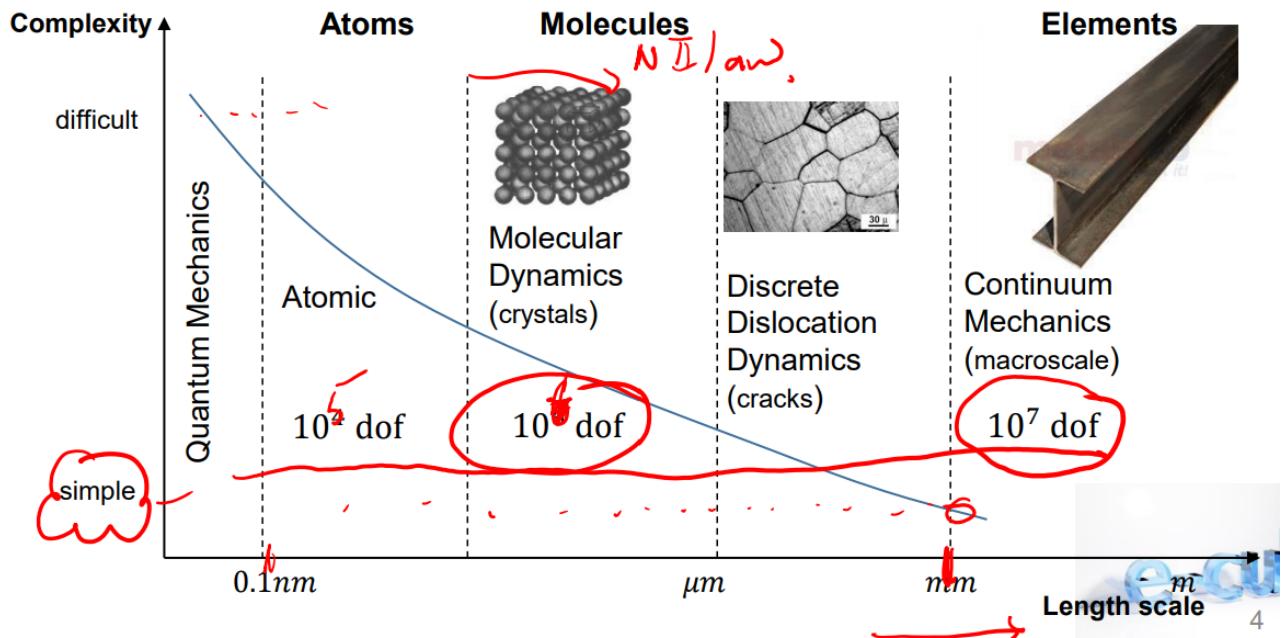


Figure 2.2: Graph to show complexity against scale.

2.1.2 Why focus on small scales?

- Small scale defects lead to crack initiation and propagation under external loading
- Failure can be corrected by changing material properties, for example, toughness
- Source of defects: complex chemical process (chemistry / corrosion) leads to corrosion at the surface
- Macroscale process is linked to microscale action
- Hypersonic flow - ionisation is non-continuum effect
- Analogy between defective liquids / solids

Note: turbulence is controlled by small vortices.

Micrograph

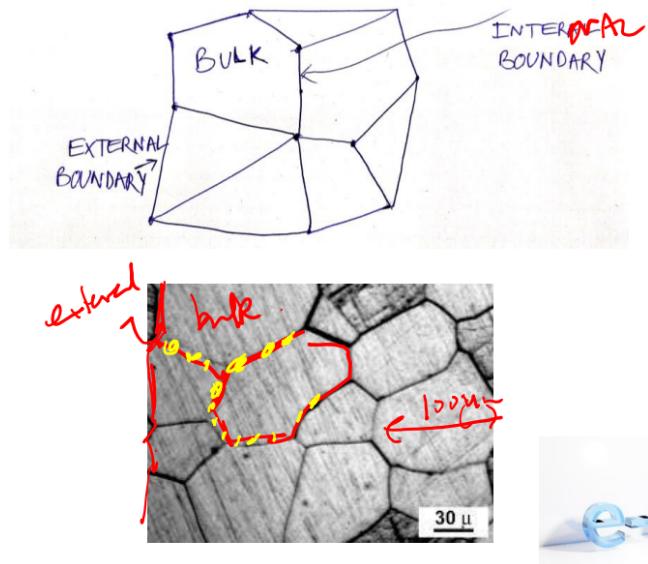


Figure 2.3: Graph to show complexity against scale.

Internal grain processes

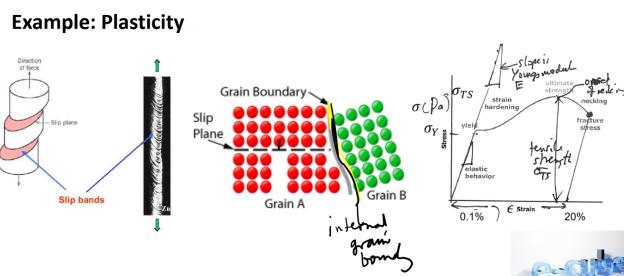


Figure 2.4: Example of plasticity from internal grain process level.

Internal boundary (hydrogen embrittlement - plastic deformation / slip)

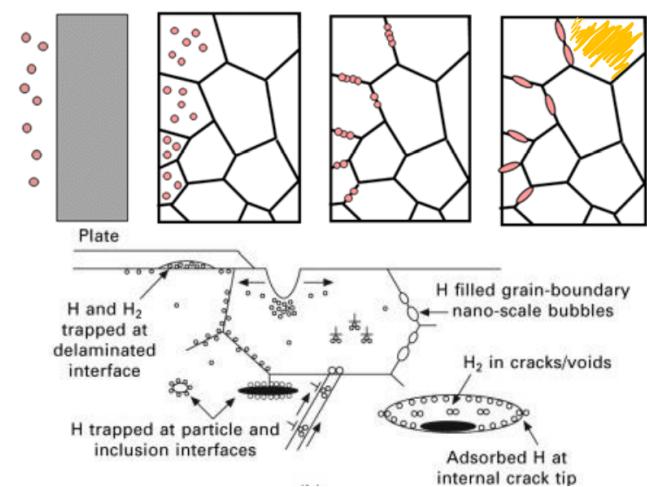


Figure 2.5: Hydrogen embrittlement - plastic deformation / slip

Matter	Modelling approach
Solid	Atomistic
Gas	Kinetic theory
Liquid	Molecular
	Continuum
	Continuum
	Continuum

Table 2.3: Categorisation of matter

External boundary (corrosion)

Corrosion happens over a long time and a range of scales. We need to understand how ions move around and interact with materials.

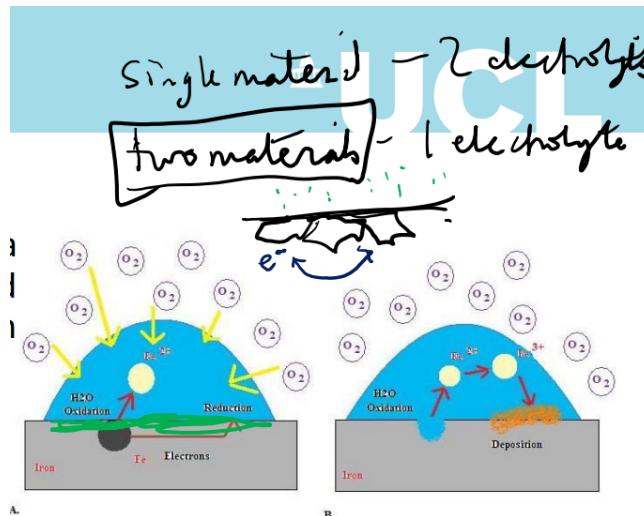
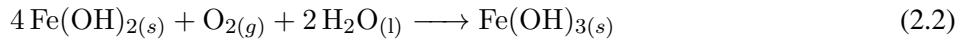
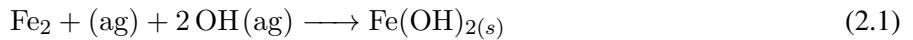


Figure 2.6: Rust corrosion from grain boundary level.

2.2 Categorisation of matter

Switch between states are due to p , V and T and is represented by phase diagram. States of matter have been part of most religious and scientific texts for the last two thousand years, with water (aqua), fire (ignis), air (aer) and earth (terra) with the fifth being the void.

2.3 Atomistic view of matter

Typical length scale:

- Diameter of atom is $0.1 \text{ nm} = 1 \times 10^{-10} \text{ m} = 1 \text{ angstrom}$
- Nucleus diameter is $1 \times 10^{-15} \text{ m}$ (hydrogen) to $15 \times 10^{-15} \text{ m}$ (uranium-238)

2.3.1 Bulk characteristic of materials

The aim is to understand the relationship between the macrostructure and the microstructure. Key measures are:

- Young's modulus $E = \left. \frac{d\sigma}{d\varepsilon} \right|_{\varepsilon \rightarrow 0}$

Properties		Definition
Elastic modulus	E (Pa)	Measure of material resistance to deformation.
Yield stress	σ_Y (Pa)	Measure of stress at which the elastic behaviour disappears and plastic behaviour initiates.
Hardness	HBW	Measure of material resistance to indentation
Creep		Time-dependant deformation at high temperature and constant stress.
Toughness	K (J m^{-3})	Resistance to crack propagation.
Ductility	ϵ_T	Material's ability to undergo plastic deformation.

Table 2.4: Key points on material properties

- Tensile stress: σ_{TS}
- Yields stress: σ_Y
- Ductility: ϵ_T

It is important to understand the following: How are they related to the microstructure?

2.3.2 Newtonian model of matter

Useful for biological, physical problems, solids, liquids and gases. This is based on a description of matter as a collection of point particles, an approach that is useful for gases, liquid and solids. The dynamics of the i-th molecule is:

$$\underline{F}_i = \sum_{j,j} \neq \nabla U(x_i, x_j) \quad (2.3)$$

Located at point x_i whose dynamics are:

$$m_i \frac{d\underline{v}_i}{dt} = \underline{F}_i \quad (2.4)$$

$$\underline{v}_i = \frac{d\underline{x}_i}{dt} \quad (2.5)$$

The formulation requires the form of the interaction stated using the Lennard-Jones 6-12 potential:

$$U = 4\epsilon \left(\left(\frac{\sigma}{r} \right)^{12} - \left(\frac{\sigma}{r} \right)^6 \right) + \dots \quad (2.6)$$

The difficultly is that neighbourhood lists are kept and only sum over local interaction of molecules.

- Not hard collision
- Time stepping fixed
- Potentials can be empirical or chosen to now slow down calculations

$$U = U_{stretch} + U_{bend} + U_{torsion} + U_{vanderWaals} + U_{electro} + U_{cross} \quad (2.7)$$

Research gaps:

- Link between continuum and molecular
- Quantum - mechanical models

2.3.3 Vibrational modes and energy

Mechanical representation of matter. Molecules interact with their neighbours and fields. Interaction may be quite far, particularly when charges are important. We are familiar with how degrees of freedom influence properties of a gas, especially through the isentropic index. Energy is stored in various modes of vibration e.g. gas. This is called classical molecular dynamics.

2.3.4 Molecular description of material properties

Primary bonds

Ionic and covalent bonds are extremes with most (electron distribution) bonds lying between (polar covalent)

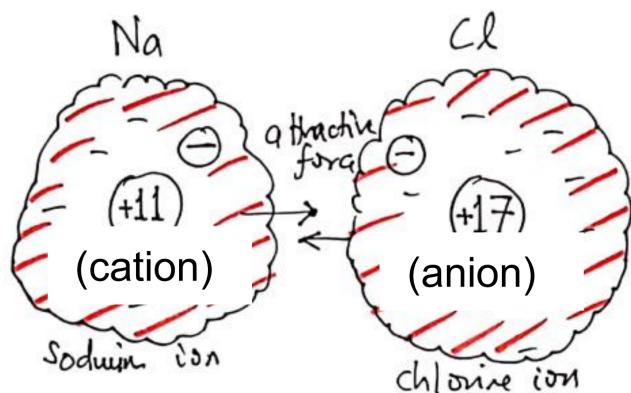


Figure 2.7: Ionic bond (electrovalence)

$$F = \frac{q_1 q_2}{4\pi\epsilon_0 r^2} \quad (2.8)$$

$$U = U_i - \frac{q^2}{4\pi\epsilon_0 r} + \frac{B}{r^n} \quad (2.9)$$

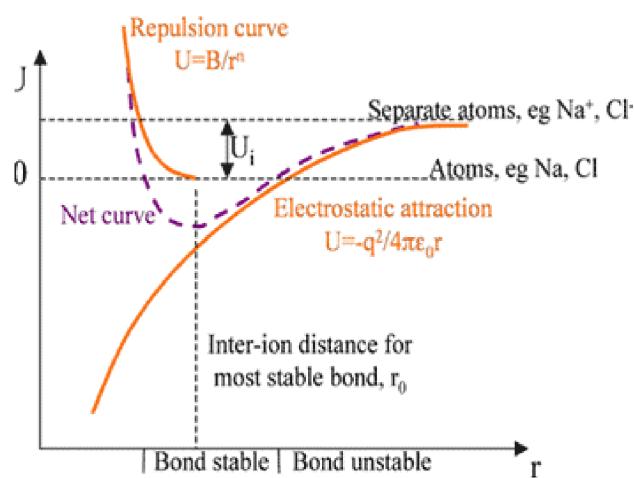


Figure 2.8: Bond stability.

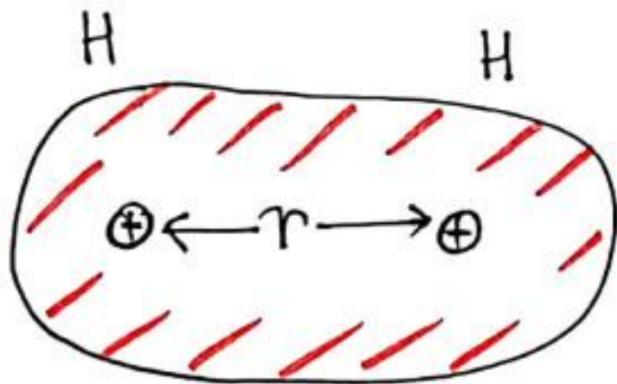


Figure 2.9: Covalent bond (covalence). Note the overlap of electron orbit.

$$U = -\frac{A}{r^m} + \frac{B}{r^n}, \quad m < n \quad (2.10)$$

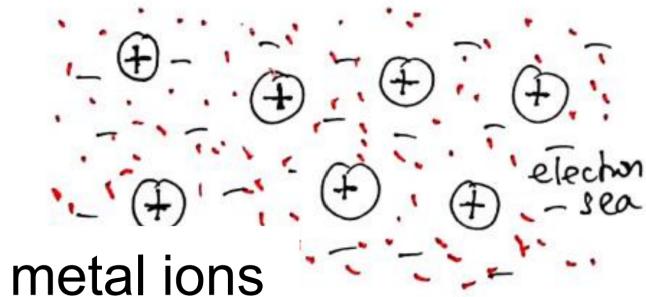


Figure 2.10: Metallic bond (electron cloud).

$$e = 1.6 \times 10^{-19} \text{ C} \quad (2.11)$$

$$\epsilon_0 = 8.8 \times 10^{-12} \text{ Nm}^2\text{C}^{-2} \quad (2.12)$$

$$1 \text{ eV} = 1.6 \times 10^{-19} \text{ J} \quad (2.13)$$

Secondary bonds

The secondary bonds are important - without them many gases would not condense. The relative displacement of the positive and negative charge gives rise to a dipolar force. This gives rise to an attractive force. Most usual form is the Lennard Jones 6-12 potential.

$$U = -\frac{A}{r^6} + \frac{B}{r^{12}} \quad (2.14)$$

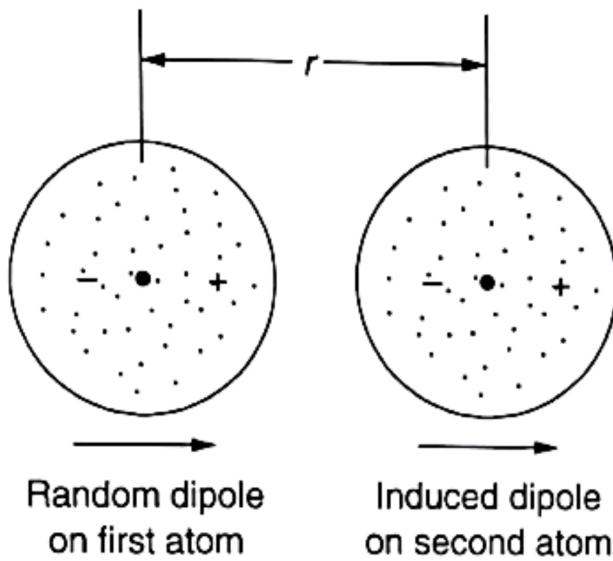


Figure 2.11: Secondary bonds. Note: long range attractive force - dipole-dipole interactions. Overlapping electron orbits - repulsive.

Physical basis of Young's Modulus

Classical mechanics:

$$m \frac{dv}{dt} = \frac{dU}{dr} \quad (2.15)$$

where U is the potential energy. At equilibrium:

$$\frac{dU}{dr} = 0 \quad (2.16)$$

so that close to this point, the energy potential can be expanded to give:

$$m \frac{d^2 r}{dt^2} = \left(\frac{d^2 U}{dr^2} \right) (r - r_0) \quad (2.17)$$

Around equilibrium point:

$$F = S_0 (r - r_0) \quad (2.18)$$

$$S_0 = -\frac{d^2 U}{dr^2} \quad (2.19)$$

The stress is:

$$\sigma = NS_0 (r - r_0) = \frac{S_0 (r - r_0)}{r_0^2} \quad (2.20)$$

The Young's modulus is:

$$E = \frac{\sigma}{\epsilon} = \frac{S_0}{r_0} \quad (2.21)$$

Estimate:

$$S_0 = \frac{\alpha q^2}{4\pi\epsilon_0 r^2} \quad (2.22)$$

$$E = \frac{\sigma}{\epsilon} = -\frac{\frac{d^2 U}{dr^2}}{r_0} = \frac{\delta e^2}{4\pi\epsilon_0 r_0^4} \quad (2.23)$$

Atom spacing:

$$\bar{r}_0 \approx 8.54 \quad (2.24)$$

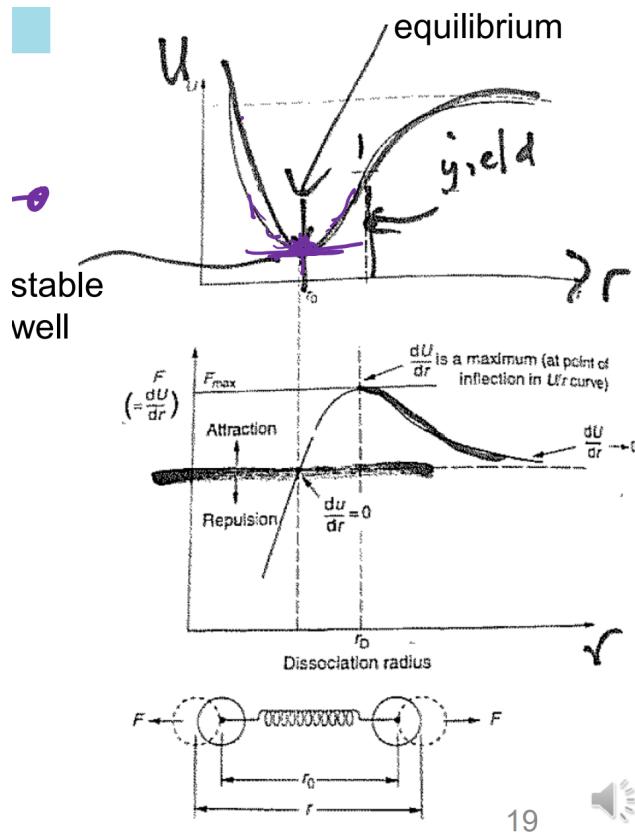


Figure 2.12: Young's modulus from atomic perspective.

Comparison between molecular and macroscopic measurements

Bond type	S_0 / Nm^{-1}	Young's modulus estimate E / GPa	Measurement
Covalent	50 - 180	200 - 1000	1000 (diamond)
Metallic	15 - 75	60 - 300	200 (nickel)
Ionic	8 - 24	32 - 96	15 - 91 (alkali halides)
H-Bond	2 - 3	8 - 12	9.1 (ice)
van der Waals	0.5 - 1	2 - 4	0.01 - 2 (rubber to nylon)

Table 2.5: Comparison between molecular and macroscopic measurements.

Estimation of yield stress

Returning to the molecular model since:

$$U = \epsilon \left(-\frac{A}{r^6} + \frac{B}{r^{12}} \right) \quad (2.25)$$

$$U'' = \epsilon \left(-\frac{6 \times 7A}{r^8} + \frac{12 \times 13B}{r^{14}} \right) \quad (2.26)$$

Then, maximum stress is:

$$\sigma_Y \approx \frac{E}{8} \quad (2.27)$$

Therefore:

$$\frac{\sigma_Y}{E} \approx \frac{1}{8} \quad (2.28)$$

This estimated ratio is good for ceramics, but not good for metals. So what is missing from a molecular description?

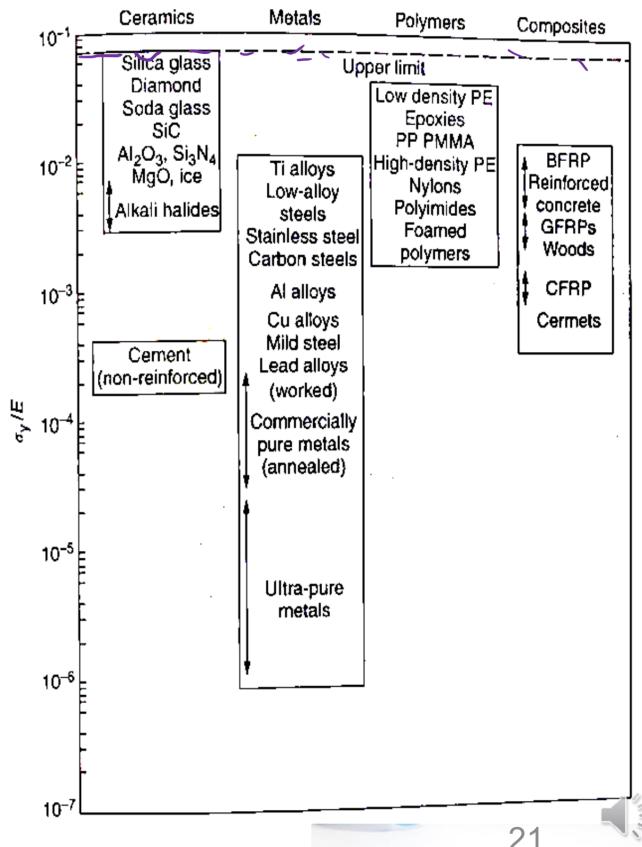


Figure 2.13: Graph to show yield stress ratio for different materials.

2.3.5 Material classification

- Metals
 - Ferrous metals and alloys
 - Non ferrous metals and alloys
 - (focus on here)
- Polymeric (non metallic, non crystalline)
 - Thermoplastic plastics
 - Thermoset plastics
 - Elastomers
- Ceramics

- Glass
- Diamond
- Glass ceramics
- Composites (everything else)
 - Metal-matrix composites
 - Sandwich structures
 - Concrete

Three common configurations

Type	Name	Description	Example
BCC	Body centred cube - 2 atoms	Harder and less malleable Packing factor 0.68	Lithium, Sodium, Potassium
FCC	Face centred cube	malleable, softer 0.74	Chromium, Barium, Alpha-iron Copper, Gold, Aluminium Iridium, Lead, Nickel, etc.
HCP	Hexagonal close packed	6 atoms Packing ratio 0.74	Cadmium, Magnesium, Titanium Zinc, Zirconium

Table 2.6: Configurations of atoms.

Solidification and crystal growth

Under normal circumstances, crystal growth starts at many nucleation points. Solidification leads to crystals growing and stop growing when they meet another crystal. A crystal is usually called a grain. The boundary between grains is the grain boundary where structure is disordered. This is controlled using nucleation points and directional solidification and liquid freezing-dendritic growth and shrinkage occurs during cooling.

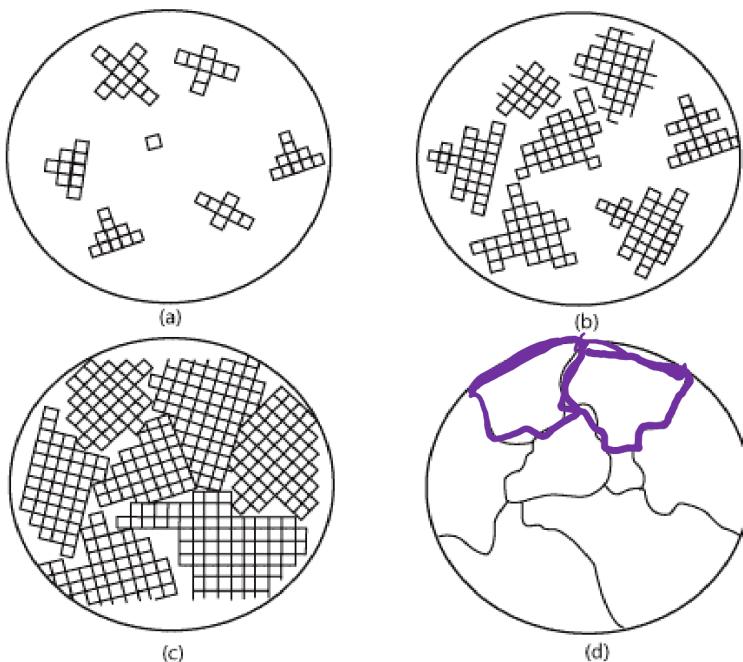


Figure 2.14: Nucleation of crystals.

Crystal defects

Three types of defects:

1. Point defects: which are places where an atom is missing or irregularly placed in the lattice structure.
Point defects include lattice vacancies, self interstitial atoms, substitution impurity atoms and interstitial impurity atoms
2. Linear defects: which are groups of atoms in irregular positions. Linear defects are commonly called dislocations
3. Planar defects: which are interfaces between homogeneous regions of the material. Planar defects include grain boundaries, stacking faults and external surfaces

Atomistic view of plastic deformation

Elastic deformation - stress is small, the metal can recover to initial state when the stress is removed. This involves stretching the bonds but atoms do not move over one another.

Plastic deformation - stress is large, plastic deformation involves the breaking of a limited number of atomic bonds by the movement of dislocations. Since the energy required to move is lowest along the densest planes of atoms, dislocations have a preferred direction of travel within a grain of the material. This results in slip that occurs along parallel planes within the grain. These parallel slip planes group together to form slip bands. A slip band appears as a single line under the microscope, but it is in fact made up of closely spaced parallel slip planes as shown in the image.

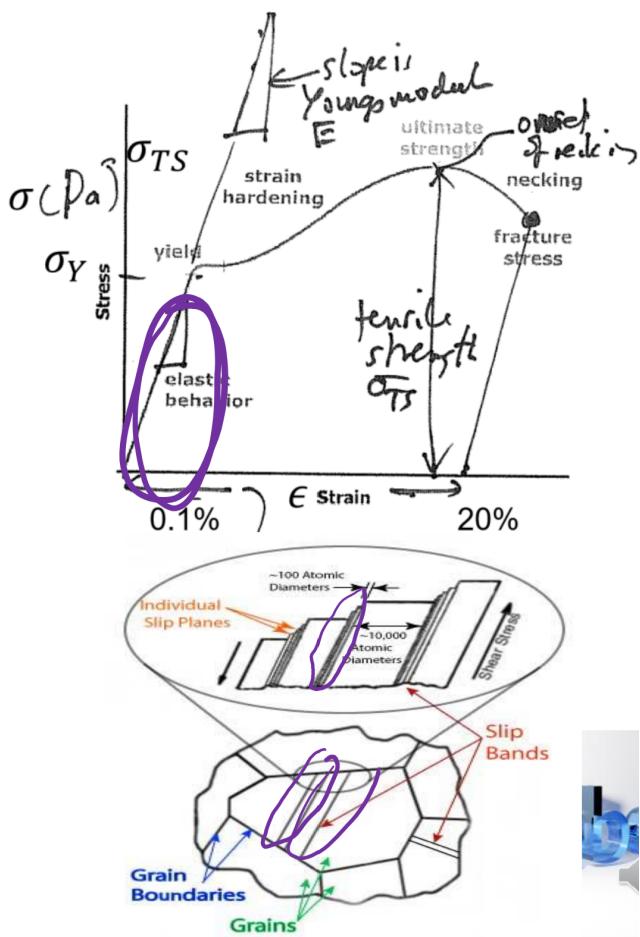


Figure 2.15: Stress-strain curve.

Fatigue crack initiation

The life of a fatigue crack has two parts, initiation and propagation. Dislocations play a major role in the fatigue crack initiation phase. It has been observed in laboratory testing that after a large number of loading cycles dislocation pile up and form structures called persistent slip bands. Initiation has a molecular origin.

Topological change in crystal structure

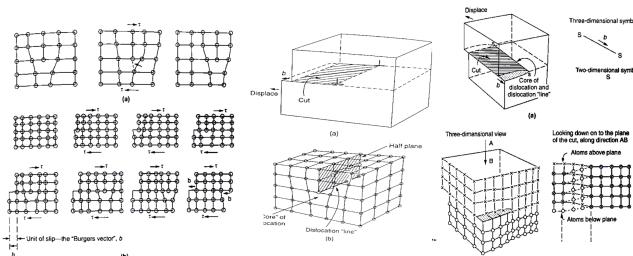


Figure 2.16: Topological changes in crystal structure.

2.4 Kinetic theory of gases

Statistical 19th century view of macroscopic properties of gas. Boltzmann and colleagues developed new techniques to describe matter. Heavily influenced the theory of turbulence ← based on kinetic theory of a gas.

$p = \rho RT$ origin with statistical theory.

This is an excellent macroscopic model of matter. The problem is that it does not work well for low pressure, high pressure or when density is low (and continuum concepts don't work).

2.4.1 Speed of molecules

Results tell us about average speed but not the distribution.

$$n_v(E) = n_0 e^{-\frac{E}{k_B T}} \quad (2.29)$$

where, $n_v(E)$ is the Boltzmann distribution which comes a lot. The speed of the molecules satisfies the Maxwell-Boltzmann distribution.

$$f(v) = 4\pi \left(\frac{m}{2\pi k_B T} \right)^{\frac{3}{2}} v^2 \exp \left(-\frac{mv^2}{2k_B T} \right) \quad (2.30)$$

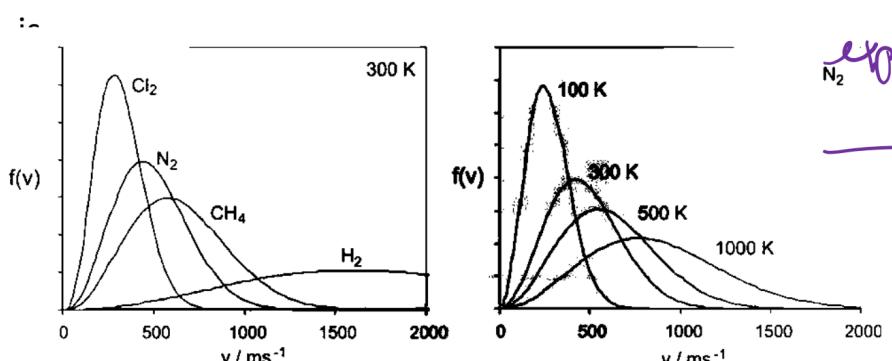


Figure 2.17: Speed of molecules.

2.4.2 Equations of state of real gases

The molecular continuum view of matter are linked. Virial equation:

$$pV = nRT \left(1 + \frac{B}{V_m} + \frac{C}{V_m^2} + \dots \right) \quad (2.31)$$

where B, C are the second and third virial coefficients. Van der Waals equation:

$$\left(p + a \frac{n^2}{V^2} \right) (V - nb) = nRT \text{ or} \quad (2.32)$$

$$P = \frac{nRT}{V - nb} - a \frac{n^2}{V^2} \quad (2.33)$$

n is the number of moles. nb is the volume excluded since molecules cannot overlap. $\frac{an^2}{V^2}$ pressure reduced due to attractions between pairs of molecules.

Critical constants for van der Waals equation

Solving these two equations in two unknowns (temperature and molar volume) gives the critical temperature and critical molar volume:

$$T_c = \frac{8a}{27Rb} \quad (2.34)$$

$$V_c = 3b \quad (2.35)$$

Van der Waals

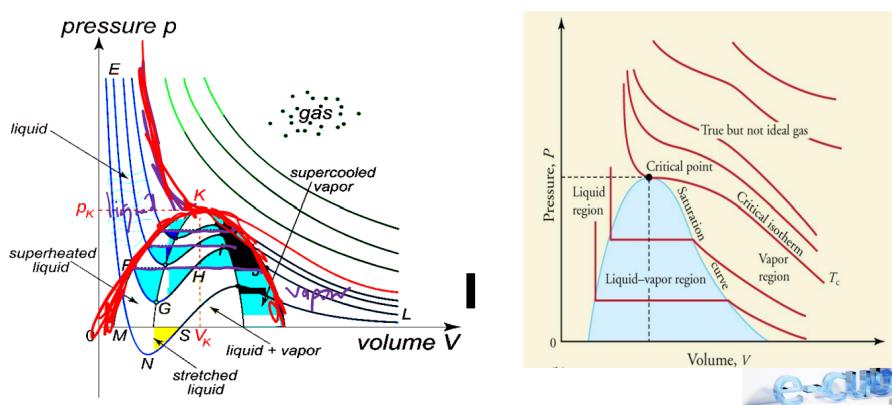


Figure 2.18: Van der Waals.

Link between molecular and microscopic

Most of the important 19th century breakthroughs were determining link between macroscopic (could be seen) and microscopic (could not be seen). For example, Brownian motion:

$$\frac{RT}{5\pi\mu dN_A} = D = \lim_{t \rightarrow \infty} \frac{(x^2)}{2t} \approx 10 \times 10^{-10} \text{ m}^2 \text{ s}^{-1} \quad (2.36)$$

This represented a link between Avogadro's constant and macroscopic movement of particles. Here $N_A = 6 \times 10^{23} \text{ mol}^{-1}$. Theory by Einstein (1905) and Sutherland (1905). Millikan's experiments: determination of the charge on an electron. The link between molecular and microscopic last areas of modern science to be worked out.

Einstein theory and Millikans experiment

Based around kinetic theory of gases and momentum change due to collision. Pressure is a manifestation of a:

$$P = \frac{2}{3} \frac{N}{V} \frac{1}{2} m_0 \bar{v}^2 \quad (2.37)$$

$$\therefore PV = nRT = \frac{N}{N_a} RT = Nk_B T \quad (2.38)$$

$$\therefore KE = \frac{3}{2} N k_b T = \frac{3}{2} nRT = \frac{NDF}{2} nRT \quad (2.39)$$

where NDF is number of degrees of freedom.

Model assumptions

- No intermolecular forces between the gas particles
- The volume occupied by the particles is negligible compared to the volume of the container they occupy
- The only interactions between the particles and with the container walls are perfectly elastic collisions.
- Real gas, the atoms or molecules have a finite size, and at close range they interact with each other through a variety of intermolecular forces, including dipole-dipole interactions, dipole induced dipole interactions and van der Waal's (induced dipole - induced dipole) interactions
- When applied to real gases, the ideal gas model breaks down when molecular size effects or intermolecular forces become important. This occurs under conditions of high pressure , when the molecules are forced close together and therefore interact strongly, and at low temperatures, when the molecules are moving slowly and intermolecular forces have a long time to act during a collision

The pressure at which the ideal gas model starts to break down will depend on the nature and strength of the intermolecular forces between the gas particles, and therefore on their identity. The ideal gas model becomes more and more exact as the pressure is lowered, since at very low pressures the gas particles are widely spaced apart and interact very little with each other.

$$\text{number density} = \frac{N}{V} = \frac{nN_A}{V} \quad (2.40)$$

$$\Delta p_x = (2mv_x) \left(\frac{1}{2} \frac{nN_a}{V} Av_x \Delta t \right) = \frac{nMAv_x^2 \Delta t}{V} \quad (2.41)$$

$$p = \frac{F_x}{A} = \frac{nMv_x^2}{V} \quad (2.42)$$

2.5 Chemistry for engineers

Chemistry has a molecular origin. The engineering challenge is how to include chemistry into multi-physics problems. Chemistry might be simple:



Part II

Extreme Pressure

Part III

Extreme Temperature

Chapter 3

How to Cool Very Hot Surfaces

3.1 Introduction

Context	Material development	Design
Gas turbine engines	Material development manufacturing techniques	TBC air cooling
Re-entry spacecraft	Surface properties ablation	Angle of attack changing geometry
Silicon processors	None really - still with silicon with an adhesive metal plate	Clamp on cooling system

Table 3.1: Introduction.

3.2 Jet engines

Purpose is to convert chemical energy into linear momentum (IC engine - chemical energy into pressure).

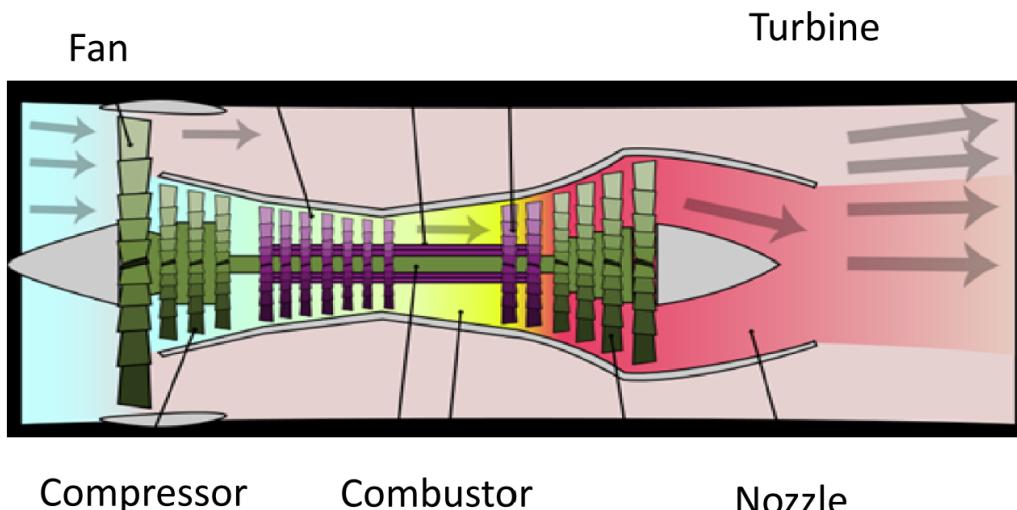


Figure 3.1: Jet engine.

3.2.1 Brayton (or Joule) cycle

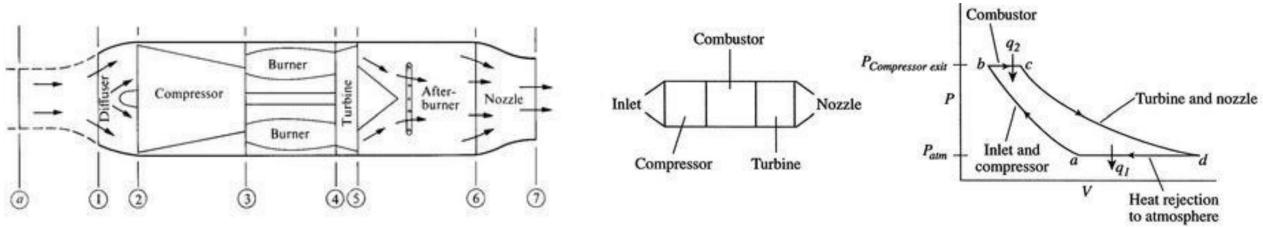


Figure 3.2: Brayton (or Joule) cycle.

- a-b: adiabatic, quasi-static (or reversible) compression in the inlet and compressor
- b-c: constant pressure fuel combustion (idealised as constant pressure heat addition)
- c-d: adiabatic, quasi-static (or reversible) expansion in the turbine and exhaust nozzle, with which we take some work out of the air and use it to drive the compressor and take the remaining work out and use it to accelerate fluid for jet propulsion, or to turn a generator for electrical power generation
- d-a: cool the air at constant pressure back to its initial condition
- **Fan** - the large spinning fan sucks in large quantities of air. It then speeds this air up and splits it into two parts. One part continues through the “core” or centre of the engine, where it is acted upon by the other engine components. The second part “bypasses” the core of the engine. It goes through a duct that surrounds the core to the back of the engine where it produces much of the force that propels the airplane forward. The cooler air helps to quiet the engine as well as adding thrust to the engine.
- **Compressor** - the compressor is the first component in the engine core. The compressor squeezes the air that enters it into progressively smaller areas, resulting in an increase in the air pressure. This results in an increase in the energy potential of the air. The squashed air is forced into the combustion chamber.
- **Combustor** - in the combustor the air is mixed with fuel and then ignited. This provides a high temperature, high-energy airflow. The fuel burns with the oxygen in the compressed air, producing hot expanding gases. The inside of the combustor is often made of ceramic materials to provide a heat-resistant chamber. The temperature can reach 2700 °C
- **Turbine** - the high-energy airflow coming out of the combustor goes into the turbine, causing the turbine blades to rotate. The turbines are linked by a shaft to turn the blades in the compressor and spin the intake fan at the front. This rotation takes some energy from the high-energy flow that is used to drive the fan and the compressor. The gases produced in the combustion chamber move through the turbine and spin its blades. The turbines of the jet spin around thousands of times. They are on fixed shafts which have several sets of ball-bearings in between them.
- **Nozzle** - the nozzle produces the thrust for the plane. The energy depleted airflow that passed the turbine in addition to the colder air that bypassed the engine core, produces a force when exiting the nozzle that acts to propel the engine, and therefore the airplane, forward. The combination of the hot air and cold air are expelled and produce an exhaust, which causes a forward thrust. The nozzle may be preceded by a mixer, which combine the high temperature air coming from the engine core with the lower temperature air that was bypassed in the fan. The mixer helps to make the engine quieter.

3.2.2 Typical values

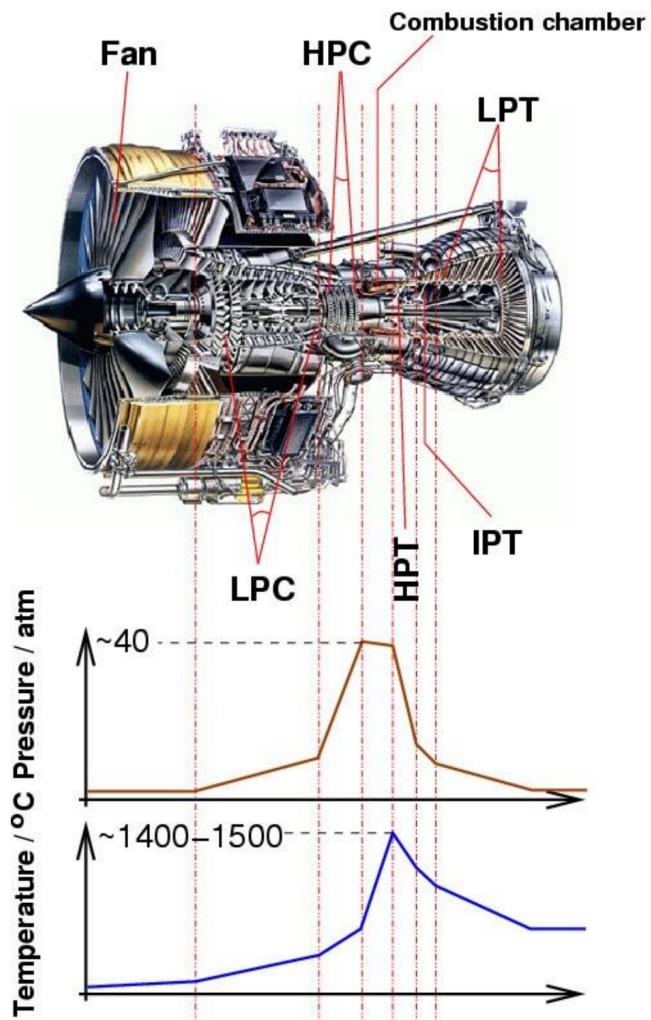


Figure 3.3: Typical temperature values for different stages of cycle in bypass gas-turbine engine.

Metal	Melting point
Titanium	1668 °C
Nickel	1455 °C
Steel	1370 °C

Table 3.2: Table to show melting points of various metals used in bypass gas-turbine engines.

Combustion at about 1800-1900 °C. Large centrifugal acceleration 25 000 rpm for large engines 500 000 rpm for micro gas turbine. Higher temperature makes the thermodynamic efficiency greater (about 60%). Combustion temperature is above melting point of metals.

Fuel	Combustion temperature
Methane (in air)	1950 °C
Hydrogen (in air)	2110 °C
Propane (in oxygen)	2880 °C

Table 3.3: Table to show combustion temperatures of various fuels.

Meeting the needs

1. Choice of material
2. Manufacturing technique
3. Design

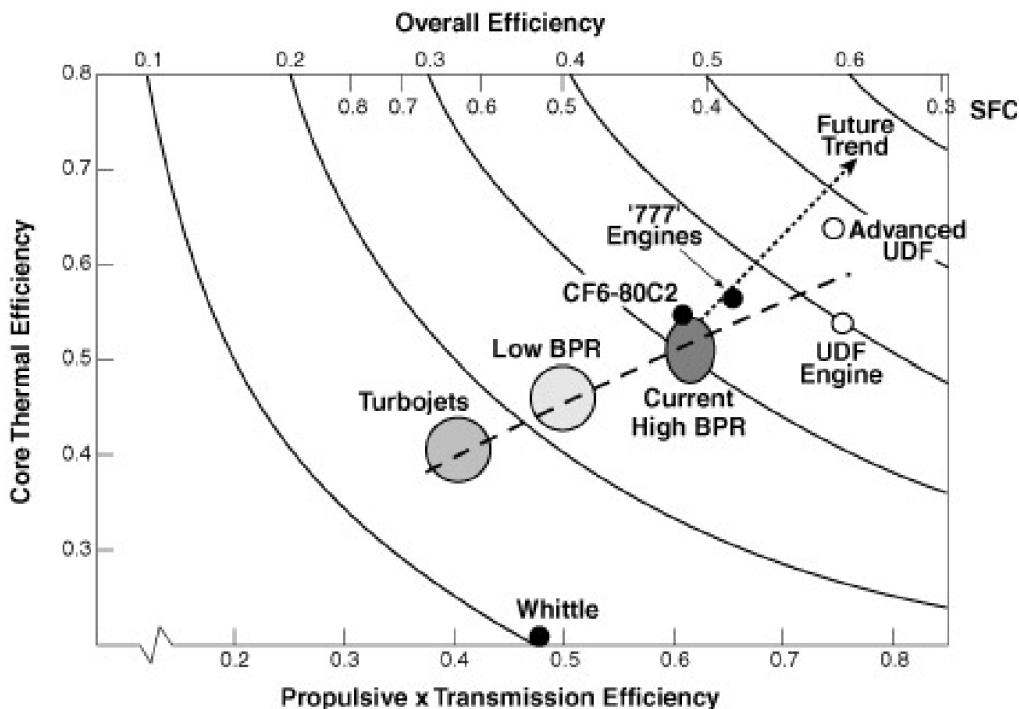


Figure 3.4: Efficiencies of various gas-turbine engines.

3.2.3 Material selection

Considerations:


1. Strength and weight: titanium
2. Temperature: major constraint is the material selection for the hot section (combustor and turbine) of the engine

The need for better materials spurred much research in the field of alloys and manufacturing techniques, and that research resulting in a long list of new materials and methods that make modern gas turbines possible. One of the earliest of these was Nimonic 90 (nickel-based, high-temperature, low-creep superalloys Ni 54%, Cr 18-21%, Co 15-21%, Ti 2-3%, Al 1-2%).

The development of superalloys in the 1940s and new processing methods such as vacuum induction melting in the 1950s greatly increased the temperature capability of turbine blades. Further processing methods like hot isostatic pressing improved the alloys used for turbine blades and increased turbine blade performance. Modern turbine blades often use nickel-based superalloys that incorporate chromium, cobalt and rhenium.

Blue is titanium –

ideal for strength and density and low temperatures

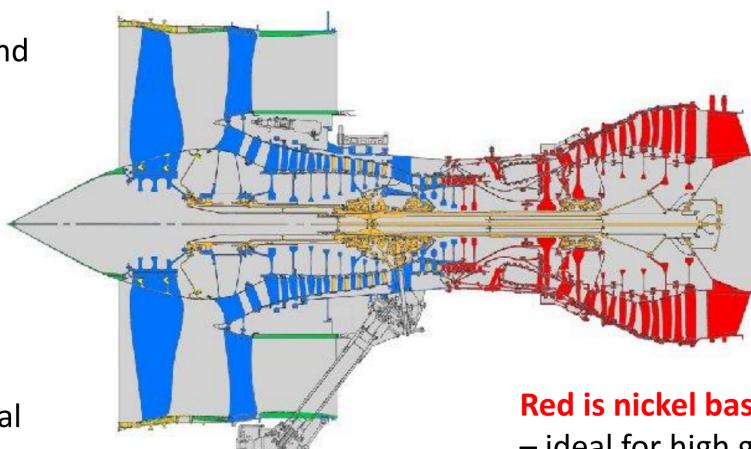

Orange – steel – ideal for static parts of the compressor high temperature.

Red is nickel based superalloys

- ideal for high gas temperature
- entrance temperature is 1400°C , cooling system (surface temp 1100°C) with coating is 930°C

Figure 3.5: Usage of different alloys within the engine.

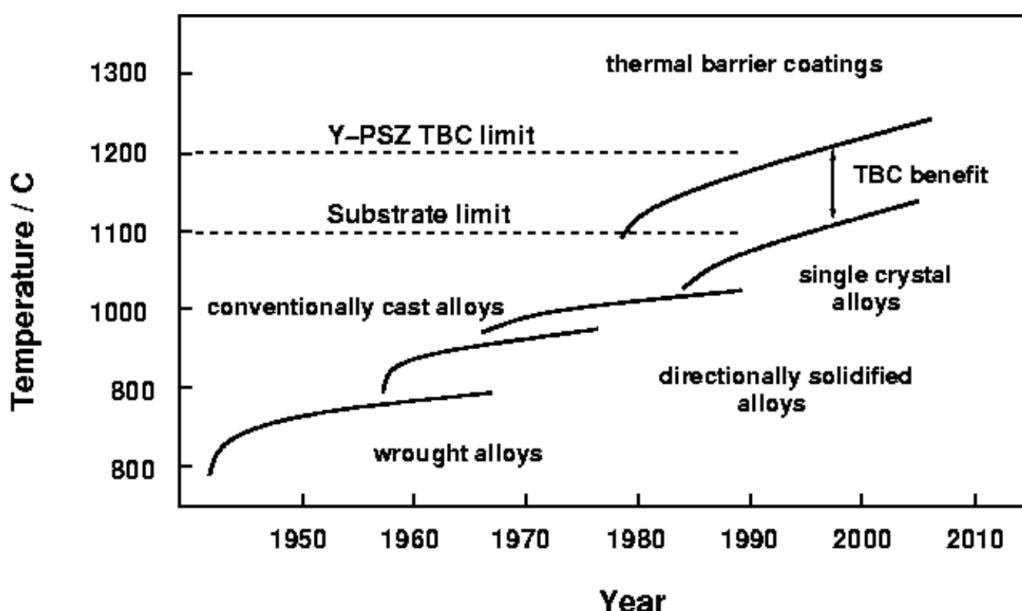


Figure 3.6: Development of alloys.

Titanium - good for weight and strength (poor with heat).

Alloy improvement, directional and single-crystal solidification have contributed significantly, but arguably, the emphasis has been shifted to coating systems which have allowed an increase of gas temperatures up to 1100°C . Coatings in gas turbines serve a variety of purposes. A first requirement to operate turbines at higher temperatures was, of course, improved strength. Unfortunately, these conditions also mean severe oxidation / corrosion problems, and to make things worse, the improvement in mechanical properties of the base alloys was made at the expense of environmental resistance.

The first purpose of coatings was to improve poor oxidation resistance of the base alloy (aluminide, Pt-aluminide, MCrAlY). A second type of coatings applied to high-temperature parts are known as thermal barrier coatings (TBC). These are ceramic coatings with very low thermal conductivity and thin ($200\ \mu\text{m}$). Drop of

100-300 °C between the gas and metal surface temperatures but are ‘oxygen transparent’ and do not prevent oxidation of the underlying substrate.

3.2.4 Manufacturing process

Aside from the alloy improvements, a major breakthrough was the development of directional solidification (DS) and single crystal (SC) production methods. These methods help greatly increase strength against fatigue and creep by aligning grain boundaries in one direction (DS) or by eliminating grain boundaries altogether (SC).

Recent generations of superalloys for single crystal turbine blades contain relatively high percentages of refractory elements such as Ta, W or Re which enhance the high-temperature mechanical properties.

This is done at the expense of Cr and Al. Given the severe environmental conditions in which the blades operate, the removal of the elements (beneficial for oxidation resistance) implies even greater degradation problems.

To reduce the oxidation corrosion resistance, an external coating is applied to the blades. Its purpose is to allow for the growth of a resistant oxide layer. Of all possible oxides $\alpha\text{-Al}_2\text{O}_3$ offers excellent protection and very low growth rates (in a minority of cases, Cr oxides are preferred). The composition of the coating must therefore be chosen carefully so as to ensure growth of $\alpha\text{-Al}_2\text{O}_3$.

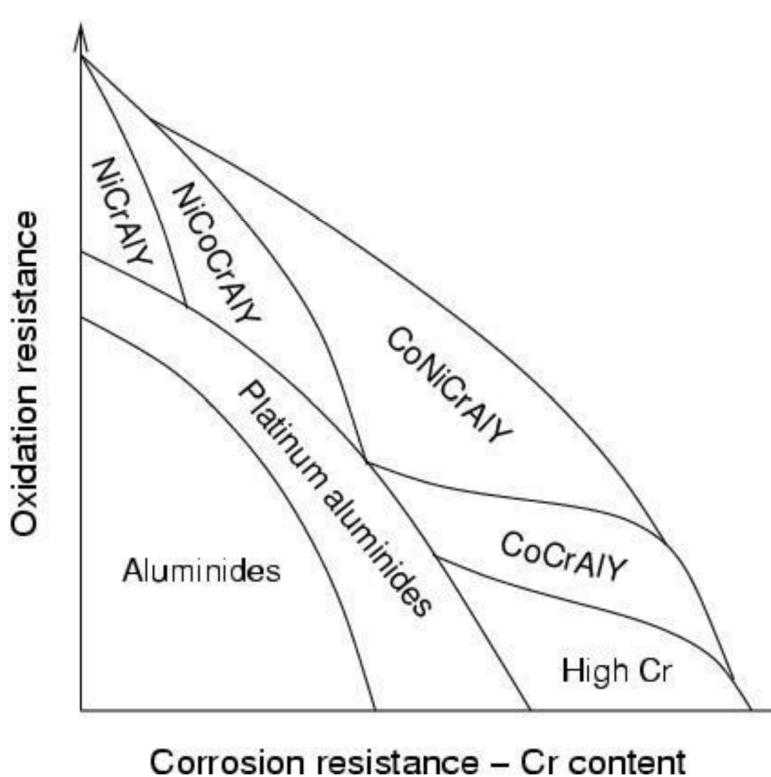


Figure 3.7: Oxidation and corrosion resistance of different alloys.

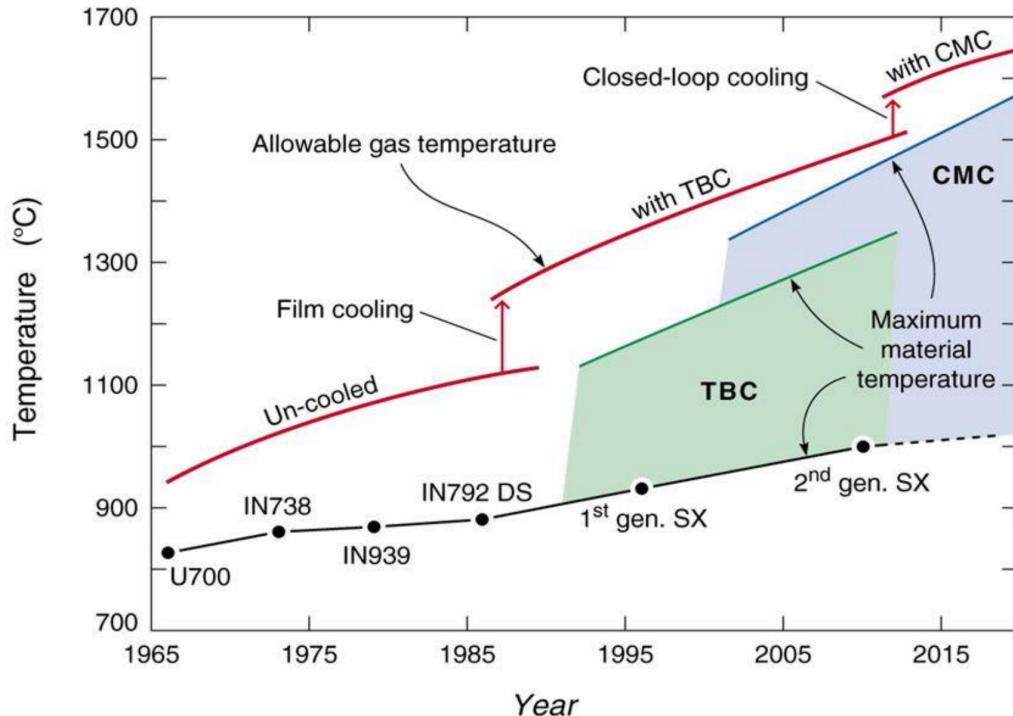


Figure 3.8: Temperature resistance of TBCs and CMCs over the years.

TBC - thermal barrier coating. CMC - ceramic matrix composite.

3.2.5 Thermal barrier coating

Thermal barrier coatings (TBC) are advanced materials systems usually applied to metallic surfaces, such as on gas turbine or aero-engine parts, operating at elevated temperatures, as a form of exhaust heat management. These 100 µm to 2 mm coatings serve to insulate components from large and prolonged heat loads by utilising thermally insulating materials which can sustain an appreciable temperature difference between the load-bearing alloys and the coating surface.

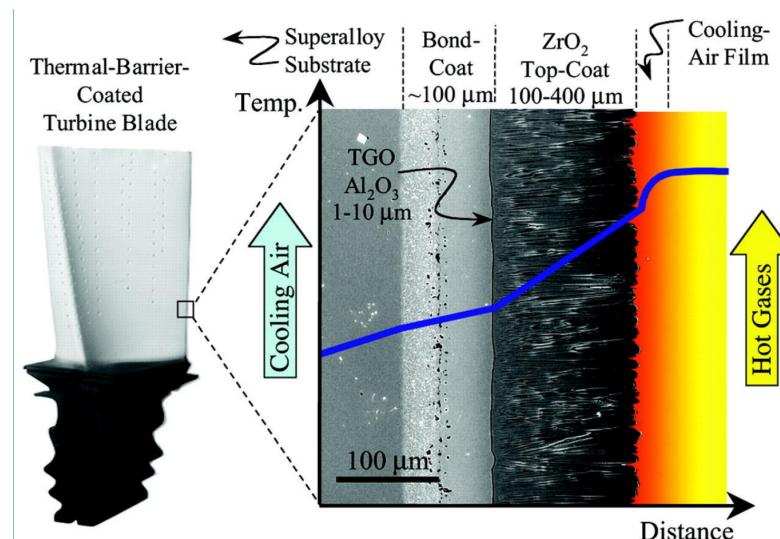


Figure 3.9: Thermal barrier coatings (TBCs).

Four layers:

1. The metal substrate
2. Metallic bond coat
3. Thermally-grown oxide (TGO)
4. Ceramic topcoat. The ceramic topcoat is typically composed of yttria-stabilised zirconia (YSZ) which is desirable for having very low of conductivity while remaining stable at nominal operating temperatures typically seen in applications. This ceramic layer creates the largest thermal gradient of the TBC and keeps the lower layers at a lower temperature than the surface.

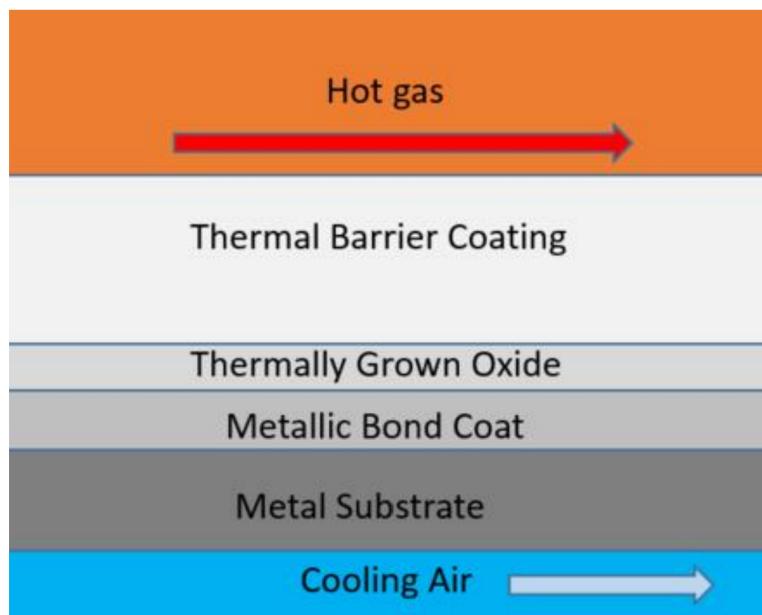


Figure 3.10: Thermal barrier coating composition.

TBCs improved corrosion and oxidation resistance, both of which became greater concerns as temperatures increased. First TBCs (1970s) were aluminide coatings. Ceramic coatings in 1980s which decreased turbine blade temperature by about 90 °C, improve blade life, almost doubling the life of turbine blades in some cases.

An effective TBC needs to meet certain requirements to perform well in aggressive thermo-mechanical environments. To deal with thermal expansion stresses during heating and cooling, adequate porosity is needed, as well as appropriate matching of thermal expansion coefficients with the metal surface that the TBC is coating.

1. A high melting point
2. No phase transformation between room temperature and operating temperature
3. Low thermal conductivity
4. Chemical inertness
5. Similar thermal expansion match with the metallic substrate
6. Good adherence to the substrate
7. Low sintering rate for a porous microstructure

These requirements severely limit the number of materials that can be used, with ceramic materials usually being able to satisfy the required properties.

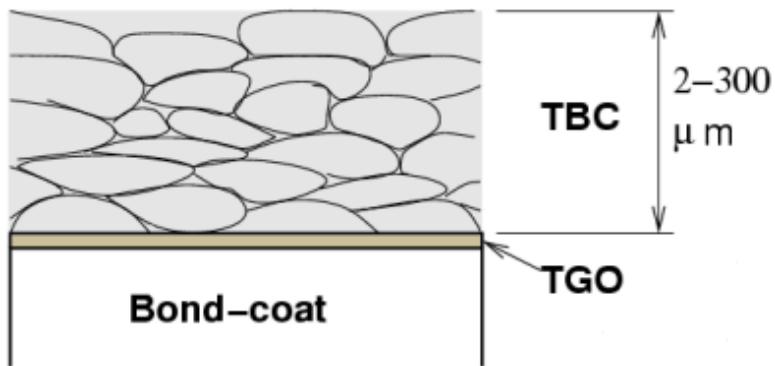


Figure 3.11: Microstructure of TBC.

For a ceramic coating to have any chance not to spall at the first thermal cycle, it is critical that its thermal expansion be close to that of the substrate. For the coating to be of use, it must also exhibit a very low thermal conductivity.

Thermal barrier coatings typically consist of four layers: the metal substrate, metallic bond coat, thermally-grown oxide (TGO), and ceramic topcoat. The ceramic topcoat is typically composed of yttria-stabilised zirconia (YSZ) which is desirable for having very low thermal conductivity while remaining stable at nominal operating temperatures typically seen in applications. This ceramic layer creates the largest thermal gradient of the TBC and keeps the lower layers at a lower temperature than the surface.

Most turbine blades are manufactured by investment casting (or lost-wax processing). This process involves making a precise negative die of the blade shape that is filled with wax to form the blade shape. If the blade is hollow (i.e. it has internal cooling passages), a ceramic core in the shape of the passage is inserted into the middle. The wax blade is coated with a heat-resistant material to make it a shell, and then that shell is filled with the blade alloy. This step can be more complicated for DS or SC materials, but the process is similar. If there is a ceramic core in the middle of the blade, it is dissolved in a solution that leaves the blade hollow. The blades are coated with a TBC, and then any cooling holes are machined. Ceramic matrix composites (CMC), where fibres are embedded in a ceramic matrix, are being developed for use in turbine blades. Main advantage of CMCs over conventional superalloys is their light weight and high temperature capability. SiC/SiC composites consisting of silicon matrix reinforced by silicon carbide fibres have been shown to withstand operating temperatures 100-200 °C higher than nickel superalloys.

Coating failure

TBCs fail through various degradation modes that include mechanical rumpling of bond coat during thermal cyclic exposure, especially coatings in aircraft engines; accelerated oxidation, hot corrosion, molten deposit degradation. There are also issues with oxidation (areas of the TBC getting stripped off) of the TBC, which reduces the life of the metal drastically, which leads to thermal fatigue.

A key feature of all TBC components is well matched thermal expansion coefficients between all layers. TBCs expand and contract at different rates upon heating and cooling of the environment, so when the different layers have poorly thermal expansion coefficients, a strain is introduced in the material which can lead to cracking and ultimately failure of the coating.

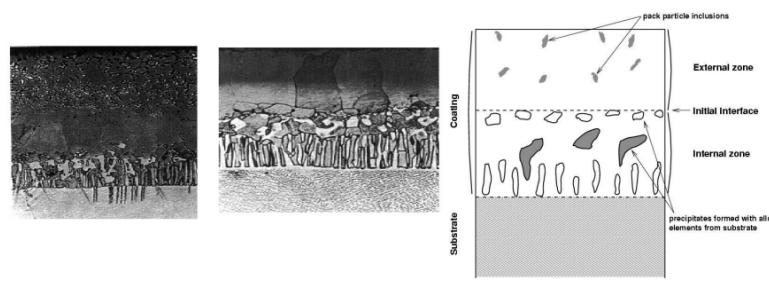


Figure 3.12: Failure of TBCs.

3.2.6 Corrosion processes

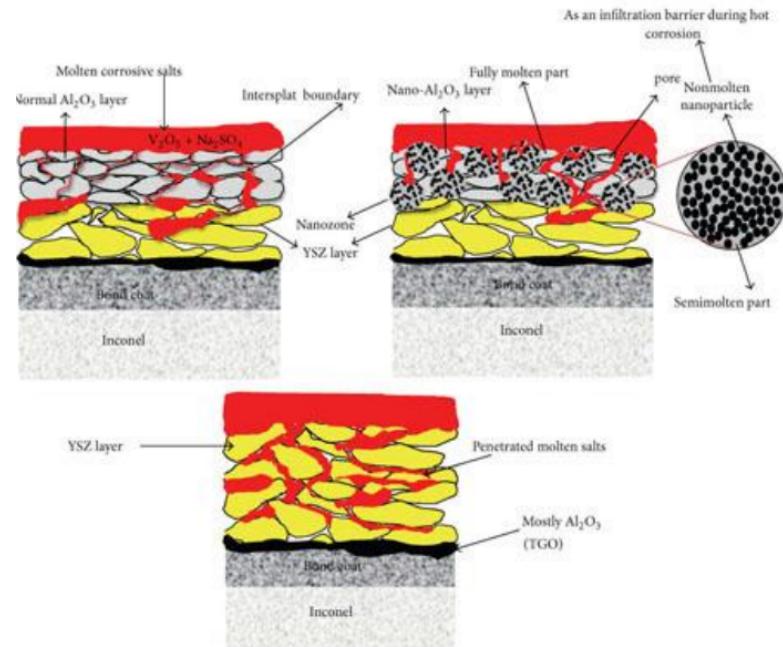


Figure 3.13: Schematic illustration of corrosive molten salts infiltration into the YSZ layer of different TBC coatings.

The high-pressure turbine of a jet turbine provides one of the most severe environments faced by man-made materials. To temperatures approaching the substrate melting point, one must add the considerable stresses caused by rotation at more than 10 000 rpm. Thermal barrier coating failure results in melting of the blade. Without reaching such catastrophic failure, blades suffer from accelerated oxidation or hot corrosion. Coatings can considerably enhance the oxidation/hot corrosion resistance of these components. Oxidation is the reaction between the coating (or in its absence, base alloy) with the oxidants present in the hot gases. Hot corrosion occurs from surface reactions with salts deposited from the vapour phase. This is caused by diffusion through the substrate alloy, as they are not in thermodynamic equilibrium with the latter.

3.2.7 Cooling through design

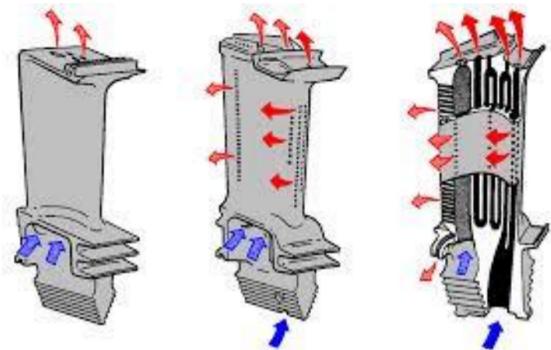
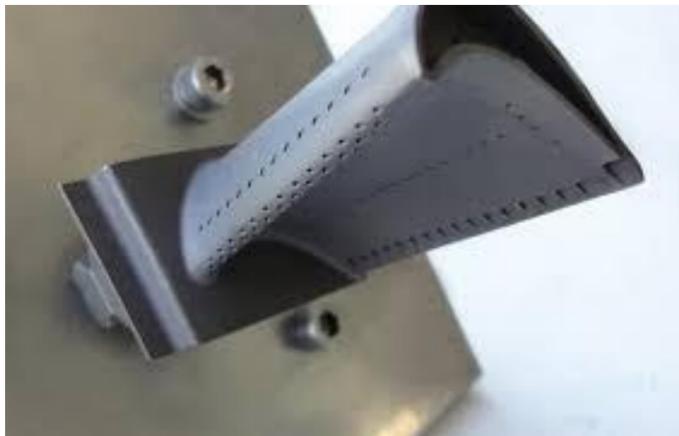


Figure 3.14: Cooling holes.



Figure 3.15: Blade with cooling holes.

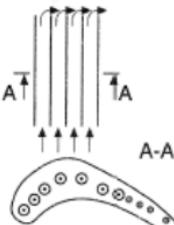
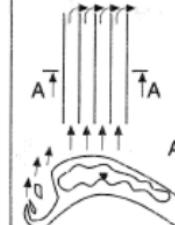
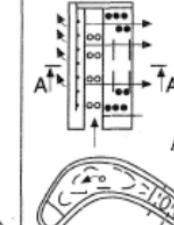
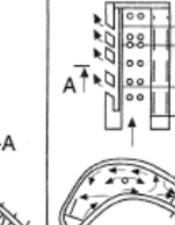
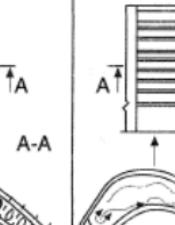
Main Data	Engine Type				
	JT8D-11(15)	JT9D-3A	JT9D-7	JT9D-59/70D	F-100
T _g , K	1294~1340	1420	1500	1598...1643	1590...1672
δ, %	~1,0	1,96	2.1	3.4	~3.0
θ	~0.2	~0.3	~0.45	~0.5	~0.55
Cooling system development	 Radial air flow ducts Multiflow - line schematic diagram of air flow	 Radial air flow ducts	 Deflector blade with air jet stream	 Film cooling and cooling air twisting 1.3% 1 + 2	 1. Deflector blade welded from two parts 2. Cooling air twisting 3. Development surface of inner finning

Table 3.4: Internal blade configurations.

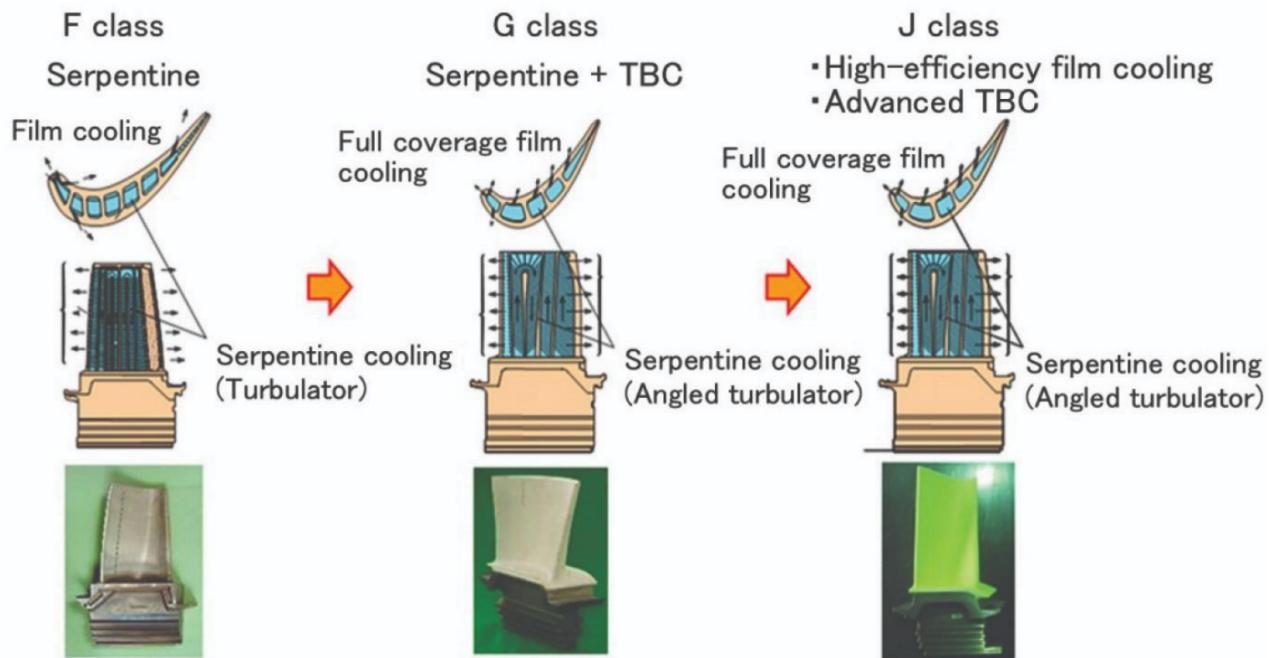


Figure 3.16: Classes of cooling technologies for internal blade cooling.

3.3 Atmospheric re-entry objects

Two types of entry:

1. Uncontrolled
2. Controlled (or EDL entry, descent and landing)

The kinetic energy of re-entry vehicles is enormous (50-1800 GJ) and thus must be expended. This is because this is the potential energy that must be lost. It is not possible to use retro rockets over whole descent as this uses too much fuel. Most objects require slowing down (except for ballistic warheads).

3.3.1 Idealised re-entry path

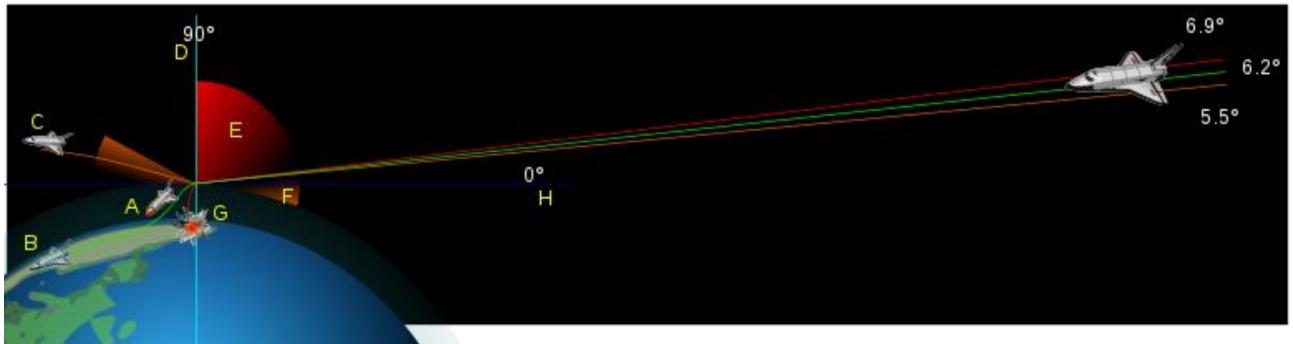


Figure 3.17: Idealised re-entry path.

Re-entry window:

- A - friction with air
- B - in air flight
- C - expulsion lower angle
- D - perpendicular to the entry point
- E - excess friction 6.9° to 90°
- F - repulsion of 5.5° or less
- G - explosion friction
- H - plane tangential to the entry point

Karman line

- Earth - 100 km
- Venus - 250 km
- Mars - 80 km

Most objects enter at hypersonic speeds. Alternative on planets with thick atmospheres or strong gravity - Venus, Titan and the gas giants.

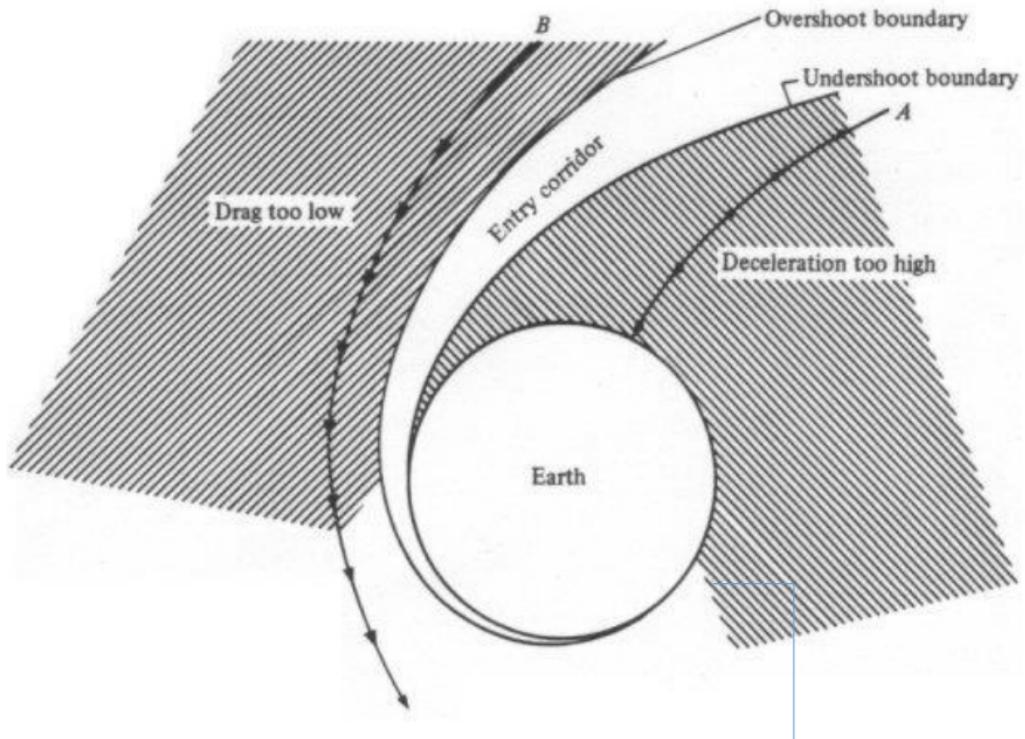


Figure 3.18: Re-entry path for Earth.

3.3.2 Blunt body entry vehicles

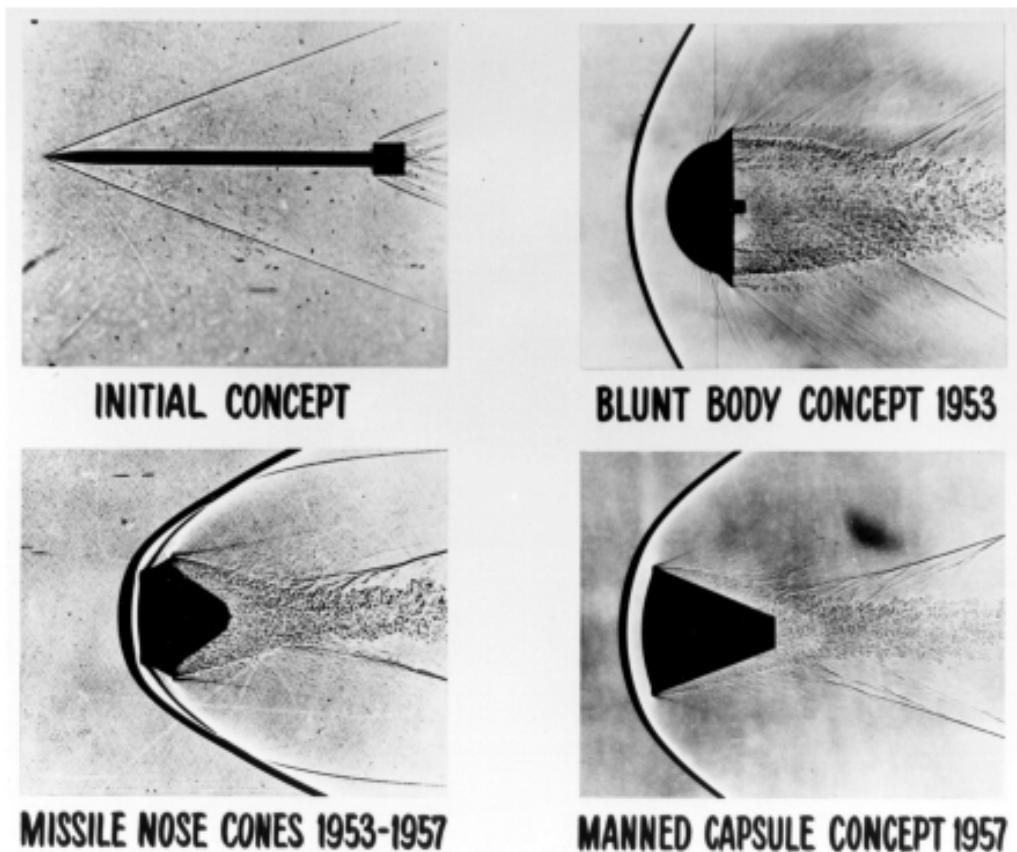


Figure 3.19: Re-entry path for Earth.

Allen & Eggers made the discovery that viscous heating decreases as the inverse square of the drag coefficient.

Shapes of entry types

- Cone



- Biconic



- Lower peak deceleration

Figure 3.20: Shapes of entry path.

3.3.3 Shock layer physics

Perfect gas model - breaks down at 500 K and not useable after 300 K (works okay for Titan because atmosphere is so dense and pressure high). Real gas model - requires table and inclusion of chemistry. Stagnation plane is about 0.14 times nose radius.

3.3.4 Different types of coatings

- SLA-561V stands for super light-weight ablator - used on all NASA mars missions, Starts to ablate at 100 W cm^{-2} but fails for heat fluxes greater than 300 W cm^{-2} . Peak value on Mars is 21 W cm^{-2}
- Phenolic impregnated carbon ablators - carbon fibre impregnated with phenolic resin. Low density with lowest conductivity. Worked well on Apollo mission capsules which entered at 12.4 km s^{-1} . Can withstand 1.2 kW cm^{-2}
- PICA-X - 10 times cheaper to manufacture than PICA
- SIRCA - silicon impregnated reusable ceramic ablators. Can be machined quite accurately.

Ablation layers

Thermal protection systems are used to protect spacecraft in space and during re-entry. Ablative heat shields displace shock and thermal boundary layer away from the wall. Two approaches:

1. Outer surface chars, melts and sublimes
2. Bulk of layer undergoes pyrolysis and expels product gases

The blowing is what displaces the boundary layers. (Note the similarity in last case with gas turbine engines). Pyrolysis can be measured in real time using thermogravimetric analysis, so that ablative performance can be evaluated. Ablation can also provide blockage against radiative heat flux by introduction carbon into the shock layer thus making it optically opaque. Radiative heat flux blockage was the primary thermal protection mechanism of the Galileo Probe TPS material (carbon phenolic). Carbon phenolic was originally developed as a rocket nozzle throat material.

3.3.5 Thermal soak

When pyrolysis does not occur, conductivity increases and heating occurs. All the TPS fail when the heating is reduced. Space Shuttle TPS tiles can withstand 1000 K one side and warm to the touch on the other side, but they are very brittle.

3.3.6 Cooling methods

- Passive - dump the heat shield at the last moment
- Actively cooling by radiating heat - e.g. hypersonic aircraft
- Feathered re-entry
- Inflatable heat shield

3.4 Conclusions

- Fascinating mixture of design and material selection
- Interesting overlap in the physics for both gas turbines and re-entry spacecraft

Chapter 4

Large Spatial and Temporal Variations of Temperature

4.1 Introduction

Many different engineering materials are subject to intense heating and cooling in localised regions. As with our previous discussion about materials, the temperature might be spatially or temporally variable. In Lecture 13, we looked at the thermoelastic response of materials subject to small temperature variations. Their response can be dealt with via a linear elastic model. In this chapter, we look at the effect of a large temperature applied to a material which are sufficient to generate a plastic response and how the spatial and temporal variation affects the material properties.

The incandescent light bulb initially failed due to the thermal fatigue and melting problems. This was largely a material selection and corrosion problem. Turning a light on and off generates enormous thermal stresses, but keeping it on continuously is fine. The filament is made of tungsten which has a high melting point. The inert gases around the filament stop evaporation. Most of energy dissipated is thermal.

Types of heating processes

- **Mechanical heating**, usually by friction
- **Electrical heating**, using the material itself for energy release (e.g. induction heating), or more commonly by external means with an electrical resistance made of Nichrome (60% Ni, 25% Fe, 15% Cr) or Kanthal (70%, 24% Cr, 5% Al)
- **Radiation heating**, either with microwaves, infrared radiation from heated wires protected inside a quartz-glass (wires can be made of tungsten, carbon, Kanthal or Nichrome; naked Nichrome coiled wire was also used in the past), or using visible radiation (with a laser).
- **Chemical heating**, mainly by combustion, but also by hydrogen formation after atomic hydrogen is produced in an electric car, for instance.
- **Nuclear heating**, by nuclear fission or fusion

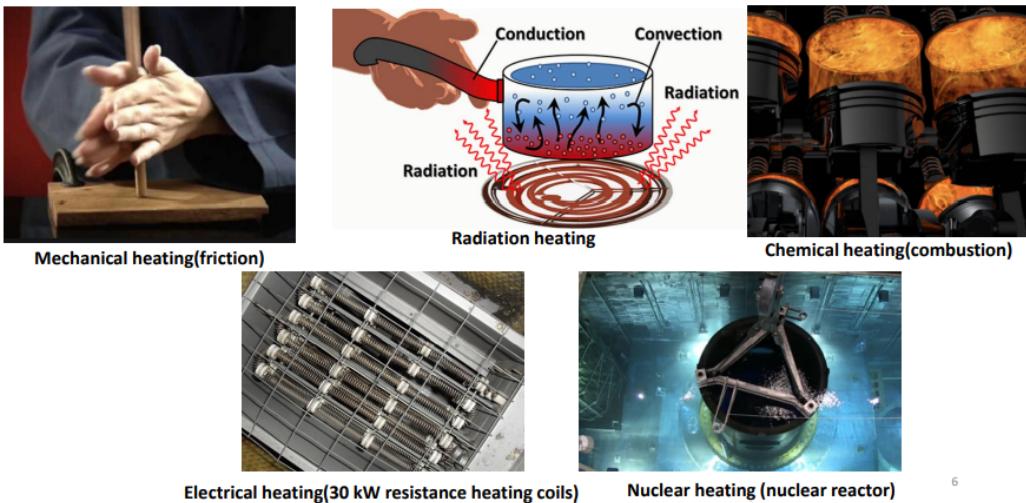


Figure 4.1: Heating processes.

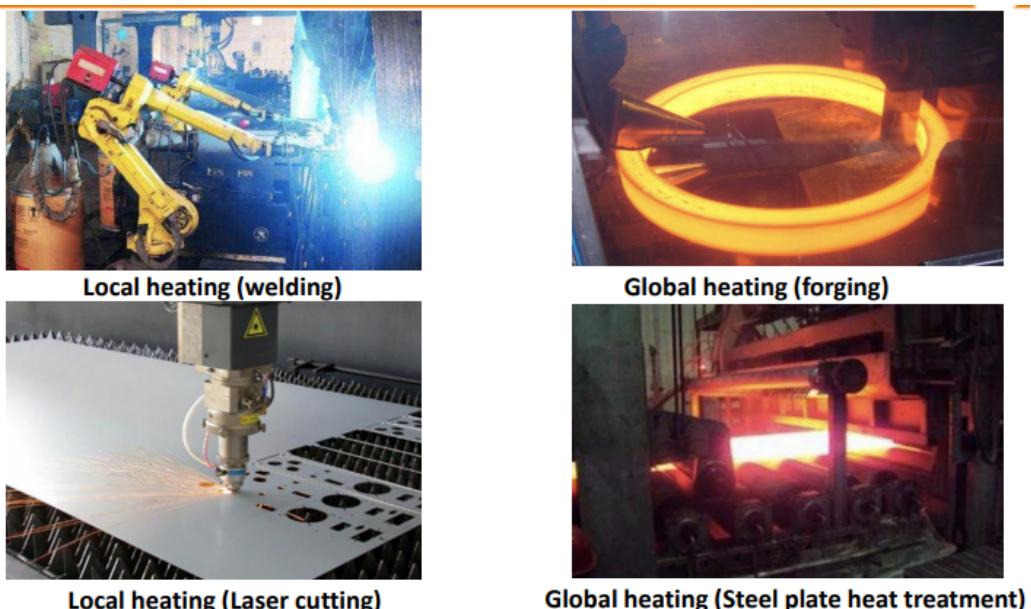


Figure 4.2: Localised heating processes.

4.2 Practical application of heat to a material

Any time a material is heated, the heat is applied spatially and temporally. The characteristics scales have quite different effects on the material and structure.

	Localised	Uniform
Slow	Welding	Heat treatment
Fast	Thermal shocking	Quenching

Table 4.1: Spatial and temporal heat application.

4.2.1 Welding

- TIG - Tungsten gas - electrode is tungsten. You do not need a metal filter. Need a gas tank to protect the weld - most often applied to stainless steels and light metals
- Flux-cored Arc Welding - similar to MIG. Uses a wire to serve as an electrode and a metal filler fed through the wand. Wire has a flux that creates the gas shield. Tends to have slag left so usually needs a clean-up
- Stick (Shielded Metal Arc Welding). Replaceable electrode stick that forms the filler metal. Arc is created at the end of the electrode. Stick is coated in flux that protects the metal from oxidation
- MIG welding (metal inert gas). Filler metal is consumable wire that acts as an electrode
- Laser beam welding - used on a few metals with laser providing the heat
- Plasma Arc Welding - uses a smaller arc with a high pressurised gas that is ionised and electrically conductive

Small amount of molten metal are introduced in the gap between two components to solidify the body. Major regions are:

1. Fusion where the parts of the metal have melted and combined with filler material
2. Heat affected zone - region next to steel that have undergone microstructural changes

4.2.2 Friction welding

<https://www.youtube.com/watch?v=RTEP9QdTn5k>



Figure 4.3: Friction welding.

4.2.3 Radiation heating

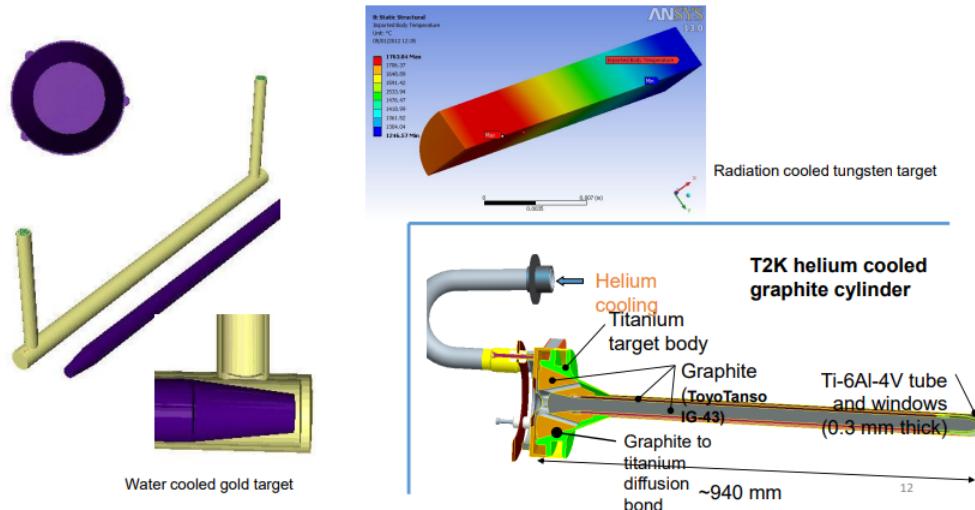


Figure 4.4: Radiation heating.

4.2.4 Laser heating

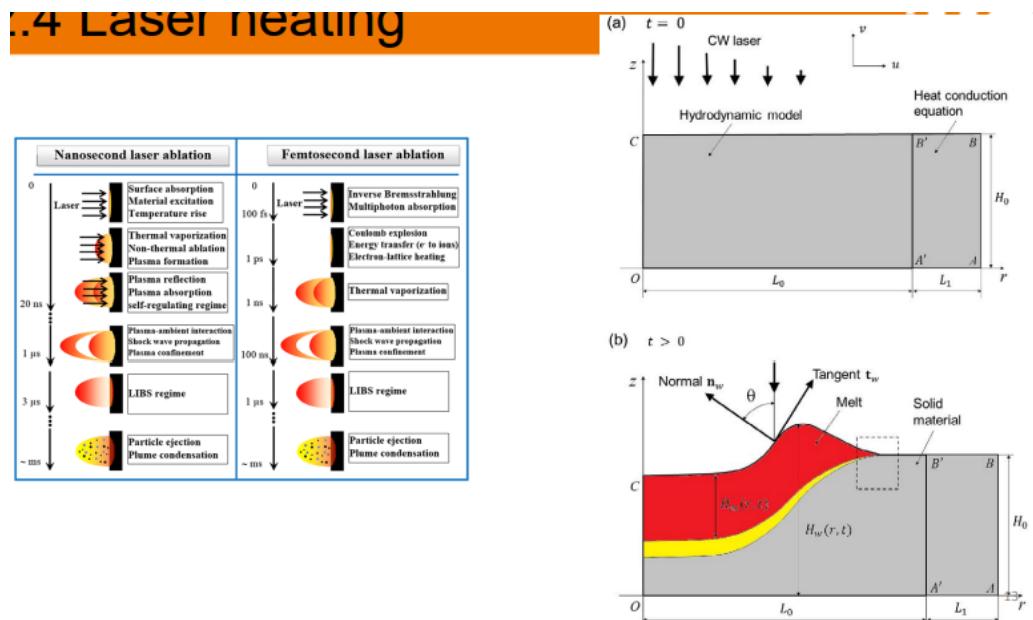


Figure 4.5: Laser heating.

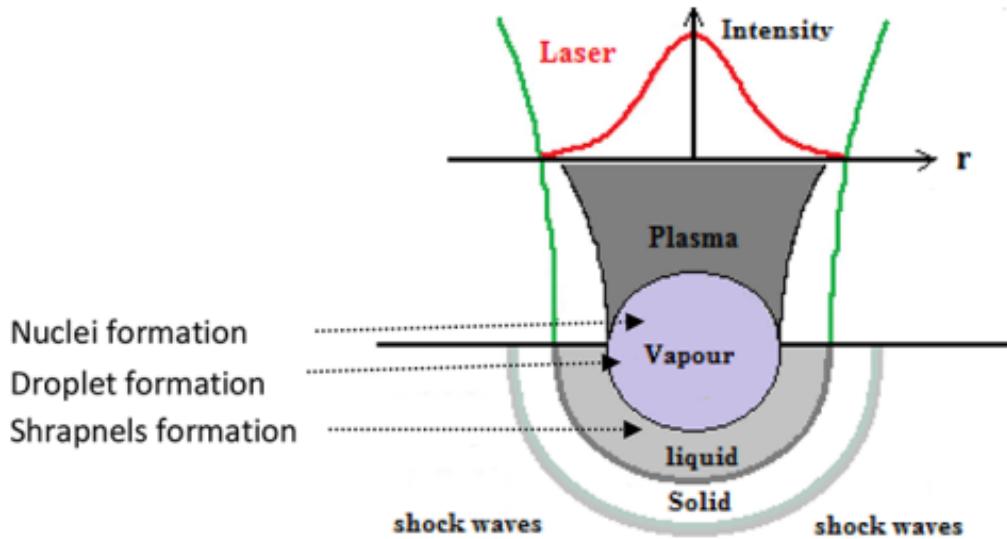


Figure 4.6: Close-up of laser heating.

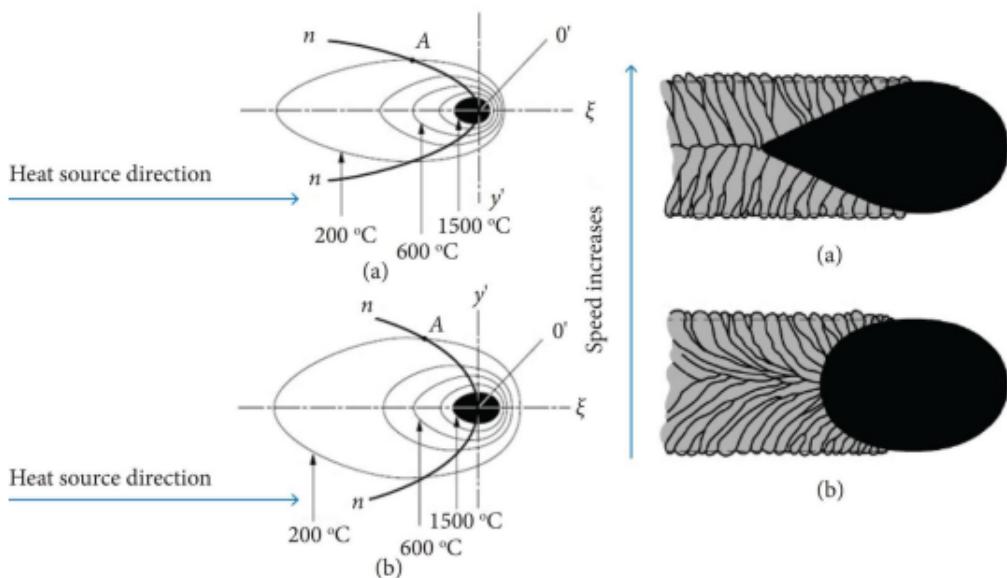


Figure 4.7: Close-up of laser heating.

The heat spreads out through diffusion from a moving source. The temperature distribution can be analysed using simple mathematical models of a moving source and this is discussed in Worksheet 15.

4.3 Structural changes in the matter

https://www.youtube.com/watch?v=uG35D_euM-0&authuser=0

4.3.1 Microstructural changes

Metals are comprised of a symmetrical structure of atoms known as an allotrope. Heating the metal will displace atoms from their position and the displaced atoms form a new structure. This process is known as allotropic phase transformation. Allotropic phase transformation alters the hardness, strength and ductility of the metal.

The most important allotropic phase transformation is undergone by iron. When iron is heated past 912 °C it is able to absorb more carbon which is essential for the manufacture of stainless steel.

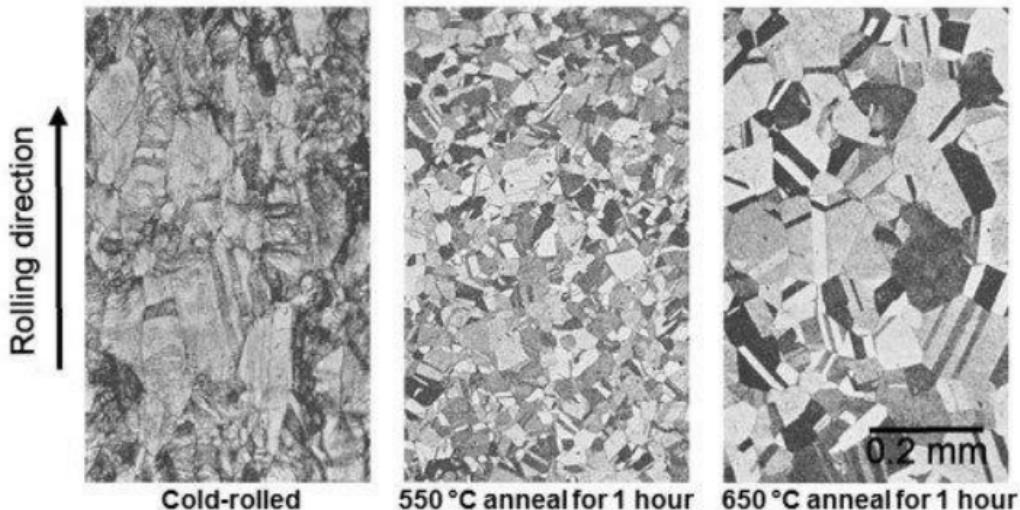


Figure 4.8: Effect on microstructure from cold rolling and then annealing.

Heat treatment

Annealing is used to soften metals including iron, steel, copper, brass and silver. The process involves heating the metal to a specific temperature then allowing it to cool slowly at a controlled rate. Annealing alters the physical and chemical properties of the metal to increase ductility and reduce hardness. This facilitates shaping, stamping or forming processes, and allows the metal to be cut more easily. Annealing also enhances electrical conductivity.

Normalising is applied to alloys to provide uniformity in grain size and composition. The metal is heated to a predefined temperature then cooled by air. The resulting metal is free of undesirable impurities and exhibits greater strength and hardness. Normalising is often used to produce a harder and stronger steel, albeit one that is less ductile than that produced by annealing. Typically, the normalising process is performed on materials that will be subjected to machining, because the process has improved this attribute.

Hardening is applied to steel and other alloys to improve their mechanical properties. During hardening, the metal is heated at a high temperature and this temperature is maintained until a proportion of carbon has been dissolved. Next the metal will be quenched, which involves rapidly cooling it in oil or water. Hardening will produce an alloy which has high strength and wear resistance. However, hardening will also increase brittleness and is not suitable for engineering applications. When there is a need to have the surface of the component hard enough to resist wear and erosion, while maintaining ductility and toughness to withstand impact and shock loading - surface hardening would be used.

Tempering is applied to steel where ductility is desired. Untempered steel is very hard but too brittle for most practical applications. Tempering is a low temperature heat treatment process normally performed after hardening (neutral hardening, double hardening, atmospheric carburising, carbonitriding, or induction hardening) in order to reach a desired hardness/toughness ratio. The process involves heating steel to a lower temperature to reduce some of the excess hardness. The metal is then allowed to cool in still air which results in a tougher and less brittle steel.

4.3.2 Macroscopic changes

Large temperature variations lead to inelastic and non-recoverable deformations. For plastic deformation requires about 0.2% residual strain. Since the strain generated a temperature difference of ΔT scales as $\epsilon \sim \Delta T \alpha$.

With a typical value of $\alpha \sim 1 \times 10^{-5} \text{ K}^{-1}$, we only need $\Delta T \sim 200 \text{ K}$ to generate this strain. Large temperatures leads to melting, rearrangement of bonds and this is what is used in casting and welding. Ductile and malleable materials can absorb changes while brittle materials fracture.

4.4 Soldering, brazing, welding

- Soldering is a low-temperature process ($60\text{-}400^\circ\text{C}$) that uses a low-melting metal (a base of tin combined with lead, silver, antimony, bismuth, indium) to join similar or dissimilar metals; it is mainly used in electronic boards
- Brazing is a mid-temperature process ($450\text{-}1200^\circ\text{C}$) that uses a high-melting metal (a base of silver combined with nickel, copper, zinc) to join similar or dissimilar metals; it is mainly used in copper piping and jewellery
- Welding is a high temperature process ($800\text{-}2000^\circ\text{C}$) that uses a powerful heat source to locally melt and join similar metals; it is mainly used in iron and steel work

Influence of localised heating

Close to the weld there is a heat affected region where the microstructure is affected by the heat. The metal in this area is generally weaker than the base material and the fusion zone. This is where the residual stresses are found.

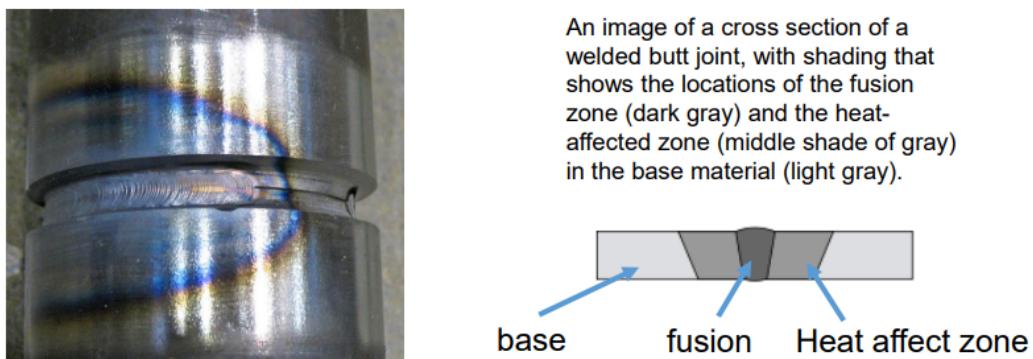


Figure 4.9: Influence of localised heating on a weld.

Heat affected zone

This is the ring that surrounds the weld which affects the alloy. If thermal diffusivity is high, cooling rate is high so the HAZ is smaller. If thermal diffusivity is low, cooling rate is low so the HAZ is bigger. Other measures are used, such as rate of heat input for weld where:

$$Q = \frac{60VI}{1000U} \times \text{efficiency} \quad (4.1)$$

- Q is the heat input (kJ mm^{-1})
- VI is the electrical power
- U is the speed of the weld

Usually we need $Q \approx 10 - 25 \text{ kJ mm}^{-1}$.

Weld	Efficiency
PAW	0.46
GTAW	0.65
Gas metal arc	0.83

Table 4.2: Welding efficiencies.

Thermoplastic shrinkage

When a plate is heated, there is an elastic convex deformation that fades as it is cooled and a plastic concave deformation. This is exploited in ship manufacturing techniques to create curved sheets.

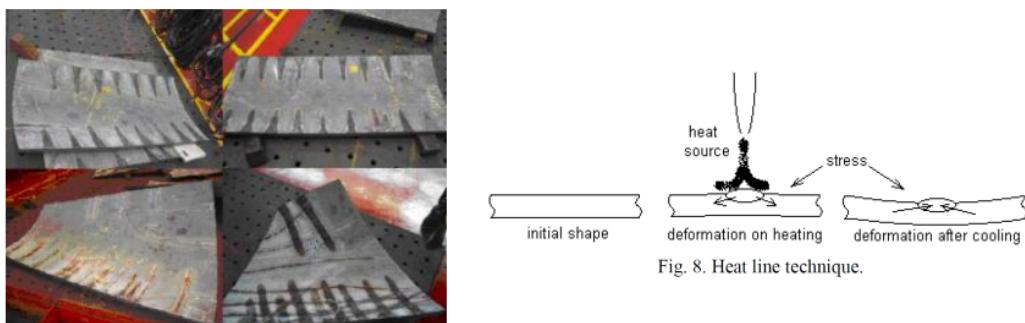


Figure 4.10: Thermoplastic shrinkage.

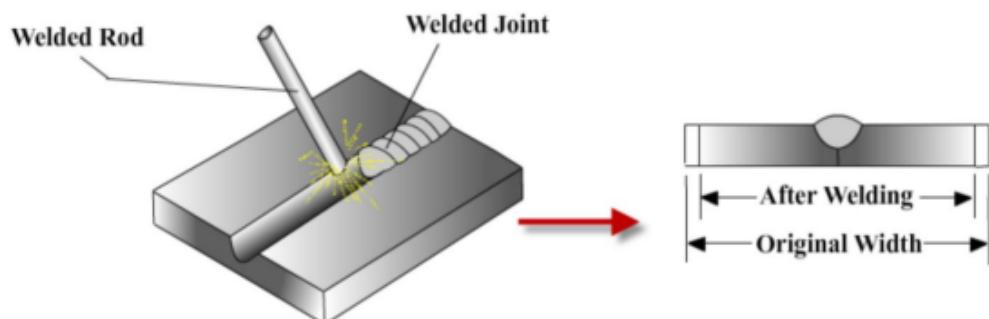


Figure 4.11: Weld shrinkage.

Weld shrinkage - generated by localised stresses caused by heating and distortion of the heated material. Usually leads to transverse and longitudinal shrinkage.

Process of plate heating

The process is known as heat line technique or line heating method of plate bending; it is applied mainly to mild-steel plates, and was started in the 1970s in shipbuilding. It consists of the following steps.

1. Initial heating. It forces the heated mass to expand against the rest of the material, creating great stresses and a very small convex elastic deformation due to the temperature gradient
2. High heating. Up to 1200 K (but usually limited to <995 K to avoid the mild-steel phase transition). It lowers the strength of the heated mass so much, that plastic-yield takes place, that the side material forces the heated mass to bulge in the hottest region

3. After cooling. Forced cooling (usually by water) increases the temperature gradient that forces the heated mass to recover its original strength but not its original shape, because the plastic deformation is not reversible, causing a shrinkage that pulls in from the rest of the material (i.e. in the whole it is not a thermal push but a thermal pull), causing a concave bending (and perhaps some cracks), and minor in-plane deformations due to the point-wise application (instead of the whole line at a time).

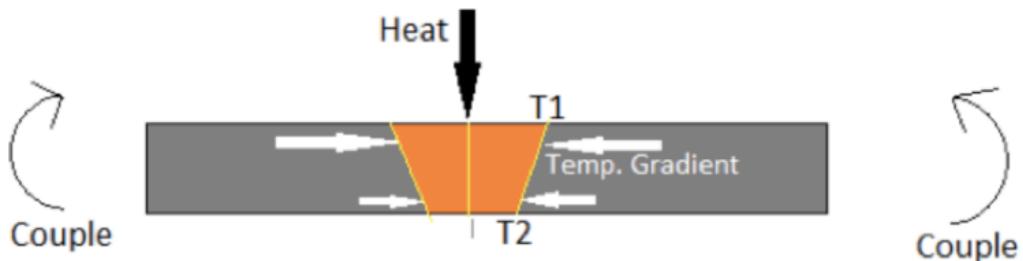


Figure 4.12: Plate heating.

4.5 Rapid changes in temperature

When a material is cooled or heated very rapidly over a small region, thermal stresses can be generated. This occurs due to uneven heating/cooling. Assume top thin layer is rapidly cooled from T_1 to T_2 , the stress generated is:

$$\sigma = -E\alpha(T_1 - T_2) \quad (4.2)$$

The rate of heating is characterised by the Biot number,

$$Bi = \frac{hH}{k} \quad (4.3)$$

In contrast to small temperature changes, a hot shock is not the same as a cold shock since the highest stress occurs in different locations. Rapid cooling and heating is used to generate a stress in safety glass that causes it to fracture catastrophically (and safely).


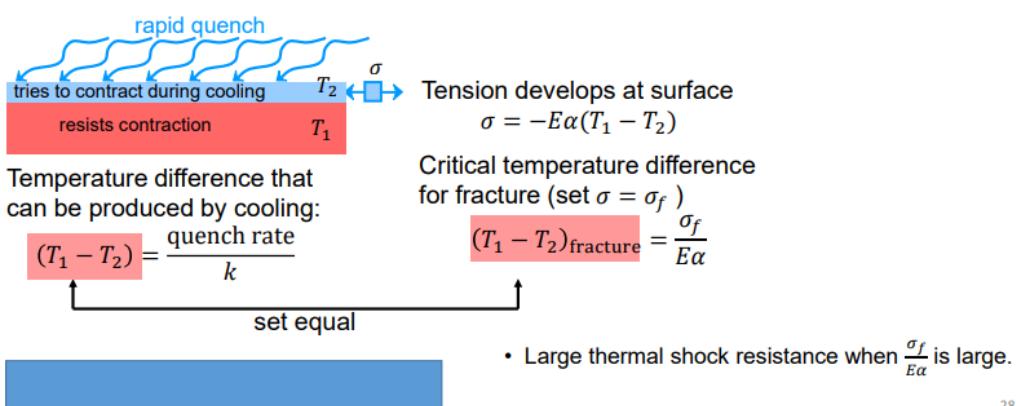


Figure 4.13: Rapid changes in temperature characterised.

4.5.1 Thermal shock

Thermal shock occurs when a thermal gradient causes different parts of an object to expand by different amounts. This differential expansion can be understood in terms of stress or of strain, equivalently. At some point, this stress can exceed the strength of the material, causing a crack to form. If nothing stops this crack from propagating through the material, it will cause the object's structure to fail (read Lu & Fleck 1998).

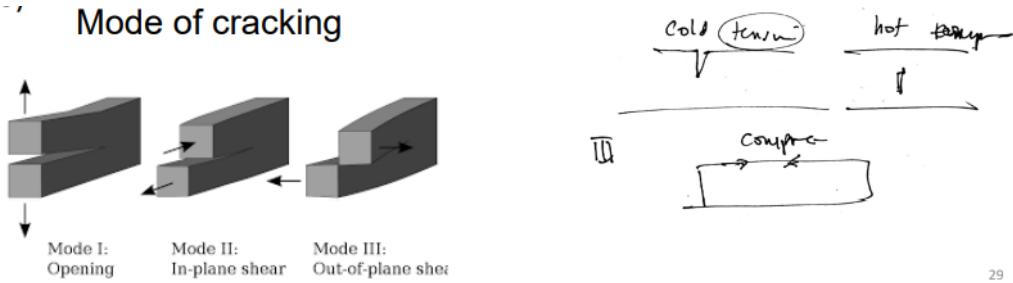

29

Figure 4.14: Thermal shock.

4.5.2 Stress criterion

The usual measure is the thermal shock resistance parameter:

$$TSR = \frac{\sigma_f k}{E\alpha} \quad (4.4)$$

where:

- σ_f is fracture strength of a material
- α is the expansivity
- k is the thermal conductivity of material
- E is Young's modulus of elasticity

When $TSR >$ critical value, there is a failure. The stress distribution in a thin sheet is:

$$\sigma_{xx} = -E\alpha(T - T_i) + \frac{E\alpha}{2H} \int_{-H}^H (T - T_i) dz \quad (4.5)$$

Kingery (1995) derived two relations.

$$R = \frac{\sigma_f (1 - v)}{E\alpha} \quad (4.6)$$

Useful for instantaneous change in surface temperature (infinite h).

$$R' = \frac{\sigma_f (1 - v) k}{E\alpha} \quad (4.7)$$

Relatively low Biot modulus. For constant heating:

$$R' = \frac{\sigma_f (1 - v) a}{E\alpha} \quad (4.8)$$

Where a is the thermal diffusivity.

4.5.3 Strain criterion

One way to look at for brittle materials is to define:

$$\theta = \frac{\epsilon_c}{\alpha} \quad (4.9)$$

where ϵ_c is the critical strain for failure. This is appropriate for a uniform temperature and high conductivity. If this is not available, then we would use:

$$\epsilon_c = \frac{\sigma_u}{E} \quad (4.10)$$

Reducing failure from shocking

Failure due to thermal shock can be prevented by reducing the thermal gradient seen by the object, by changing its temperature more slowly or increasing the material's thermal conductivity (k).

- Reducing the material's coefficient of thermal expansion (α)
- Increasing its strength (σ_f)
- Introducing built-in compressive stress, as for example in tempered glass
- Decreasing its Young's modulus (E)
- Increasing its toughness, by crack tip blunting (i.e., plasticity or phase transformation) or crack deflection (smaller cracks)

4.5.4 Fraction criterion

Hasselman (1969) developed a unified theory of thermal shock for brittle ceramics. It was 'unified' in the sense that the conditions for the fracture initiation were combined with a consideration of crack propagation. For an infinitely fast quench, from a higher temperature, a thermal stress, σ_{TS} , is generated in the ceramic and is given by:

$$\sigma_{TS} = \frac{\alpha E \Delta T}{(1 - 2v)} \quad (4.11)$$

where E is the Young's modulus, ΔT is the difference in temperature between the initial temperature of the ceramic and the quenching medium, α is the coefficient of linear thermal expansion and v is the Poisson's ratio.

Mechanical model is based on an energy argument. For Griffith microcracks (N per unit volume), spread uniformly in the material,

$$W_t = \frac{3(\alpha \Delta T)^2 E}{2(1 - 2v)} \left(1 + \frac{16(1 - v^2) N l^3}{9(1 - 2v)} \right)^{-1} + 2\pi N l^2 G \quad (4.12)$$

where l is the crack length and $2\pi N l^2 G$ is the energy associated with circular crack of radius l . According to Griffith, the limit of the cracks that are unstable are those where:

$$\frac{dW_t}{dl} = 0 \quad (4.13)$$

Energy of a crack is:

$$\int \sigma d\epsilon = \frac{3\sigma^2}{2\epsilon} \quad \epsilon = \alpha \Delta T \quad (4.14)$$

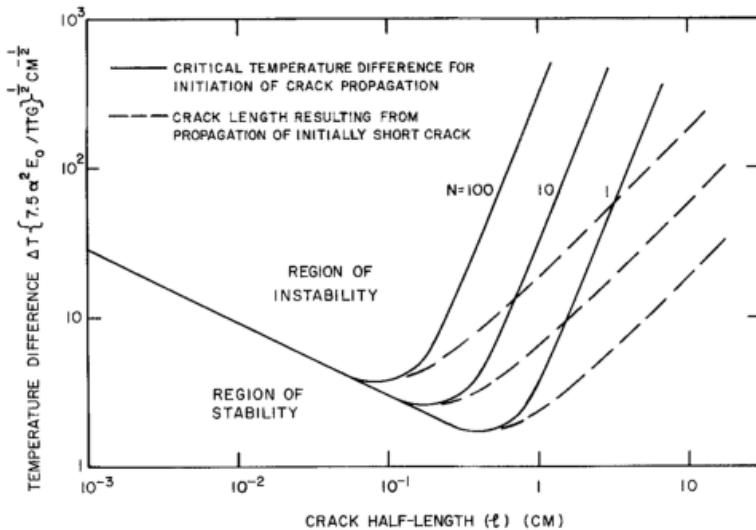


Figure 4.15: Crack lengths against temperature difference.

For short cracks:

$$\Delta T_c = \sqrt{\frac{\pi G (1 - 2v)^2}{2E_0 \alpha^2 (1 - v^2) l}} \quad (4.15)$$

For long cracks:

$$\Delta T_c = \sqrt{\frac{128\pi G (1 - v^2) N^2 l^5}{81\alpha^2 E_0}} \quad (4.16)$$

The results can be expressed in terms of the critical fracture stress:

$$S_t = \sqrt{\frac{GE_0}{2l_0 (1 - v^2)}} \quad (4.17)$$

The dimensionless group is:



$$\frac{S_t}{\sqrt{GE}} \quad (4.18)$$

The temperature difference inside the material is:

$$\Delta T_i \sim \Delta T \frac{k}{ah} \quad (4.19)$$

Then:

$$\frac{\alpha \Delta T E k \sqrt{l}}{ha \sqrt{\pi G E}} \sim 1 \quad (4.20)$$

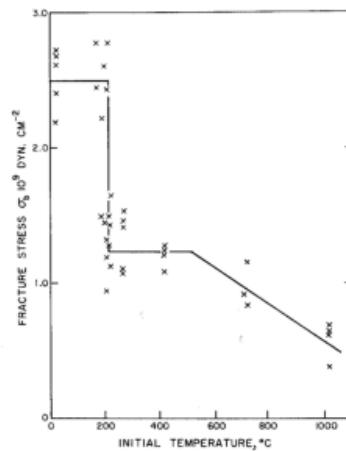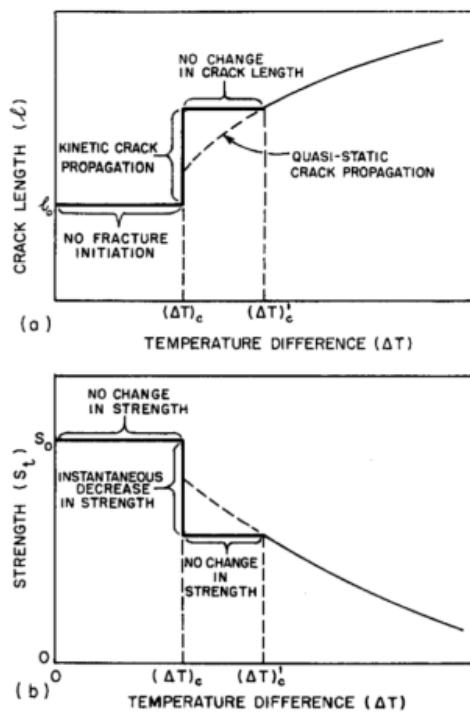

Strength at room temperature of 5mm diameter alumina rod subjected to thermal shock by quenching.

Below critical value, no change in crack length. Above critical value, fracture initiated and grow to another length. Hence a jump in the fracture strength.

38

Figure 4.16: Crack lengths , temperature difference, strength and fracture stress.

4.5.5 Material selection

Among the best thermomechanical materials, there are alumina, zirconia, tungsten alloys, silicon nitride, silicon carbide, boron carbide, and some stainless steels. Reinforced carbon-carbon is extremely resistant to thermal shock, due to graphite's extremely high thermal conductivity and low expansion coefficient, the high strength of carbon fibre and a reasonable ability to deflect cracks within the structure.

4.6 Conclusions

The influence of large changes in temperature can be exploited to change the properties of materials and as part of a manufacturing process. In some instances, sudden changes in temperature, can lead to failure either through a yield, strain or cracking. There are approximate models of these processes.

Chapter 5

Low Temperature Environments

5.1 Introduction

- Low temperature: -273°C , -150°C
- Mechanical challenges - rapid heating / increasing gas pressure
 - Failure / fatigue
- Most low temperature - rise at atmospheric pressure
 - Small volumes
- Through design - challenge becomes managing the thermal component not the mechanical
- Health & Safety - dense / cold gas moves quickly and can suffocate people

Gas	Freezing temperature
CO ₂	-78.5°C (sublimates)
Nitrogen	-196°C
LNG	-161.5°C

Table 5.1: Freezing temperatures of various gases.

The energy density of LNG is comparable to propane and ethanol but is only 60 percent that of diesel and 70 percent that of gasoline.



Figure 5.1: LNG carrier.

An LNG carrier is a tank ship designed for transporting liquefied natural gas. At the end of 2016, the global LNG shipping fleet consisted of 439 vessels. Majority of ships have a capacity of 120 000-140 000 m³.

Alloy	TYPE	APPLICATION
9Ni	9% Ni steel	Storage tanks
304L	Stainless steel type AISI 304L	Piping; Small vessels. Some designs of large storage tanks.
36NiFe	Low expansion, 36%Ni-Fe alloy	Some large storage tank designs. Piping in critical applications.
Al	Aluminium alloy type 5083 (Al-4.5%Mg) Alloy 5154 (Al-3.5%Mg) Alloy 6000 (Al -Si)	Spherical or prismatic storage tanks for ship transportation of LNG. Tubing for the main cryogenic heat exchanger. Forgings such as flanges.

Property	T °C	9%Ni Steel	AISI 304L Stainless Steel	36% Ni Fe Alloy	Al alloy 5083
Density, kg/m ³		7860	7900	8120	2660
Elastic Modulus E, GPa	+20 -196	186 207	193 205	148 138	70 81
Thermal Conductivity, W/m°C	+20 -196	28.5 13.0	13.4-15.1 9	10.5 5.7	117
Mean Coefficient of thermal expansion, α , 10 ⁻⁶ /°C	0 to -196	9.5	14.4 – 15 (at 0°C) 11.7 - 13.5 (at -196°C)	1.5	17.5
Theoretical thermal stress in contracting a rigid length from 0 to -163°C, MPa $\sigma = E\epsilon = E \alpha \Delta T = 163 E \alpha$		304	440	34	228
Theoretical thermal stress in contracting a rigid length from 0 to -163°C, MPa as a percentage of yield strength		51-69%	176%	12.6%	157%

Table 5.2: Tables to show material properties of storage tanks.

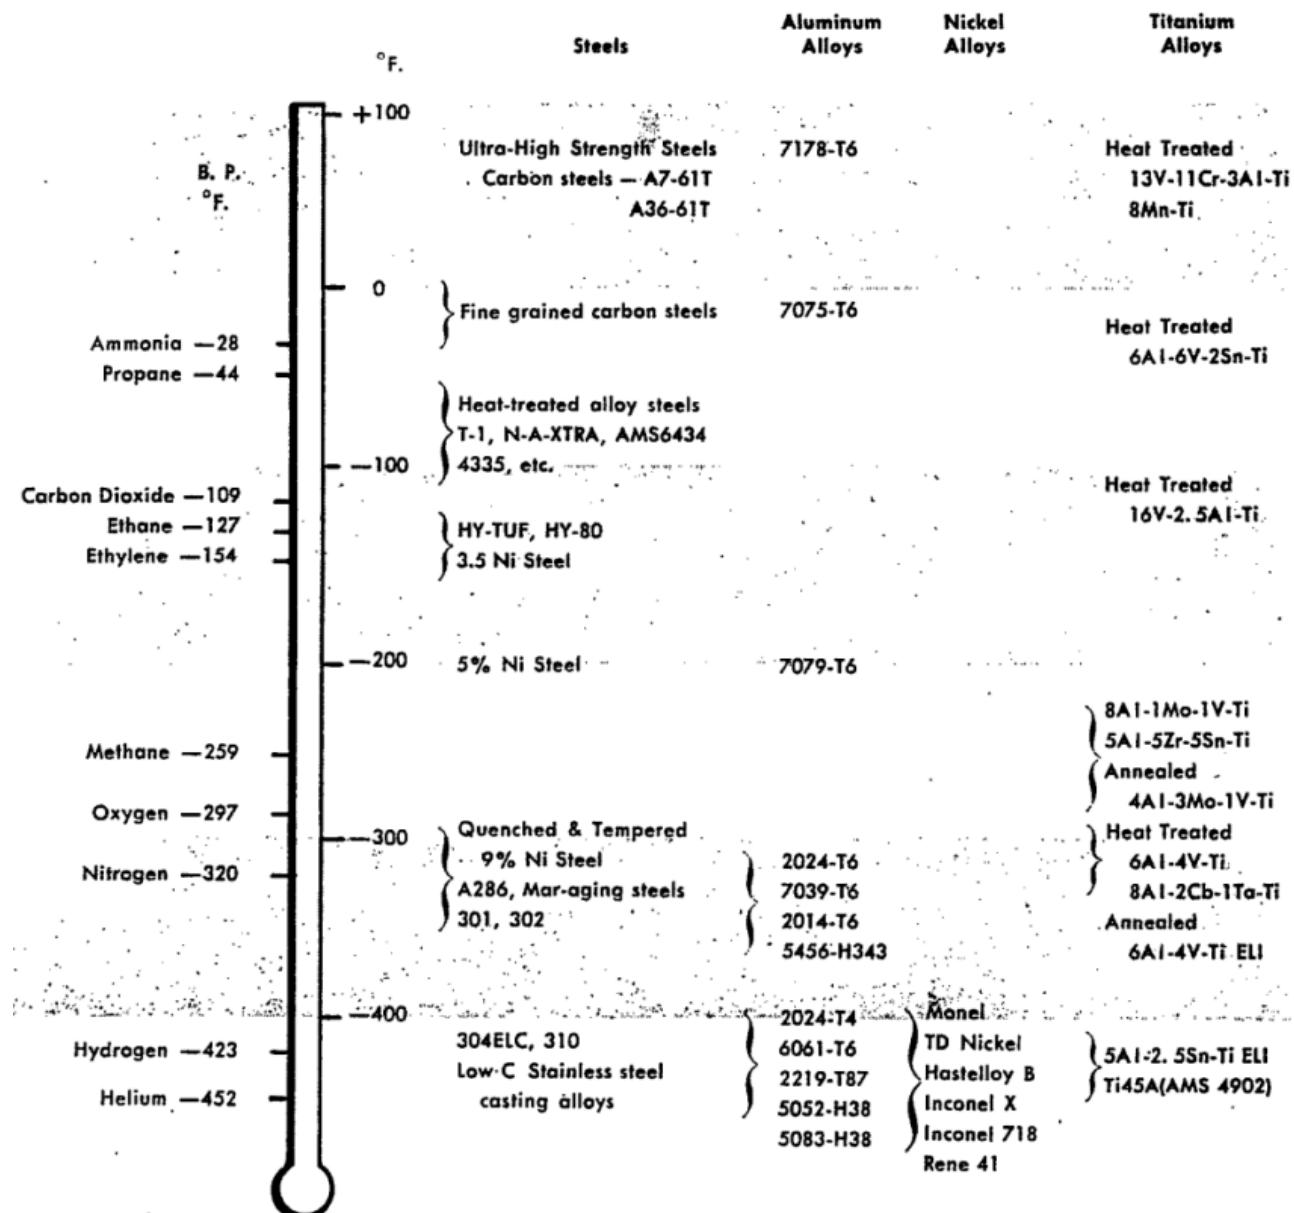


Table 5.3: Table to show materials used to store different low temperature materials.

5.2 Engineering applications

5.2.1 LNG - liquefied natural gas

Methane, CH₄ (with some ethane). 1/6000th the volume of natural gas in the gaseous state (at standard condition for temperature and pressure). It is odourless, colourless, non-toxic and non-corrosive. Hazards include flammability after vaporisation into a gaseous state, freezing and asphyxia. The liquefaction process involves removal of certain components, such as dust, acid gases, helium, water and heavy hydrocarbons, which could cause difficulty downstream. The natural gas is then condensed into a liquid at close to atmospheric pressure by cooling it to approximately -162 °C. Maximum transport pressure is set at around 25 kPa.

5.2.2 Cryogenic transport

Transfer lines are a form of cryostat. Used to transport cryogenic fluids between cryogenic devices. Simplest form is a vacuum jacketed pipe connecting two flasks. Heat is absorbed by the liquid (nitrogen) and as the pipe

gets longer, more heating occurs and more vapour generated (which is lost). Higher pressure differential, more heating occurs. The most important design elements are:

- Geometry
- Mass flow rate
- Temperature and pressure change
- Cryogenic fluid
- Mechanical properties of the materials

5.3 Thermal bowing

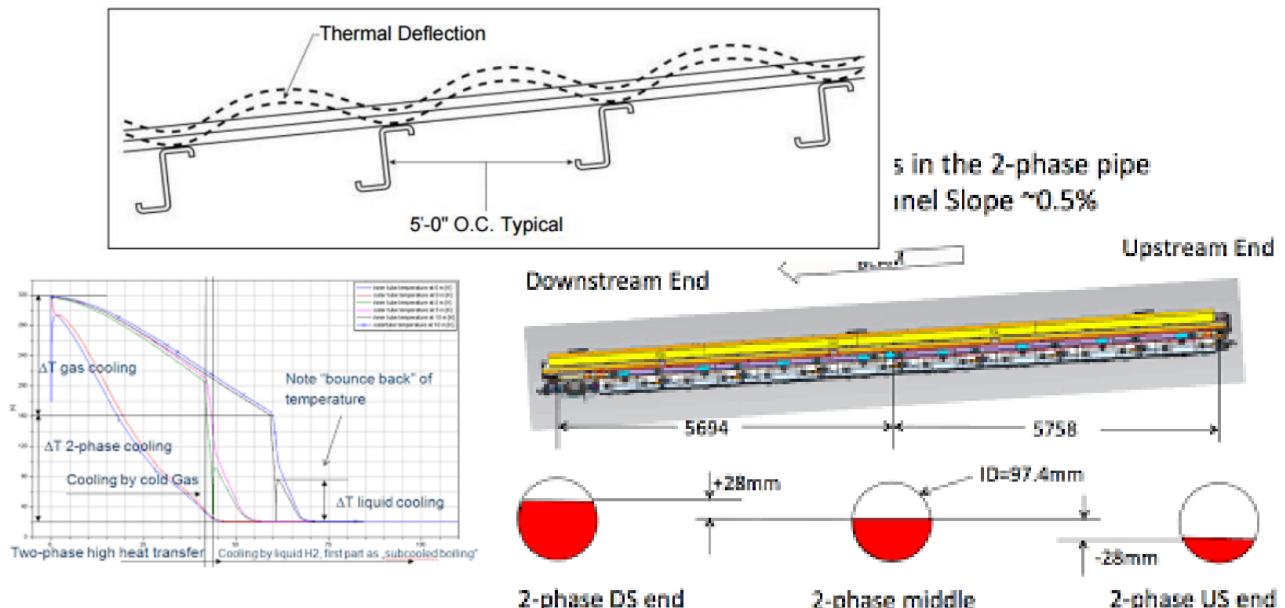


Figure 5.2: Thermal bowing.

Laterial variation of temperature

Thermal bowing occurs due to two processes:

1. Restrained thermal expansion
2. Temperature gradient across pipe

Assuming no mean temperature increase:

$$\Delta T = 0 \quad (5.1)$$

Thermal Bowing with ends restrained against rotation



Figure 5.3: Fixed end beam subjected to a uniform thermal gradient.

Uniform moment over the length:

$$M = EI\phi = EI\alpha T_{,y} \quad (5.2)$$

Thermal Bowing with ends restrained against translation

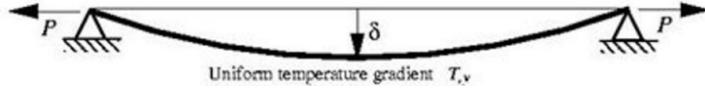


Figure 5.4: Laterally restrained beam subjected to a uniform thermal gradient.

A tensile force P will be generated causing a tensile $P - \delta$ moment Py over the length of the beam,

$$\frac{d^2 y}{dx^2} = \phi + \frac{Py}{EI} \quad (5.3)$$

or

$$\frac{d^2 y}{dx^2} - k^2 y = \phi \quad (5.4)$$

where,

$$K = \sqrt{\frac{P}{EI}} \quad (5.5)$$

The solution of this equation is,

$$y(x) = -\frac{\phi}{k^2} \left(\frac{\cosh(kl) - 1}{\sinh(kl)} \sinh(kx) \cosh(kx) + 1 \right) \quad (5.6)$$

Derivation

The derivation starts with the point that the displacement is:

$$u = f(x) + yf_1(x) + zf_2(x) \quad (5.7)$$

The longitudinal strain is

$$\epsilon_{xx} = \frac{\partial u}{\partial x} = f'(x) + yf'_1(x) + zf'_2(x) \quad (5.8)$$

The stress field is

$$\sigma_{xx} = E(\epsilon_{xx} - \alpha T) \quad (5.9)$$

The equilibrium constraints are

$$\int \sigma dA = 0 \quad (5.10)$$

$$\int \sigma y dA = 0 \quad (5.11)$$

$$\int \sigma z dA = 0 \quad (5.12)$$

The geometrical constraint is

$$\int y dA = \int z dA = 0 \quad (5.13)$$

Cross-pipe variation of temperature:

$$\sigma_{xx} = -\alpha E(T - \bar{T}) + \frac{I_y M_{Tz} - I_{yx} M_{Ty}}{I_y I_z - I_{yz}^2} y + \frac{I_y M_{Tz} - I_{yx} M_{Ty}}{I_y I_z - I_{yz}^2} z \quad (5.14)$$

where

$$I_z = \int y^2 dA \quad (5.15)$$

$$I_y = \int z^2 dA \quad (5.16)$$

$$I_{yz} = \int yz dA \quad (5.17)$$

$$M_{Ty} = \int \alpha ETz dA \quad (5.18)$$

$$M_{Tz} = \int \alpha ETy dA \quad (5.19)$$

For a pipe

$$\sigma_{xx} = -\alpha E (T - \bar{T}) + \frac{M_{Tz}}{I_y} y \quad (5.20)$$

For the lateral displacement

$$\frac{d^2 v}{dx^2} = -\frac{M_{Tz}}{EI_z} \quad (5.21)$$

$$\frac{d}{dx^2} \left(EI_z \frac{d^2 v}{dx^2} \right) + \frac{d^2 M_{Tz}}{dx^2} = F \quad (5.22)$$

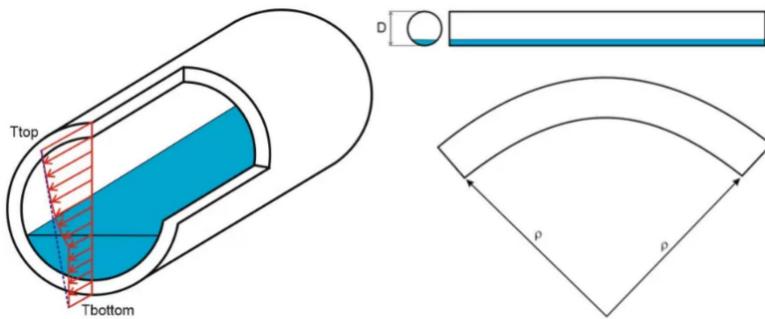


Figure 5.5: Cross-section of pipe.

5.4 Phase change transition

NG Rapid Phase Transitions (RPT). Rapid changes in phase due to temperature leads to enormous fluid impulse. This causes problems with the piping network. Rapid phase changes leads to a fluid impulse and often regarded as a water hammer. This phenomenon is well known in the context of steam (from the 19th century) - leading it to be called the steam hammer.

In a steam system, a water hammer most often occurs when some of the steam condenses into water in a horizontal section of the piping. The rest of the steam picks up the water, forming a “slug”, and hurls this at high velocity into a pipe fitting, creating a loud hammering noise and greatly stressing the pipe. This condition is usually caused by a poor condensate drainage strategy: having more condensate in the pipe makes the slug easier to form. Vacuum caused by condensation from the thermal shock can also cause a steam hammer. Steam hammers can be avoided by using sloped pipes and installing steam traps. Where air-filled traps are used, these eventually become depleted of their trapped air over a long period through absorption into the water. This can be cured by shutting off the supply, opening taps at the highest and lowest locations to drain the system (thereby restoring air to the lowest traps), and then closing the taps and re-opening the supply.

5.5 LNG transport

The various stages need to be analysed. The first is the transport in the pipe. The second is the filling the space. The third is the environmental challenges - phase change water hammer.

Moss tanks

Named after the company that designed them, the Norwegian company Moss Maritime, the spherical IMO type B LNG tanks are spherical in shape. Most Moss type vessels have four or five tanks.

The outside of the tank has a thick layer of foam insulation that is either fitted in panels or in more modern designs, wound round tank. Over this insulation is a thin layer of “tinfoil” which allows the insulation to be kept dry with a nitrogen atmosphere. This atmosphere is constantly checked for any methane that would indicate a leak of the tank. Also the outside of tank is checked at three month intervals for any cold spots that would indicate breakdown in the insulation.

The tank is supported around its circumference by the equatorial ring which is supported by a large circular skirt which takes the weight of the tank down to the ships structure. This skirt allows the tank to expand and contract during cool-down and warm-up operations. During cool-down or warm-up, the tank can expand or contract about 60 cm. Because of this expansion and contraction all piping into the tank comes in the top and is connected to the ships lines via flexible bellows.

Inside each tank there is a set of spray heads. These heads are mounted around the equatorial ring and are used to spray liquid LNG onto the tank walls to reduce the temperature.

Tanks normally have a working pressure of up to 22 kPa, but this can be raised for an emergency discharge. If both main pumps fail then to remove cargo, the tank's safety valves are adjusted to lift at 1 bar. Then the filling line which goes to the bottom of the tank is opened along with the filling lines of the other tanks on board. The pressure is then raised in the tank with the defective pumps which pushes the cargo into the other tanks where it can be pumped out.

TGZ Mark III

Designed by Technigaz, these tanks are of the membrane type. The membrane consists of stainless steel with ‘waffles’ to absorb the thermal contraction when the tank is cooled down. The primary barrier, made of corrugated stainless steel of about 1.2 mm thickness is the one in direct contact with the cargo liquid (or vapour in the empty tank condition). This is followed by a primary insulation which in turn is covered by a secondary barrier made of a material called ‘triplex’ which is basically a metal foil sandwiched between glasswool sheets and compressed together. This is again covered by a secondary insulation which in turn is supported by the ship’s hull structure from the outside.

From the inside of the tank outwards, the layers are:

1. LNG
2. Primary barrier of 1.2 mm thick corrugated / waffled 304L stainless steel
3. Primary insulation (also called the interbarrier space)
4. Secondary barrier within the triplex membrane
5. Secondary insulation (also called the insulation space)
6. Ship’s hull structure

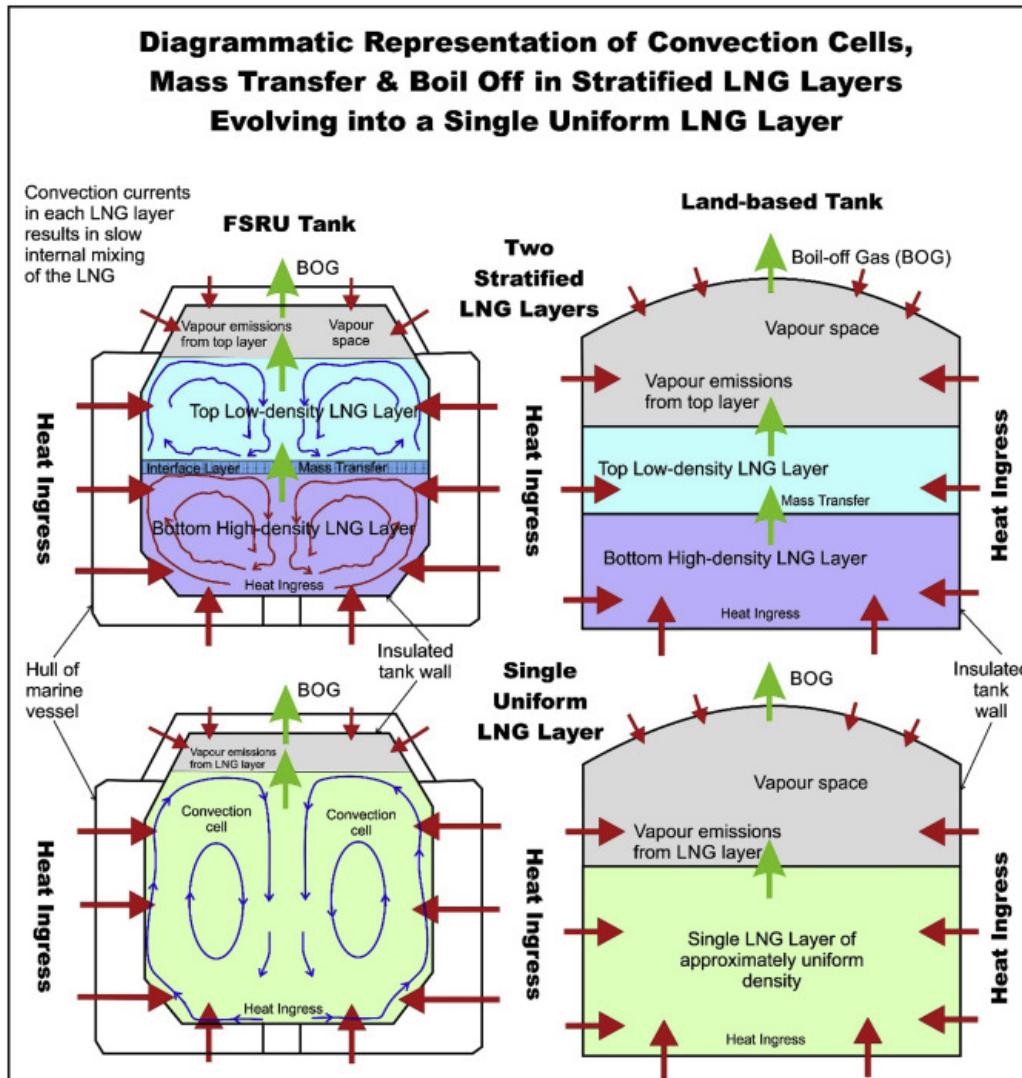


Figure 5.6: LNG rollover.

LNG “rollover” refers to the rapid release of LNG vapours from a storage tank caused by stratification. The potential for rollover arises when two separate layers of different densities (due to different LNG compositions) exist in a tank. In the top layer, liquid warms up due to heat leakage into the tank, rises up to the surface, where it evaporates. Thus light gases are preferentially evaporated and the liquid in the upper layer becomes denser. This phenomenon is called “weathering”. In the bottom layer, the warmed liquid rises to the interface by free convection but does not evaporate due to the hydrostatic head exerted by the top layer. Thus the lower layer becomes warmer and less dense. As the density of two layers approach each other, the two layers mix rapidly, and the lower layer which has been superheated gives off large amount of vapour as it rises to the surface of the tank.

Reduction of explosion risk

Tanks are filled via a series of stages

1. Flush tank with CO₂ from the exhaust. This is because LNG and air mixture is flammable
2. Fill with LNG at ambient temperature and pressure
3. Vessel goes into port to “gas-up” and “cool-down”, as one still cannot load directly into the tank: the CO₂ will freeze and damage the pumps and the cold shock could damage the tank’s pump column

4. LNG is brought onto the vessel and taken along the spray line to the main vaporiser, which boils off the liquid into gas. This is then warmed up to roughly 20°C in the gas heaters and then blown into the tanks to displace the “inert gas”. This continues until all the CO_2 is removed from the tanks. Initially the IG (inert gas) is vented to atmosphere. Once the hydrocarbon content reaches 5% (lower flammability range of methane) the inert gas is redirected to shore via a pipeline and manifold connection by the HD (high duty) compressors. This shore terminal then burns this vapour to avoid the dangers of having large amounts of hydrocarbons around which may explode
5. Now the vessel is gassed up and warm. The tanks are still at ambient temperature and are full of methane
6. The next stage is cool-down. LNG is sprayed into the tanks via spray heads, which vaporises and starts to cool the tank. The excess gas is again blown ashore to be re-liquefied or burned at a flare stack. Once the tanks reach about -140°C the tanks are ready to load bulk
7. Bulk loading starts and liquid LNG is pumped from the storage tanks ashore into the vessel tanks. Displaced gas is blown ashore by the HD compressors. Loading continues until typically 98.5% full is reached (to allow for thermal expansion / contraction of cargo)
8. The vessel can now proceed to the discharge port. During passage, various boil-off management strategies can be used. Boil-off gas can be burned in boilers to provide steam for propulsion, or it can be re-liquefied and returned to the cargo tanks, depending on the design of the vessel

Above ground full containment LNG tank design

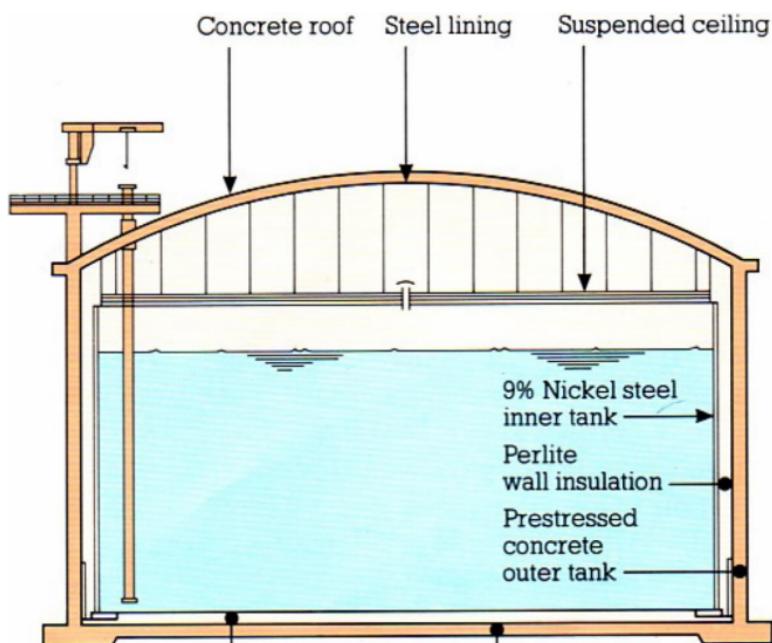


Figure 5.7: Above ground full containment LNG tank design.

- Pre-stressed concrete outer walls constructed by slipforming, sheathed internally with a gas-tight layer of nickel-alloyed steel
- Inner tank in nickel-alloyed steel, separated from the outer walls by a layer of perlite - a variety of volcanic obsidian highly suitable for insulation
- Extra layer of steel and insulation at the transition between outer wall and tank bottom to protect it against strong local stresses should the inner tank begin to leak
- Heating cables under the tanks will ensure that ground remains above 0°C in order to prevent frost heaving

Rollover

Rollover is a phenomenon that can occur when LNG at different density / temperature is filled into a storage tank. LNG composition, density and temperature will change during boil-off gas. If not mixed, a high density liquid will settle below the lower density liquid. During heat leakage and evaporation, the density of the upper level of liquid can become higher than the lower level of liquid and a sudden rollover with mixing of the liquids may occur giving sudden evaporation and pressure build up, which can lead to tank rupture. In 1971, a rollover incident happened at the La Spezia LNG import terminal in Italy and damaged the tank roof. No ignition happened. Receiving terminals now have procedures to mix old and new LNG during filling. LNG tanks have rollover protection systems which include distributed temperature sensors and pump-around mixing systems.

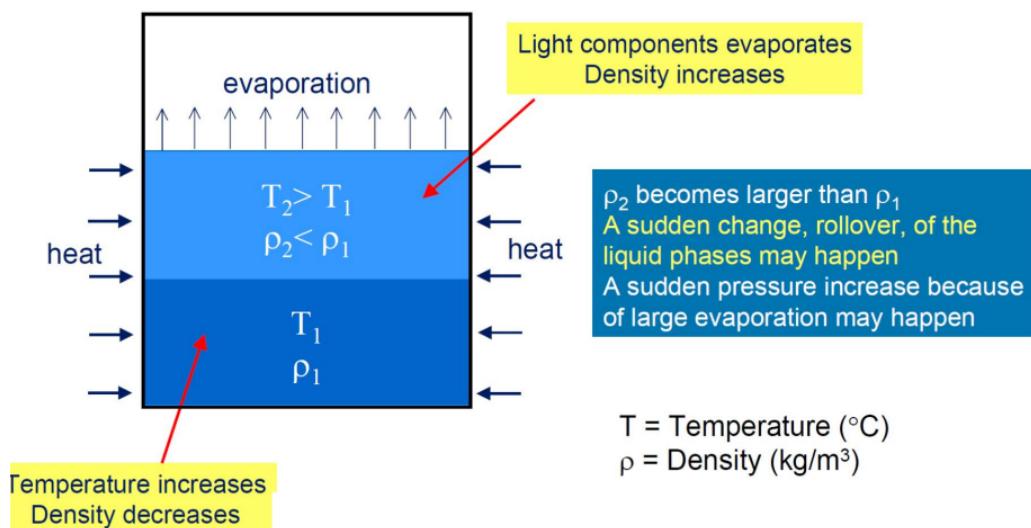


Figure 5.8: Mechanics of rollover in LNG tanks.

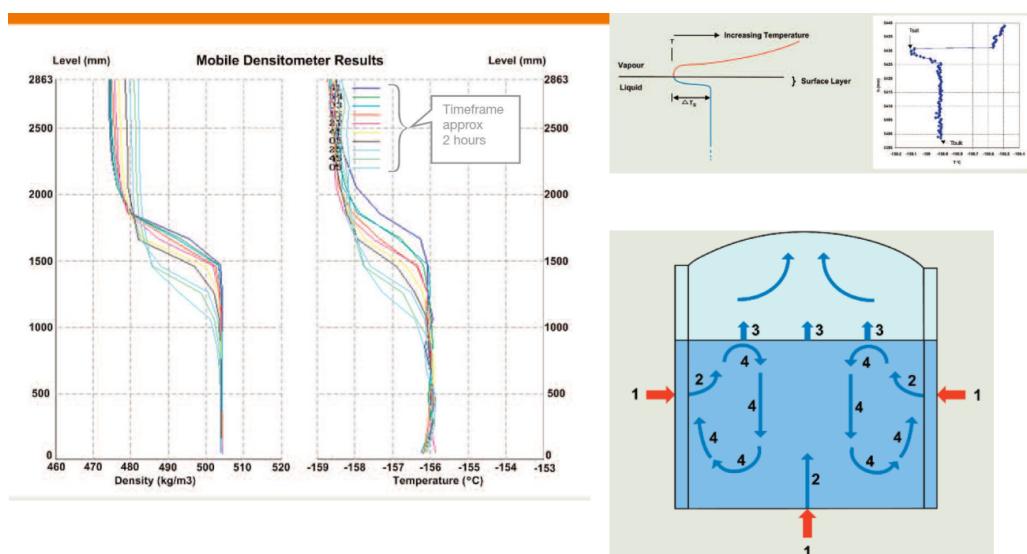


Figure 5.9: Measurement of LNG density in tank.

5.6 Sub 4K refrigeration system

Cooling using a refrigeration system. Also can use paramagnetic materials. Helium is expensive so everything is recovered. Usually He is delivered at 4.5 K 3 bar. 2 K helium is produced by a cryogenic device. Issue to do with pressure for a helium transport.

Transfer lines

Cryogenic transfer lines are modular. They usually consist of multichannel components.

1. Thermal shield
2. External envelope
3. Vacuum barrier
4. Sliding support
5. Fixed supports

Both process and external envelope contain internal bellows to account for the shrinkage of pipes.

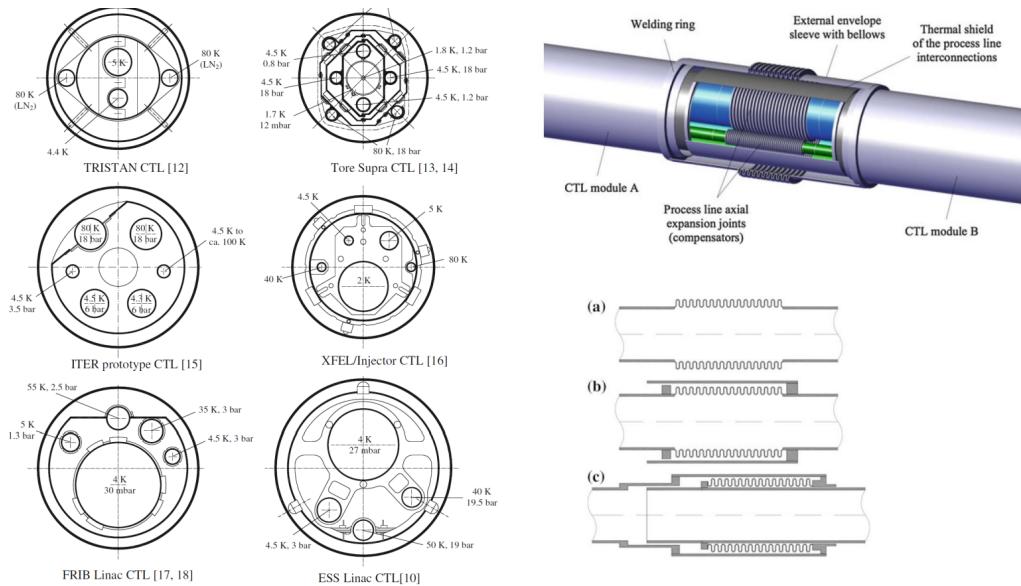


Figure 5.10: Cryogenic transfer line cross-section and sliding support mechanism.

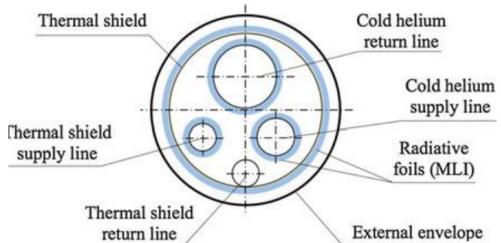


Figure 5.11: Cryogenic transfer line components.

Pipe	Size	Diameter and thickness	Design pressure (bara)	Operating pressure (bara)	Operating temperature (K)
4.5 K supply	DN50	60.3 mm × 2 mm	20	3.5	4.5–6
4.5 K return	DN80	88.9 mm × 2.3 mm	20	1.2	4.5
40 K supply	DN40	48.3 mm × 2 mm	20	17	40
80 K return	DN40	48.3 mm × 2 mm	20	16.7	80
Thermal shield	NA	300 mm × 4 mm	NA	NA	80
Vacuum jacket	DN400	406.4 mm × 4.78 mm	1.5	-1	300

Table 5.4: Sizes and operating conditions of the process lines, thermal shield and vacuum jacket.

SS304

Type 304 stainless steel is a T 300 Series Stainless Steel austenitic. It has a minimum of 18% chromium and 8% nickel, combined with a maximum of 0.08% carbon. It is defined as a Chromium-Nickel austenitic alloy. Grade 304 is the standard “18/8” stainless that you will probably see in your pans and cookery tools. These are some of its characteristics:

- Forming and welding properties
- Corrosion / oxidation resistance thanks to chromium content
- Deep drawing quality
- Excellent toughness, even down to cryogenic temperatures, which are defined as very low temperatures
- Low temperature properties responding well to hardening by cold working
- Ease of cleaning, ease of fabrication, beauty of appearance
- Grade 304L is the low carbon version of 304. It does not require post-weld annealing and so is extensively using heavy gauge components (over about 6 mm)
- Grade 304H with its higher carbon content finds application at elevated temperatures

Part IV

Extreme Corrosion

Chapter 6

Corrosion Classification

6.1 Extreme environments

We study the influence of slow and fast chemistry on structures. Mediated through chemistry that occurs on the surface of materials. This is generally through electrochemical processes that are generally associated with corrosion. Corrosion covers a vast area of material science so we must first go through some of the key electrochemical processes which we cover in this lecture. We are generally interested in the long term view.

6.2 Corrosion

Corrosion is defined as the conversion of metal to a more chemically stable form by chemical and / or electrochemical reaction with their environment. Metals are susceptible because they are good conductors. Corrosion degrades the useful properties of material and structures including strength.

6.2.1 Corrosion is similar to a battery

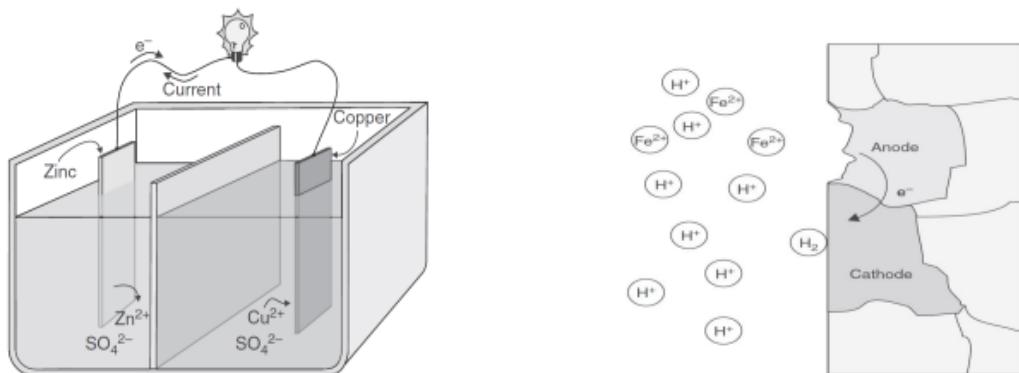



Figure 6.1: Corrosion mechanism compared to battery.

This requires an exchange and so only occurs when there are differences. This is classified as either:

1. Two different metals in the same liquid
2. Two different liquids with the same metal

To understand how to stop corrosion, we will have two choices - either coat materials or understand why reaction occurs. First step is to understand the basics of electrochemistry - chemistry is an exchange of electrons. If something is oxidised then something else must be reduced. Reactivity depends what is in the aqueous mixture in contact with the metal.



6.2.2 Electrode potentials

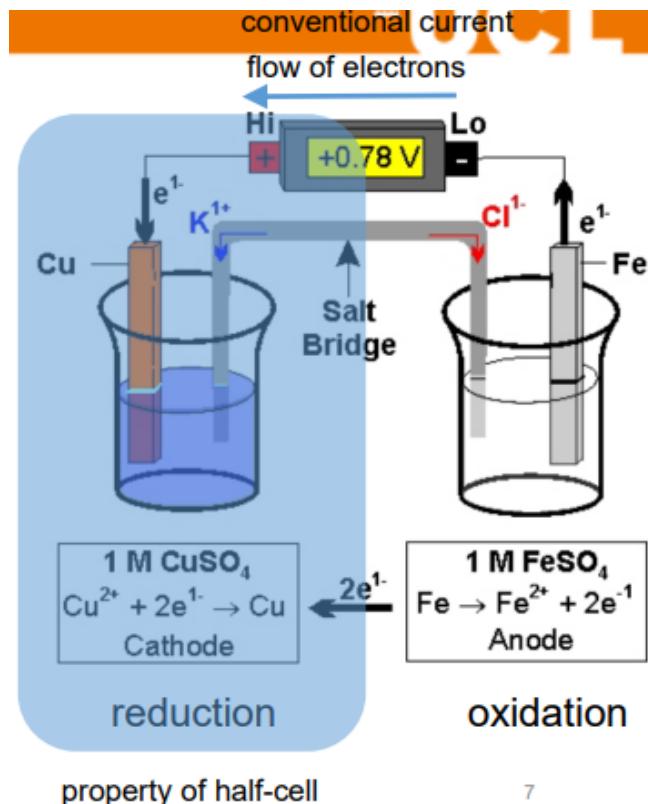

7

Figure 6.2: Copper reduction and iron oxidation setup in galvanic cell.

If the iron and copper electrodes are connected electrically, reduction will occur for copper at the expense of the oxidation of iron. Cu²⁺ ions will deposit (electrodeposit) as metallic copper on the copper electrode, while iron dissolves (corrodes) on the other side of the cell and goes into solution.

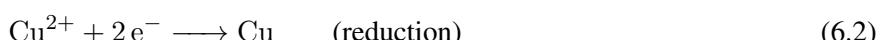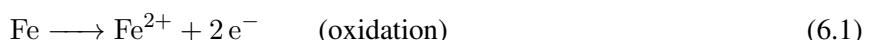

6.2.3 Salt bridge

A salt bridge is used to connect the oxidation and reduction half-cells of a galvanic cell (voltaic cell), a type of electrochemical cell. It maintains electrical neutrality within the internal circuit, preventing the cell from reaction. Salt bridges usually come in two types:

1. Glass tube - U-shaped glass tube filled with a relatively inert electrolyte; usually potassium chloride or sodium chloride is used (agar is often used as a gelification agent), although Figure 6.2 here illustrates the use of a potassium nitrate solution. The conductivity of the glass tube bridge depends mostly on the concentration of the electrolyte solution. An increase in concentration below saturation increases conductivity. Beyond-saturation electrolyte content and narrow tube diameter may both lower conductivity
2. Filter paper - the other type of salt bridge consists of filter paper, also soaked with a relatively inert electrolyte, usually potassium chloride or sodium chloride because they are chemically inert. No gelification agent is required as the filter paper provides a solid medium for conduction. Conductivity of this kind of salt bridge depends on a number of factors: the concentration of the electrolyte solution, the texture of the filter paper and the absorbing ability of the filter paper. Generally smoother texture and higher absorbency equates to higher conductivity

6.2.4 Electrochemical considerations

Oxidation reaction

Metal atoms characteristically lose or give up electrons in what is called an oxidation reaction.



where n is valence (number of valent electrons). the site at which oxidation takes place is called the anode. Oxidation is sometimes called an anodic reaction. Example:



Reduction reaction

The electrons from each oxidised metal atom must be transferred to and become a part of another chemical species in what is termed a reduction reaction. In acid solutions, which have a high concentration of hydrogen ions:



$pH = -\log_{10} [H^+]$, where more H^+ results in $pH < 7$. For an acid solution having dissolved oxygen:



For a neutral or basic aqueous solution in which oxygen is dissolved:



Any metal ions present in the solution may be reduced:




The location at which reduction occurs is called the cathode. It is possible for two or more of the reduction reactions to occur simultaneously.

6.2.5 Galvanic couple

Two metals electrically connected in a liquid electrolyte wherein one metal becomes an anode and corrodes while the other acts as a cathode.

The question is which one corrodes. An electric potential or voltage will exist between the two cell halves, and its magnitude can be determined if a voltmeter is connected in the external circuit. Various electrode pairs have different voltages; the magnitude of such a voltage may be thought of as representing the driving force for the electrochemical oxidation-reduction reaction.

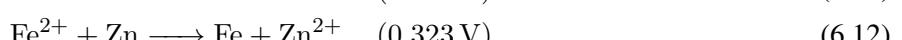

Standard half cell: a half-cell of a metal electrode immersed in a 1 M solution of ions and at 25 °C. To understand reaction, we have to look at one half of the electrochemical cell or half-battery, specifically when one half of the battery is a standard form.

6.3 Standard hydrogen reference probe

It consists of an inert platinum electrode in a 1 M solution of H^+ ions, saturated with hydrogen gas that is bubble through the solution at a pressure of 1 atm and a temperature of 25 °C.

Standard electromotive force (emf) series. It is generated by coupling to the standard hydrogen electrode, standard half-cells for various metals and ranking them according to the measured voltage. This tells us the potential for reaction but not the rate.

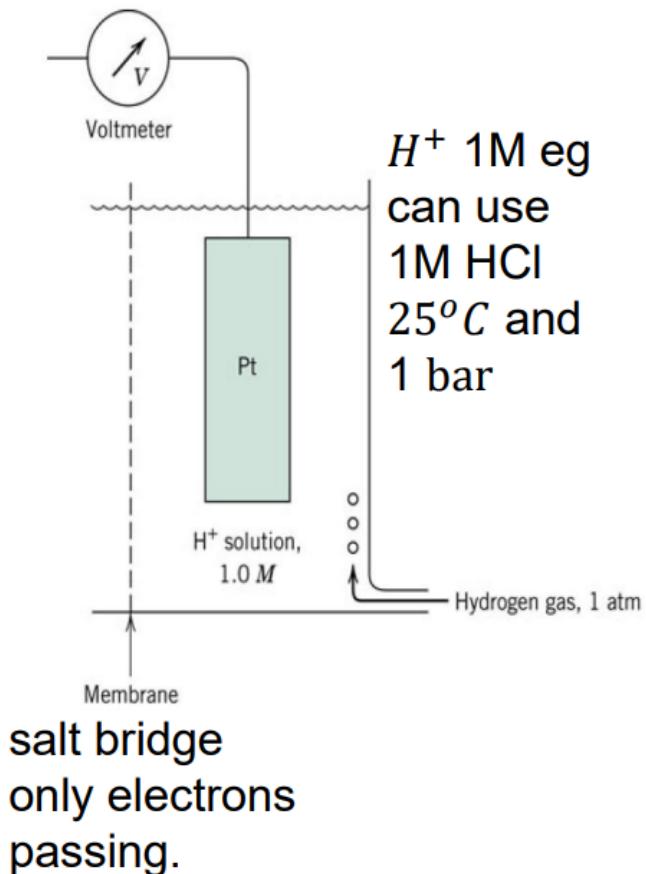


Figure 6.3: Standard hydrogen reference probe.

6.3.1 Standard emf series

	Electrode reaction (reduction)	Standard electrode potential V^0 (V)
Reduction (cathode)	$Au^{3+} + 3 e^- \longrightarrow Au$	+1.420
	$O_s + 4 H^+ + 4 e^- \longrightarrow 2 H_2O$	+1.229
	$Pt^{2+} + 2 e^- \longrightarrow Pt$	+1.200
	$Fe^{3+} + e^- \longrightarrow Fe^{2+}$	+0.771
	$Cu^{2+} + 2 e^- \longrightarrow Cu$	+0.340
	$Fe^{2+} + 2 e^- \longrightarrow Fe$	-0.440
	$Zn^{2+} + 2 e^- \longrightarrow Zn$	-0.763
	$Na^+ + e^- \longrightarrow Na$	-2.714
Oxidation (anode)	$K^+ + e^- \longrightarrow K$	-2.924

Table 6.1: Table to show standard emf series. Increasingly inert to increasingly reactive from top to bottom. E.g. With Cu and Fe, Fe corrodes. With Fe and Zn, Zn corrodes.

6.4 Classification of corrosion types


Group I: Identifiable by visual inspection




Uniform corrosion



Pitting

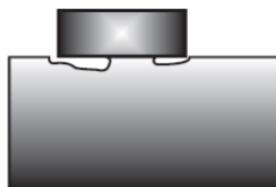


Crevice corrosion

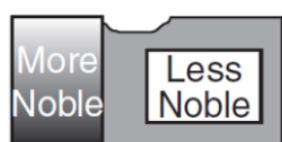

Galvanic corrosion


Group II: Identifiable with special inspection tools

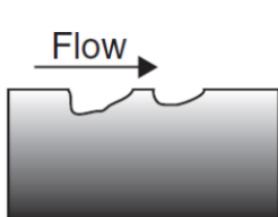


Erosion



Cavitation

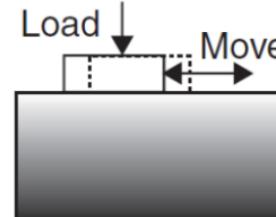

Fretting

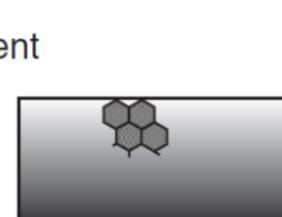

Intergranular



Exfoliation



De-alloying

Group III: Identifiable by microscopic examination

Cracking




Stress corrosion cracking

High temperature attack



Scaling

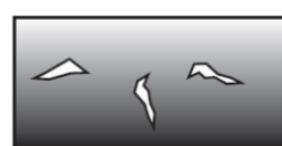

Internal attack

Figure 6.4: Classification of corrosion types.

6.4.1 Group 1: corrosion you can see

1. Uniform corrosion characterised by even, regular loss of metal from corroding surface
2. Localised corrosion during which most of metal loss occurs at discrete areas. This includes crevice corrosion, pitting
3. Galvanic corrosion occasioned by electrical contact between dissimilar conductors in an electrolyte

6.4.2 Group 2: multiple mechanisms

1. Erosion - corrosion. Usually high speed flow with particles, cavitation with bubbles near walls, friction and fretting
2. Intergranular corrosion at grain boundaries in the metal structure (grains acts a bit like local galvanic couples). Common occurrence which is called weld decay
3. Dealloying corrosion (selecting leaching) due to selective dissolution of one component of an alloy (e.g. zinc from brass alloy with O₂ and moisture, iron from cast iron)

6.4.3 Group 3: microscope corrosion viewed by microscope

1. Corrosion fatigue. Small cracks are enlarged by corrosion and fatigue which then affects the crack growth. Tensile stresses propagate the crack. Corrosion further deteriorate crack
2. High-temperature corrosion (scaling, internal attack, oxygen corrosion of nickel)
3. Microbial effects caused by certain bacteria when their metabolism created corrosive elements and deposits. Sulfate-reducing bacteria

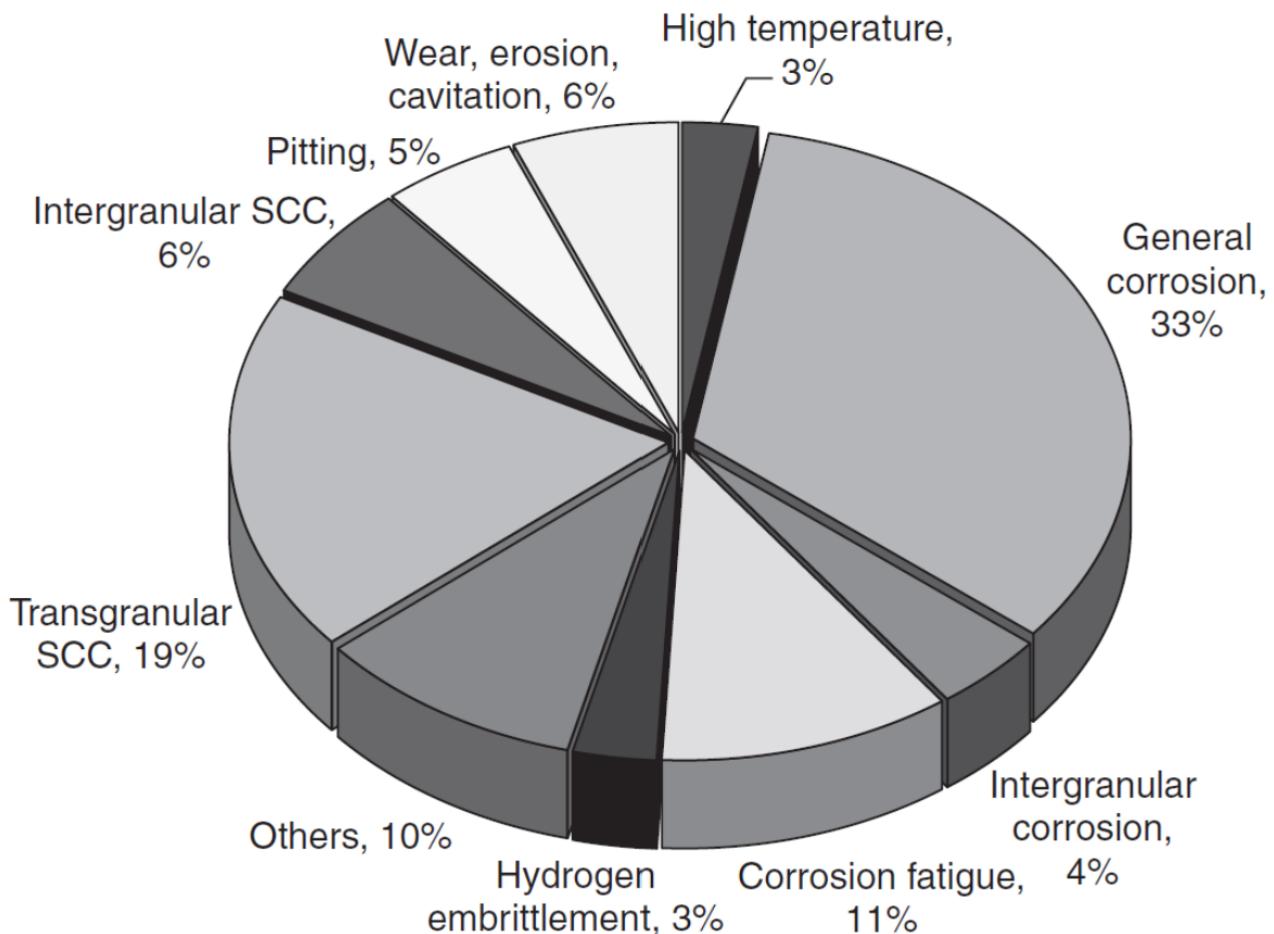


Figure 6.5: Frequency of different corrosion types.

6.5 Corrosion mechanisms in-depth


6.5.1 Pitting corrosion

Creation of small holes in materials which can perforate thin sheets. This is an example of where there is one metal but two types of electrolyte in the vicinity of the metal. This is because the reaction within the hole or pit is not the same as the reaction outside. Pitting results when a small hole or cavity forms in the metal, usually as a result of de-passivation of a small area. This area becomes anodic, while part of the remaining metal becomes cathodic, producing a localised galvanic reaction. The deterioration of this small area penetrates the metal and can lead to failure. This form of corrosion is often difficult to detect due to the fact that it is usually relatively small and may be covered and hidden by corrosion-produced compounds.

Certain conditions, such as low concentrations of oxygen or high concentrations of chloride which complete as anions, can interfere with a given alloy's ability to re-form a passivating film. Corrosion at these points will be greatly amplified, and can cause corrosion pits of several types, depending upon conditions. While the corrosion pits only nucleate under fairly extreme circumstances, they can continue to grow even when conditions return to normal, since the interior of a pit is naturally deprived of oxygen and locally the pH decreases to very low values and the corrosion rate increases due to an autocatalytic process. In extreme cases, the sharp tips of extremely long and narrow corrosion pits can cause stress concentration to the point that otherwise tough alloys can shatter; a thin firm pierced by an invisibly small hole can hide a thumb sized pit from view. These problems are especially dangerous because they are difficult to detect before a part or structure fails. Pitting remains among the most common and damaging forms of corrosion in passivated alloys, but it can be prevented by control of the alloy's environment.

Pitting is autocatalytic in nature. Once a pit starts to grow, the conditions developed are such that further pit growth is promoted. The anodic and cathodic electrochemical reactions that comprise corrosion separate spatially during pitting. The local pit environment becomes depleted in cathodic reactant (e.g. oxygen), which shifts most of the cathodic reaction to the boldly exposed surface where this reactant is more plentiful. The pit environment becomes enriched in metal cations and an anionic species such as chloride, which electromigrates into the pit to maintain charge neutrality by balancing the charge associated with the cation concentration. The pH in the pit is lower owing to cation hydrolysis.

1. The formation of anodic sites by disruption of the protective passive film on the metal surface.

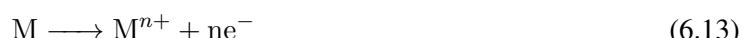

This is balanced by the cathodic reaction of oxygen on the adjacent surface



2. Due to the continuing metal dissolution, an excess of positive ions (M^{n+}) is accumulated in the anodic area. The process is self-stimulating and self-propagating. To maintain charge neutrality negative ions (anions), like chloride, migrate from electrolyte (for example, seawater of a 5% NaCl solution).





OH^- ions also migrate to neutralise the positive charges. This process is called hydrolysis

3. The presence of (H^{n+}) ions and chloride content, prevents repassivation. The above the process generates free acid and the pH value at the bottom of pit is substantially lowered (1.5-1.0)
4. The increase in the rate of dissolution at the anode increases the rate of migration of the chloride ions and the reaction becomes time dependent and continues, resulting in the formation of more and more $M^{n+} Cl^-$, generation of more and more $H^{n+} Cl^-$ by hydrolysis
5. The process continues until the metal is perforated. The process is autocatalytic and it increases with time resulting in more and more dissolution

6. Finally, the metal is perforated and the reaction is terminated

Pitting corrosion

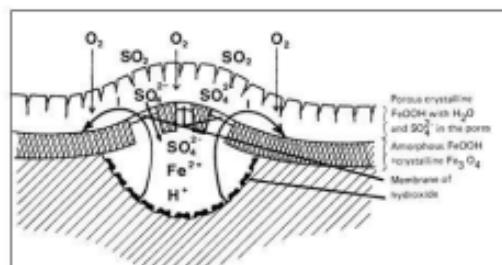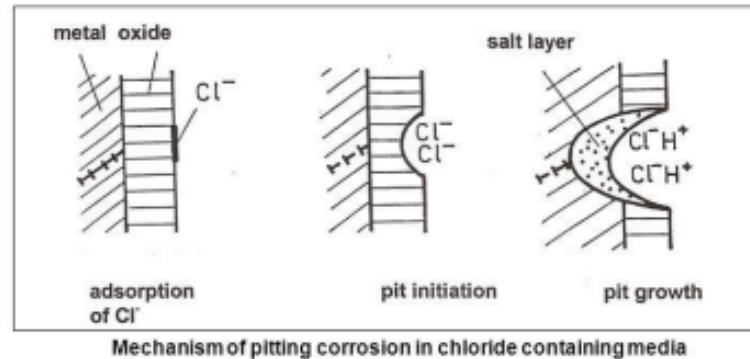

Pitting corrosion of iron in atmosphere polluted with SO_2

28

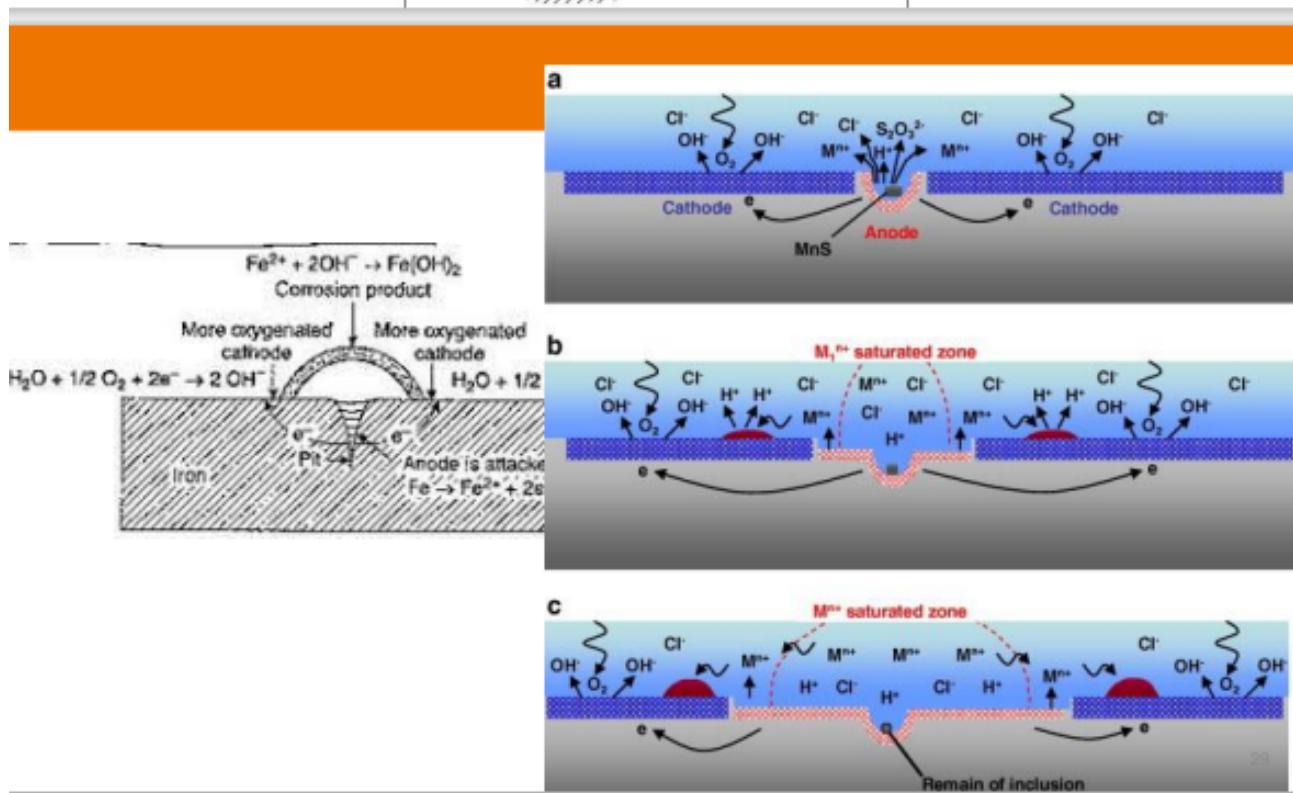


Figure 6.6: Pitting corrosion.

6.5.2 Crevice corrosion

Crevice corrosion is a localised form of corrosion occurring in confined spaces (crevices), to which the access of the working fluid from the environment is limited. Formation of a differential aeration cell leads to corrosion inside the crevices. Examples of crevices are gaps and contact areas between parts, under gaskets or seals, inside cracks and seams, spaces filled with deposits and under sludge pile.

Crevice corrosion is influenced by the crevice type (metal-metal, metal-non-metal), crevice geometry (size, surface finish) and metallurgical and environmental factors. The susceptibility to crevice corrosion can be evaluated with ASTM standard procedures. A critical crevice corrosion temperature is commonly used to rank a material's resistance to crevice corrosion.

Mechanism

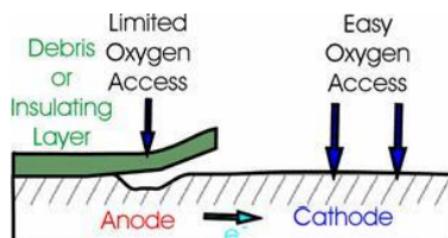
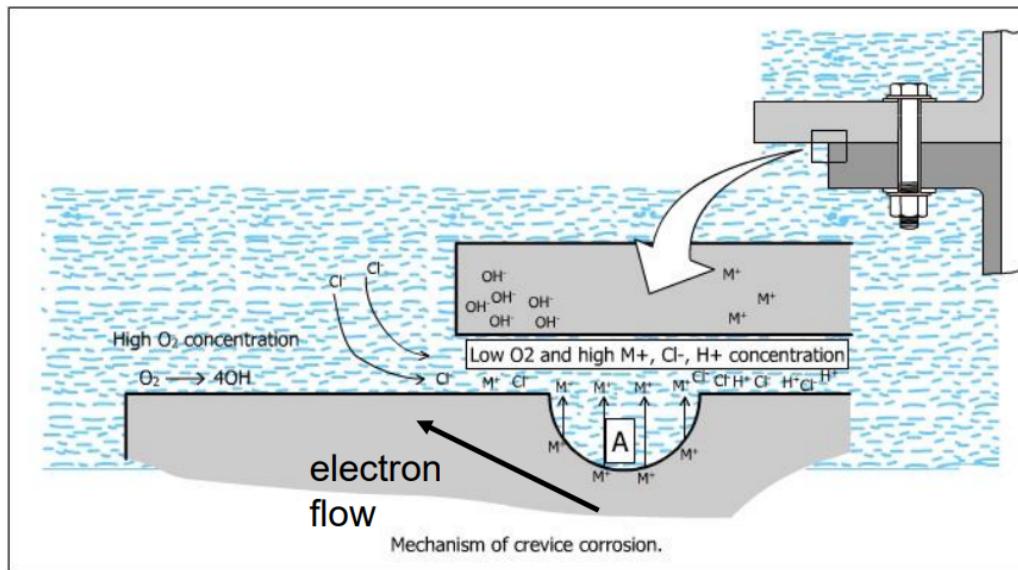


Figure 6.7: Mechanism of crevice corrosion.

Crevice corrosion is initiated by a difference between some chemical constituents, usually oxygen, which sets up an electrochemical concentration cell. Outside of the crevice (the cathode), the oxygen content and pH are higher - but chlorides are lower.

Chlorides concentrate inside the crevice (the anode) worsening the situation. Ferrous ions forms ferric chloride and attack the stainless steel rapidly. The pH and oxygen content are lower inside the crevice (can be as low as 2). Once the crevice has formed the propagation mechanism continues.

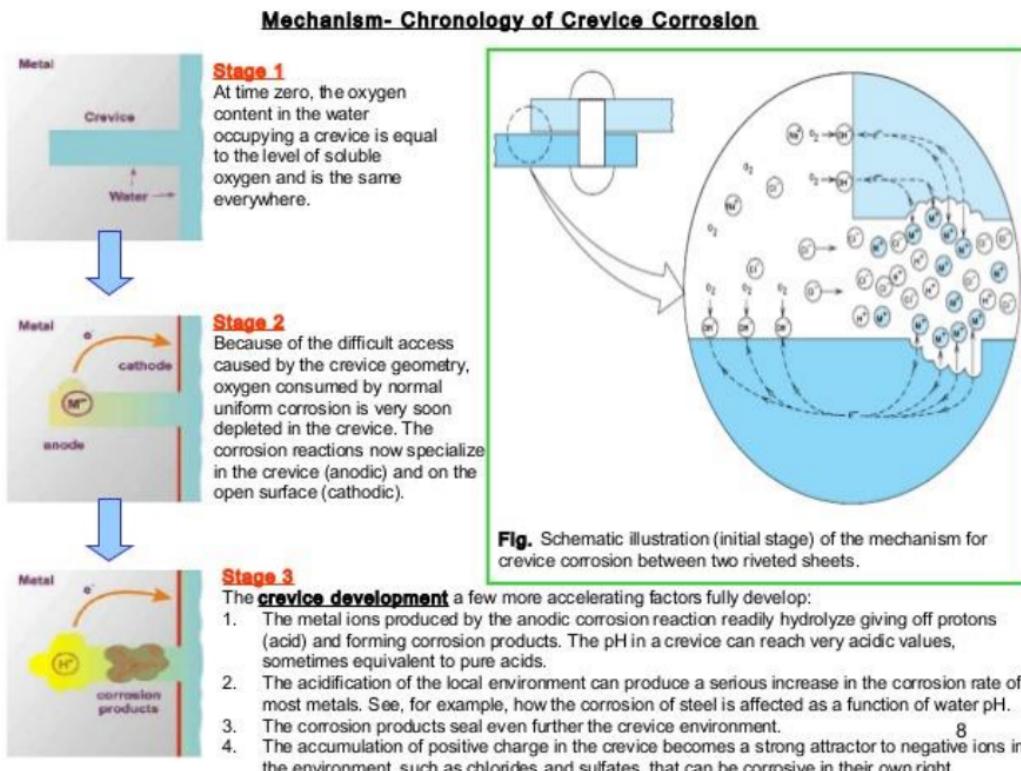


Figure 6.8: Chronology of crevice corrosion.