
Cascade Table Installation

CORTECH

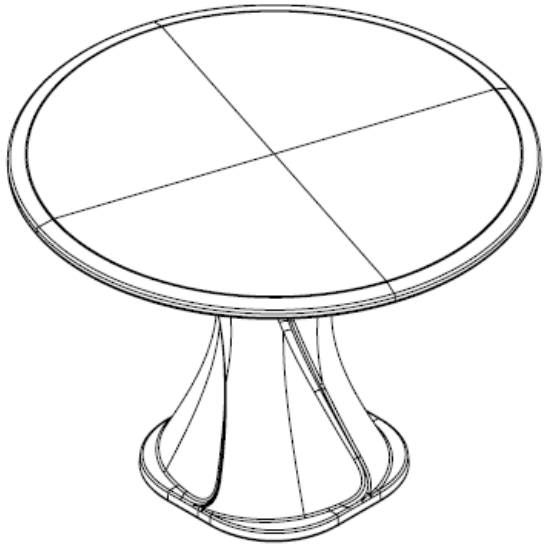

You will need:

Not Included:



1x
Pencil
For Marking Floor




1x
Drill
With 3/8" Masonry Bit



1x
Screwdriver
With Tamper Resistant Torx Bit




4x
3/8" - 16 x 4"
Tamper Resistant Torx Screw



4x
3/8" Flat Washer
.406" ID .875" OD

Included:




4x
5/16" Washer
.344" ID .75" OD



4x
5/16" - 18 x 3"
Security Torx Bolts



1x
Twisted Table Base

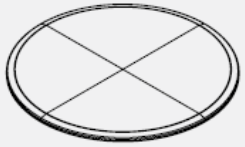


1x
42" Round Table Top

Cascade Table Installation


CORTECH

1.

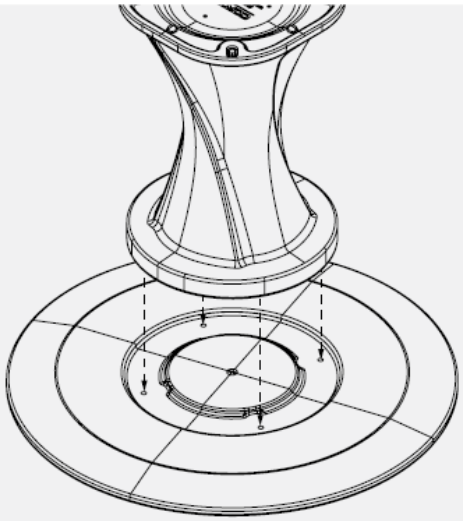


Place tabletop face down on the floor. Align the table base to the center of the tabletop. Check fitment and make any necessary adjustments.

2.

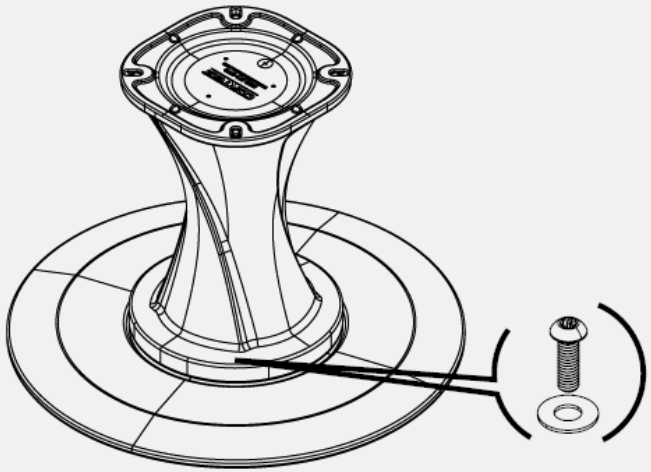


Insert and tighten each tabletop screw and washer 3-5 turns past finger tight.

3.

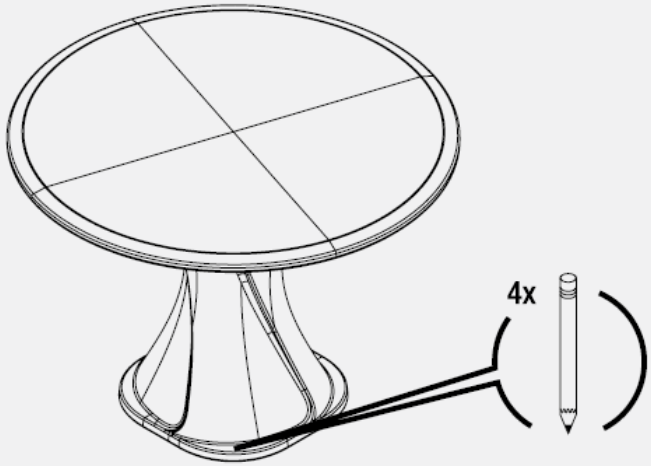

Turn over table and position table in desired location. Using a pen or pencil, mark the base mounting location onto the floor.

4.

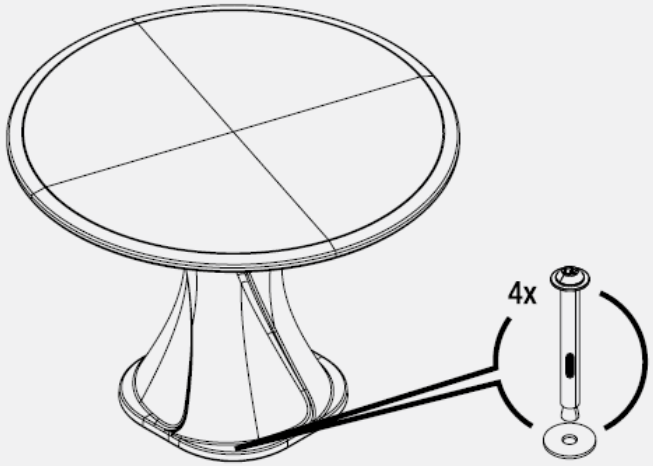

Drill holes in the locations where you marked the center of the floor mount hole. Hole depth should be 2.0" deep MINIMUM. Install concrete anchor and washer. Bolt the table to floor.