
Endurance® Dual Workstation Wall Mount Desk Installation


CORTECH

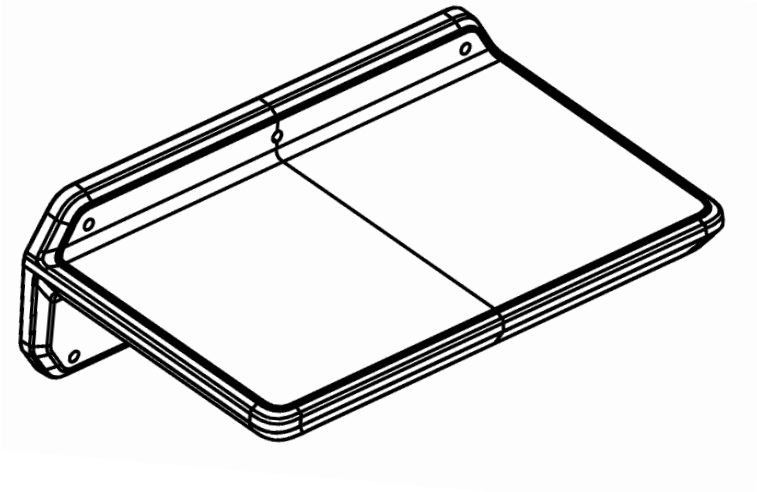

You will need:



1 x
Pencil
to Mark Wall

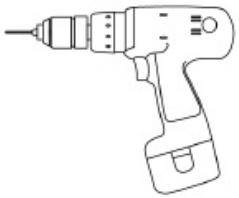


1 x
Drill
with 3/8 Bit




6 x
3/8-16 x 3.75" Security
Torx Anchor Bolts



6 x
Flat Washers

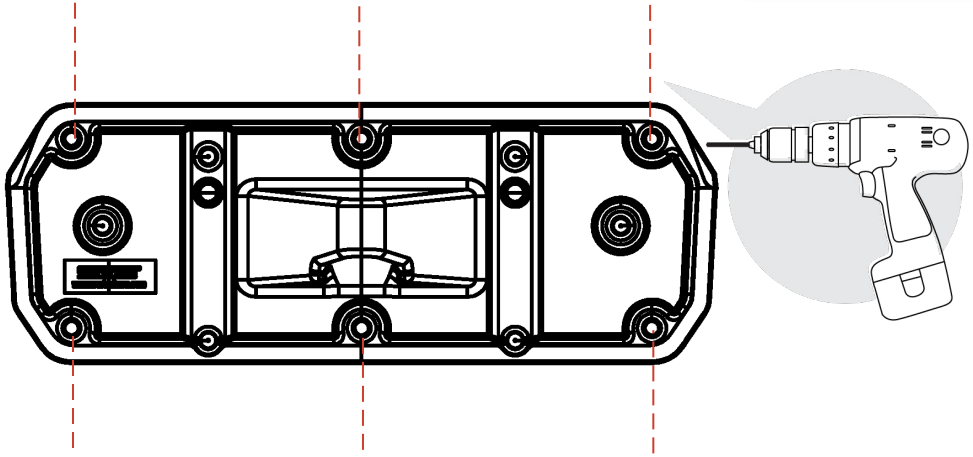

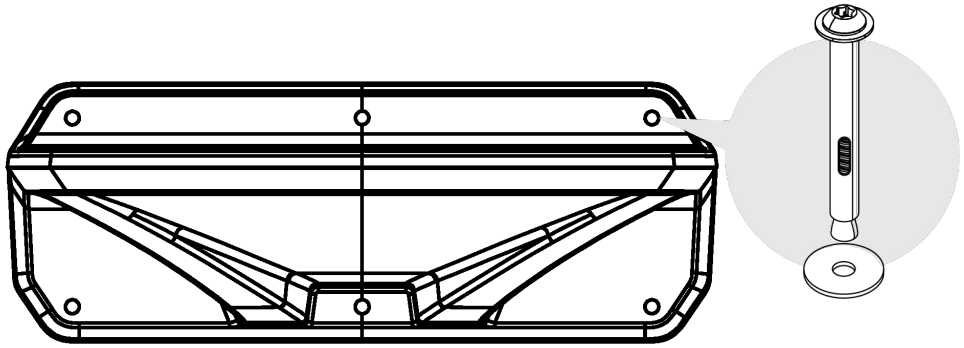

1. Position the desk tilted on the floor to access the rear side.
2. Drill through each of the six pilot holes.
3. Hold the desk to the wall at the location where it is to be mounted.
4. Using a pen or pencil, mark the mounting hole locations on the wall through the holes drilled in Step 2.
5. Set the desk aside and drill holes into the six locations marked on the wall. Hole depth should be 2" MINIMUM.
6. Position the desk on the wall where the drilled holes line up.
7. Place one flat washer over each of the six anchor bolts and guide the bolts through the desk and into the holes on the wall.
8. Tighten each anchor bolt 3-5 turns past finger tight.