

Endurance® All Purpose Shelf 2.0

CORTECH

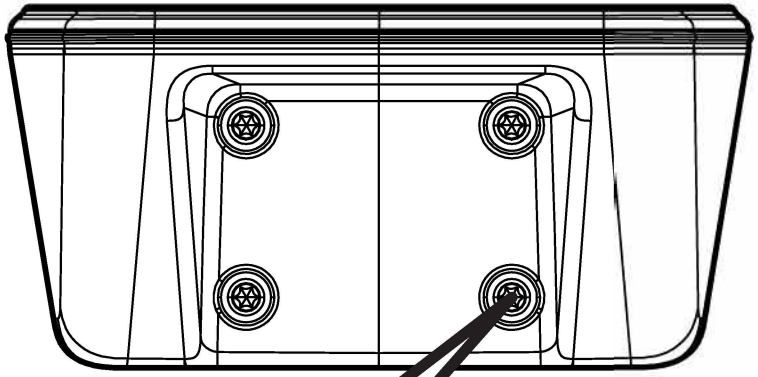

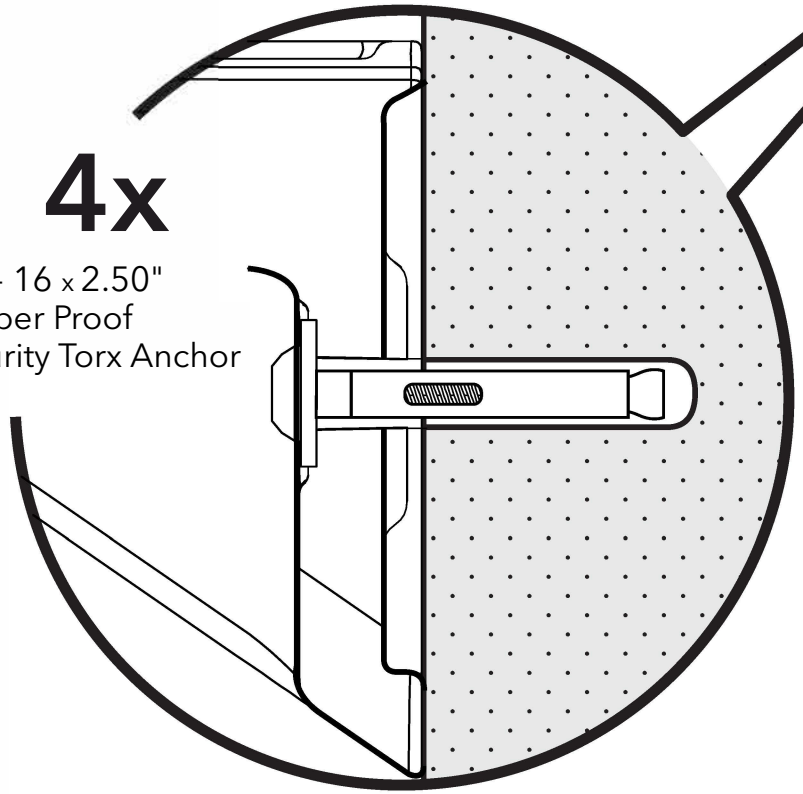

4x

3/8 - 16 x 2.50"
Tamper Proof
Security Torx Anchor
Bolt

1. Drill a hole into base material to a depth at least 1 /2" or one anchor diameter deeper than the embedment required.
2. Blow the hole clean of dust and other material.
3. Drive the anchor through the shelf into the anchor hole until the head is firmly seated again the bed.
4. Use a rubber mallet. Be sure the anchor is driven to the required embedment depth.
5. Tighten the anchor by turning the head 3 to 5 turns past finger tight.

Endurance All Purpose Shelf 2.0
Bolt Locations

