


Endurance® Bench

CORTECH

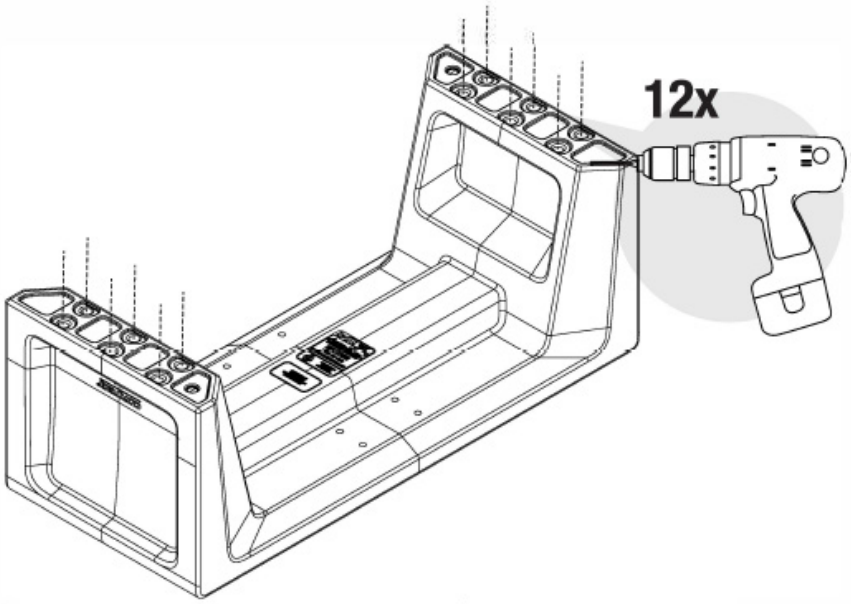


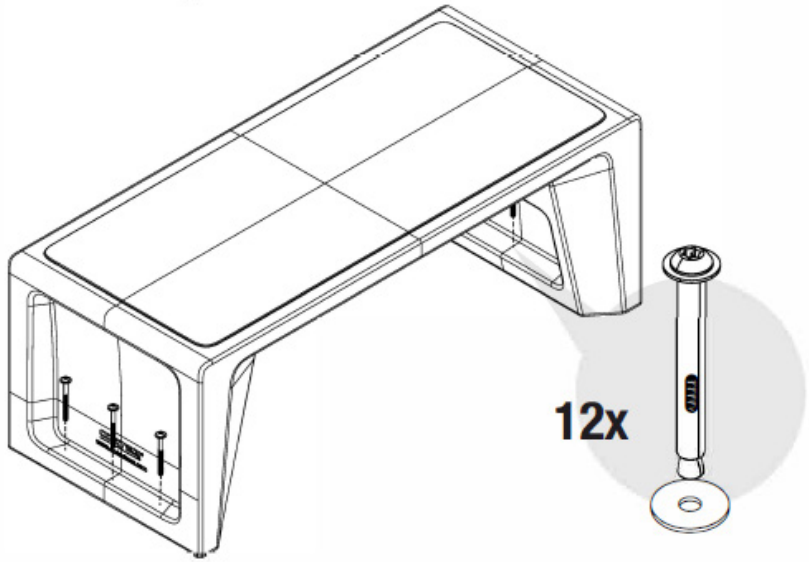

You will need:




1x
Pencil
For Marking Floor And Wall

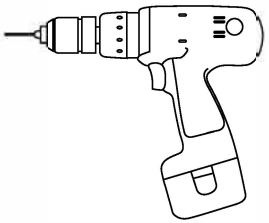

1x
Drill
With 3/8 Bit



12x
3/8-16 x 3.75"
Security Torx Anchor Bolts

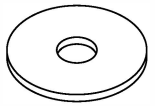



12x
Flat Washer

1. Position bench on its top as to access the bottom of the bench.
2. Select and drill all twelve mounting locations on the bottom of the bench.
3. Place bench right side up and locate where it is to be secured to the floor.
4. Using a pen or pencil, mark mounting hole locations on the floor using the holes drilled in step 2.
5. Move bench and drill holes in the twelve locations where you marked the floor. Hole depth should be 2.0" deep MINIMUM.
6. Replace the bench lining up the drilled holes with the holes in the floor.
7. Place one flat washer over each of the twelve anchor bolt and guide the bolts through the bench and into the holes into the floor.
8. Tighten each anchor bolt 3-5 turns past finger tight.

Endurance® Bench

CORTECH

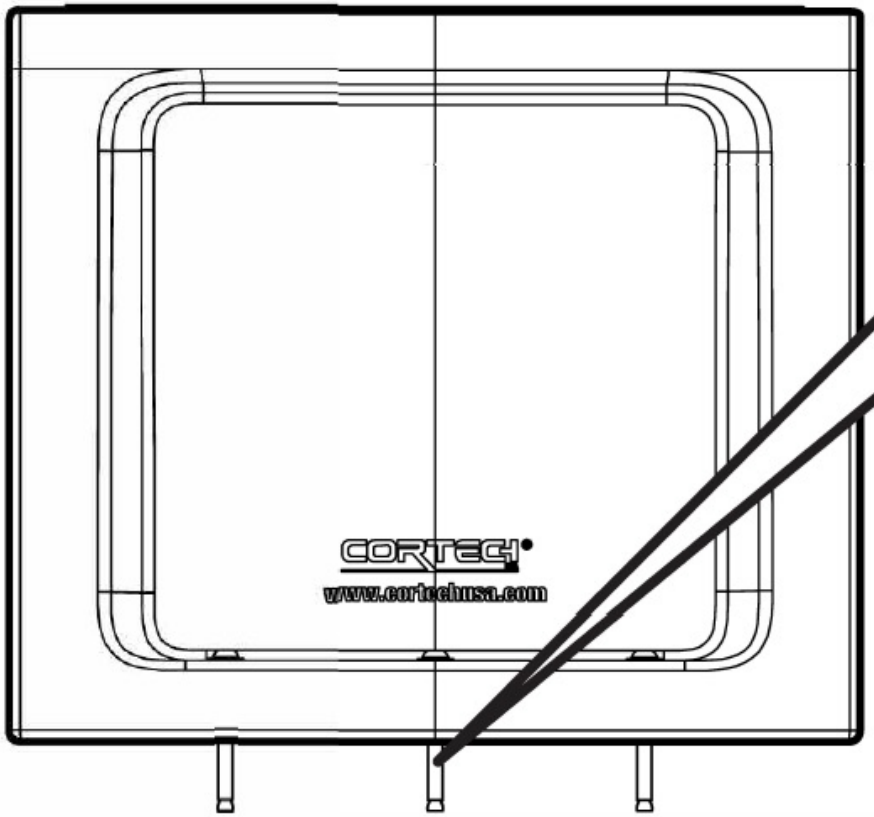

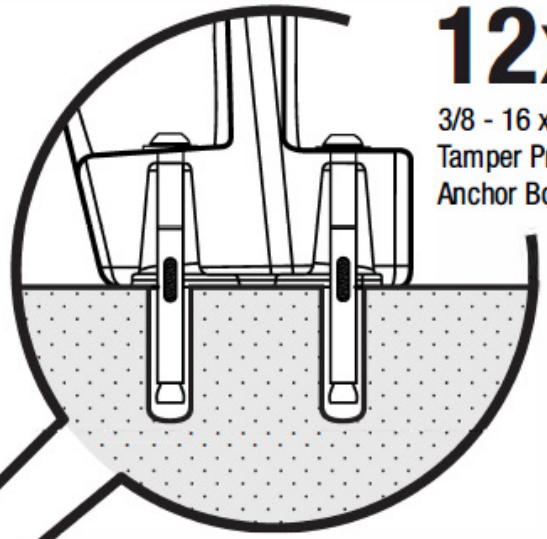


12x

3/8 - 16 x 3.75”
Tamper Proof Security Torx
Anchor Bolt

1. Drill a hole into base material to a depth at least 1/2” or one anchor diameter deeper than the embedment required.
2. Blow the hole clean of dust and other material.
3. Drive the anchor through the bench into the anchor hole until the head is firmly seated against the bench.
4. Use a rubber mallet. Be sure the anchor is driven to the required embedment depth.
5. Tighten the anchor by turning the head 3 to 5 turns past finger tight.

Endurance Bench

Bolt Locations

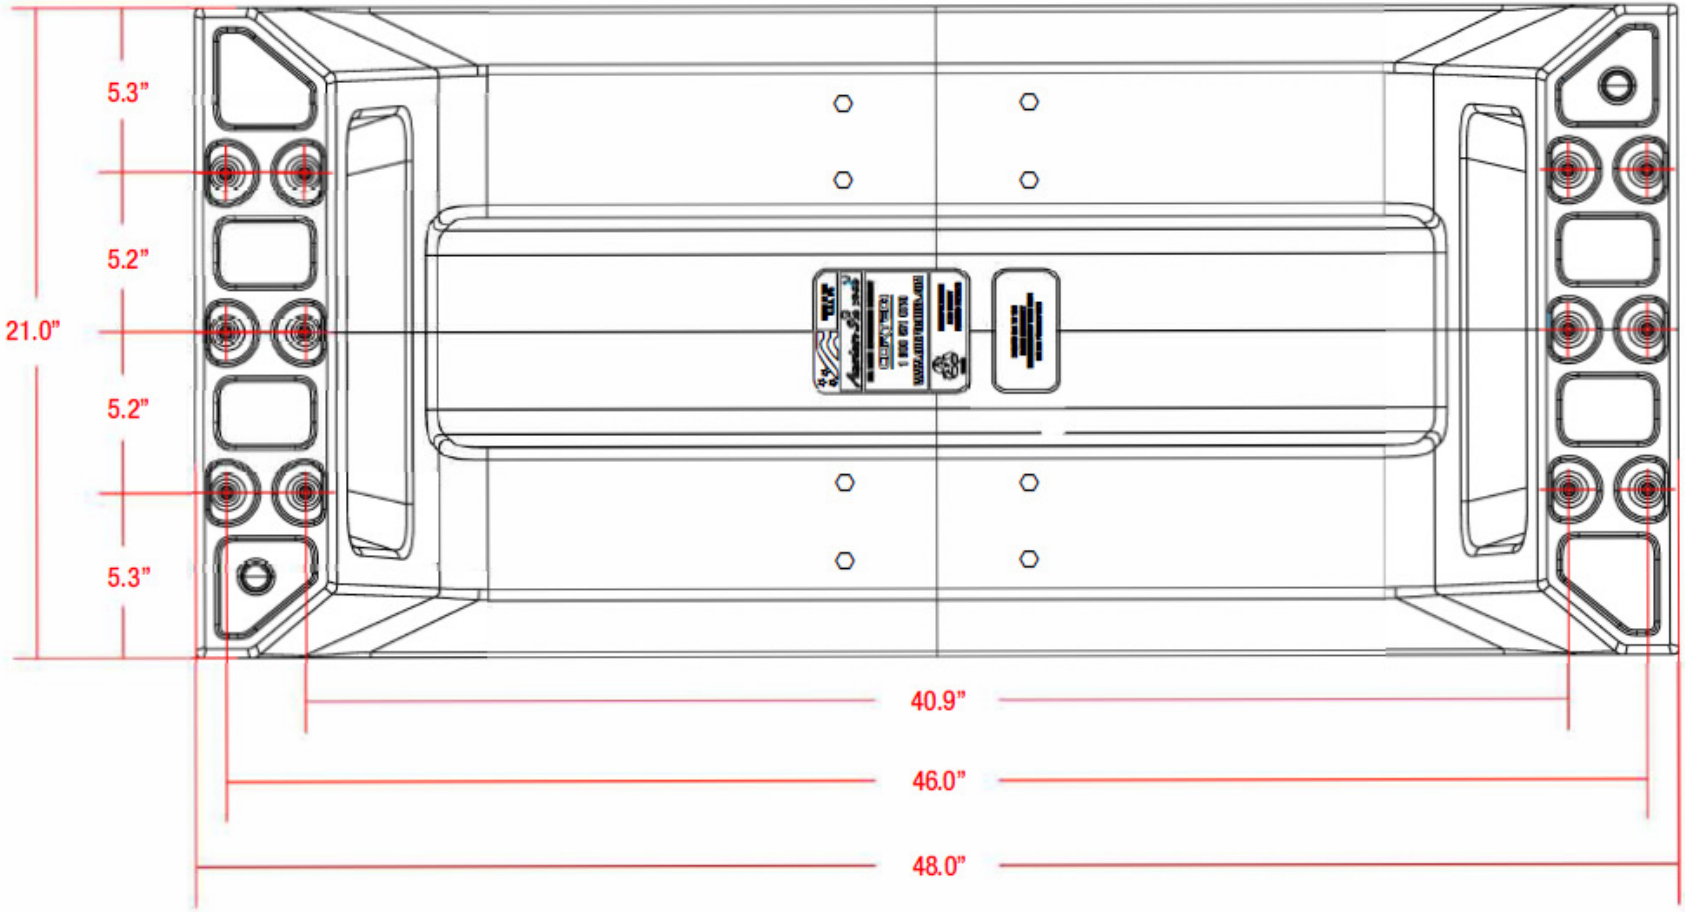

CORTECH