


Endurance® Locker

CORTECH

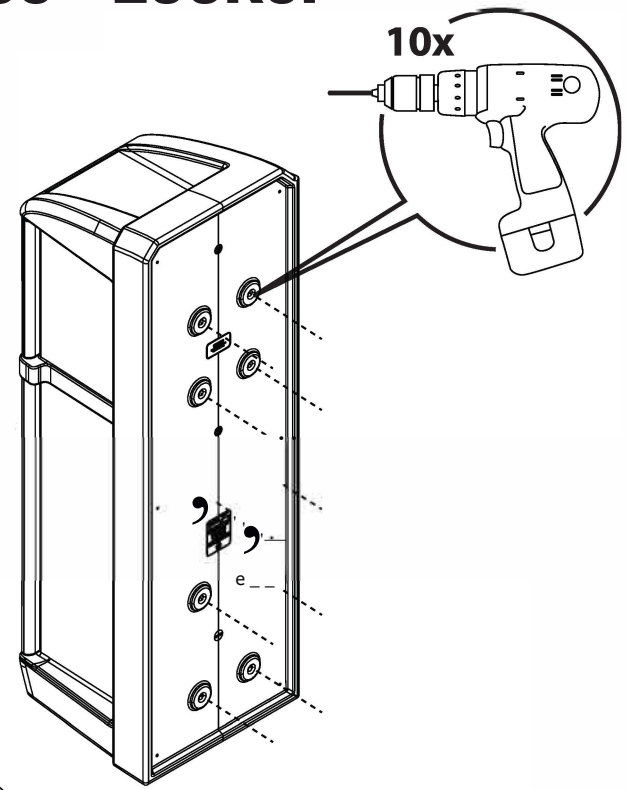


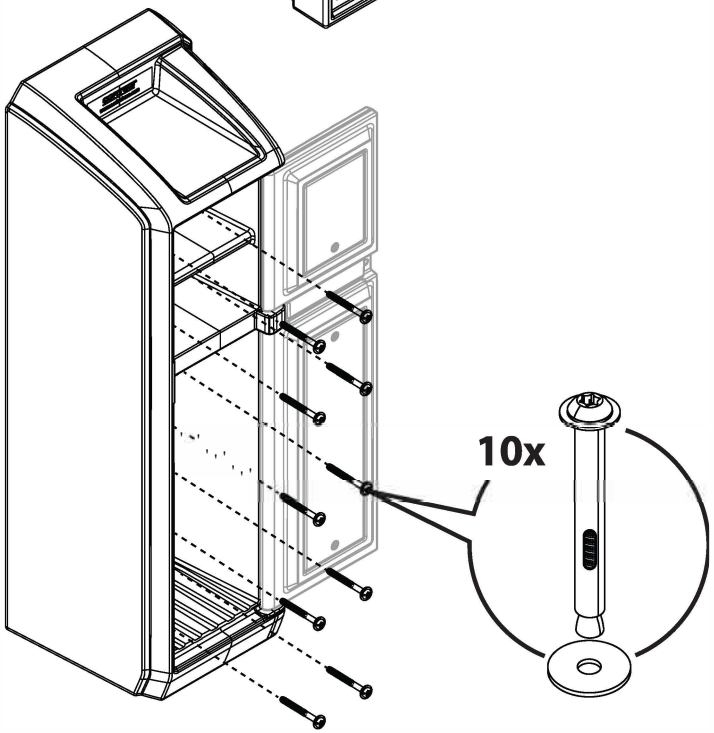

You will need:




1x
Pencil
For Marking Floor And Wall

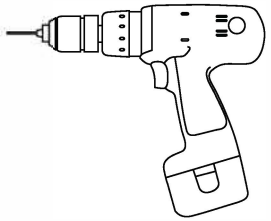

1x
Drill
With 3/8 Bit




10x
3/8-16x3.75" SecurityTorx
Anchor Bolts

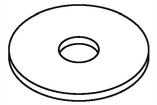


10x
Flat Washer

1. Position locker so as to access the back of the locker.
2. Select and drill all ten mounting locations on the back of the locker.
3. Turn the locker around and locate where it is to be secured to the wall.
4. Using a pen or pencil, mark mounting hole locations on the wall using the holes drilled in step 2.
5. Move locker and drill holes in the ten locations where you marked the wall. Hole depth should be 2.0" deep MINIMUM.
6. Replace the locker lining up the drilled holes on the locker with the holes in the wall.
7. Place one flat washer over each of the ten anchor bolts, and guide the bolts through the locker and into the holes in the wall.
8. Tighten each anchor bolt 3-5 turns past finger tight.

Endurance® Locker

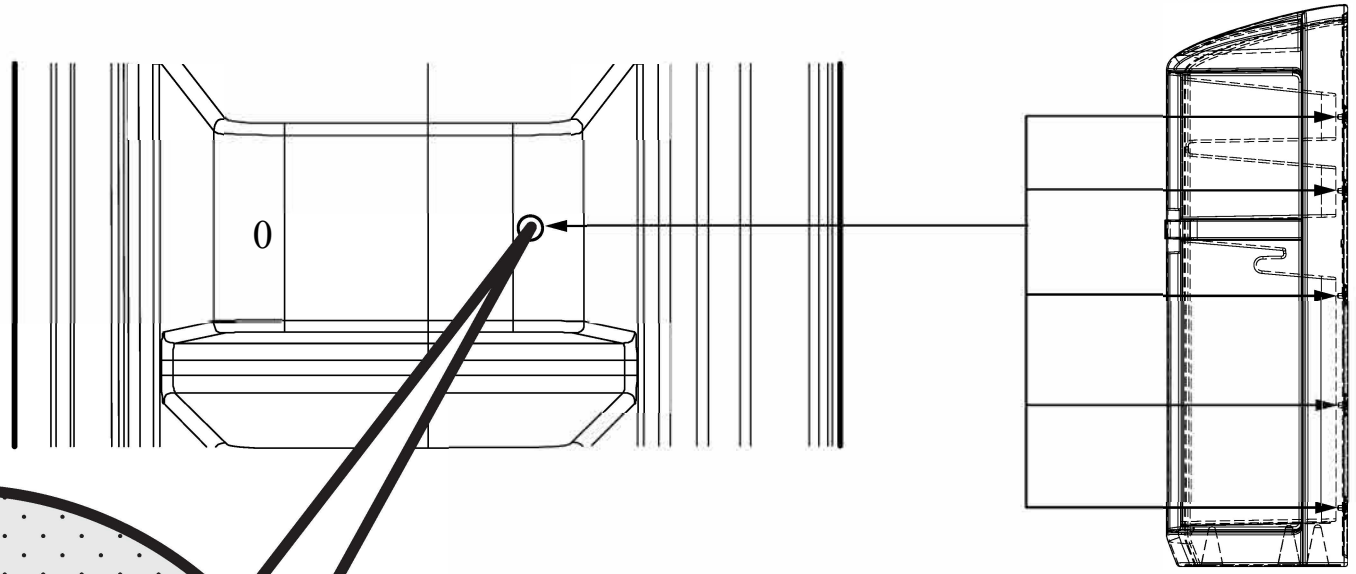

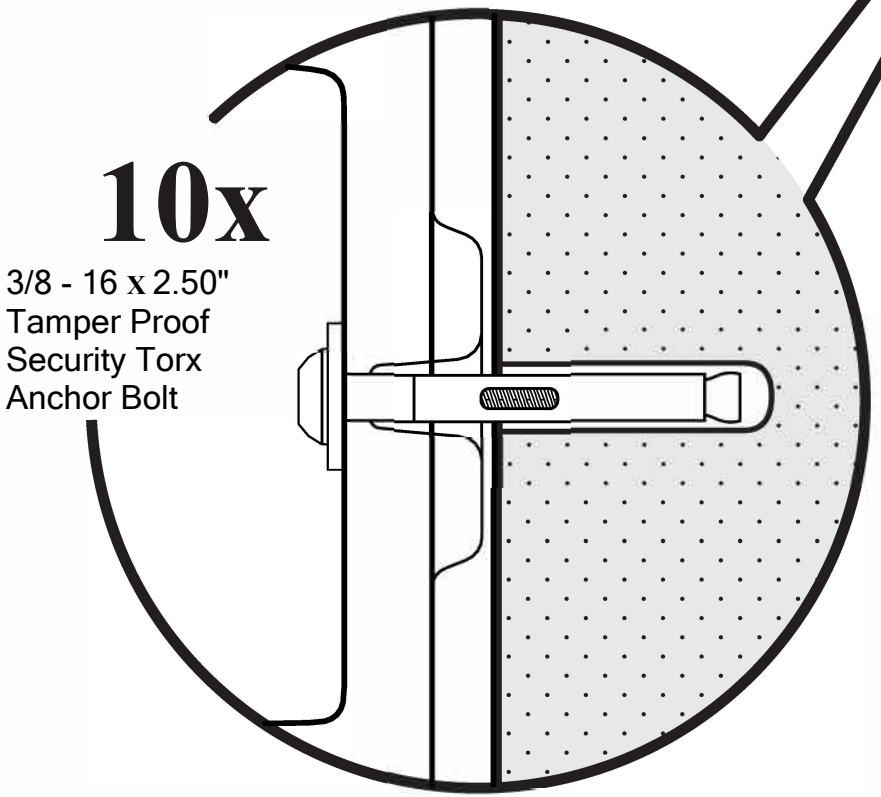


10x

3/8 - 16 x 2.50"
Tamper Proof
Security Torx
Anchor Bolt

1. Drill a hole into base material to a depth at least 1 /2" or one anchor diameter deeper than the embedment required.
2. Blow the hole clean of dust and other material.
3. Drive the anchor through the locker into the anchor hole until the head is firmly seated again the locker.
4. Use a rubber mallet. Be sure the anchor is driven to the required embedment depth.
5. Tighten the anchor by turning the head 3 to 5 turns past finger tight.

Locker Back Bolt Points

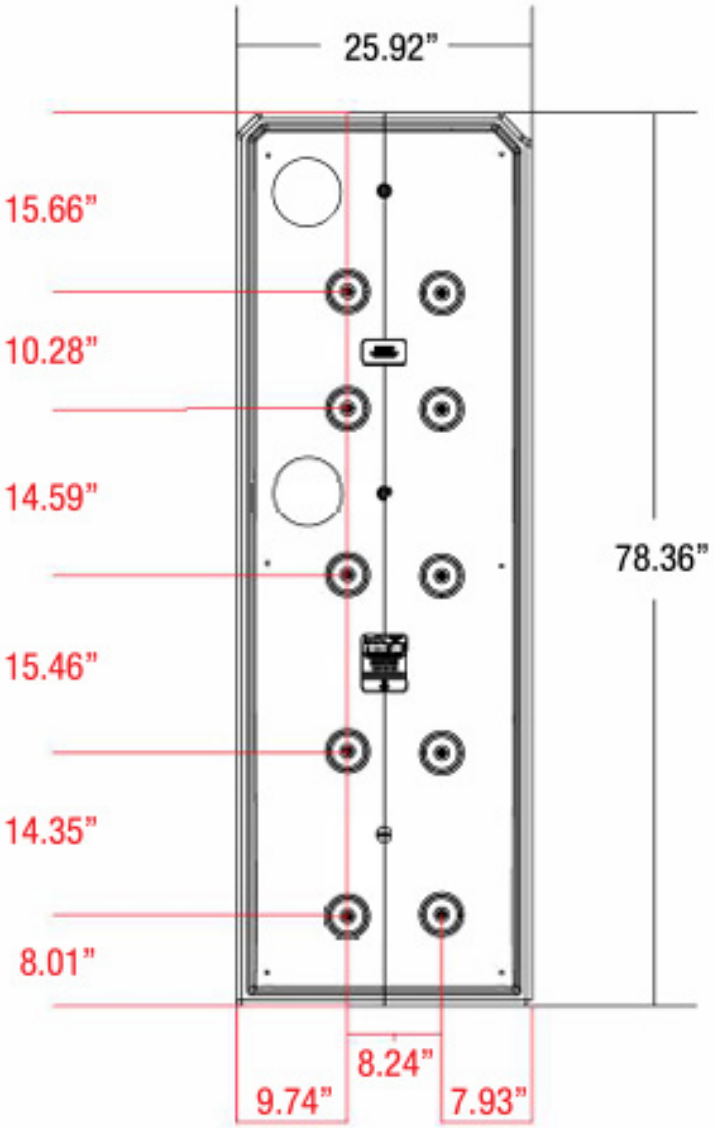

CORTECH