

Endurance® Wall Mount ADA Desk

CORTECH

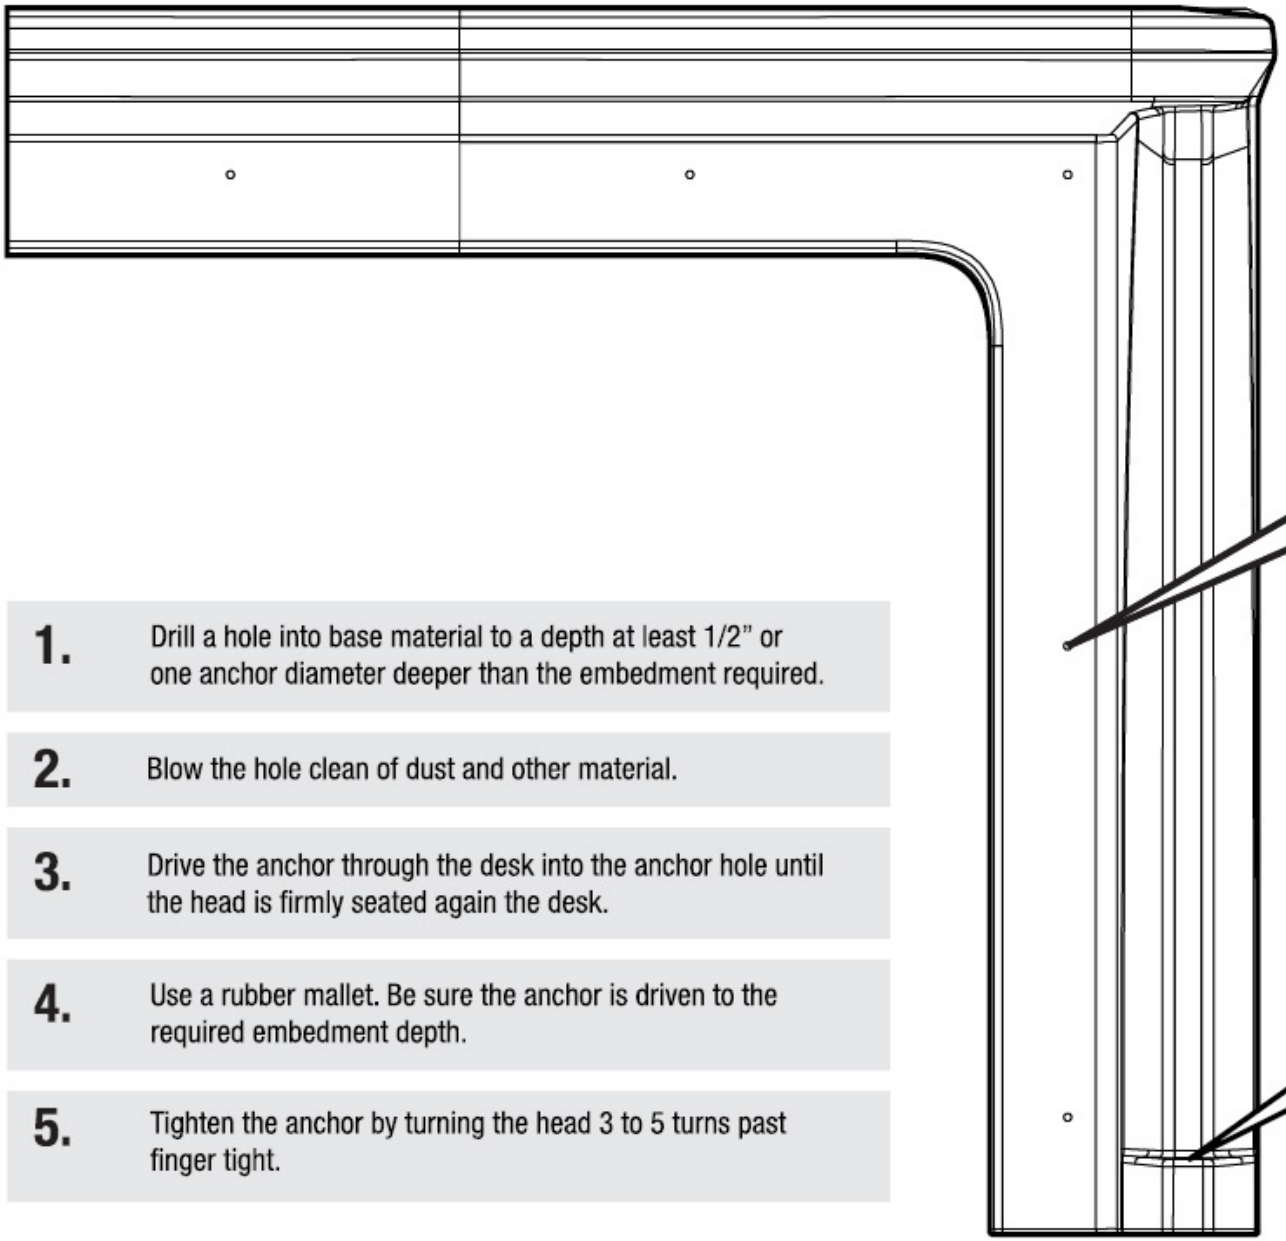


8x

3/8 - 16 x 2.50”
Tamper Proof Security Torx
Anchor Bolt

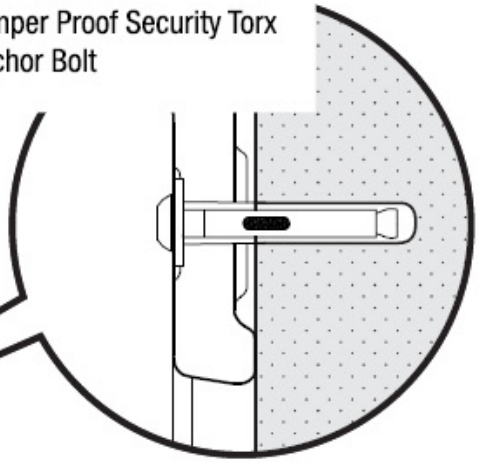

2x

3/8 - 16 x 2.5”
Tamper Proof Security Torx
Anchor Bolt

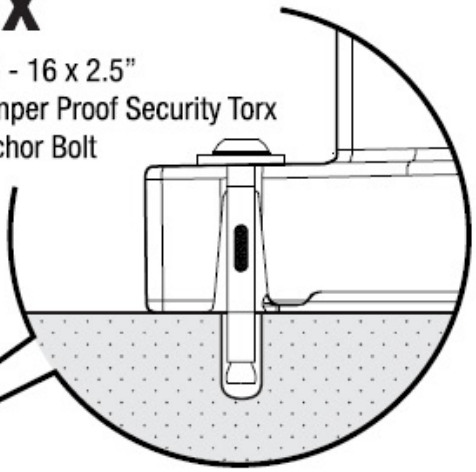

1. Drill a hole into base material to a depth at least 1/2” or one anchor diameter deeper than the embedment required.
2. Blow the hole clean of dust and other material.
3. Drive the anchor through the desk into the anchor hole until the head is firmly seated again the desk.
4. Use a rubber mallet. Be sure the anchor is driven to the required embedment depth.
5. Tighten the anchor by turning the head 3 to 5 turns past finger tight.