

Endurance® 2 Shelf

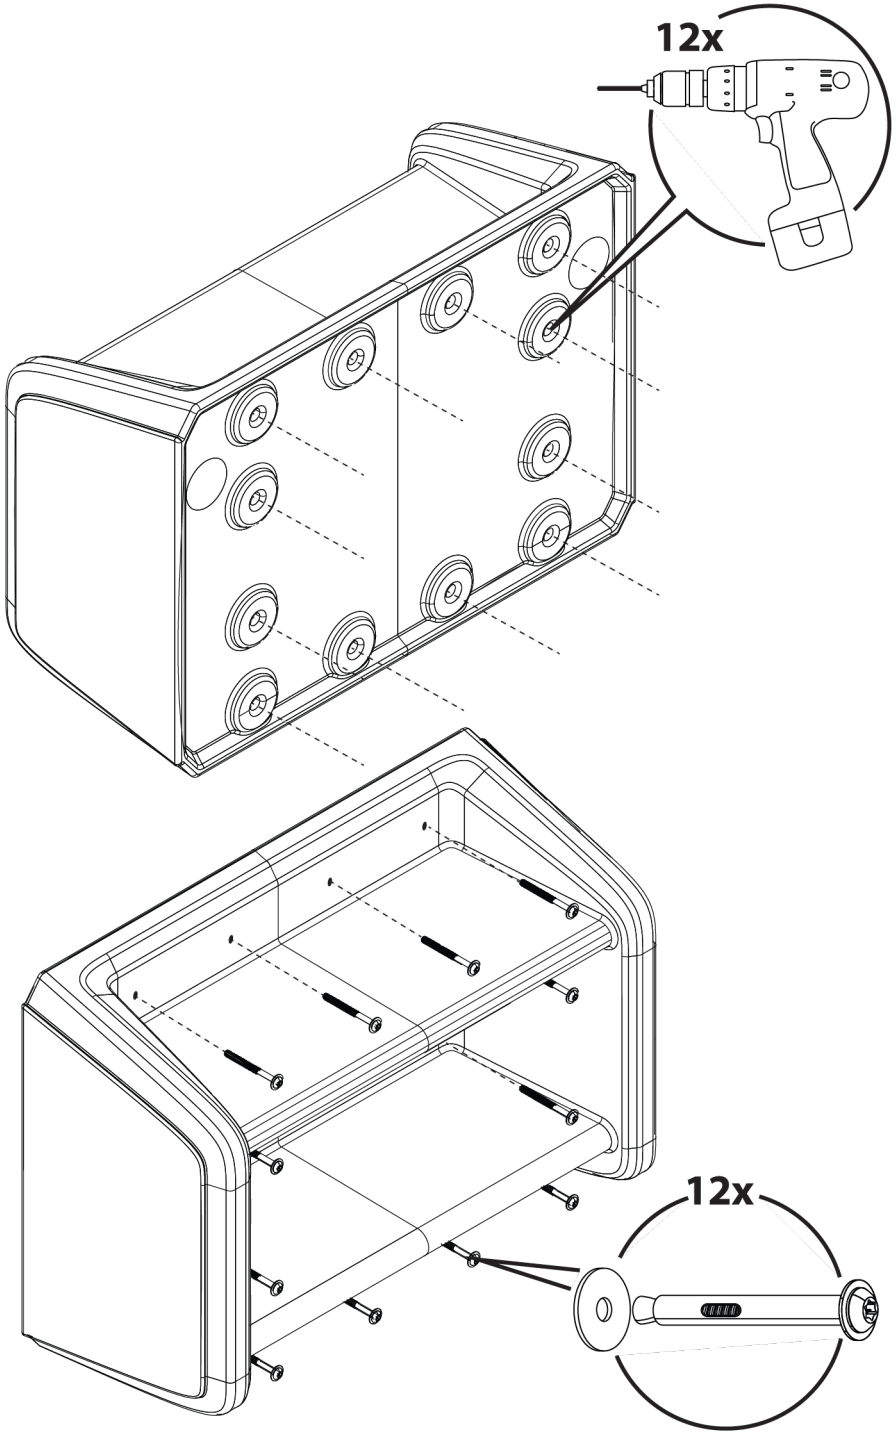

CORTECH

You will need:

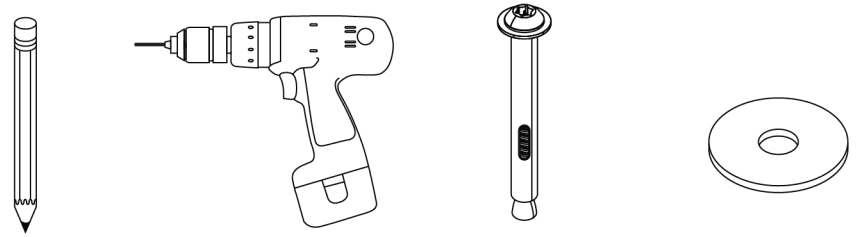

1x
Pencil
For Marking Wall

1x
Drill
With 3/8 Bit

12x
3/8-16 x 3.75"
Security Torx Anchor Bolts

12x
Flat Washer

1. Position shelf to access the back.

2. Select and drill all twelve mounting locations on the back of the shelf.

3. Place shelf right side up and locate where it is to be secured to the wall.

4. Using a pen or pencil, mark mounting hole locations on the wall using the holes drilled in step 2.

5. Move shelf and drill holes in the twelve locations where you marked the wall. Hole depth should be 2.0" deep MINIMUM.

6. Replace the shelf lining up the drilled holes with the holes in the wall.

7. Place one flat washer over each of the twelve anchor bolt and guide the bolts through the shelf and into the holes into the wall.

8. Tighten each anchor bolt 3-5 turns past finger tight.