


Endurance®
Floor Mounted Stool

CORTECH

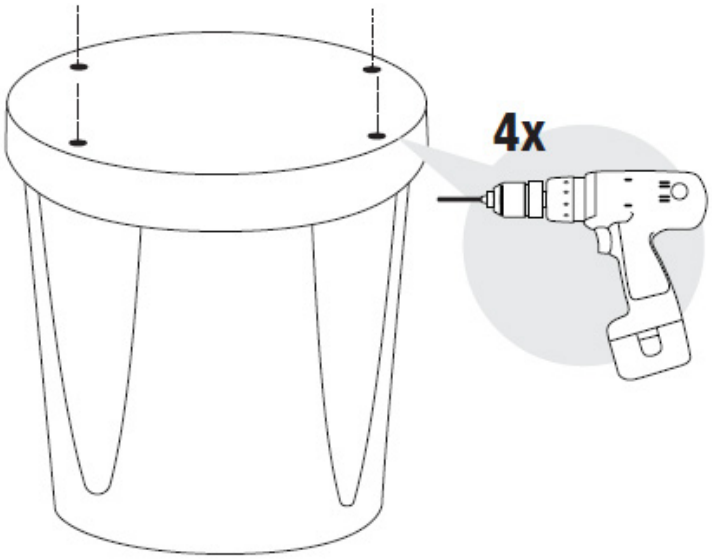

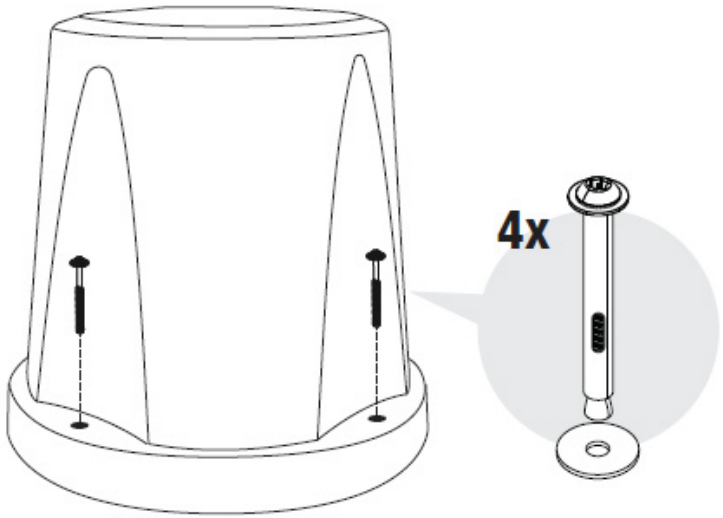


You will need:




1x

Pencil
For Marking Floor

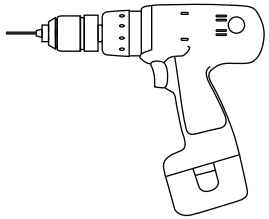


1x

Drill
With 3/8 Bit

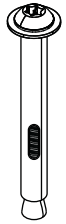

4x

3/8-16 x 3.75”
Security Torx Anchor Bolts

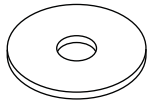

4x

Flat Washer

1. Position stool on its top as to access the bottom of the stool.

2. Select and drill all four mounting locations on the bottom of the stool.

3. Place stool right side up and locate where it is to be secured to the floor.

4. Using a pen or pencil, mark mounting hole locations on the floor using the holes drilled in step 2.

5. Move stool and drill holes in the four locations where you marked the floor. Hole depth should be 2.0” deep MINIMUM.

6. Replace the stool lining up the drilled holes with the holes in the floor.

7. Place one flat washer over each of the four anchor bolt and guide the bolts through the stool and into the holes into the floor.

8. Tighten each anchor bolt 3-5 turns past finger tight.